



ASSEMBLY INSTRUCTION

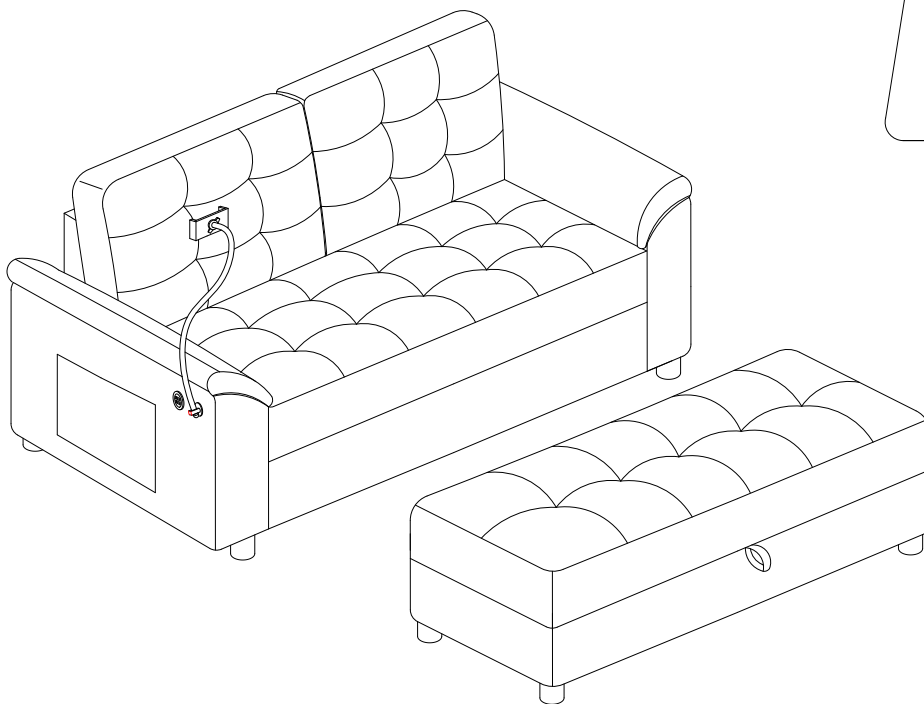

500
LBS




01

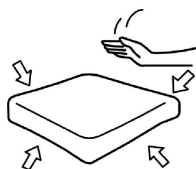

Due to package compression for better shipment, the fabric may have wrinkles, these wrinkles will gradually disappear.

02

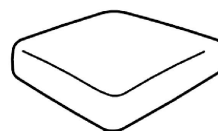

Please be patient and wait for the couch to return to its fluffystate, which will take anywhere from 72 hours to a week.



WARNING

Plastic bags can be dangerous. To avoid danger of suffocation, keep this bag away from babies and children.

ATTENTION

Les sacs plastique peuvent être dangereux. Pour éviter le danger de suffocation, ne laissez pas ces sacs à la portée des bébés ni des enfants.

ADVERTENCIA

Para evitar riesgo de asfixia, mantenga las bolsas de plástico fuera del alcance de los niños y bebés.

ATTENZIONE

Il sacchetto di plastica può essere pericoloso. Per evitare il pericolo di soffocamento, tieni questo sacchetto lontano da bambini e fanciulli.






VORSICHT

Polybeutel können gefährlich sein. Um Erstickungsgefahr zu vermeiden, bitte diesen Beutel nie in Reichweite von Säuglingen und Kleinkindern ablegen.



















PARTS AND HARDWARE

BOX 1-2

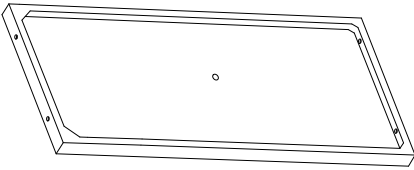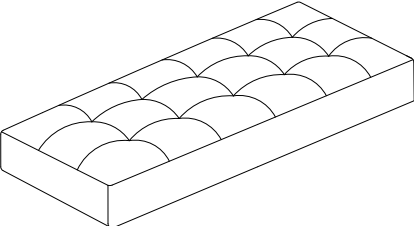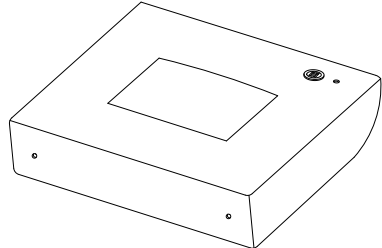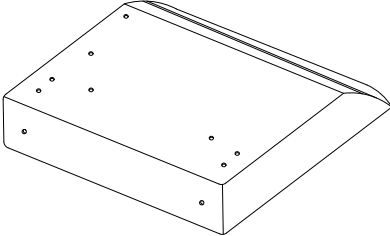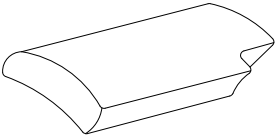A	 Seat plate	x1	B	 Sofa seat cushion	x1
C	 Left armrest	x1	D	 Right armrest	x1
E	 Left armrest cushion	x1			


PARTS AND HARDWARE

BOX 2-2

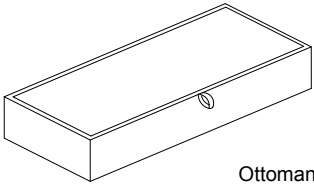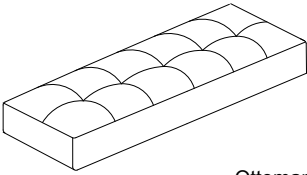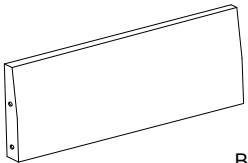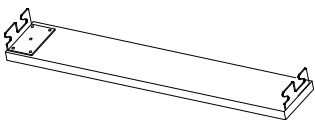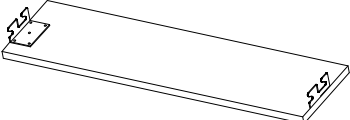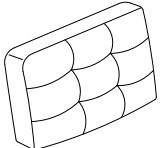F	 Ottoman body	x1	G	 Ottoman cushion	x1
H	 Back frame	x1	I	 Right armrest cushion	x1
J	 Back plate(small)	x1	K	 Front plate(big)	x1
L	 Back cushion	x2	Y	 leg	x8
Z	 Middle leg	x1	M	 BOLT 25mm	x6
N	 BOLT 25mm	x8	O	 Spring Washer	x14
P	 Flat Washer	x14	Q	 Allen Wrench	x1
R	 BOLT	x2	S	 Wrench	x1
T	 Mobile phone stand connecting rod	x1	U	 Mobile phone stand	x1
V	 BOLT	x1	W	 Nut	x1
X	 Screw	x2			


ASSEMBLY INSTRUCTIONS

STEP 1-1:

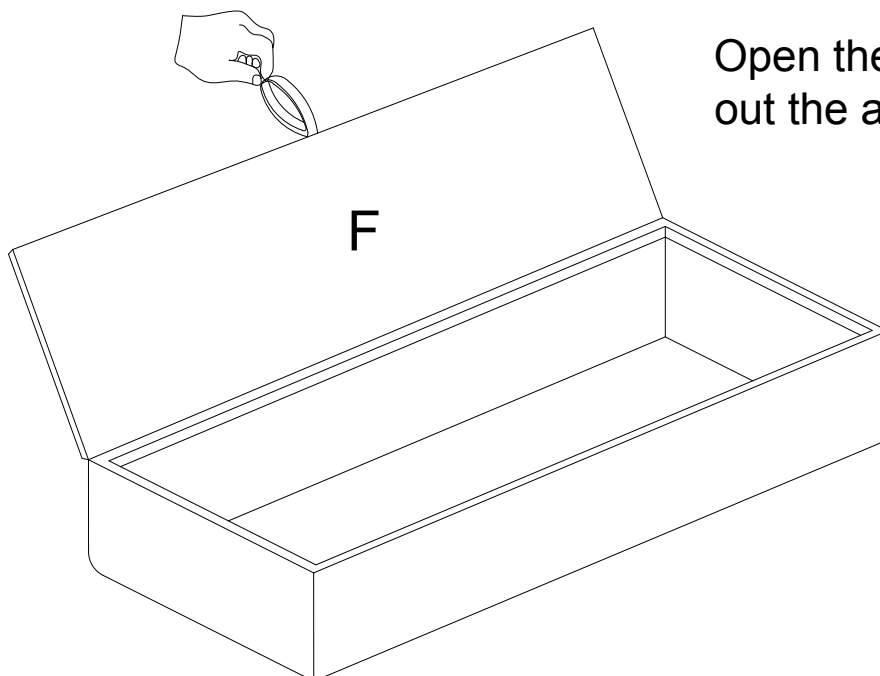


Open the lid and take out the accessories inside

STEP 1-2:

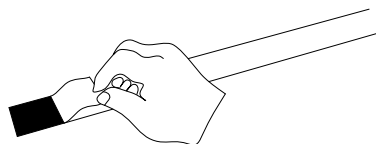


Tear off the Velcro, attach the zipper, and secure the armrest bag to the armrest

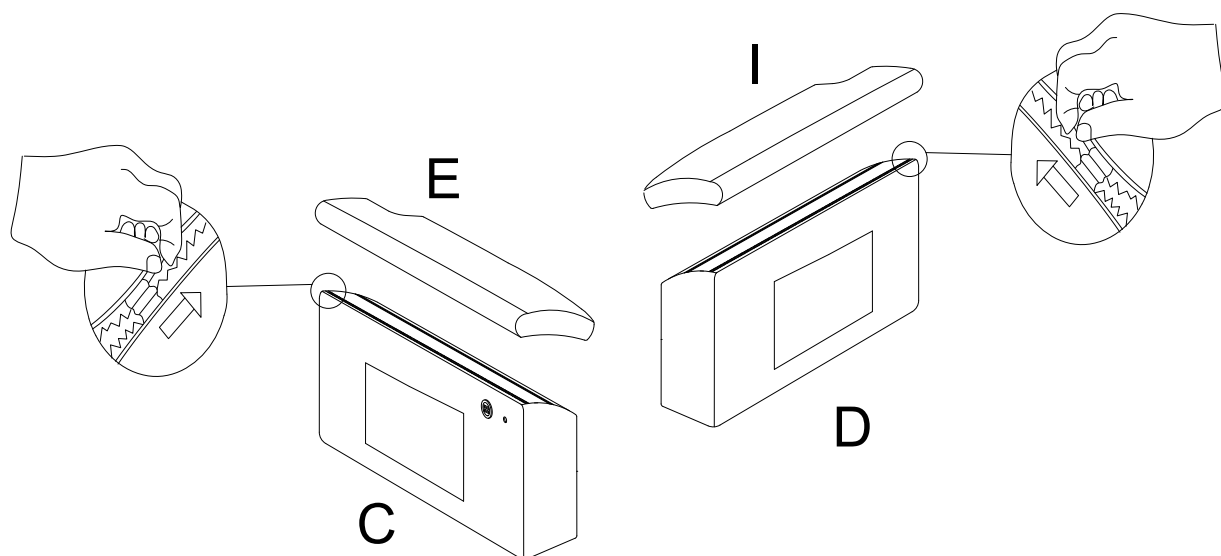


ASSEMBLY INSTRUCTIONS

STEP 2-1:

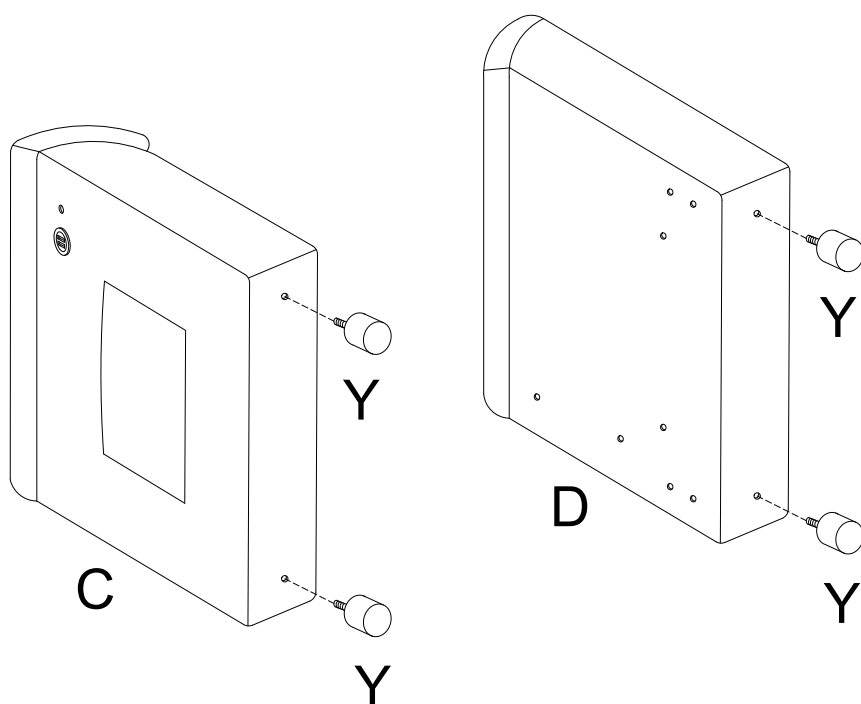


STEP 2-2:

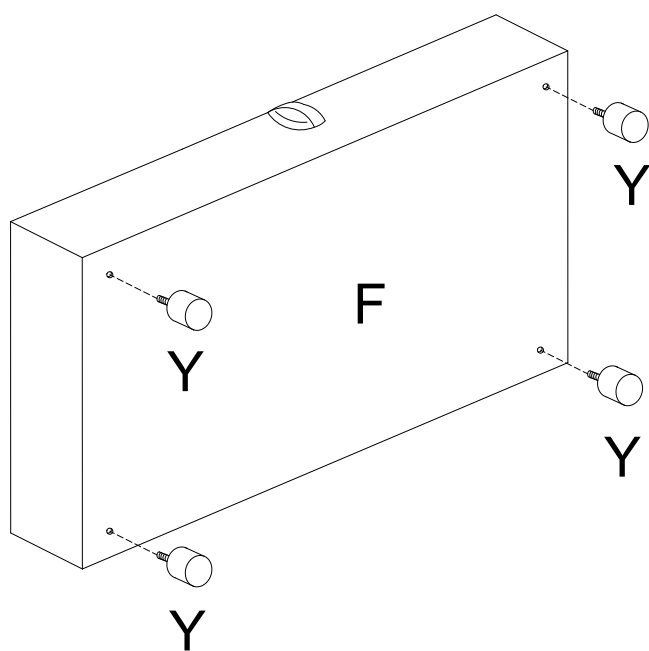


ASSEMBLY INSTRUCTIONS


STEP 3:

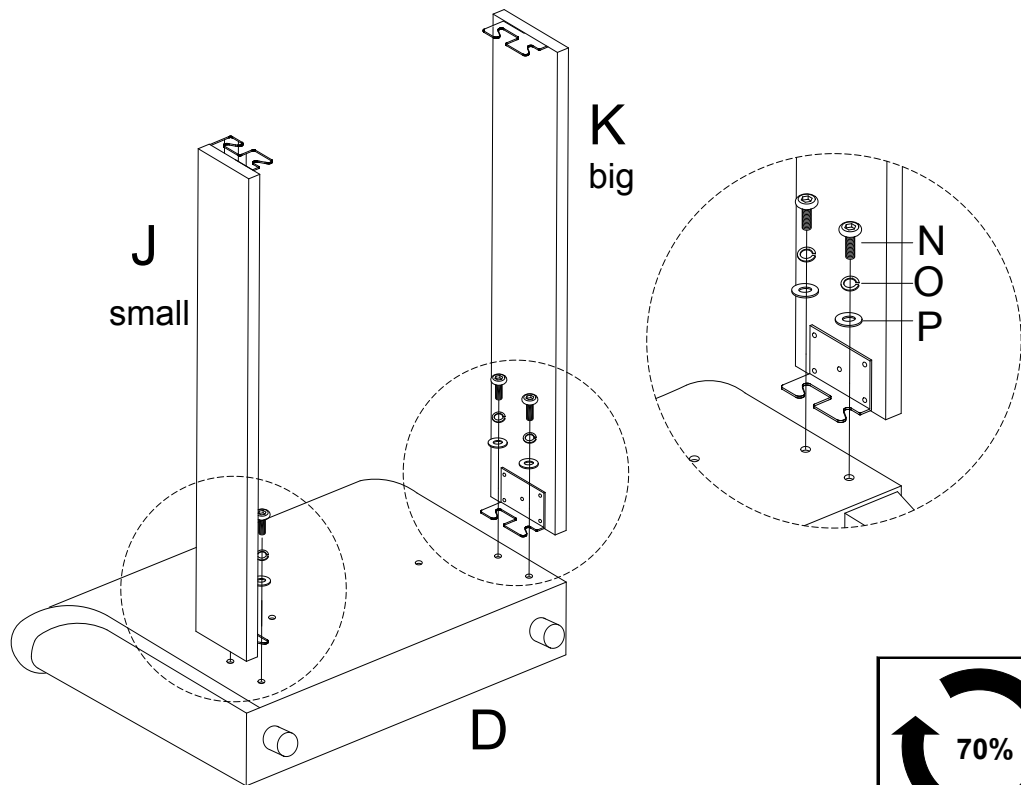


Do not fully tighten the screws. Wait until all subsequent assembly steps are completed before fully tightening them

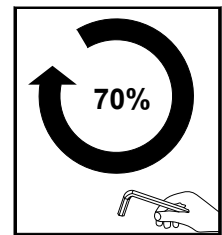

STEP 4:

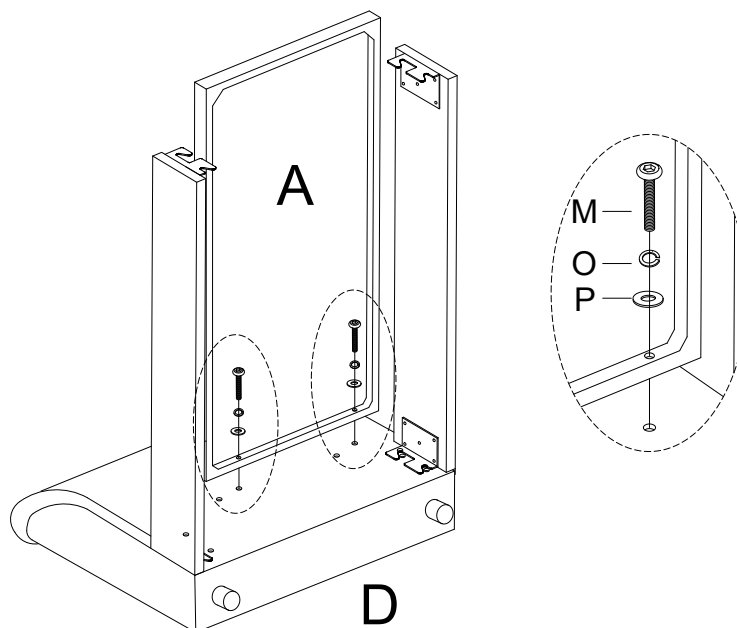


Do not fully tighten the screws. Wait until all subsequent assembly steps are completed before fully tightening them

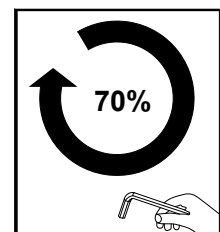


ASSEMBLY INSTRUCTIONS


STEP 5:

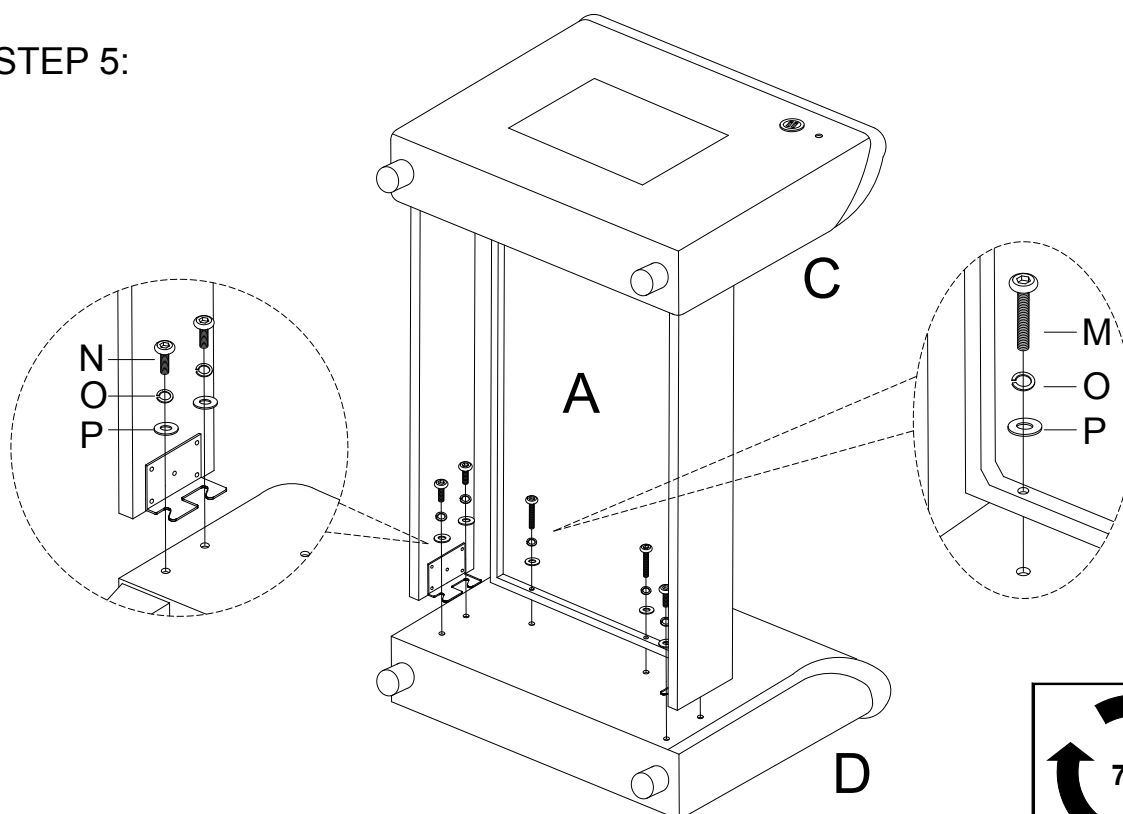

Do not fully tighten the screws. Wait until all subsequent assembly steps are completed before fully tightening them

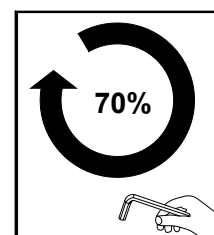


STEP 6:

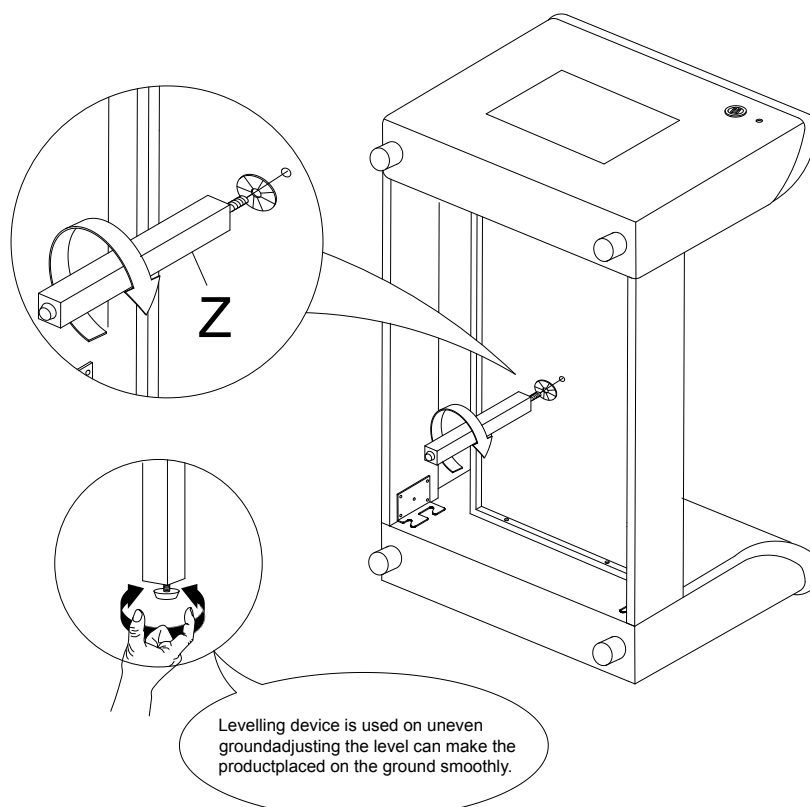


ASSEMBLY INSTRUCTIONS

STEP 7:

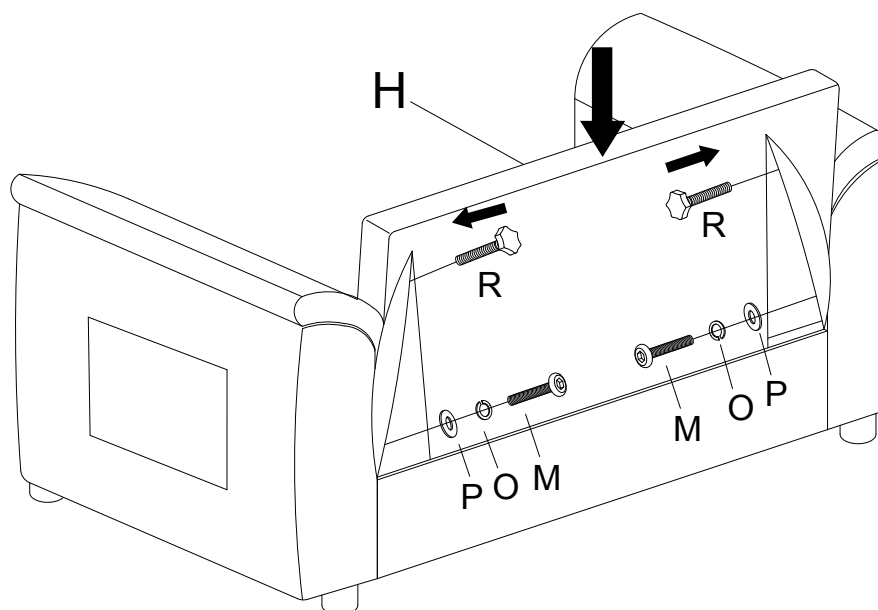

After this step is assembled, please tighten all the screws


STEP 8:

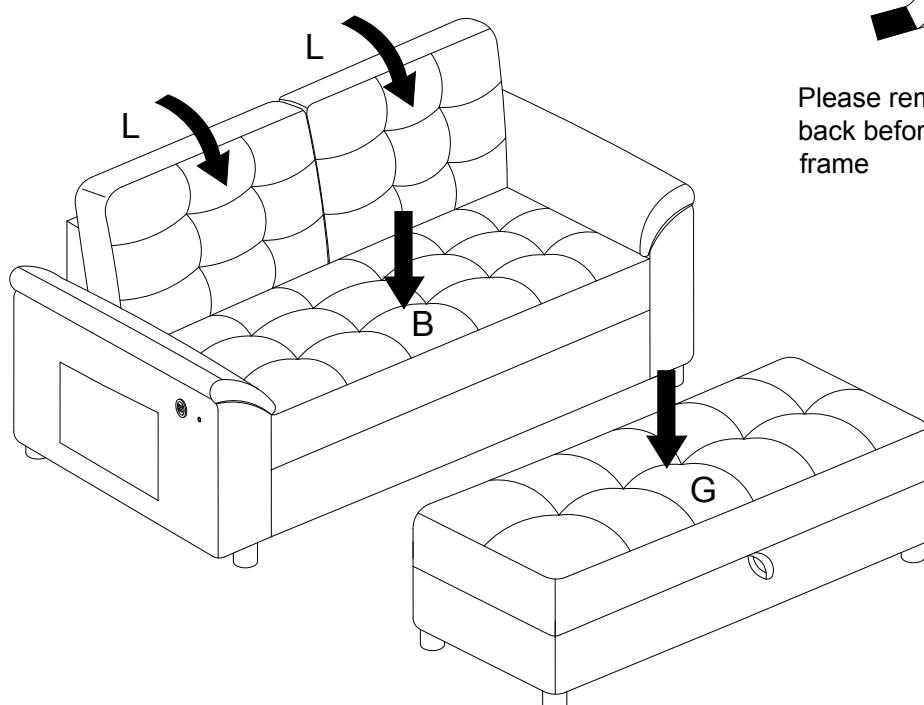


Please remove the Velcro on the back before placing it on the main frame

ASSEMBLY INSTRUCTIONS

STEP 9:

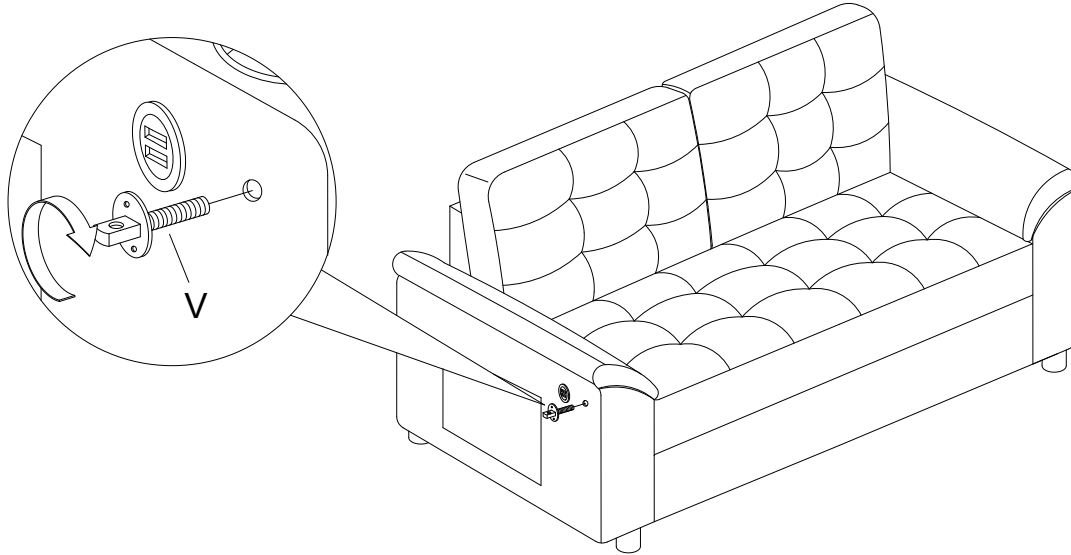


STEP 10:

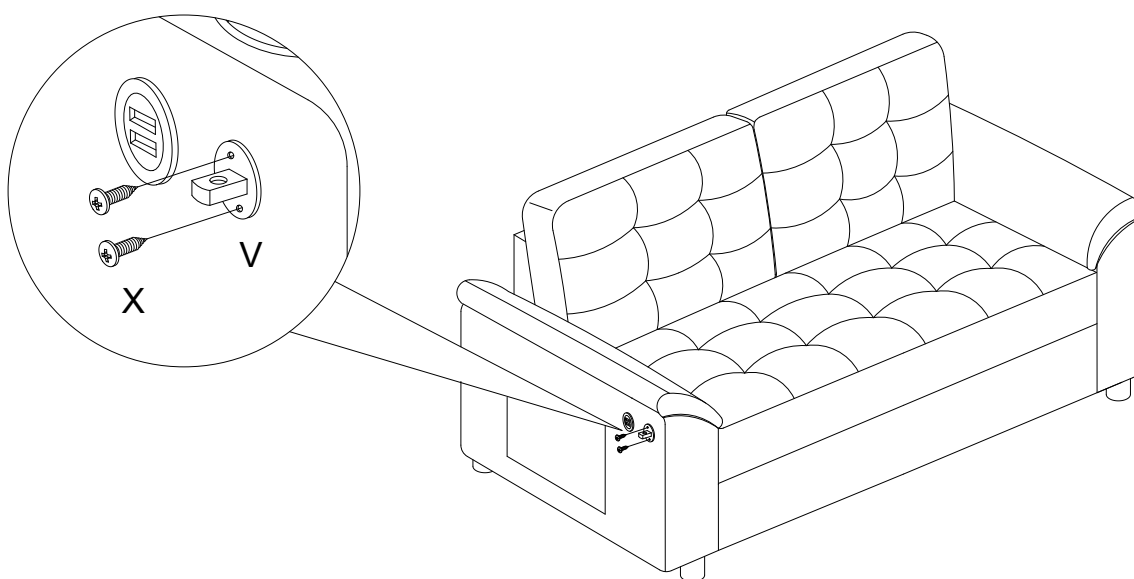


ASSEMBLY INSTRUCTIONS

STEP 11:

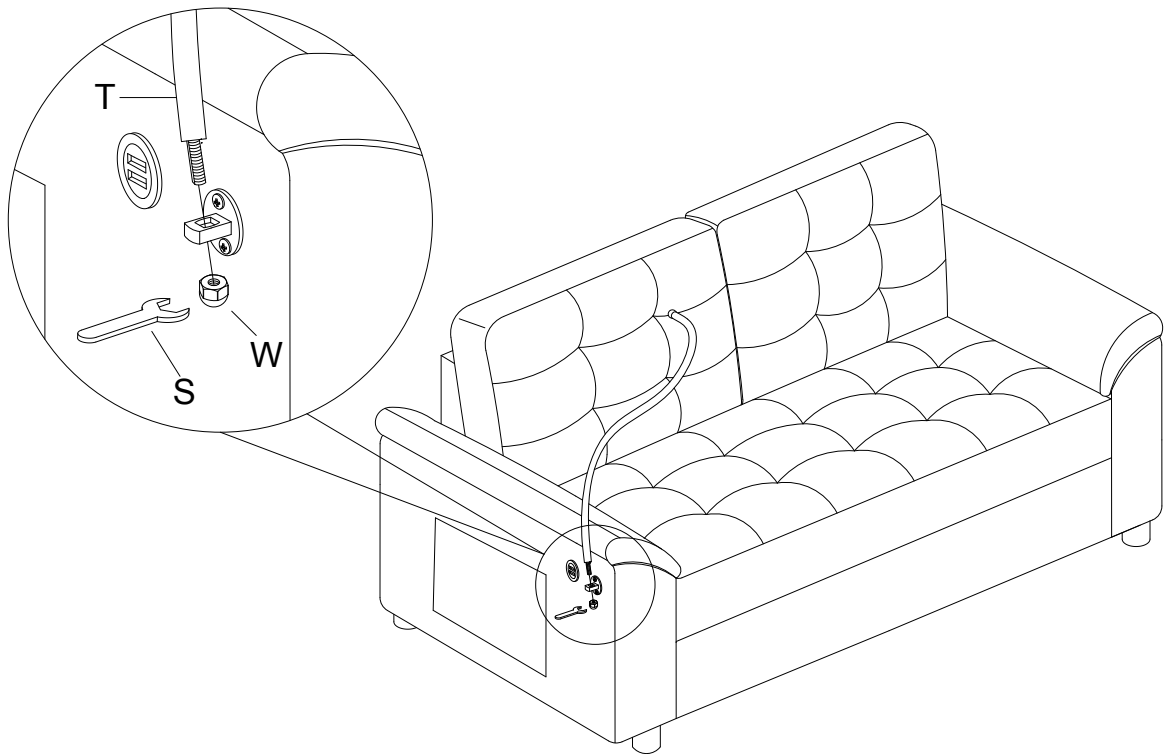


STEP 12:

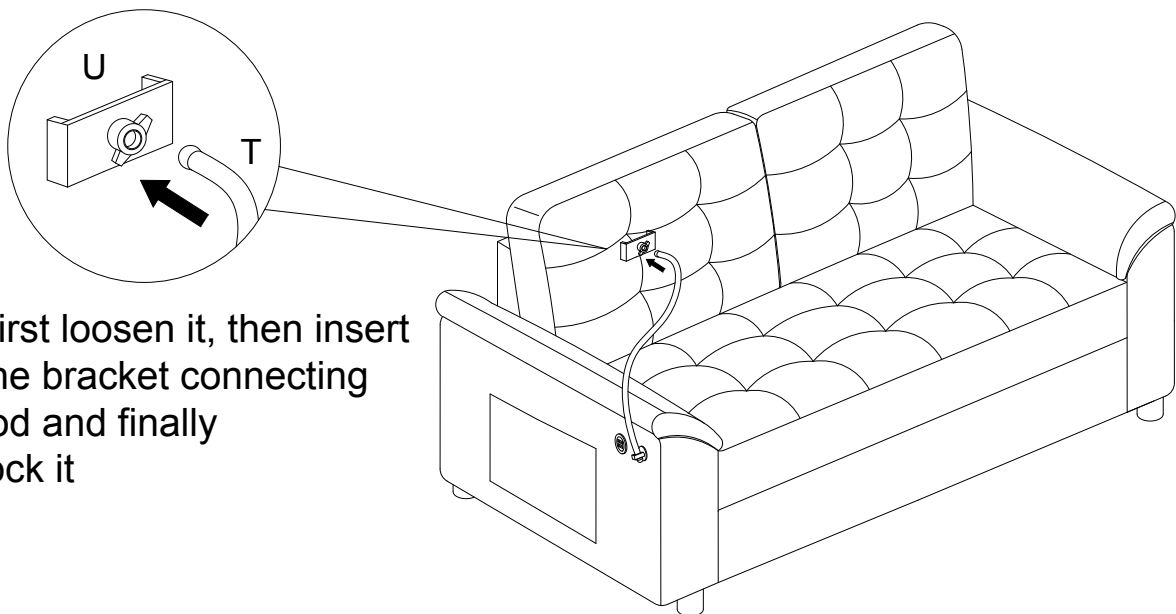


ASSEMBLY INSTRUCTIONS

STEP 13:

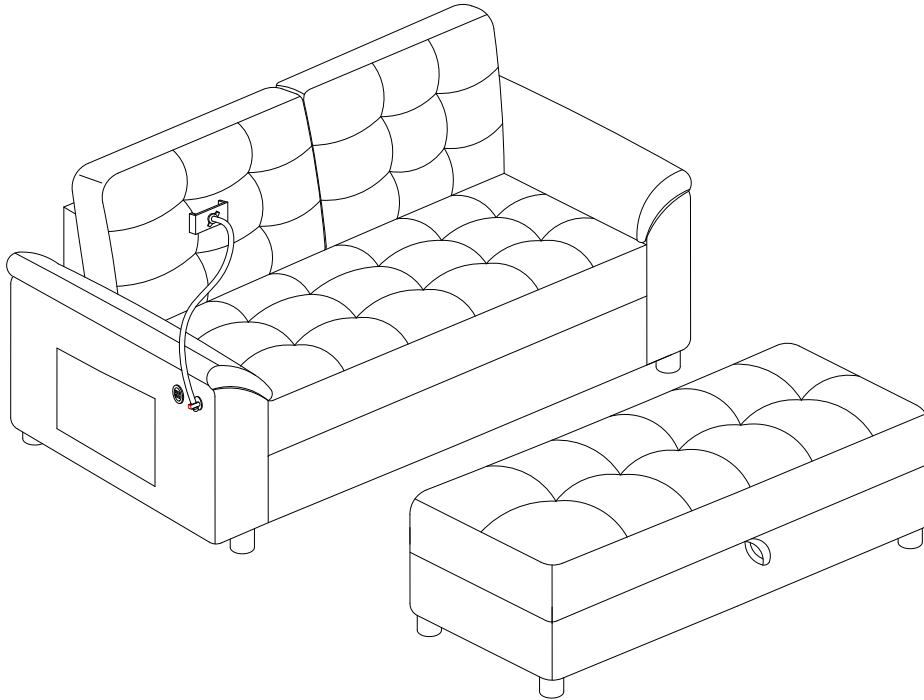

STEP 14:

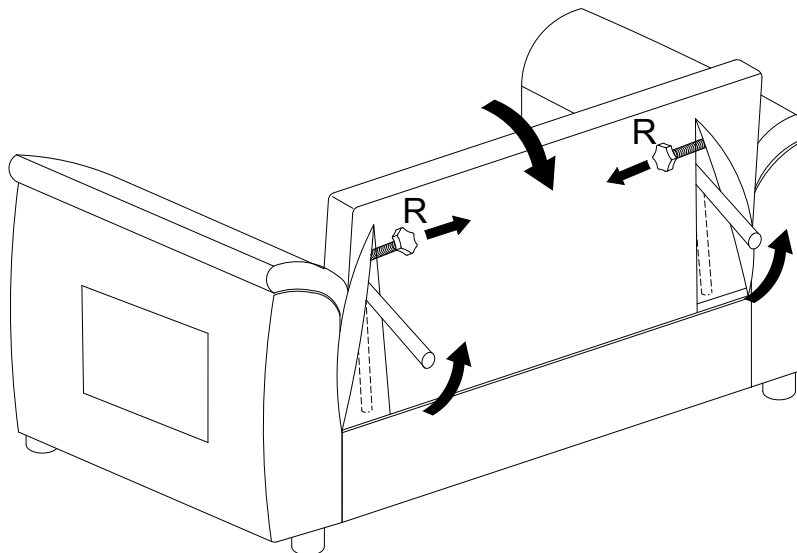

ASSEMBLY INSTRUCTIONS

STEP 15:

