Organize your parts. You may need a rubber mallet.




Parts: Quantity will vary with model.




B: Center Leg



Hardware: Quantity will vary with model.



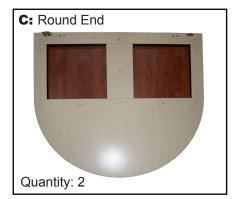



**E:** Center Piece



H: Thumb

Screws



### IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts. Check to be sure that you have all parts and hardware.


Remove all wrapping materials, including staples & packing straps before you start to assemble. Keep all hardware parts and packaging out of reach of children.

# Organize your parts. You may need a rubber mallet.

STEP 1: Attach Stringer(A) to one of the End Legs(A) by lining up the Eclip with its corresponding holes, and sliding down




STEP 2: Attach Stringer(D) to Center Leg(B) by lining up Eclip with it's corresponding hole, and sliding down into place. Please Note: Center Legs (B) have EClip attachment holes on both sides.

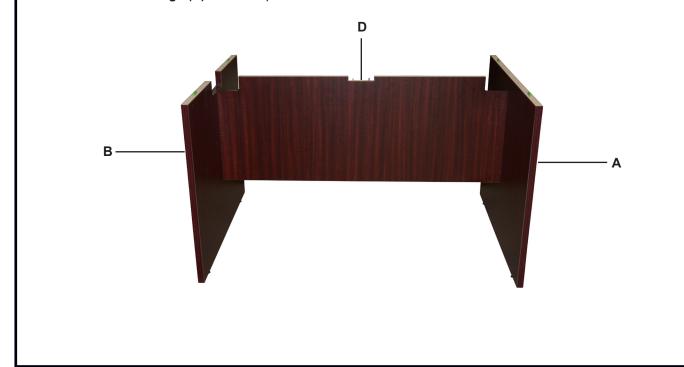


## Organize your parts. You may need a rubber mallet.

**STEP 3:** Attach next **Stringer(D)** to other side of **Center Leg(B)** by lining up Eclip with corresponding holes, and sliding down into place.

**STEP 4:** Attach next **End Leg(A)** or **Center Leg(B)** (Will vary depending on model of table.) Attach by lining up holes with corresponding Eclip, and slilding down into place.

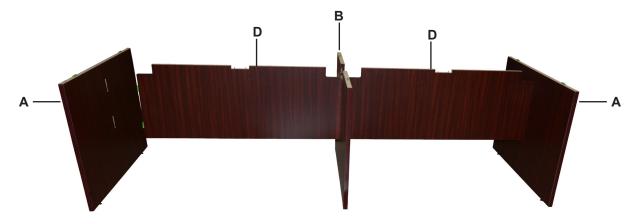


Please Note: Depending on your model of table, you may need to repeat **STEP 3** & **STEP 4** until you have used all **Center Legs(B)**, and **Stringers(D)** provided.







## Organize your parts. You may need a rubber mallet.

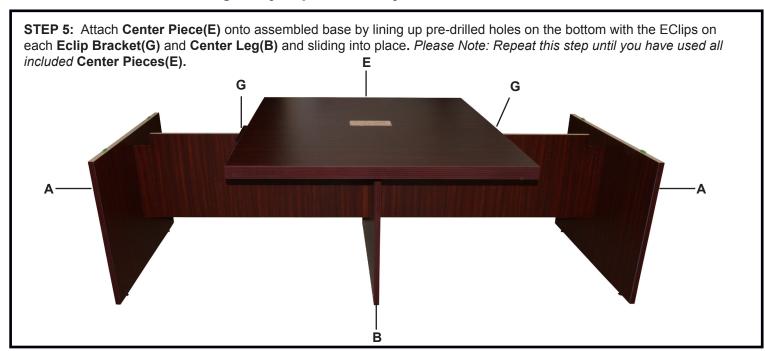

STEP 6: Attach Round Ends(C) to assembled product by lining up pre-drilled holes on bottom with the EClips on both the End Legs(A) and EClip Brackets(G) and then sliding Round Ends(C) into place.

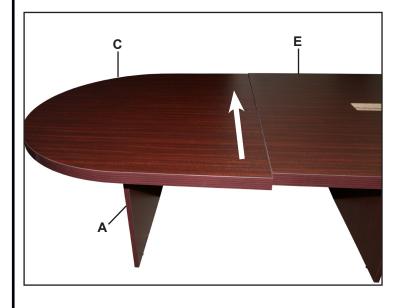

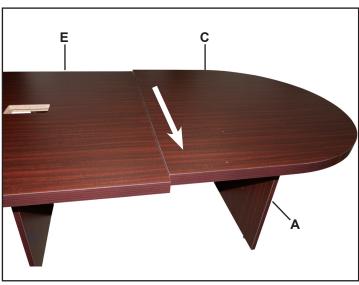


# Organize your parts. You may need a rubber mallet.

STEP 7A: From underneath the table, lock all available Sash Locks on the Center Pieces(E) (see figure 1).

STEP 7B: From underneath the table, attach all available Flat Brackets(E) by using Thumb Screws(E) (see figure 2).



Figure 1.

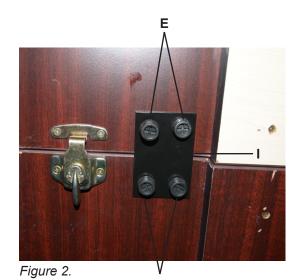

**OPTIONAL STEP 8:** Insert **DPEL(J)** using provided screws.





**OPTIONAL STEP 9:** Attach **Cord Holder(F)** underneath table onto cam lock side of **Stringer(D)** with provided double sided tape.

