

How to measure



Inside Mount



Outside Mount



The depth of window:


minimum 1.77 inch (4.5cm), if you want a flush inside mount a minimum of 2.56 inch (6.5cm) is required. Take the minimum width from the top, middle and bottom of the width.

Blinds width = inner width of window frame - 2/5 inch
Blinds height = window frame inner height


If the window frame protrudes from the wall, the amount of protrusion cannot exceed 0.5cm.

Blinds width = window frame width + (1-4) inch
Blinds height = window frame height + (1-6) inch


How to install

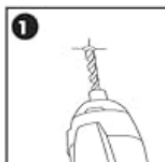

Drill holes after measurement

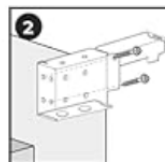


Install the brackets

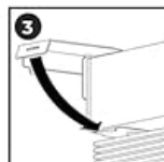

Hold the head rail in position



Assemble the valance

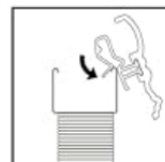

Install the valance



(Optional) Install hold down brackets