

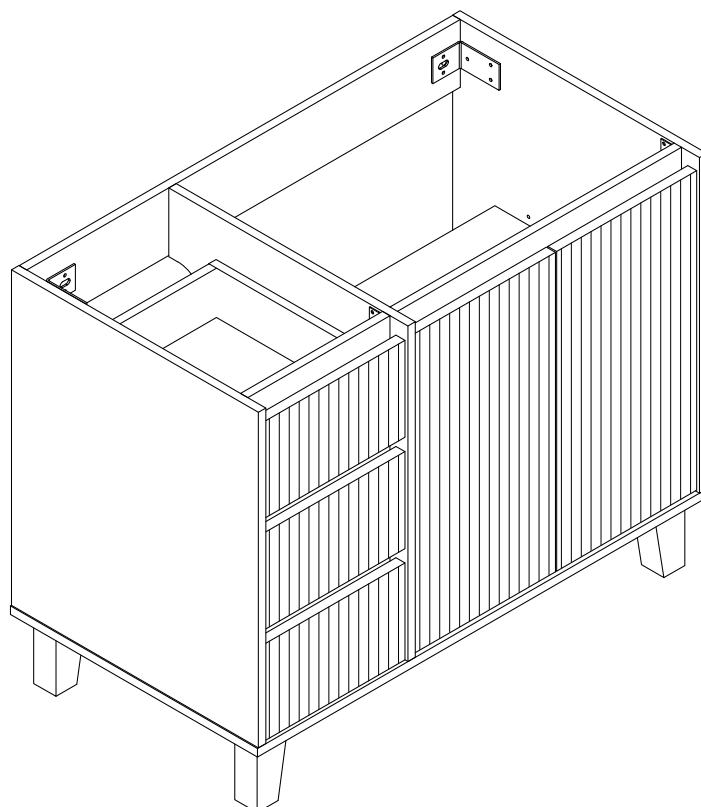
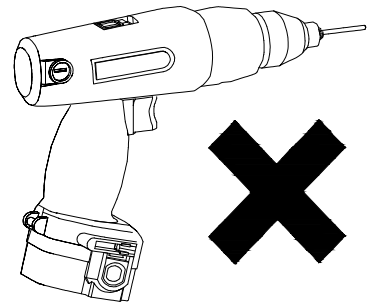


Assembly Instructions

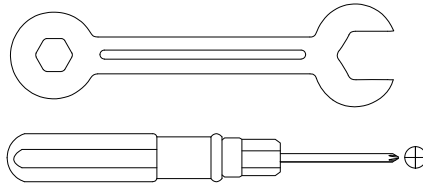


Bathroom cabinet

The beginning of installation may feel confusing and painful, but it will get better.

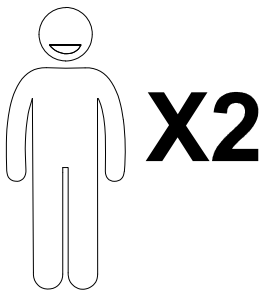



We recommend using hand tools for assembly.



If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

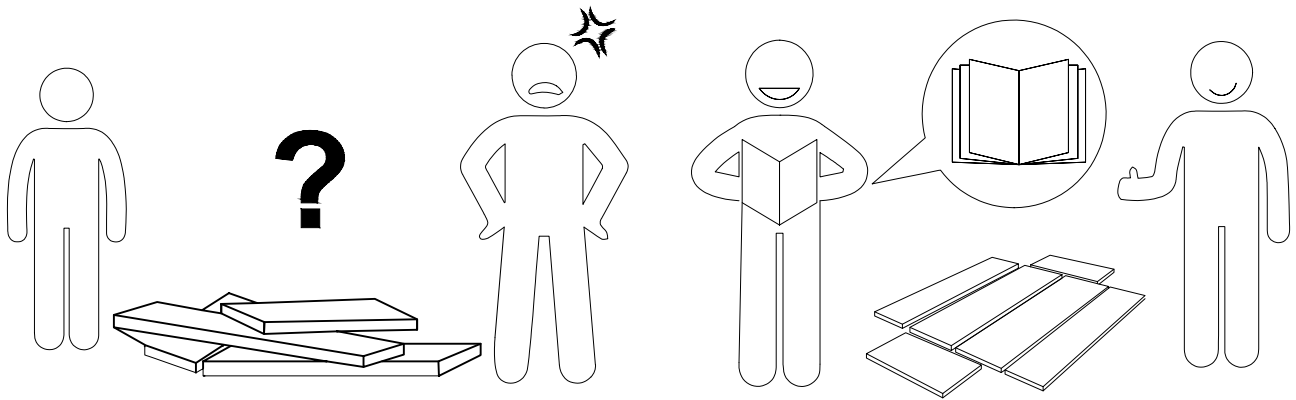

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.


















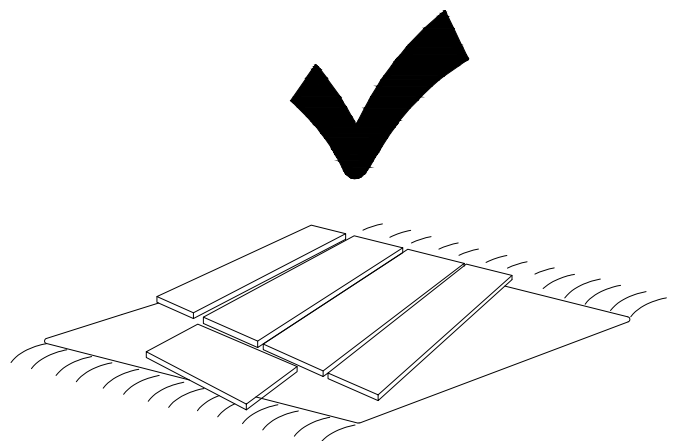
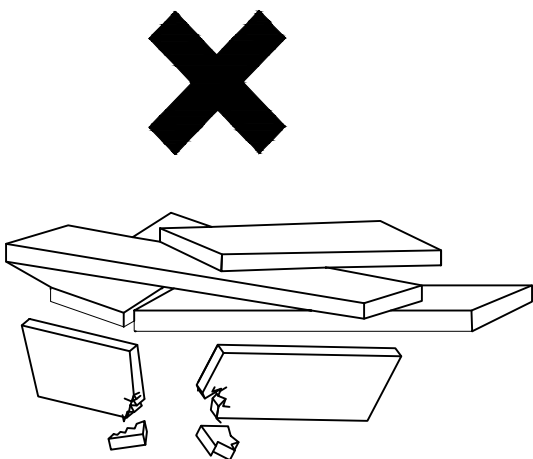


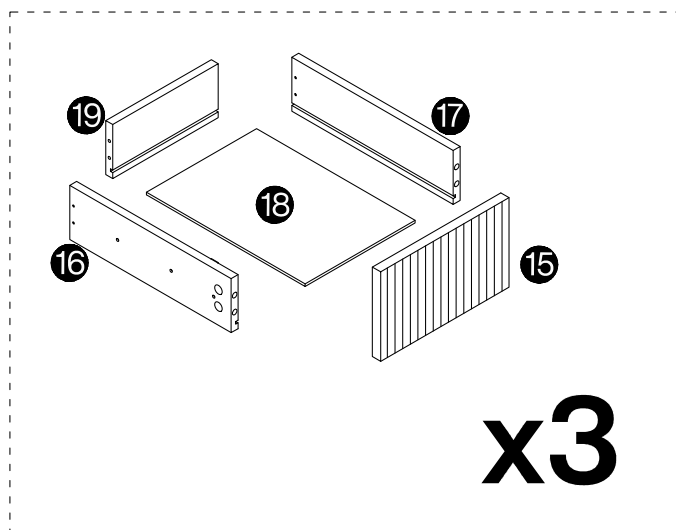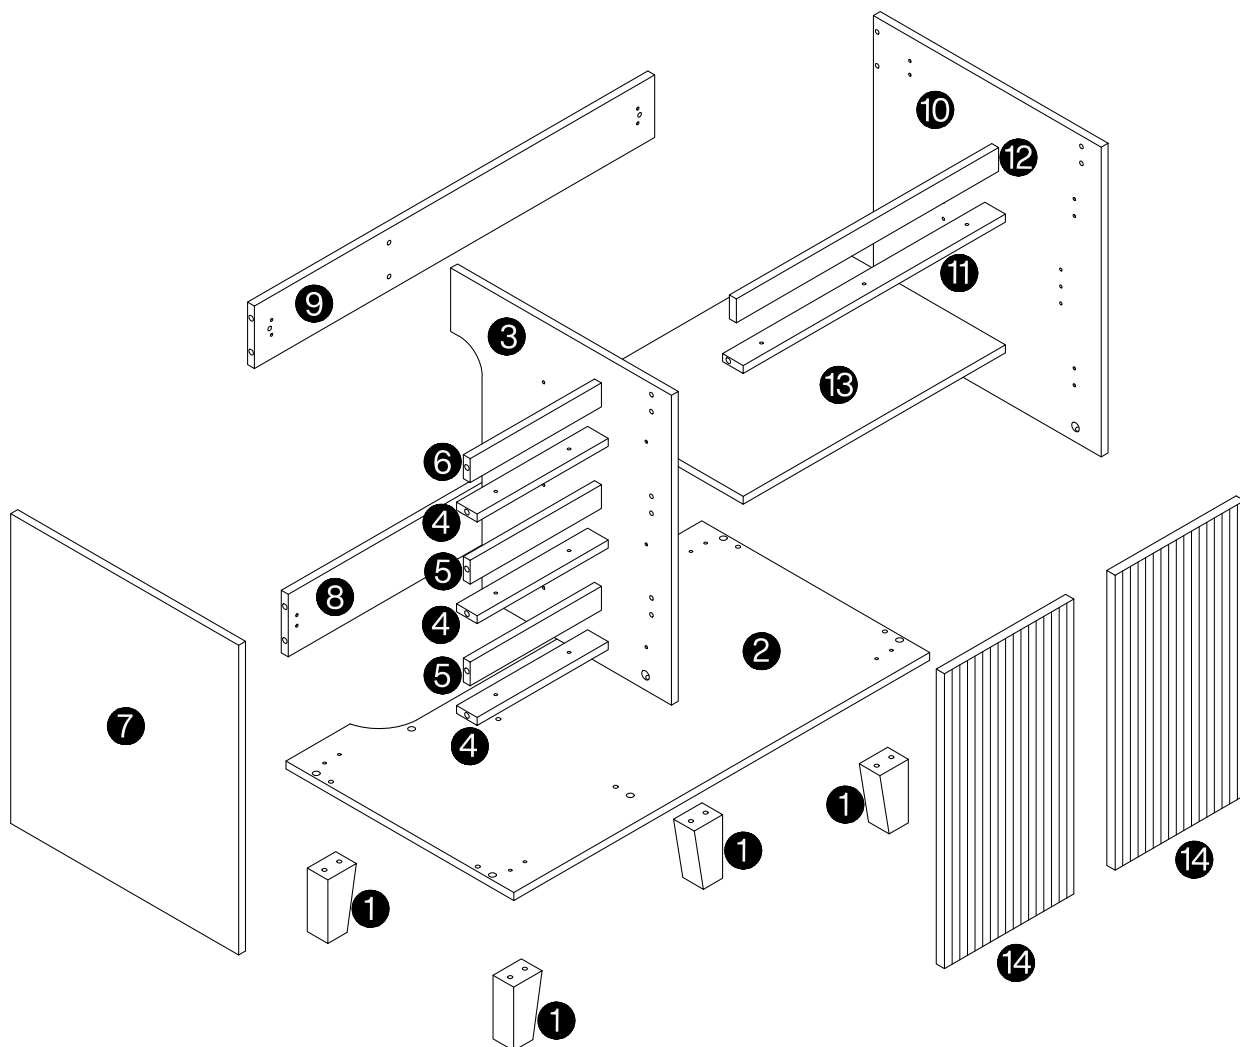





⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

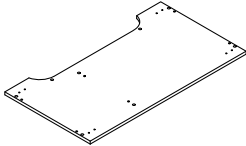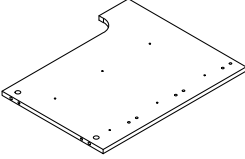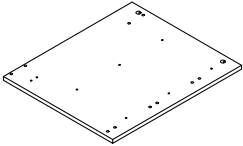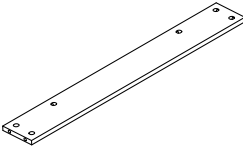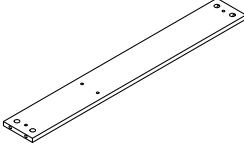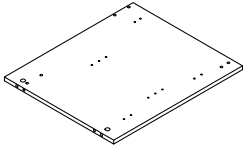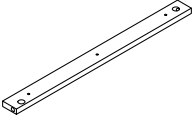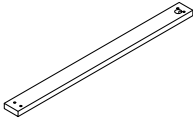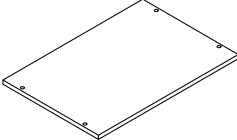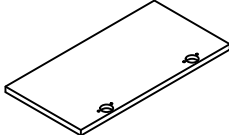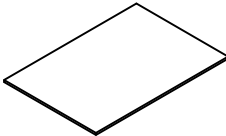1  4 pcs	2  1 pc	3  1 pc	4  3 pcs	5  2 pcs
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  1 pc
11  1 pc	12  1 pc	13  1 pc	14  2 pcs	15  3 pcs
16  3 pcs	17  3 pcs	18  3 pcs	19  3 pcs	

Hardware List

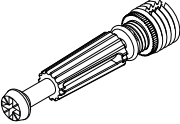
A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	300 mm		Dawan Hinge	Ø8*30
43+2pcs	43+2 pcs	3 sets	4+1 pcs	4 pcs	6+1 pcs

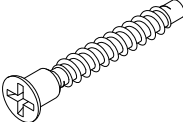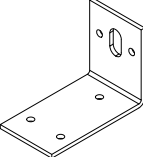G	H	I	J	K	L
					
Ø3.5x14mm	Ø3.5X35 mm	M6X30 mm	M6X14 mm	Ø7x38mm	
94+2 pcs	12+1 pcs	8+2 pcs	4 pcs	11+2 pcs	2 pcs

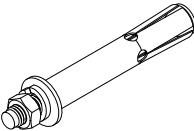
M	N	O	P	Q	
					
	M8	M8	M4		
6 pcs	2 pcs	1pc	1pc	1pc	

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

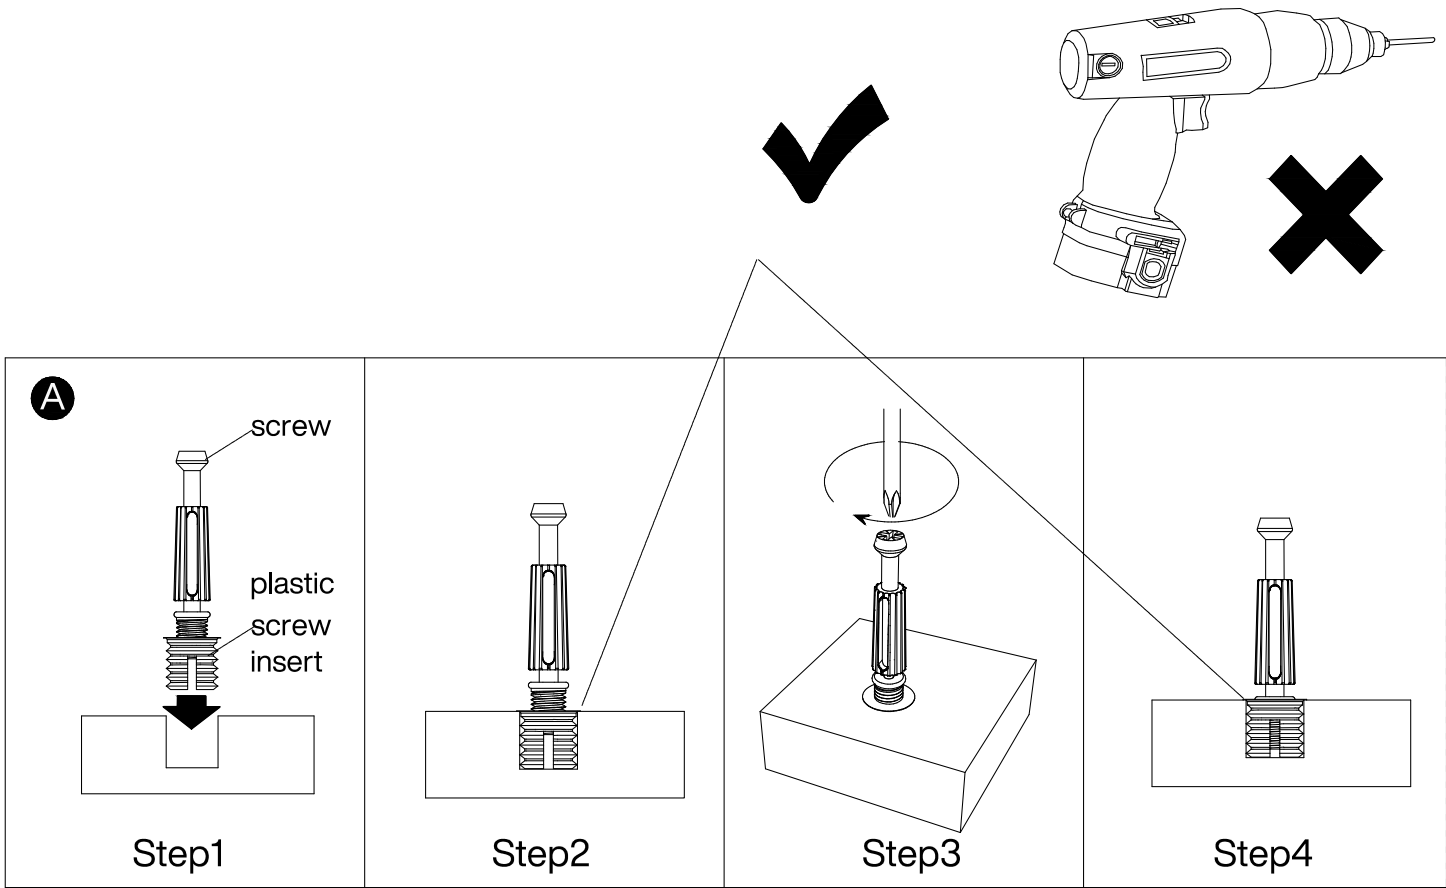


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

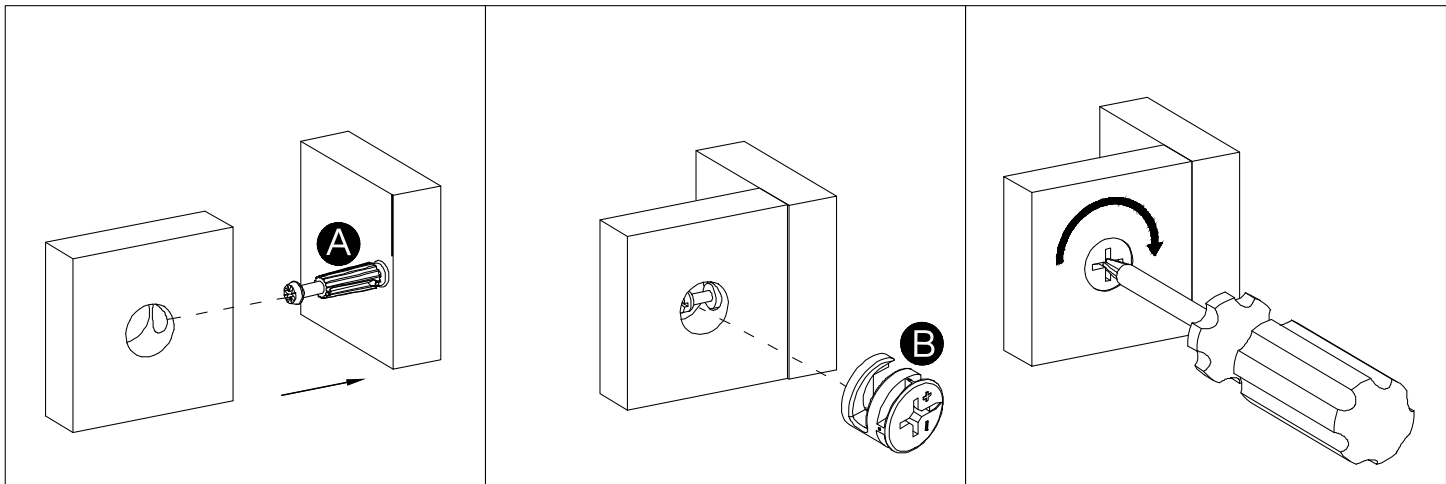

Please split component "C" into "C-1" and "C-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "C" to each side, and then gently push up the lever of component "C-2"

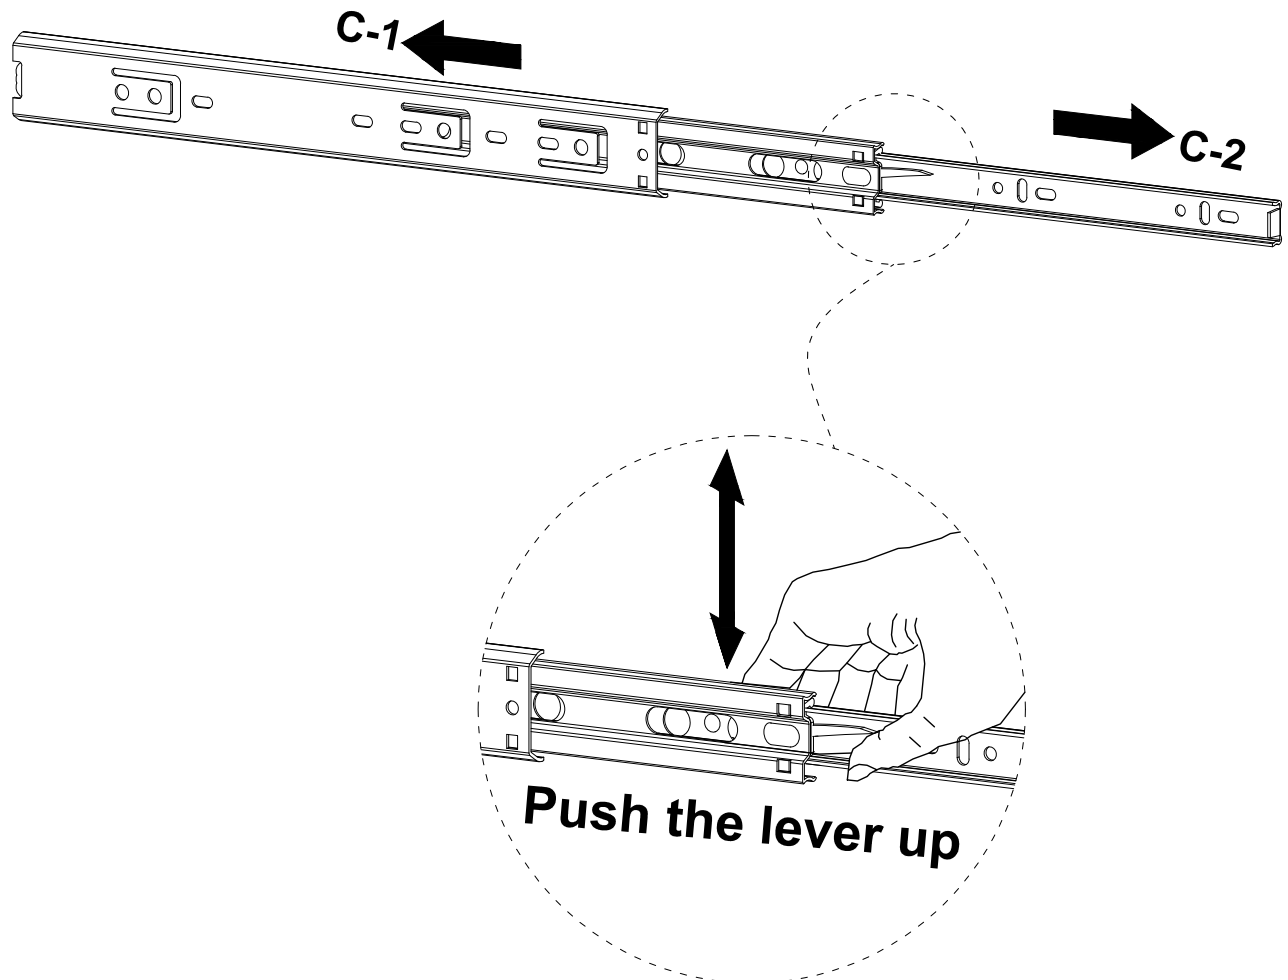

Step 2


Split component "C-1" and "C-2"

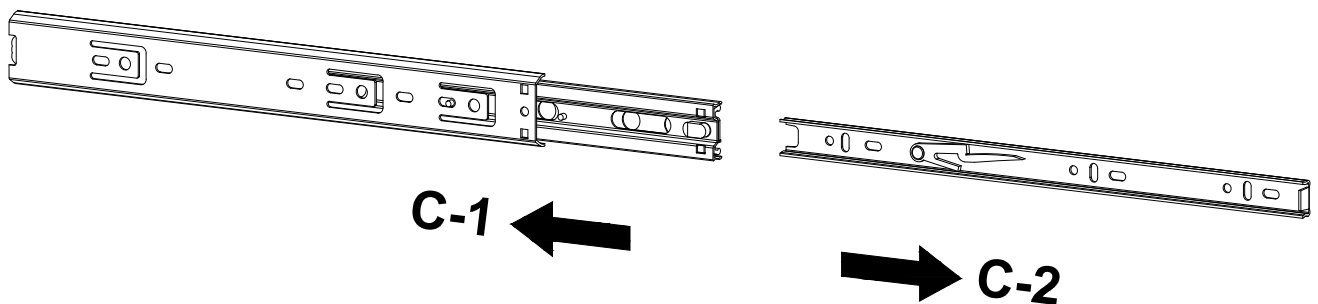

1

A



M6x40mm
12 pcs

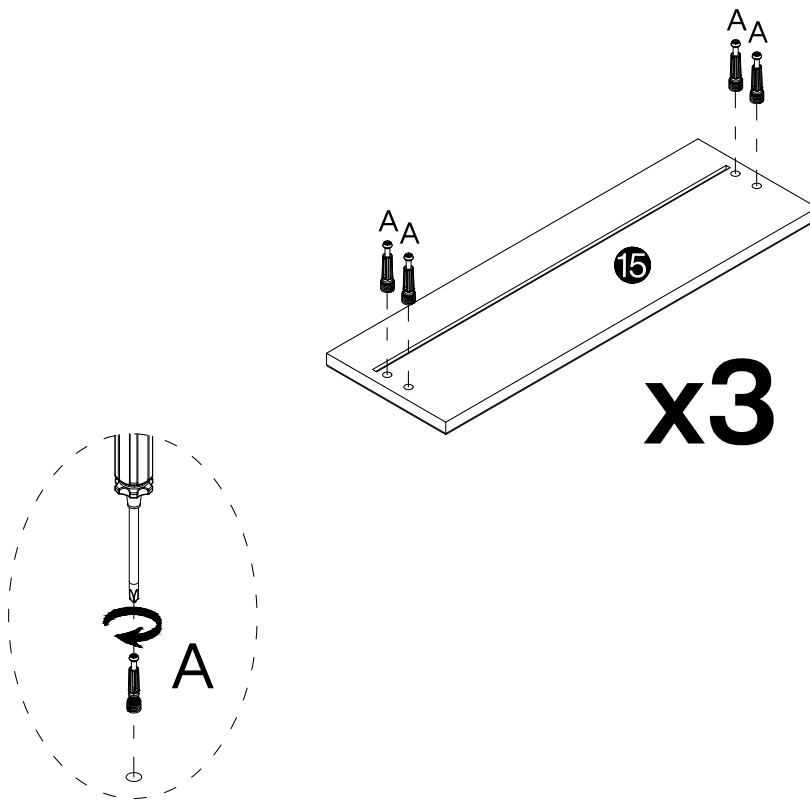


2

B


Ø15X10 mm
12 pcs

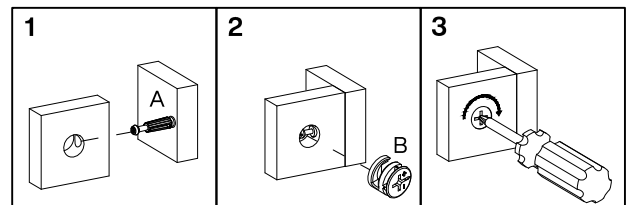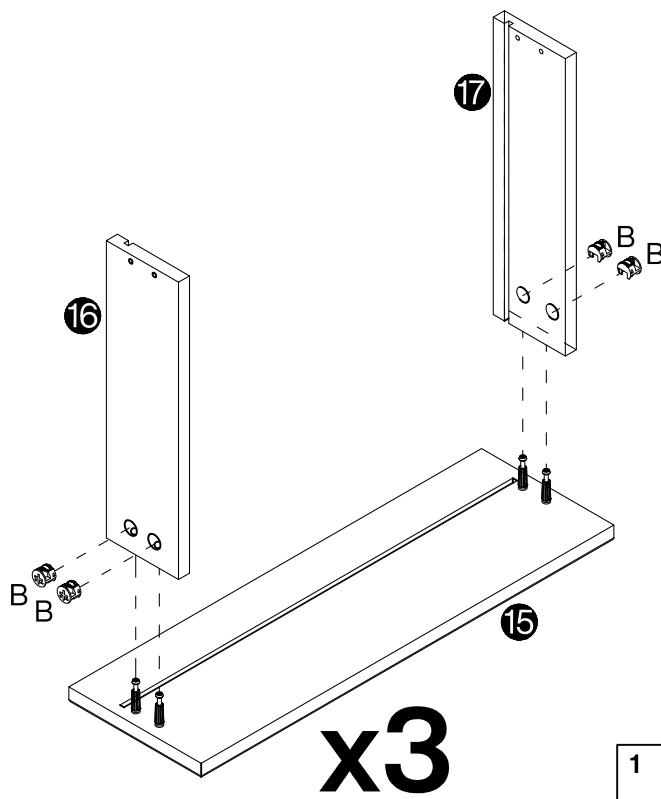

3

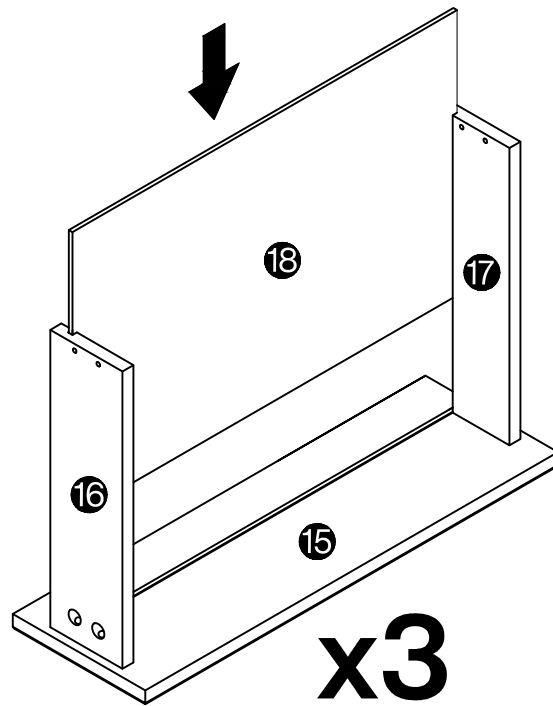


4

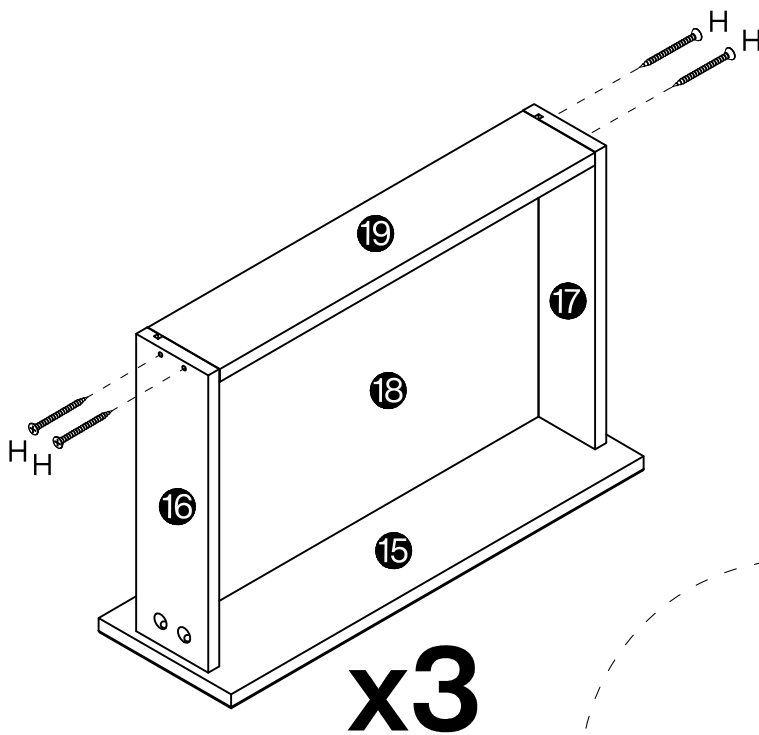


H


Ø3.5x35mm
12 pcs

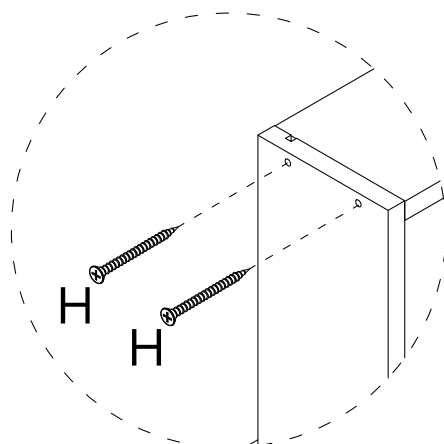


5

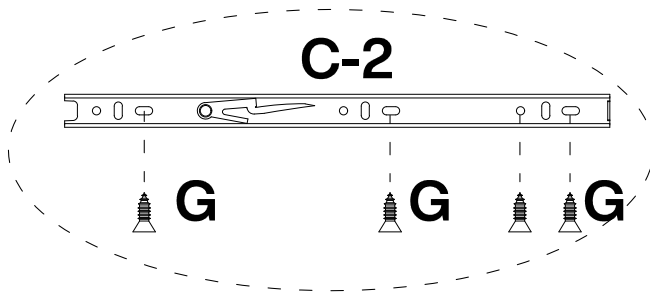


C-2	G
	 Ø3.5x14mm
6 pcs	24 pcs

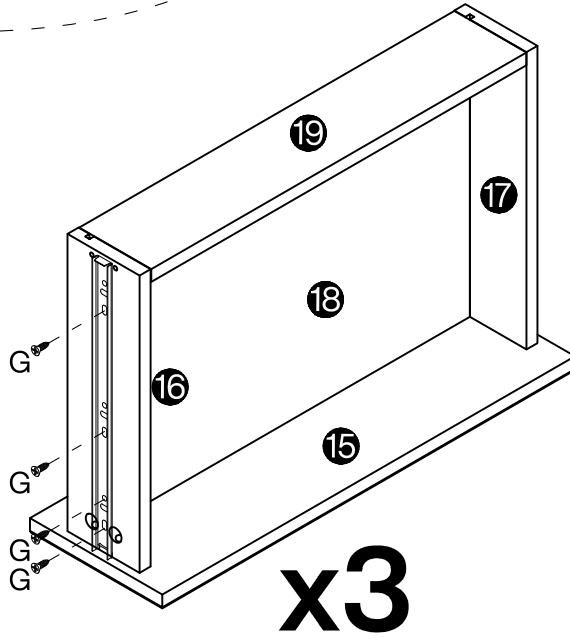

6

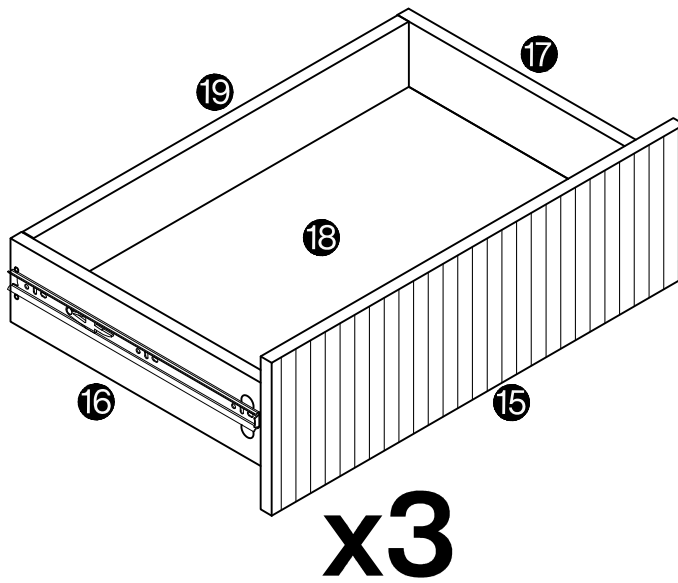


7

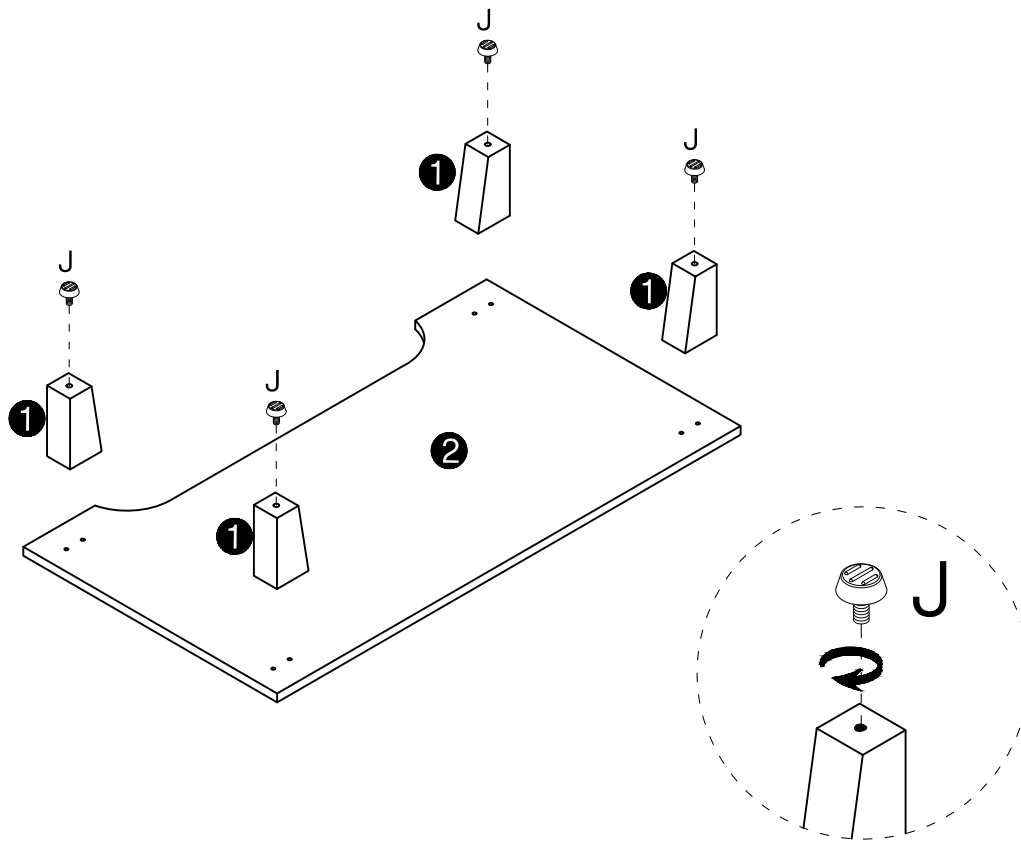

J


M6x14mm
4 pcs

8

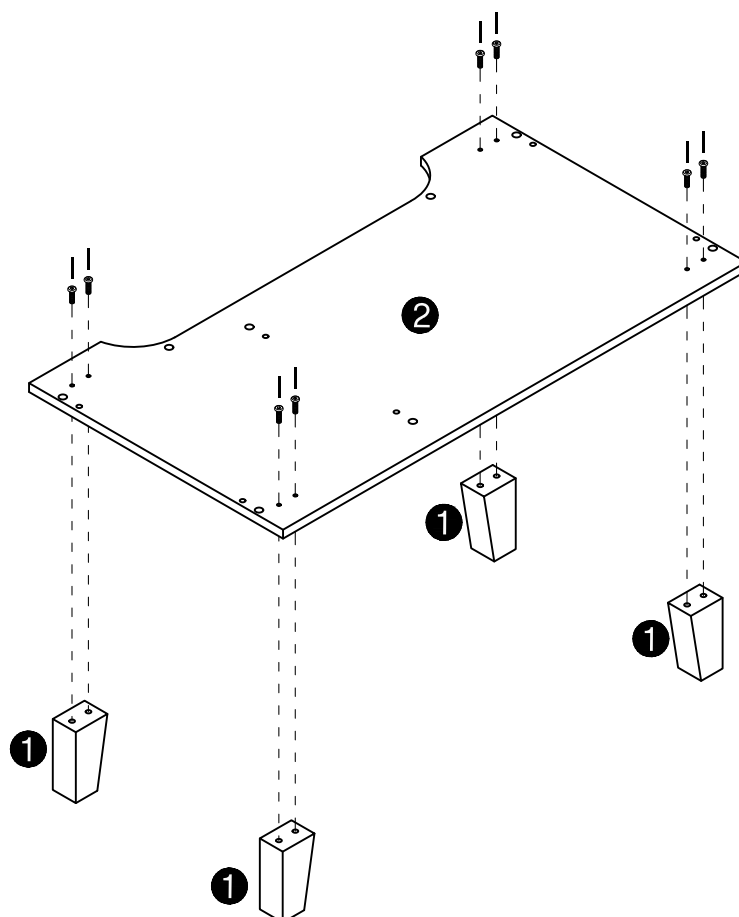



I

M6x30mm
8 pcs

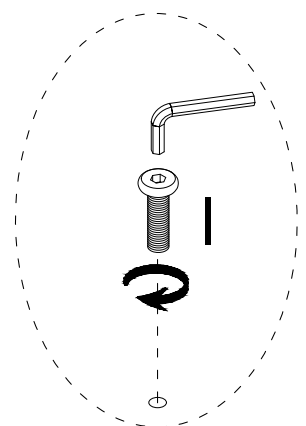



9

A	C-1	G
 M6x40mm		 Ø3.5x14mm
10 pcs	3 pcs	6 pcs


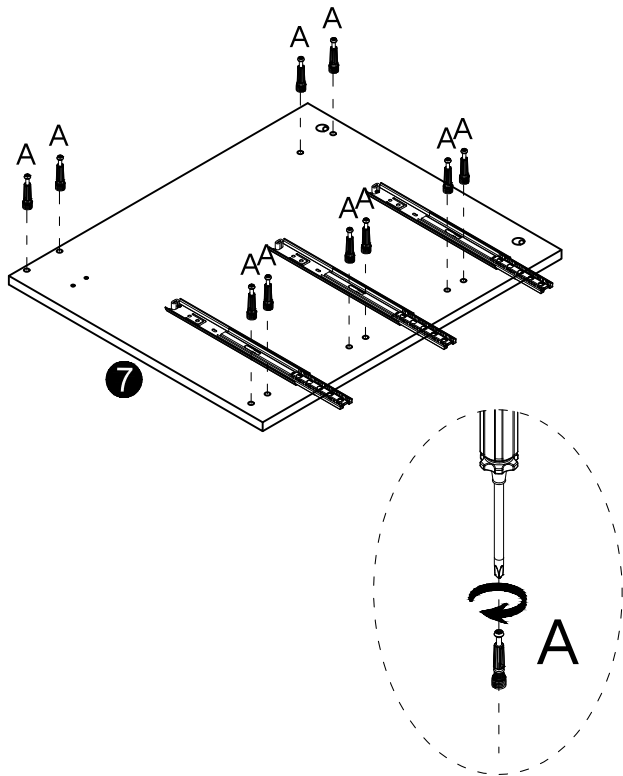
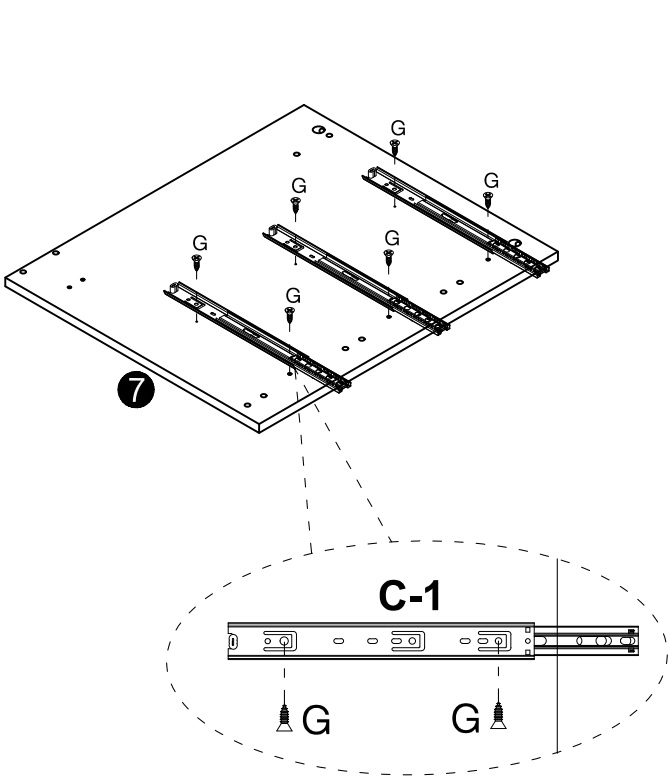


10

A	C-1	G
 M6x40mm		 Ø3.5x14mm
6 pcs	3 pcs	6 pcs

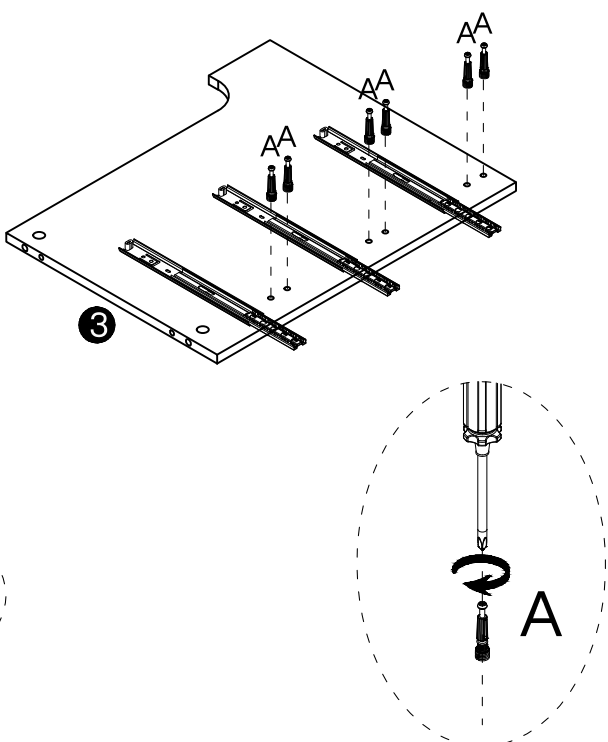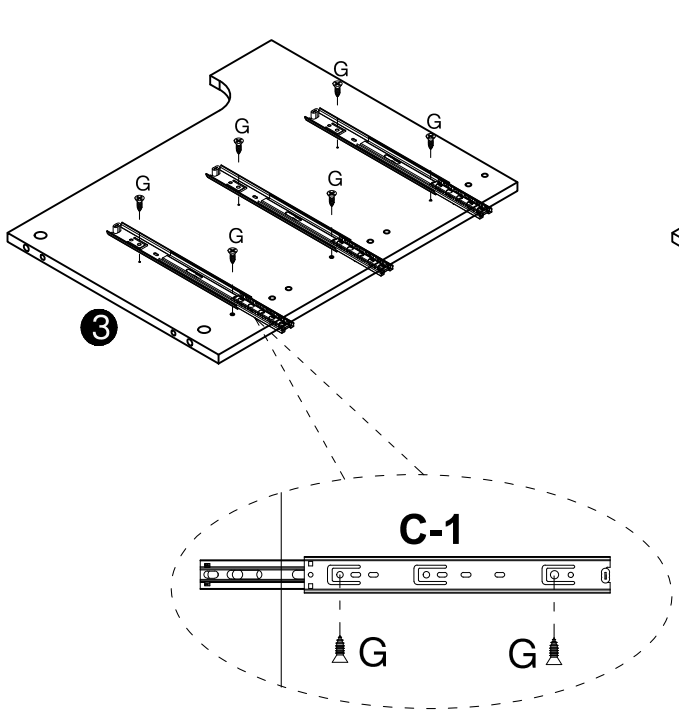



11

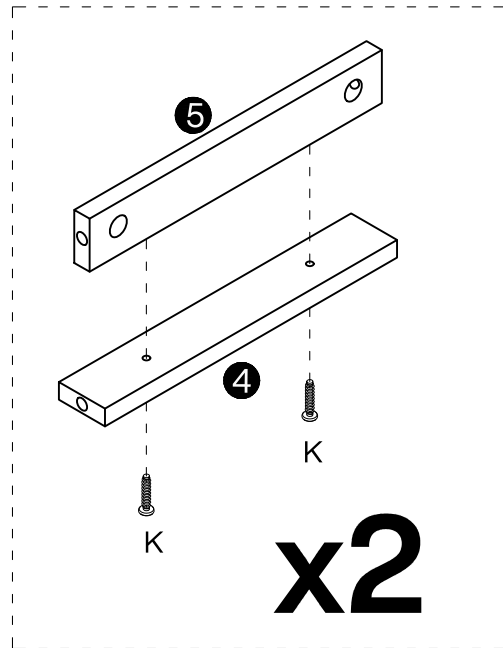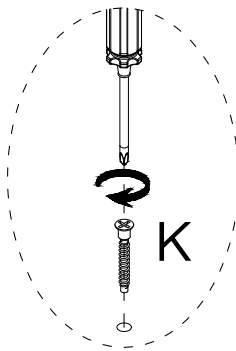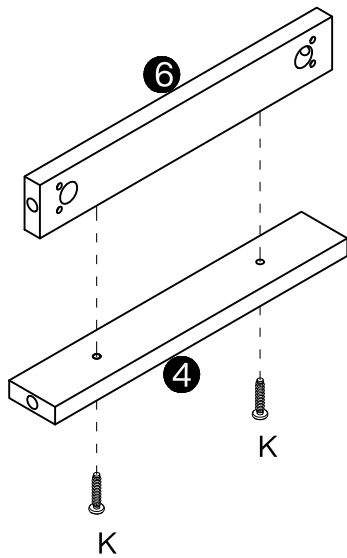

K

Ø7*38mm
6 pcs


12

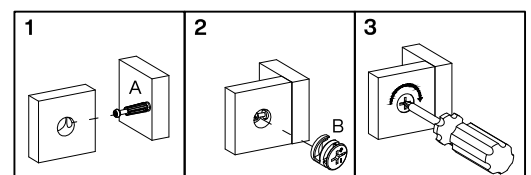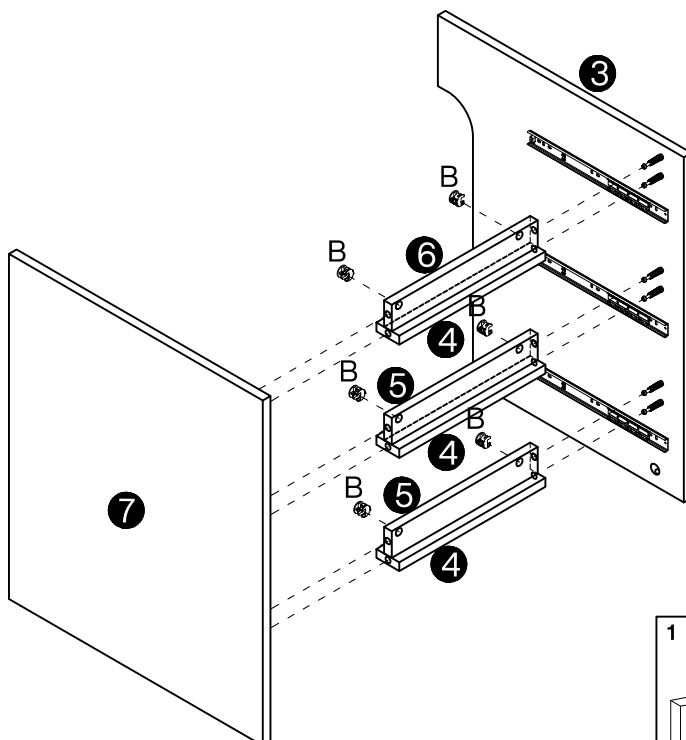

B


Ø15X10 mm
6 pcs

13

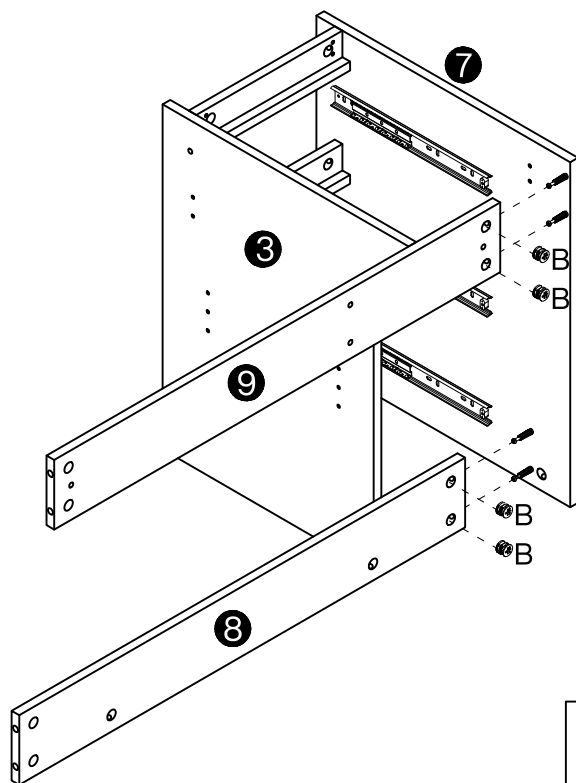


B

Ø15X10 mm
4 pcs

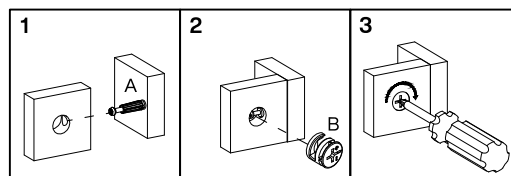


14

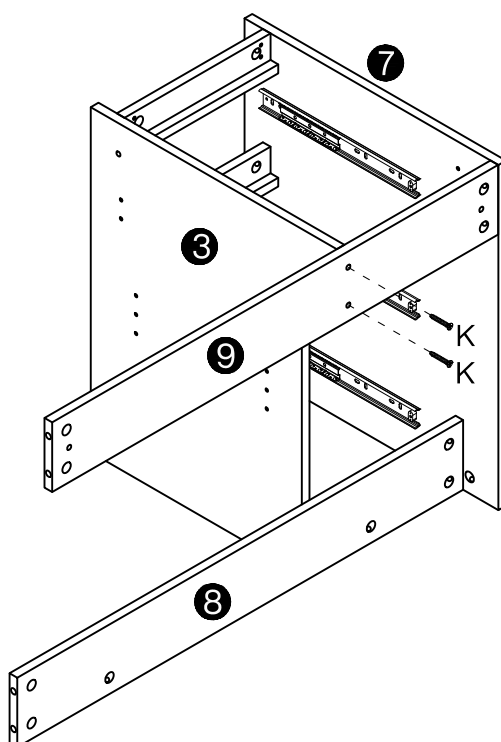



K


Ø7*38mm
2 pcs

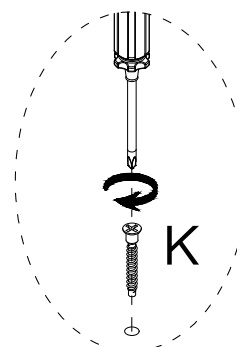


15

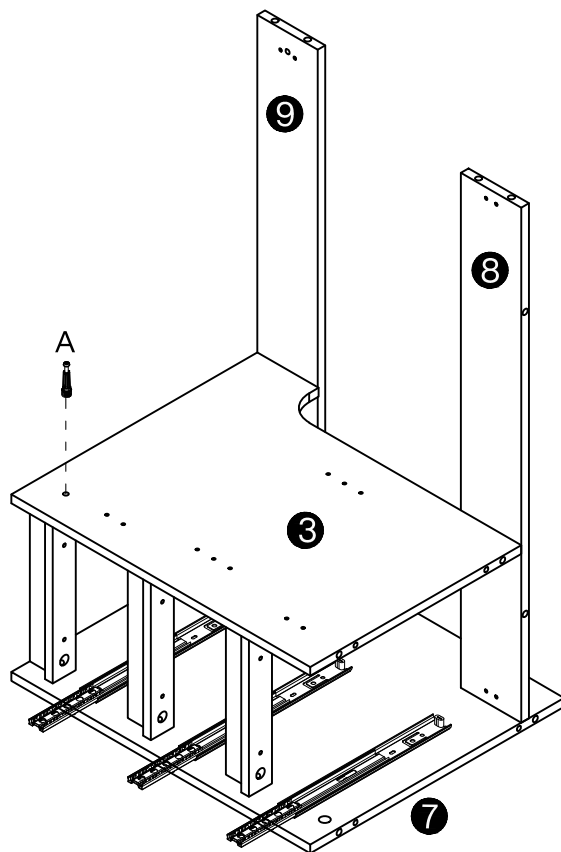

A

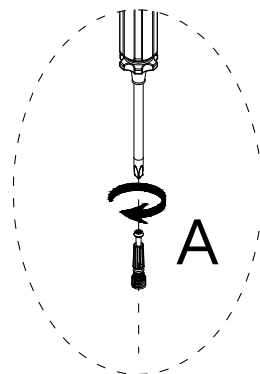M6x40mm
1 pc

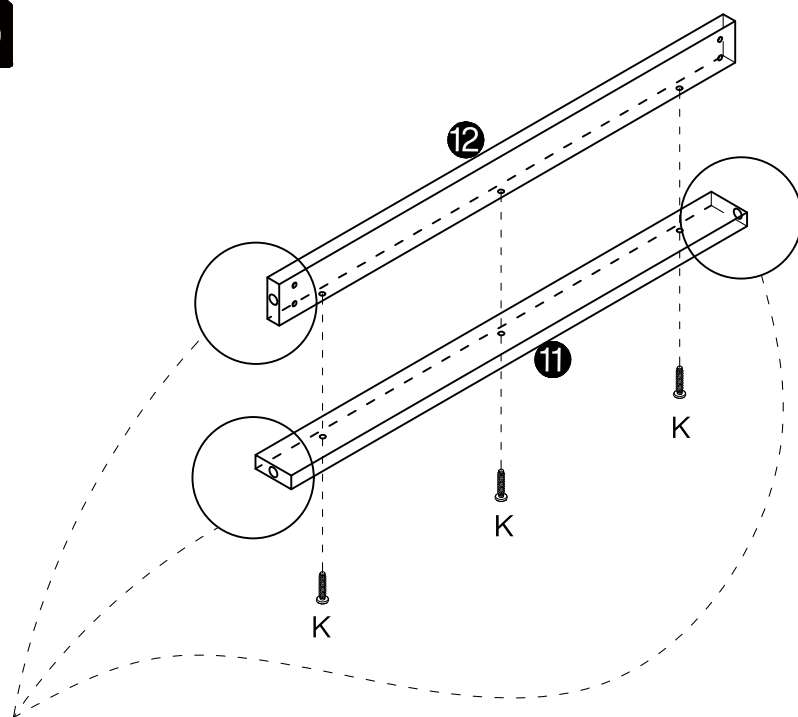


16





K

Ø7*38mm
3 pcs

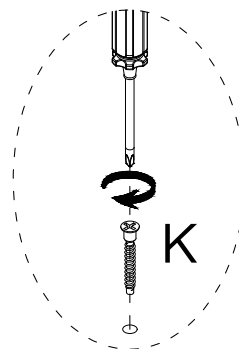

Make sure to install according to the hole orientation on the drawing.



17

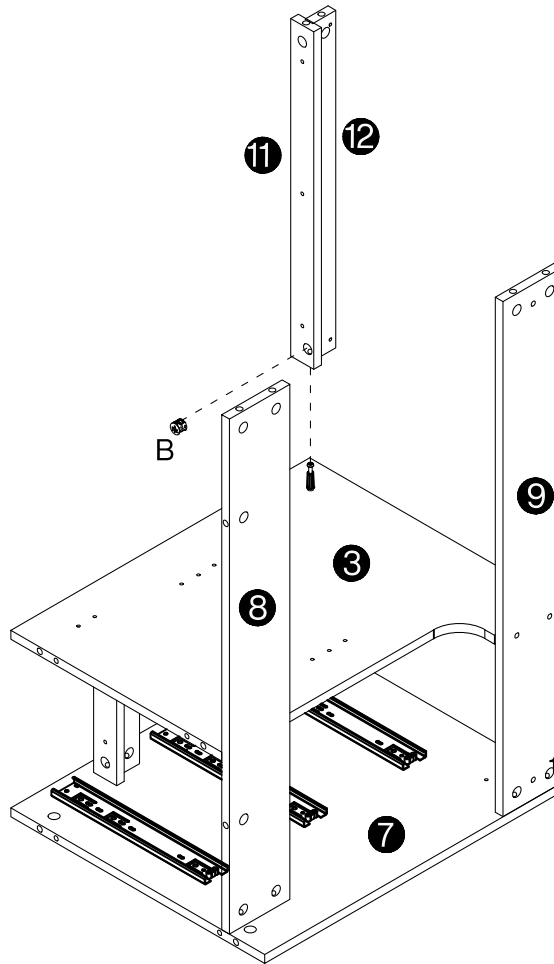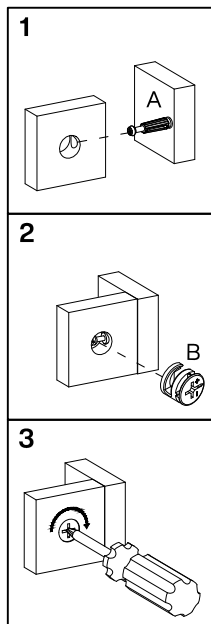


B



Ø15X10 mm
1 pc

18

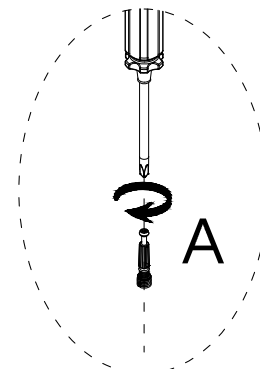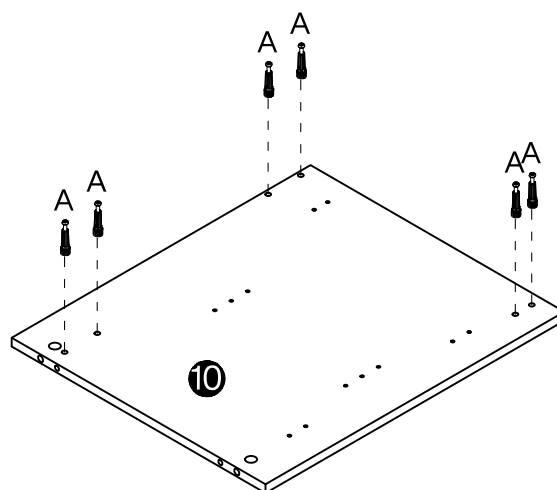

A

M6x40mm
6 pcs

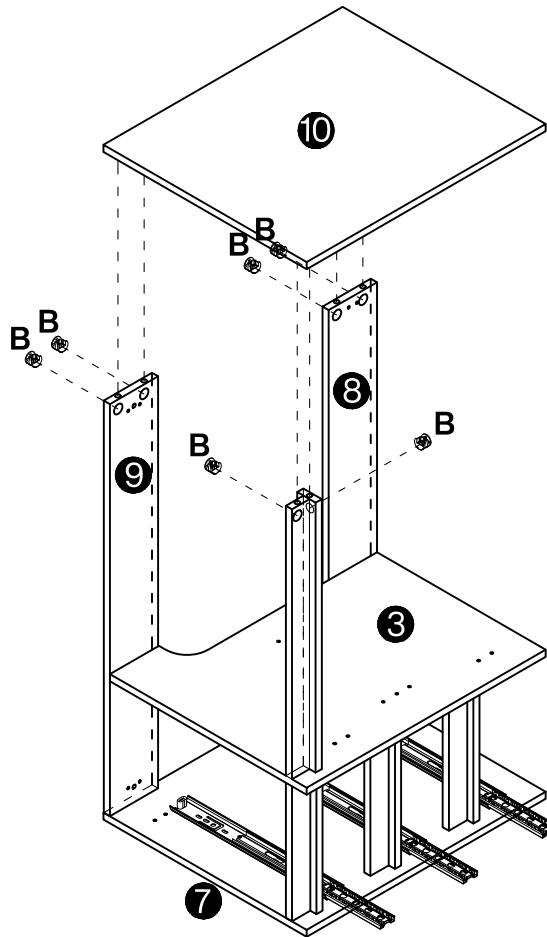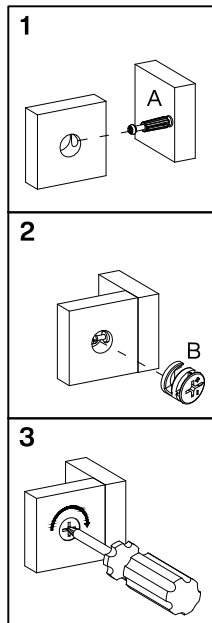
19




B



Ø15X10 mm
6 pcs

20

A	A
	
M6x40mm	Ø8*30mm
8 pcs	6 pcs

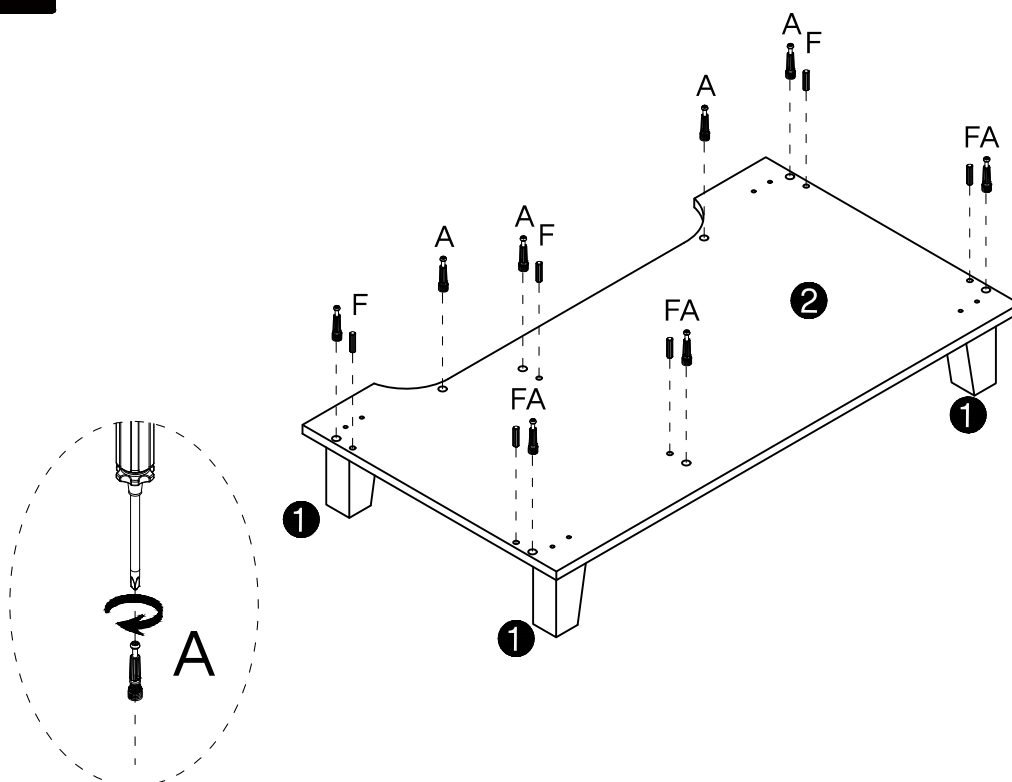


21

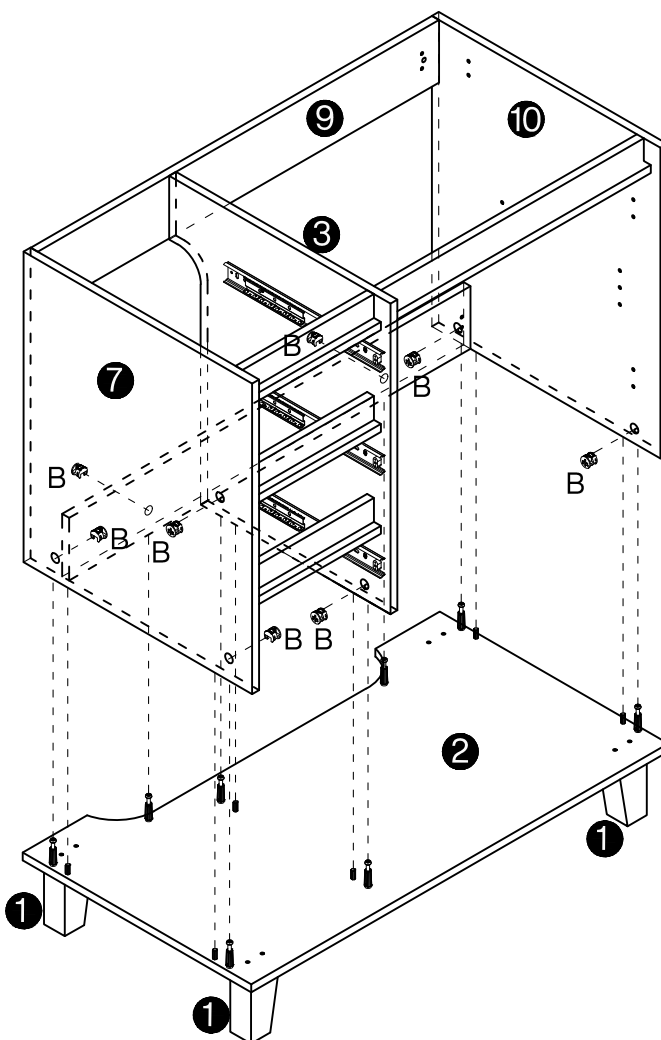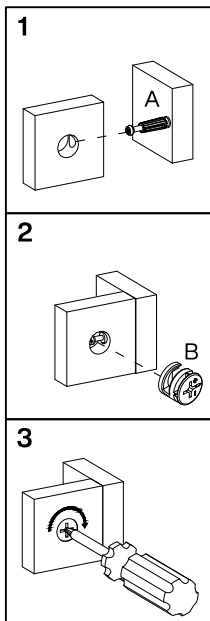


B
Ø15X10 mm
8 pcs


22

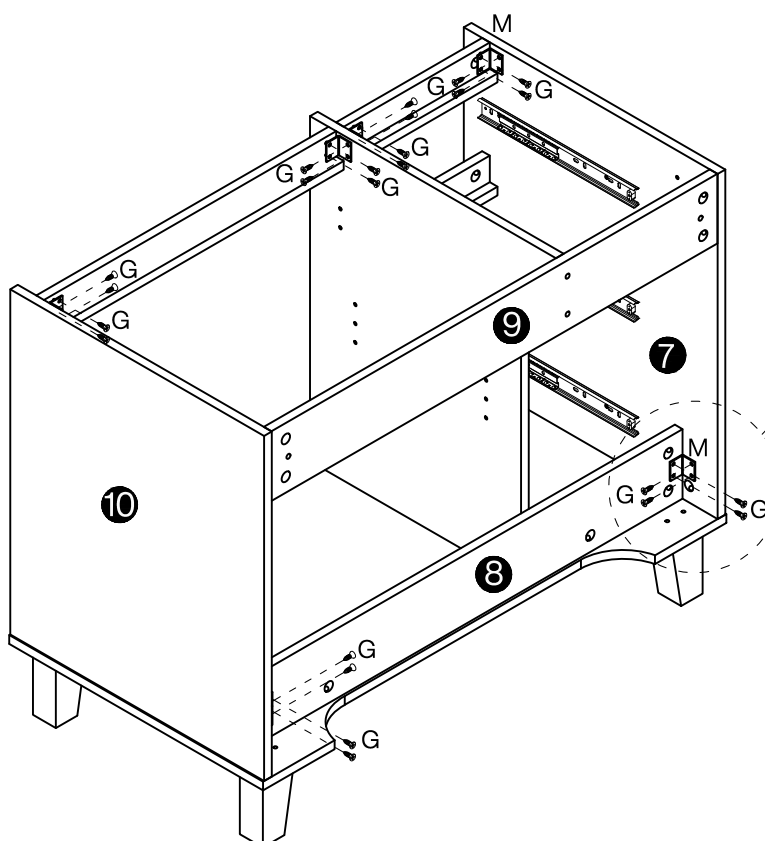


G	G
6 pcs	Ø3.5x14mm
	24 pcs

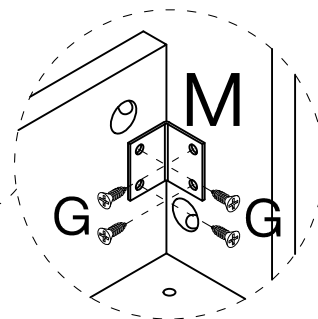

23


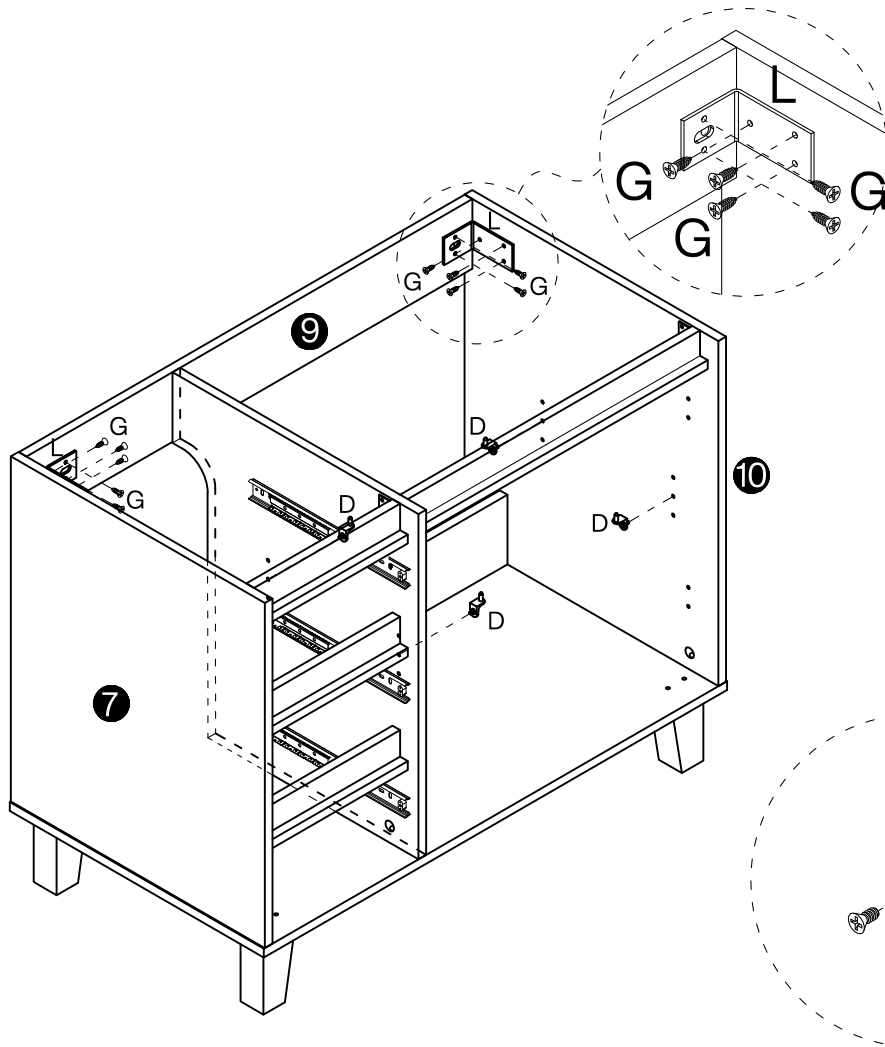


L

2 pcs
G

Ø3.5x14mm
10 pcs
D


4 pcs


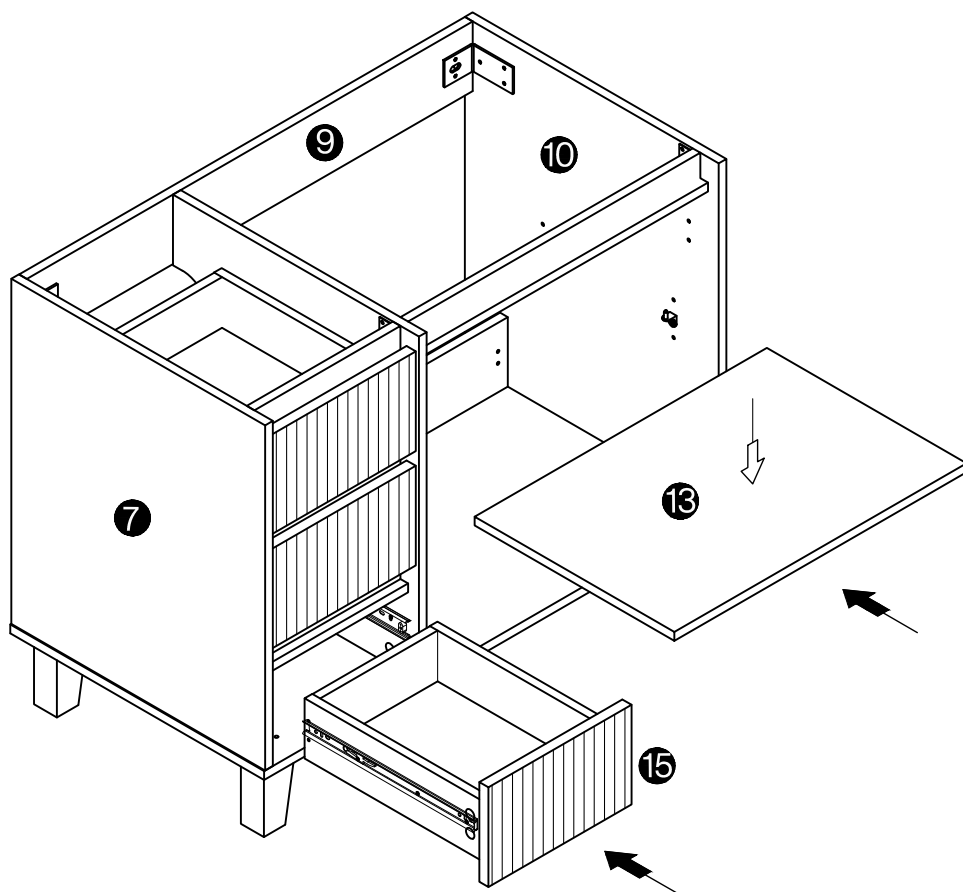
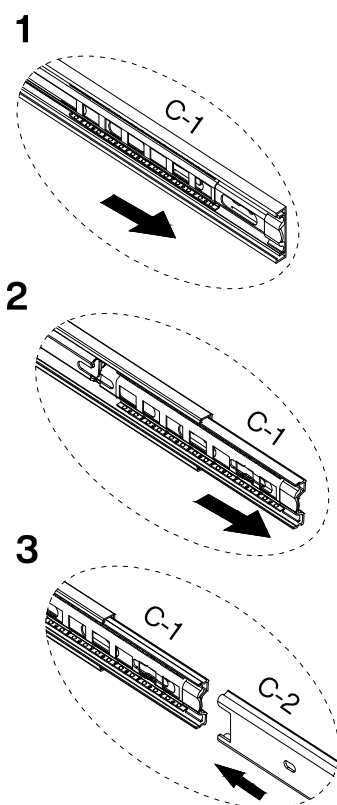
24



Align the "C-2" with the "C-1" guideway and gently push it in to complete the assembly

25



G	E
	
Ø3.5x14mm	Dawan Hinge
8 pcs	4 pcs

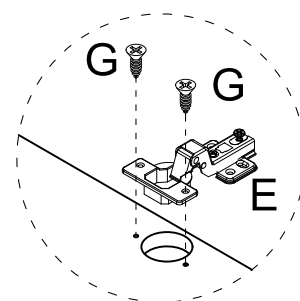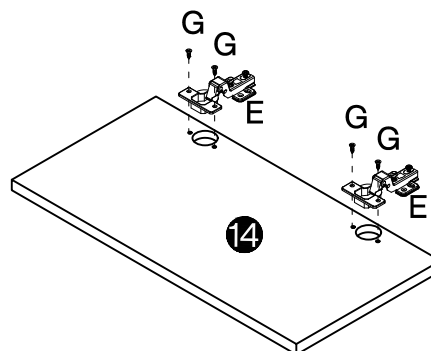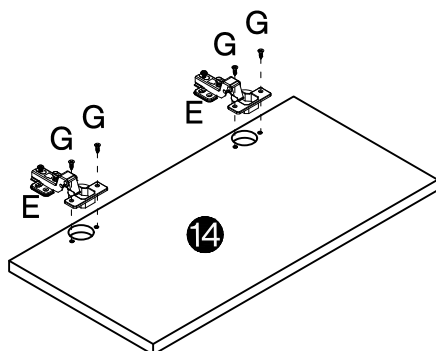





26

G

Ø3.5x14mm
16 pcs



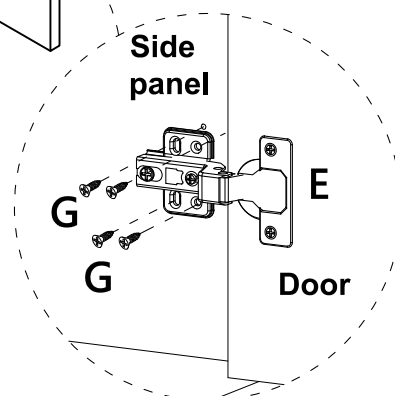
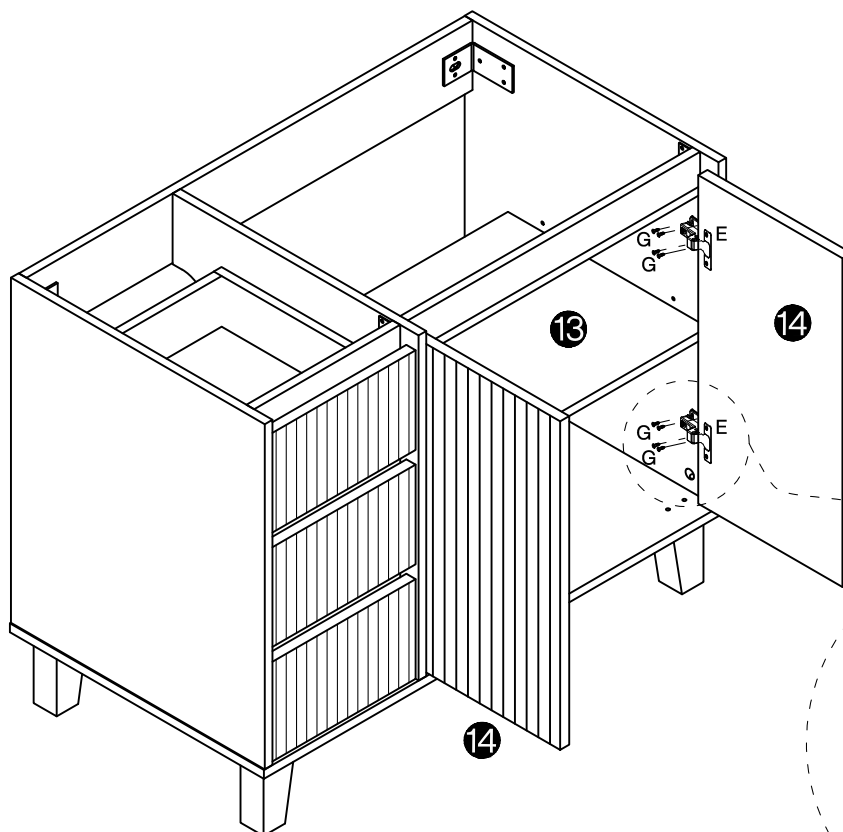


To prevent the door hinge from falling off, please install 4 screws

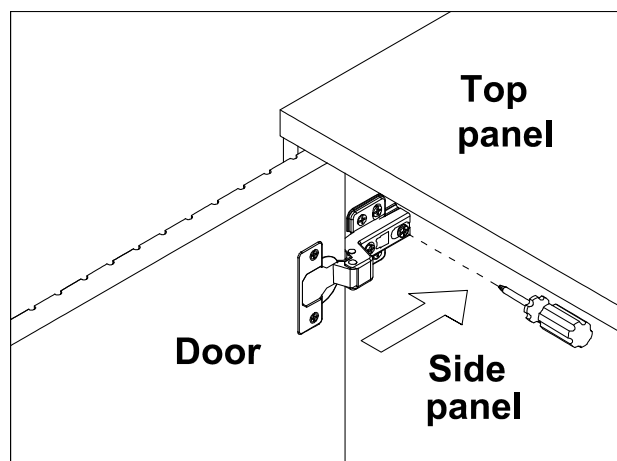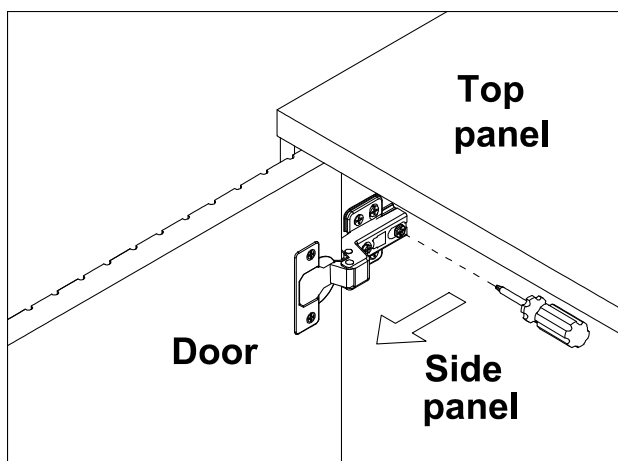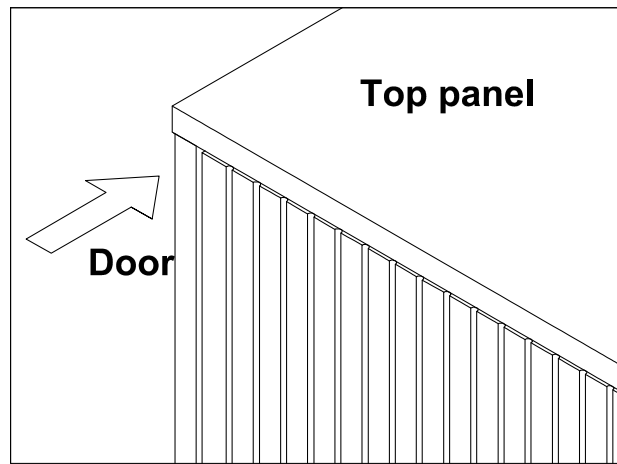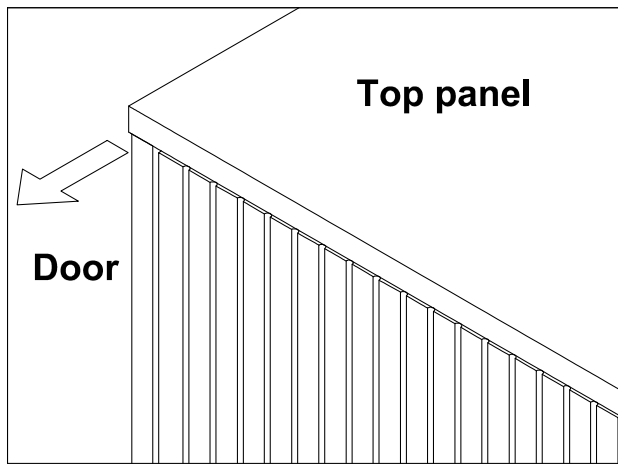


Pull the hinge forward a little.

Push the hinge back a little.

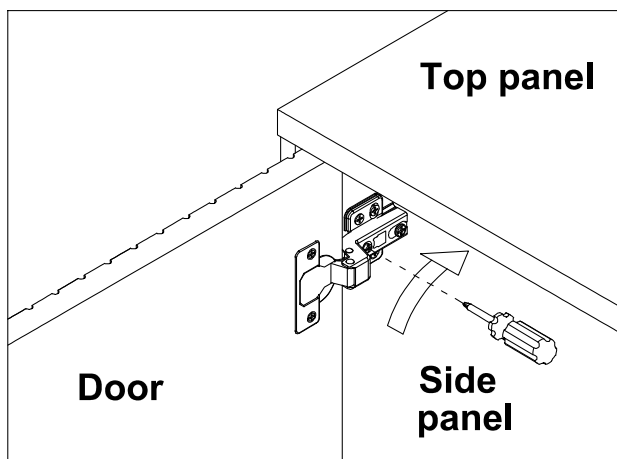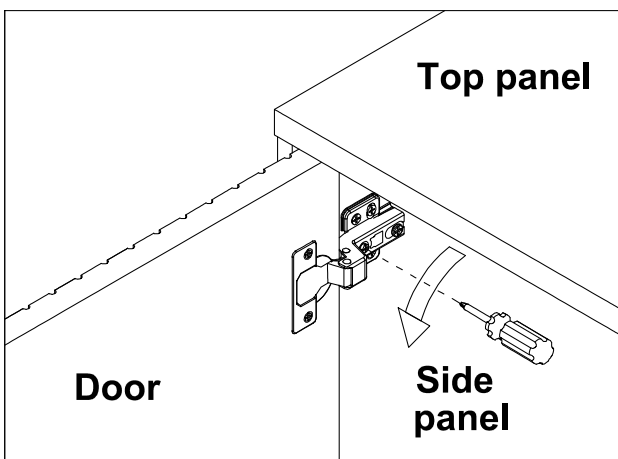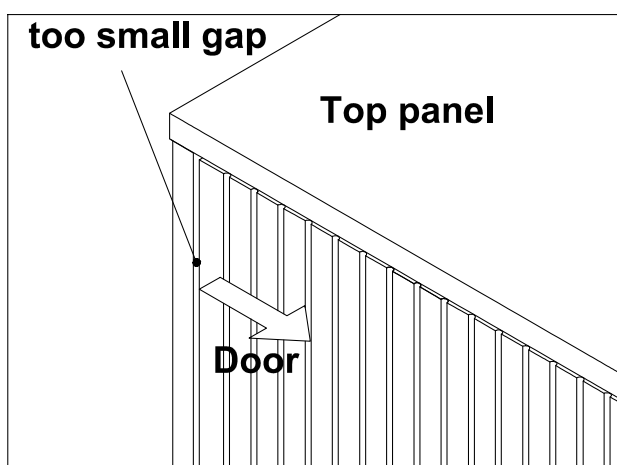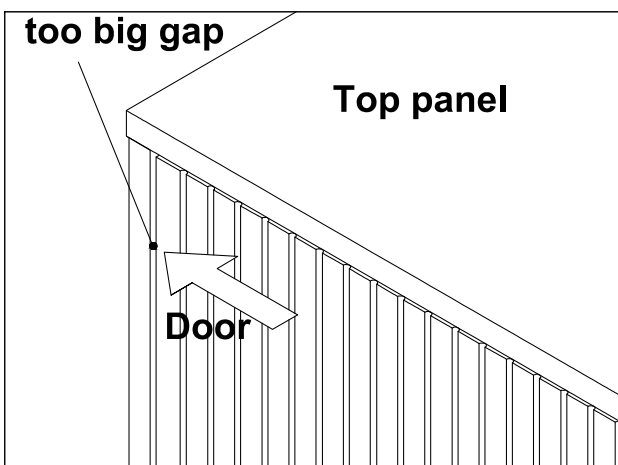


Turn the screw clockwise a little as shown to make the gap smaller


Turn the screw counterclockwise a little as shown to make the gap bigger

N

2 pcs

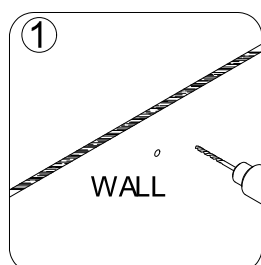
Install the tipping restraint hard ware

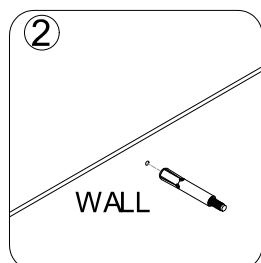

1. Drill two Ø10 holes on the wall



2. Put two anchors in the holes

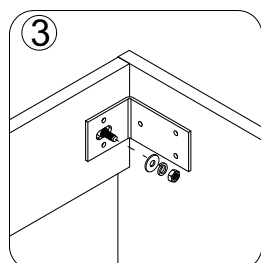

3. Fix the device on the wall by the long screws

