


Bed Frame

SE-07.10A




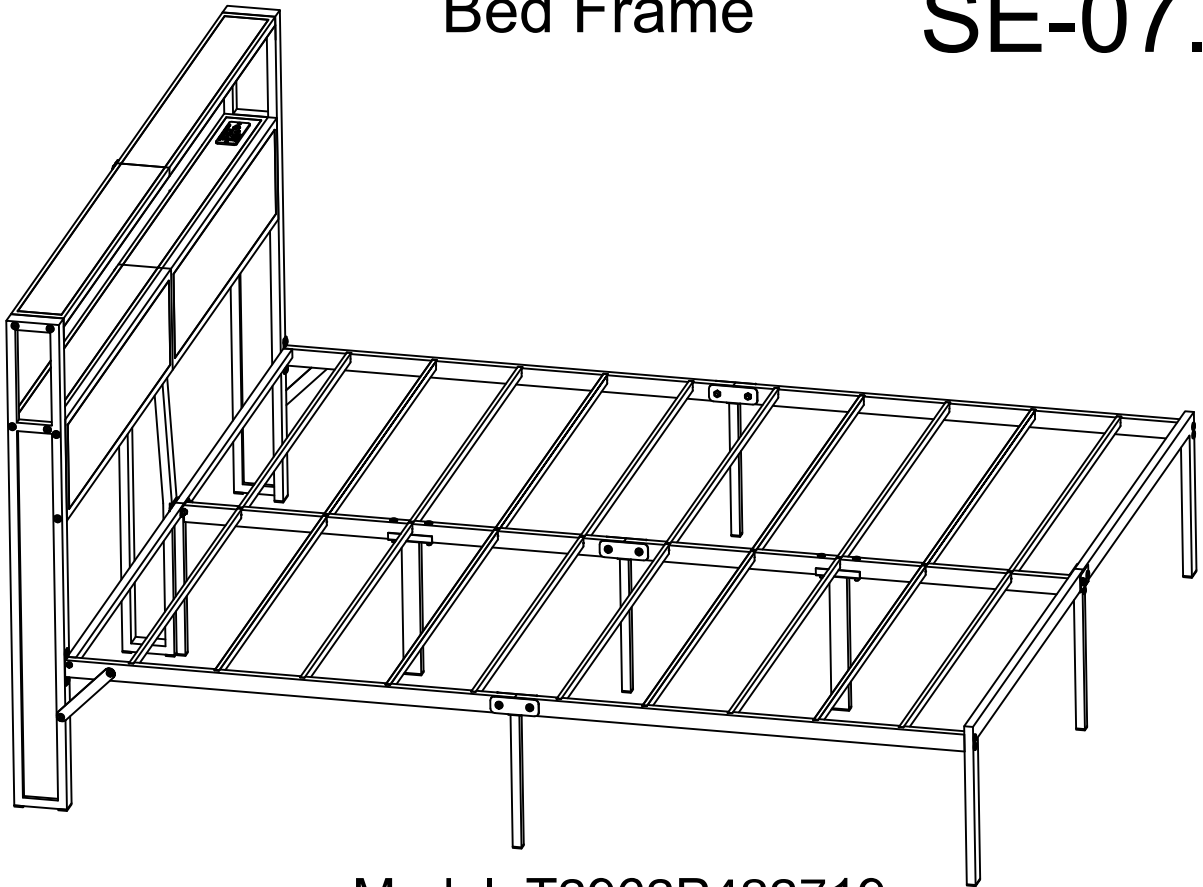





Model: T3963P483719






Please Scan the QR code to watch the tutorial video



Parts List:


A1		1pcs	A2		1pcs	B		1pcs
C		1pcs	D		2pcs	E		1pcs
P		1pcs	G		1pcs	H		1pcs
I		2pcs	J		1pcs	K		1pcs
L		1pcs	M		1pcs	N		2pcs

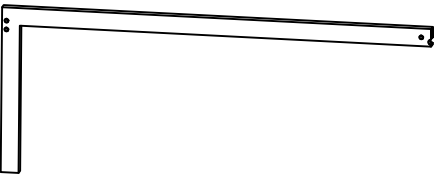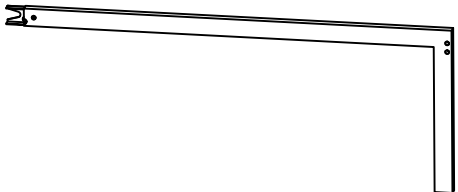O1	1pcs	O2	1pcs	Q1	20pcs
					

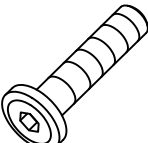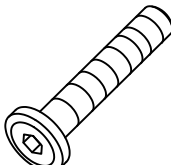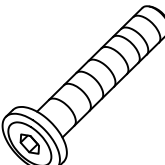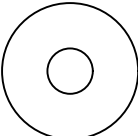R2	1pcs	R3	1pcs	S2	2pcs	T1	8pcs
							
				M4*10mm		M8*15mm	
T2	2pcs	T3	6pcs	T4	2pcs	T5	16pcs
							
M8*30mm		M8*35mm		M8*55mm		M8*50mm	
U1	6pcs	U2	4pcs	U3	2pcs	U5	6pcs
							
M6*15mm		M6*30mm		M6*35mm		Ø6 x Ø18mm	


ASSEMBLY

1

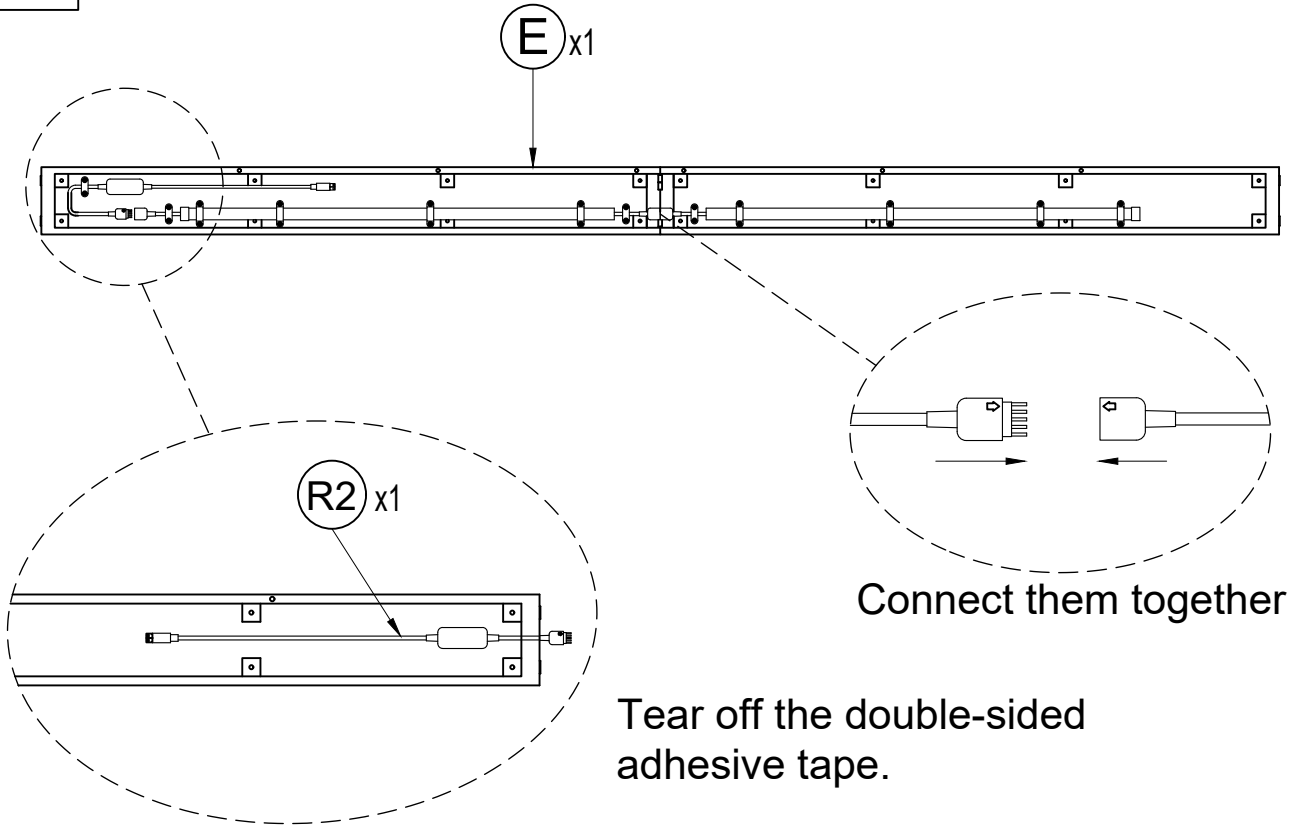


2


We suggest using drill machine to install "S2" screws

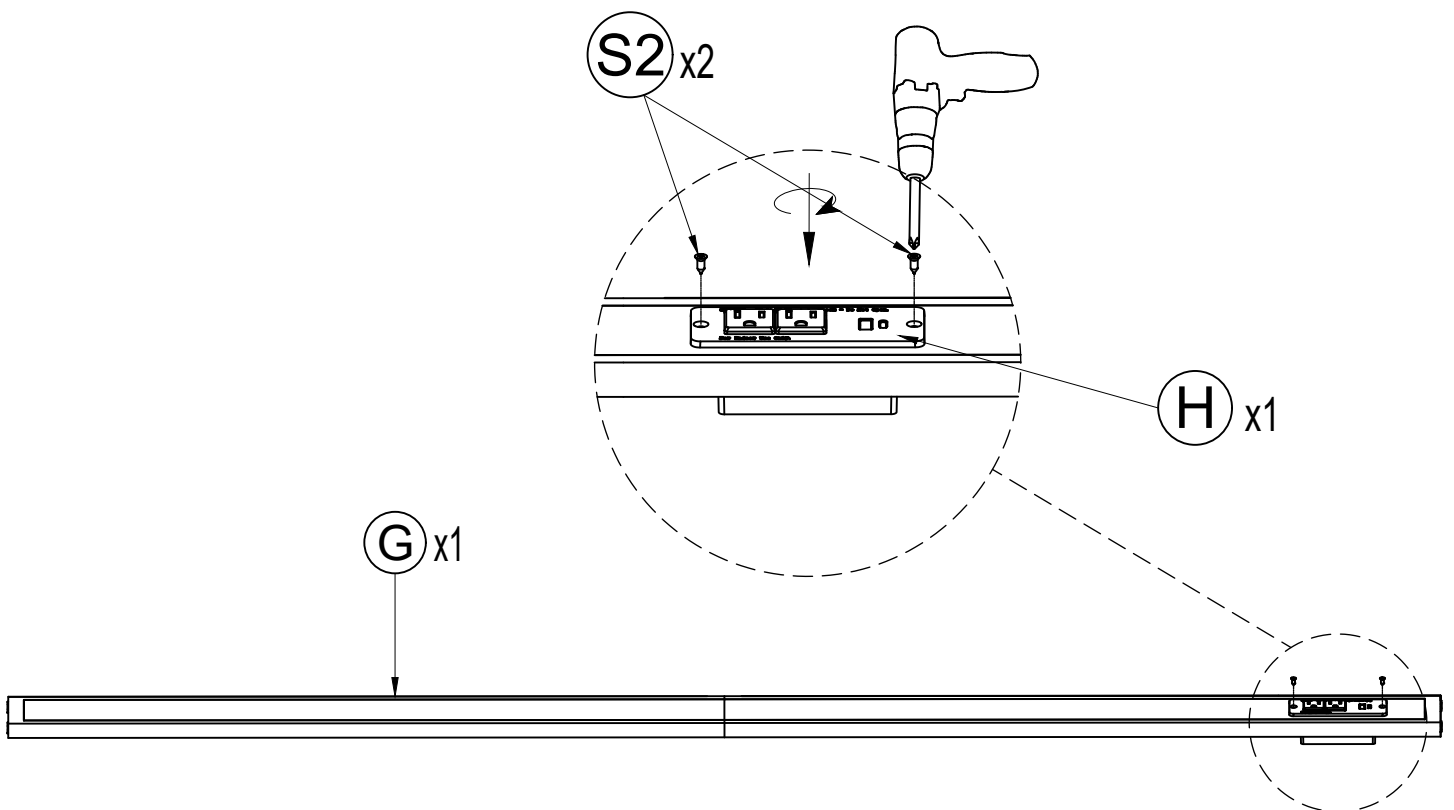


3

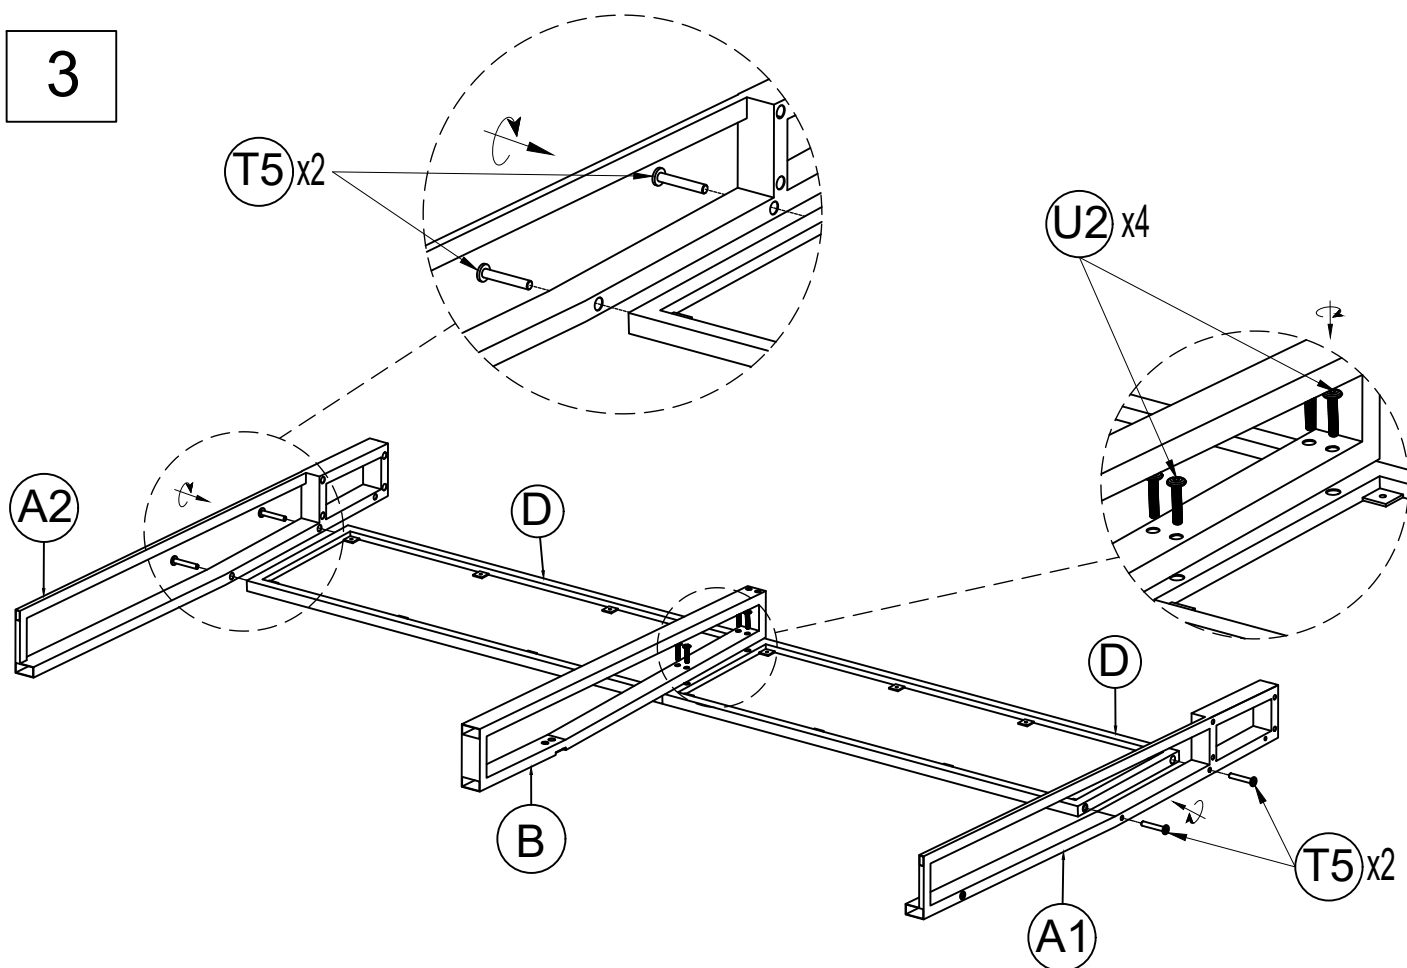


4

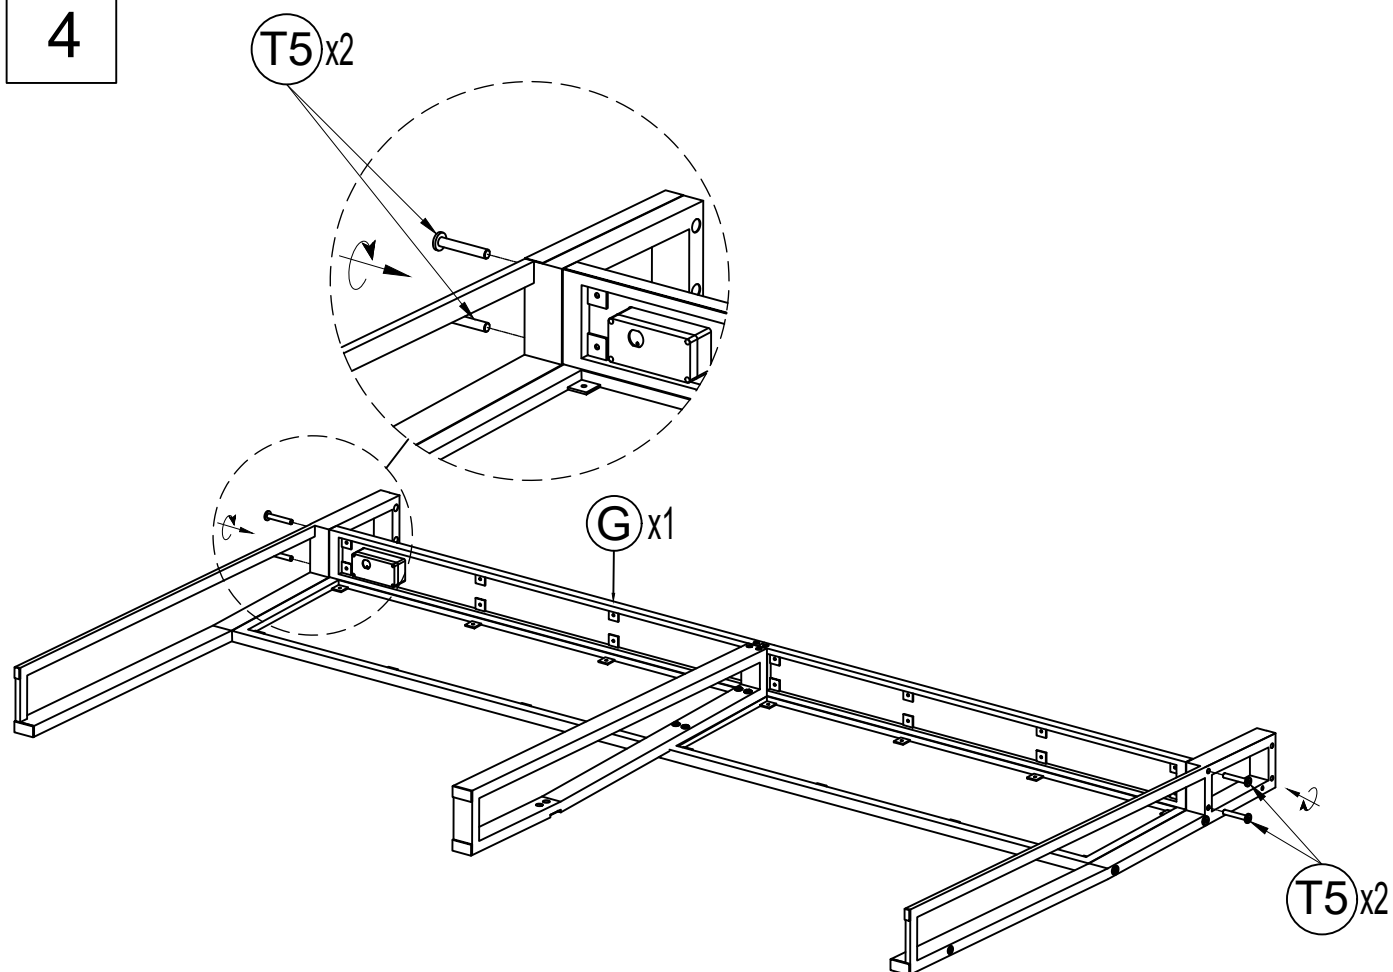


5

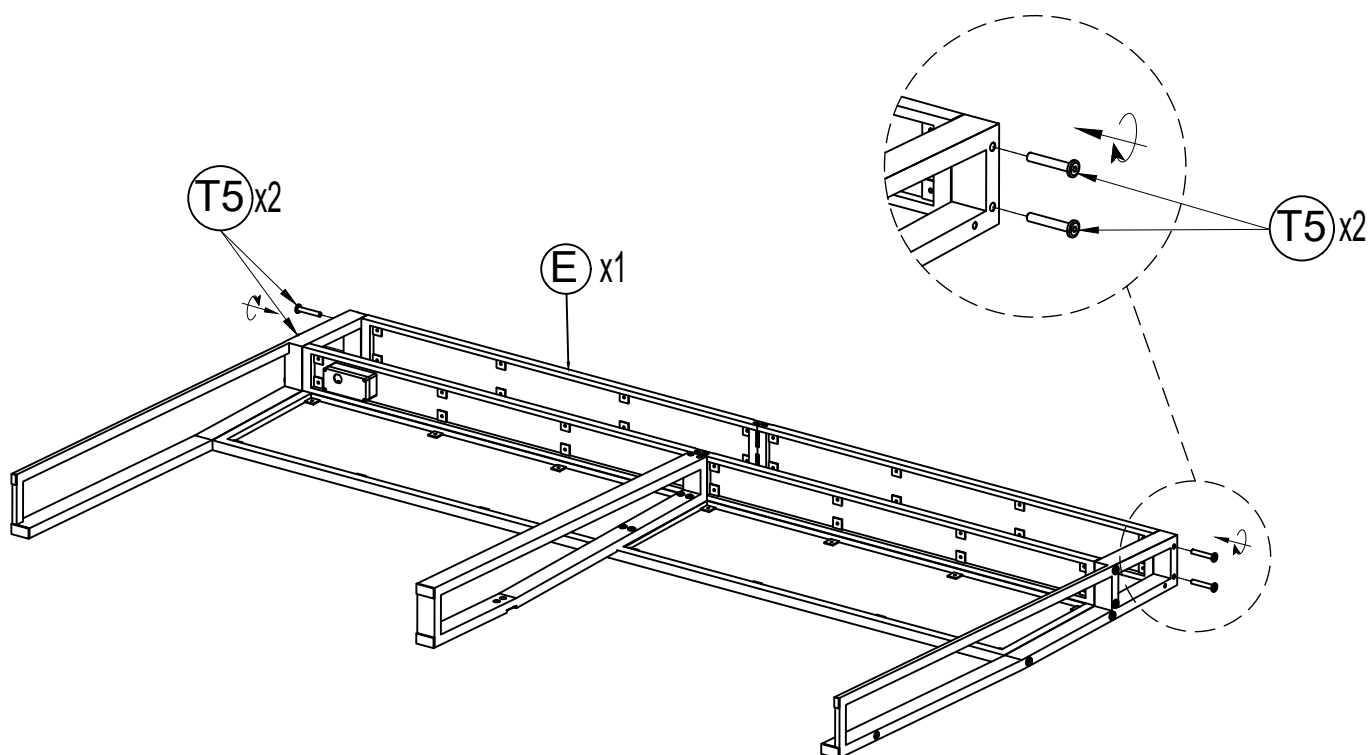


6

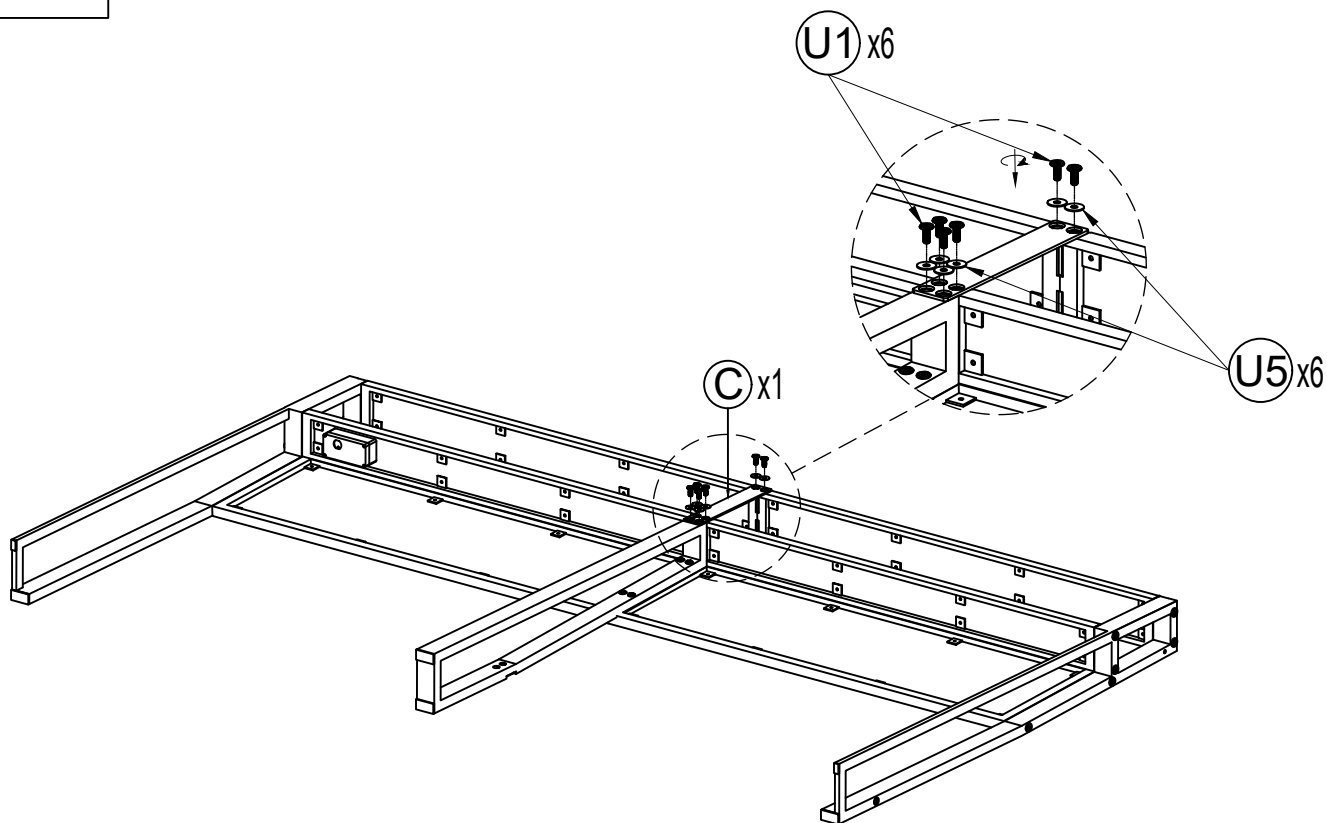

7


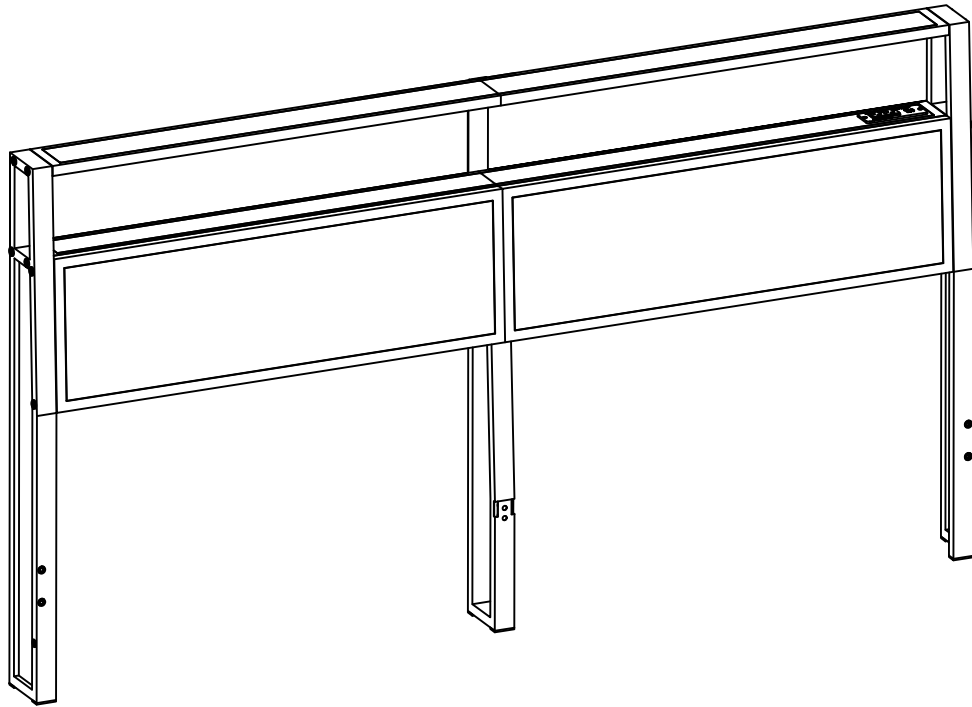


8


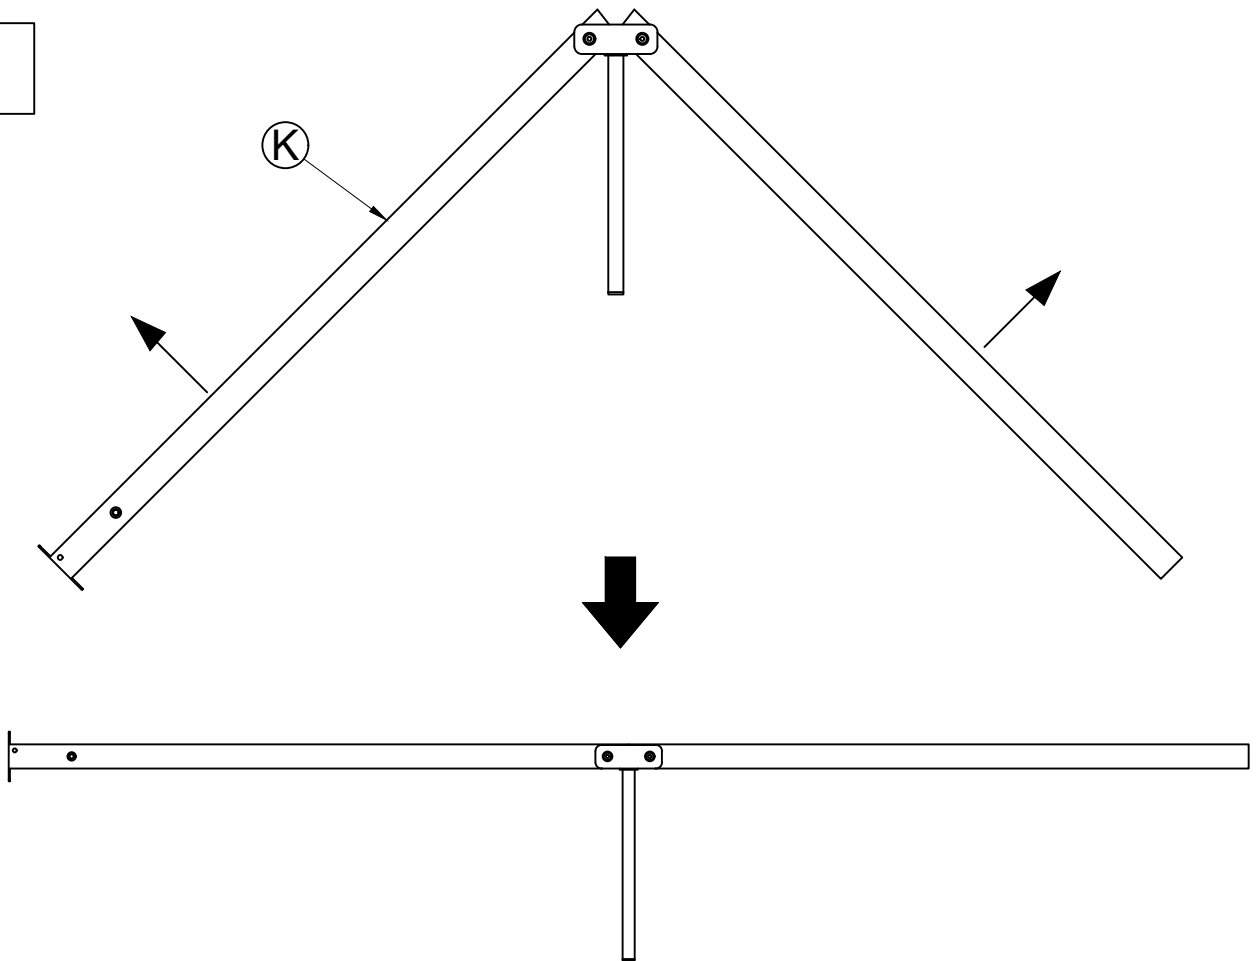


6


9

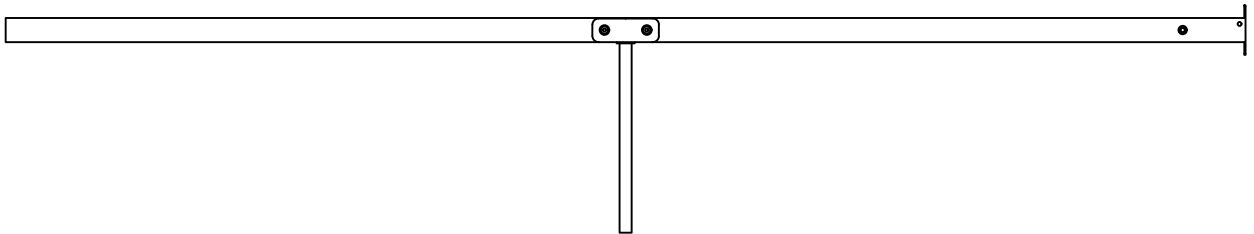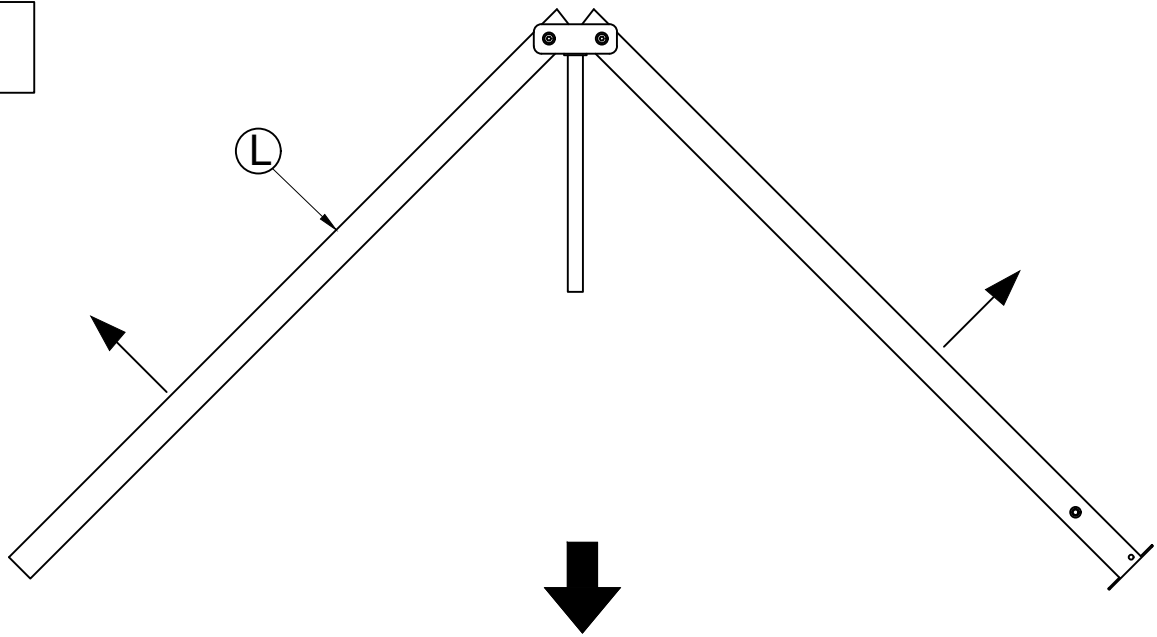


10

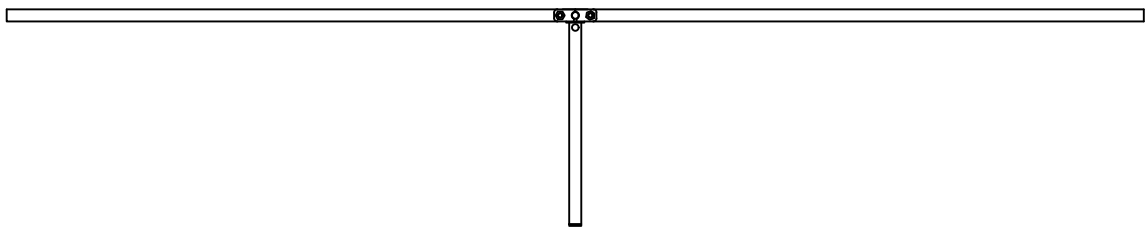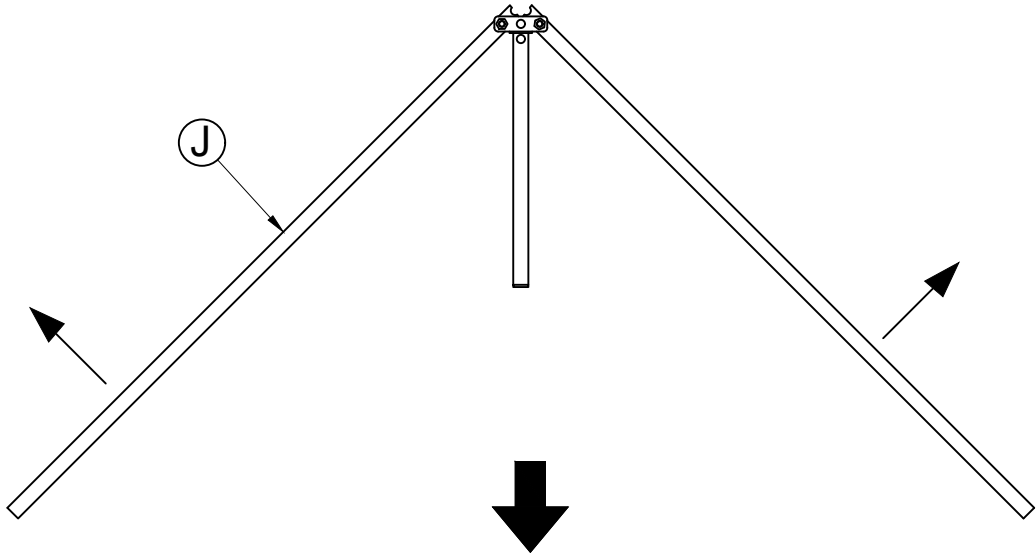


11

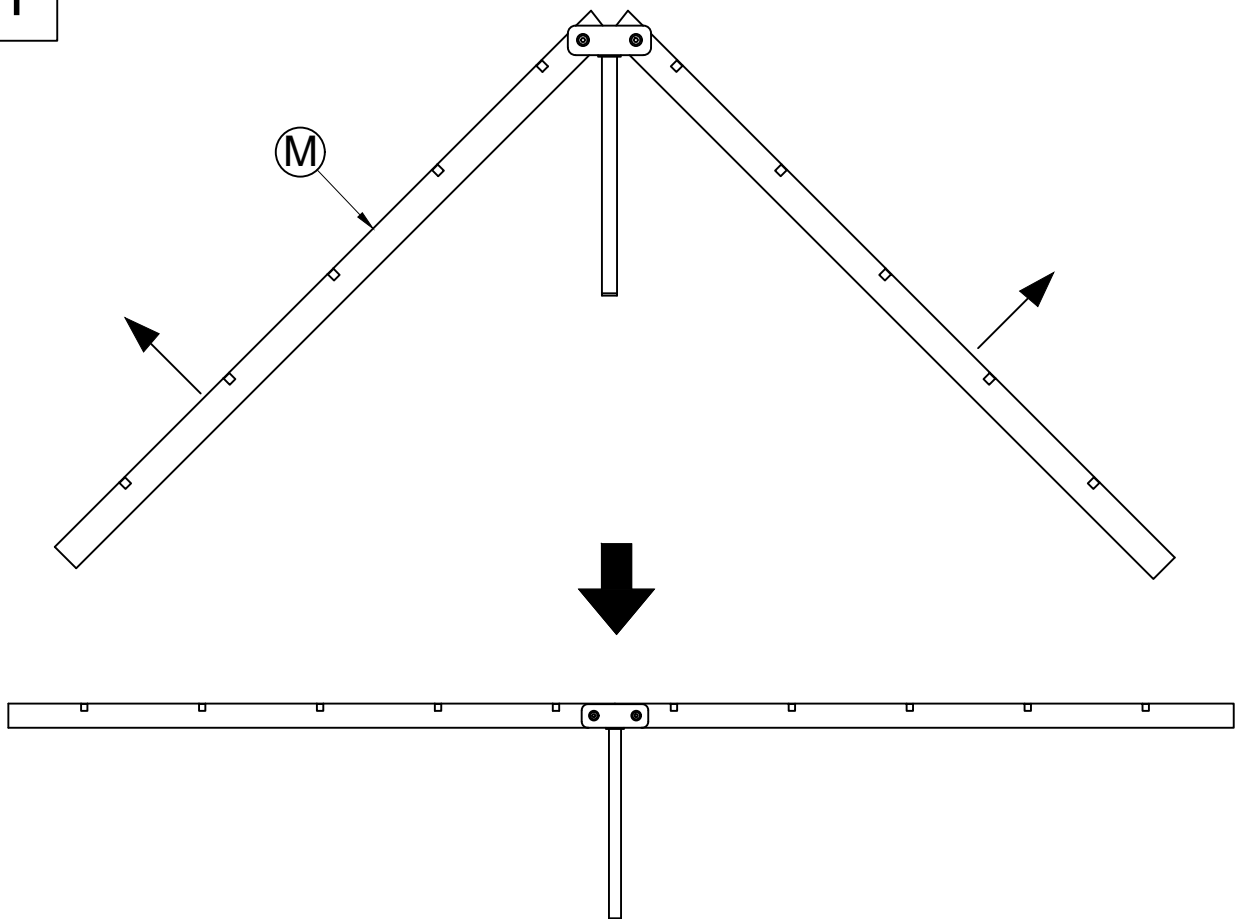

12

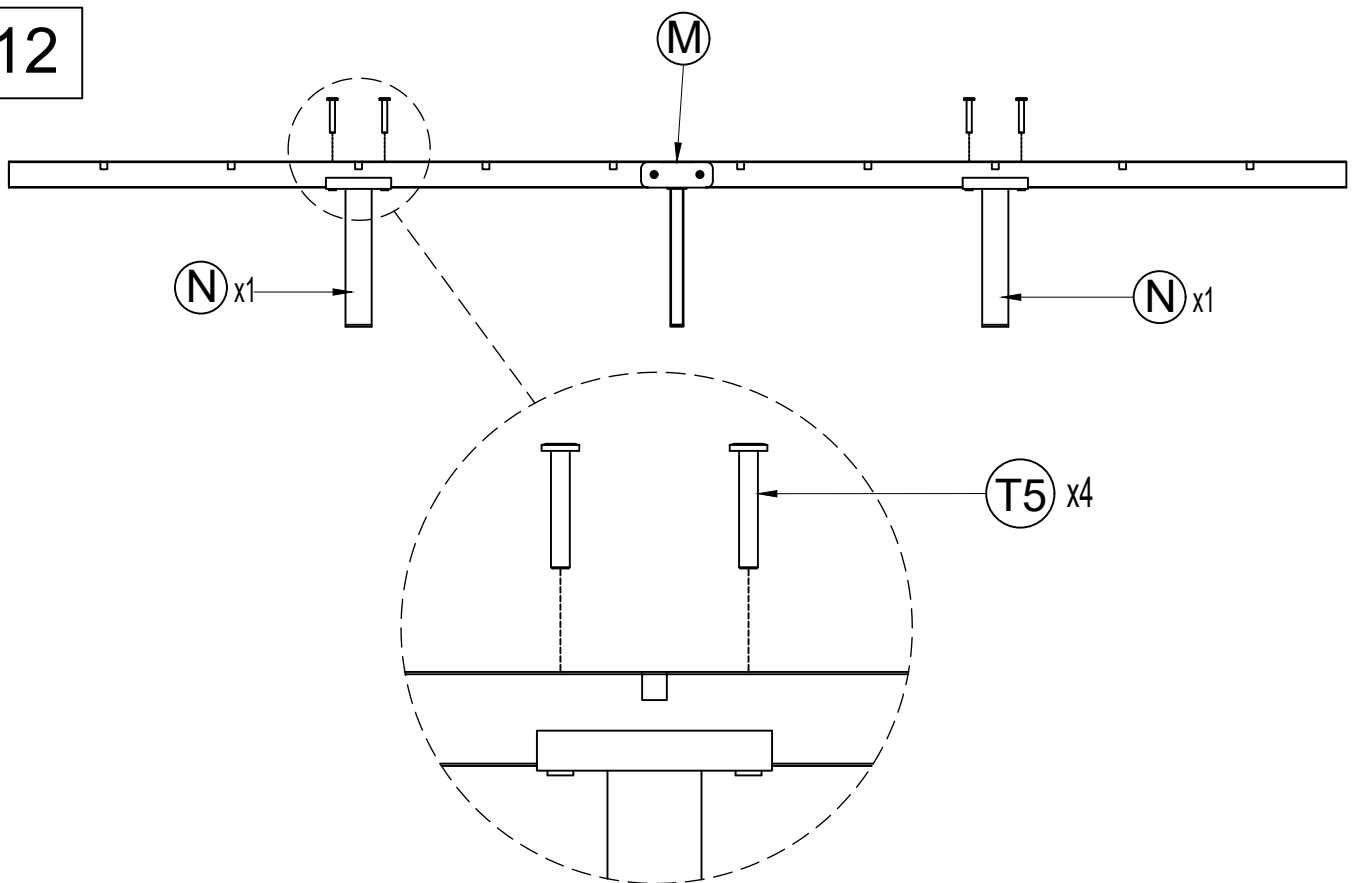


13

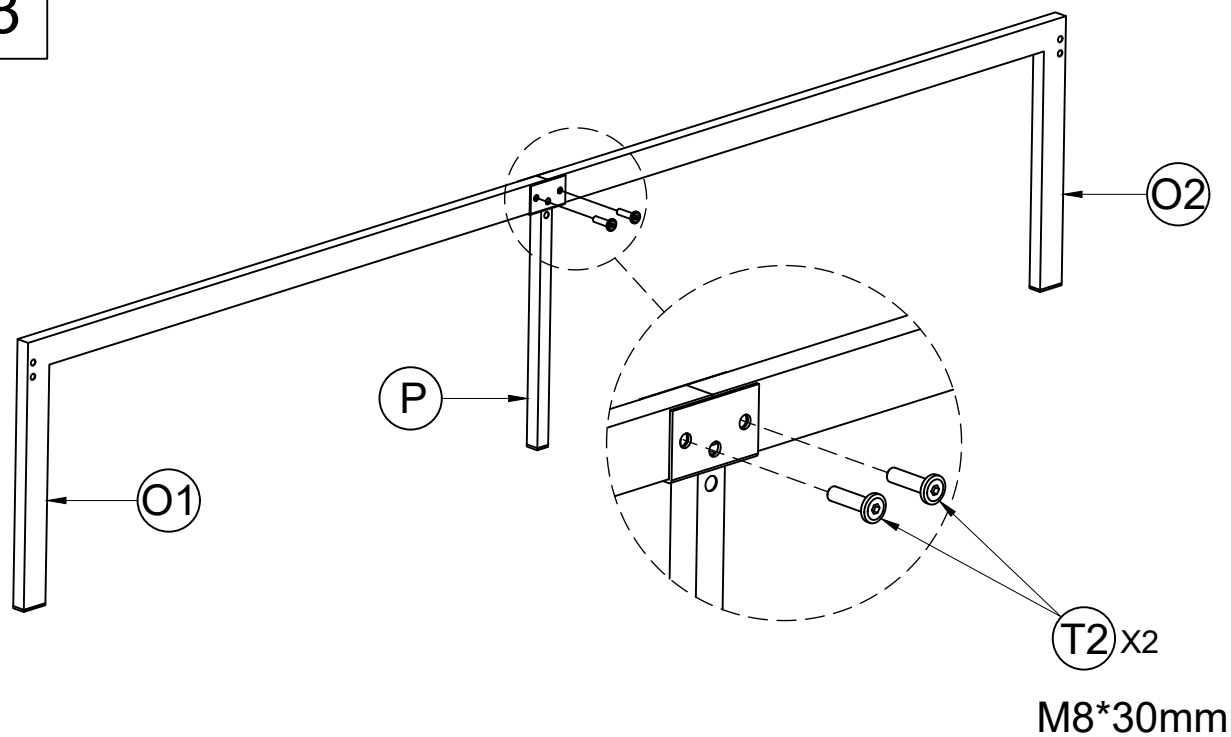


14

Headboard side

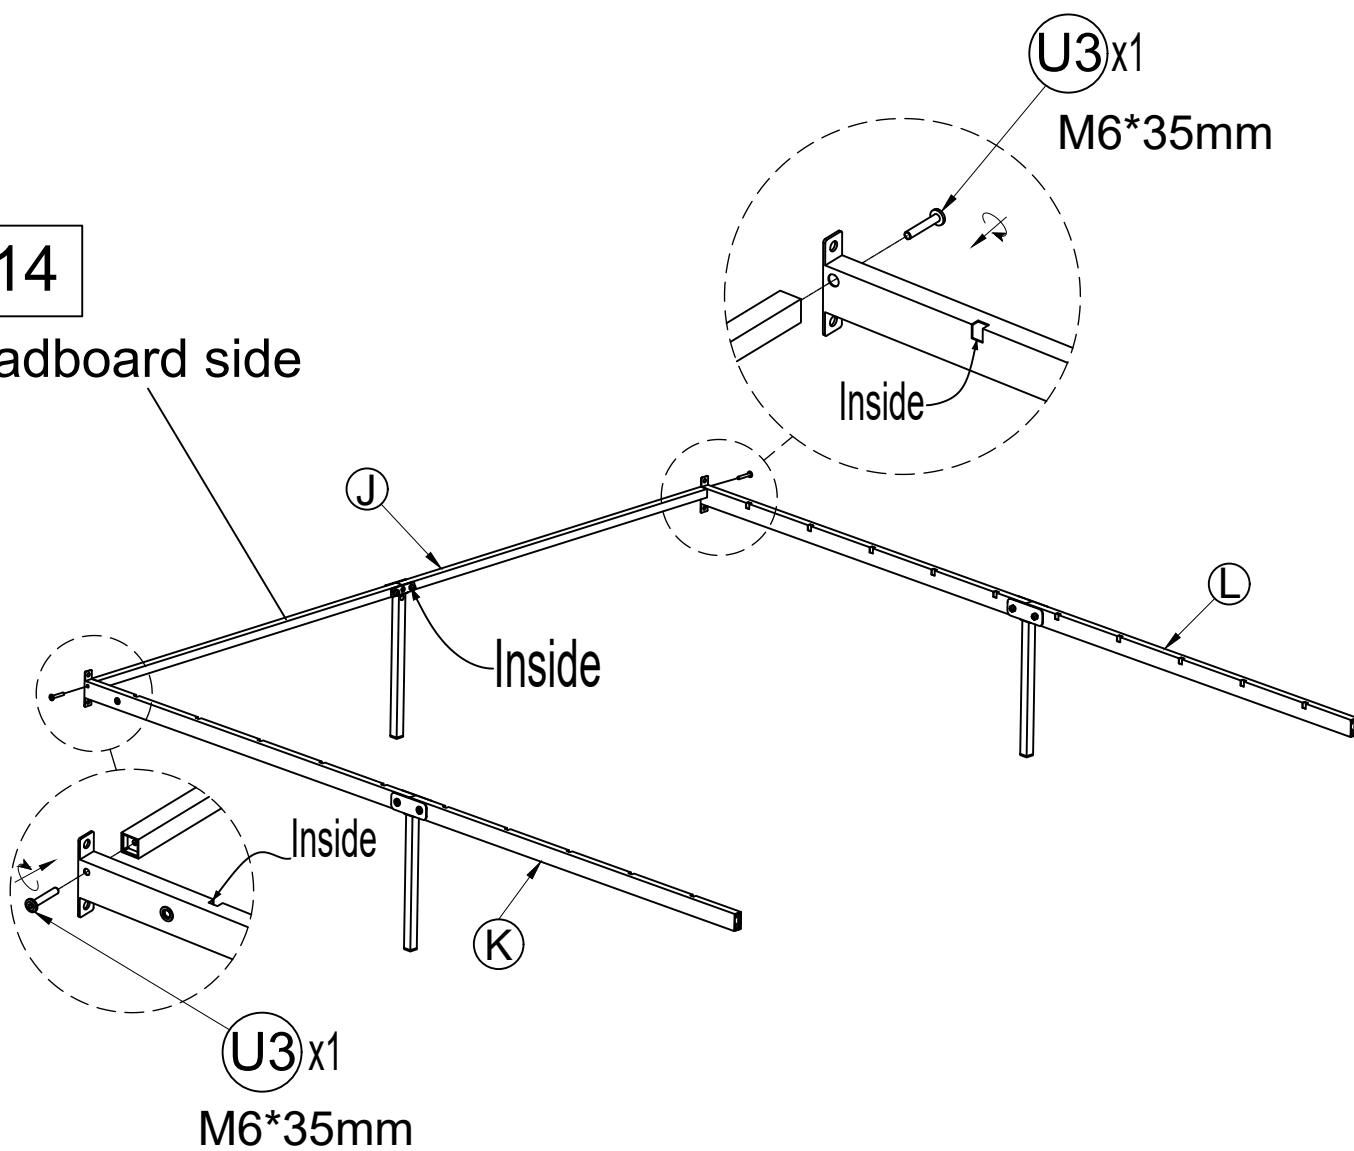


15


Headboard side

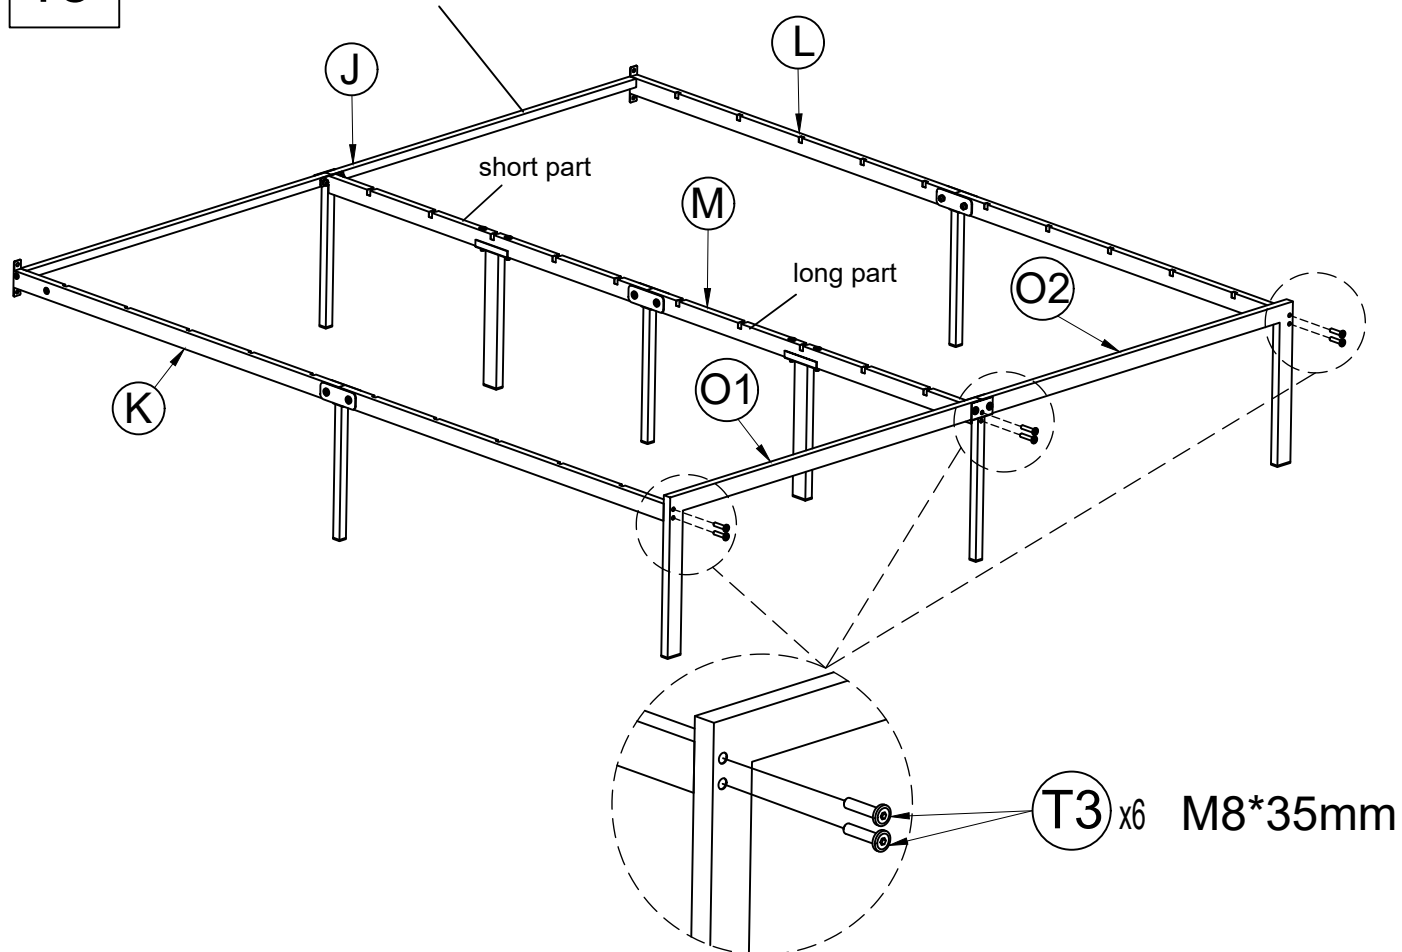

16

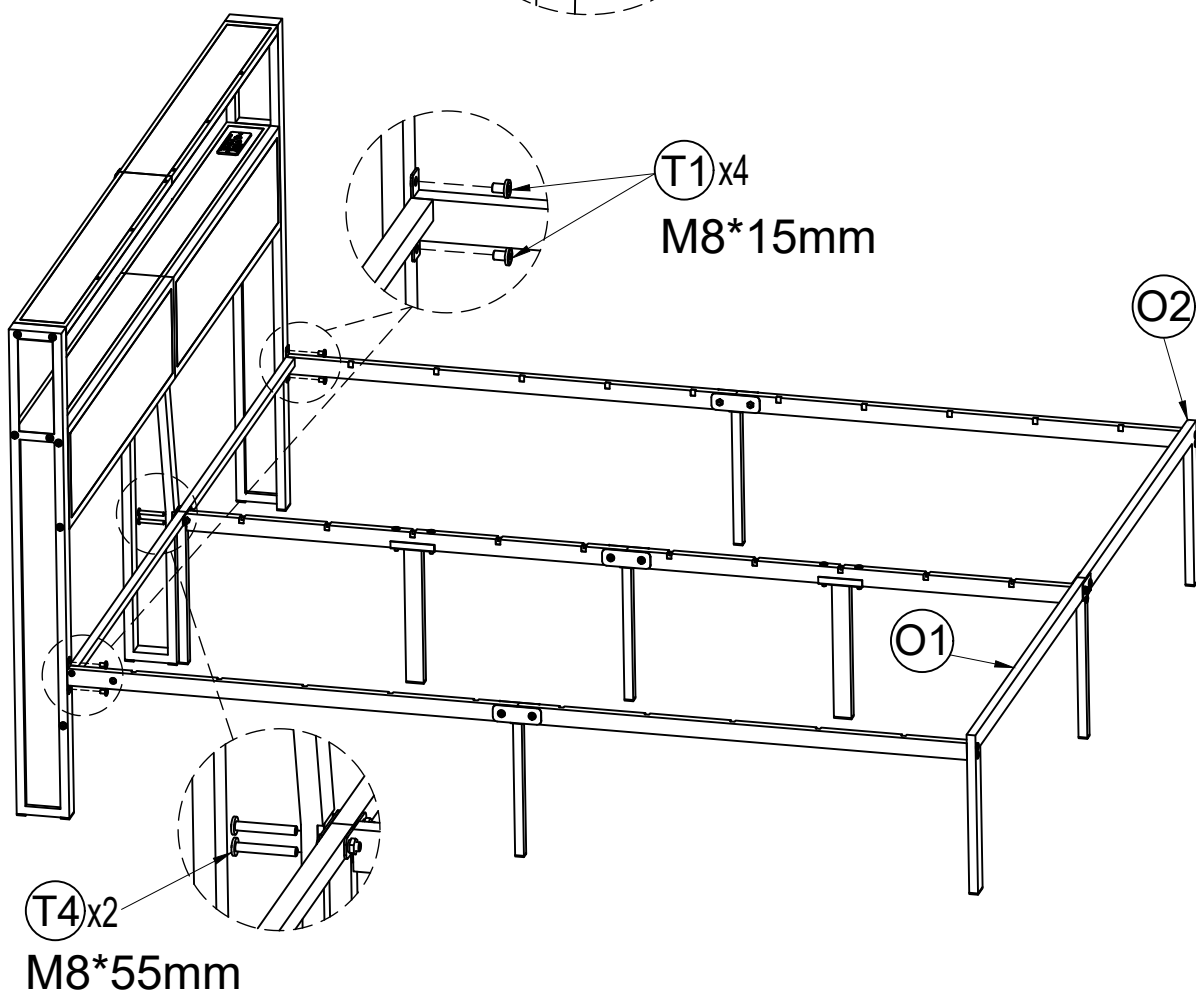

17

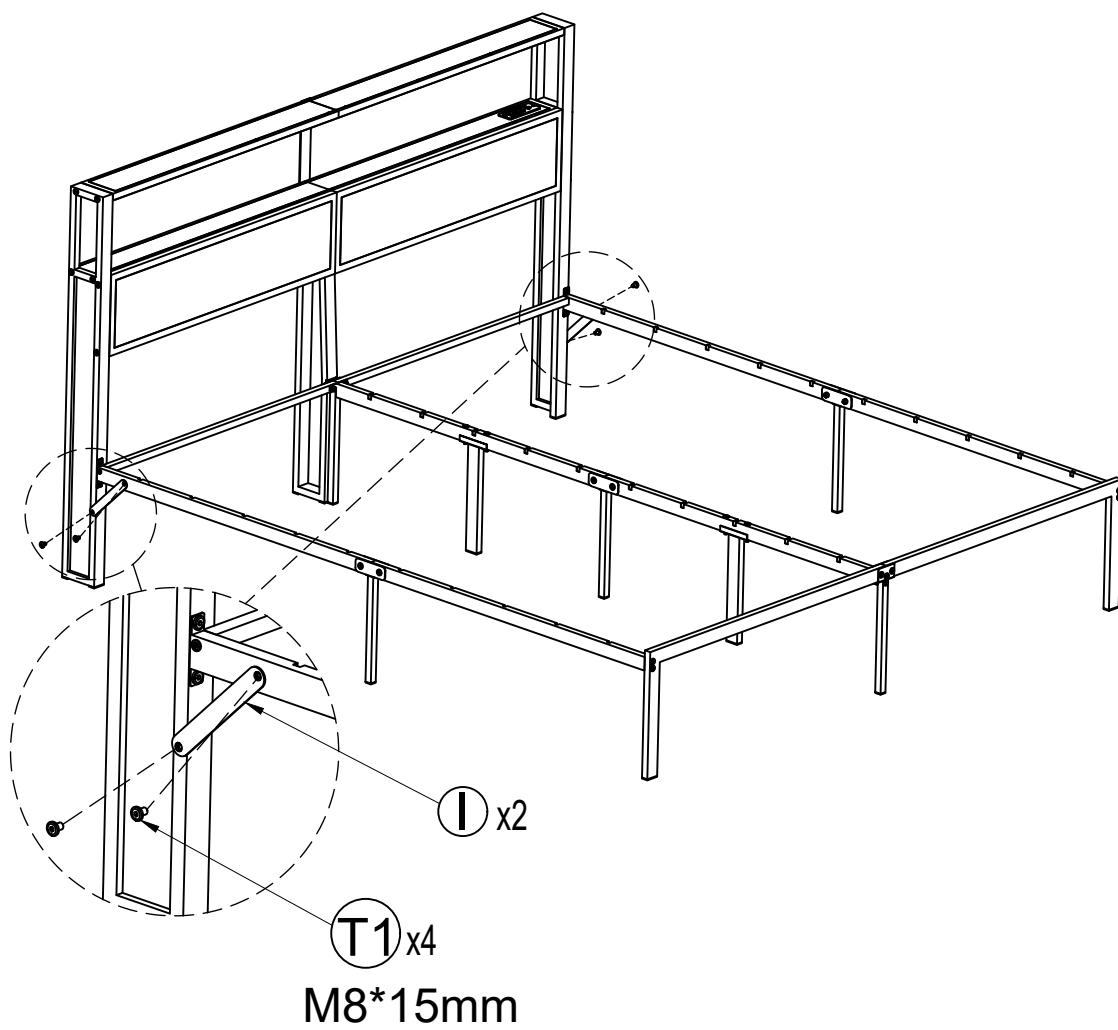

18

