
SKU:S024

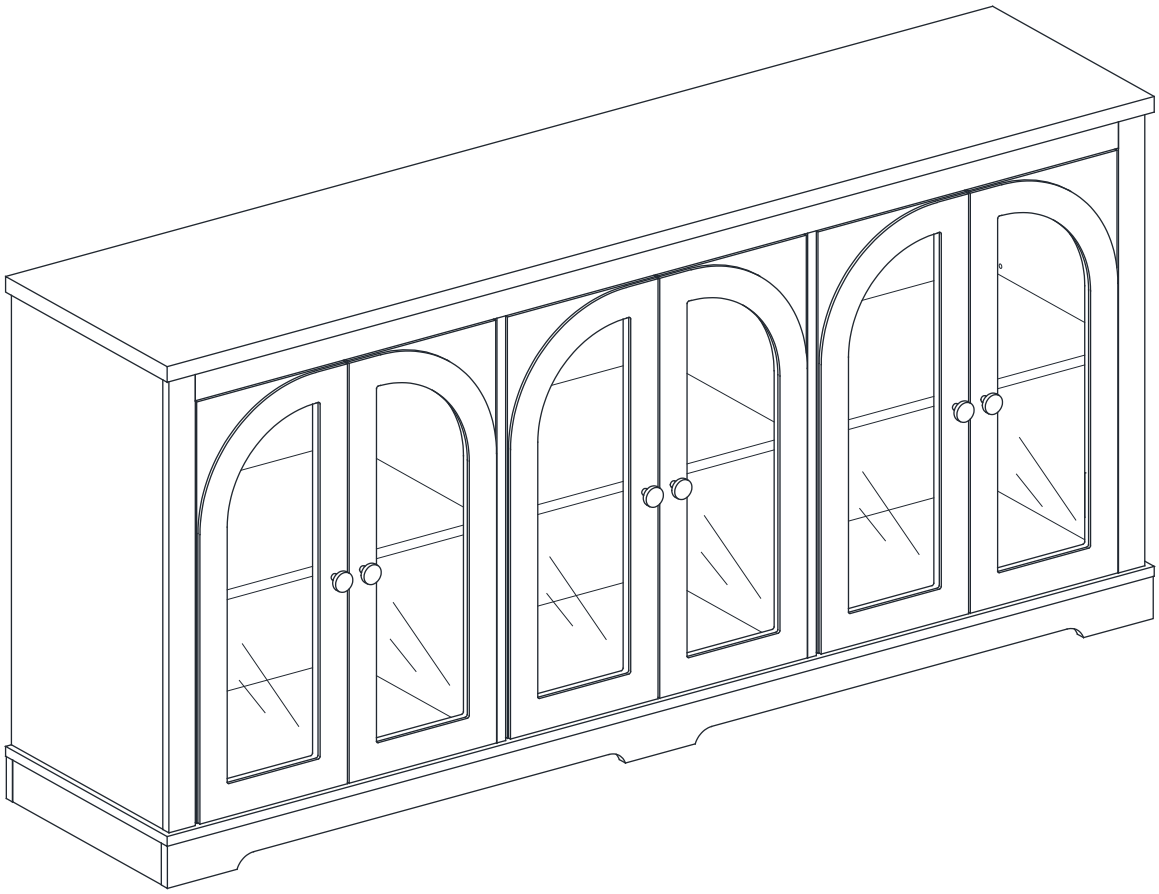


WARNING




This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2.All cabinets come with TRO,stainless steel or our "L-Bracket"when shipped.













SKU:S024

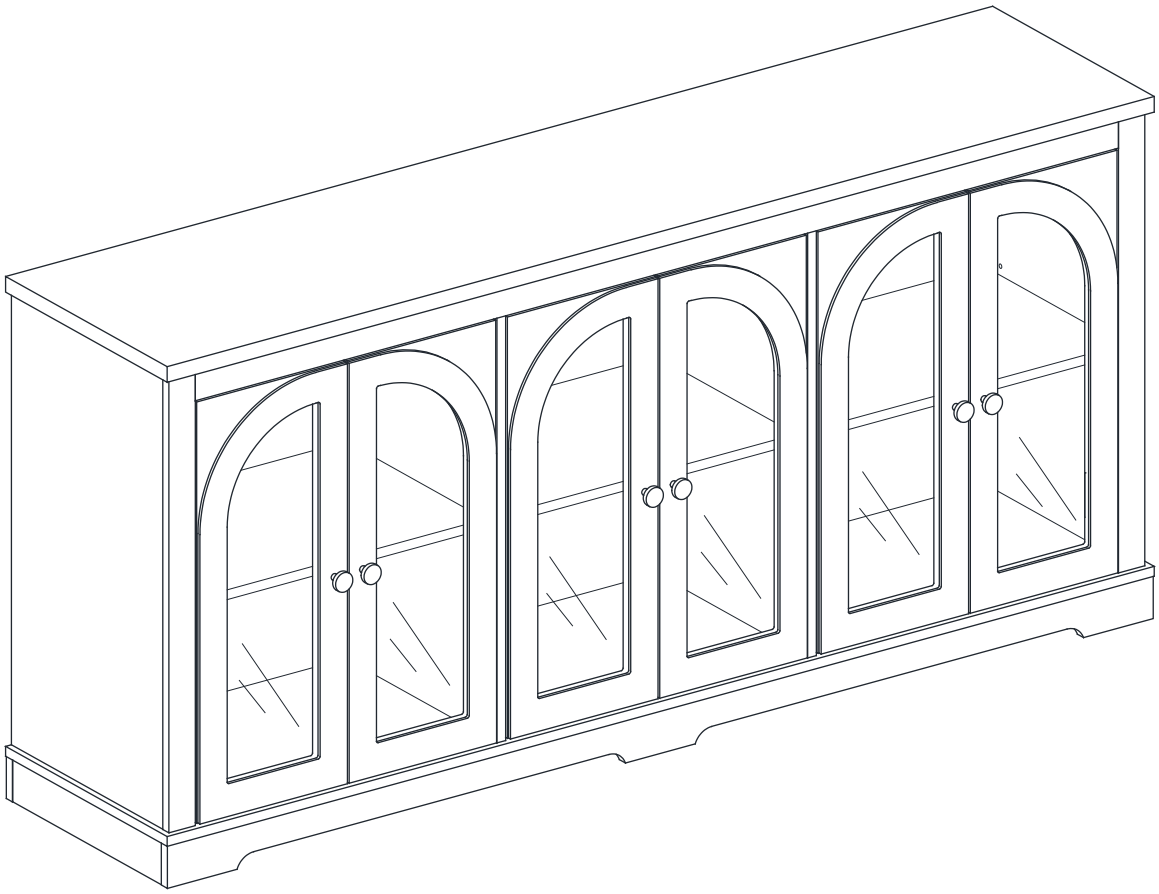





Part List




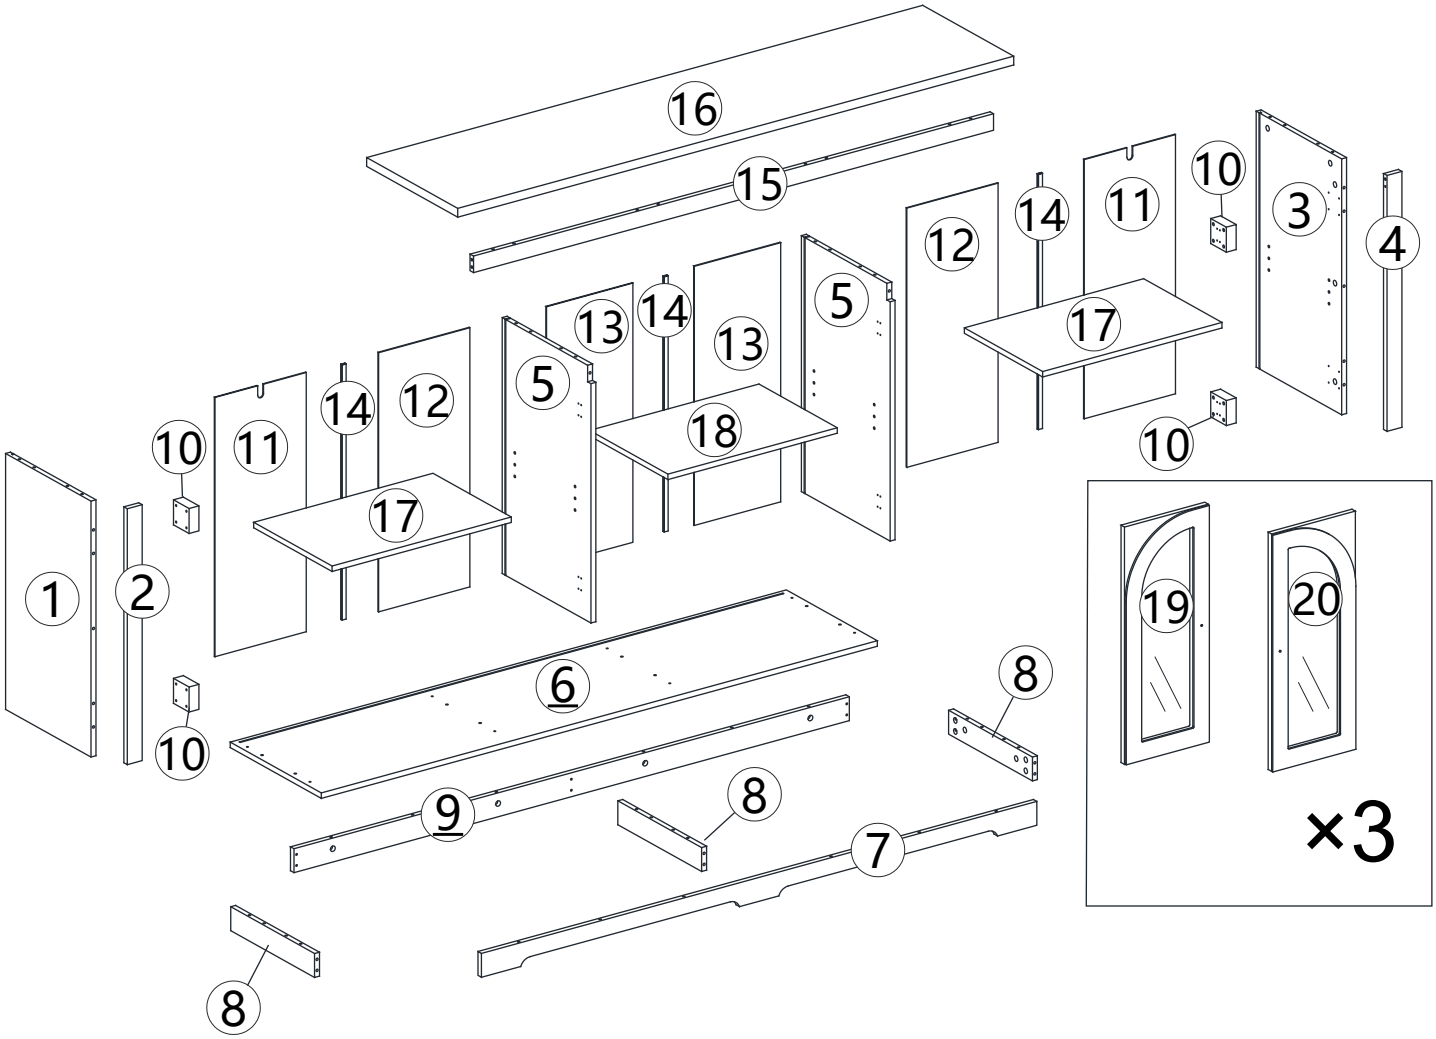

16
15
14
11
10
3
4
12
5
13
14
13
5
17
18
10
10
11
14
12
17
1
2
6
10
8
9
8
7
8
19
20
×3





Box A

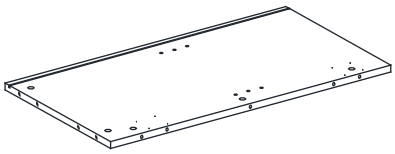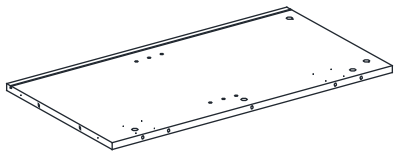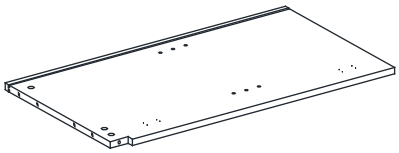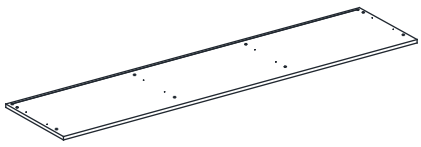
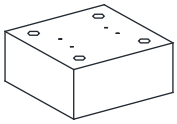
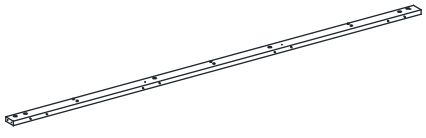
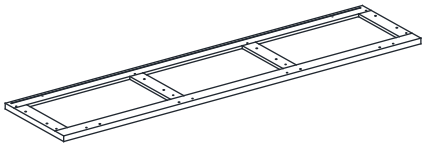
1  ×1PC	2  ×1PC	3  ×1PC
4  ×1PC	5  ×2PCS	6  ×1PC
7  ×1PC	8  ×3PCS	9  ×1PC
10  ×4PCS	11  ×2PCS	12  ×2PCS
13  ×2PCS	14  ×3PCS	15  ×1PC
16  ×1PC		



Box B

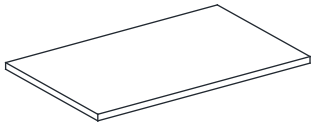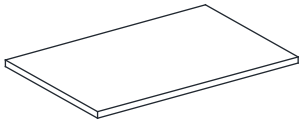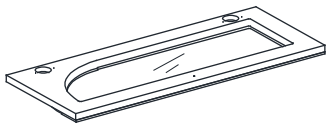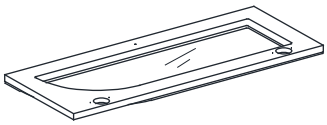17  ×2PCS	18  ×1PC	19  ×3PCS
20  ×3PCS		

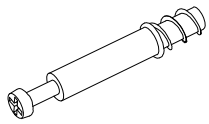
A	×48	B	×48	C	×34	D	×3
							
Ø6*35mm		Ø15*10mm		Ø6*30mm			

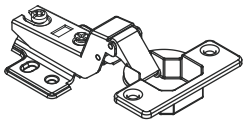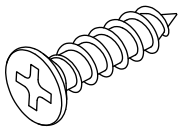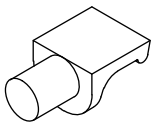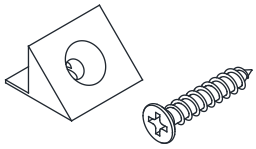
E	×12	F	×78	G	×12	H	×18
							
		Ø7.2*3.5*14mm				Ø3*16mm	

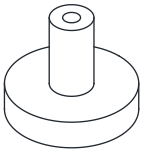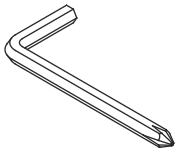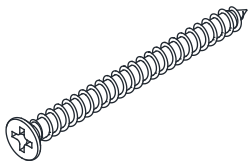
I	×6	J	×1	K	×6	L	×8
							
		S4		M4*25mm		Ø4*40mm	

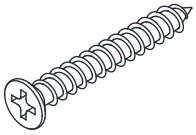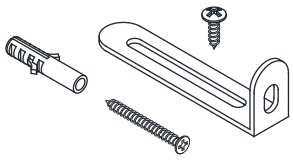M	×16	N	×11	O	×2
					
Ø4*30mm		40*12*3mm			


Step 1

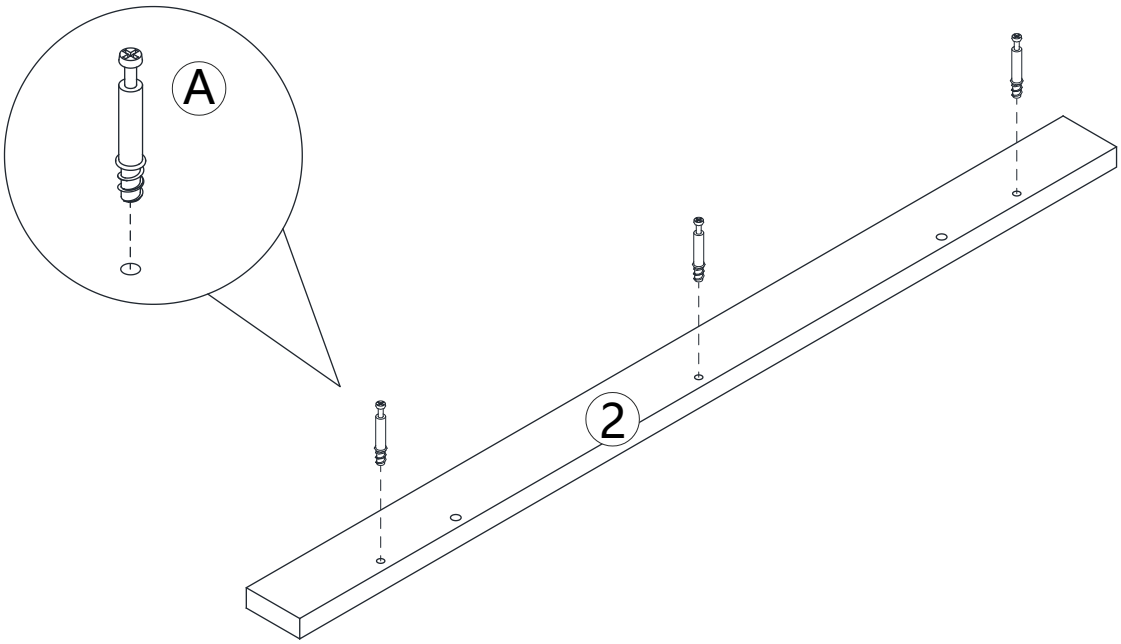


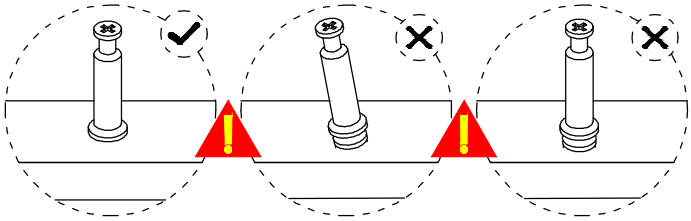


A	×3
	
Ø6*35mm	

Step 2

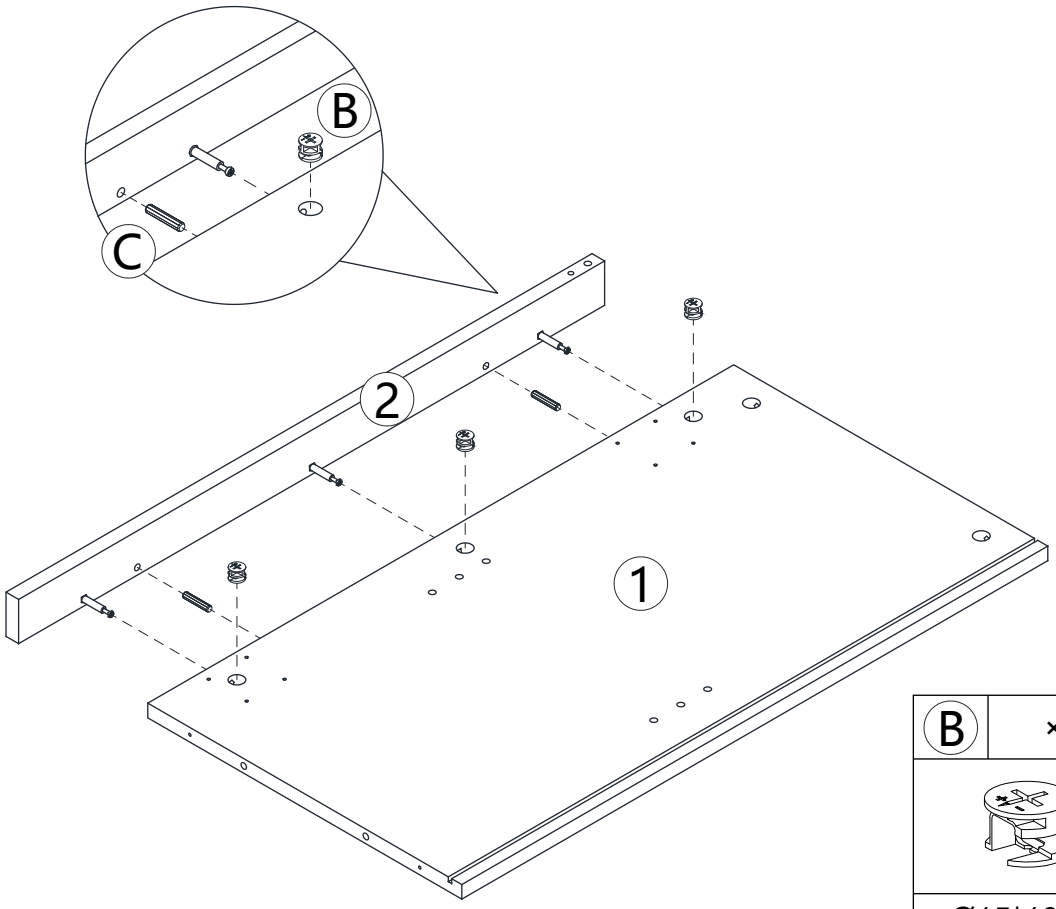


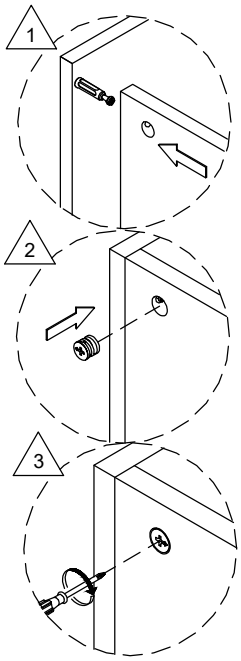


B	×3
Ø15*10mm	


C	×2
	
Ø6*30mm	


Step 3

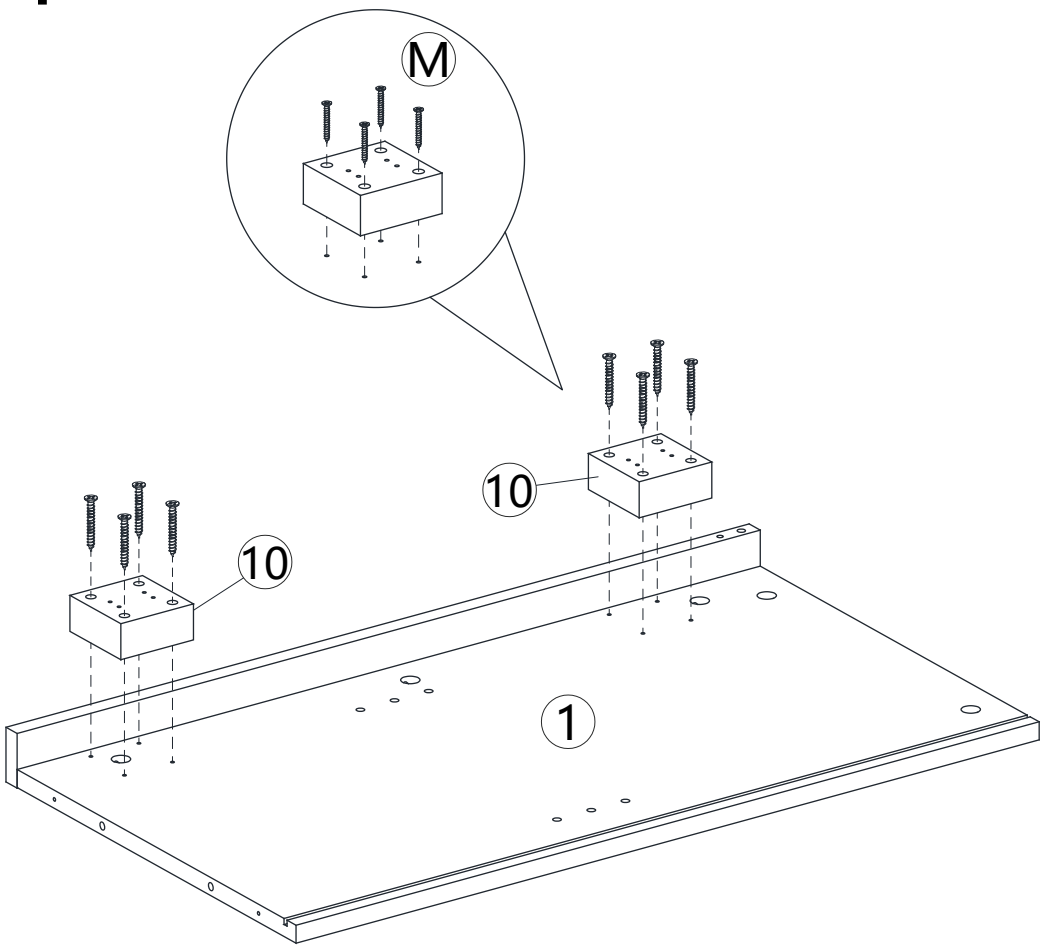


M	×8
	
Ø4*30mm	


Step 4

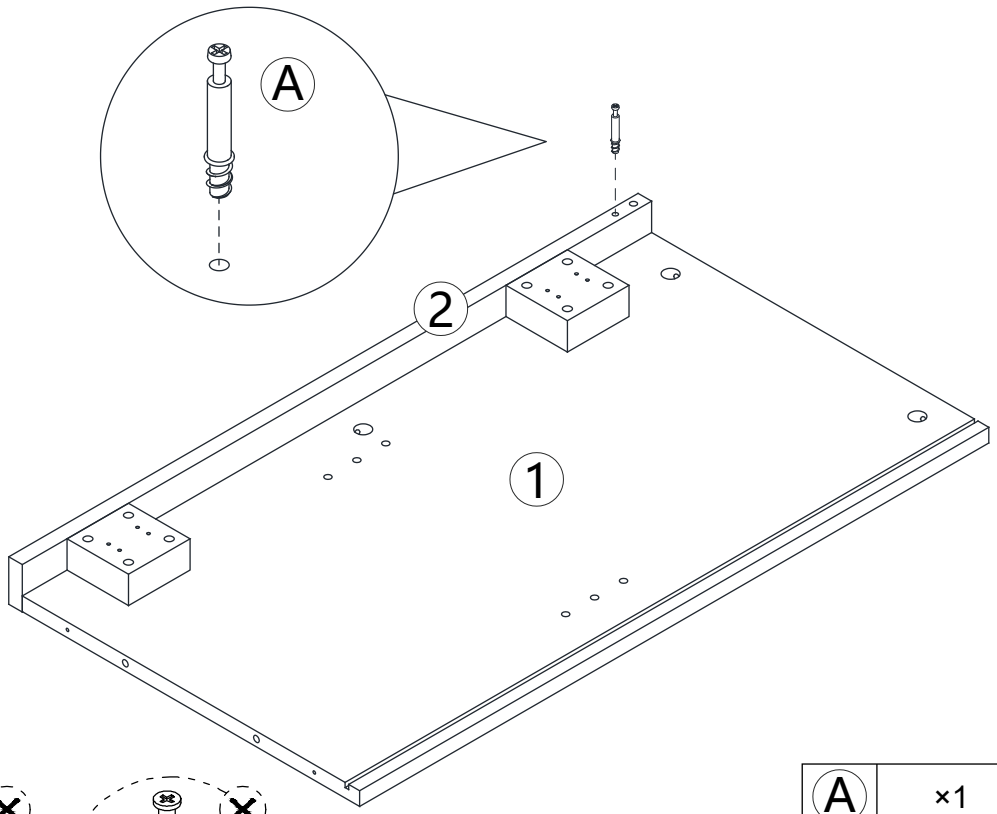


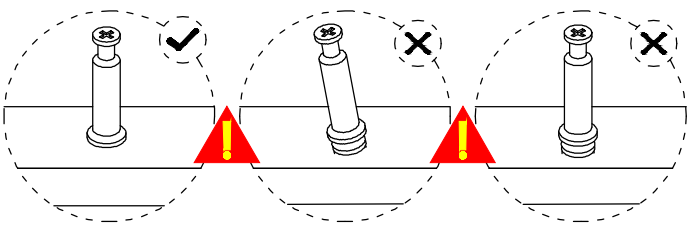


A	×1
	
Ø6*35mm	


Step 5

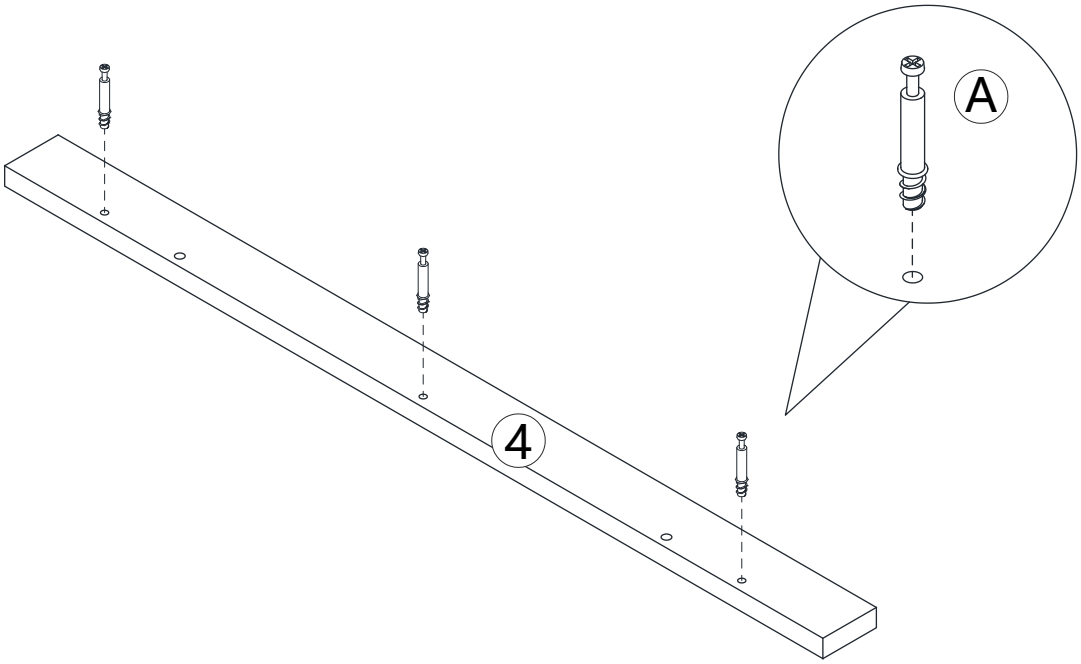


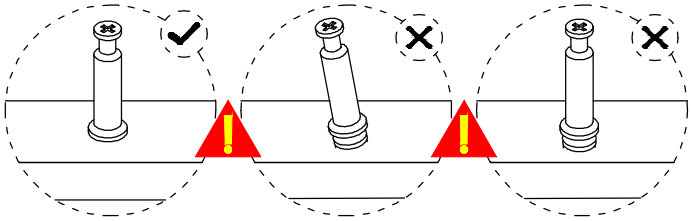


A	×3
	
Ø6*35mm	

Step 6

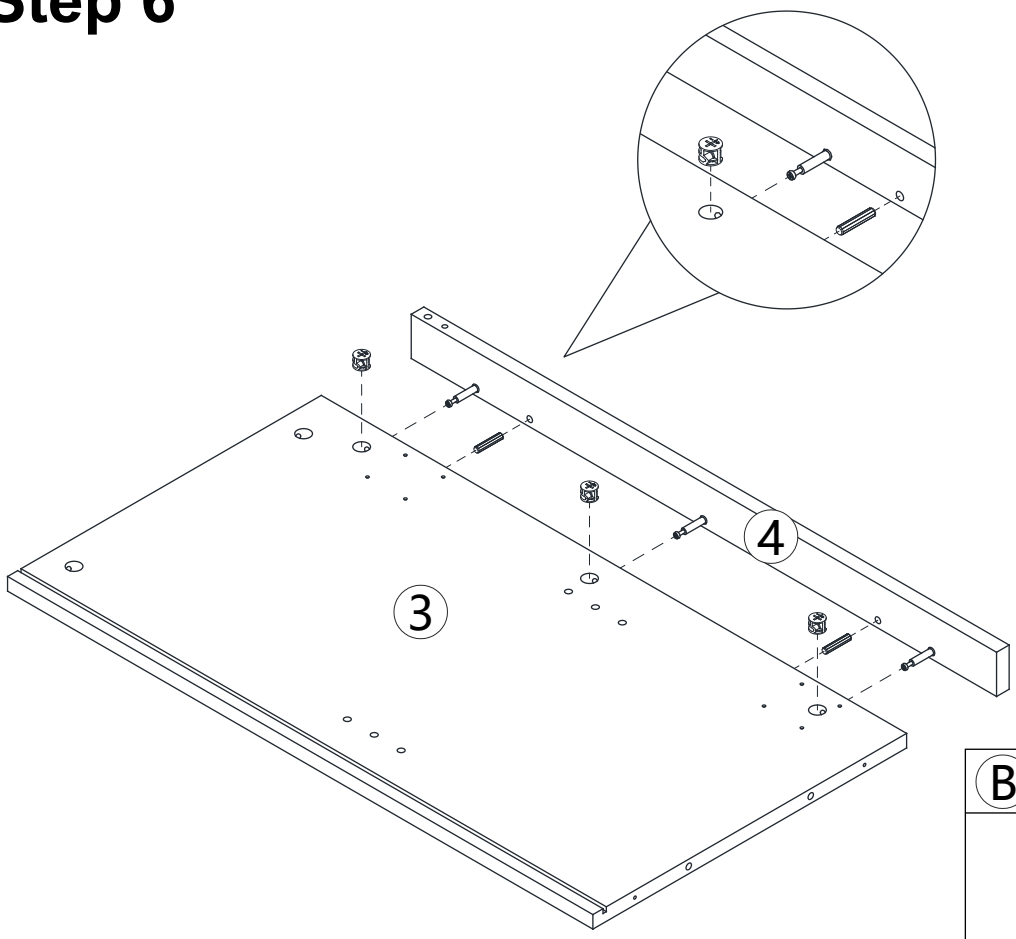


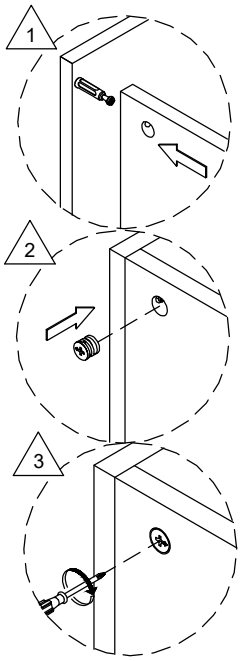


B	×3
	
Ø15*10mm	


C	×2
	
Ø6*30mm	


Step 7

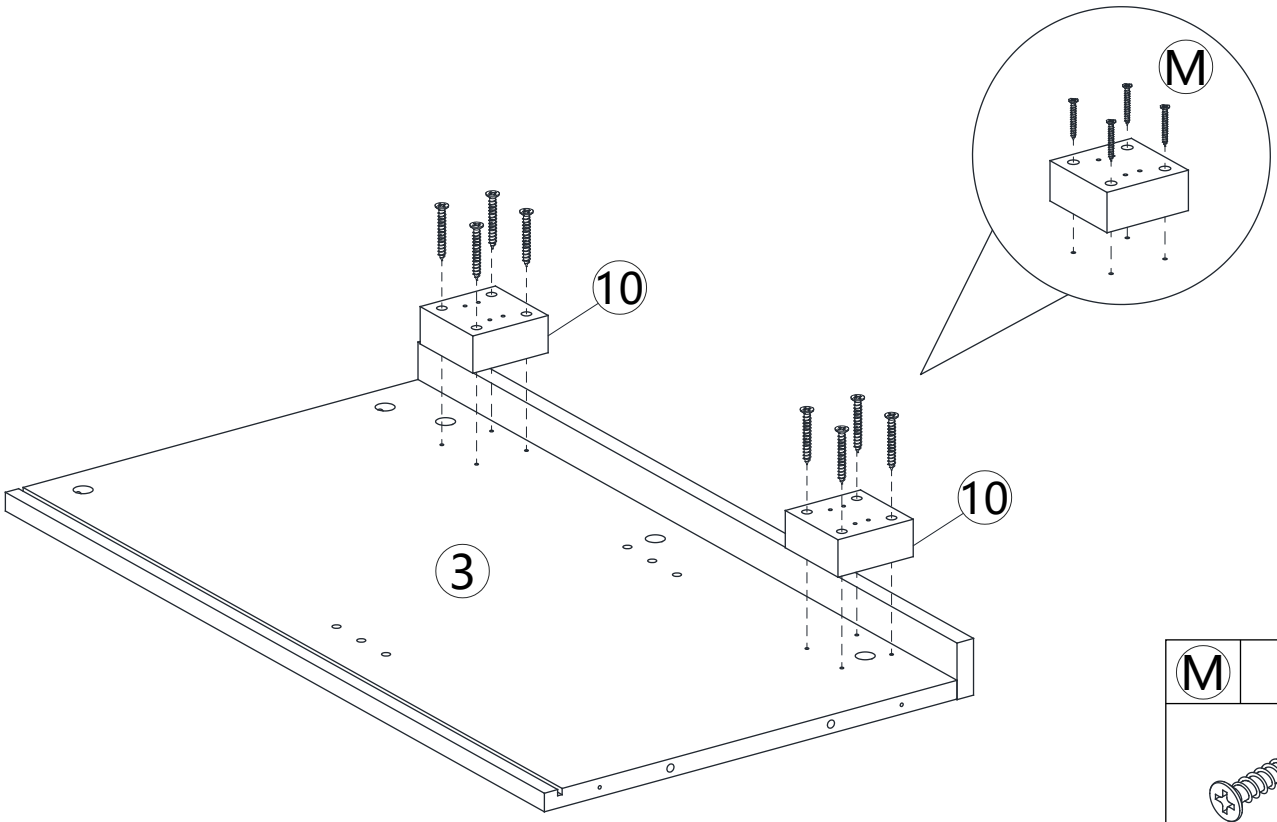


M	×8
	
Ø4*30mm	


Step 8

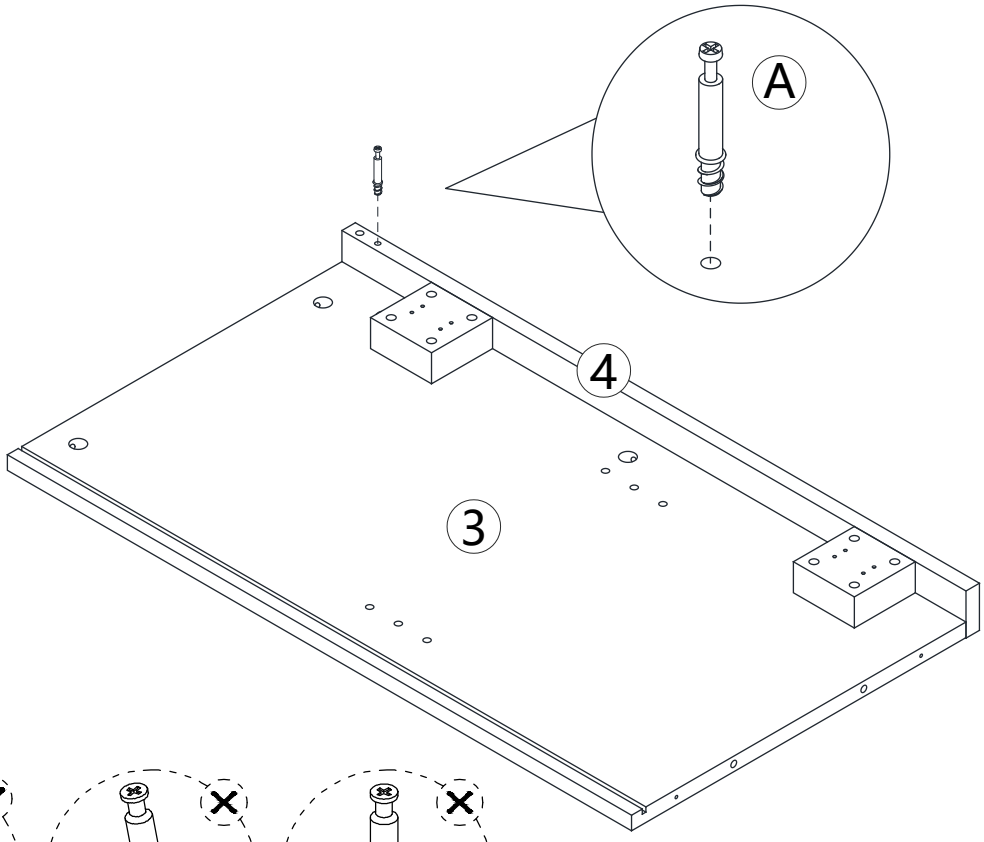




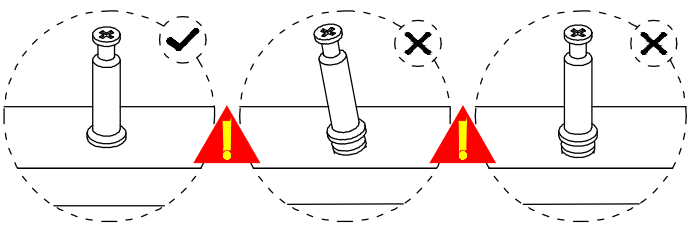


A	×1
	
Ø6*35mm	


Step 9

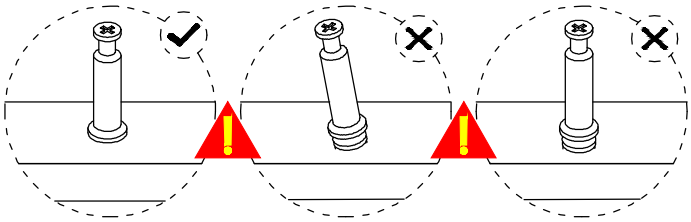


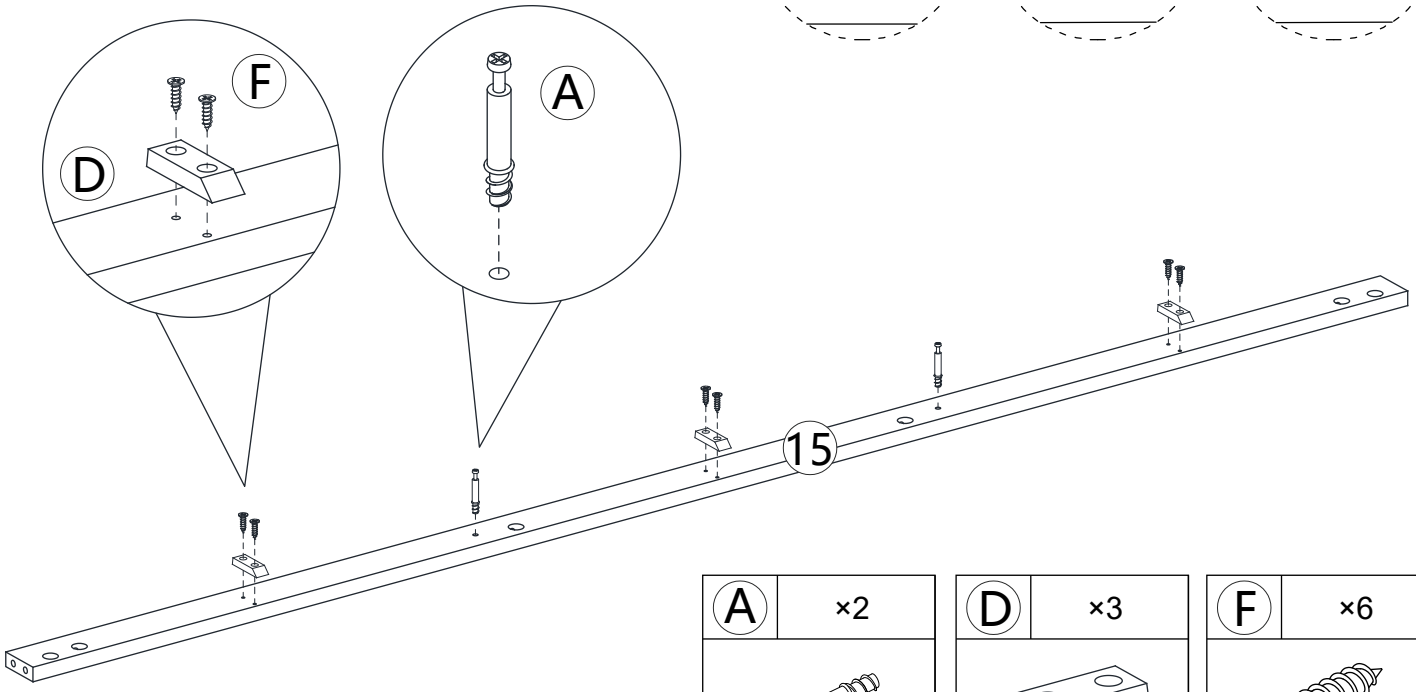

A	×2	D	×3	F	×6
					
Ø6*35mm				Ø7.2*3.5*14mm	


Step 10

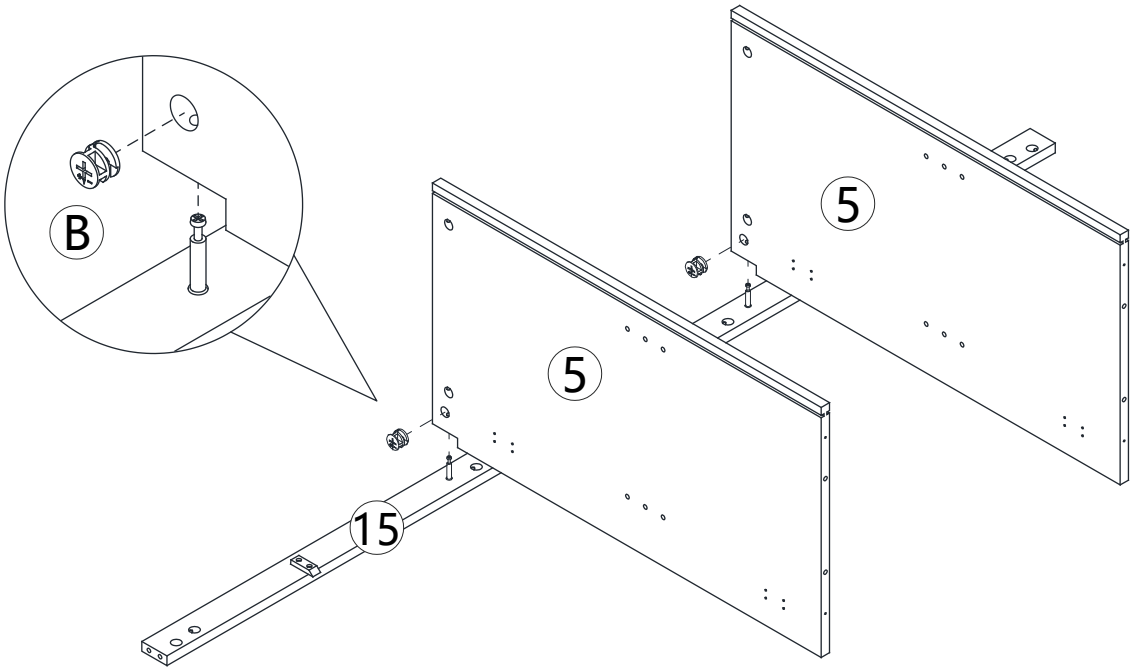


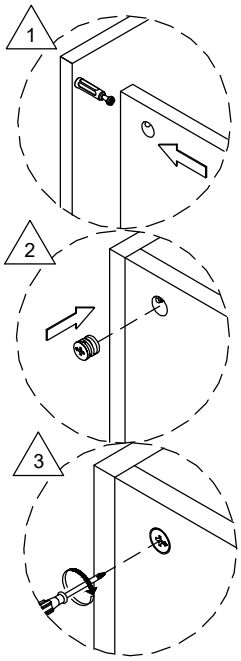


B	×2
	
Ø15*10mm	

Step 11

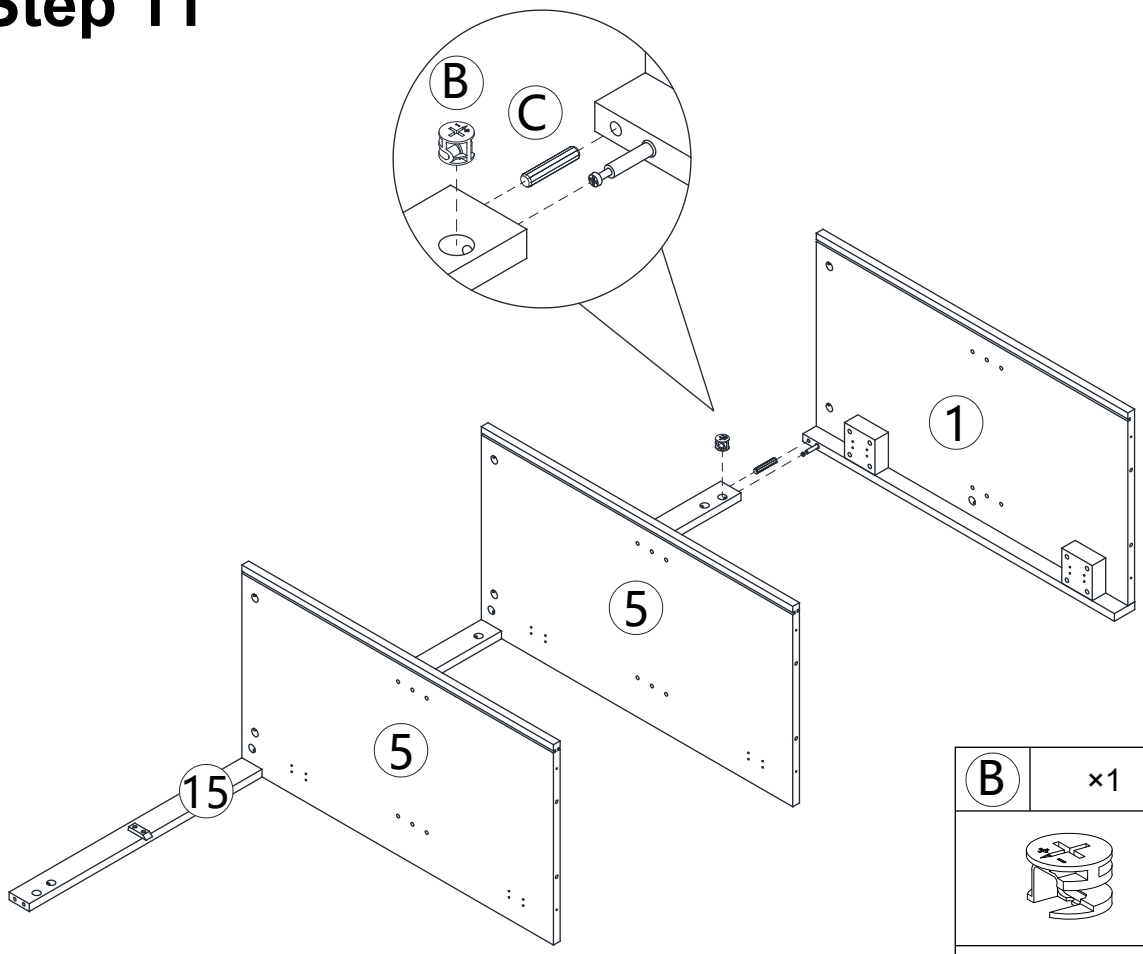


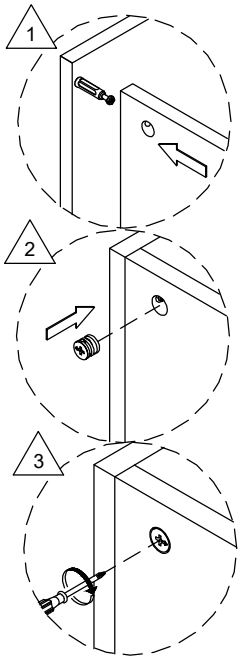


B	×1
Ø15*10mm	


C	×1
	
Ø6*30mm	

Step 12

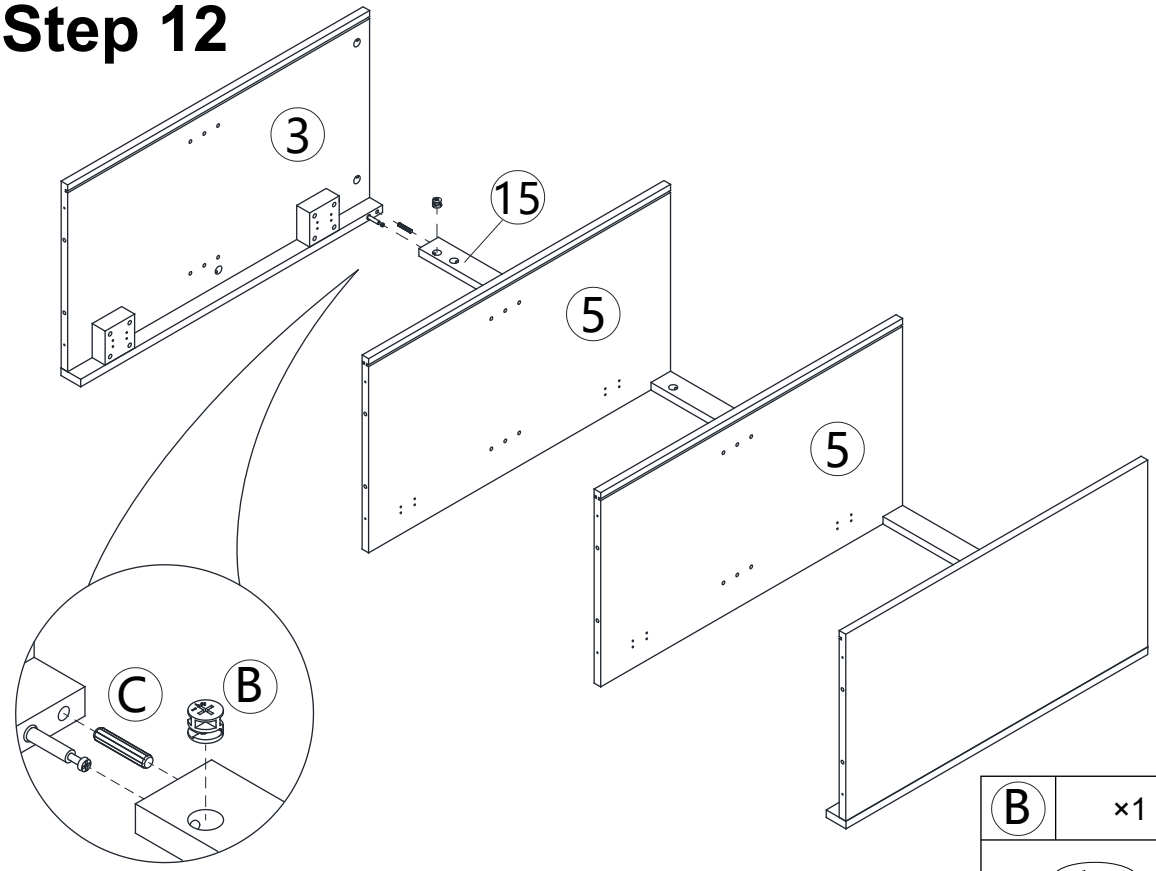


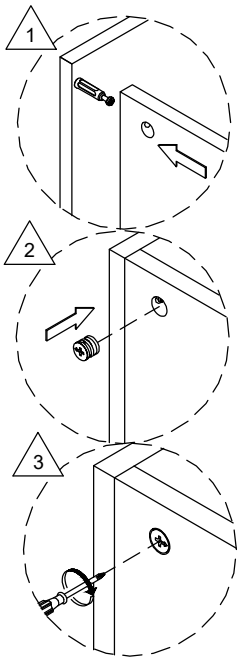



B	×1
	
Ø15*10mm	

C	×1
	
Ø6*30mm	

Step 13

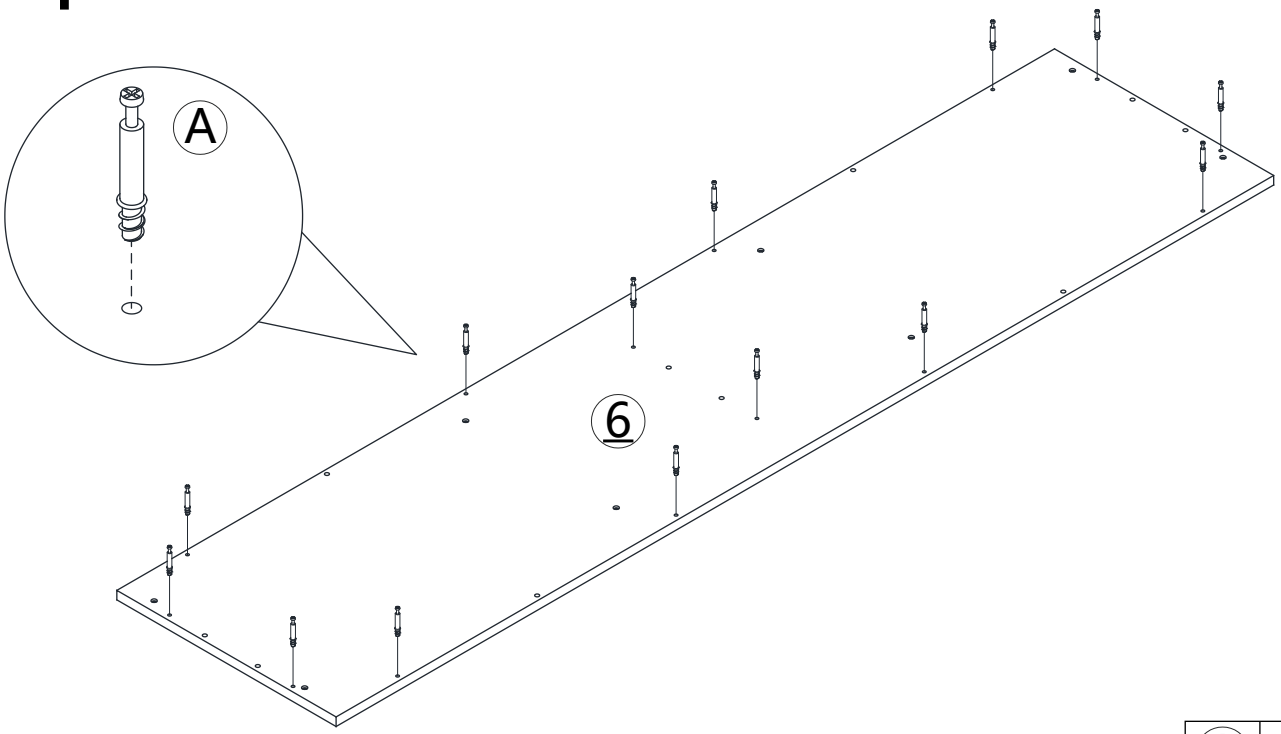


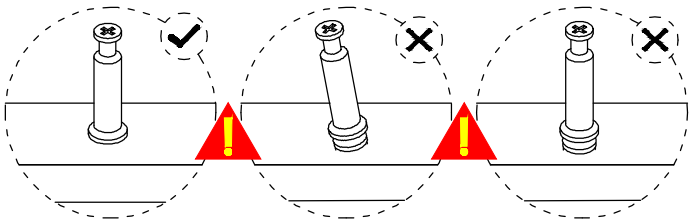



A	×14
	
Ø6*35mm	


Step 14


Two people are needed to install it

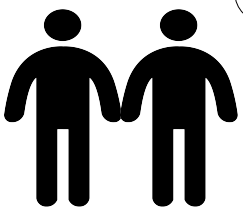

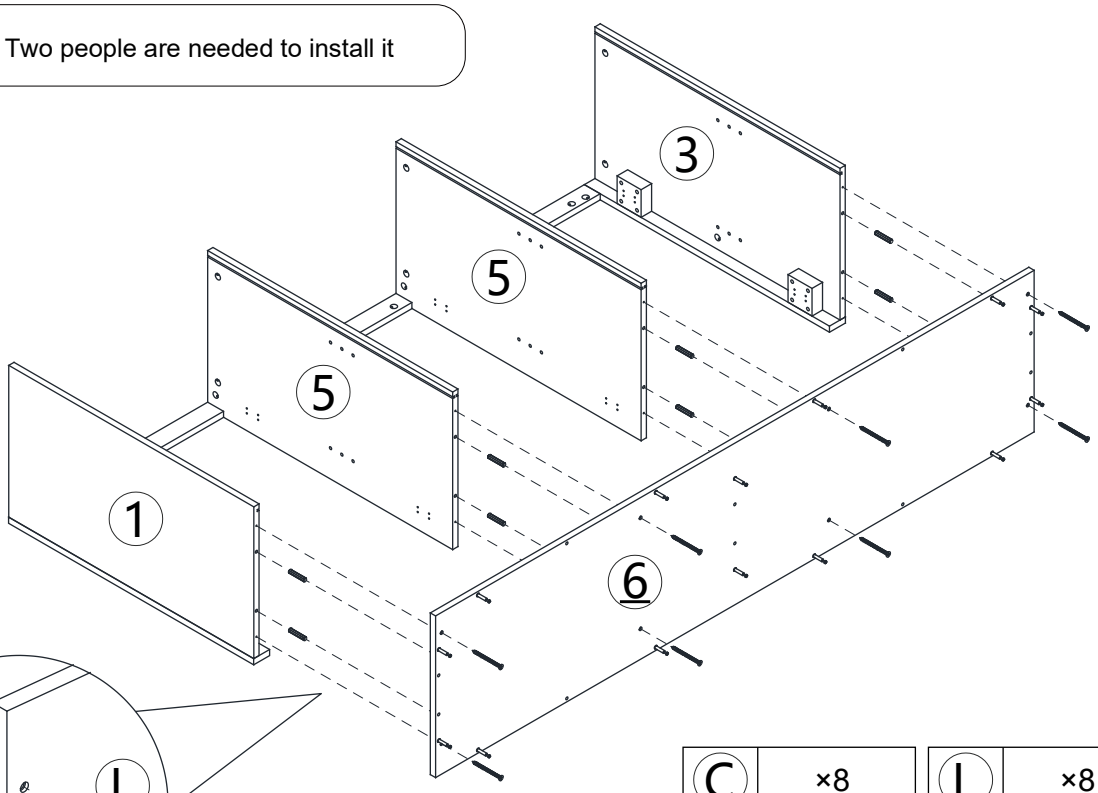


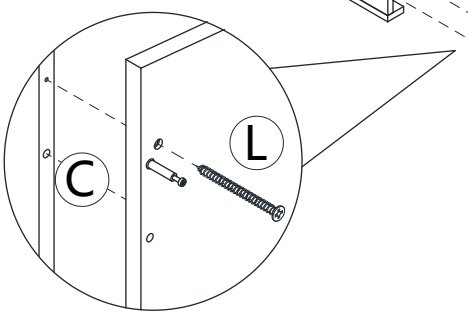



C	×8
	
Ø6*30mm	

L	×8
	
Ø4*40mm	


Step 15

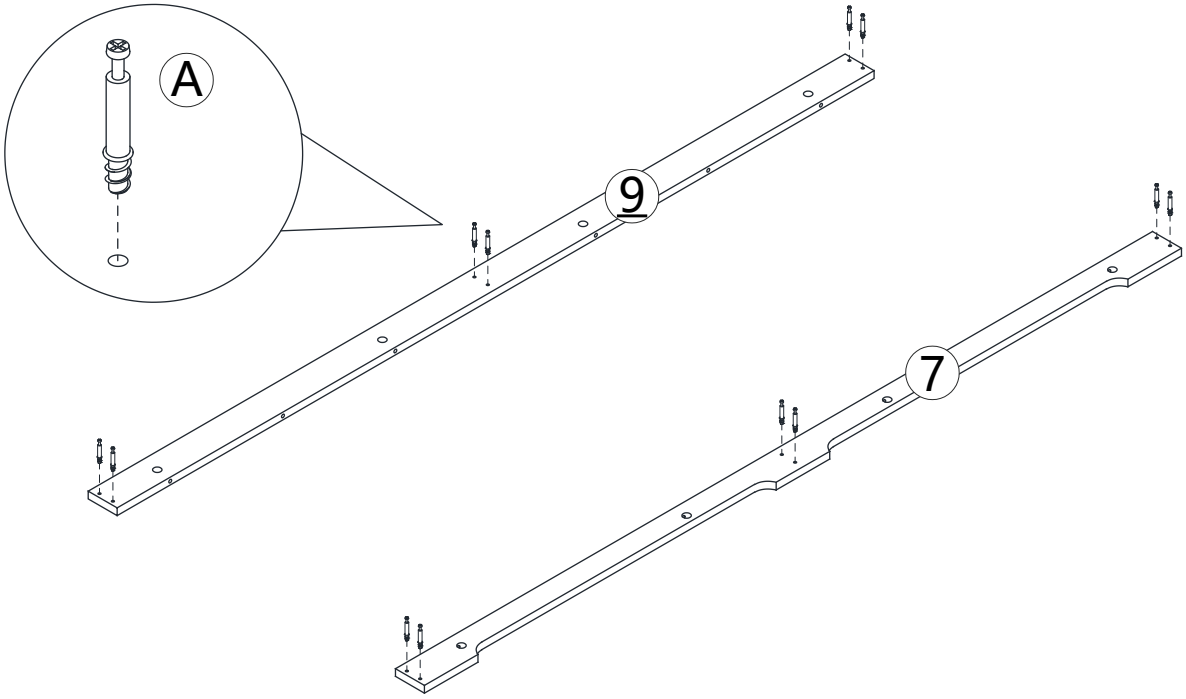


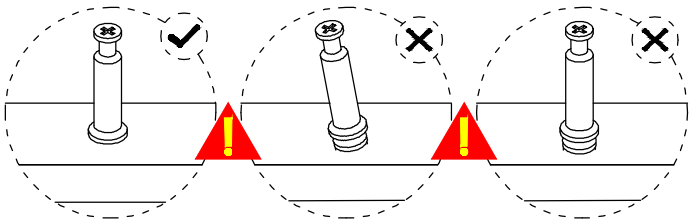

A	×12
	
Ø6*35mm	

Step 16

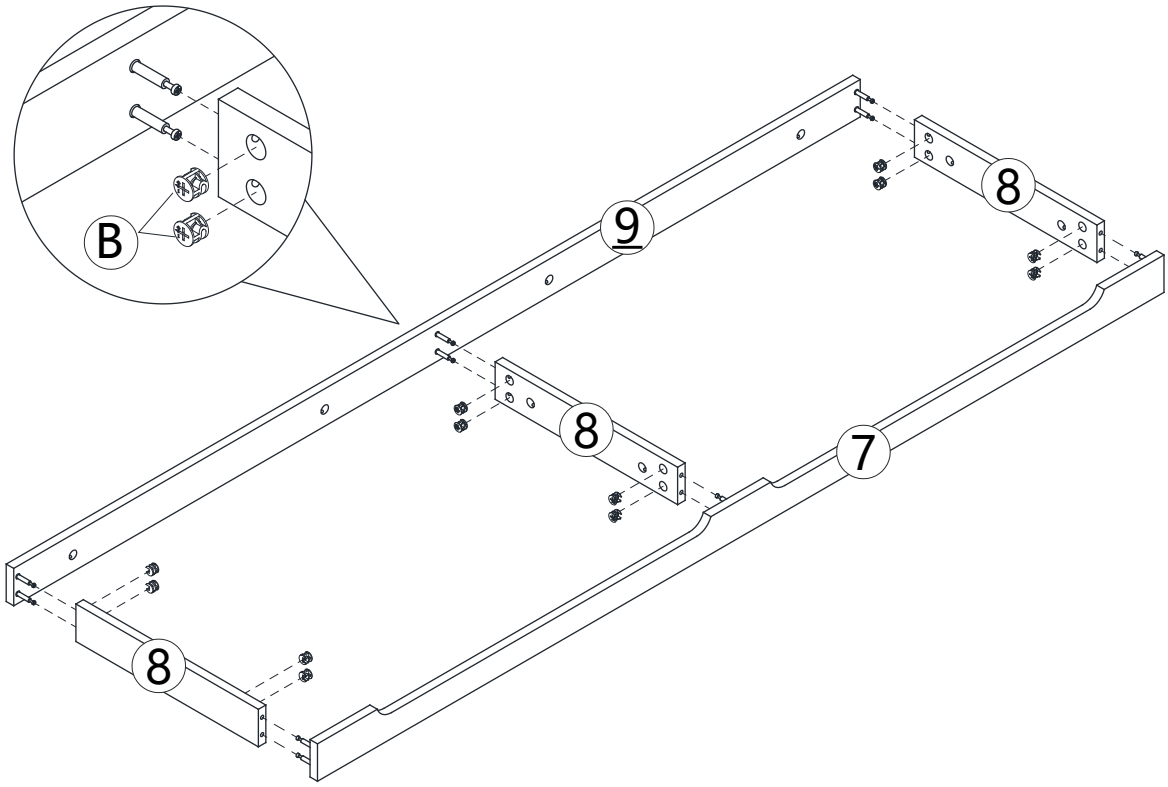


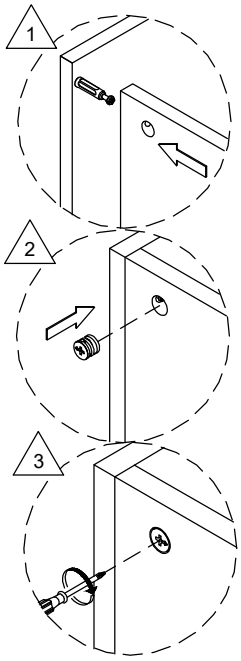

B	×12
	
Ø15*10mm	


Step 17

Step 1

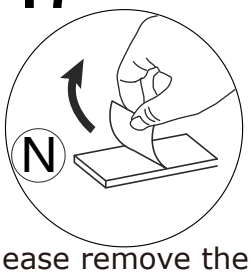


Note: Please remove the protective film before installation

Step 2

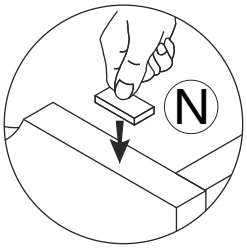


Note: Stick the felt pad to the bottom of the leg post.

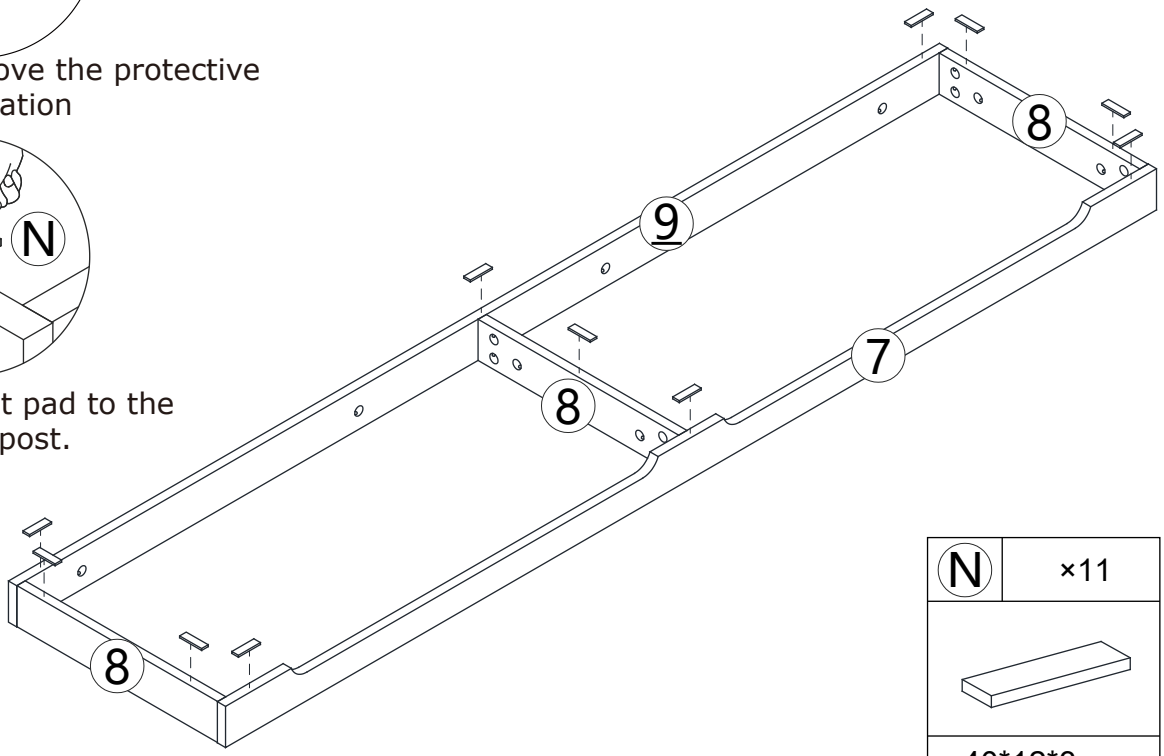



N	×11
40*12*3mm	

Step 18


Two people are needed to install it

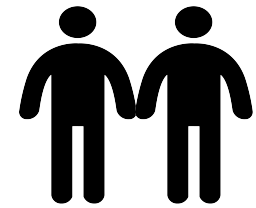

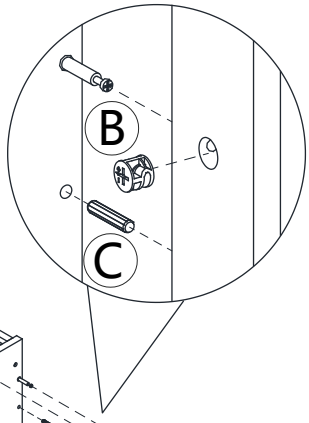


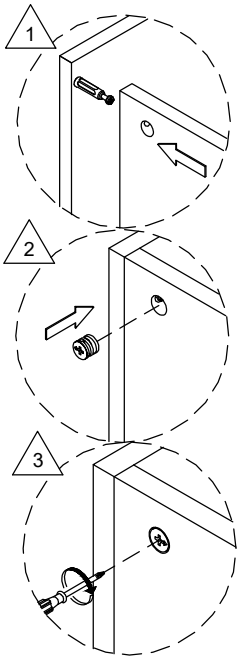


C	×10
Ø6*30mm	

B	×14
	
Ø15*10mm	


Step 19

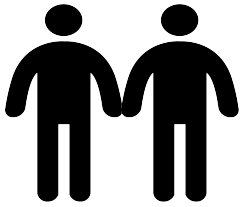


Two people are needed to install it

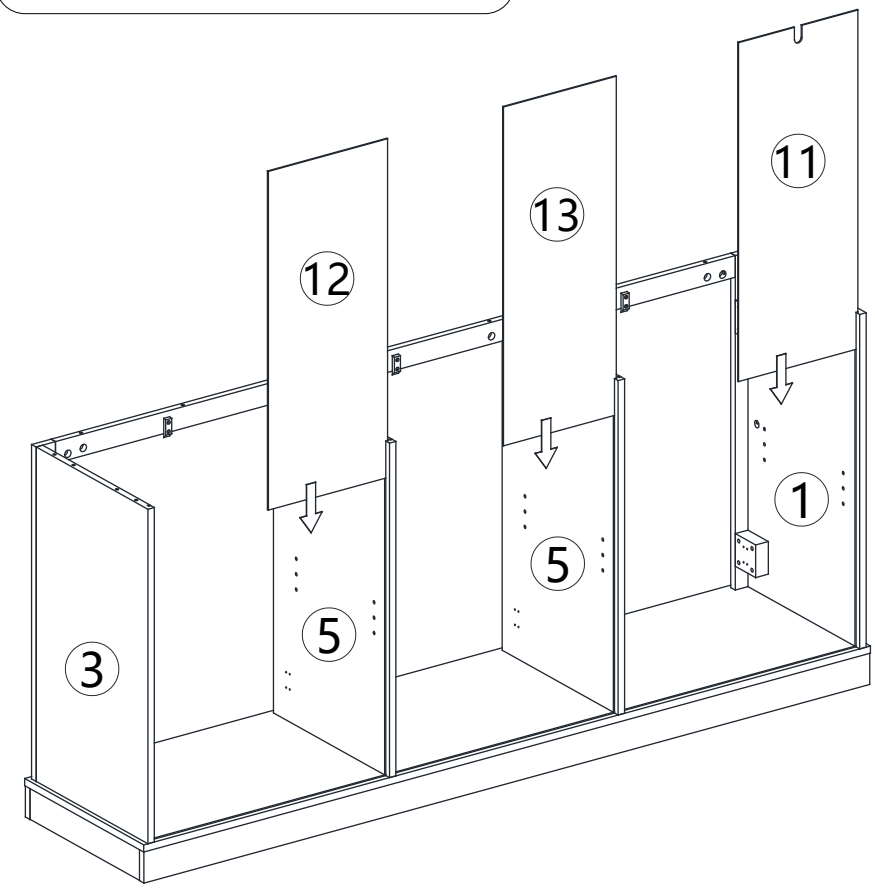

Step 20

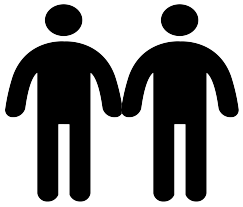



Two people are needed to install it

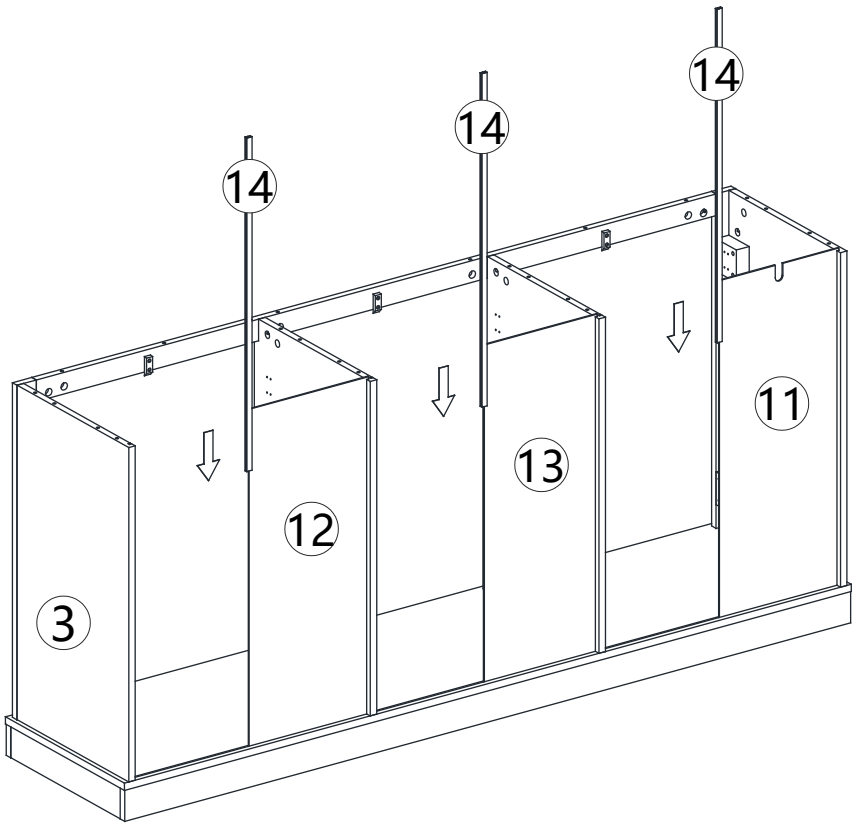


Step 21


Two people are needed to install it

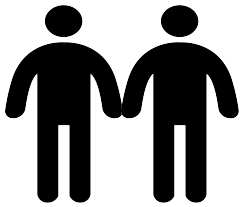

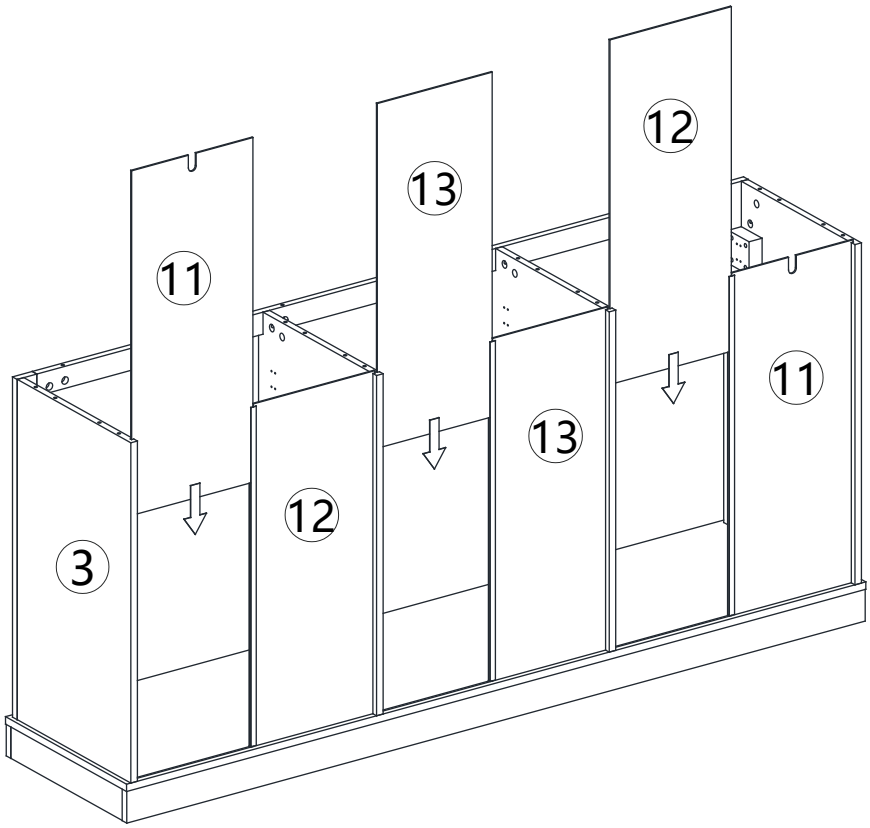


Step 22

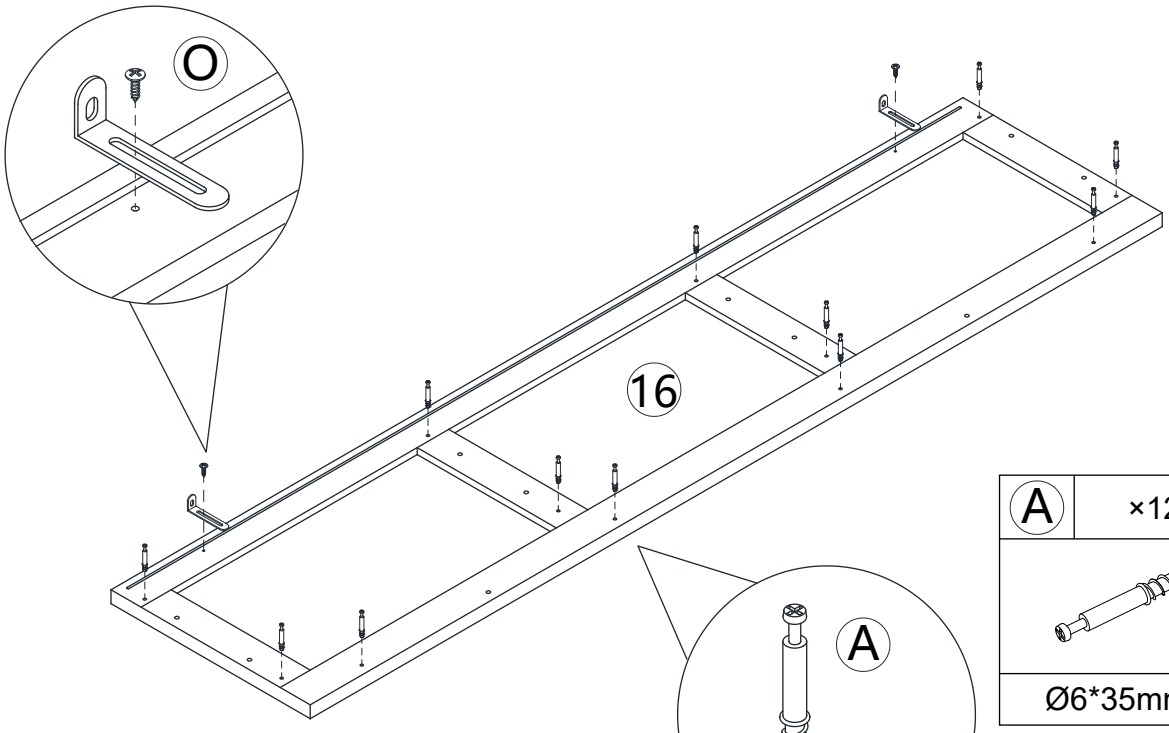


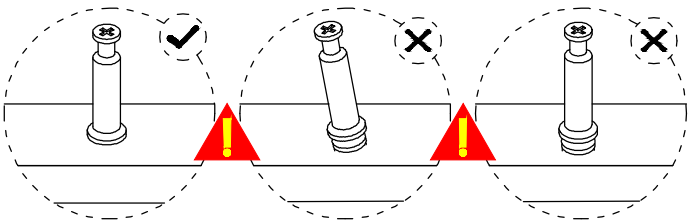


A	×12
Ø6*35mm	

O	×2
	


Step 23

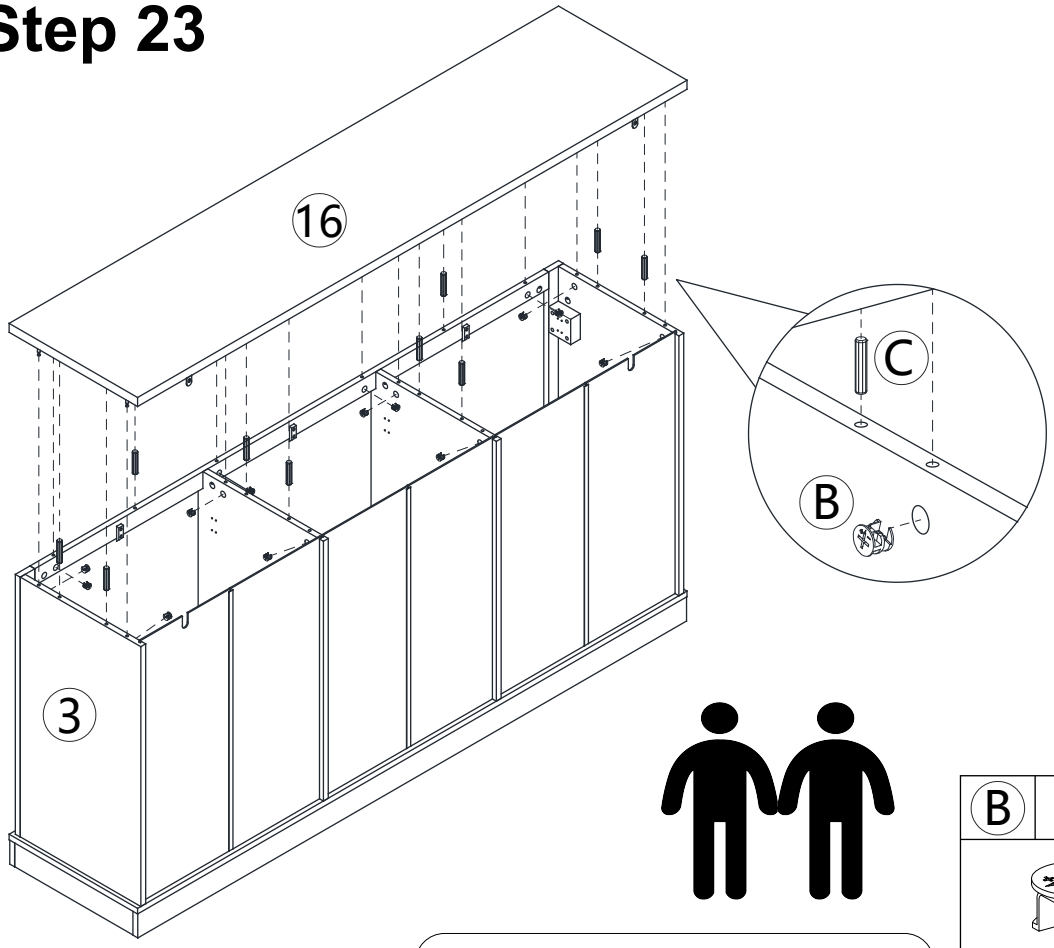

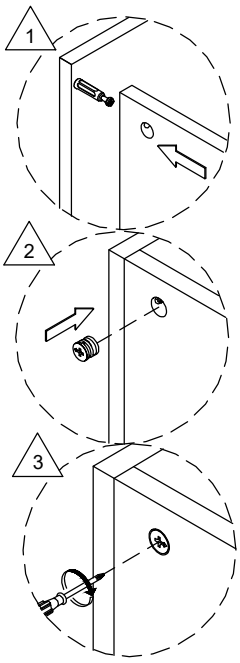



Two people are needed to install it


B	×12
	
Ø15*10mm	

C	×10
	
Ø6*30mm	


Step 24

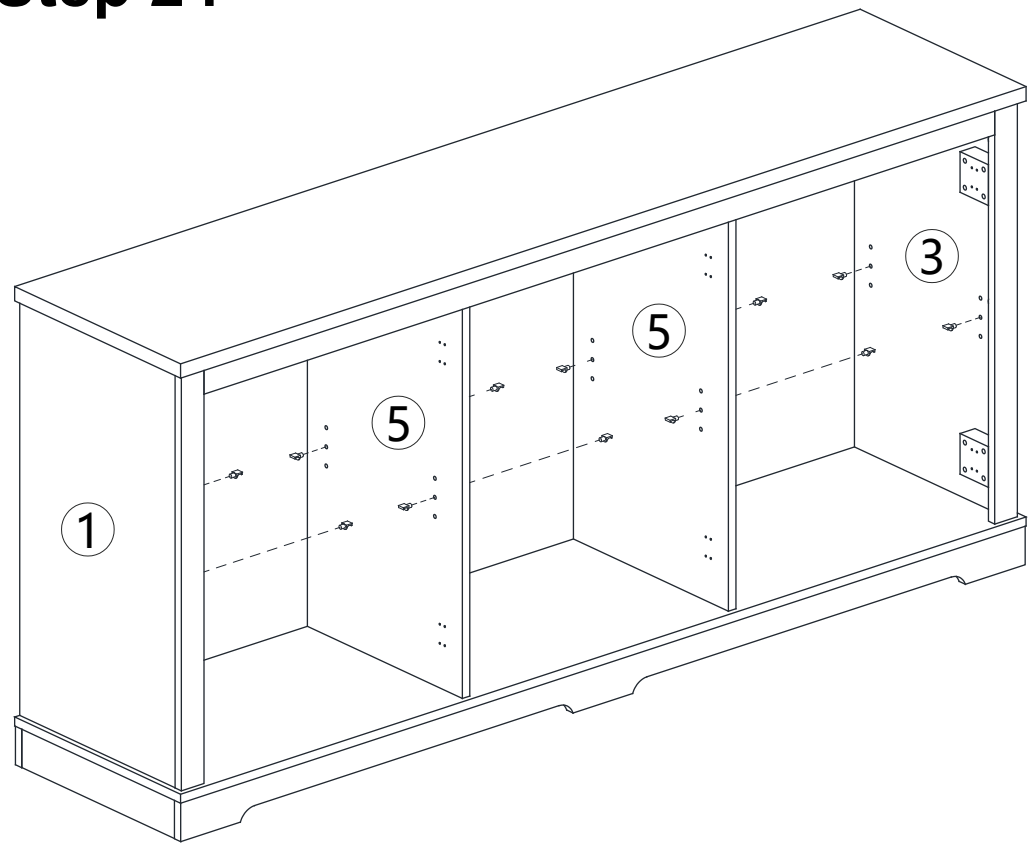

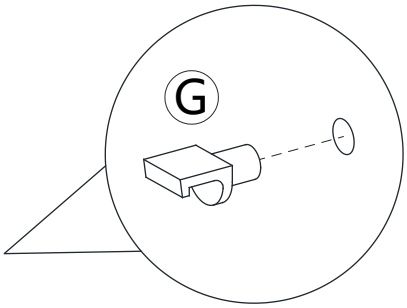


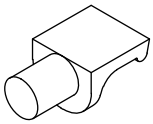G	×12
	


Step 25

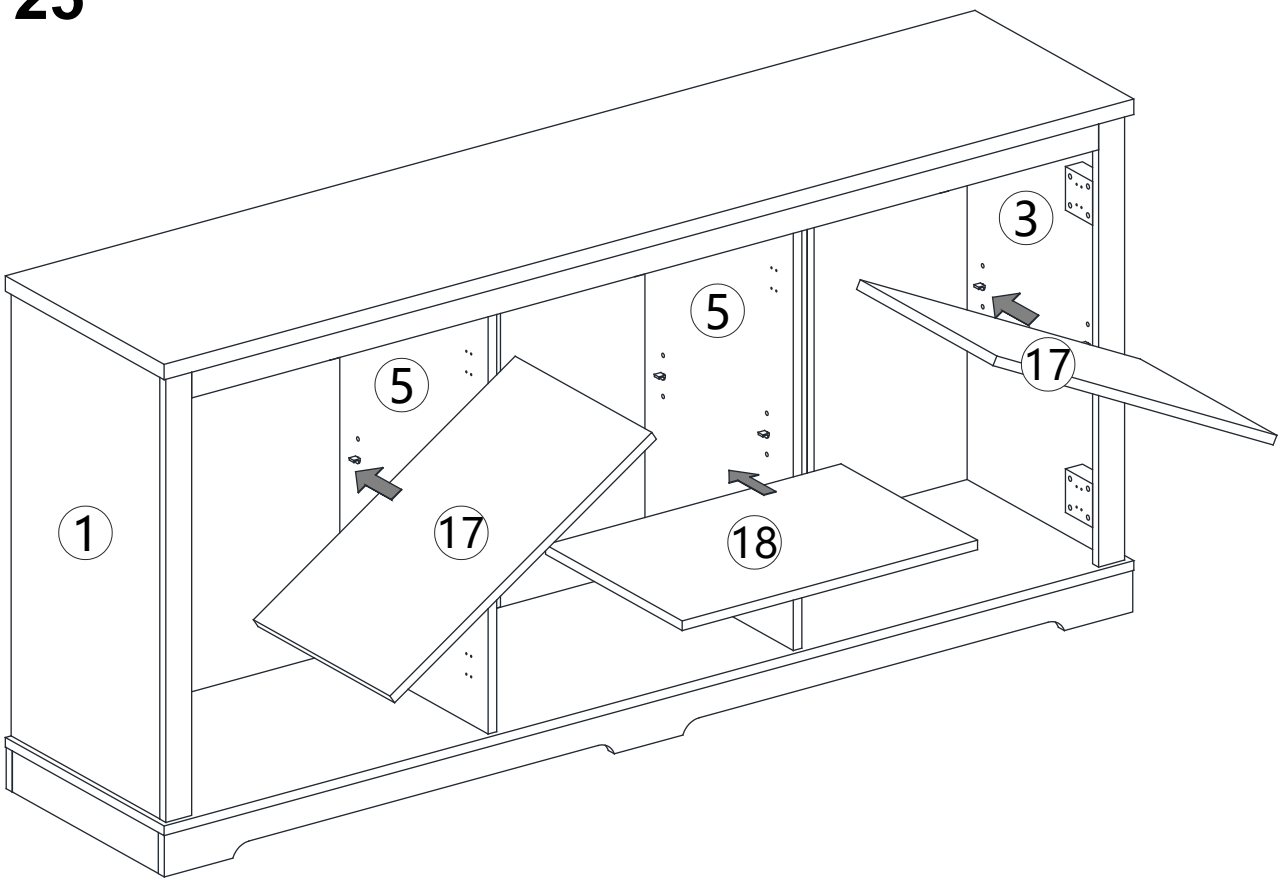


Step 26

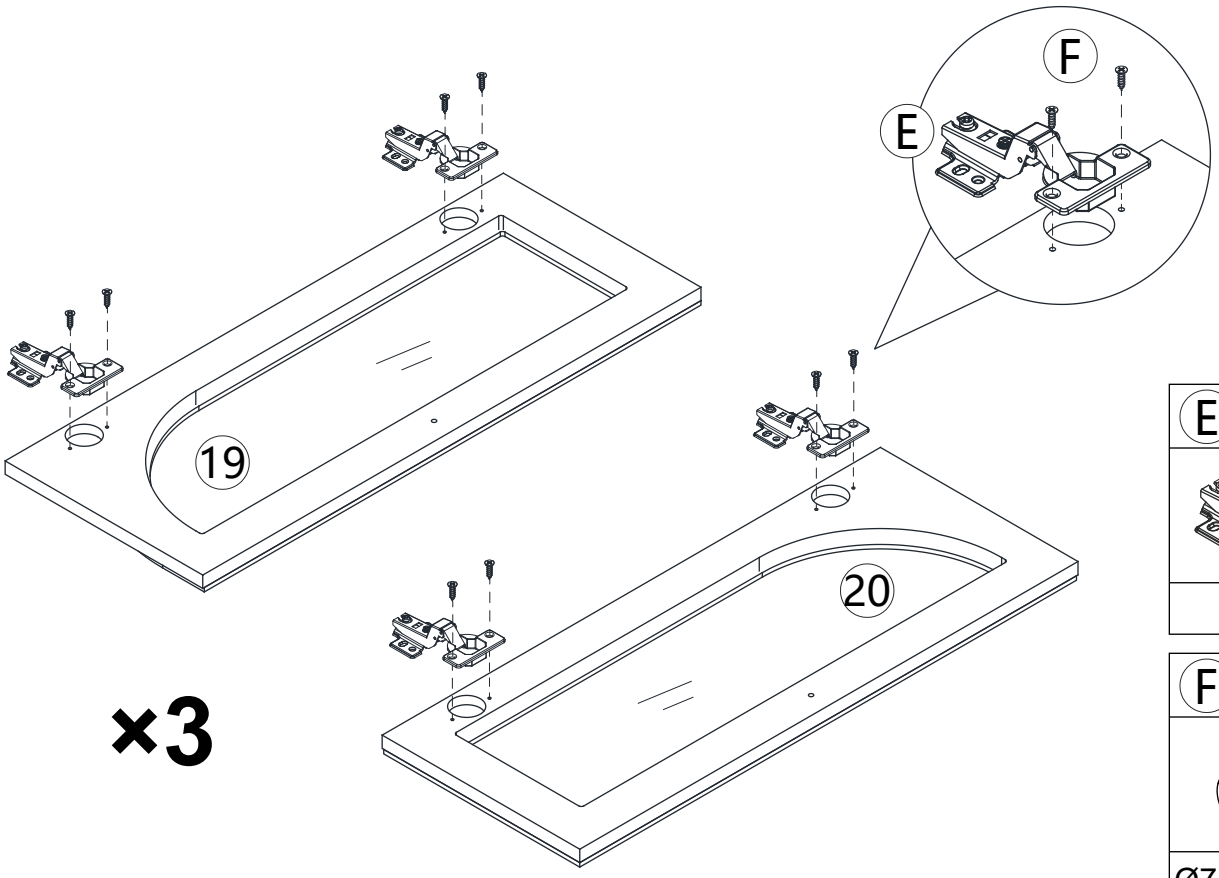



×3

E	×12
	


F	×24
	
Ø7.2*3.5*14mm	


Step 27

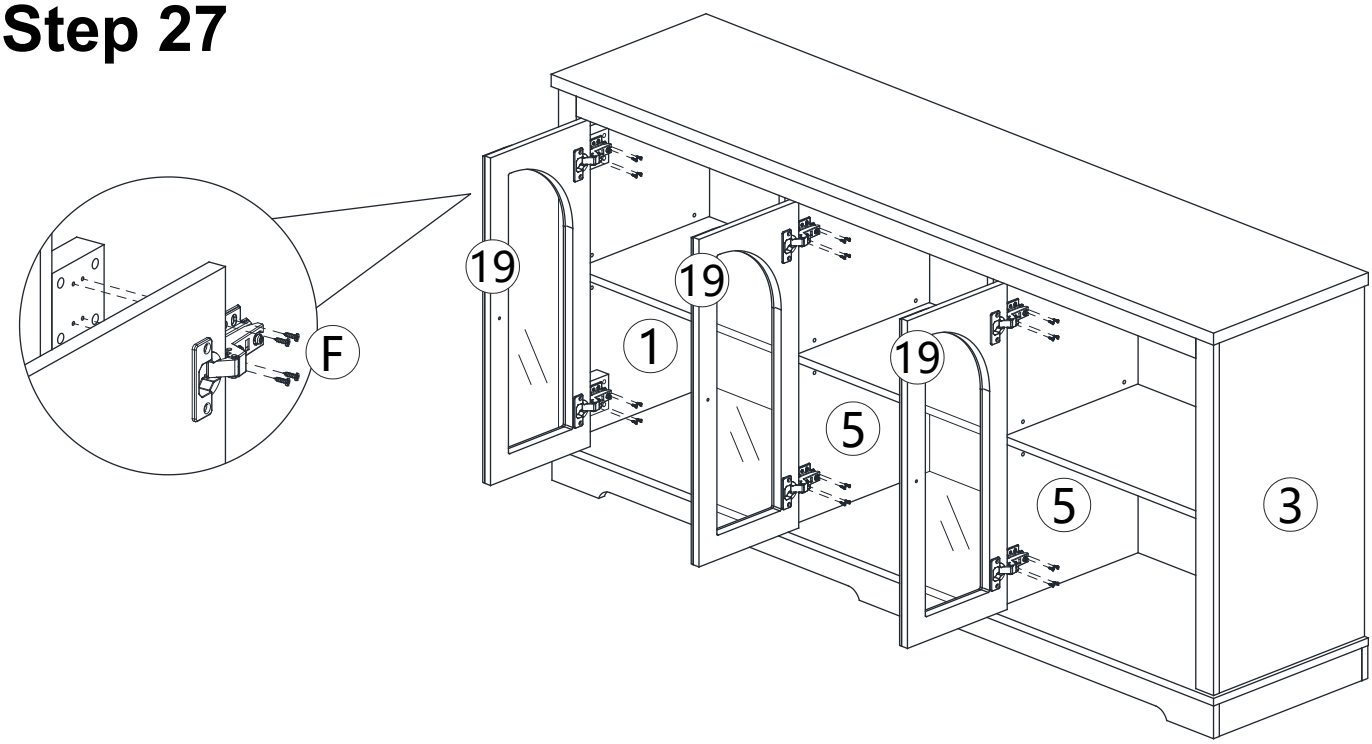

F	×24
	
Ø7.2*3.5*14mm	


Step 28

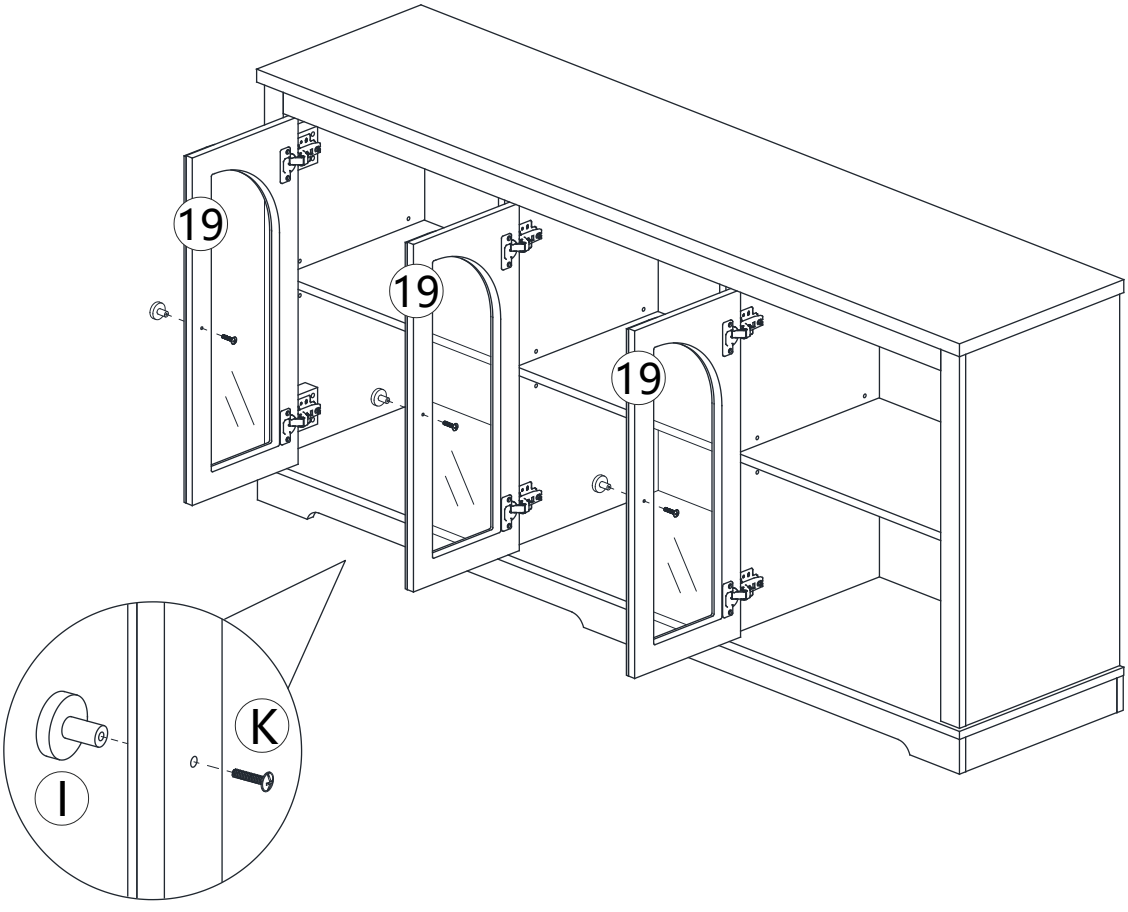



I	×3
	

K	×3
	
M4*25mm	


Step 29

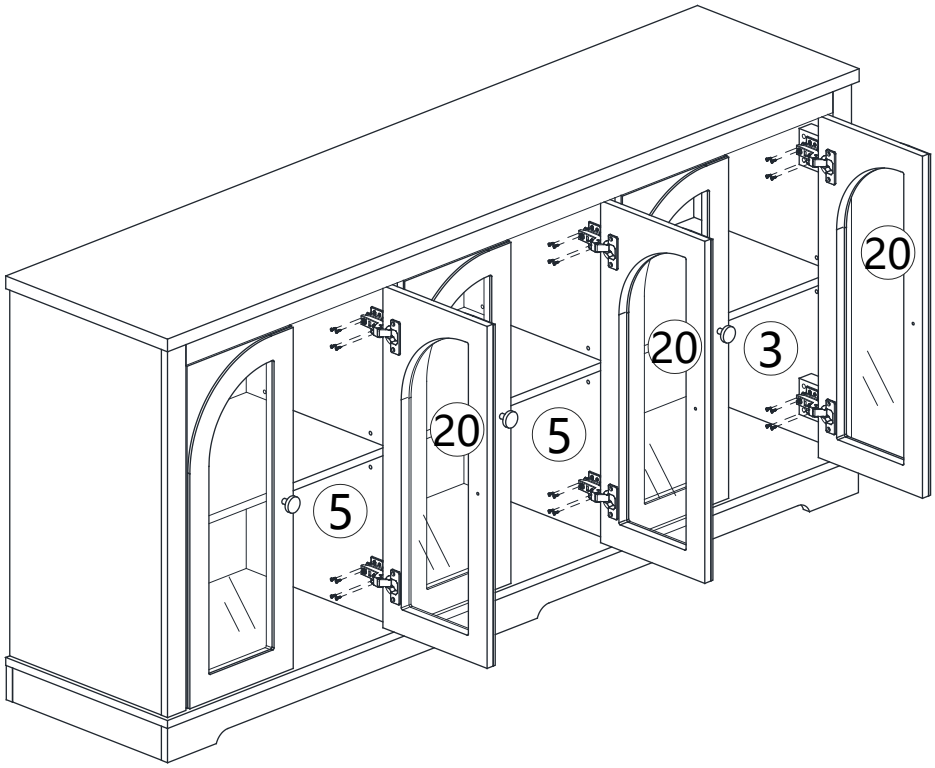


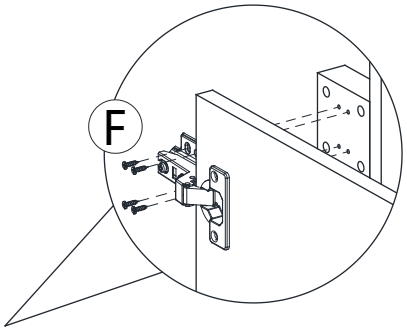


F	×24
	
Ø7.2*3.5*14mm	

Step 30

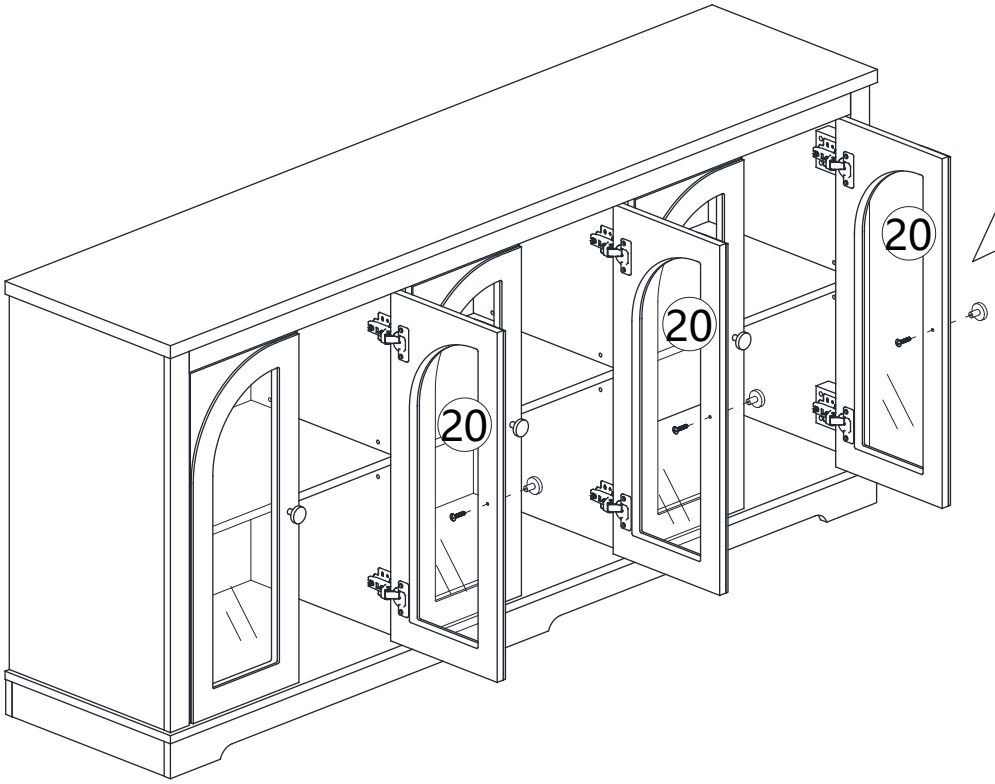


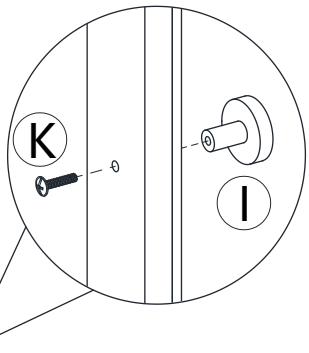


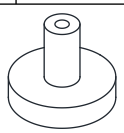
I	×3
	

K	×3
	
M4*25mm	


Step 31

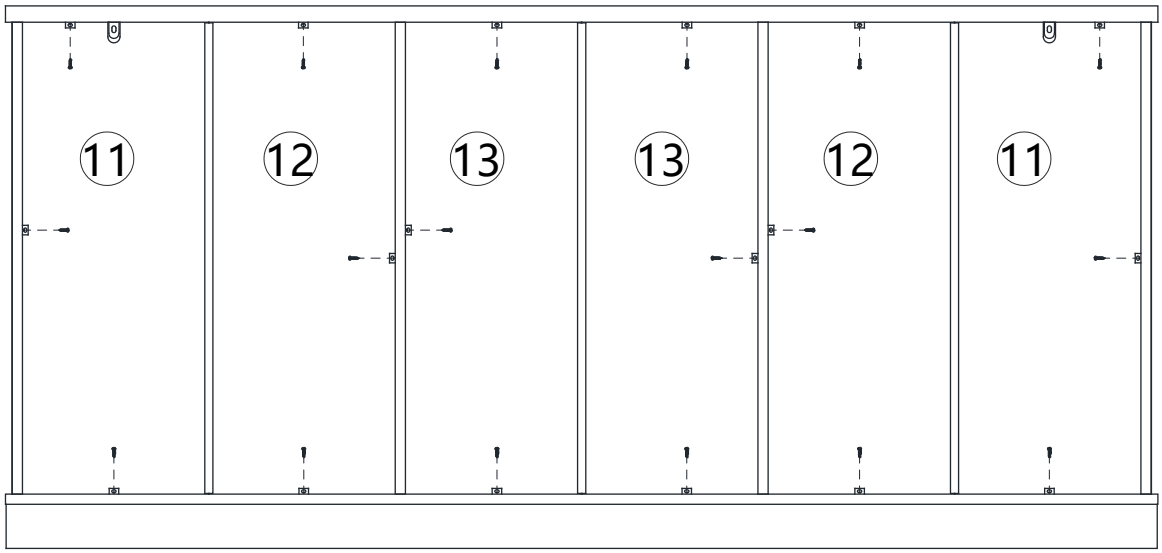


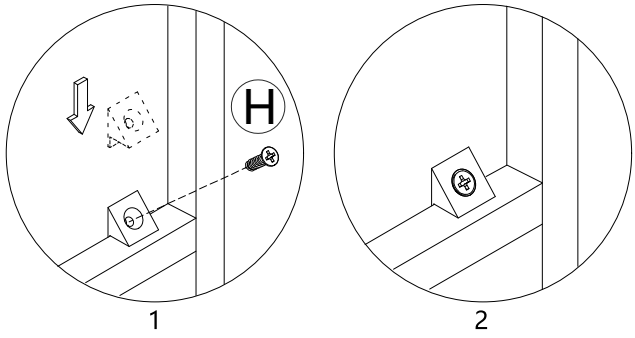


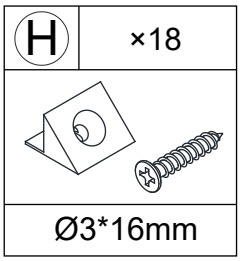

Step 32

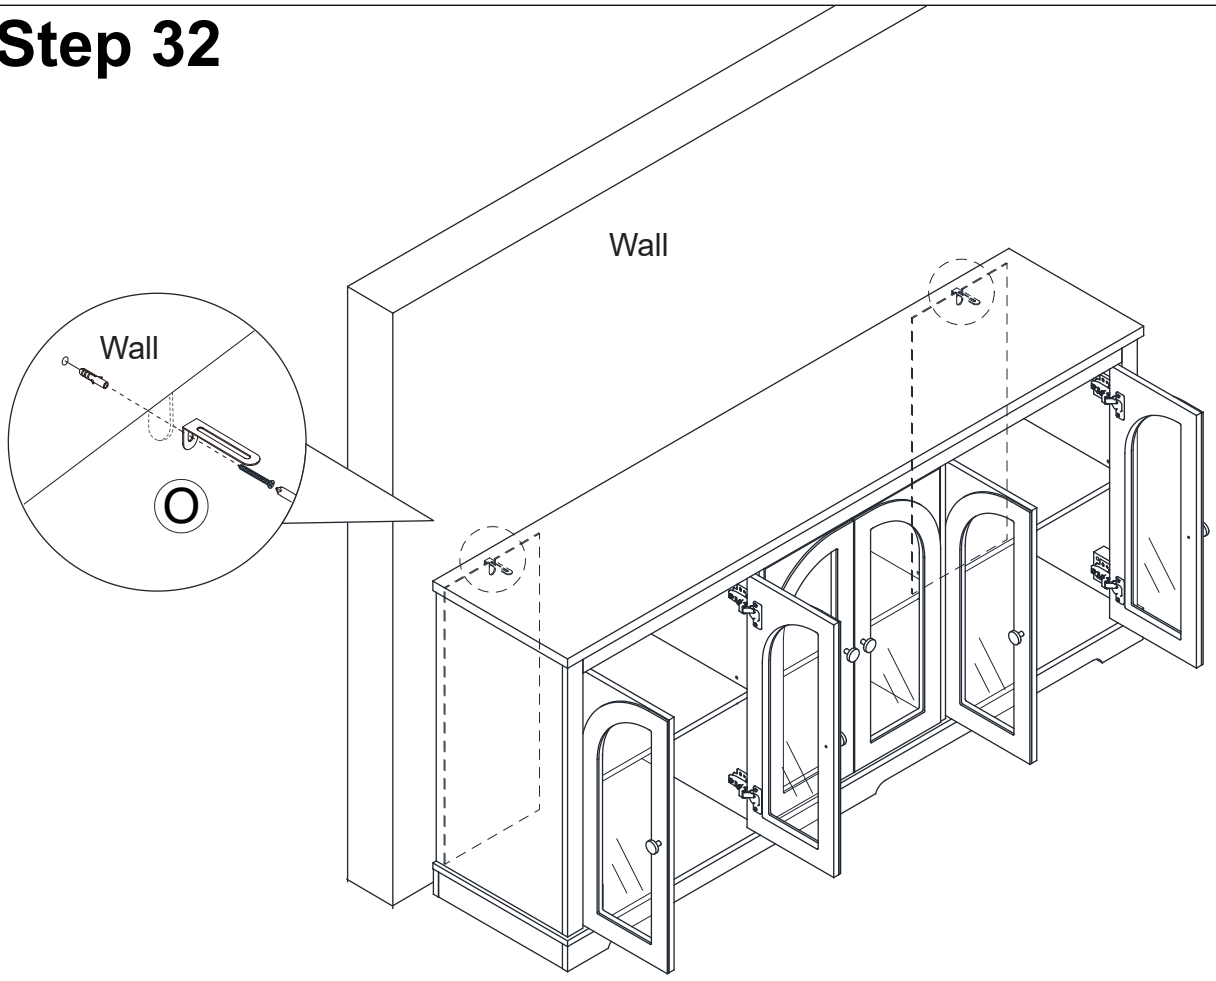

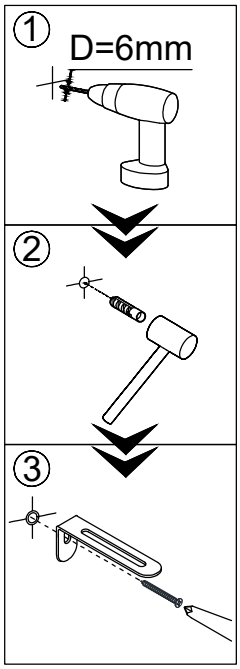

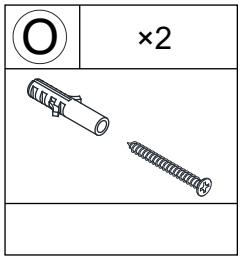


Assembly Steps

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.

STEP 1


Open the door.

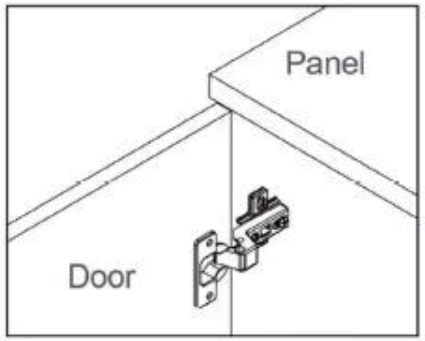

STEP 2


Adjust the door panelsupward or downward

1.

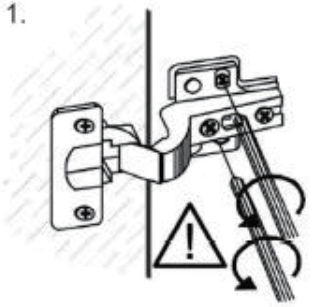


Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.

2.

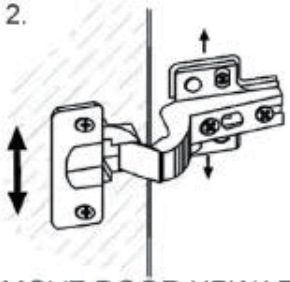

MOVE DOOR UPWARD OR DOWNWARD

3.

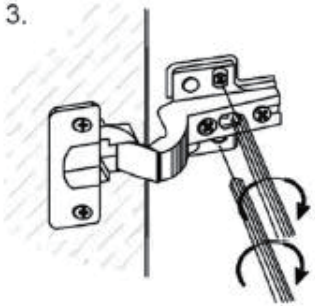


Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3


Adjust the flush between door panel and side panel

1.

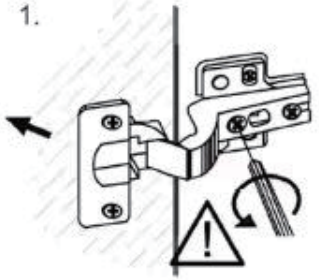


MOVE DOOR OUTWARD by turning this screw counter-clockwise

2.

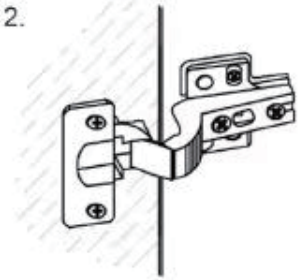

KEEP DOOR IN RIGHT POSITION

3.

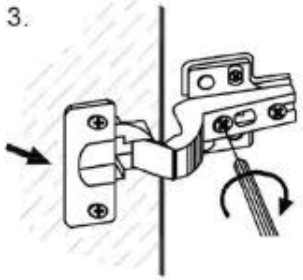


MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4


Adjust the Gap beteen door panel and side panel

1.

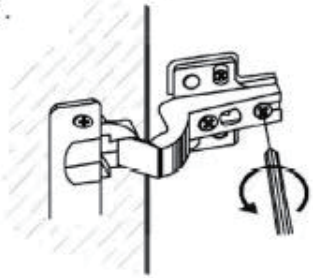


Loosen this screw a bit.

2.

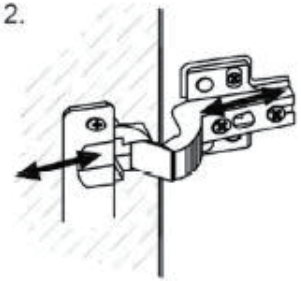

MOVE DOOR BACK OR FORTH

3.

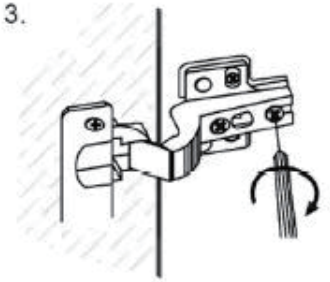

Re-tighten this screw.

COMPLETE

