




Parts List

BOX-1: 2+4+5+6+7
BOX-2: 1+3+ABCDE


A x 32	B x 32	C x 1	D x 4	E x 4
				
M6	M6	M6		

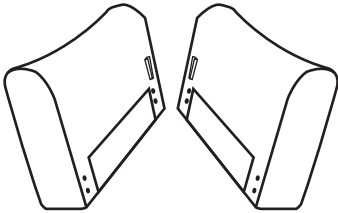

1 Left and right armrests

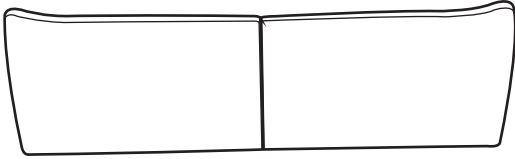

2 Backrest

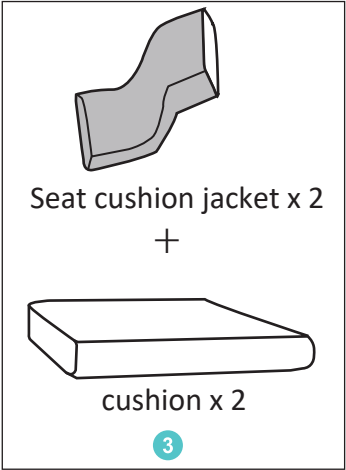

Back




Front


4 Front and back seat frame panels



5 center bar x 2

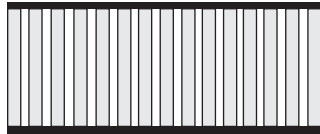


6 Supporting plank x 1




7 Sofa pillow x 2

Note: The softpack/upholstery is vacuum packed, open the packing tape and tap it gently with your open hand a few times to let it unfold evenly, it will return to its full state after about 24 hours.


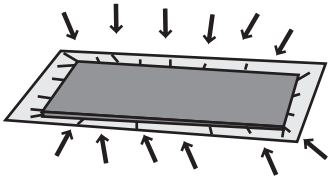


Open →




Installation method

! First of all, find the fabric cover of the 2 seat cushions and put the seat cushions into the cover as shown in the picture to complete the assembly of 3.

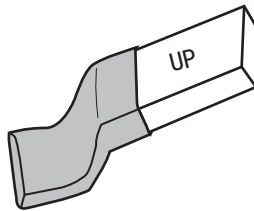


3 cushion x 2


Step 1: As shown in the figure, connect and fix the left and right handrails with the front and rear frame plates with screws, gaskets and connecting pieces

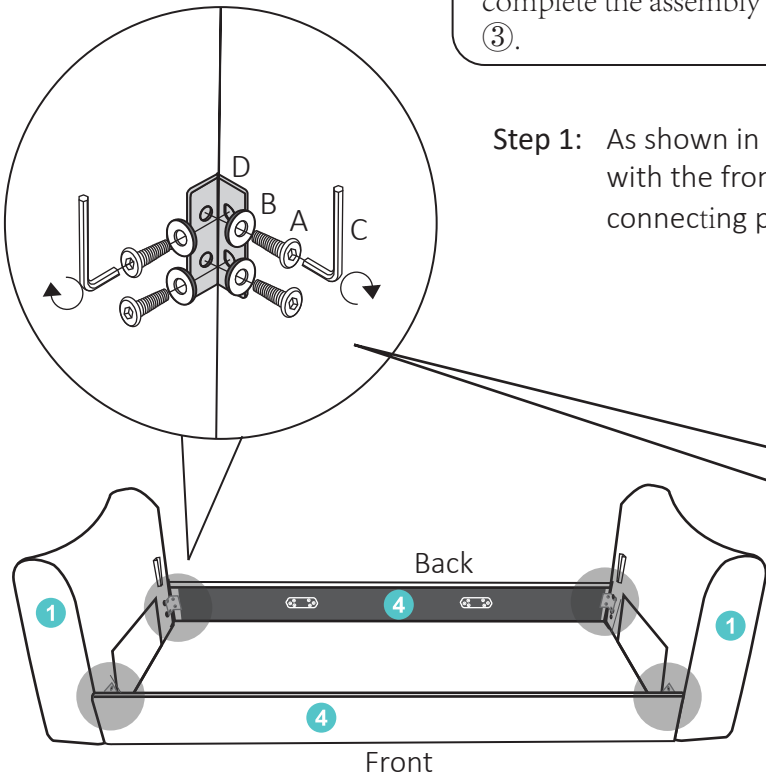


! Note: The holes on both sides of the connector are divided into round holes and vertical holes. The round holes should be connected with the front frame plate or the rear frame plate, and the vertical holes should be connected with the handrails. The four fixed points should follow this principle.

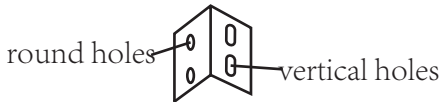


Step 2: Insert the metal connecting pieces at both ends of the center bar into the connecting seats of the front and rear frame plates

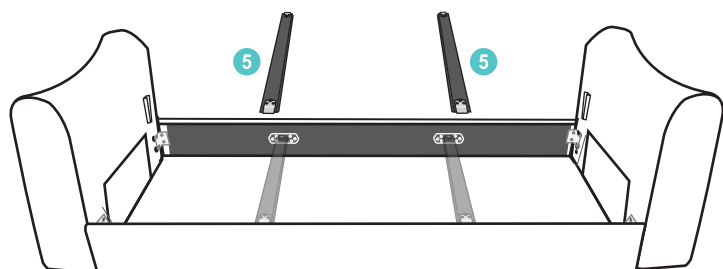


Step 3: Lay the support plate flat over the frame

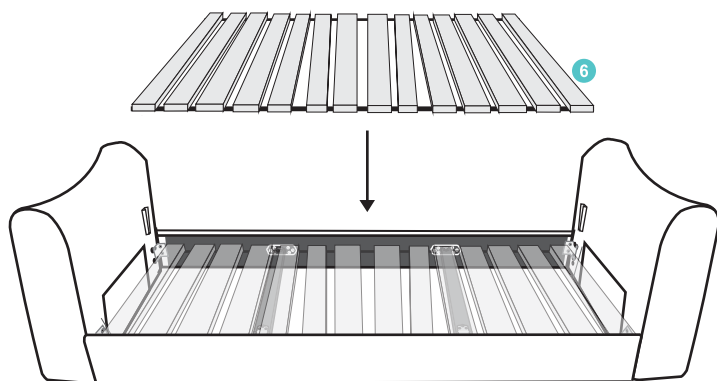

Step 4: Insert backrest vertically into the frame, Note whether the connector is inserted

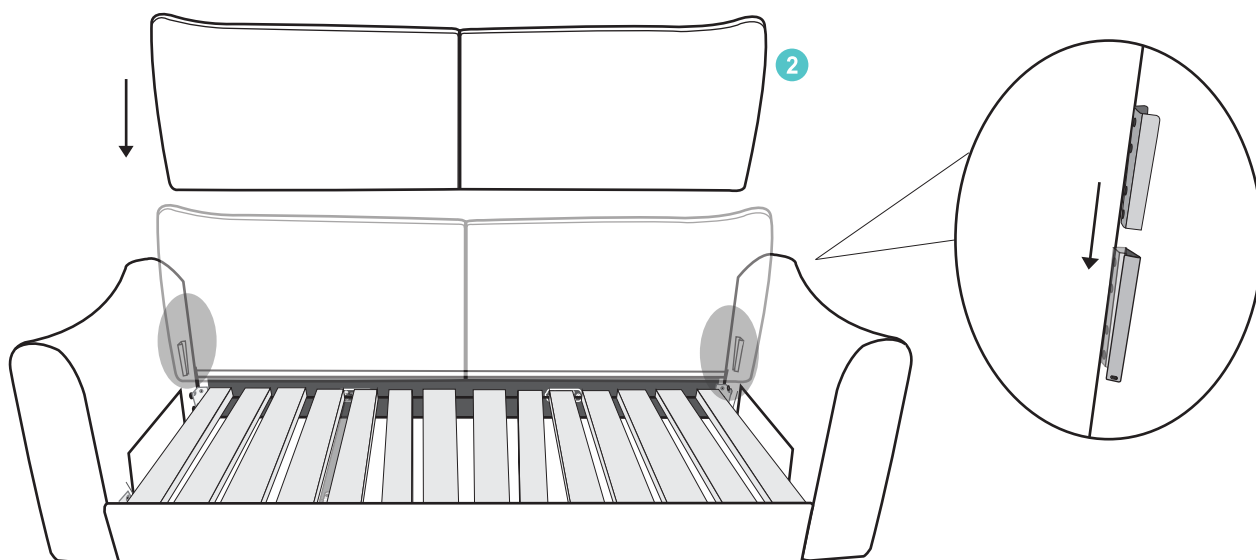

Step 5: Tighten the screws on all legs as shown

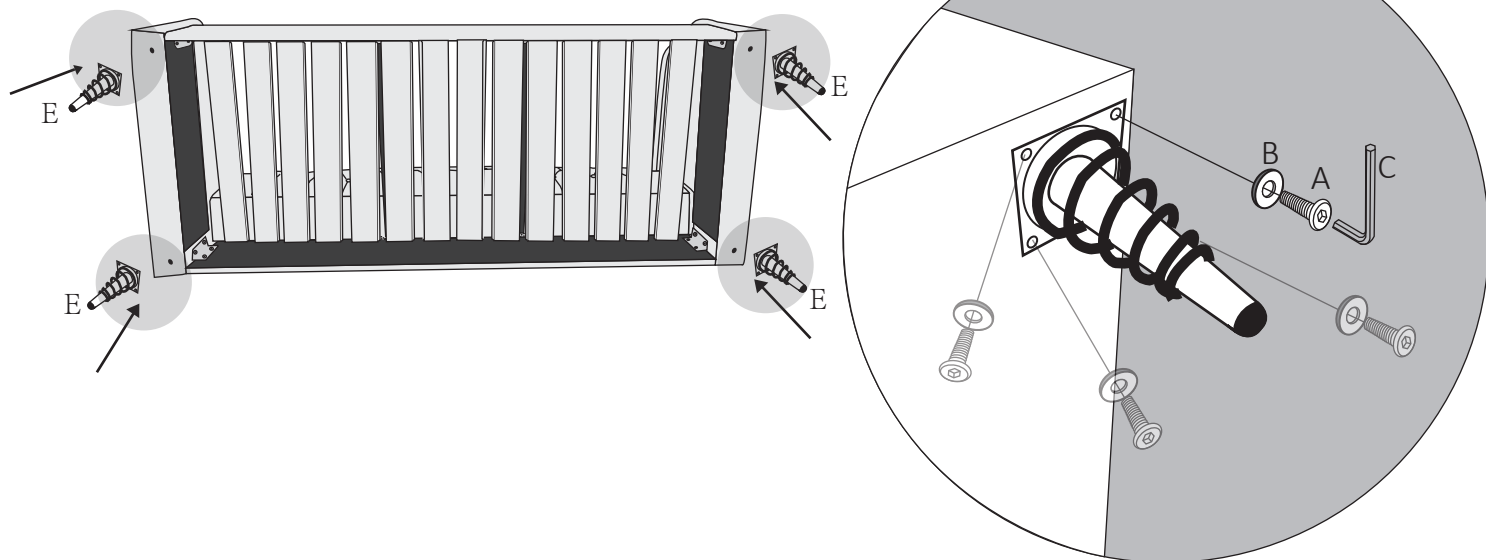

Step 6: place the cushions in order as shown in the picture. Then match the sofa pillows to complete the installation.

