












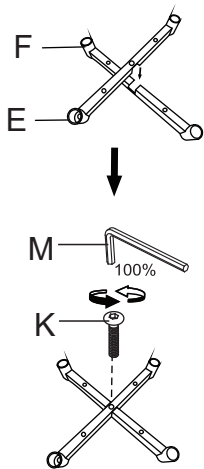


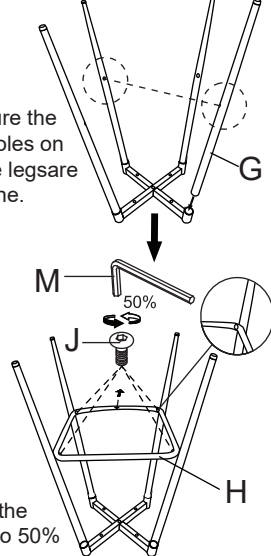
Please check that all fittings are available and in good condition before assembly.  
If you have any questions, please contact us , we will solve your problem in the first time.

## PARTS LIST

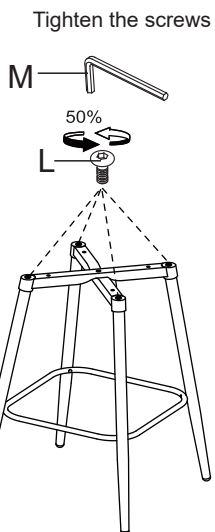
A*1 	H*1 
B*1 	I*8  M6*16mm
C*1 	J*8  M6*25mm
D*1 	K*4  M6*30mm
E*1 	L*4  M8*16mm
F*1 	M*1 
G*4 	

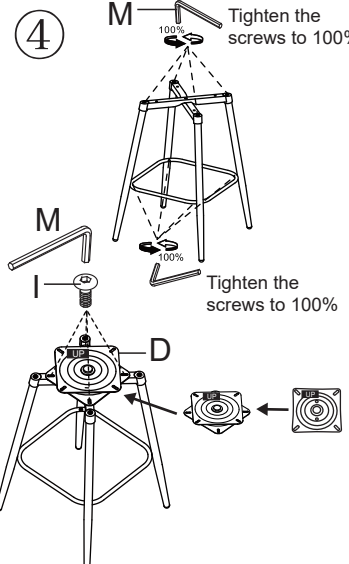
## ASSEMBLE INSTRUCTION

- 

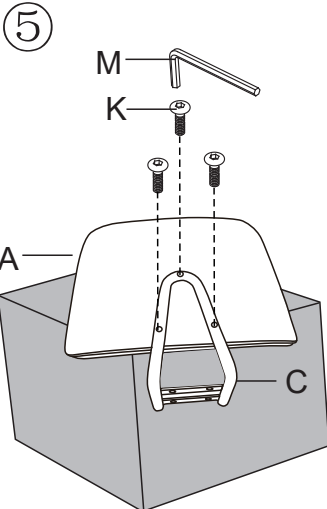
Tighten the screws to 100%
- 

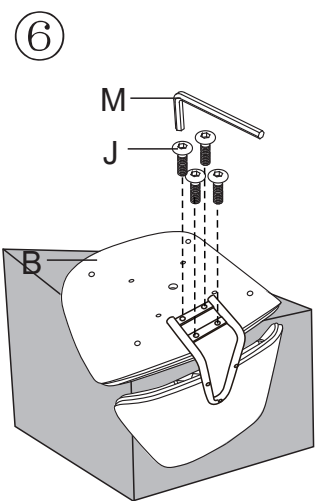
Make sure the screw holes on opposite legs are in one line.

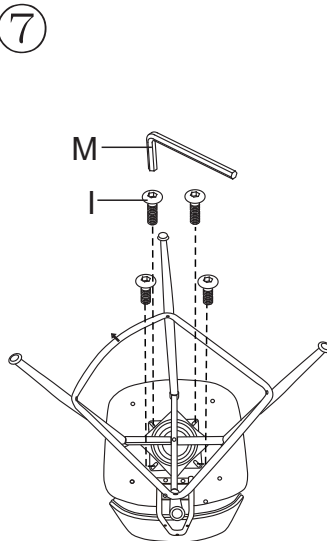
Tighten the screws to 50%
- 

Tighten the screws to 50%
- 

Tighten the screws to 100%

Tighten the screws to 100%
- 

Tighten the screws to 100%
- 

Tighten the screws to 100%
- 

Tighten the screws to 100%
- 