

1. REMOVE THE 4 LEGS, INSERT INTO THE SIDES SLOTS & UNLATCH BOTH SIDES



2. LOWER THE LARGEST SIDE OF THE XTRABED DOWN 1st



3. UNHOOK THE SAFETY CHAIN & LOWER THE SMALLER SIDE 2nd



4. UNBUCKLE THE RETAINER BELTS AND UNFOLD THE COOL GEL MEMORY FOAM TOPPER




1. FOLD THE TOPPER BACK ONTO THE LARGEST SIDE AND CINCH UP THE CONNECTING BELTS



2. RAISE THE SMALLER SIDE UP 1st & RECONNECT THE SAFETY CHAIN



3. LIFT THE LARGE SIDE 2nd & LATCH BOTH SIDES TOGETHER

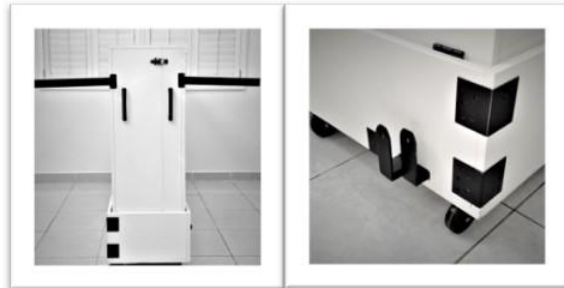

4. REMOVE THE 4 LEGS & INSERT BACK INTO THE STORAGE SLOTS