

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: GDAFI01 NAME: Rivet Fire Screen

MATERIAL TYPE: FINISH:
Iron Natural Iron/Antique

ITEM NET WEIGHT: 56 LBS

PARTS INCLUDED:

Screen	Qty: 1 Pc
Feet	Qty: 2 Pc
Allen Screws	Qty: 2 Pc
Allen Wrench	Qty: 1 Pc

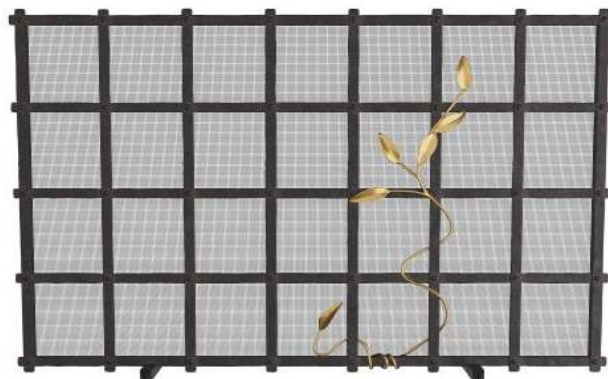

TO ASSEMBLE:

1. This item has two feet which need to be attached using the hardware and tools provided.
2. Place the fire screen downward faced so the bottom part comes up for leg fitting.
3. The feet have been marked A and B. The corresponding locations for these feet are also marked A and B on the bottom of the frame. Match the direction of the letters on the frame and feet.
4. Place screw through hole of foot into frame and tighten with wrench by rotating it clockwise direction.
5. While fixing the feet do not tighten the Allen screws completely right away. Leave the screws little loose and move the feet to ensure that they settle correctly in the slot for the frame. Gradually tighten both feet ensuring that they are correctly mounted.
6. Stand the screen upright to check that it stands vertical. If required press down gently to achieve proper alignment. You may have to loosen screws on feet to ensure proper fitting if the frame does not stand upright.
7. Tighten the screws completely to finish the assembly and rotate the screen to keep it on its feet.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS