


AYS900-RH/AYS916-RH

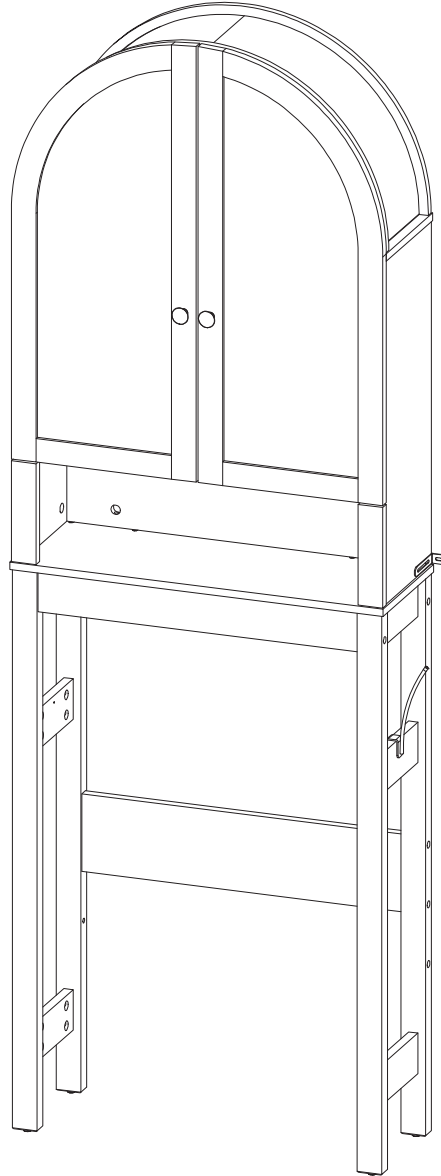

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

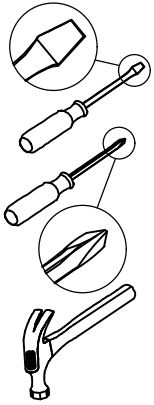

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

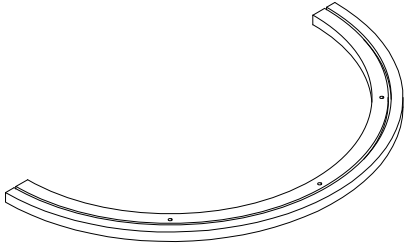


1

TOP MOLDING ,FRONT
Qty:1

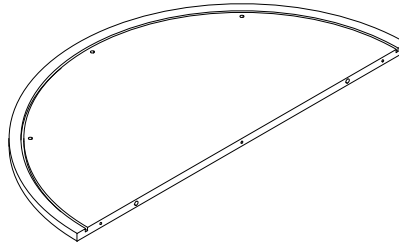


2

UPPER BACK
Qty:1

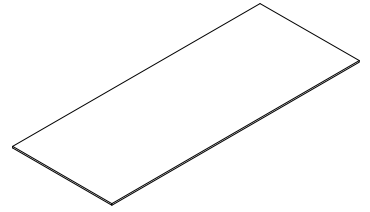


3

TOP
Qty:2




4

RAIL
Qty:3

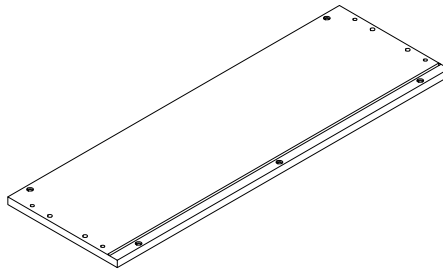


5

FIXED SHELF
Qty:1

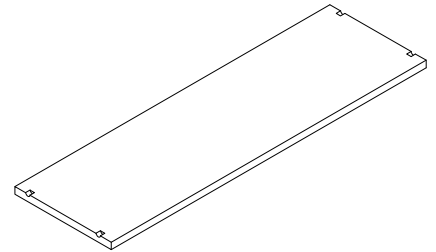


6

ADJUSTABLE SHELF
Qty:1

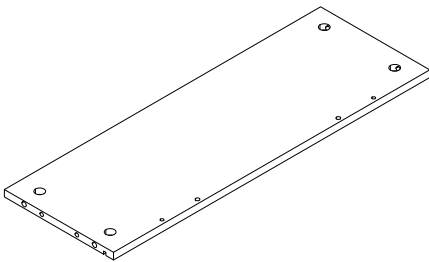


7

FIXED SHELF
Qty:1

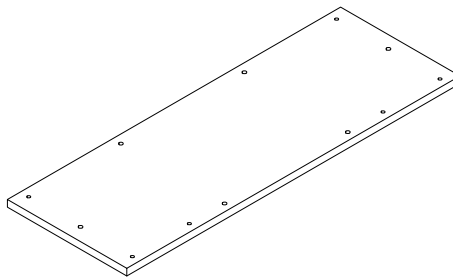


8

MIDDLE PANEL
Qty:1

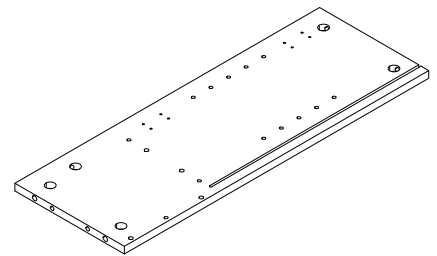


9

UPPER LEFT SIDE PANEL
Qty:1

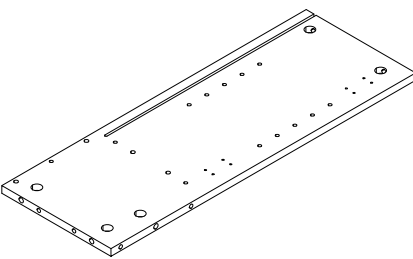


10

UPPER RIGHT SIDE PANEL
Qty:1

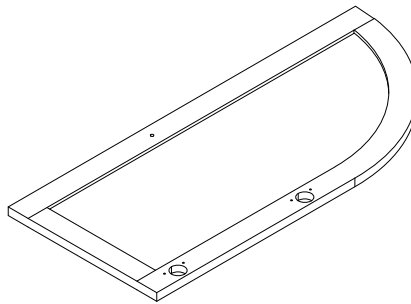

11

LEFT DOOR
Qty:1

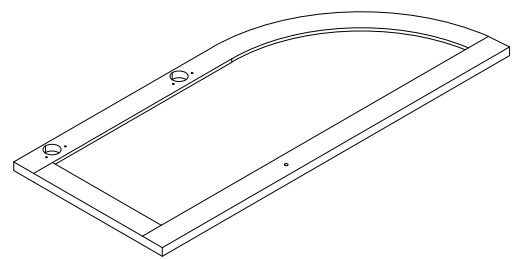


12

RIGHT DOOR
Qty:1


Board Identification

Not actual size

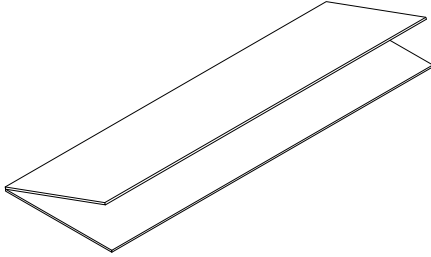


13

MIDDLE BACK PANEL
Qty:1

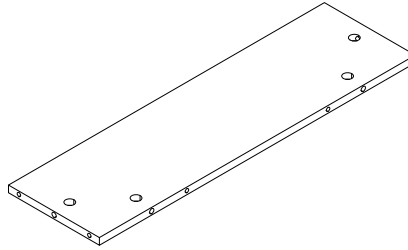


14

LOWER BACK PANEL
Qty:1

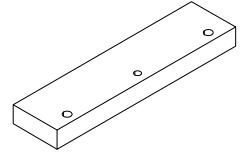


15

RAIL
Qty:2

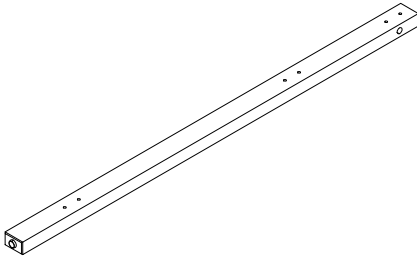


16

FRONT LEFT VERTICAL PANEL
Qty:1

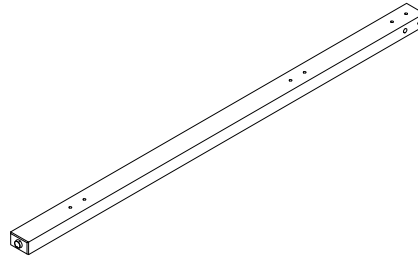


17

FRONT RIGHT VERTICAL PANEL
Qty:1

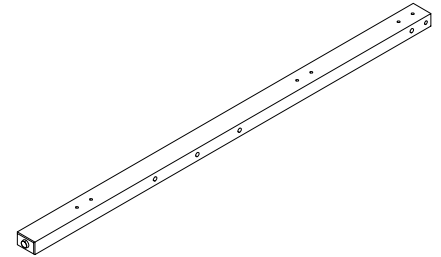


18

REAR LEFT VERTICAL PANEL
Qty:1

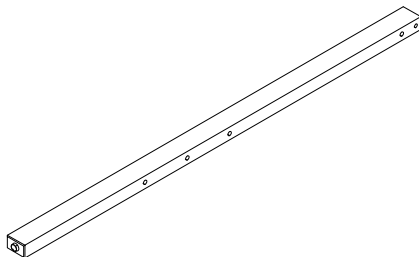


19

REAR RIGHT VERTICAL PANEL
QTY:1

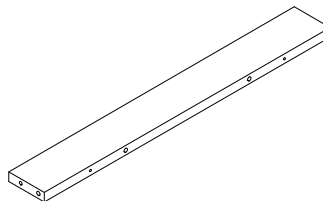


20

HORIZONTAL RAIL
Qty:2

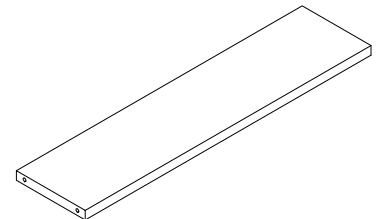


21

REAR LOWER HORIZONTAL RAIL
Qty:1

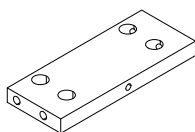


22

SIDE HORIZONTAL RAIL
Qty:2

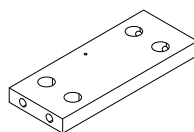

23

SIDE HORIZONTAL RAIL
QTY:2

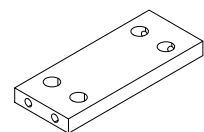


24


SIDE HORIZONTAL RAIL
QTY:2

Part List


Not actual size

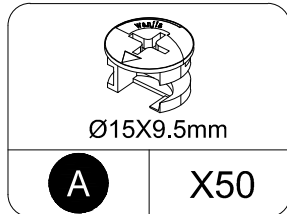


CAM LOCK
spare:3

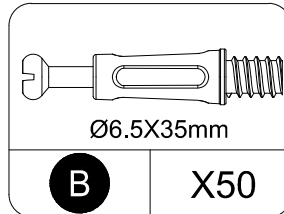


CAM BOLT
spare:3

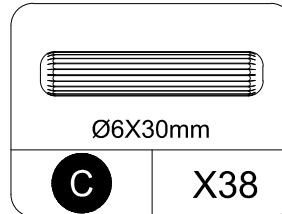


WOODEN DOWEL
spare:3

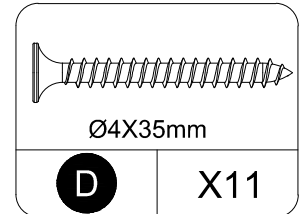


SCREW
spare:2

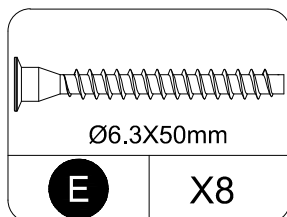


SCREW
spare:1

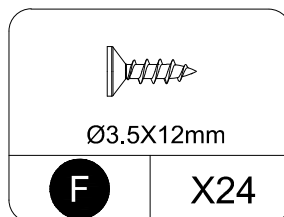


SCREW
spare:2

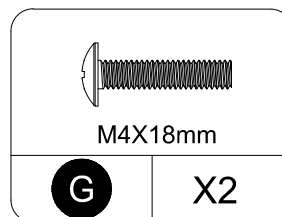


SCREW
spare:1

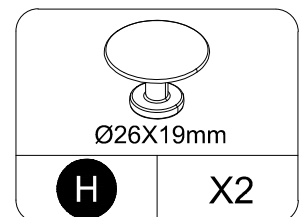


HANDLE

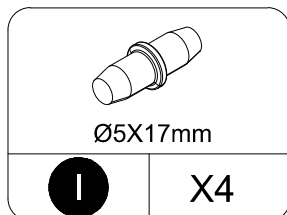


SHELF SUPPORT
spare:1

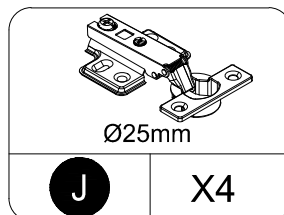


HINGE

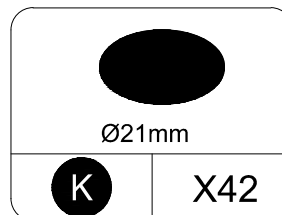


HOLE STICKERS
SPARE:3

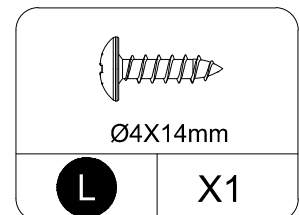


SCREW
spare:1

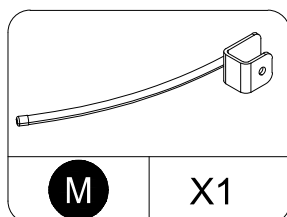


TOILET PAPER HOLDER

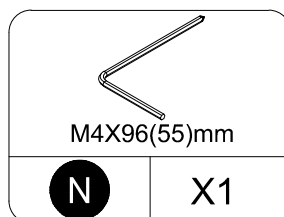


HEX KEY

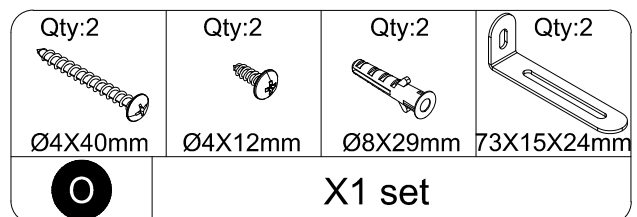

ANTI-TIPPING HARDWARE

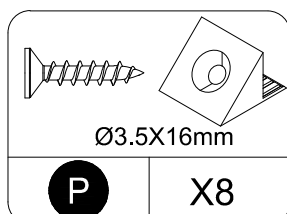

BACKBOARD BUCKLE

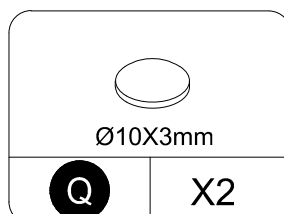

ANTI COLLISION PAD
spare:1


Part List

Not actual size


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

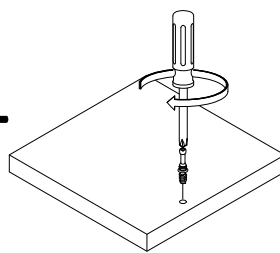

2

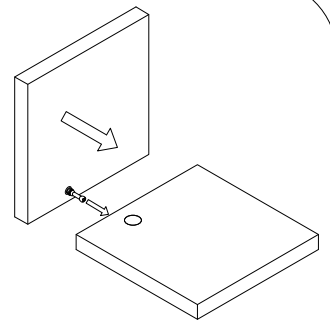


3

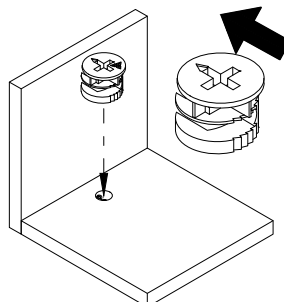


The opening must point toward the edge of the board

4







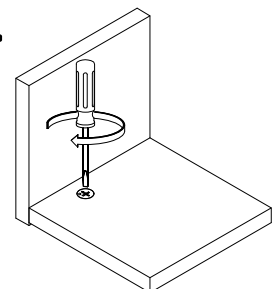


Board Identification





Not actual size

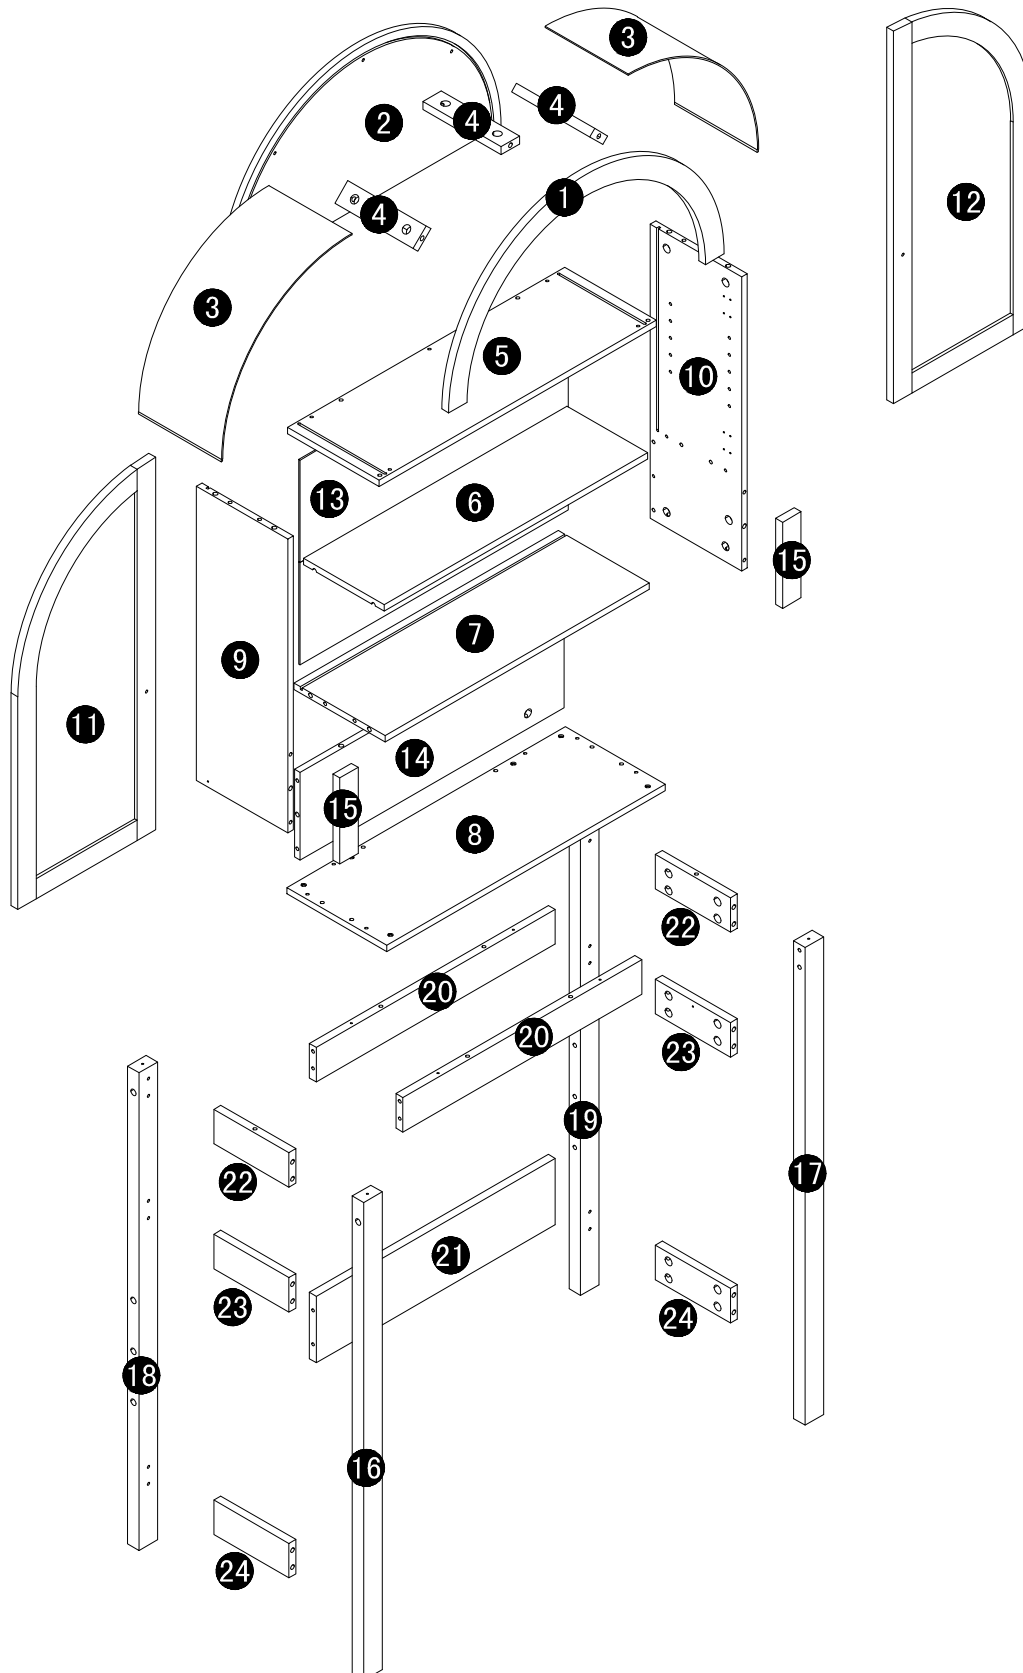




STEP1

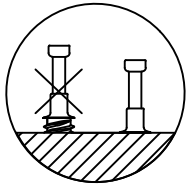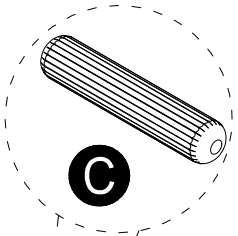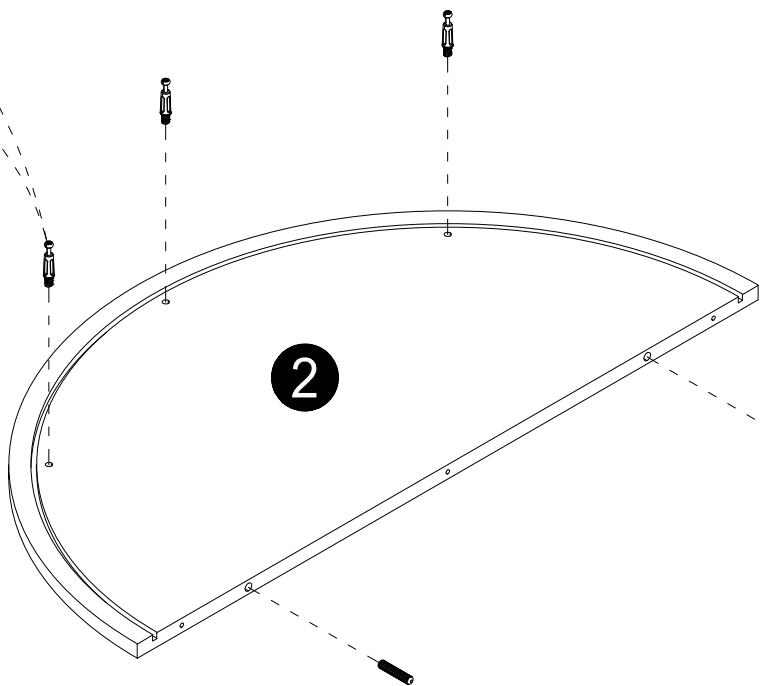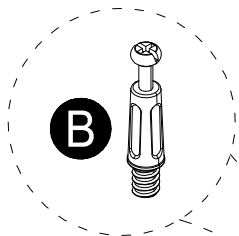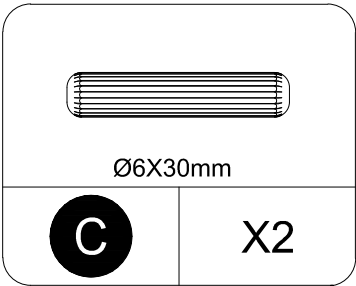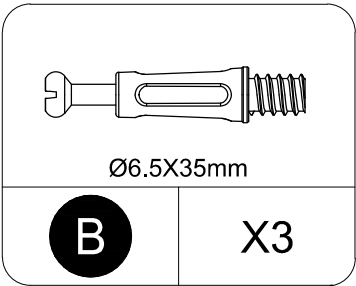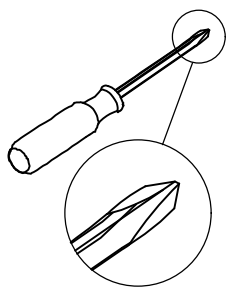





STEP2

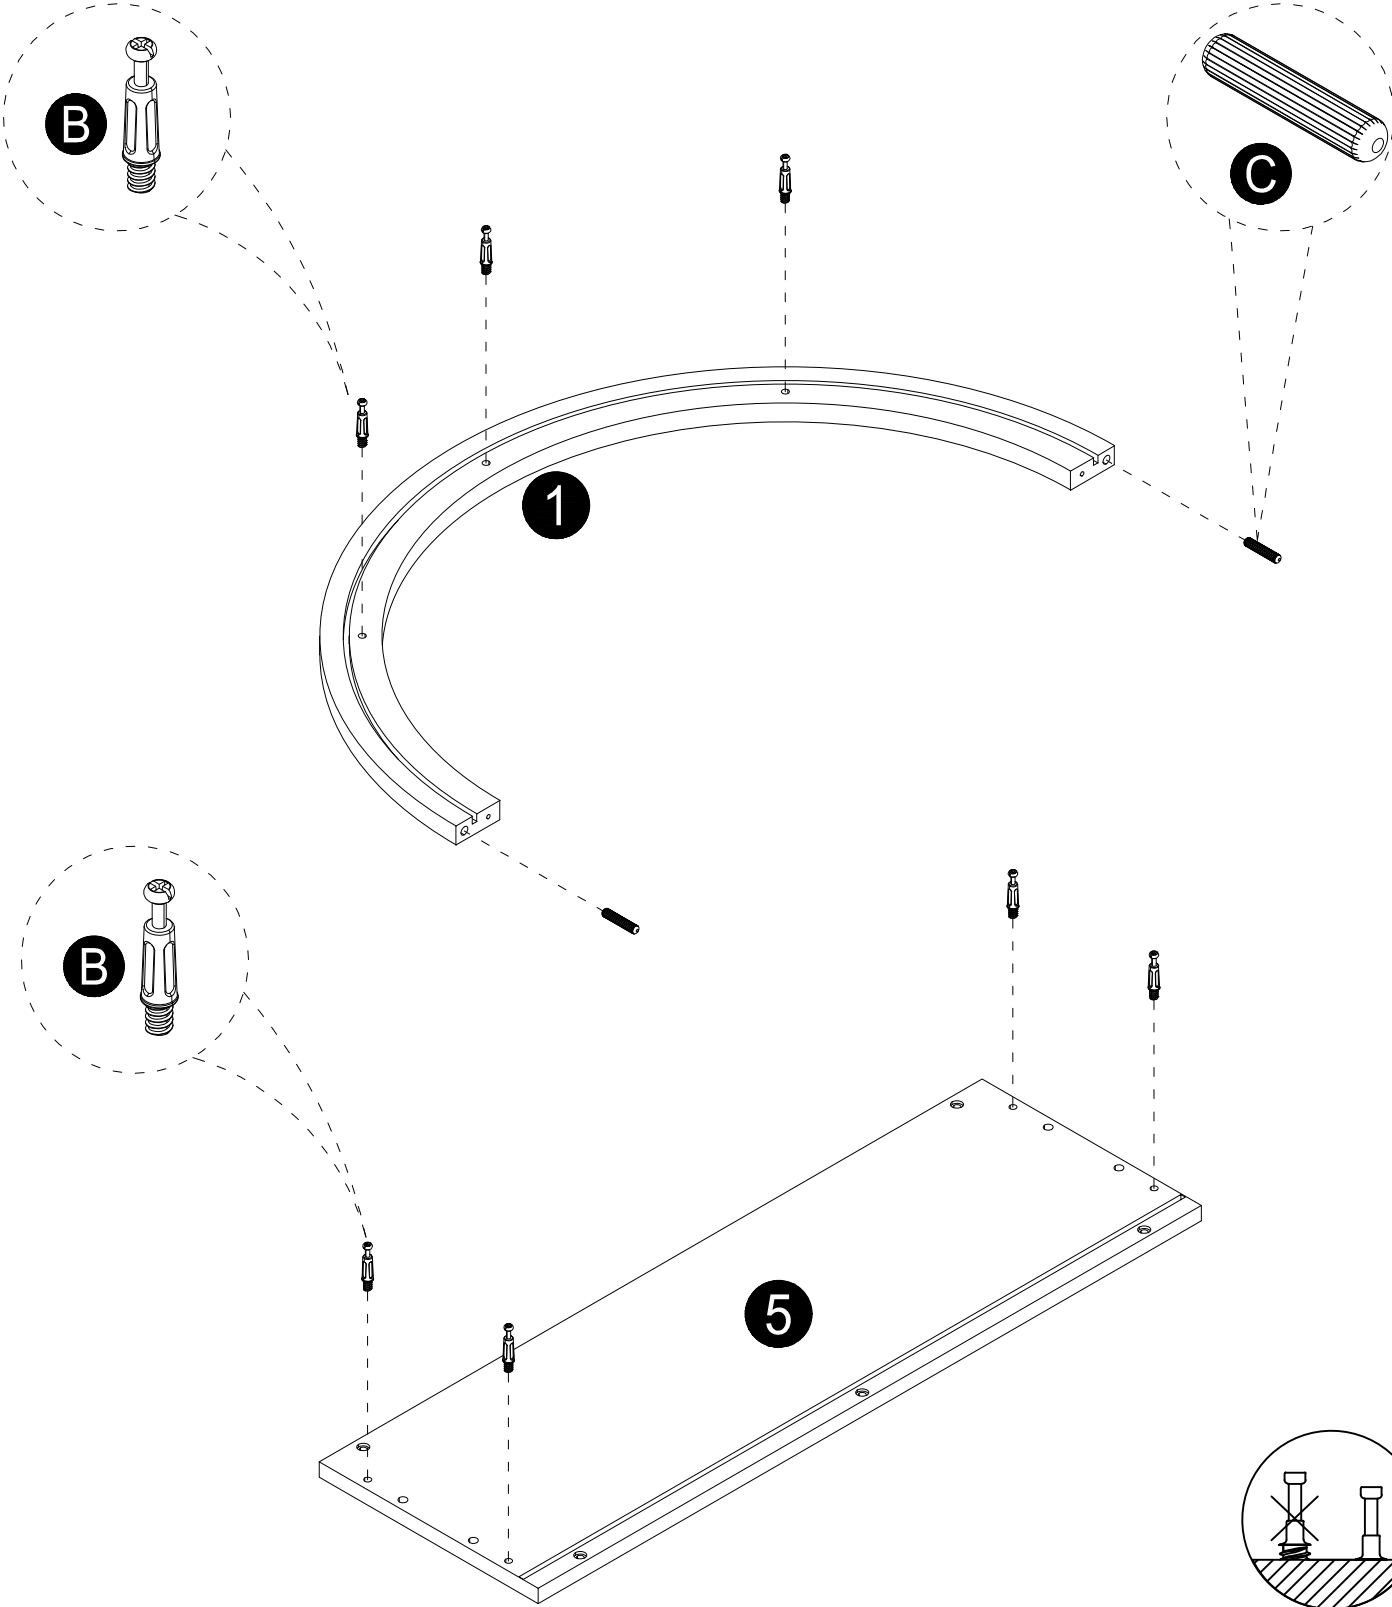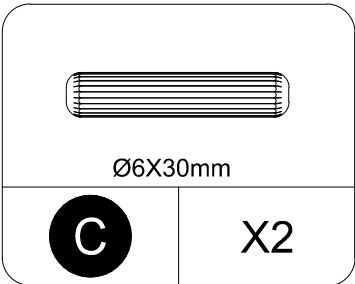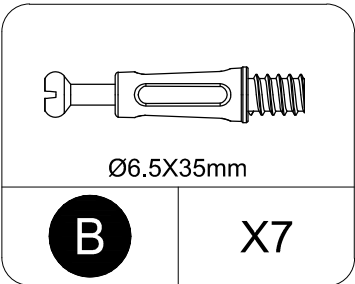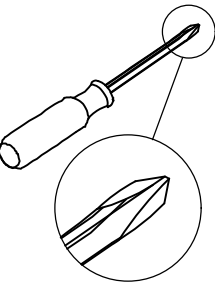


STEP3

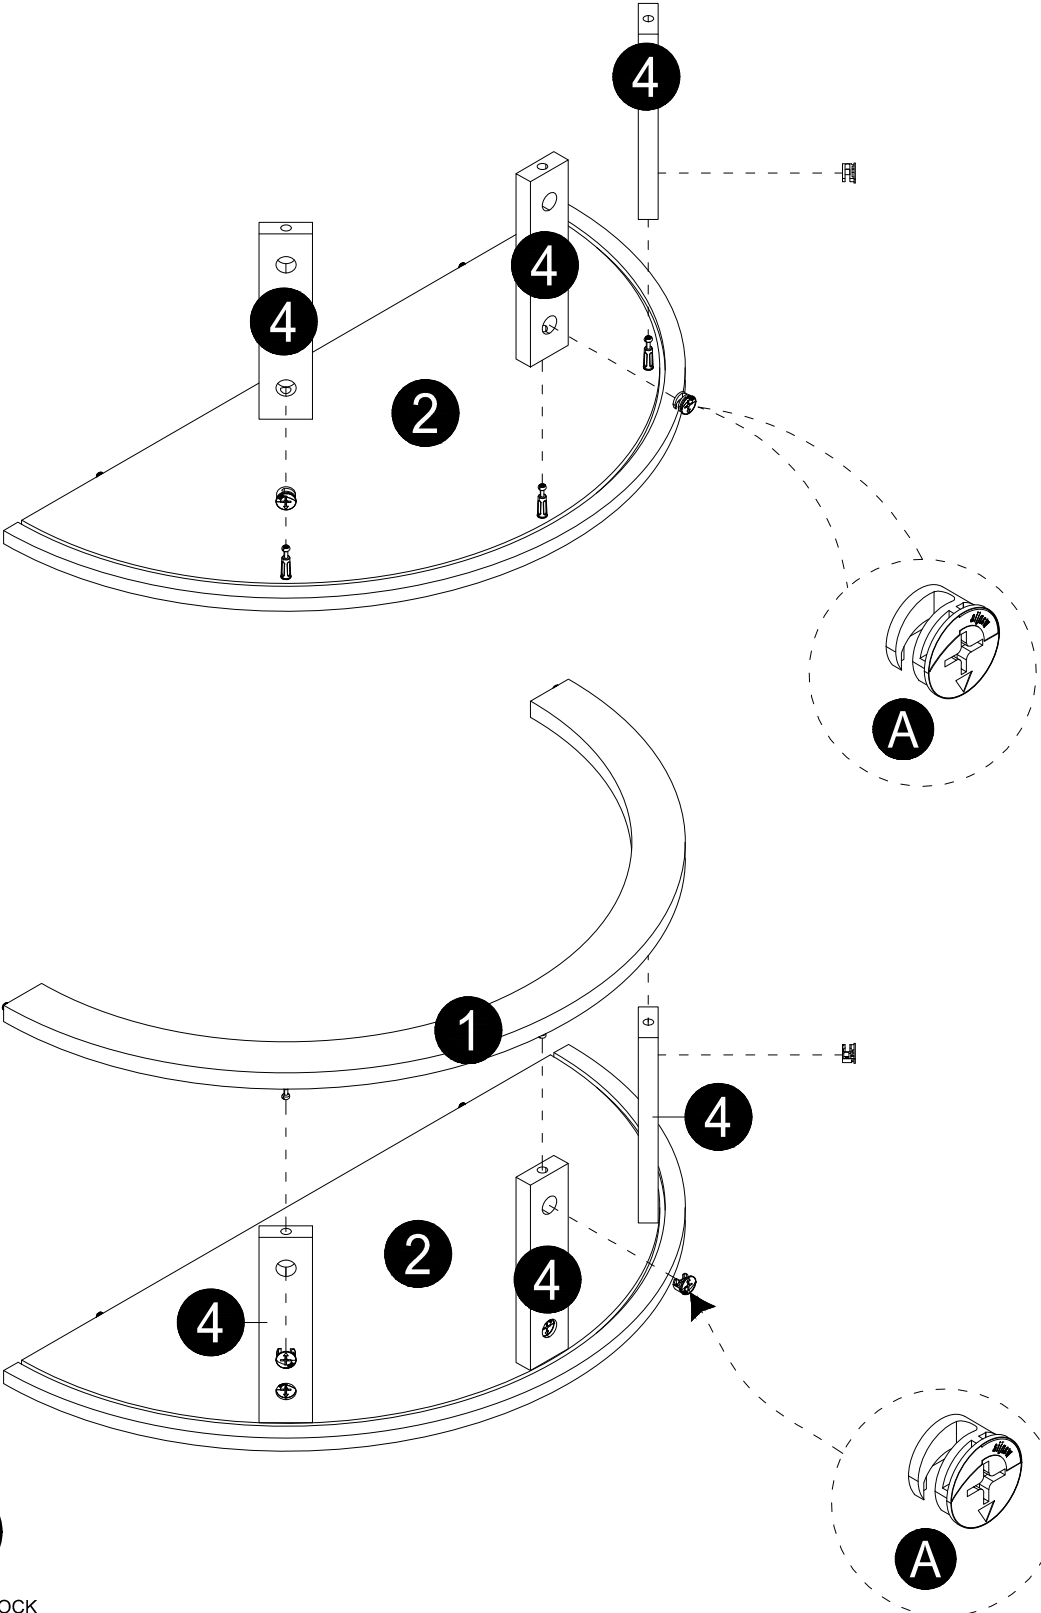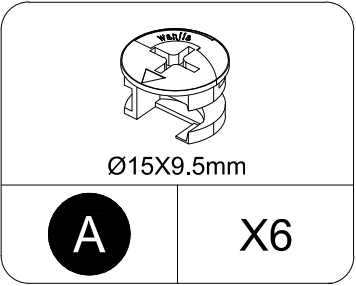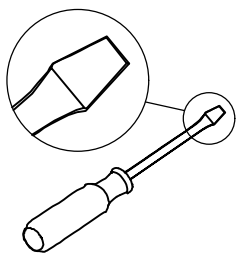


STEP4

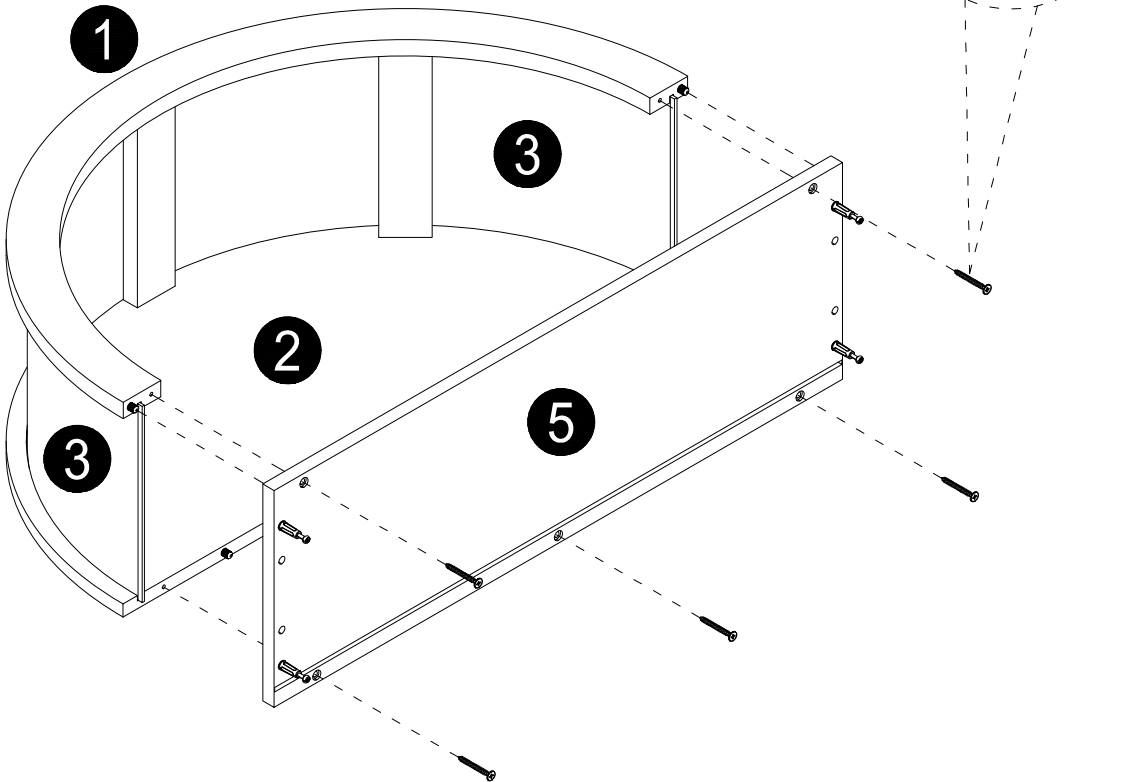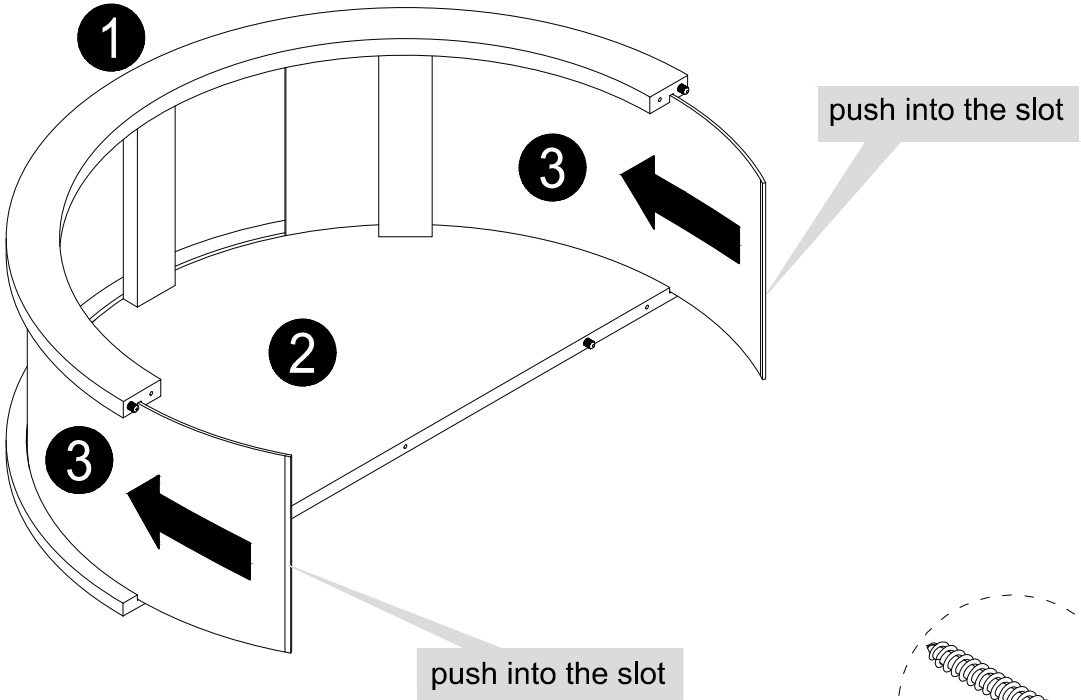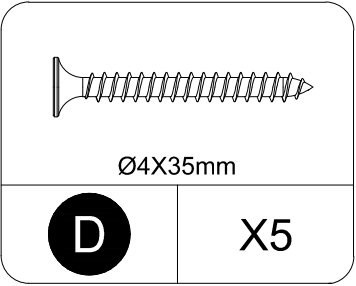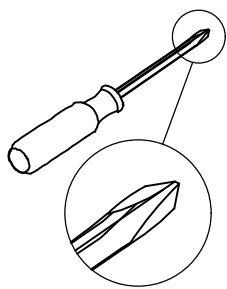





STEP5

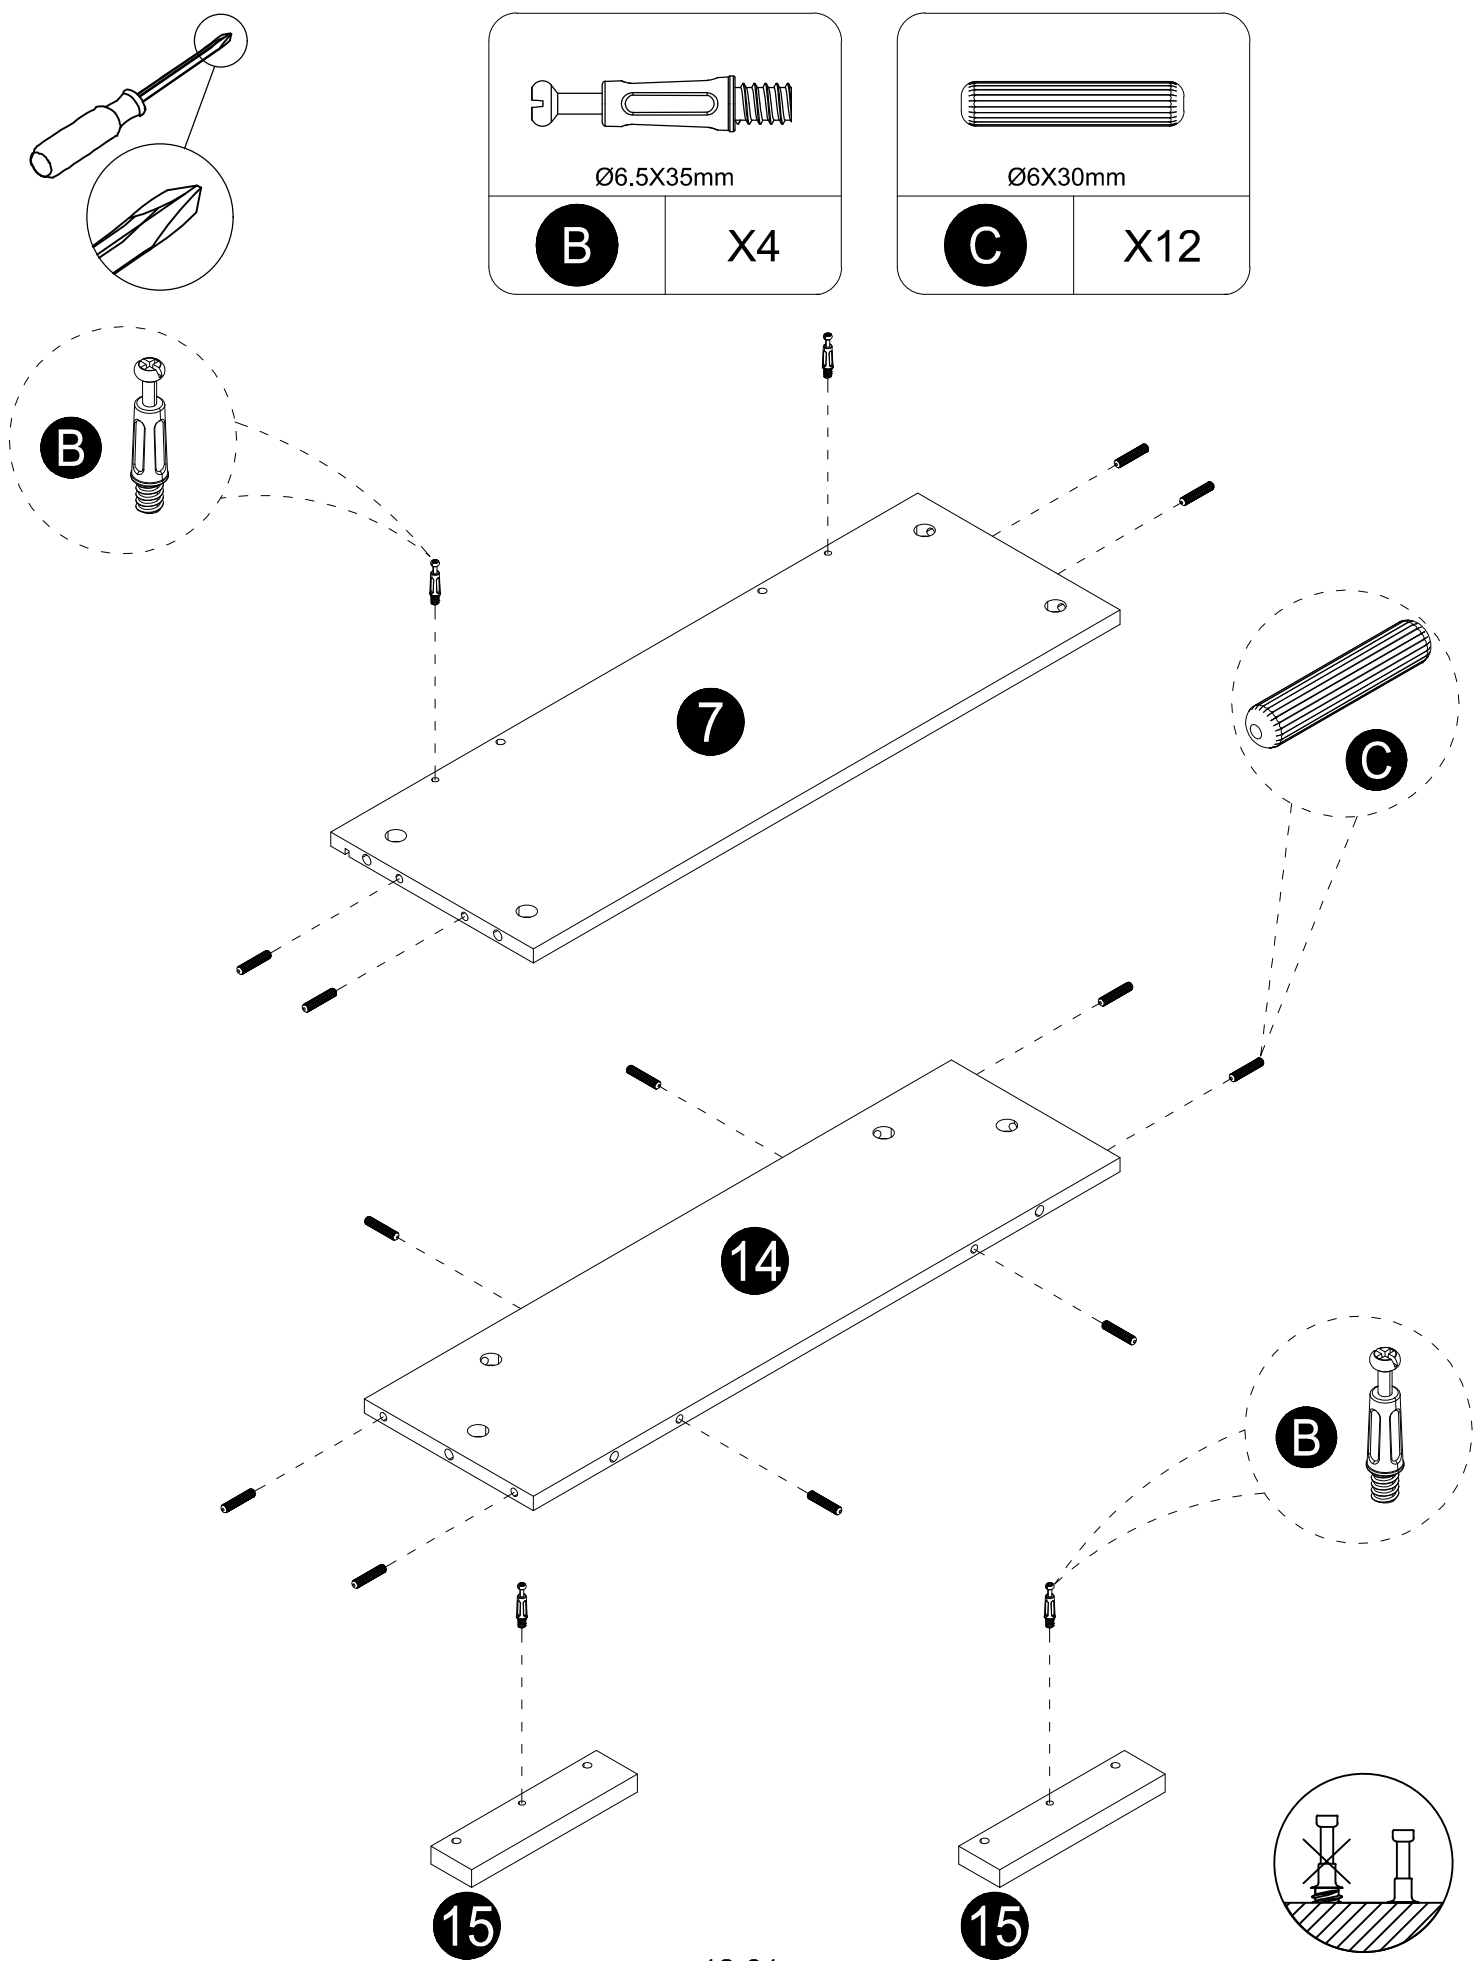


STEP6

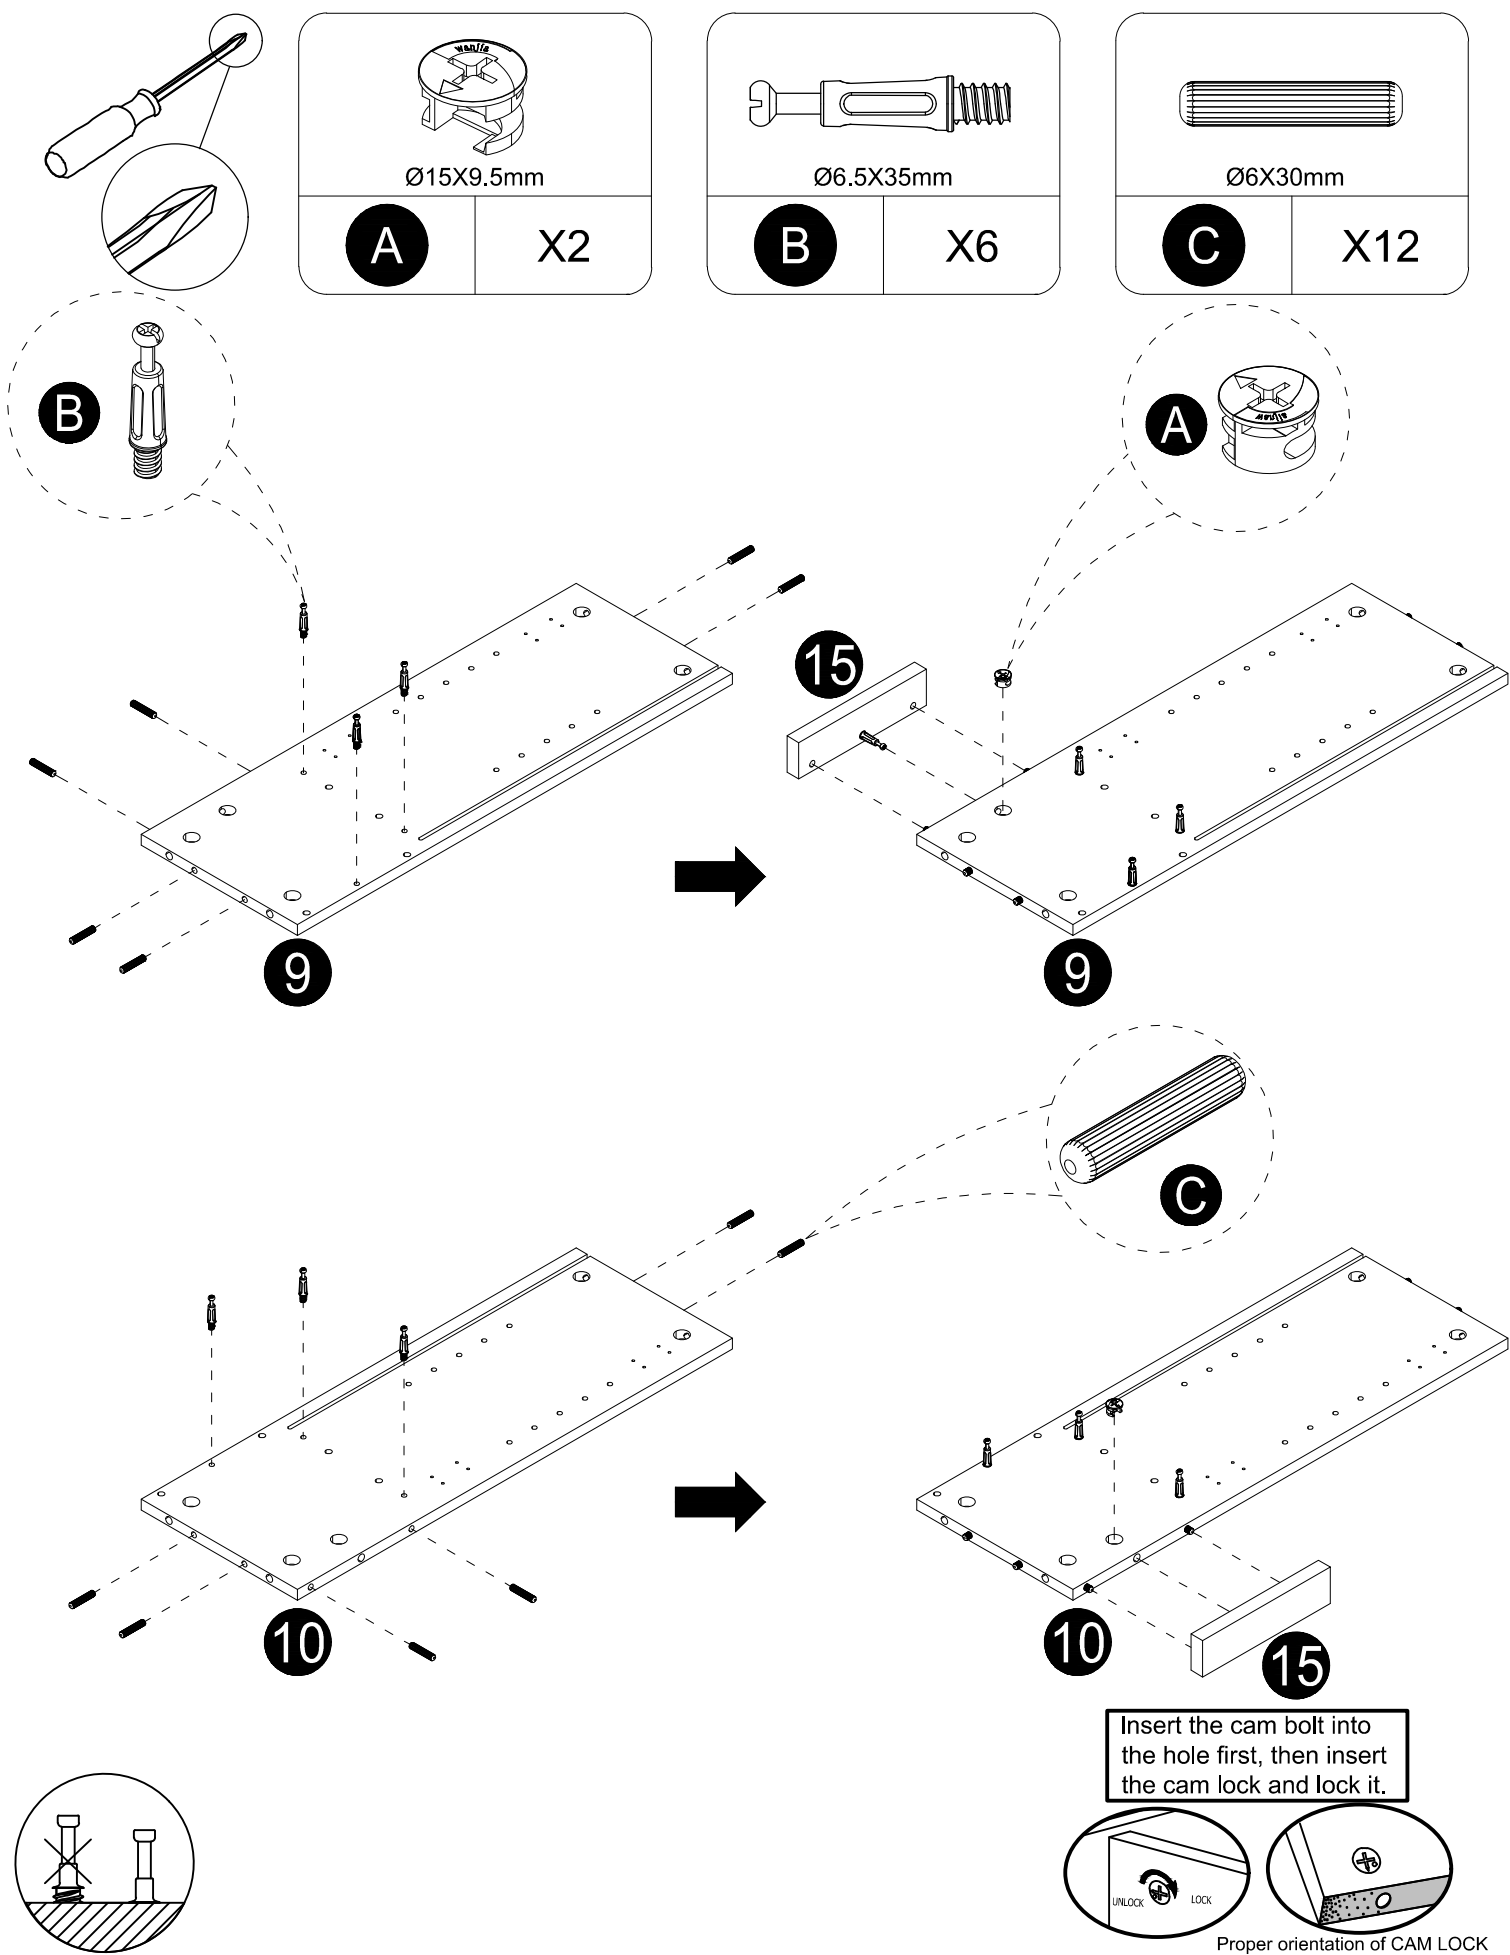

STEP7

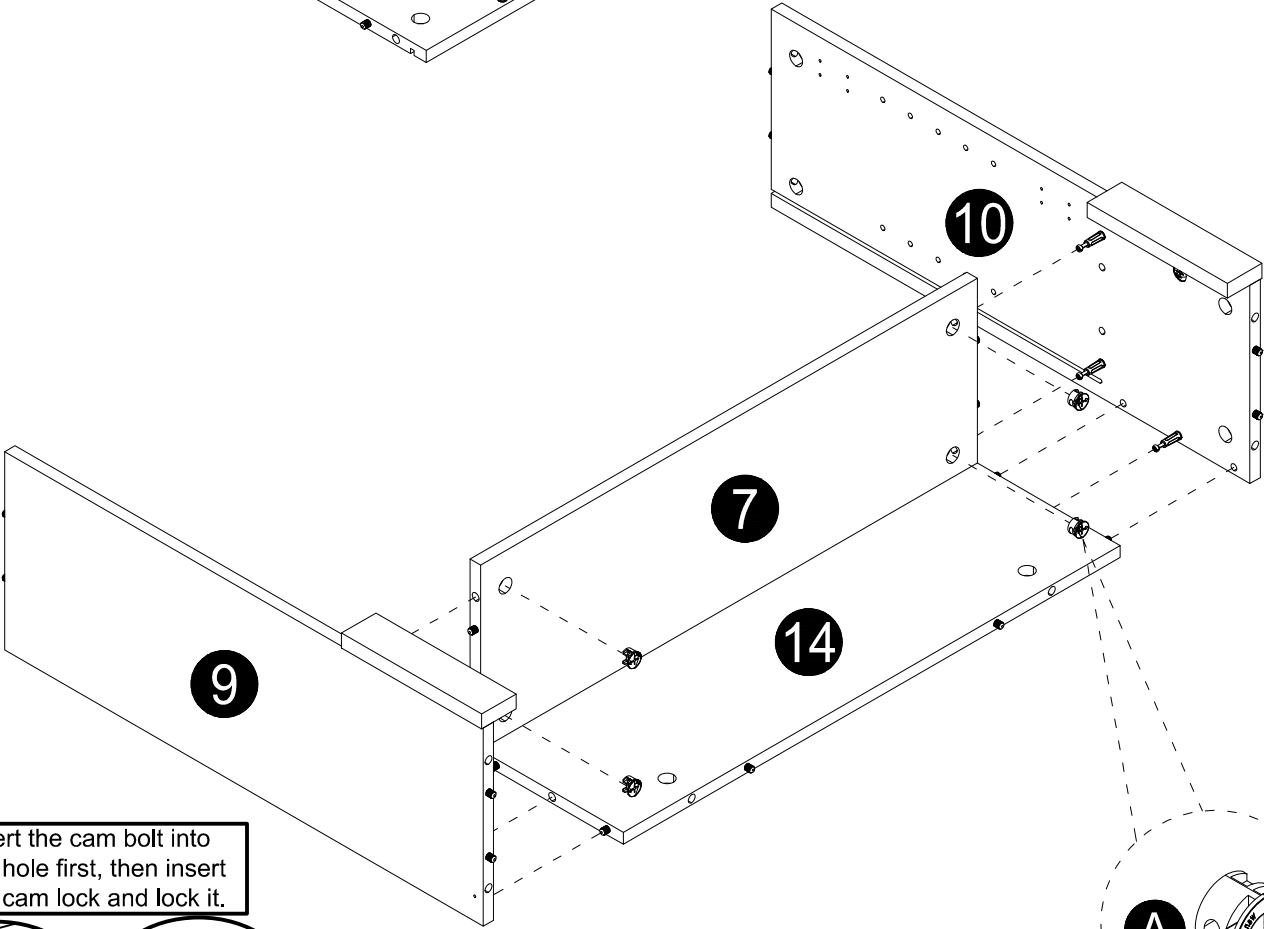
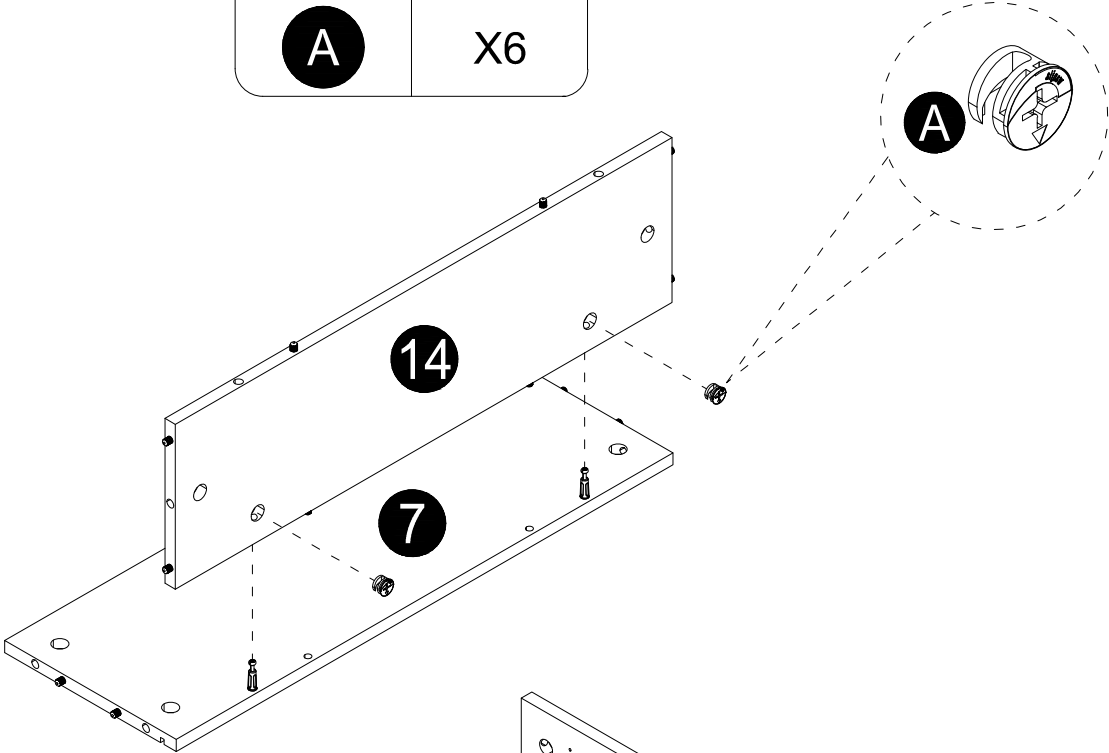
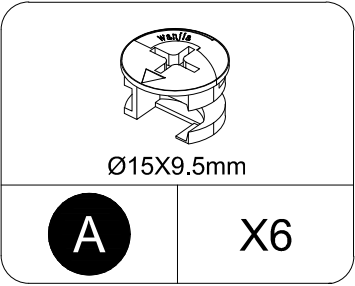
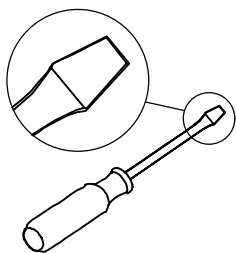


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

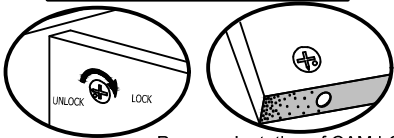


Proper orientation of CAM LOCK

STEP8

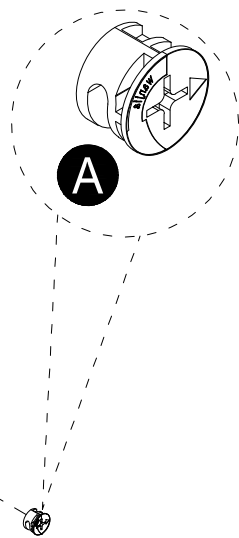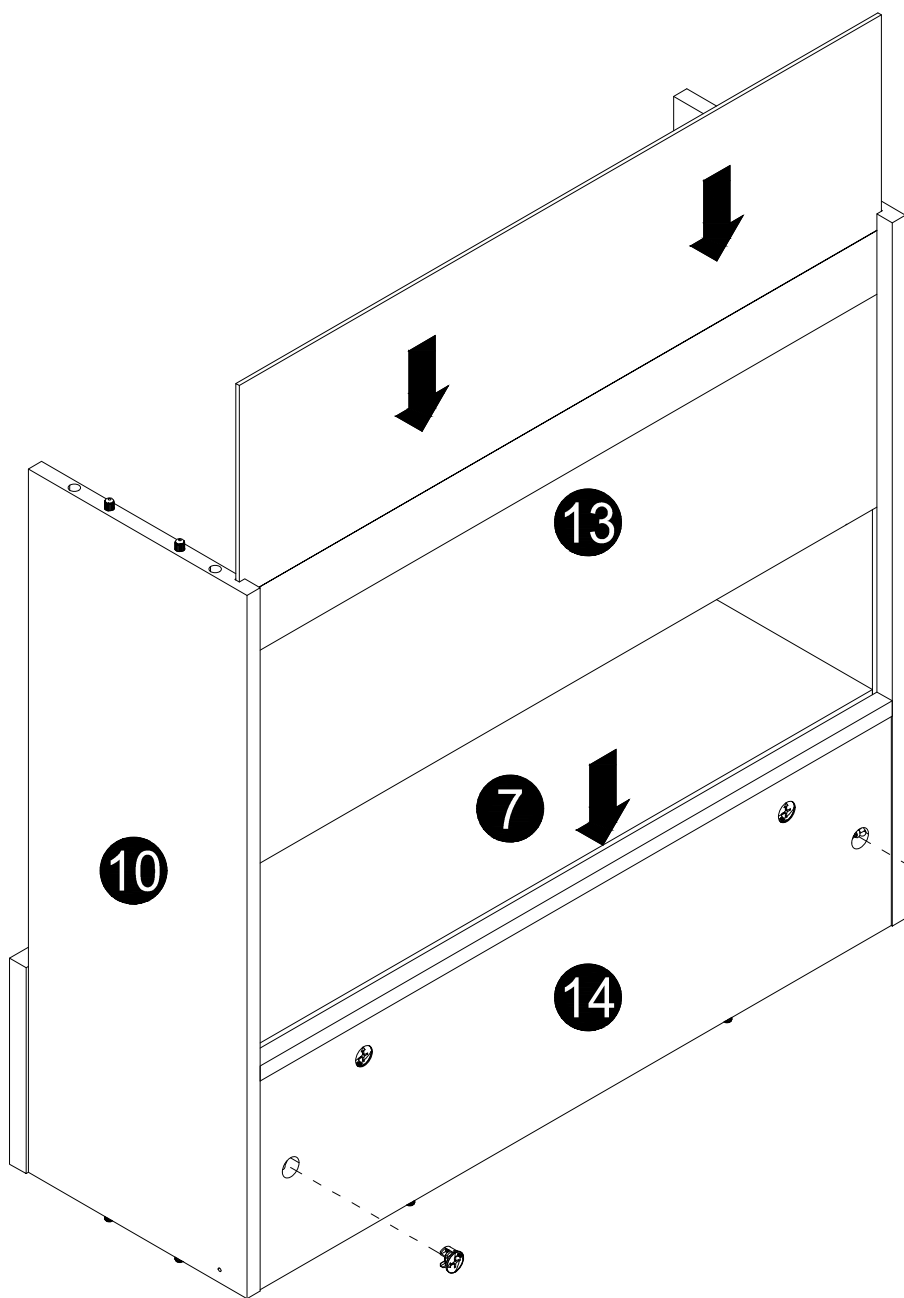
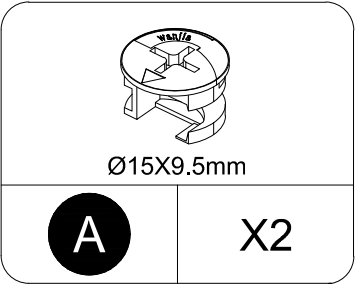
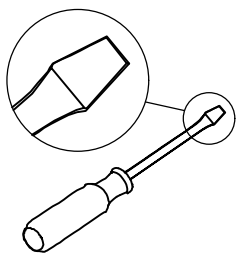


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

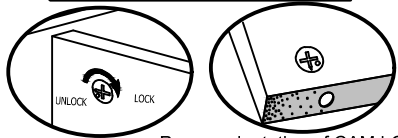


Proper orientation of CAM LOCK

STEP9

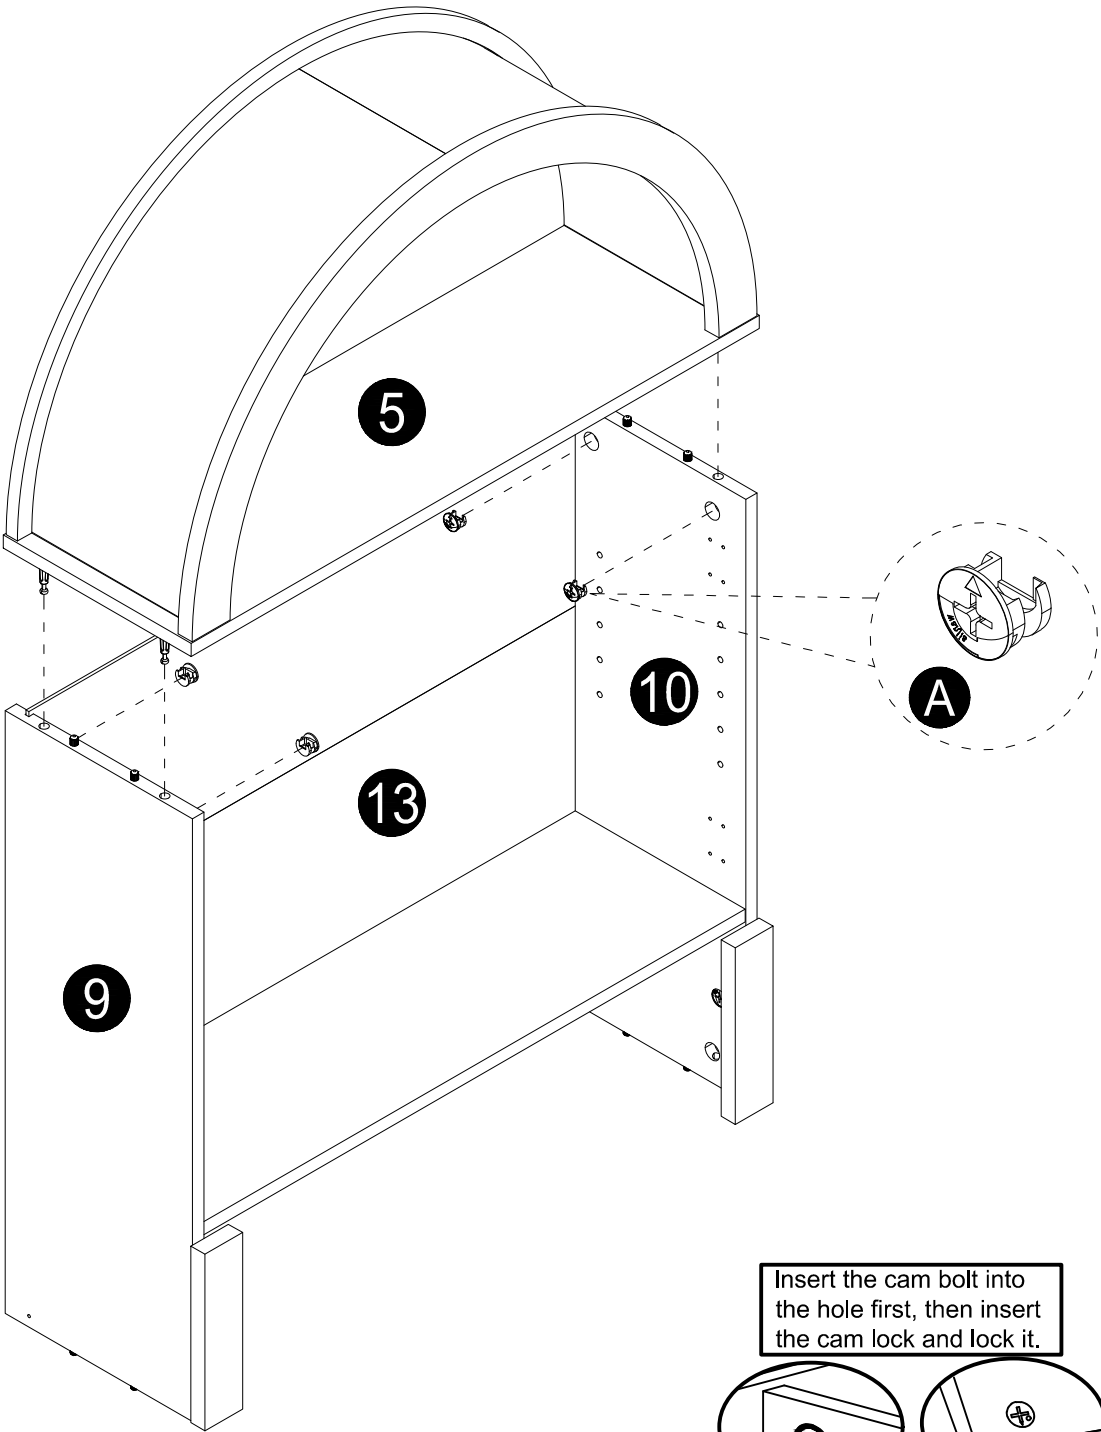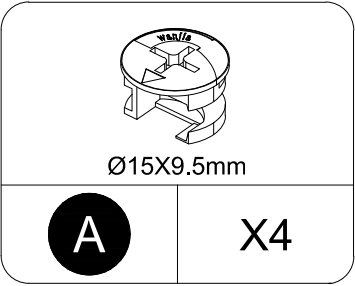
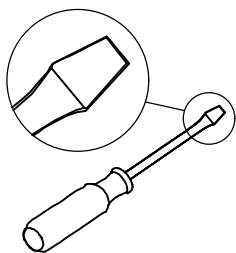


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

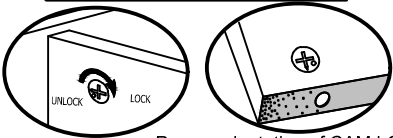


Proper orientation of CAM LOCK



STEP10

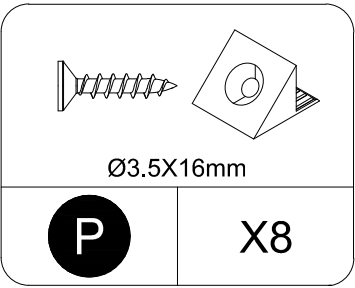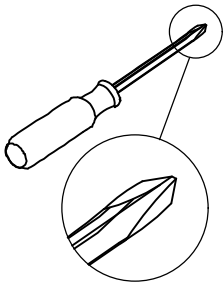






Step 1

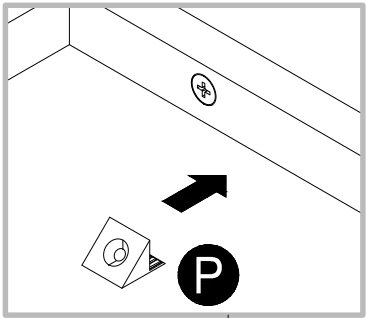



Step 2

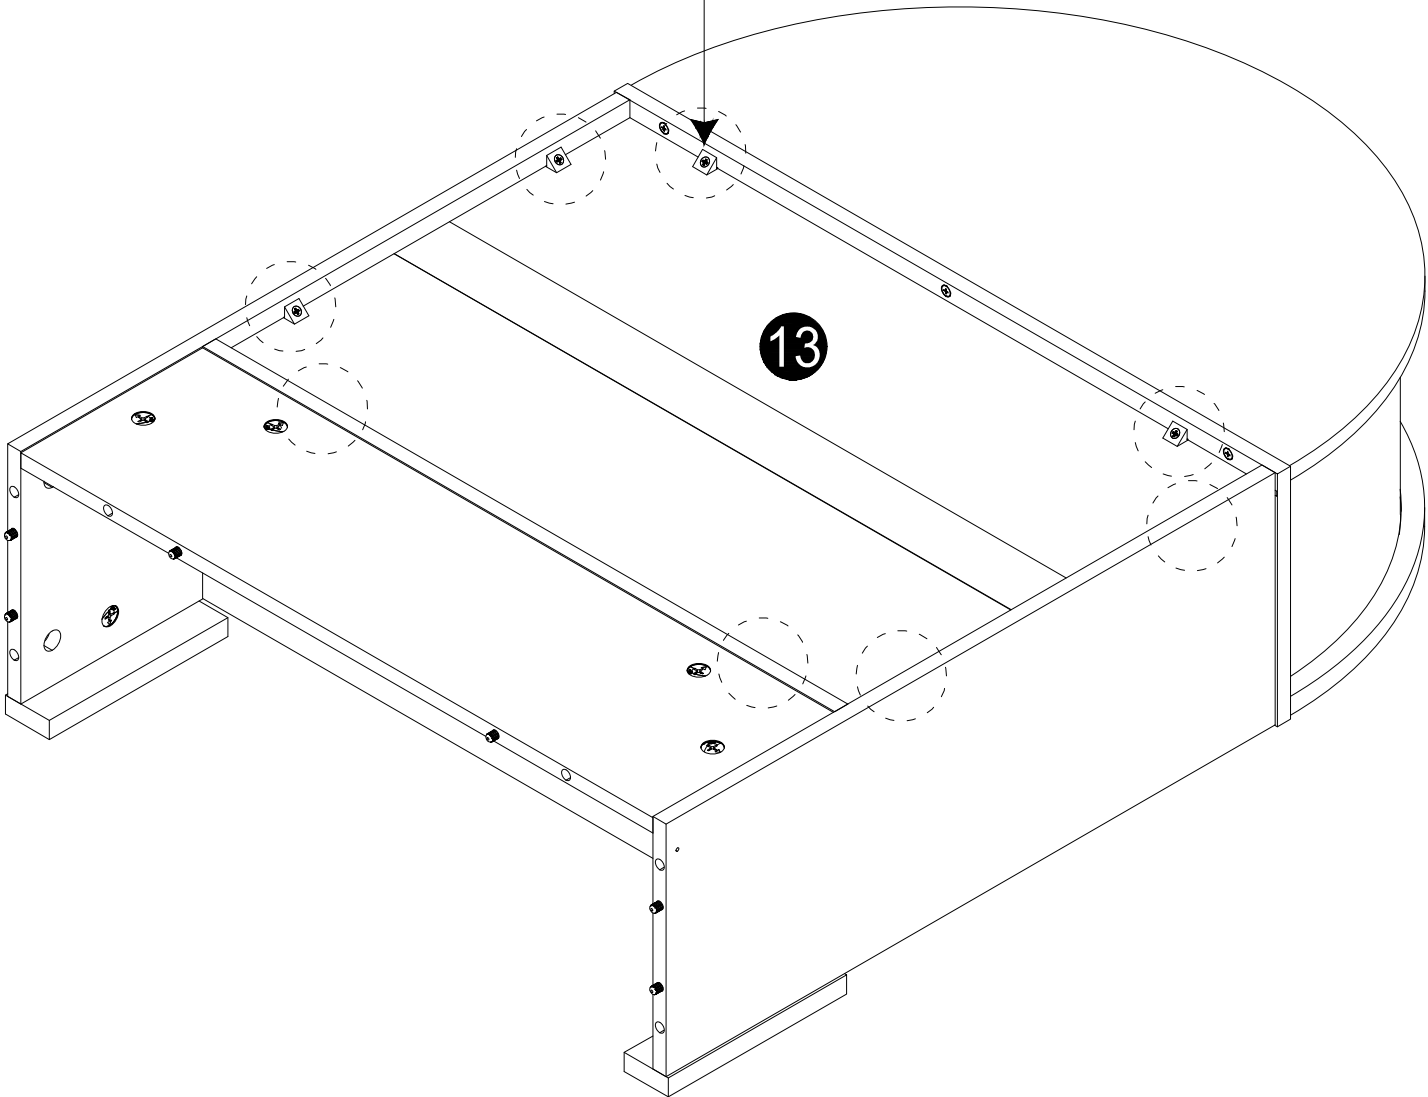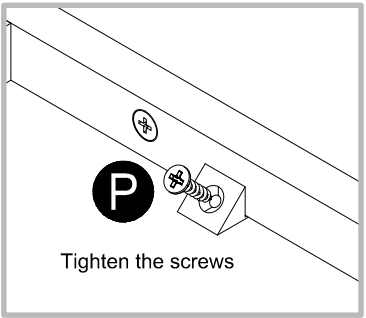


STEP11

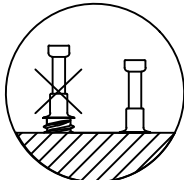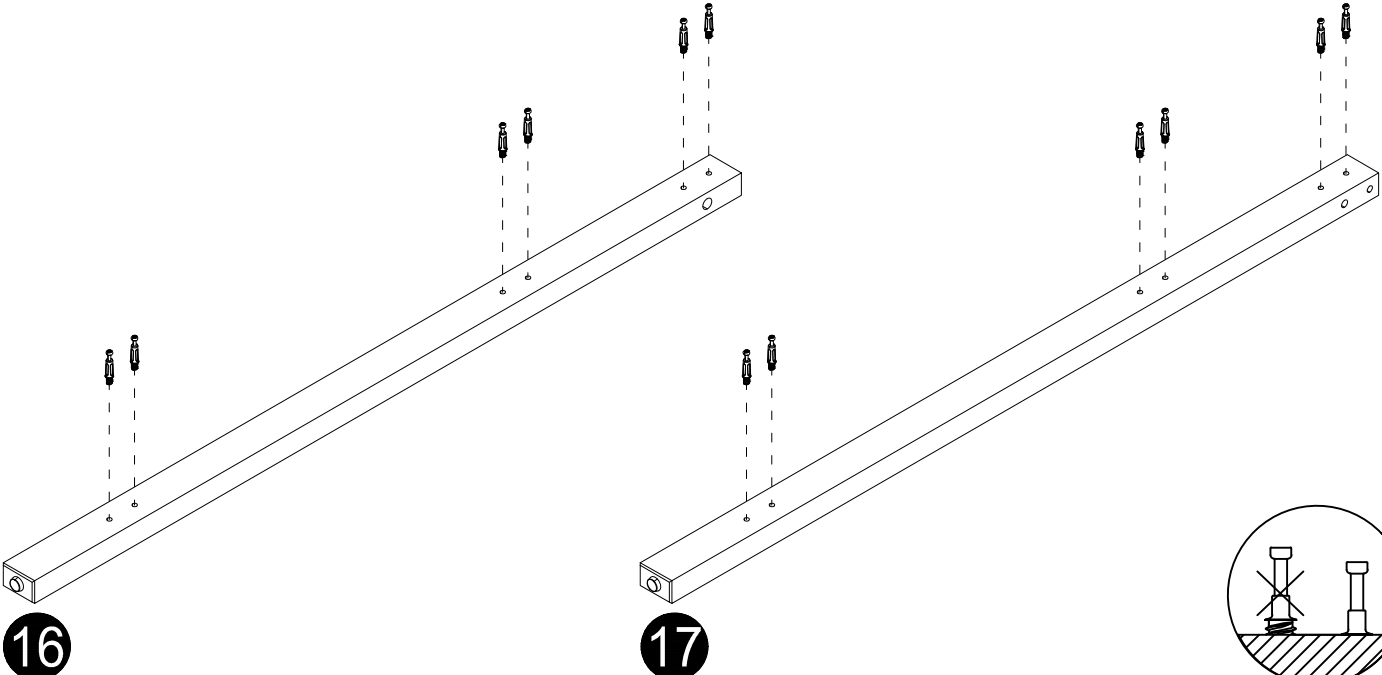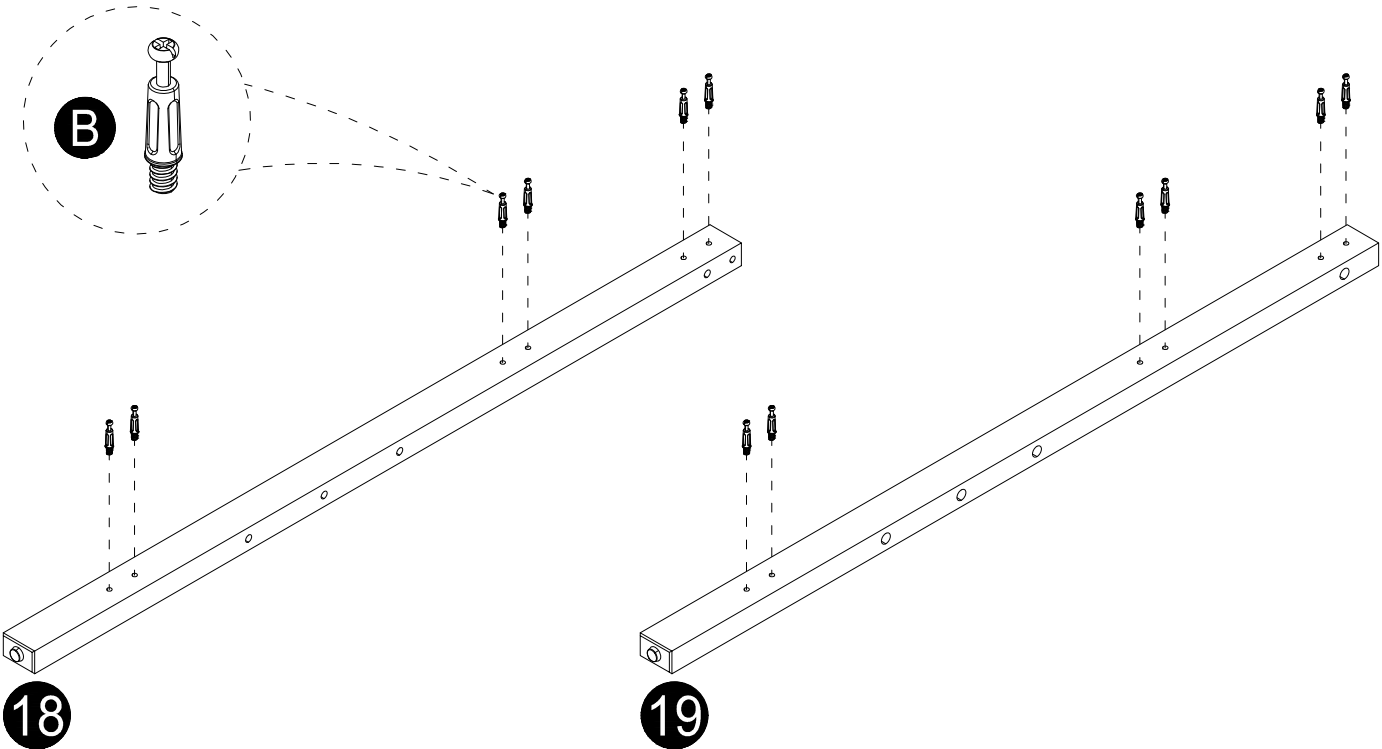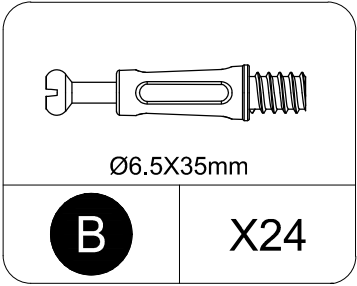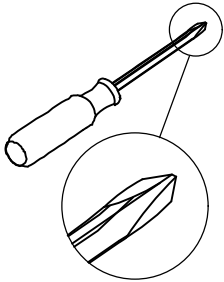


STEP12


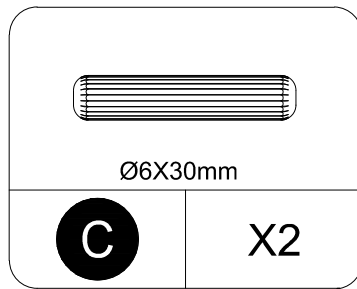
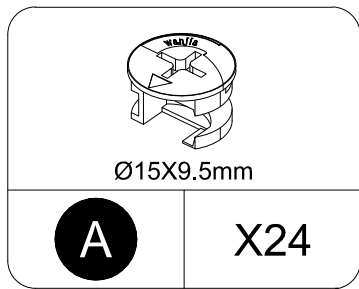


Note: During installation, strictly adhere to the component codes and assembly diagram for correlated assembly, ensuring precise matching of all part numbers. Improper installation may induce structural interference, thereby impeding subsequent assembly procedures.

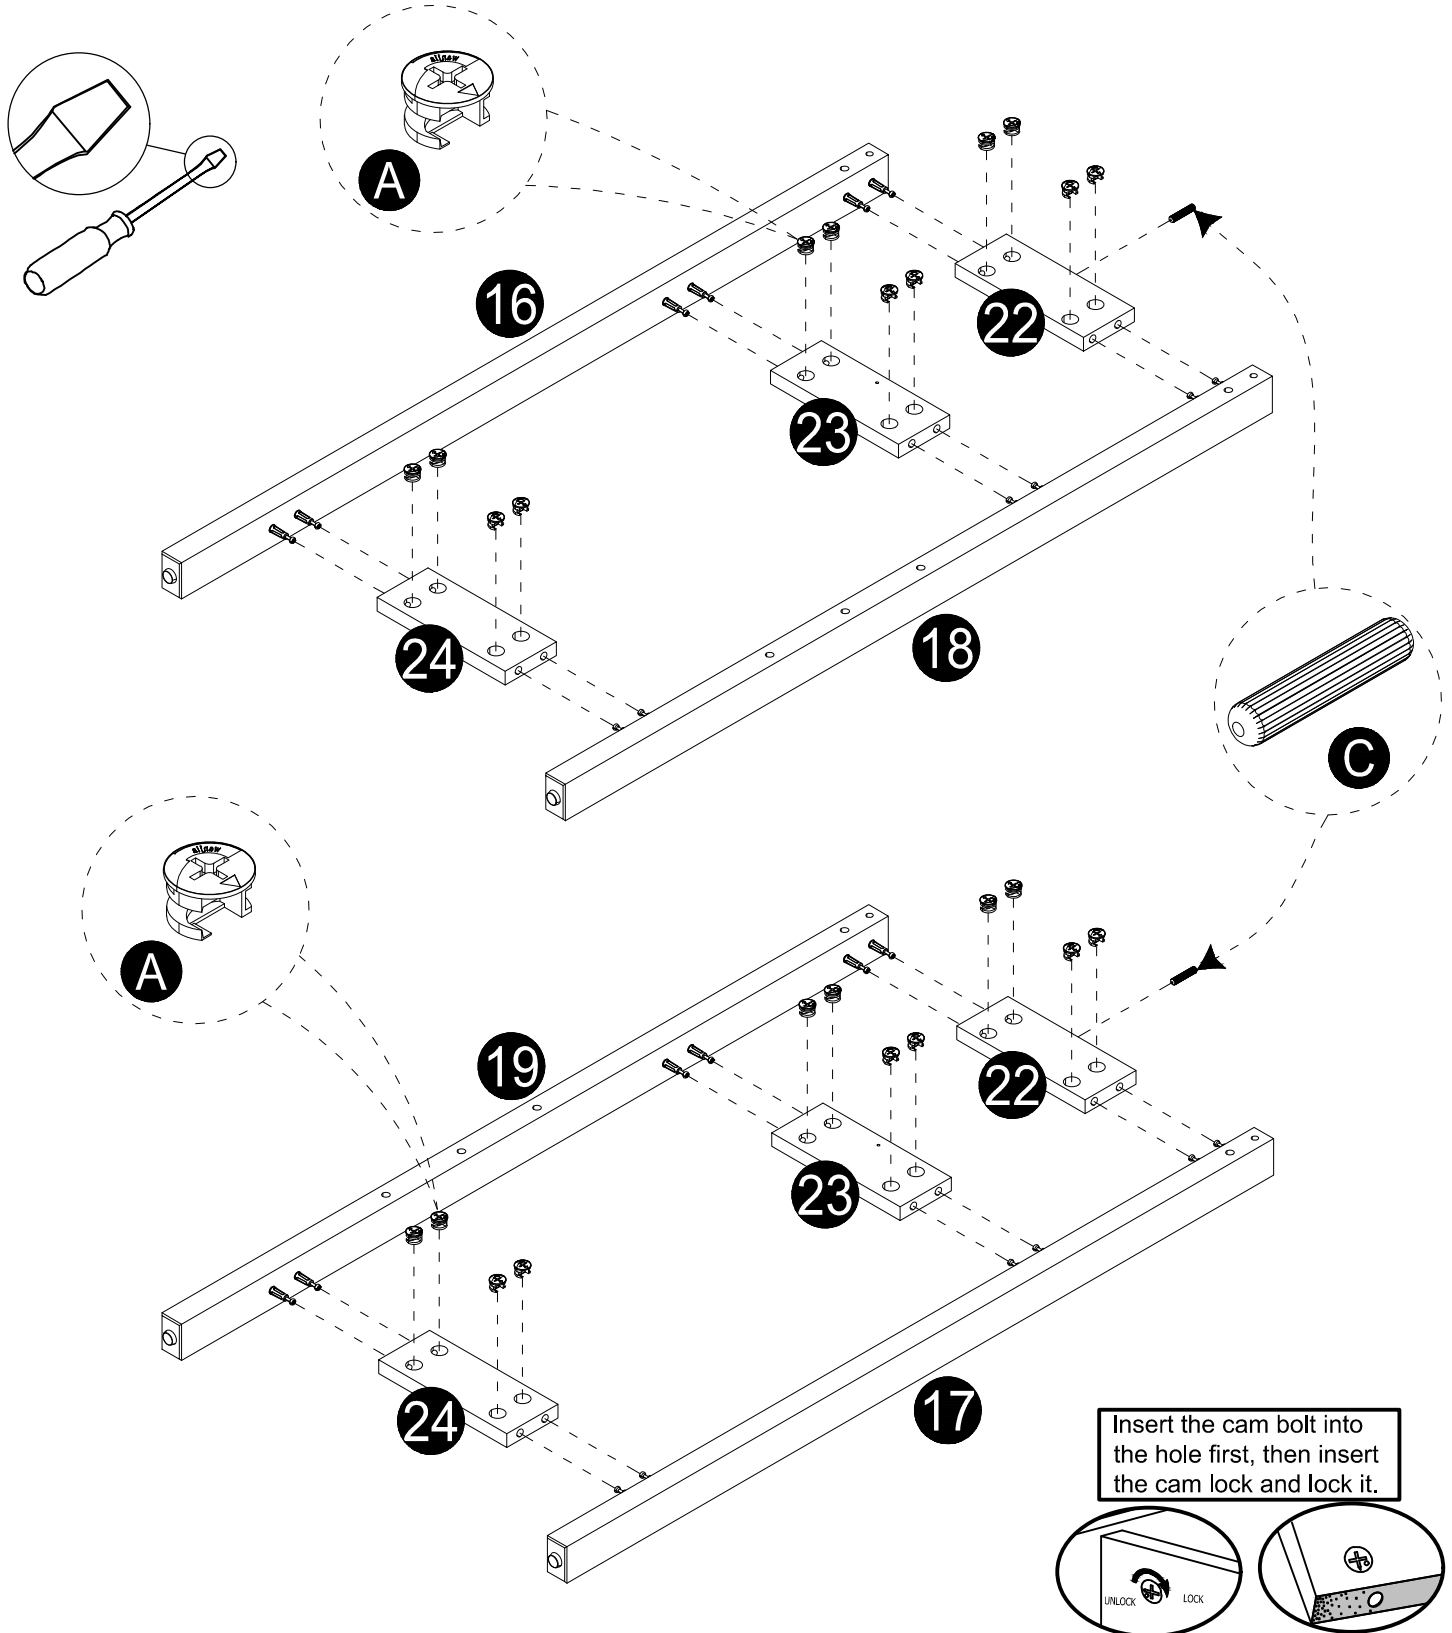


STEP13



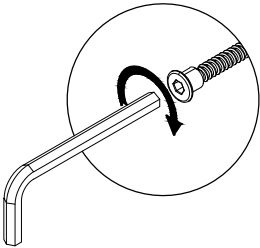


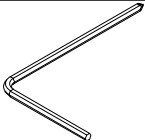					
Ø6X30mm		Ø6.3X50mm		M4X96(55)mm	
C	X8	E	X4	N	X1

THIS STEP REQUIRES 2 PEOPLE

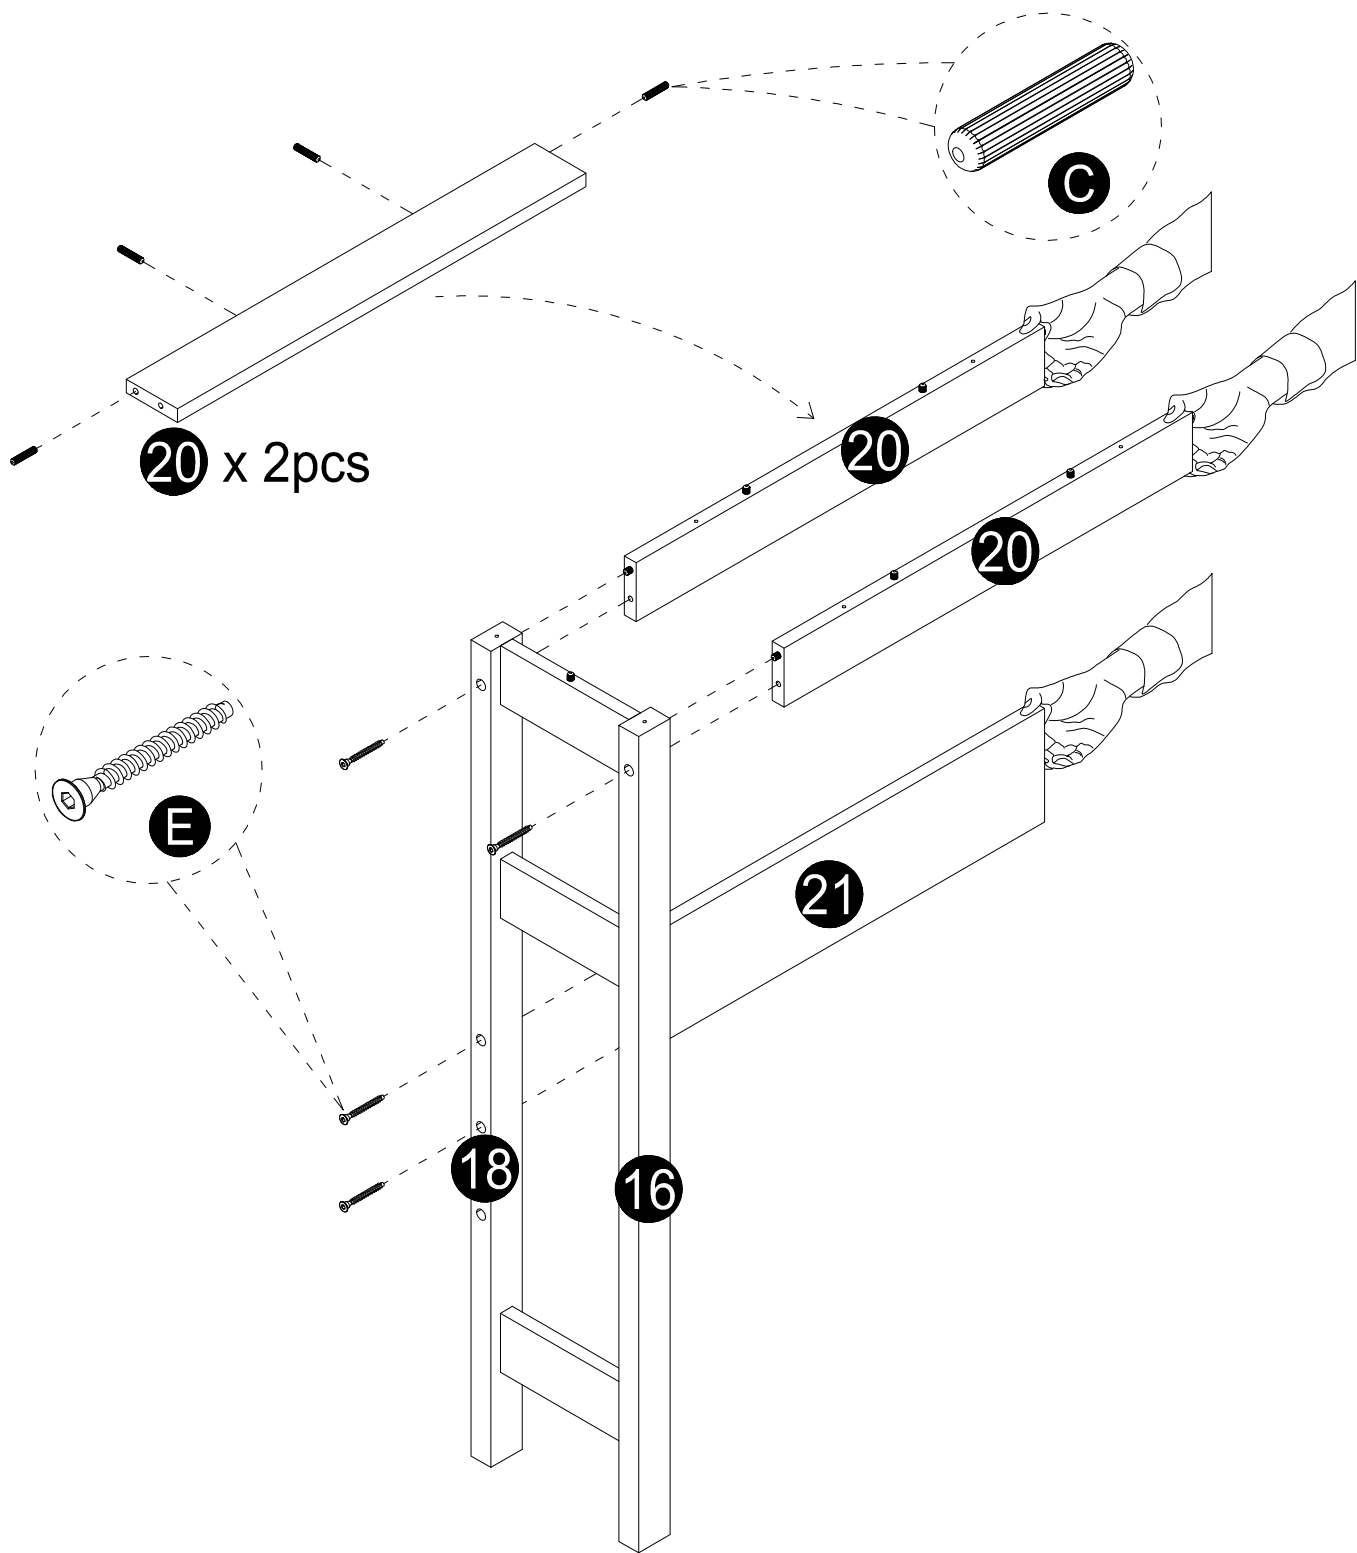


STEP14

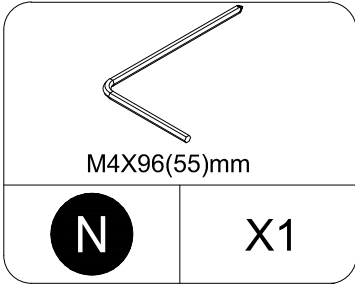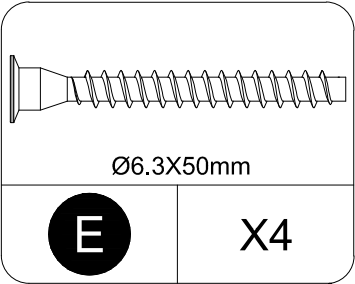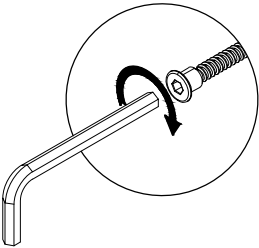


THIS STEP REQUIRES 2 PEOPLE




The lower part must be finished before assembling the upper part

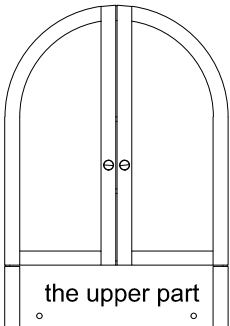

the upper part

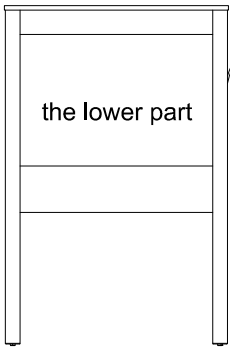





the lower part

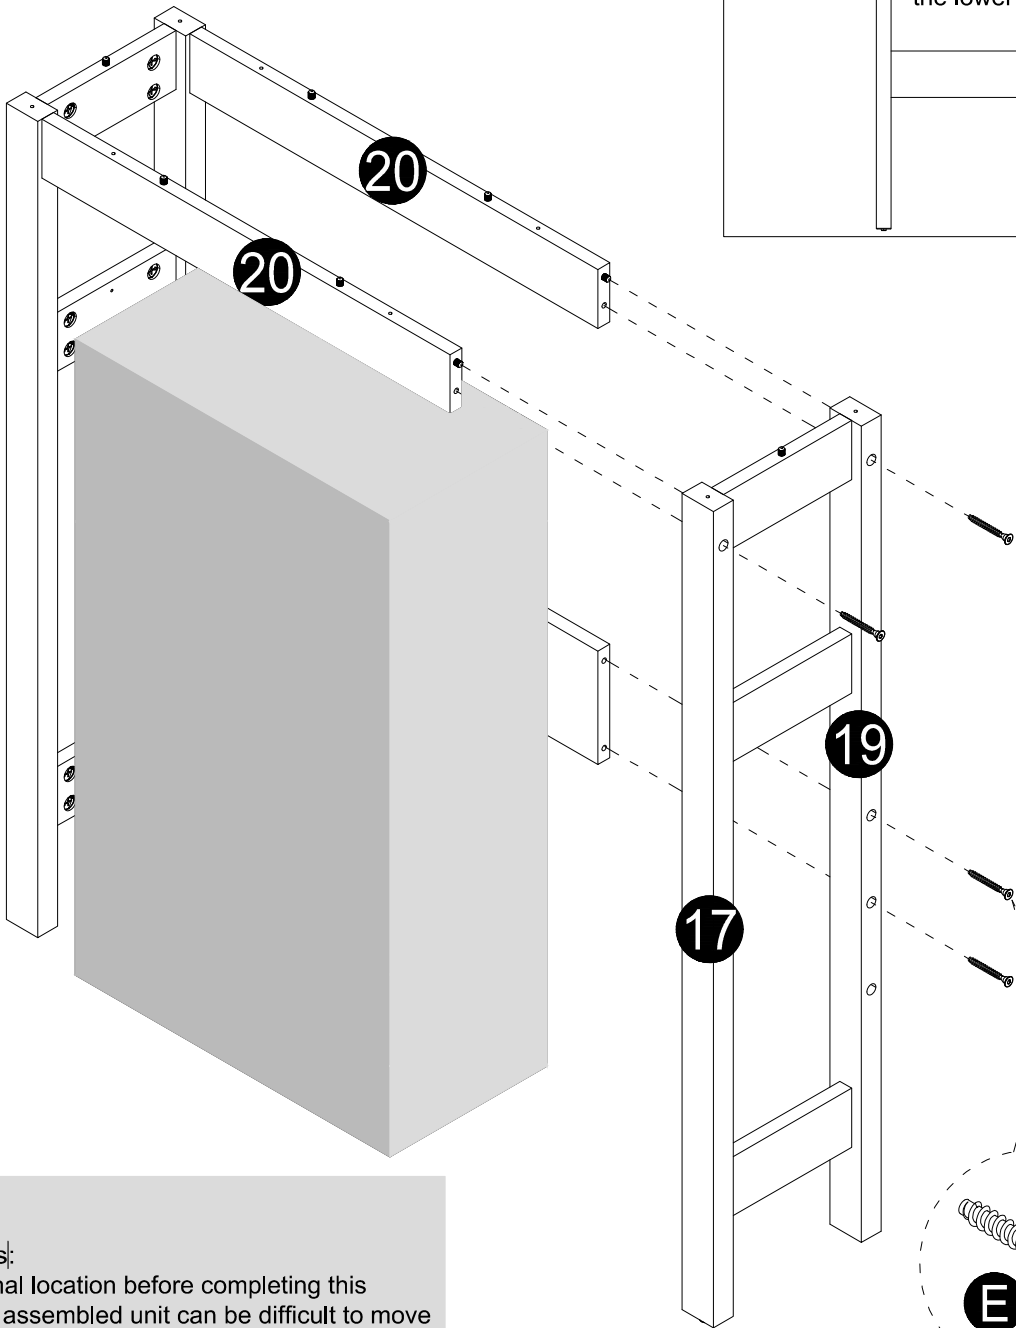




Installation Instructions:

Move the product to its final location before completing this assembly step. (The fully assembled unit can be difficult to move later.)



STEP15

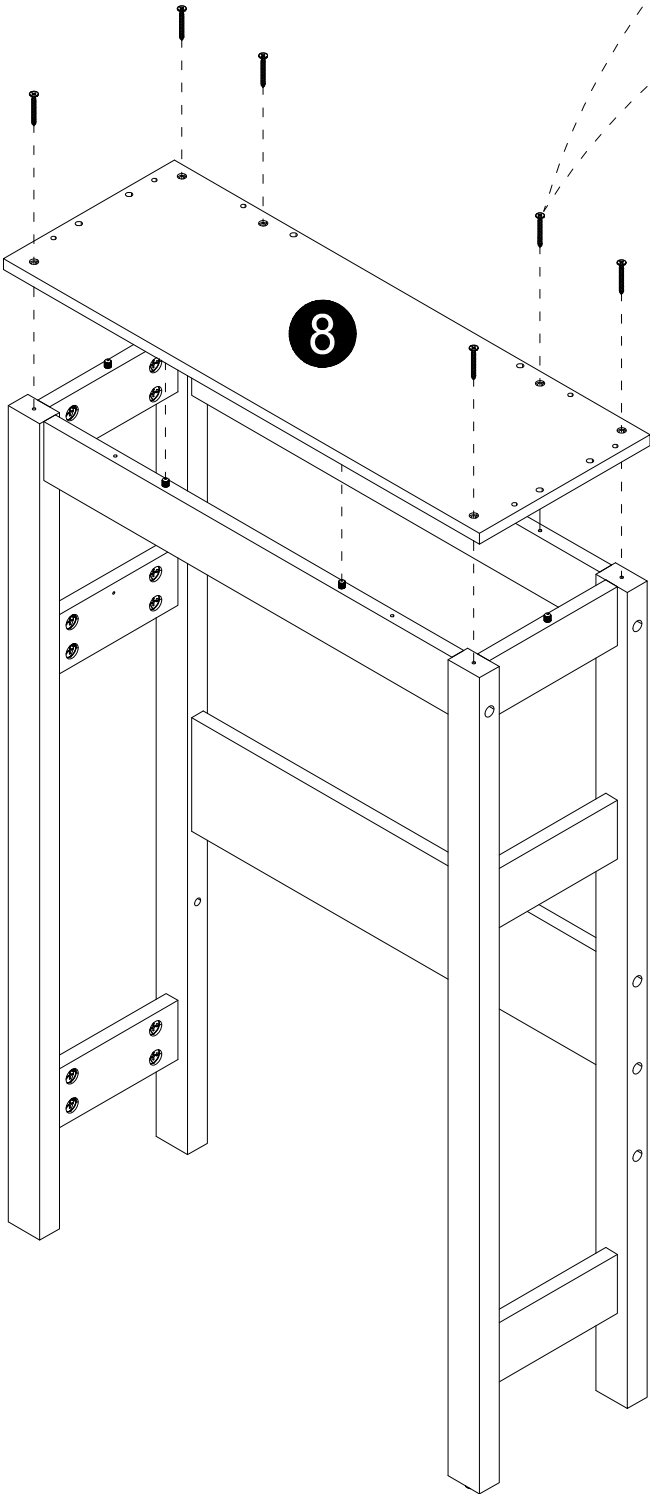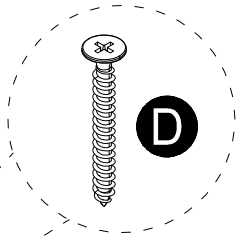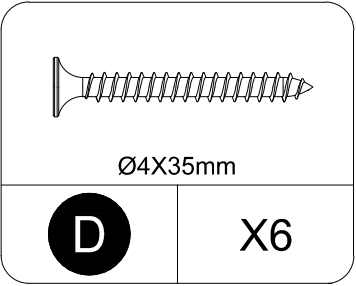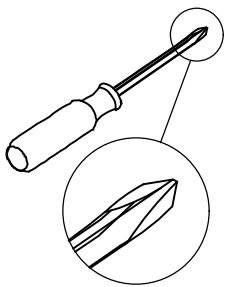


STEP16

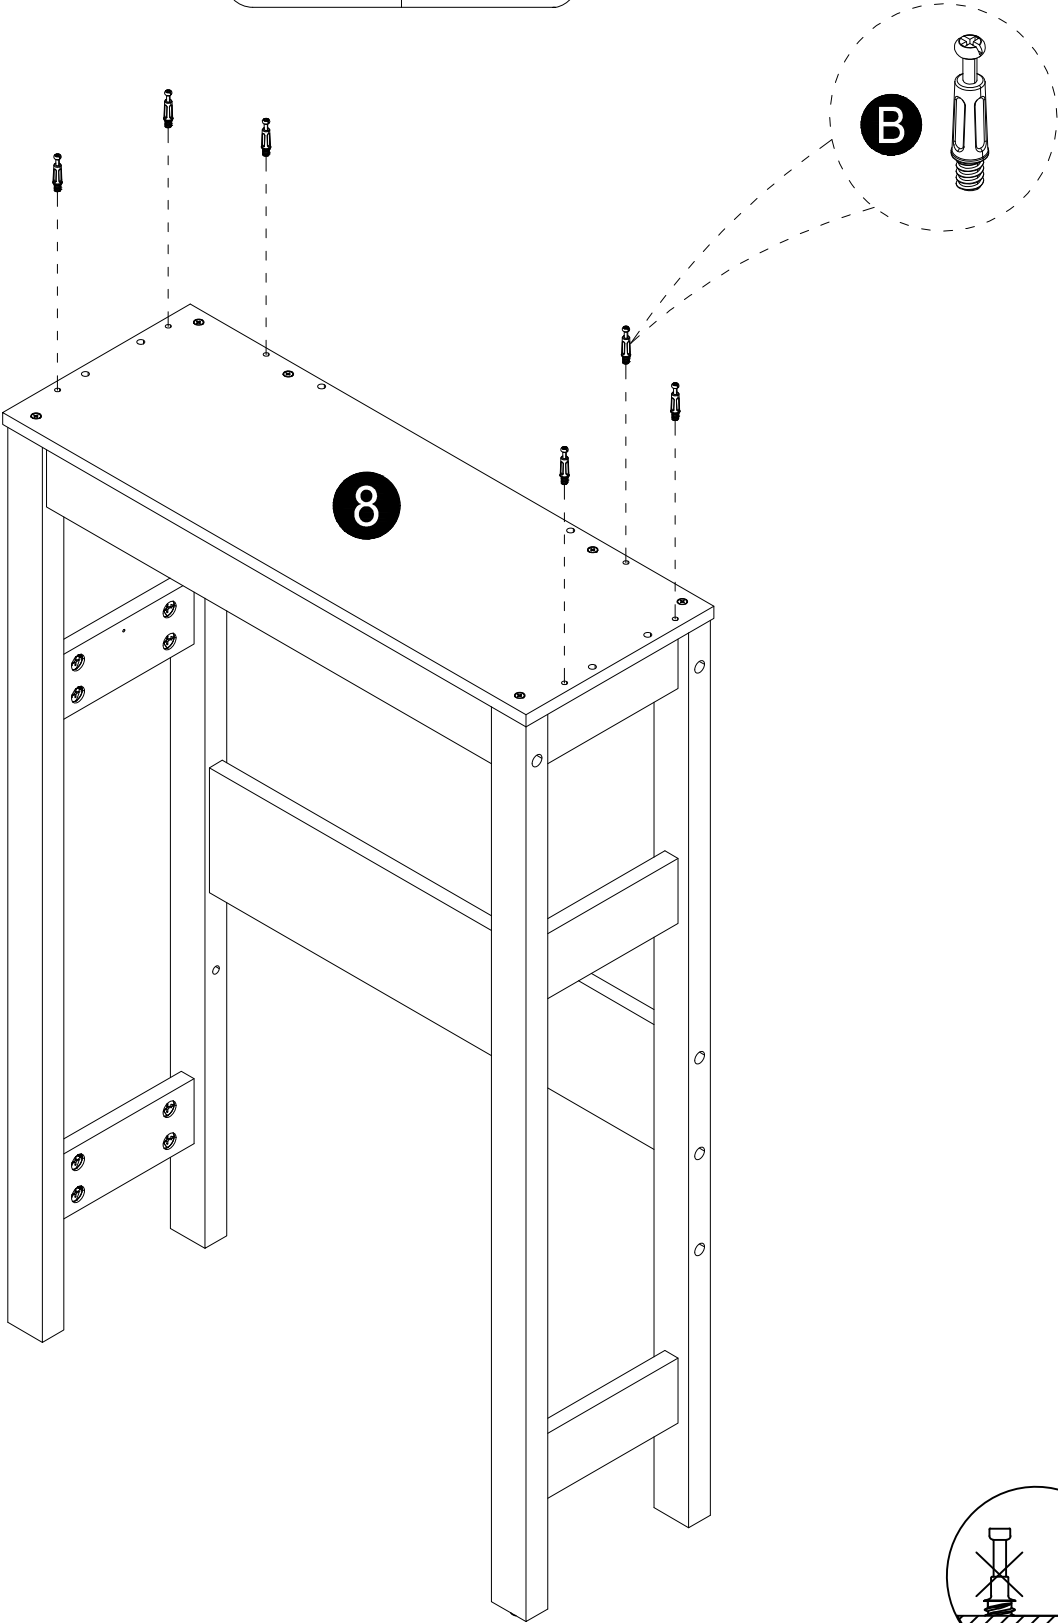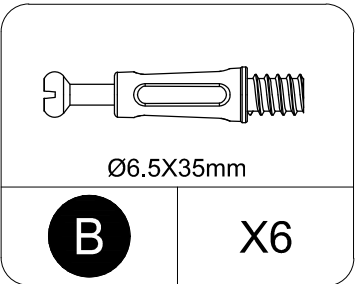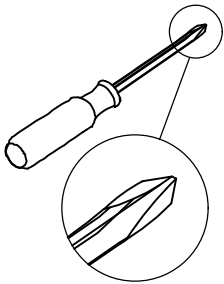


STEP17

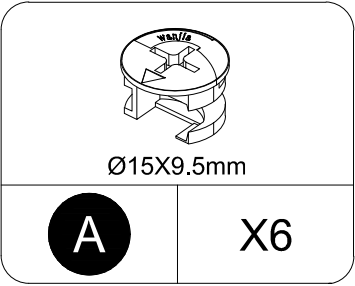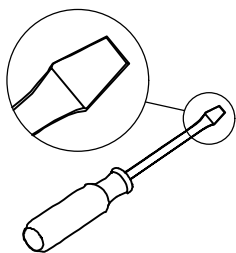

THIS STEP REQUIRES 2 PEOPLE

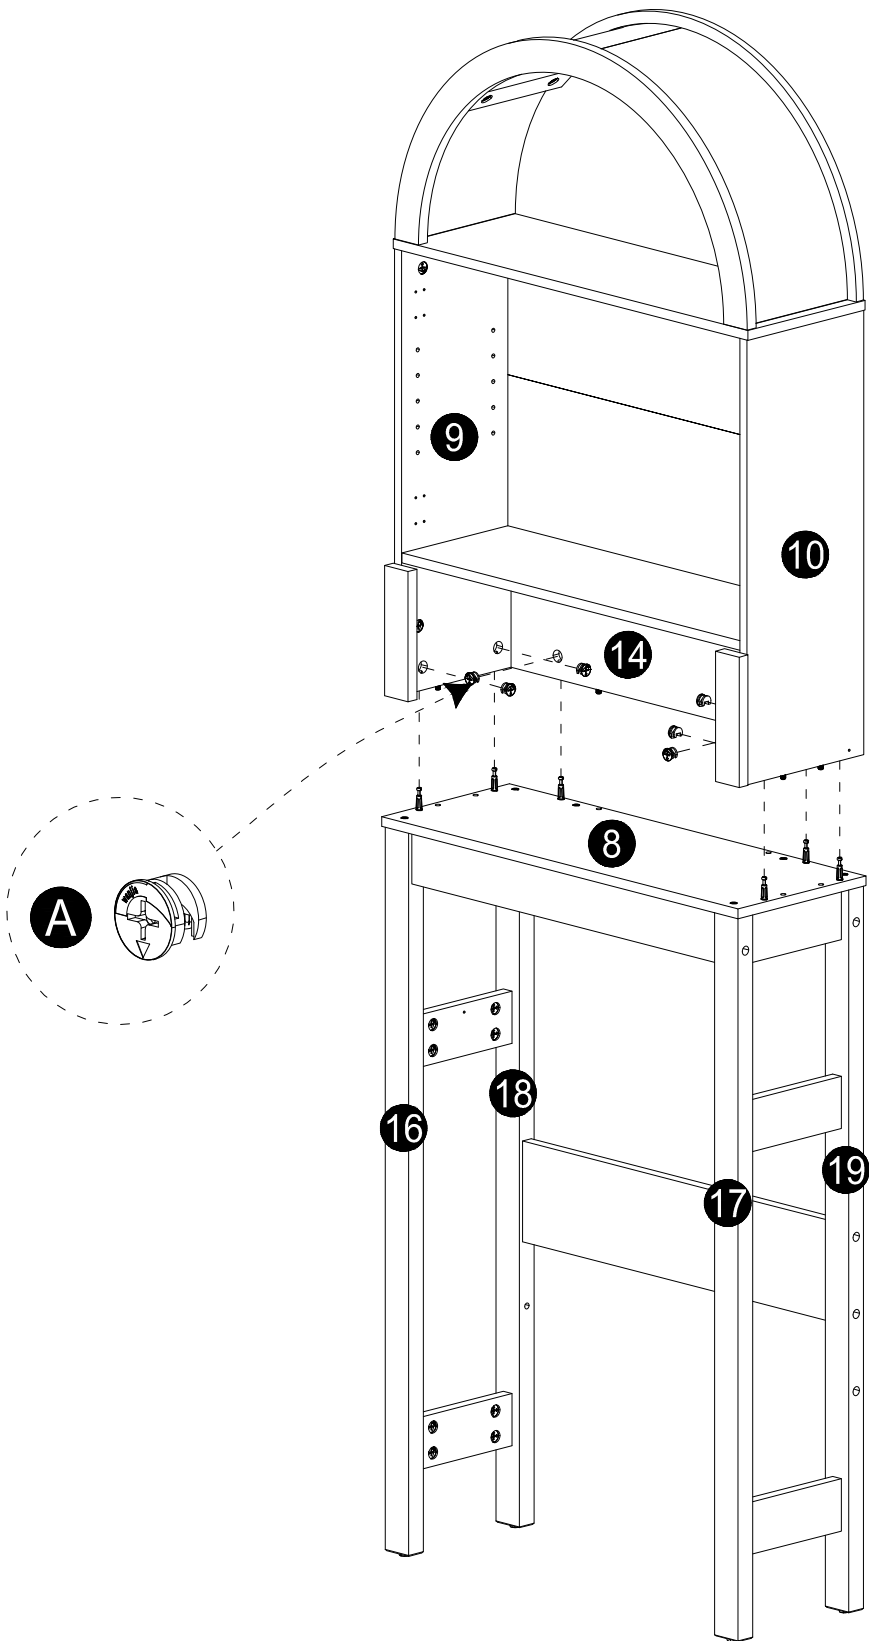


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

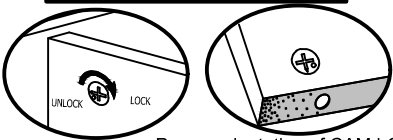


Proper orientation of CAM LOCK

STEP18

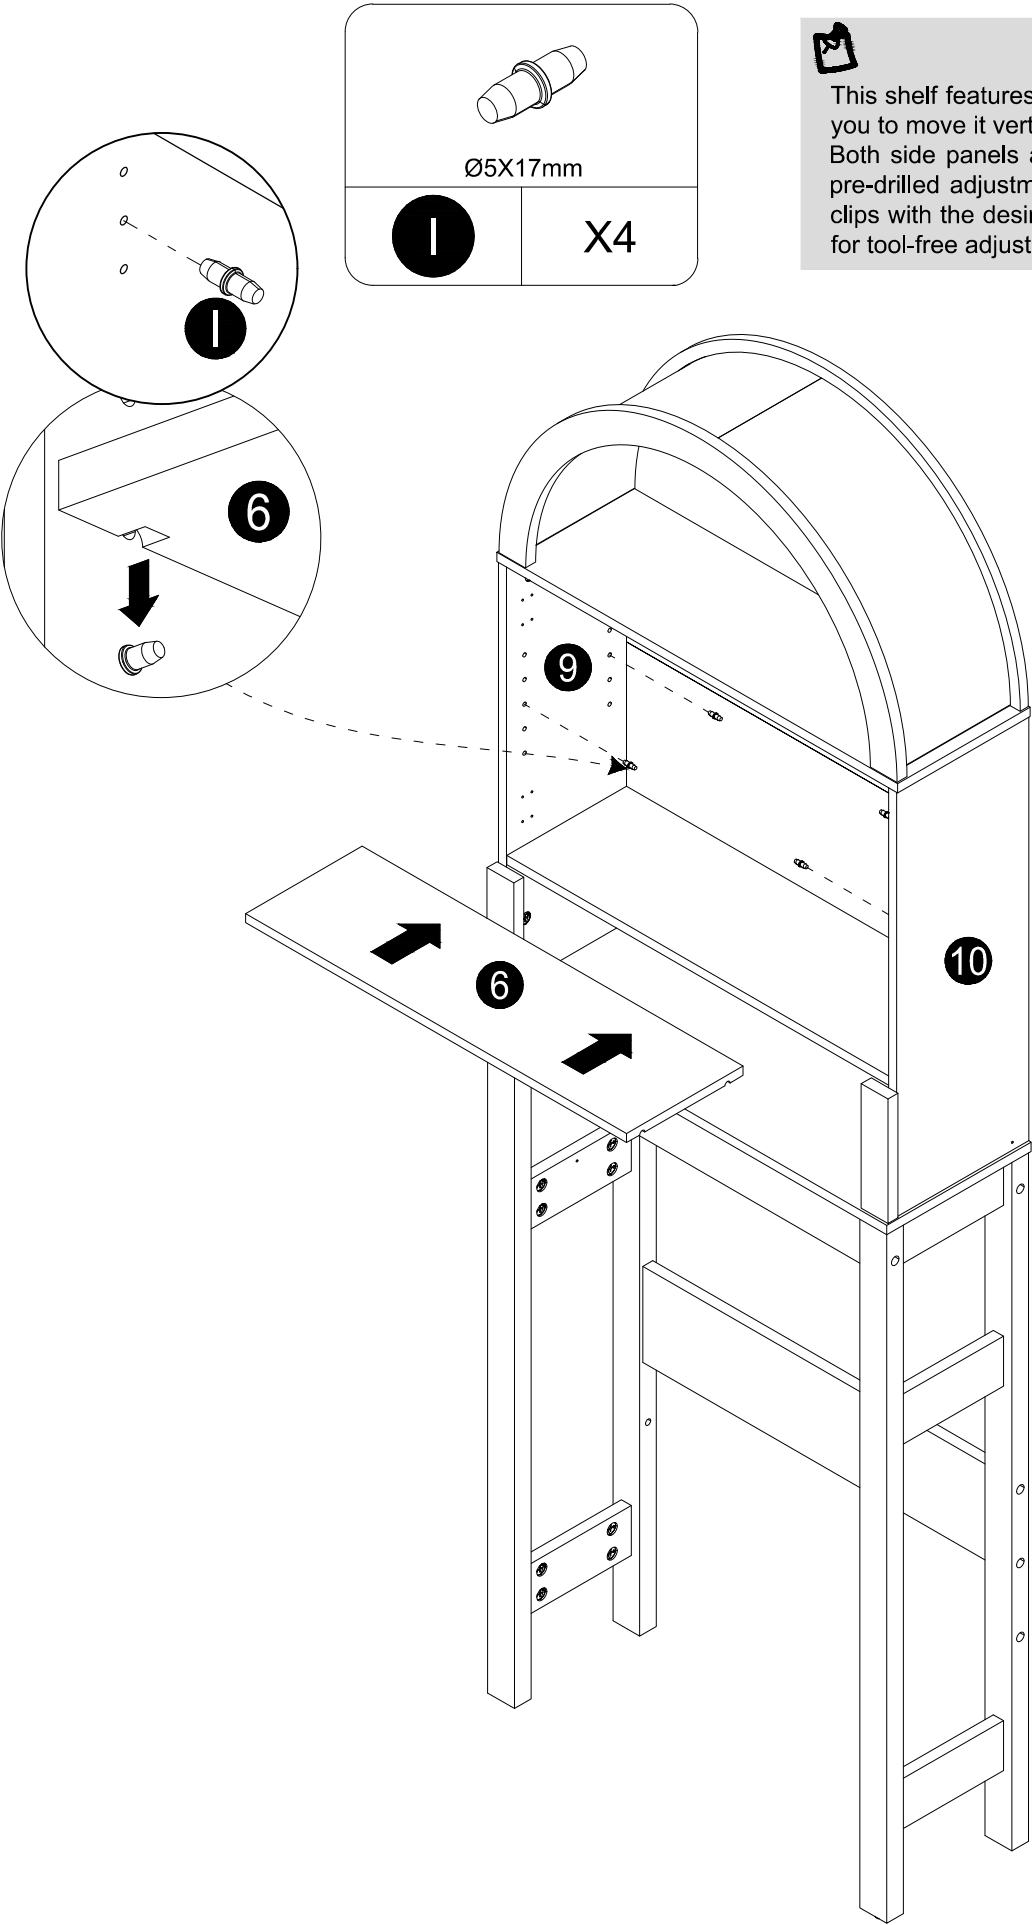

This shelf features freely adjustable height, allowing you to move it vertically according to storage needs. Both side panels are equipped with evenly spaced pre-drilled adjustment holes. Simply align the shelf clips with the desired holes at your preferred height for tool-free adjustment.


STEP19



Ø3.5X12mm

F

X8

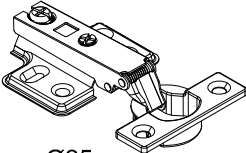

Ø25mm

J


X4



M4X18mm

G


X2

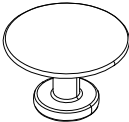




Ø26X19mm

H


X2

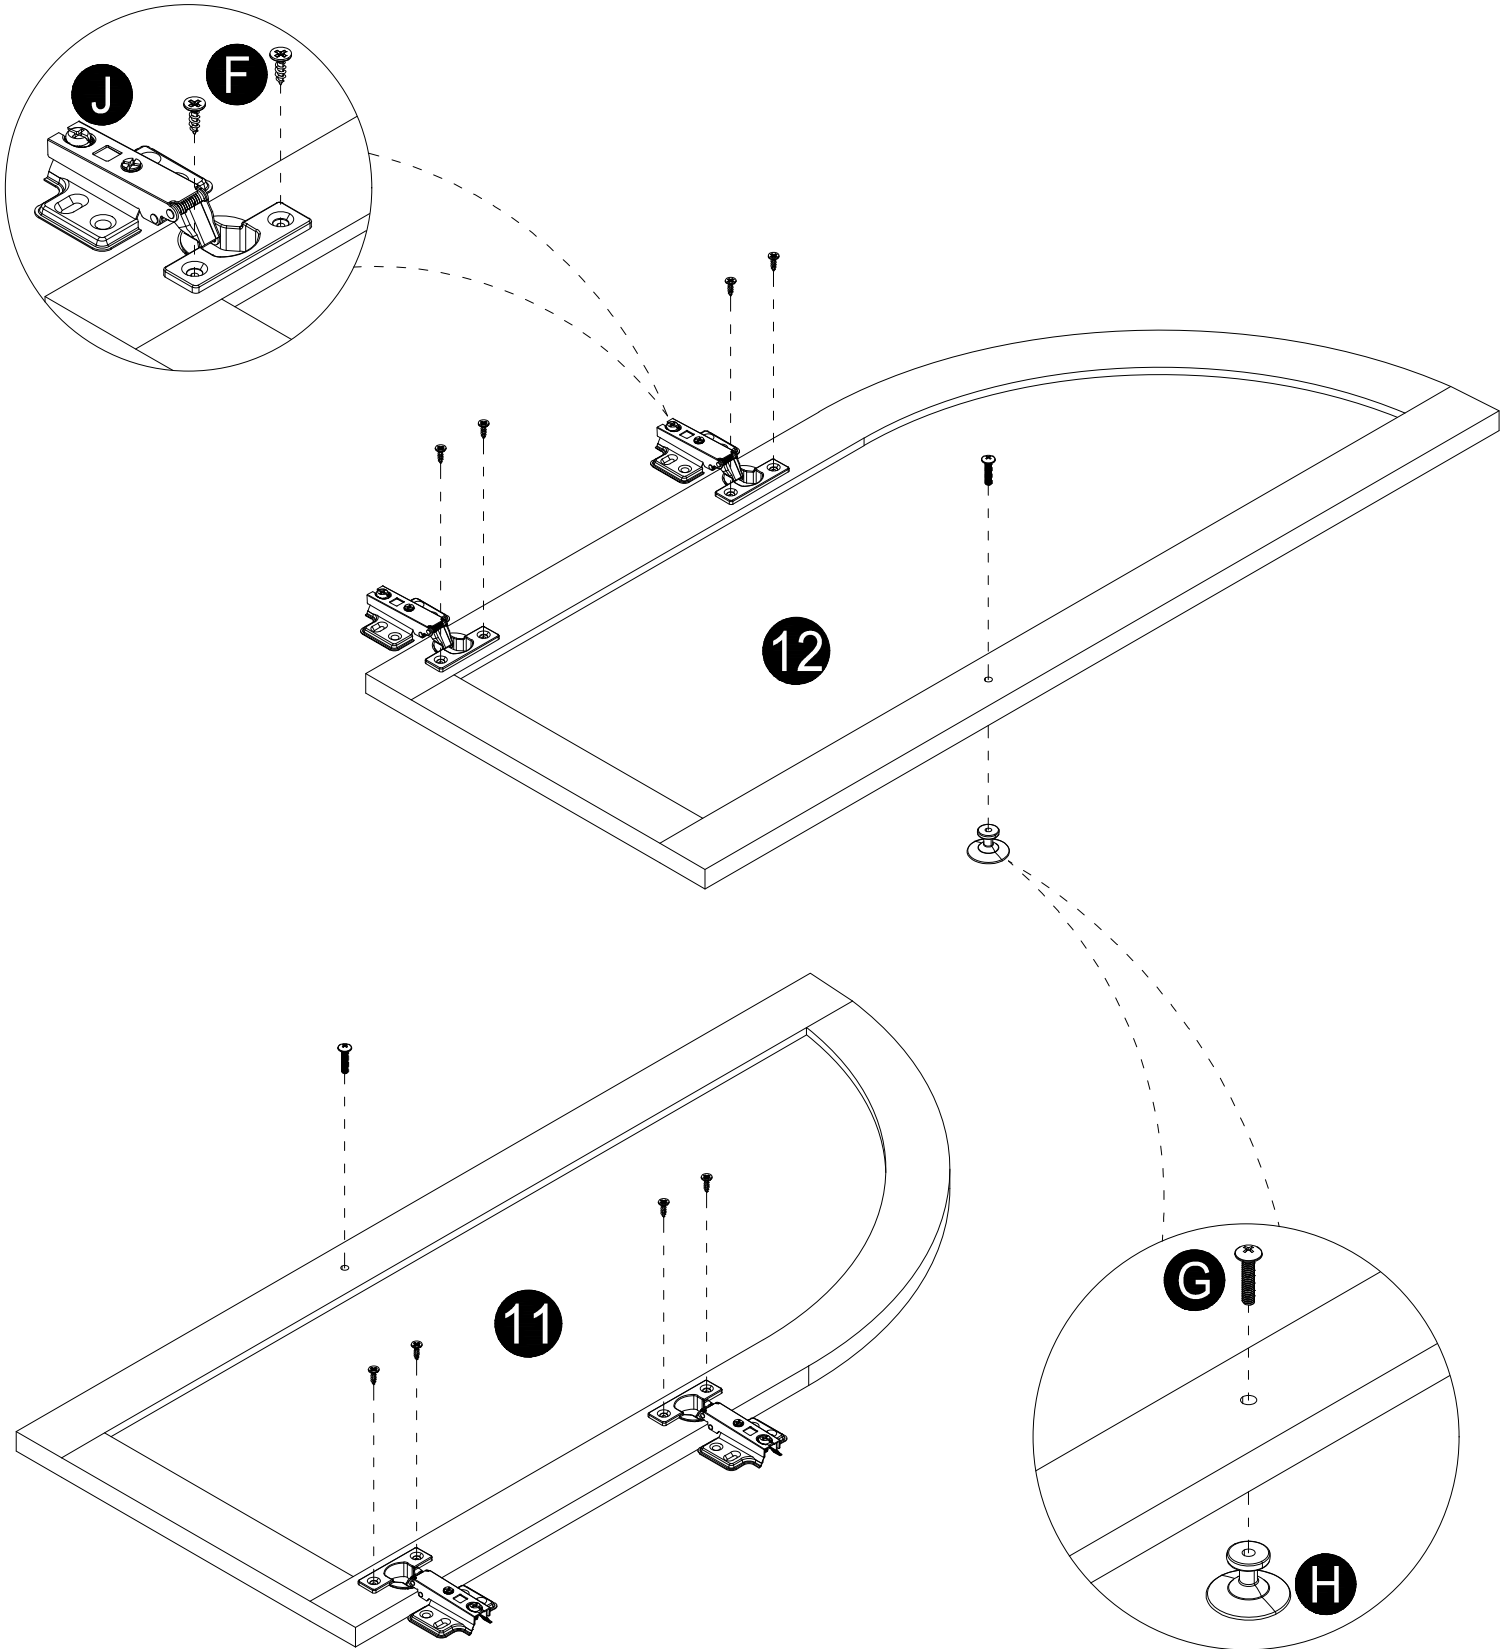

STEP20

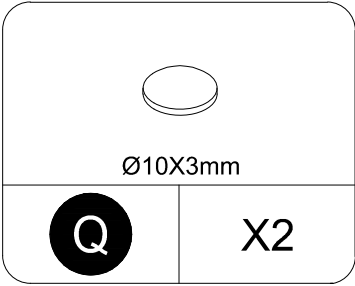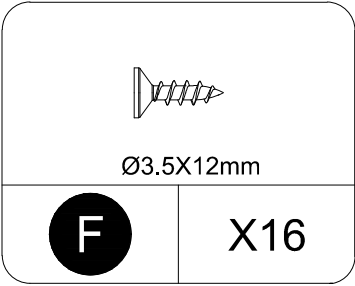
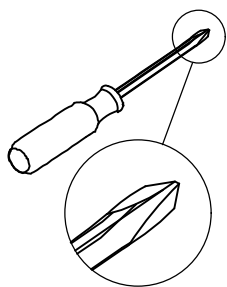


THIS STEP REQUIRES 2 PEOPLE

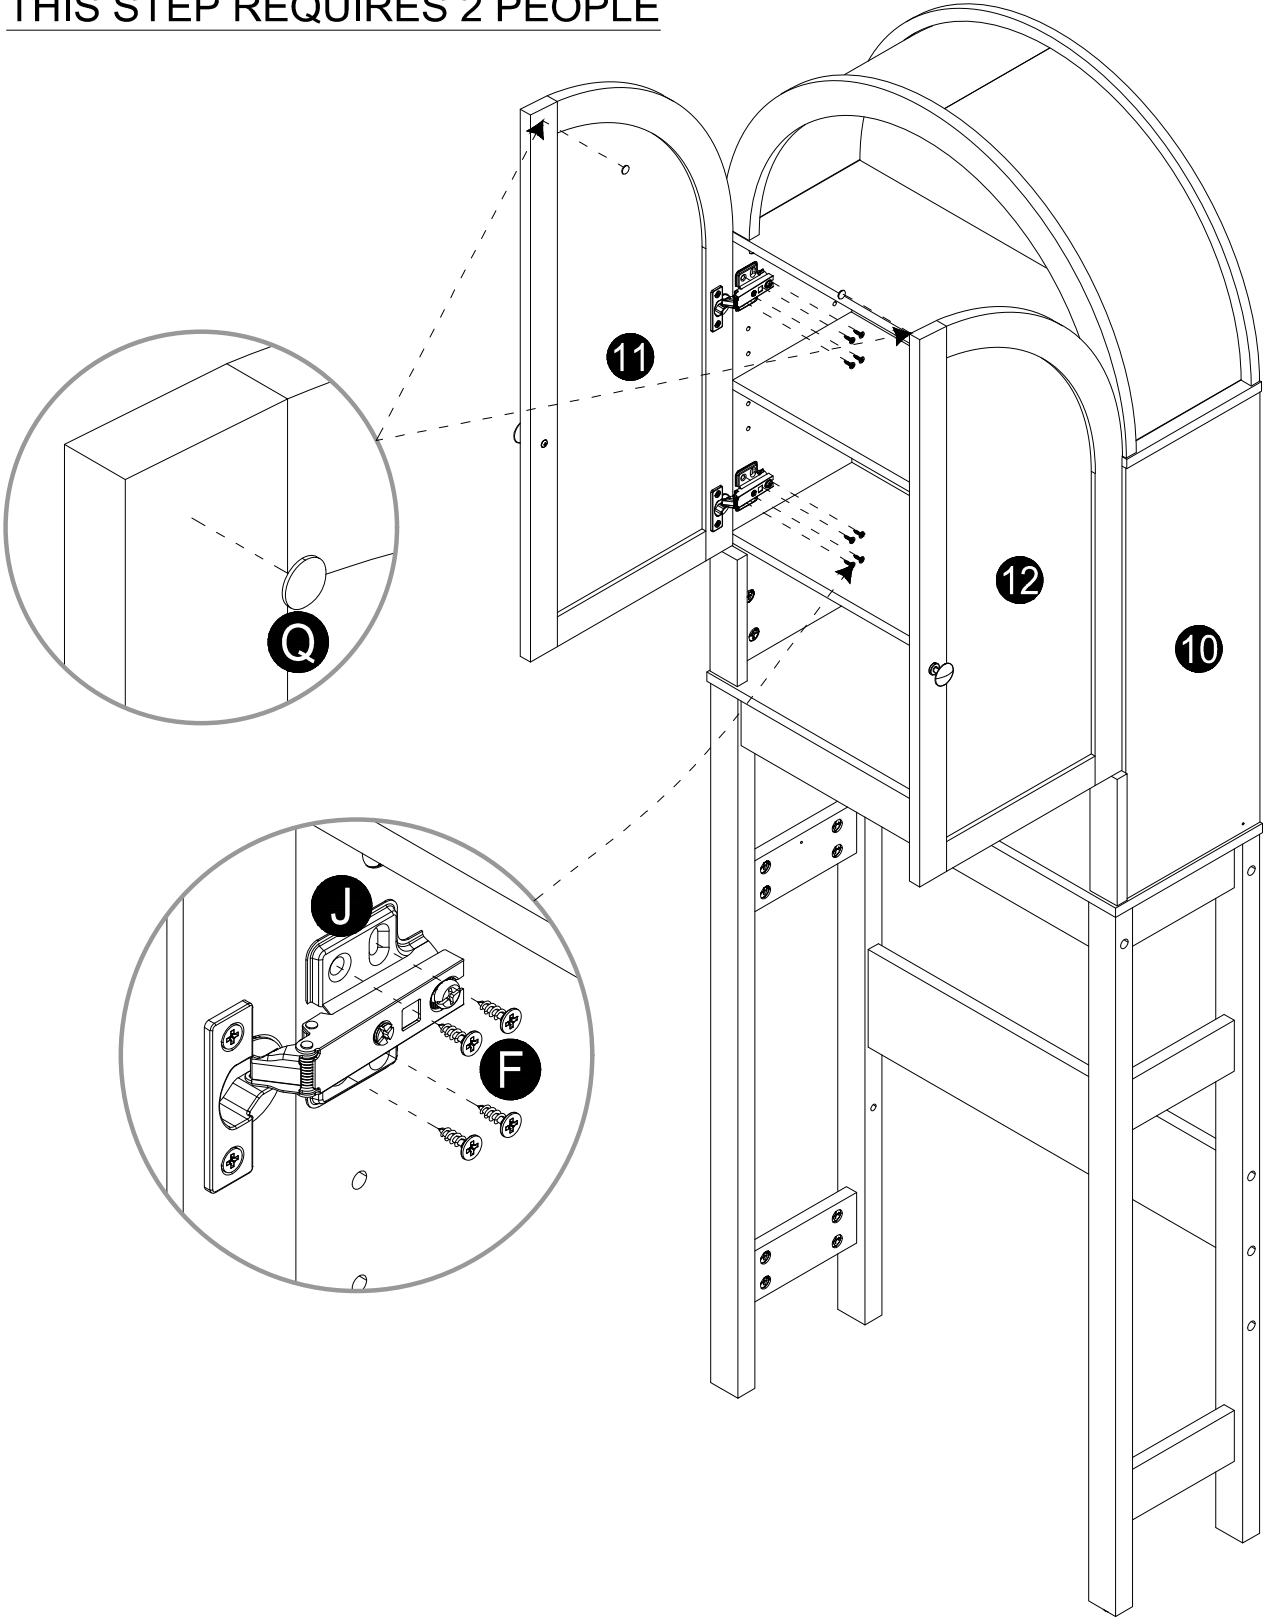


STEP21

SCHEMATIC DIAGRAM OF HINGE ADJUSTMENT DOOR PANEL GAP

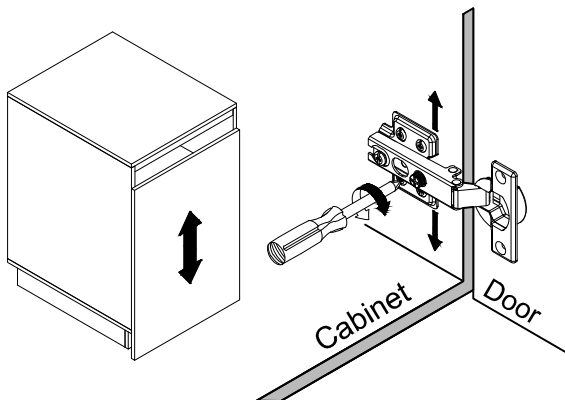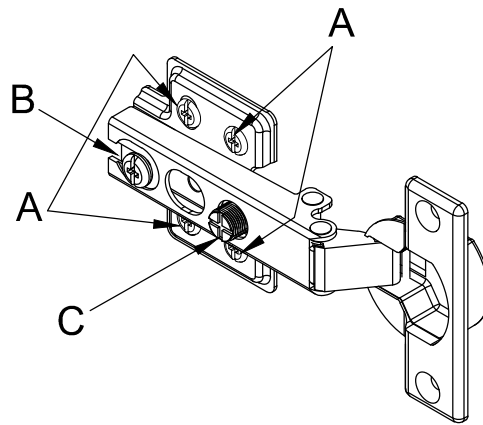


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

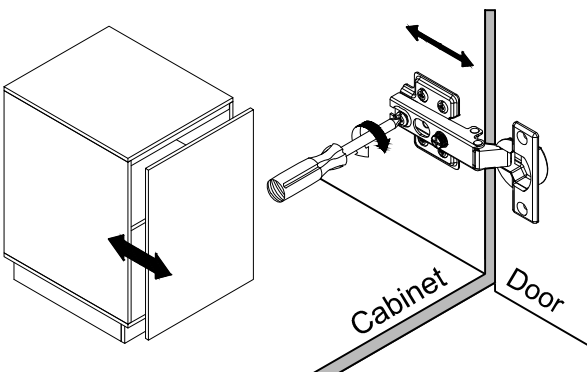

To adjust depth.






Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

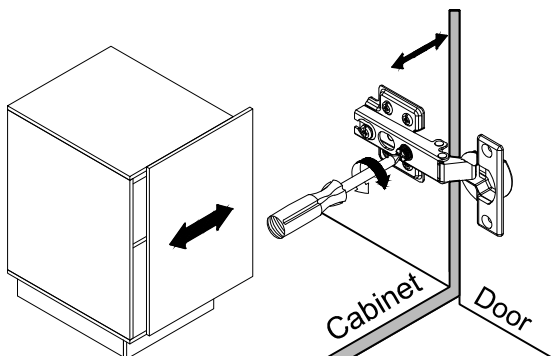




To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

STEP22

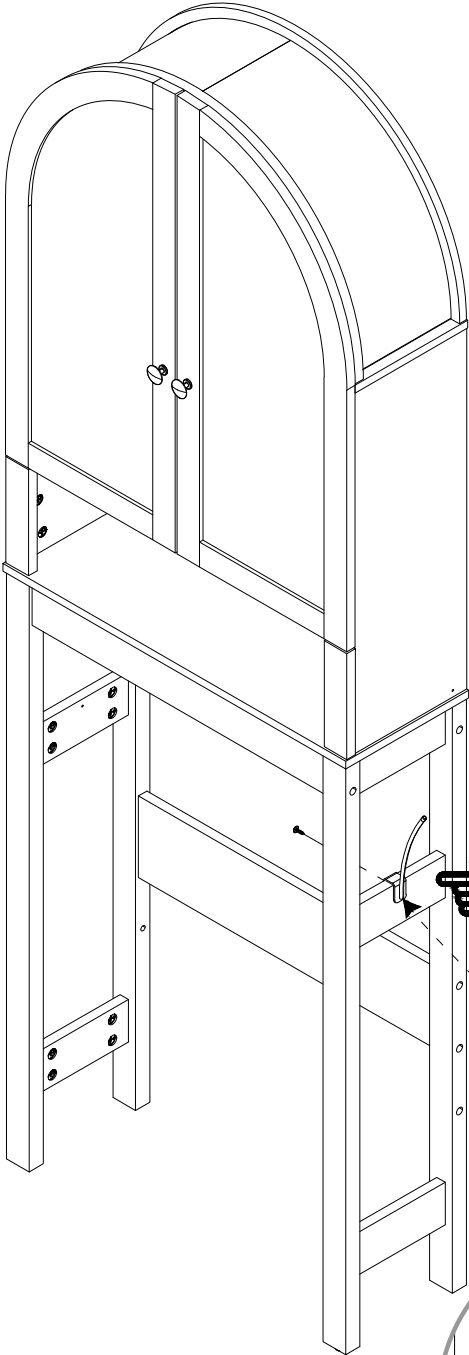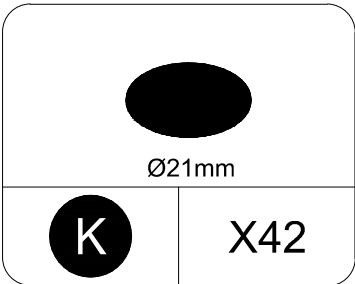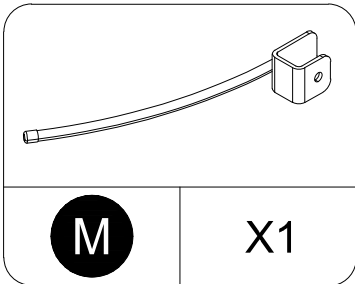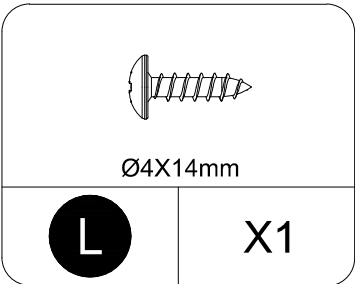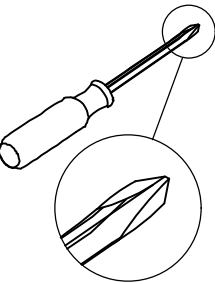


OR

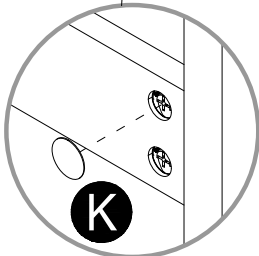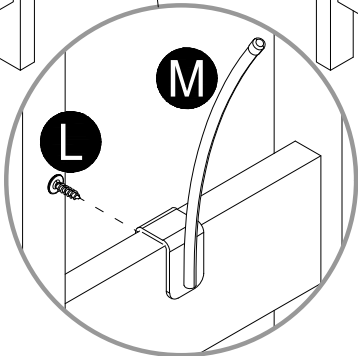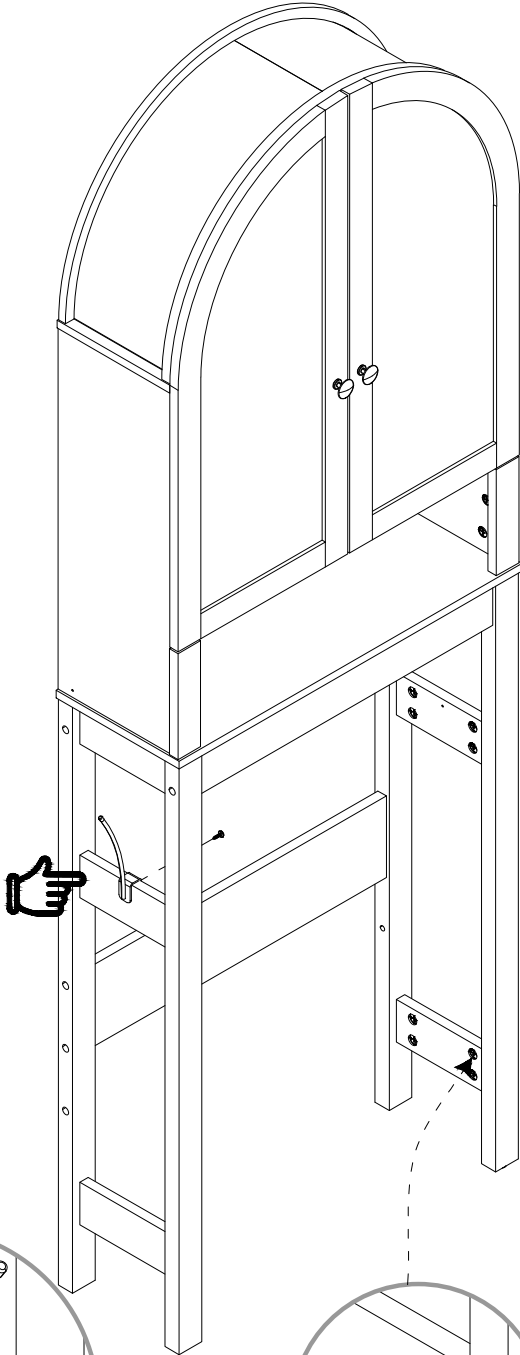

Stick the exposed holes of the cabinet body with hole stickers (K)

STEP23

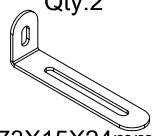
Qty:2  Ø4X40mm	Qty:2  Ø4X12mm	Qty:2  Ø8X29mm	Qty:2  73X15X24mm
 X1 set			





Warning Topple Over

! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.


1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

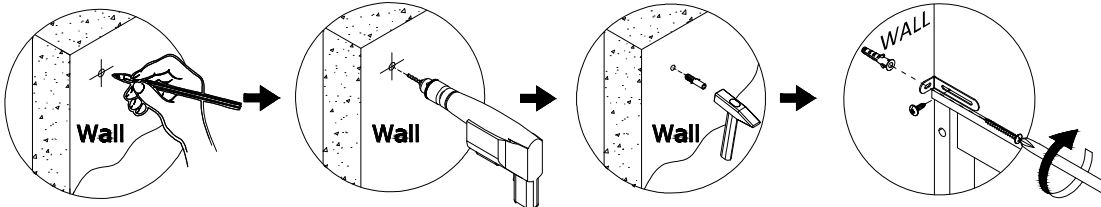

A solid wall	B cavity wall	C solid wood
		
Ø 6mm (1/4)	Ø 6mm (1/4)	Ø 3mm (1/8)

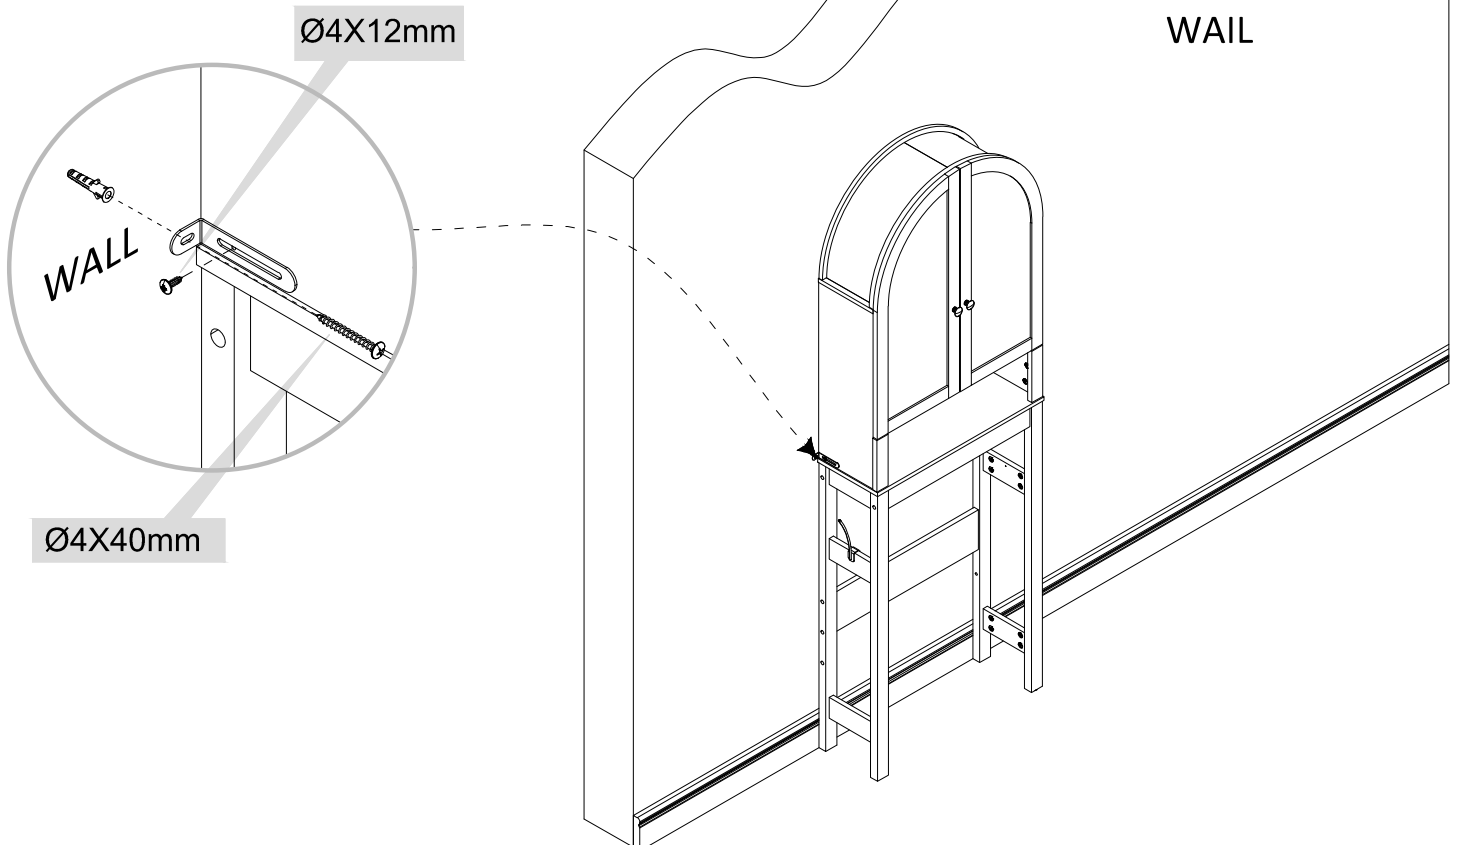

⚠ WARNING

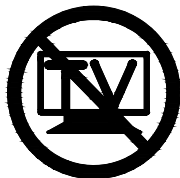

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!

⚠ AVERTISSEMENT



Des enfants sont décédés à cause du basculement du meuble.

Pour réduire le risque de la chute du meuble :

- TOUJOURS installer le dispositif anti-basculement fourni.
- NE JAMAIS mettre un téléviseur sur ce produit.
- NE JAMAIS laisser les enfants se tenir debout, grimper ni s'accrocher sur les tiroirs, les portes ou les tablettes.
- NE JAMAIS ouvrir plus d'un tiroir à la fois.
- Placer les articles les plus lourds sur les tiroirs inférieurs.

Cette étiquette est permanente.

Ne pas retirer !

⚠ ADVERTENCIA



Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:

- SIEMPRE instalar el dispositivo anti-volcadura suministrado.
- NUNCA ponga un televisor en este producto.
- NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas.
- NUNCA abra más de un cajón a la vez.
- Coloque los artículos más pesados en los cajones inferiores.

Esta es una etiqueta permanente.

¡No quitar!