


Serial Number: SDS01-22

Shower Door Installation Instructions

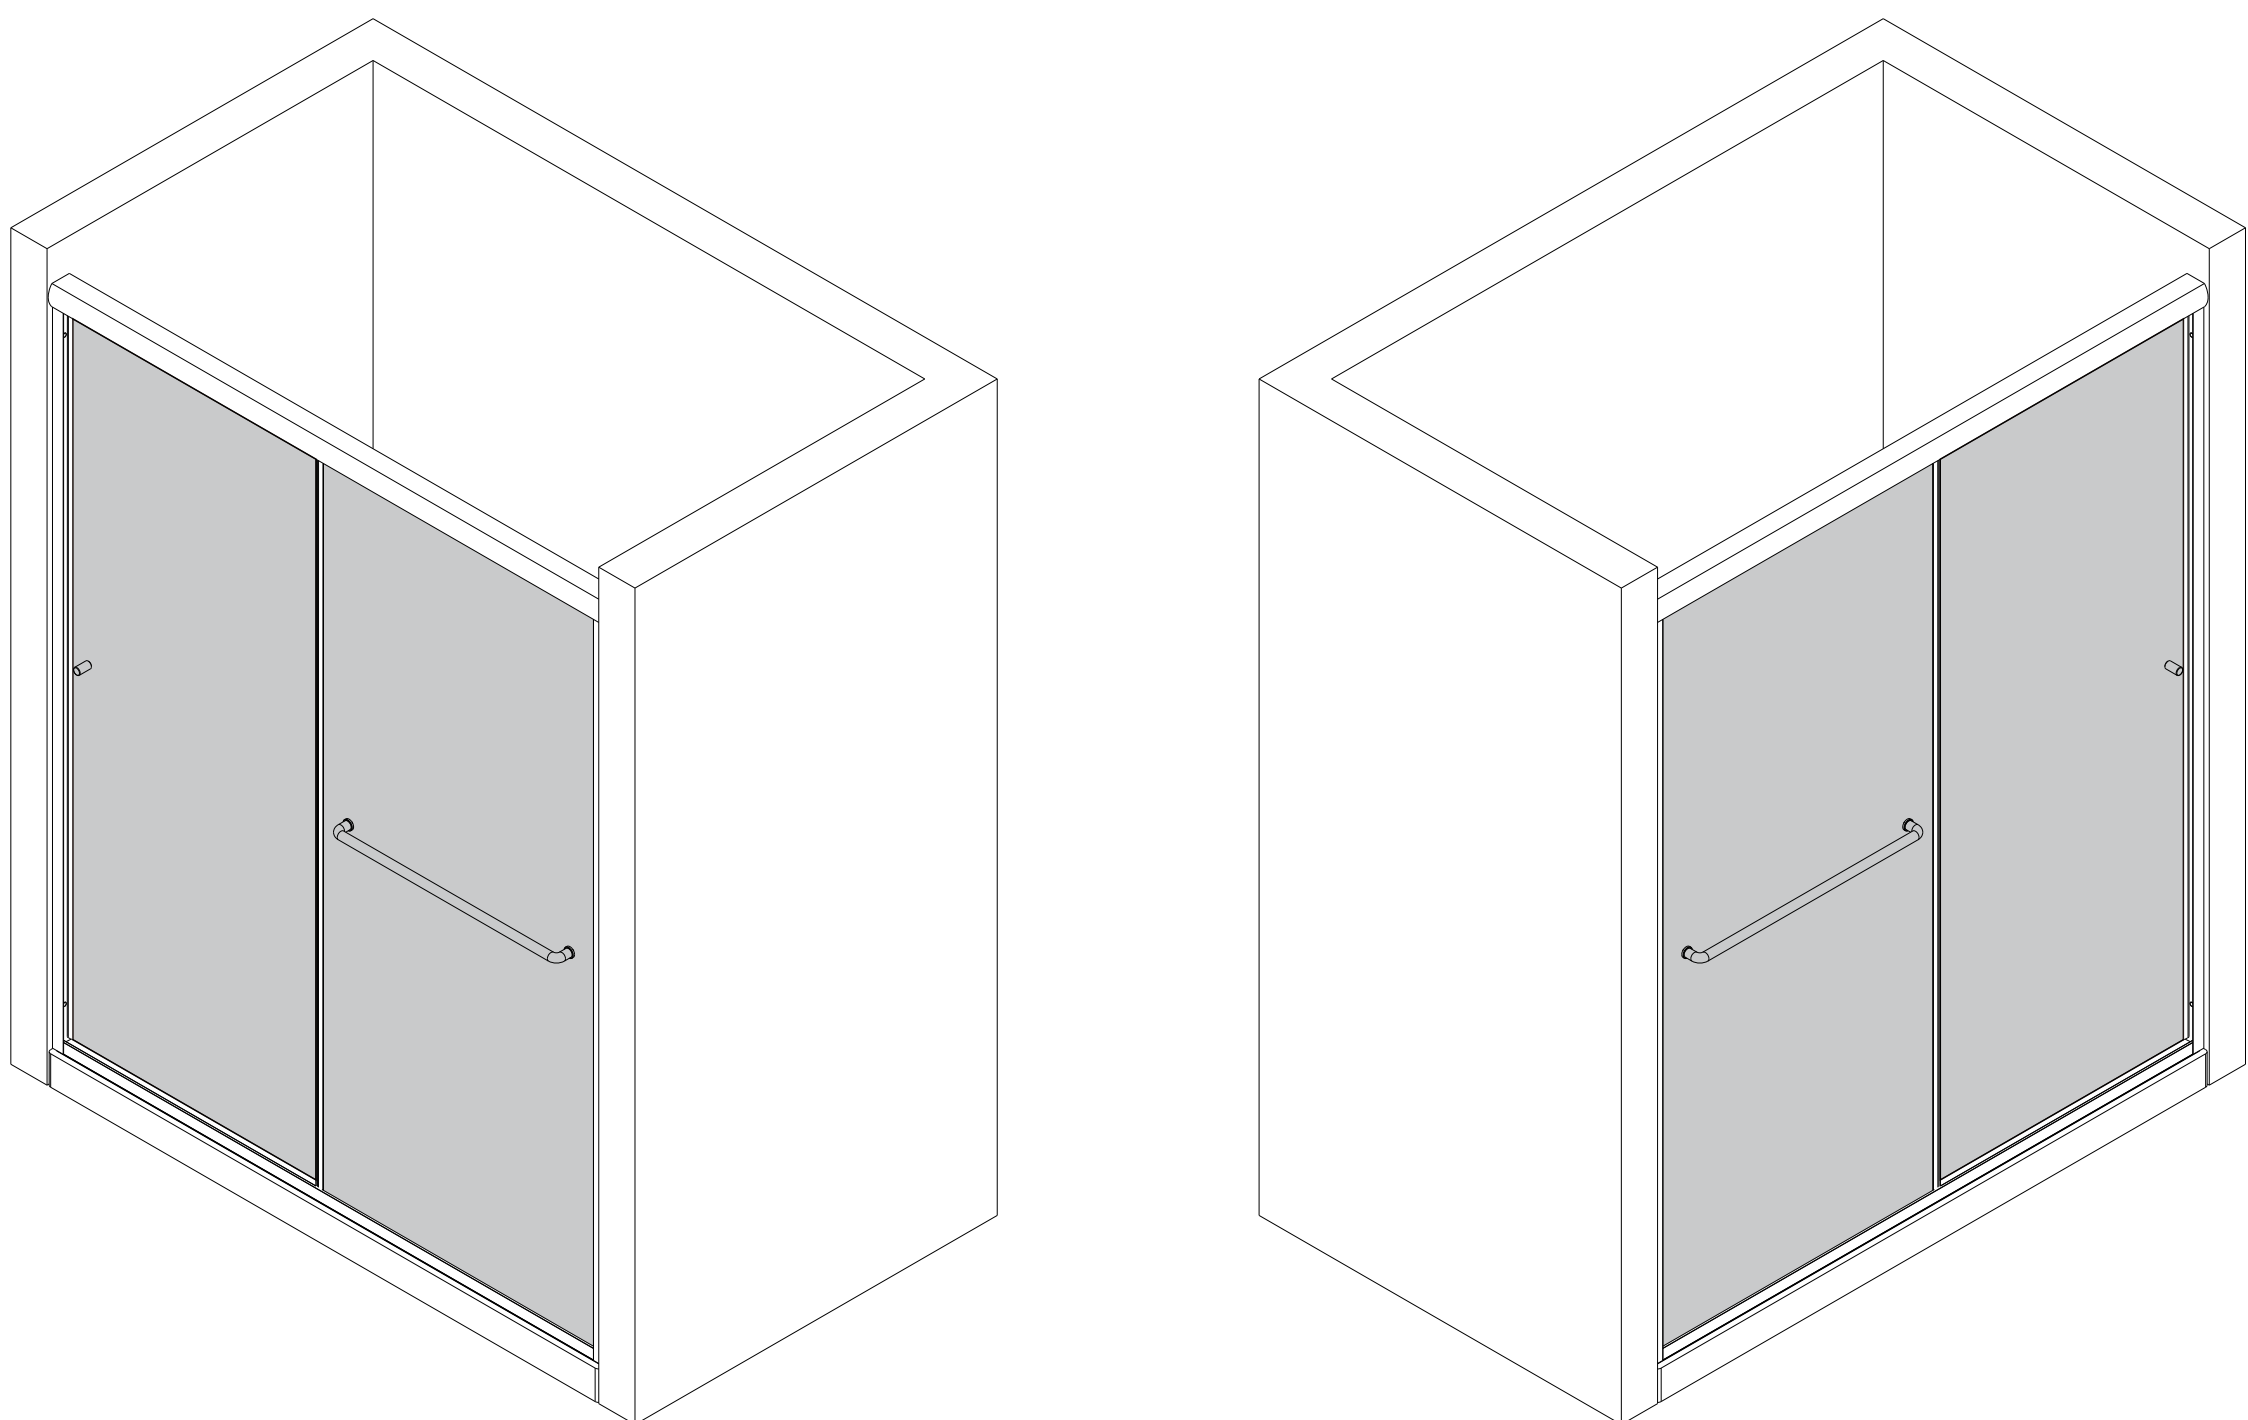

**Please do not return the product to the store.
Contact us with any questions.**

Model Specific Preparation





REQUIRED:



Verify threshold and wall with a level.

1/4" (6mm)
Out-of-Plumb
Adjustment within
the Wall Profile.


Threshold must be level.

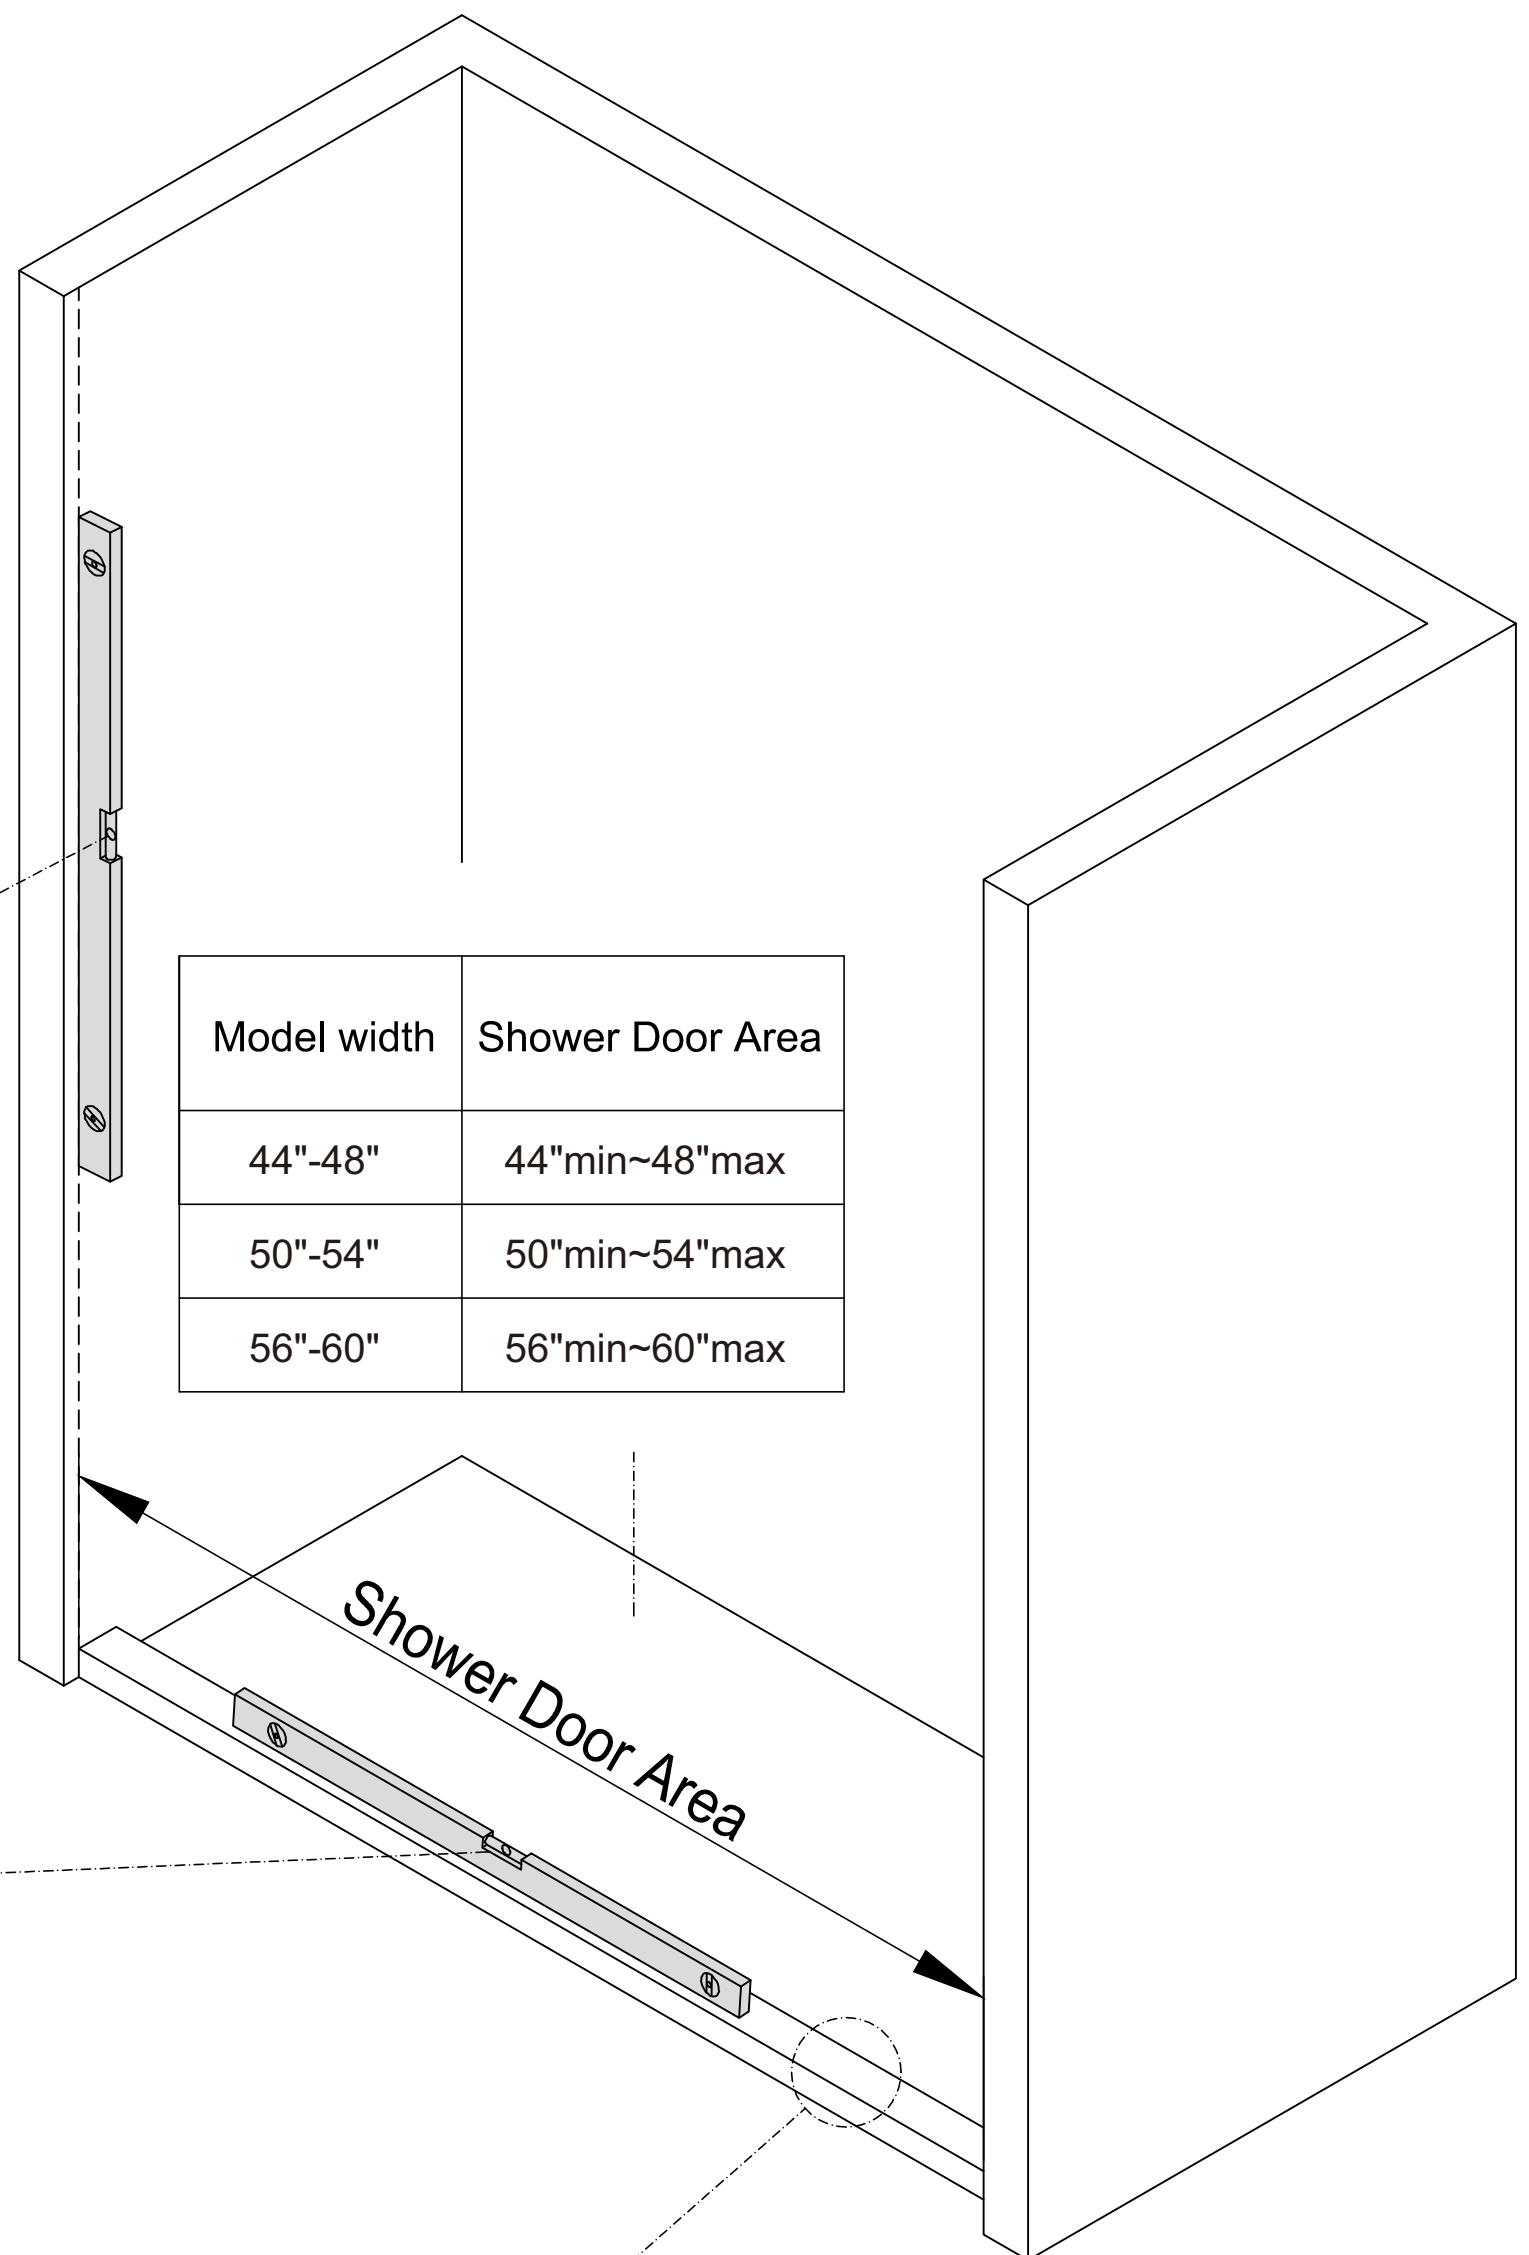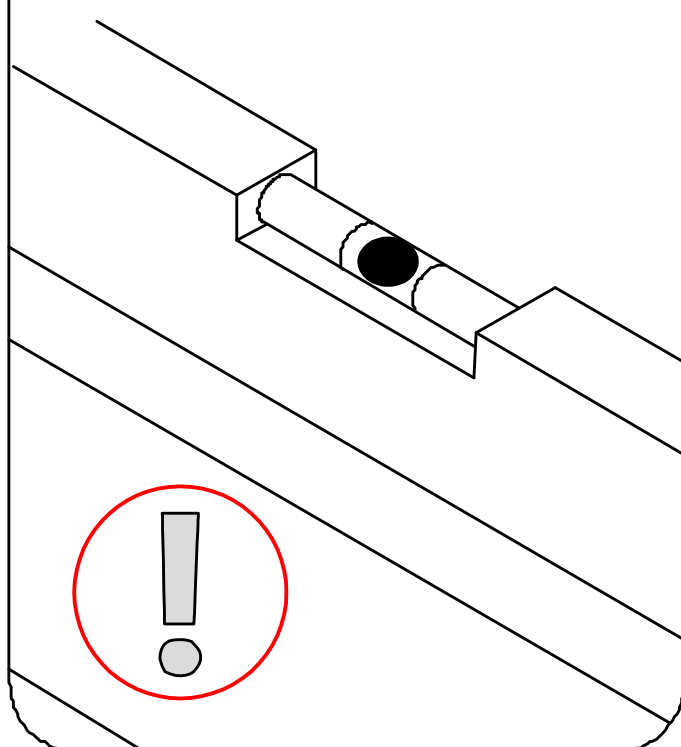

Model width	Shower Door Area
44"-48"	44"min~48"max
50"-54"	50"min~54"max
56"-60"	56"min~60"max

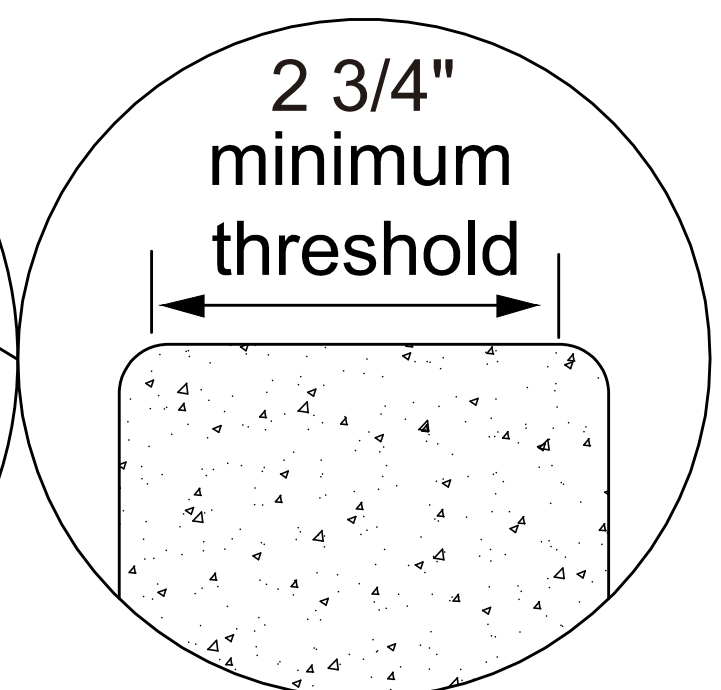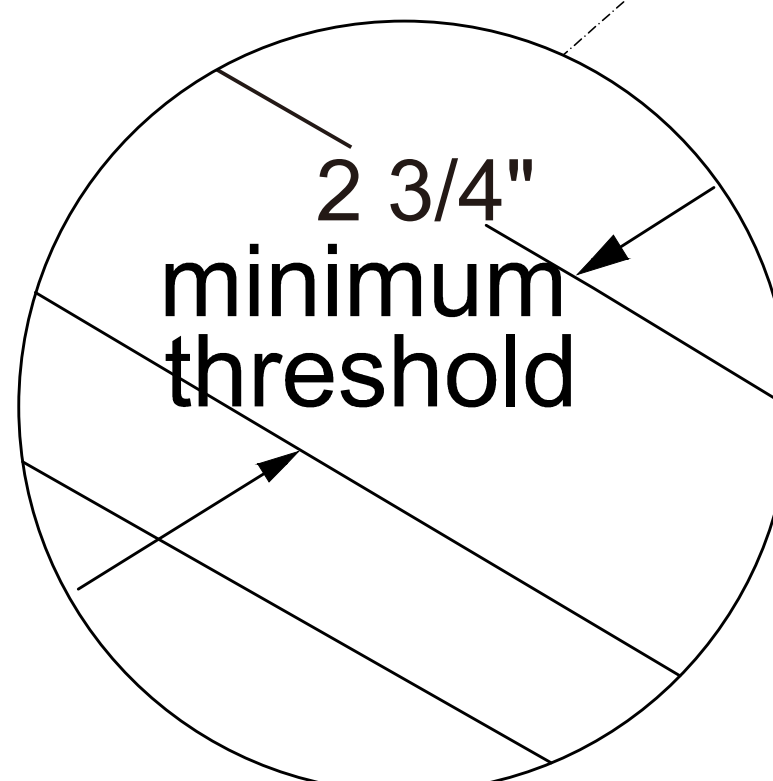

PACKAGE CONTENT

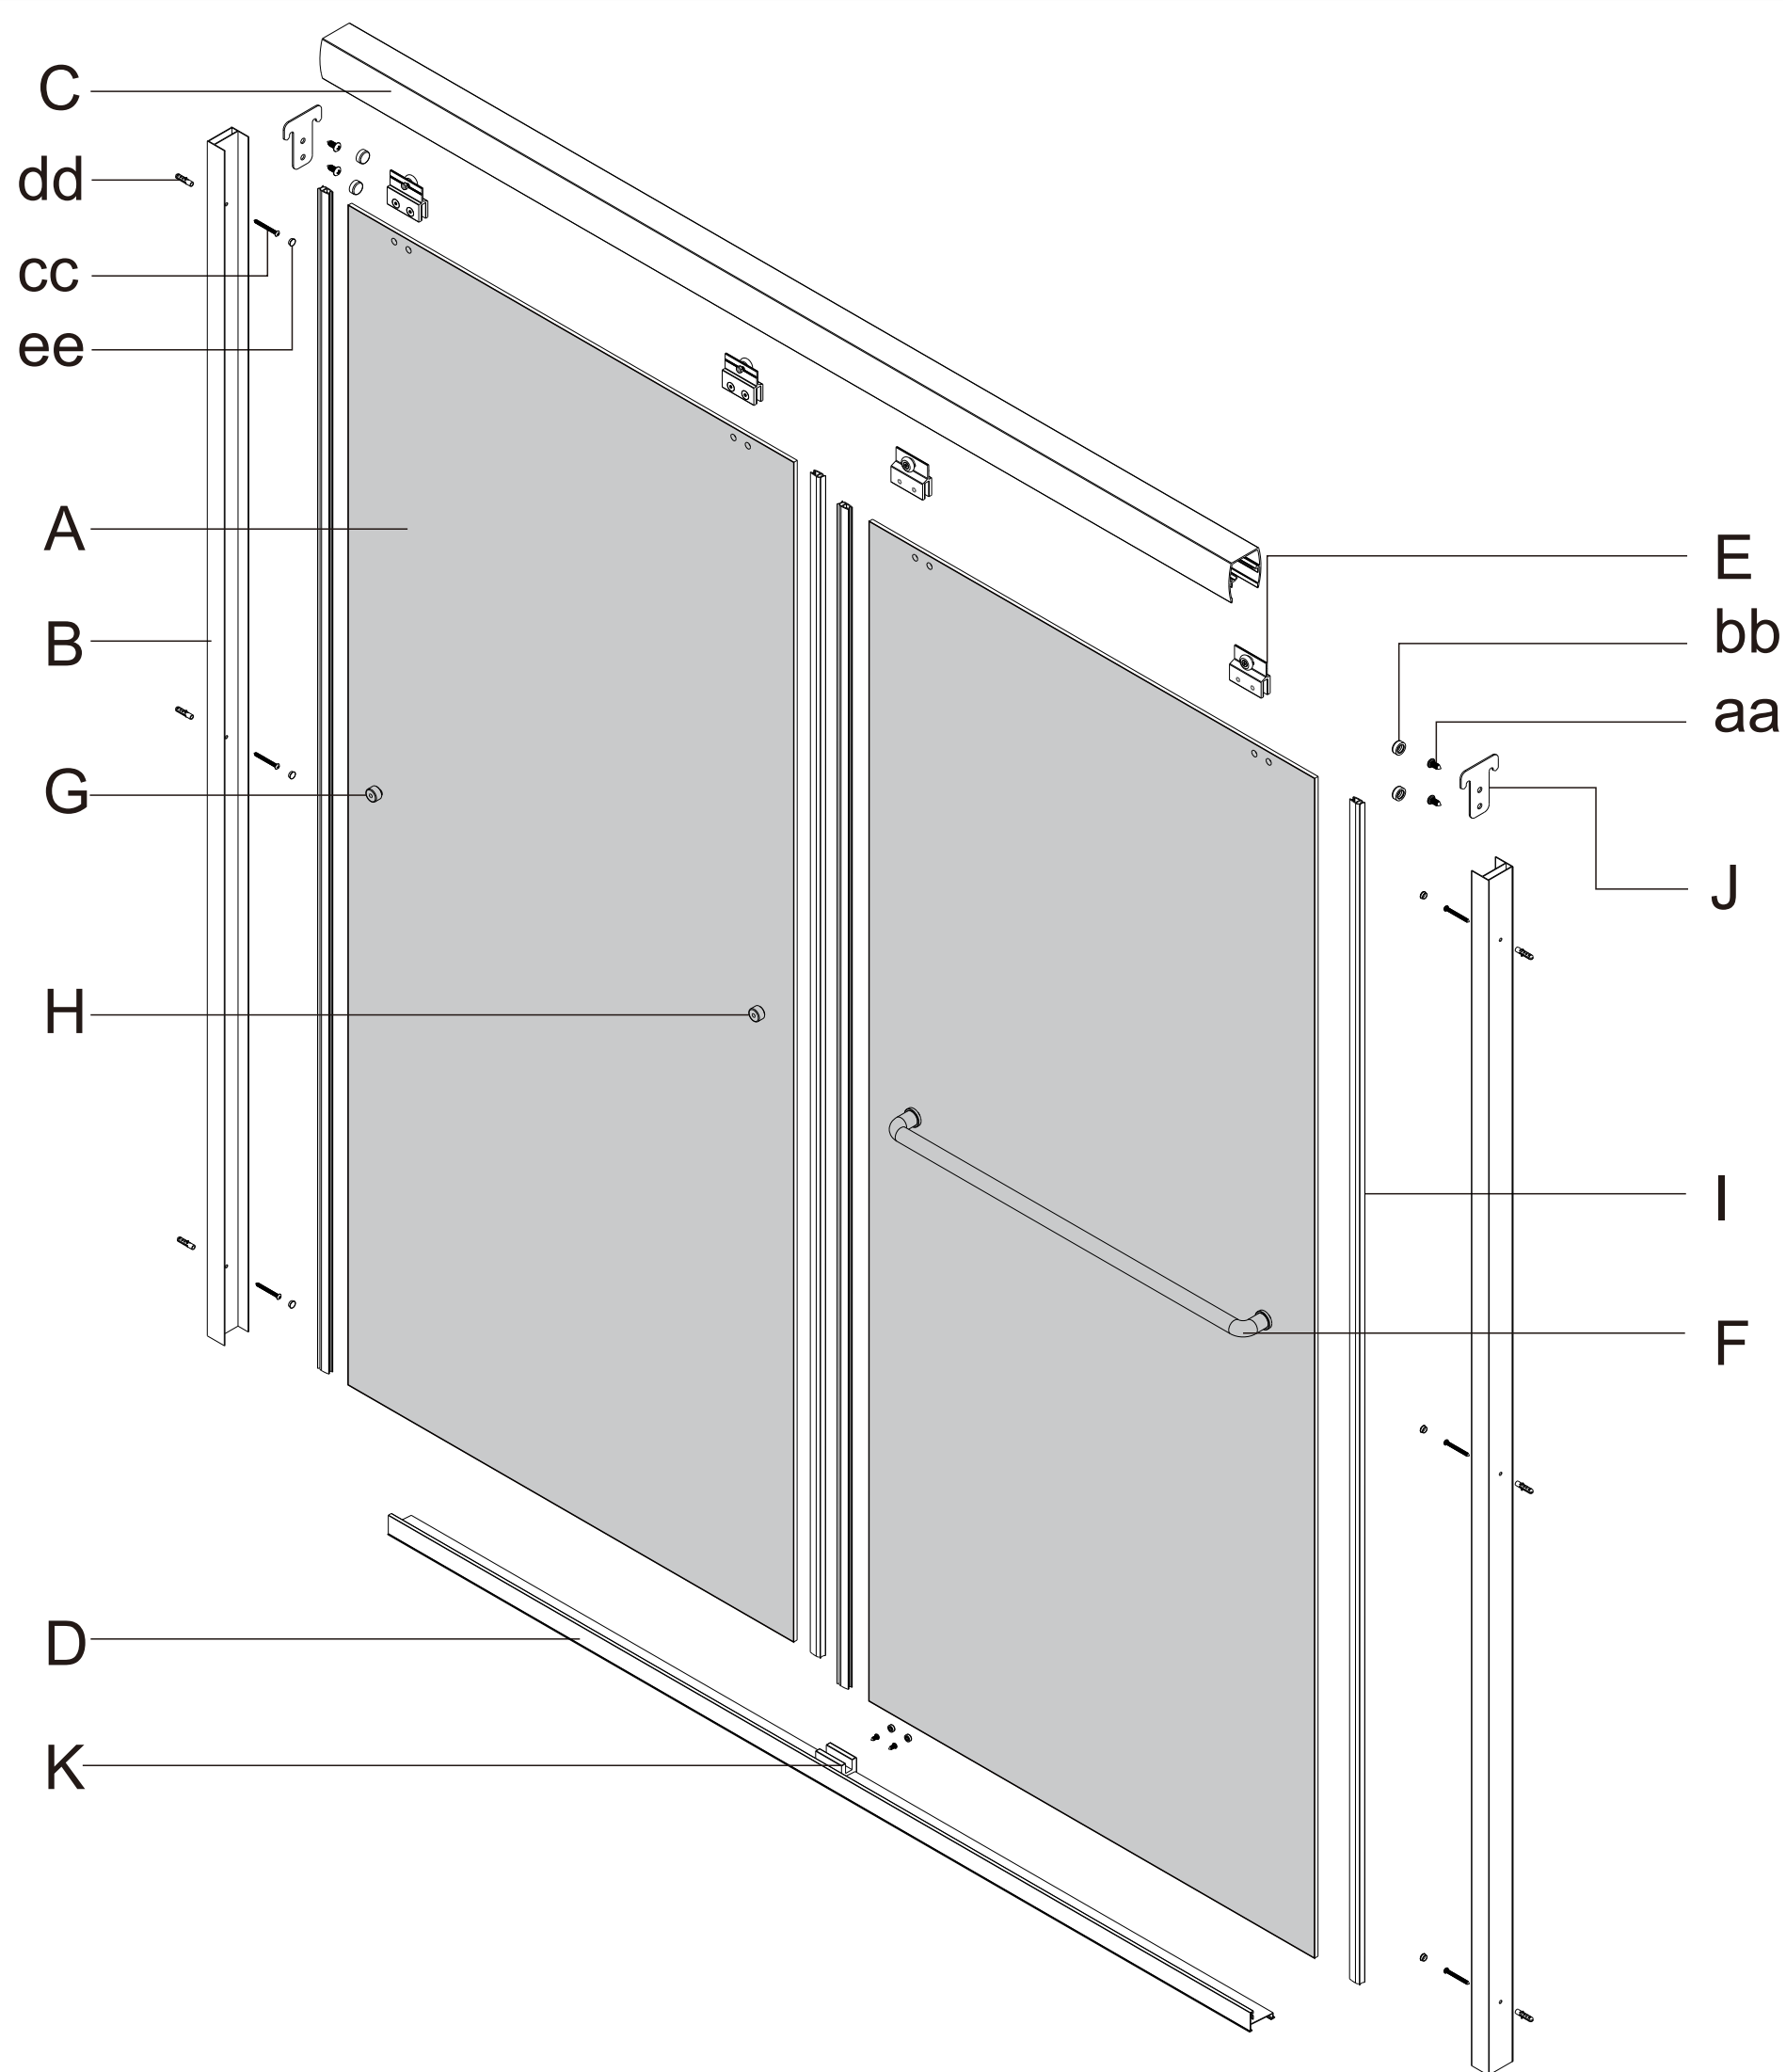

PACKAGE CONTENT


PART#	DESCRIPTION	QTY
A	Glass DOOR	2
B	Wall Jamb	2
C	Upper Guide Rail	1
D	Lower Guide Rail	1
E	Roller	4

PART#	DESCRIPTION	QTY
F	Towel Bar	1
G	Handle	1
H	Handle	1
I	Anti-water strip	4
J	Upper Guide Rail tab	2
K	Guide Block	1


NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.

PACKAGE CONTENT

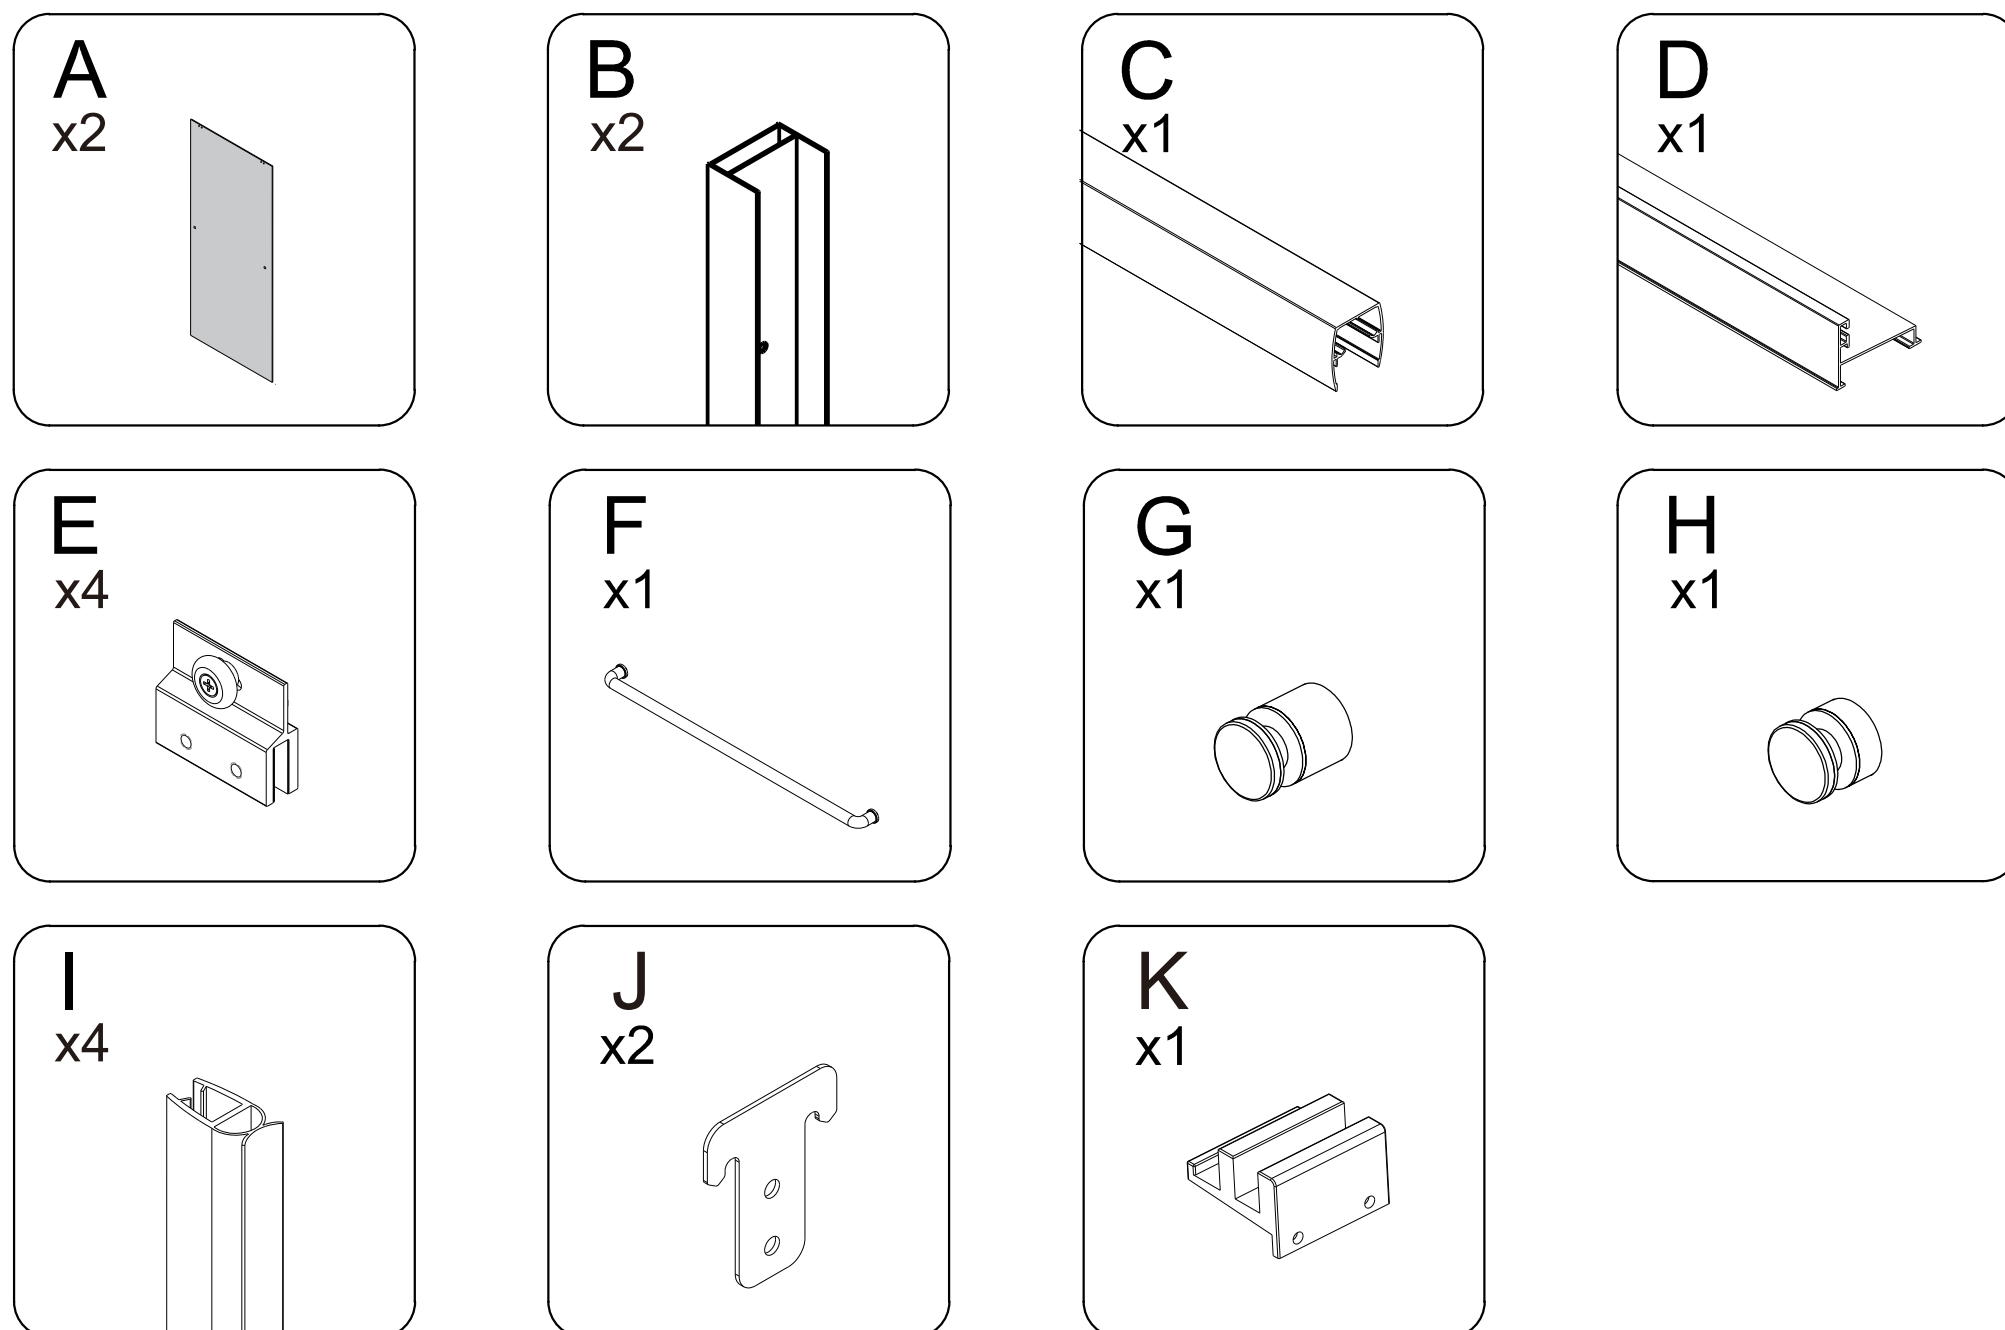

HARDWARE CONTENT

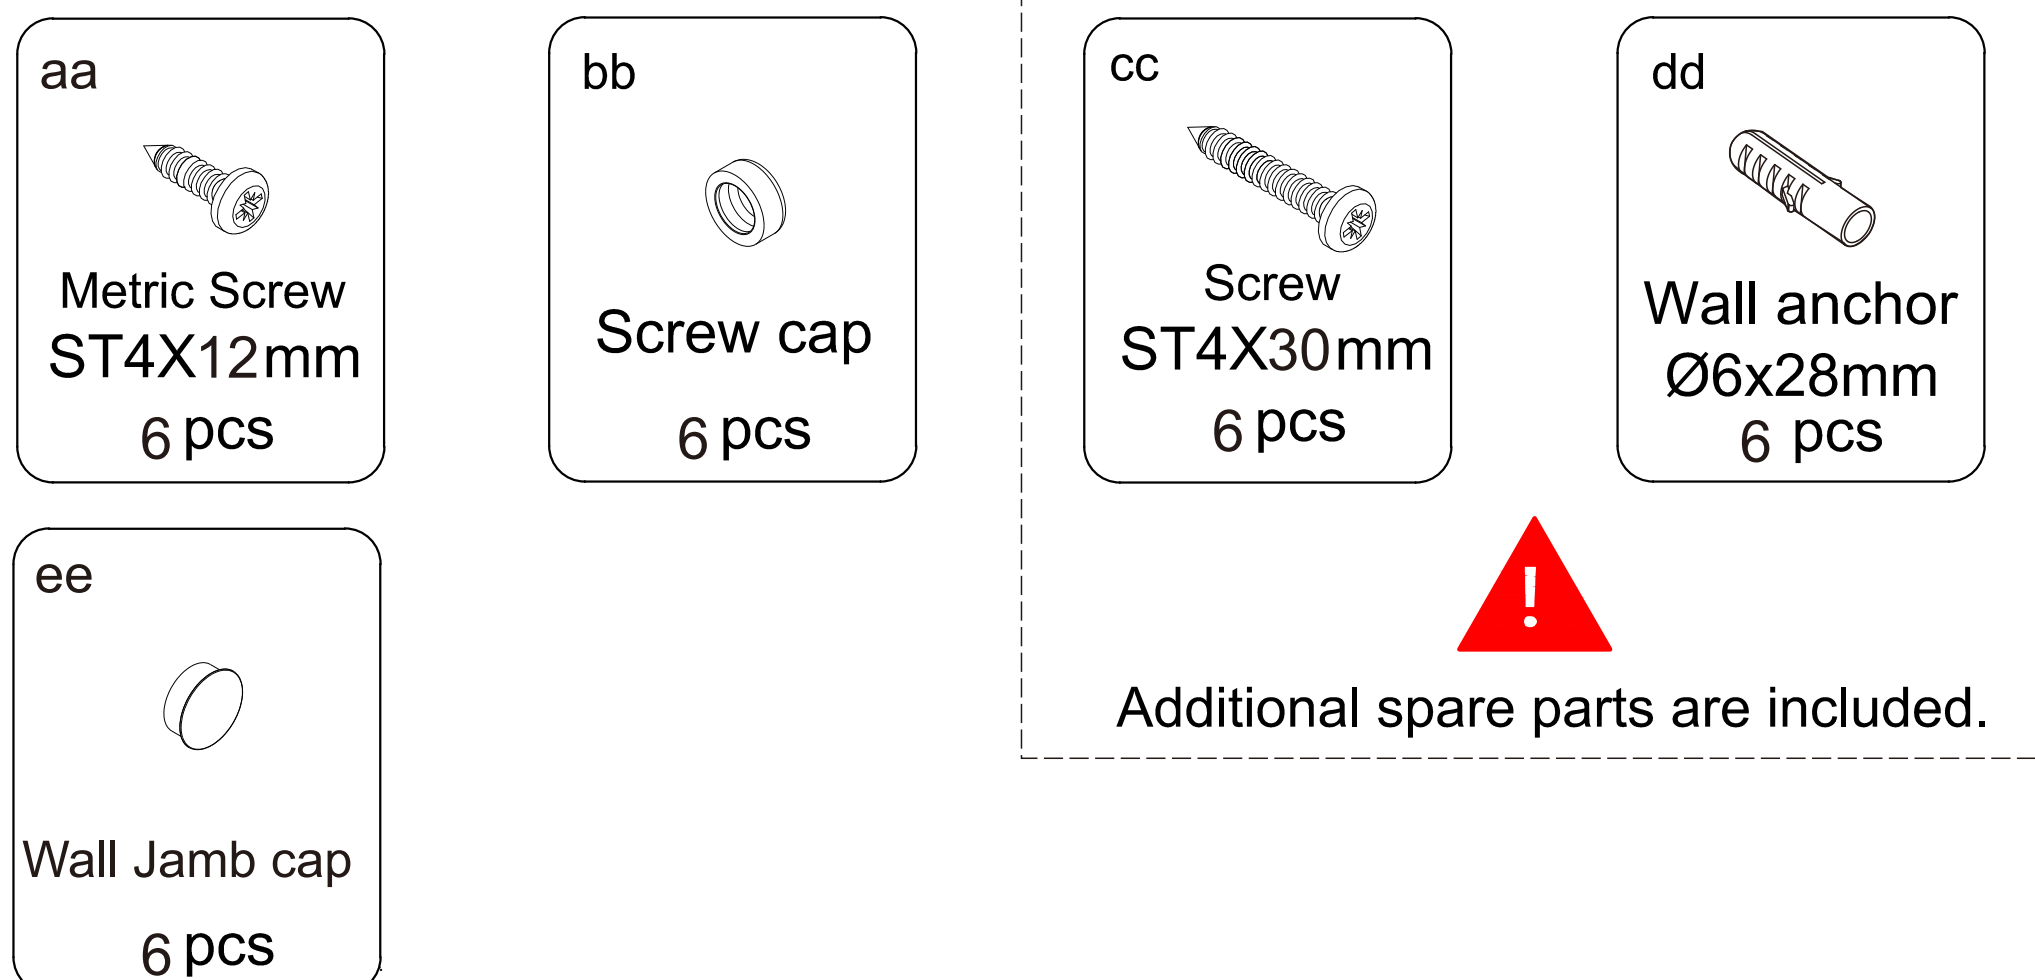


NOTE


Inspect all parts for missing prior to installation!
Contact us for any part missing.

TOOLS REQUIRED


Drill Bits

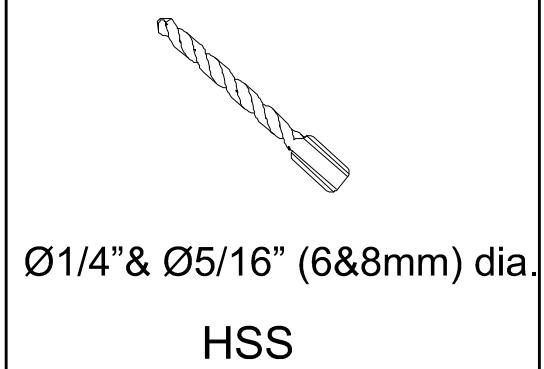


Screw Driver

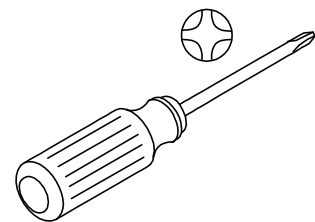


Drill

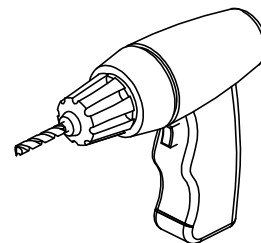


Level

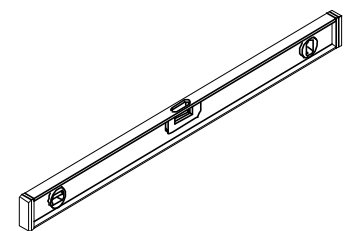


Silicone

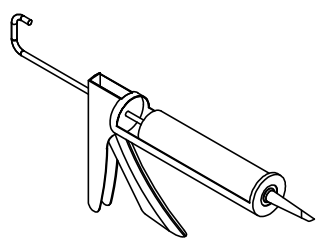


Measuring Tape

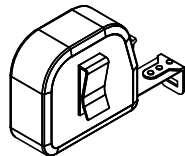


Soft Head Hammer

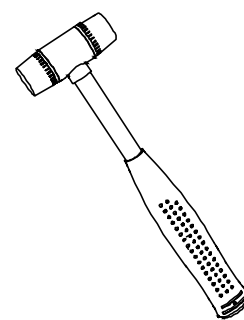


Pencil

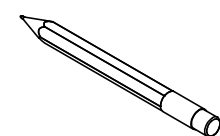

Knife

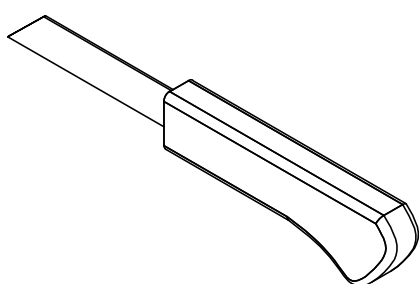


Sealant

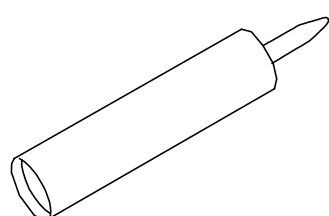

MASONRY DRILL
BIT FOR TILE
Ø6mm




Safety Glasses

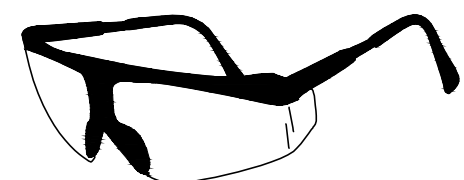


Glove




Carpenter's Squarer

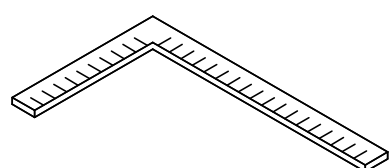


Masking or painter's
tape

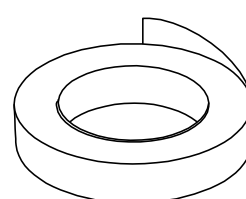


Hack Saw

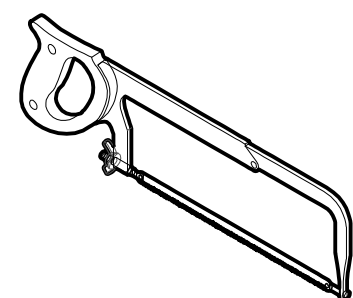

Metal File

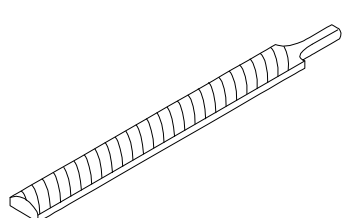

Glass suction

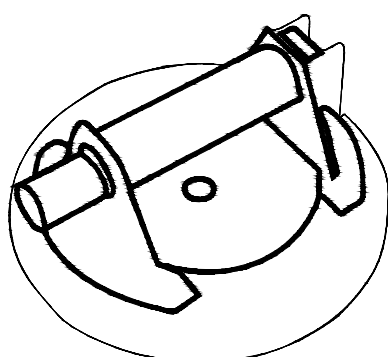

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

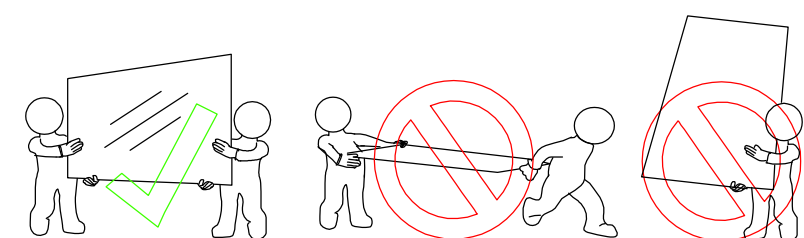

1

Measure the finished opening width.

NOTE

- 1.Measure the finished opening width at the bottom and at the model height.
- Use these dimensions as “W1” (top) and “W2”(bottom) in step #2.
- 2.Also check the threshold for level and the walls for plumb.(Fig 1)

This model will only accommodate up to 1/4"(6mm) for out-of-plumb condition.


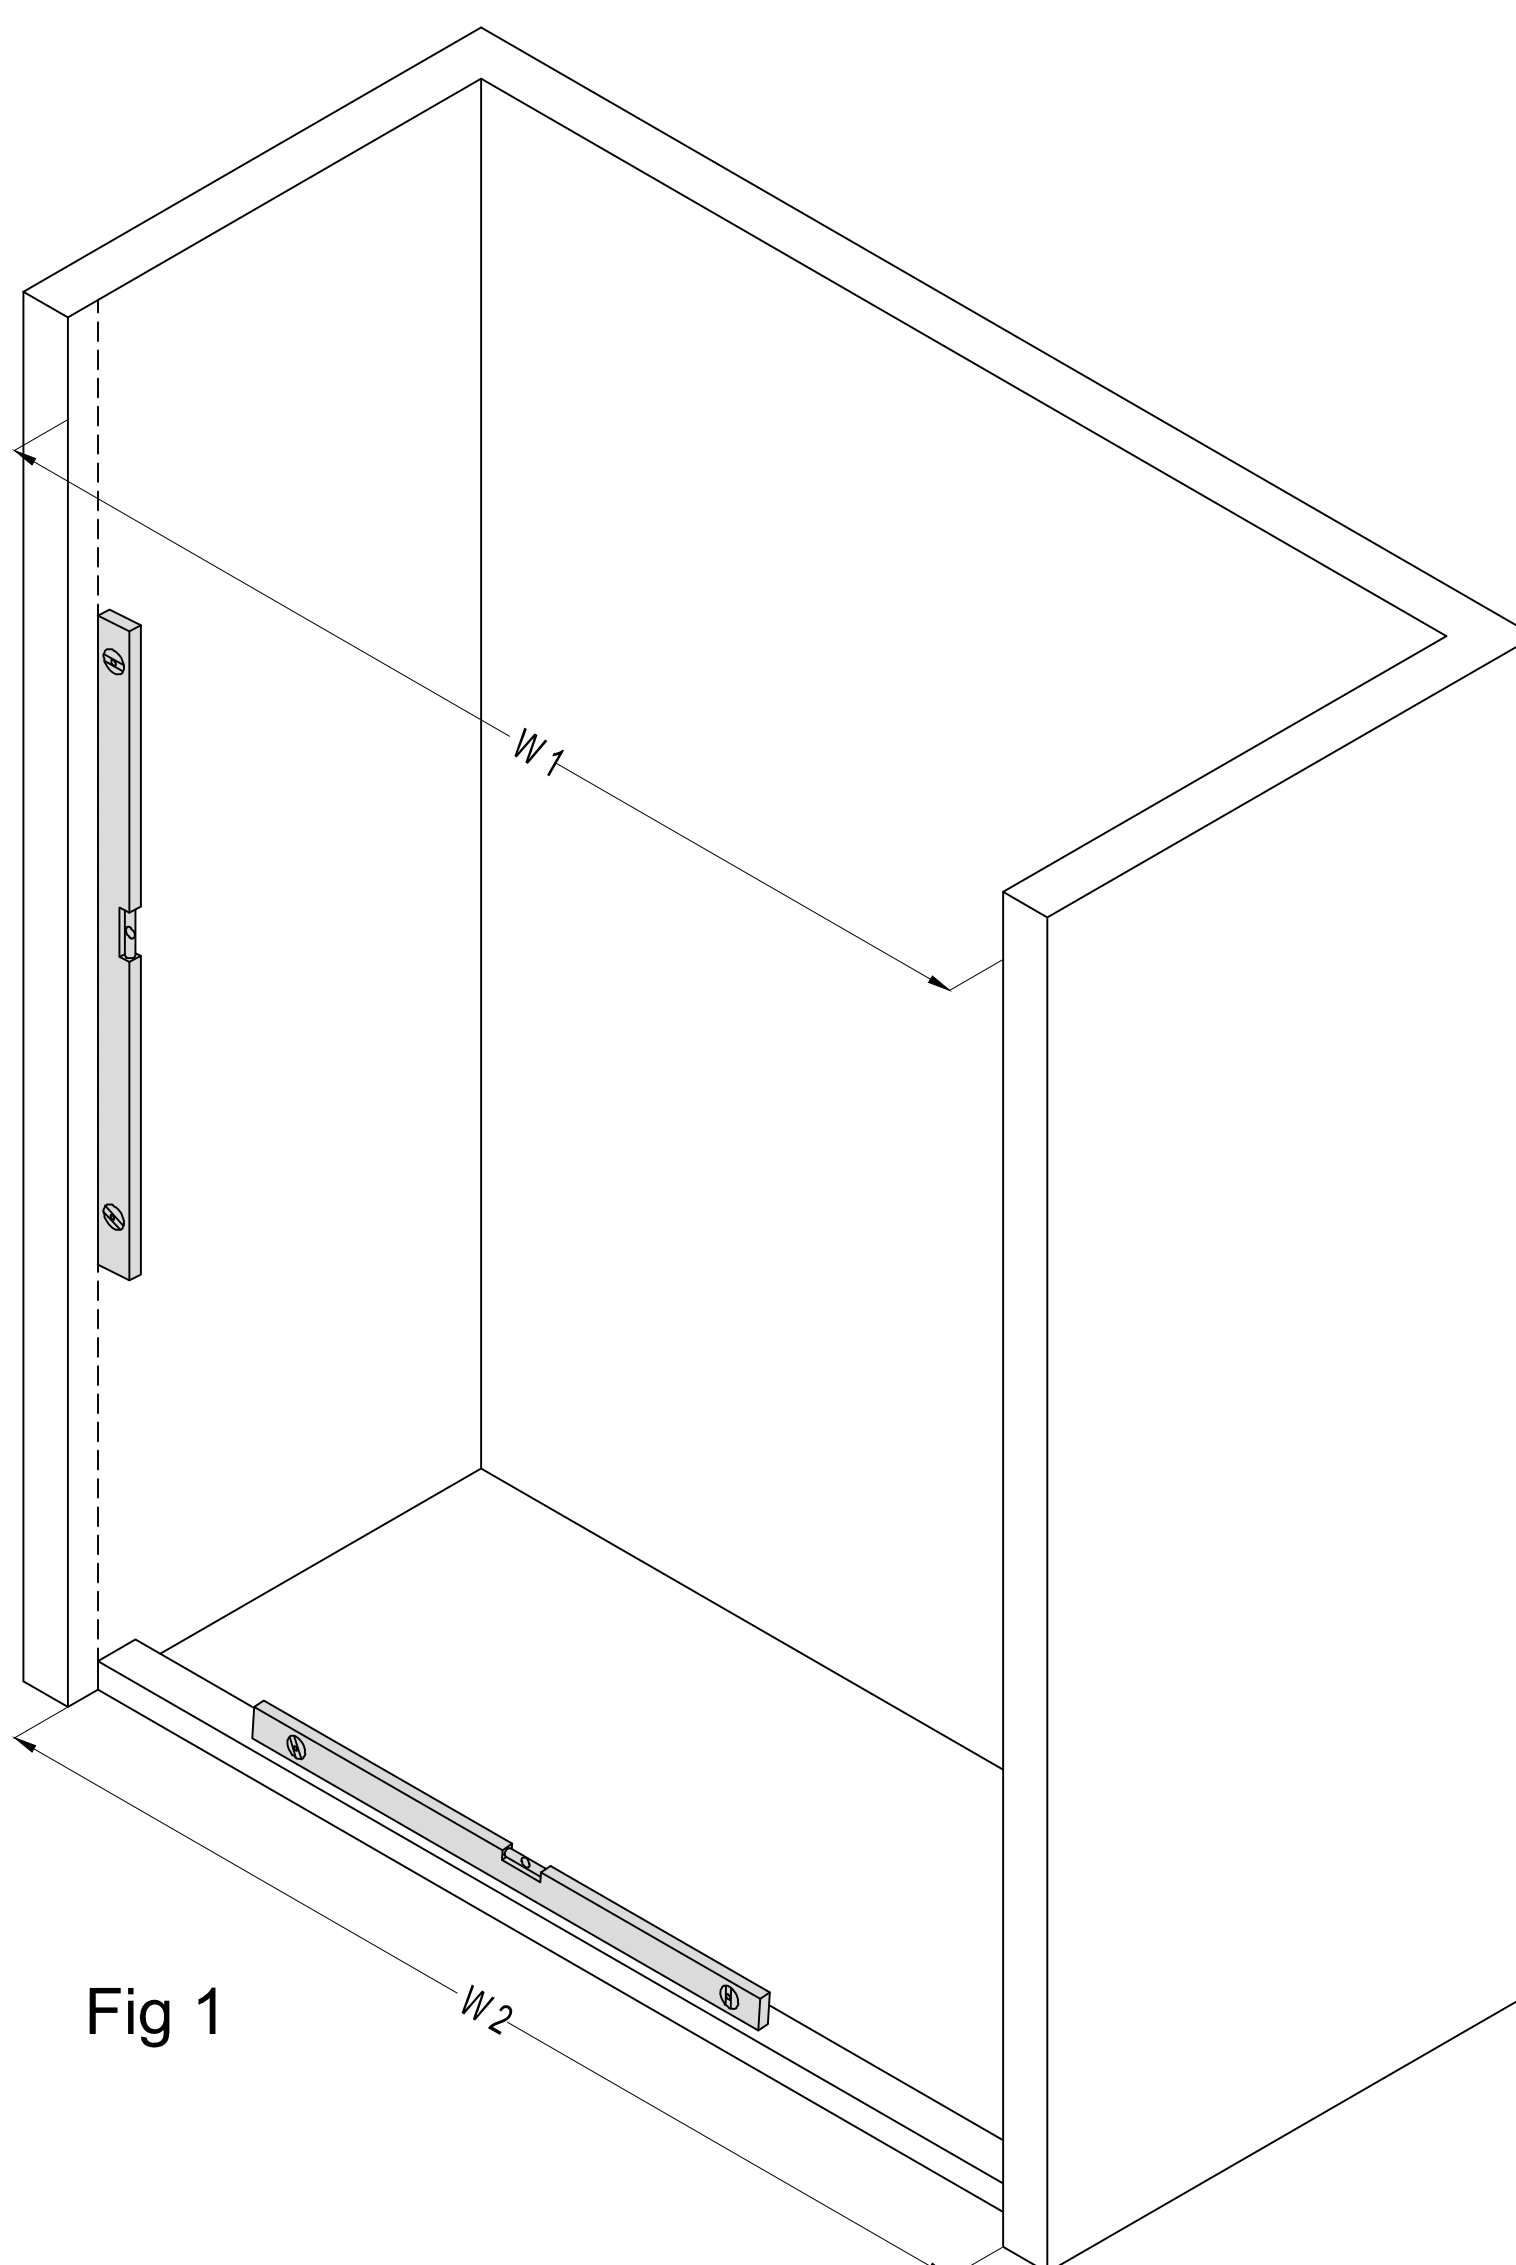


Fig 1

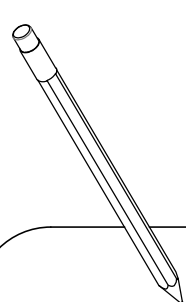


Finished opening top (W1)

Finished opening bottom (W2)


2

Cut the **Upper Guide Rail (M)** and the **Bottom Rail (B)** to fit your finished opening using either a miter saw or a hacksaw

Cut the **Upper Guide Rail (M)** to: "W1" (top) dimension

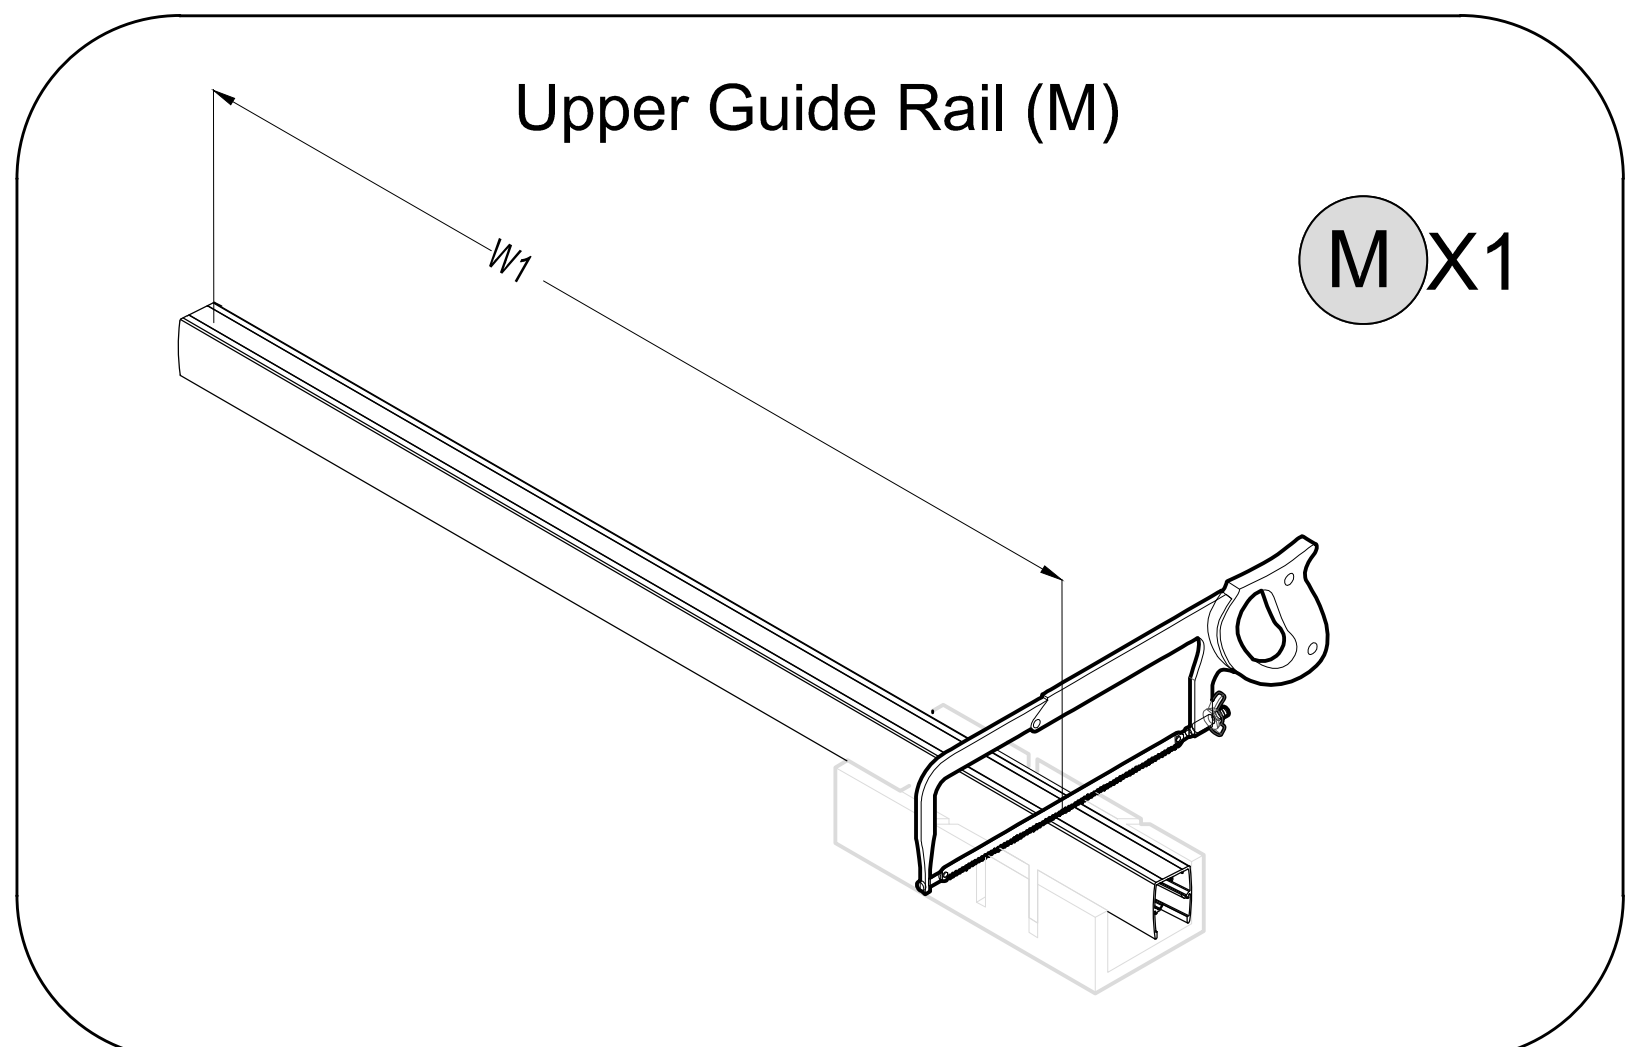







Cut the Bottom Rail(B) to:"W2"(bottom) dimension minus 1"(25mm)
Use a metal file to remove any burrs from the cut ends

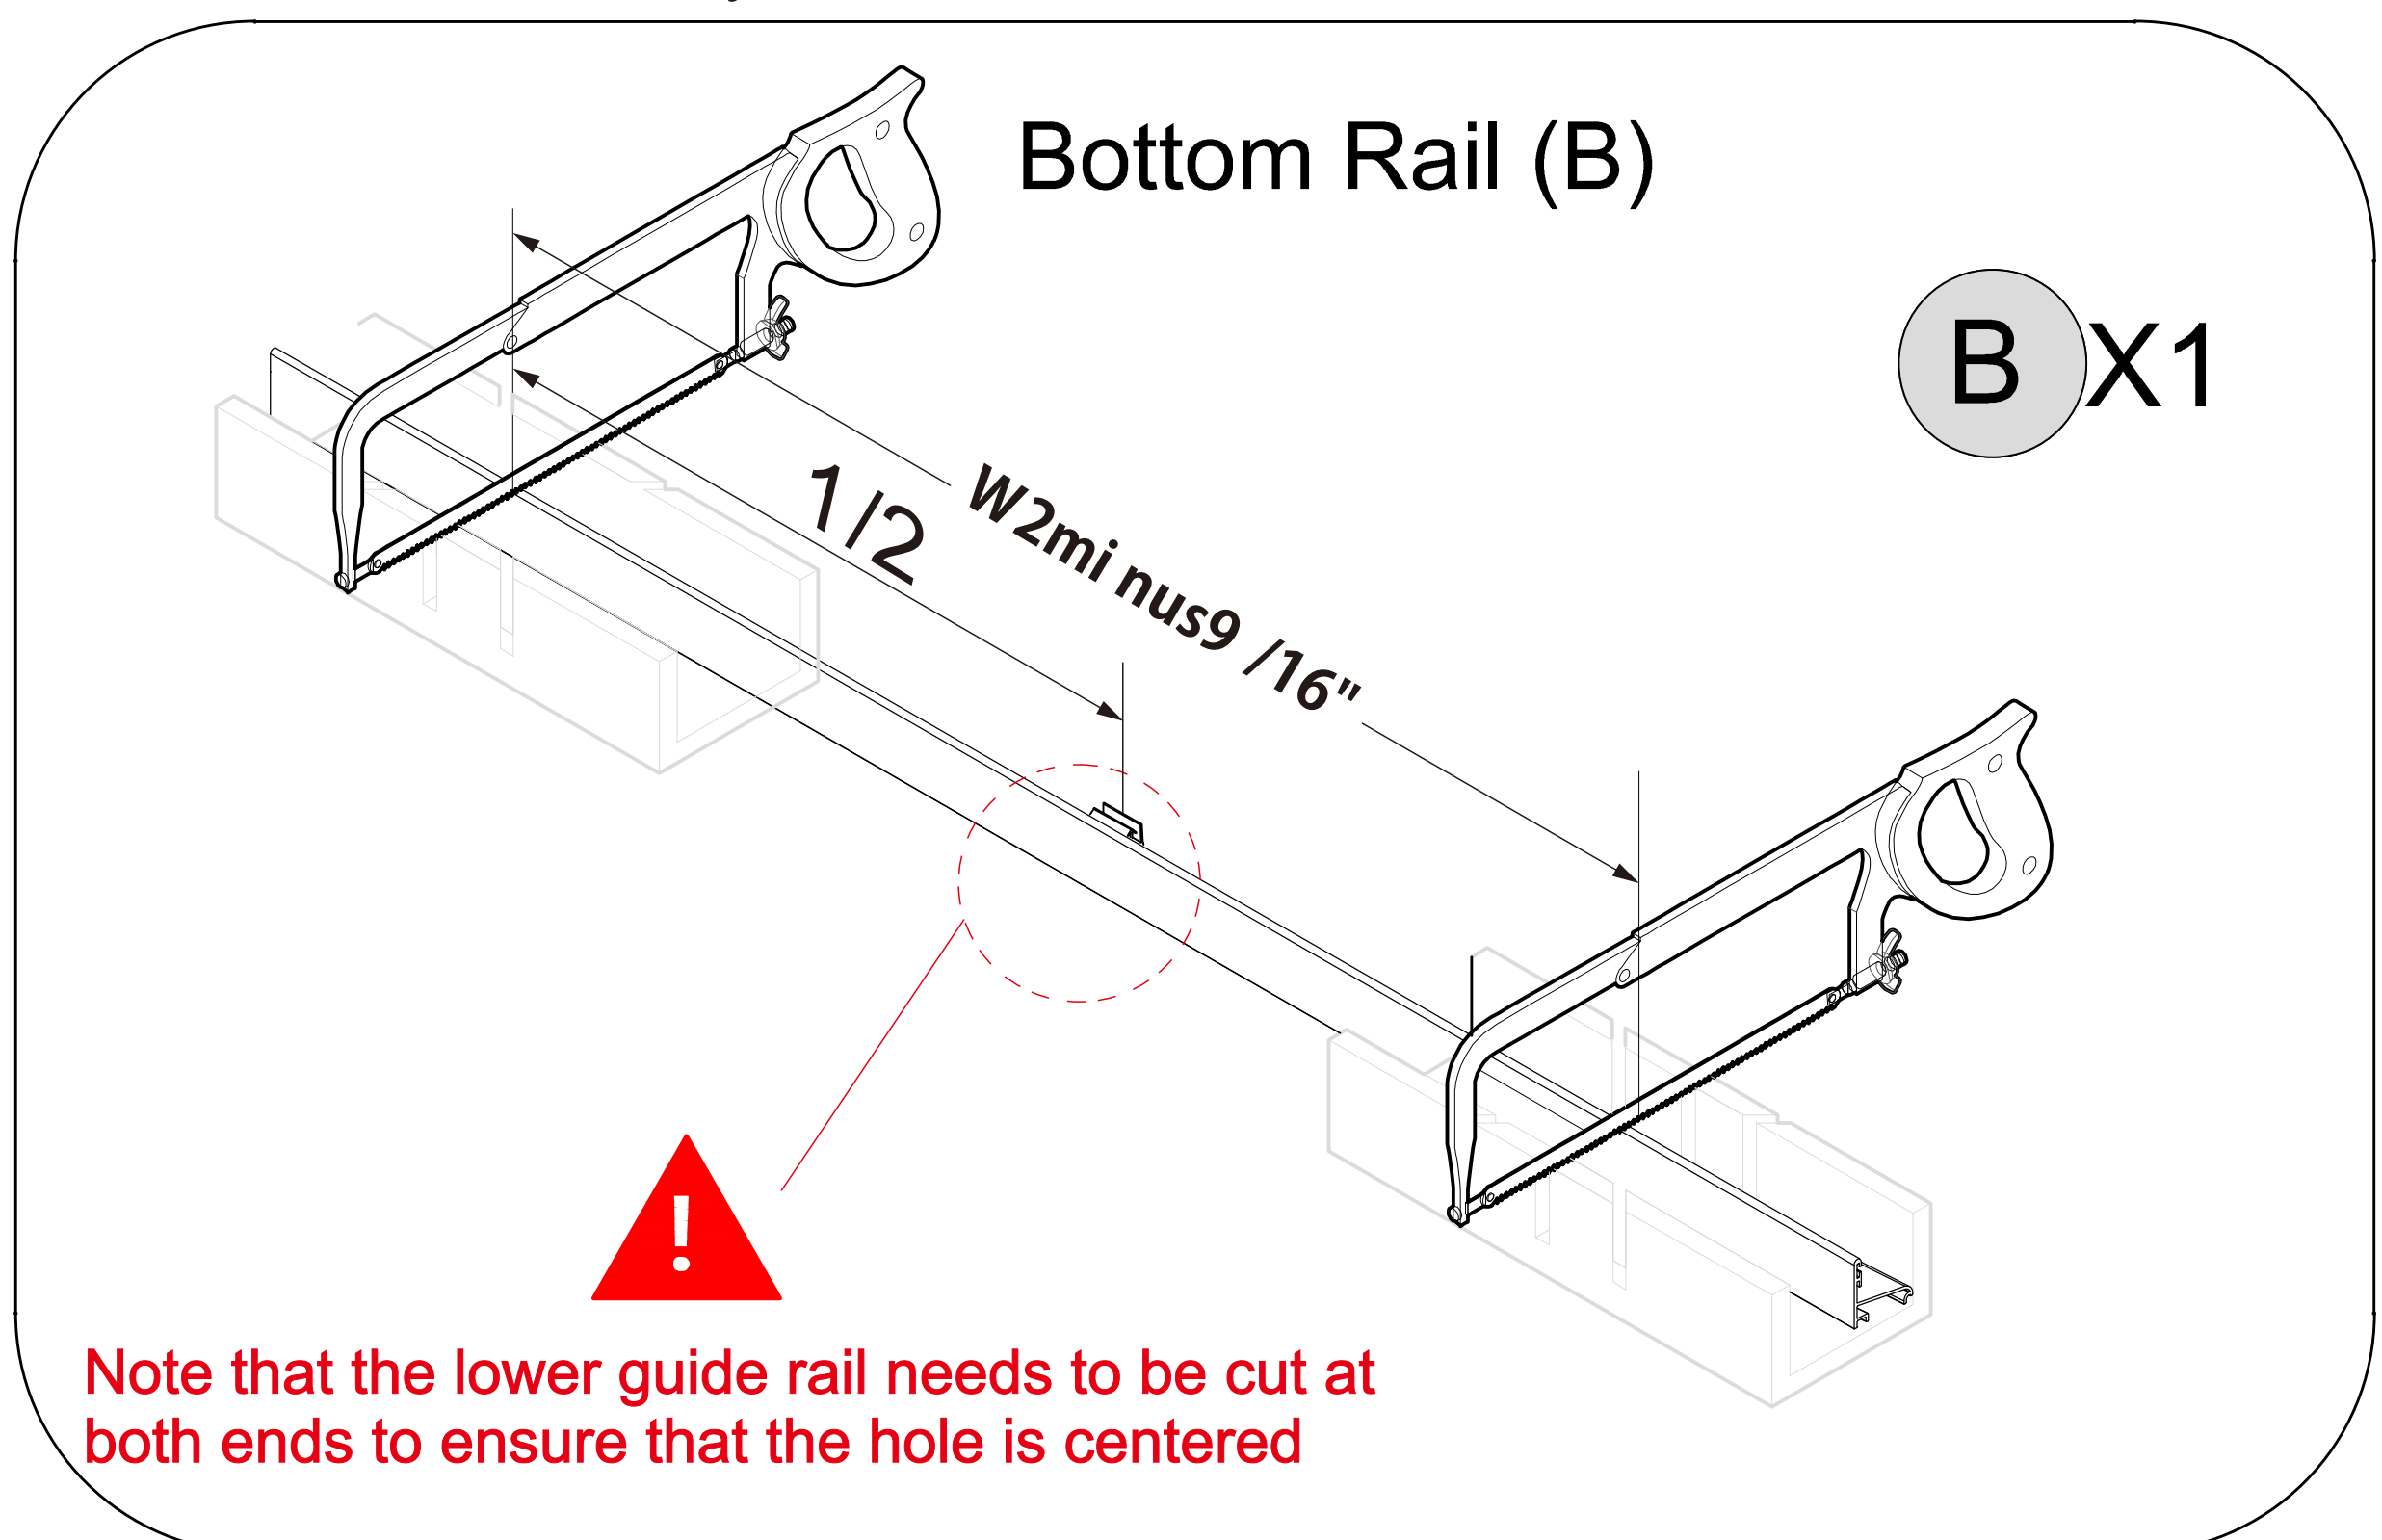

3 Drill screw holes for **Wall Jamb(B)** and insert in the **Wall Anchor(bb)**.

NOTE

1. Determine your starting point from the edge of tray (3/8" (10mm) is recommended) and mark the position as Fig.a and Fig.b
2. Plumb your **Wall Jambs(B)** on each side and then mark screw holes position as Fig.c .
3. Drill holes with $\phi 6\text{mm}$ (1/4") drill bit as Fig.d.
4. Insert **Wall Anchors(dd)** as Fig.e .

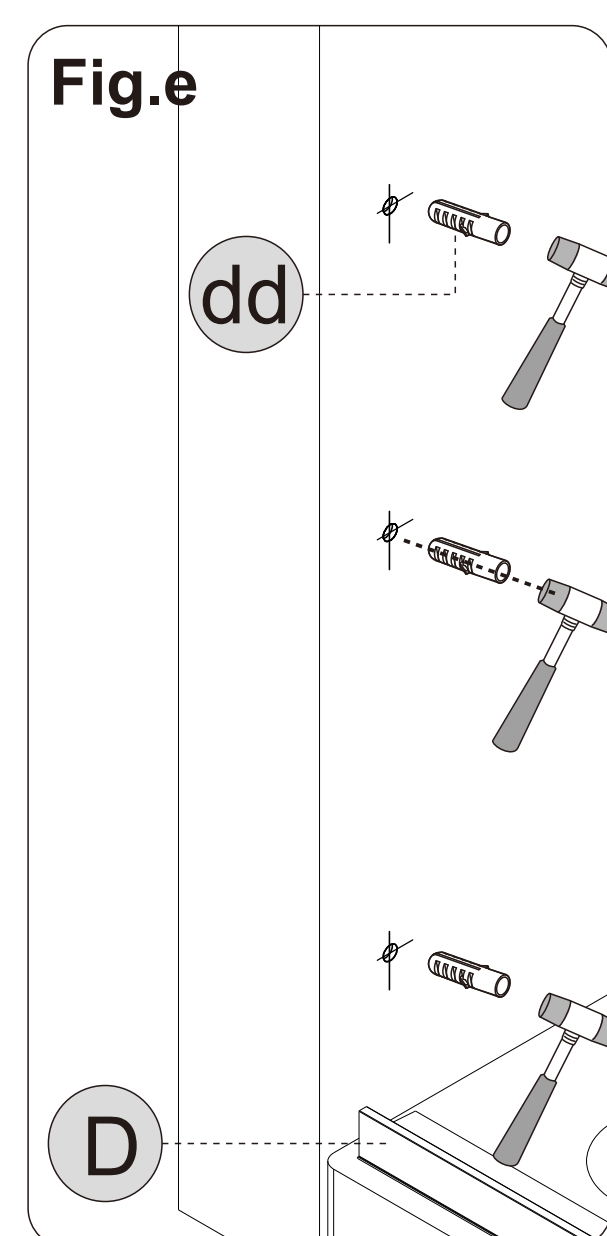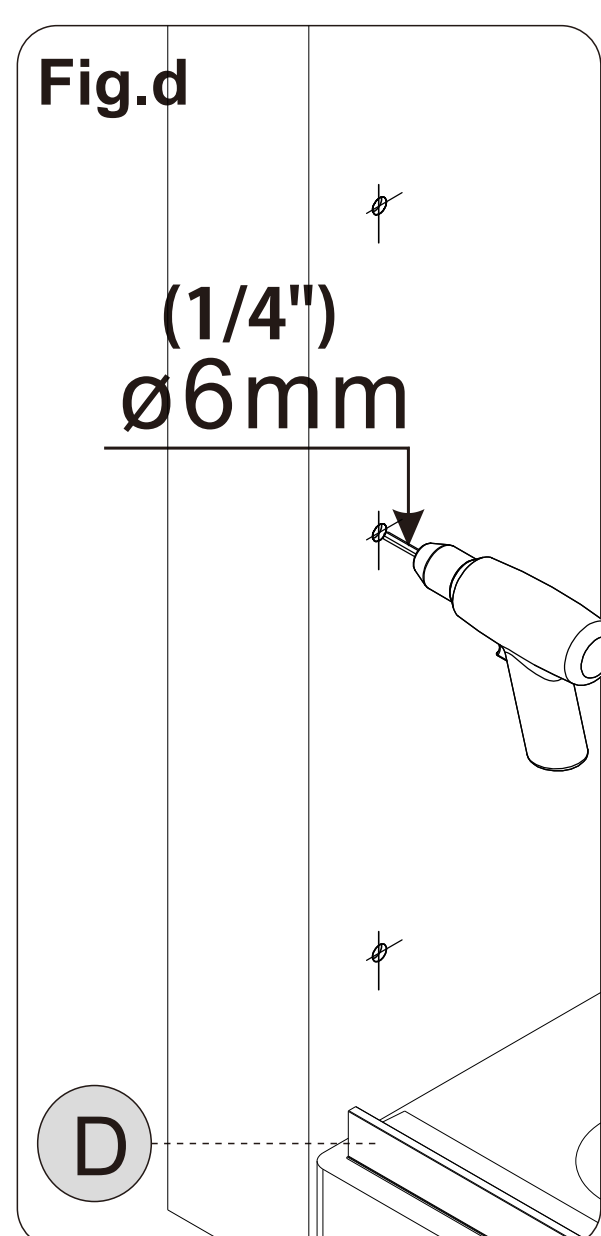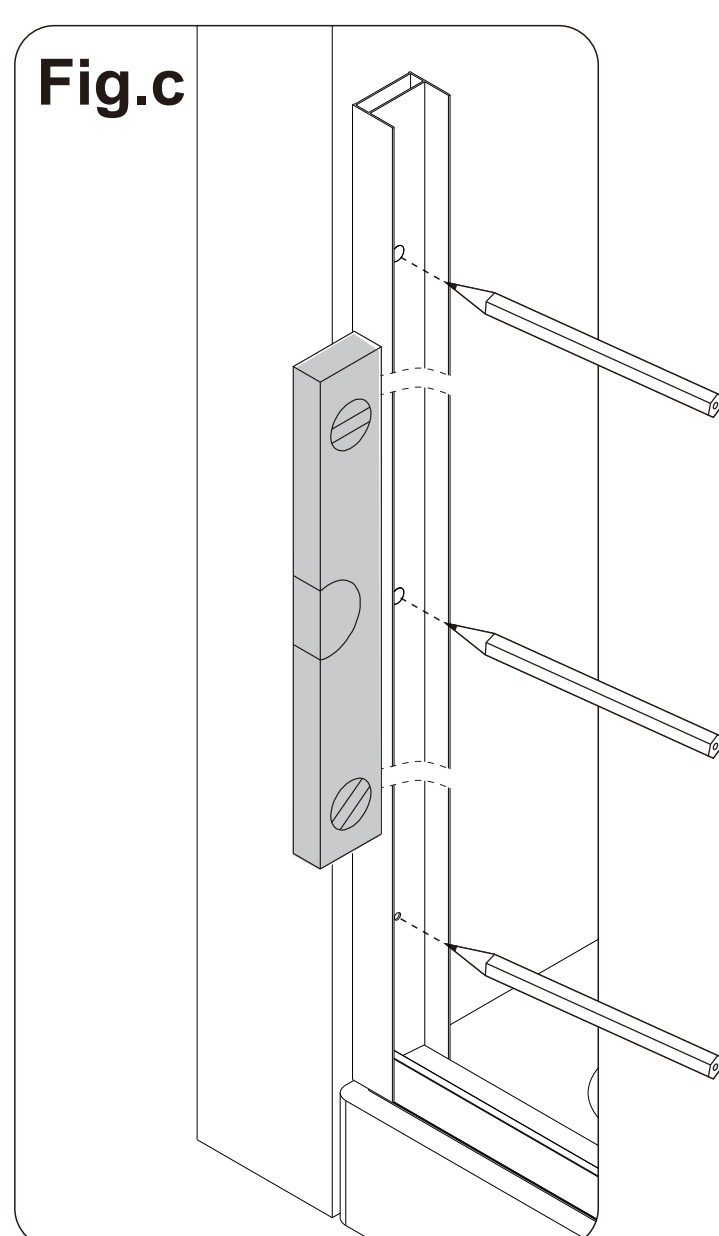
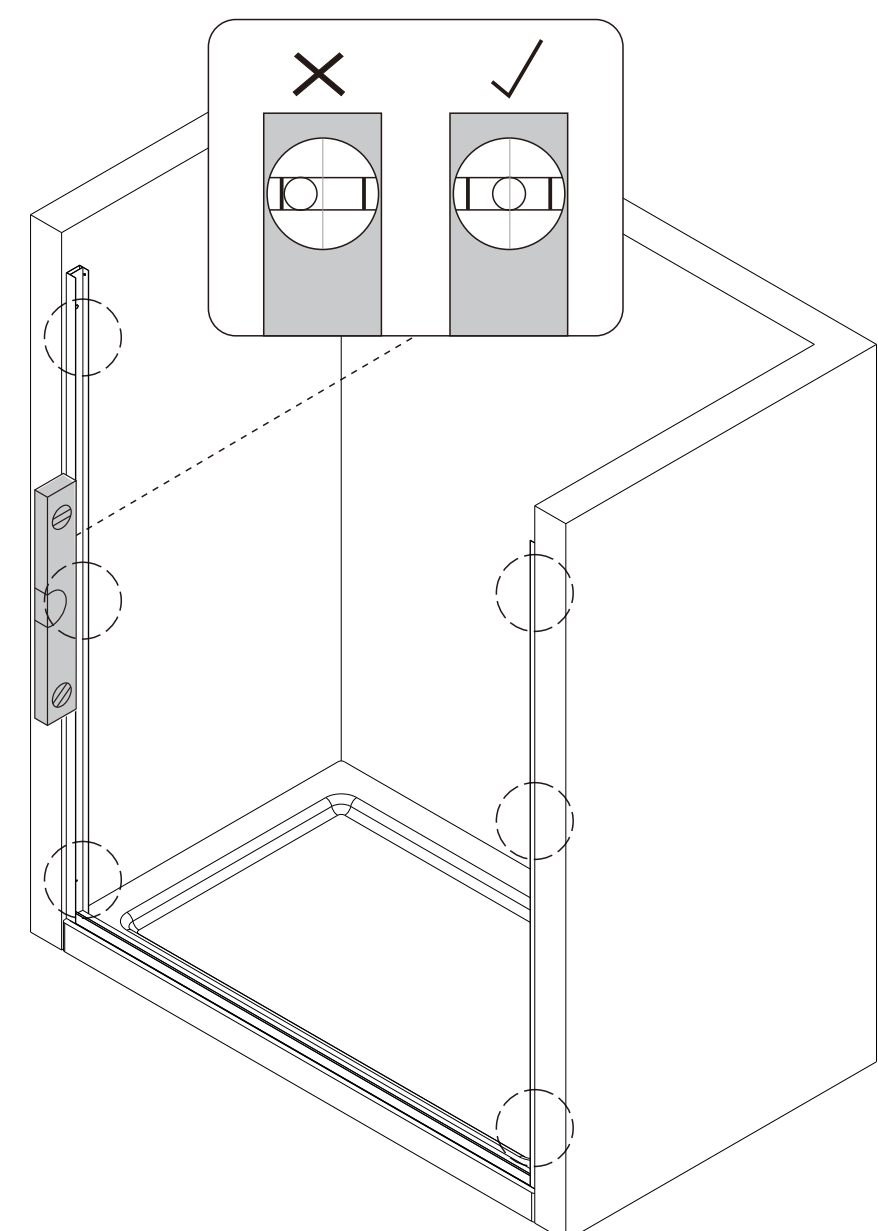
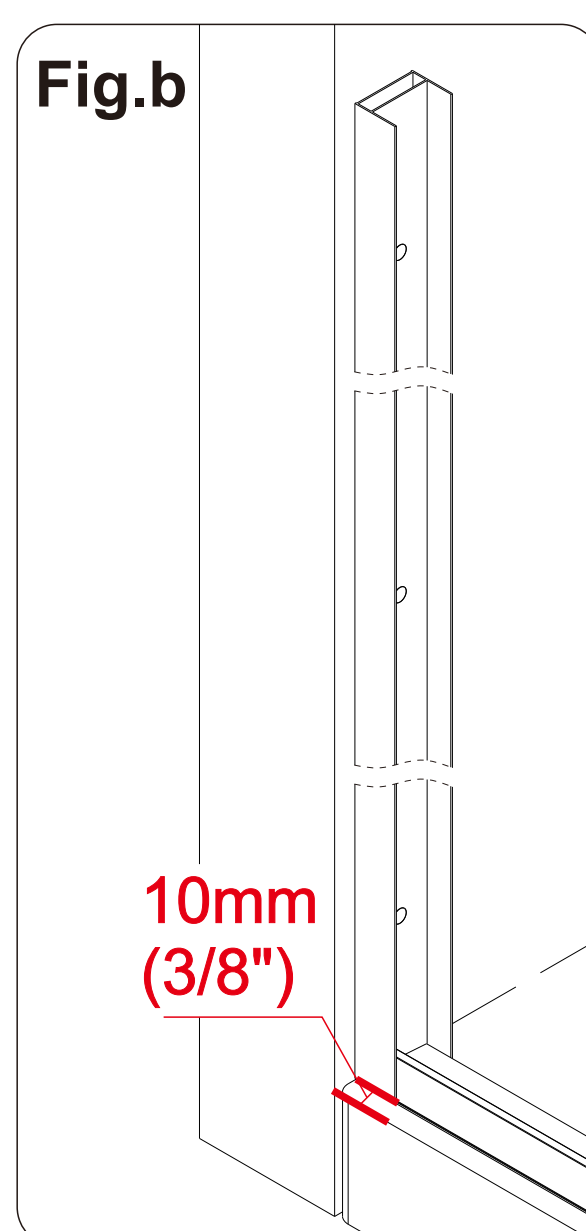
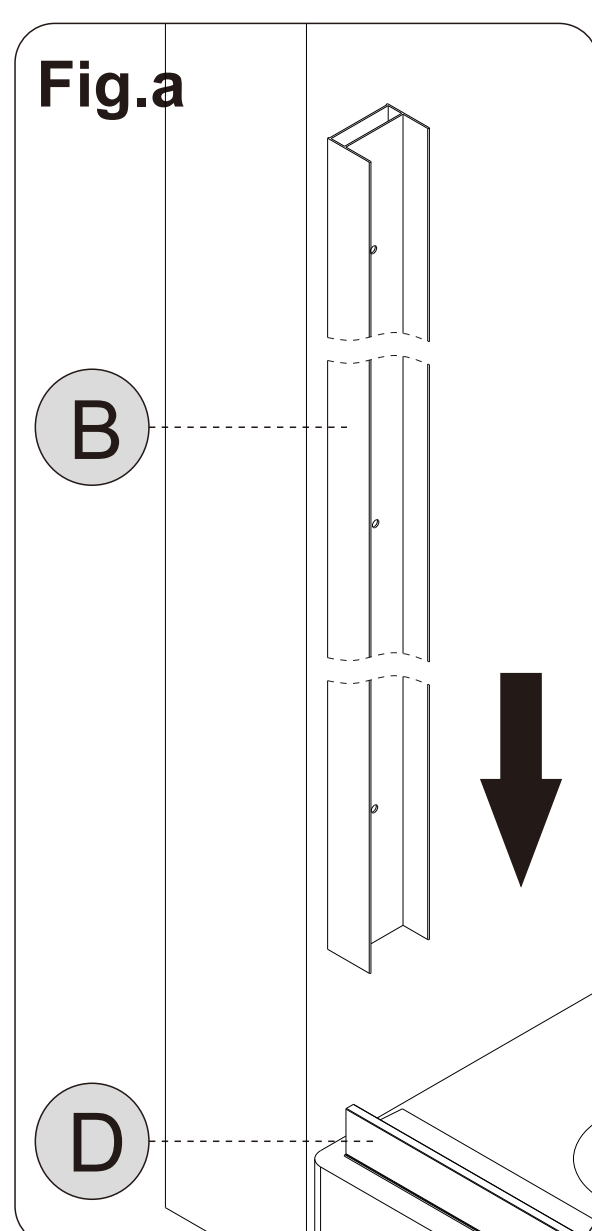


4

Install **Wall Jamb(B)** and
Insert in the **Wall Jamb cap(ee)**

NOTE

- 1.Install the guide block on the lower Guide Rail as Fig.a
- 2.Fix the **wall Jamb (B)** with **screws (cc)** as Fig.b.
- 3.Install the wall Jamb cover as Fig.c

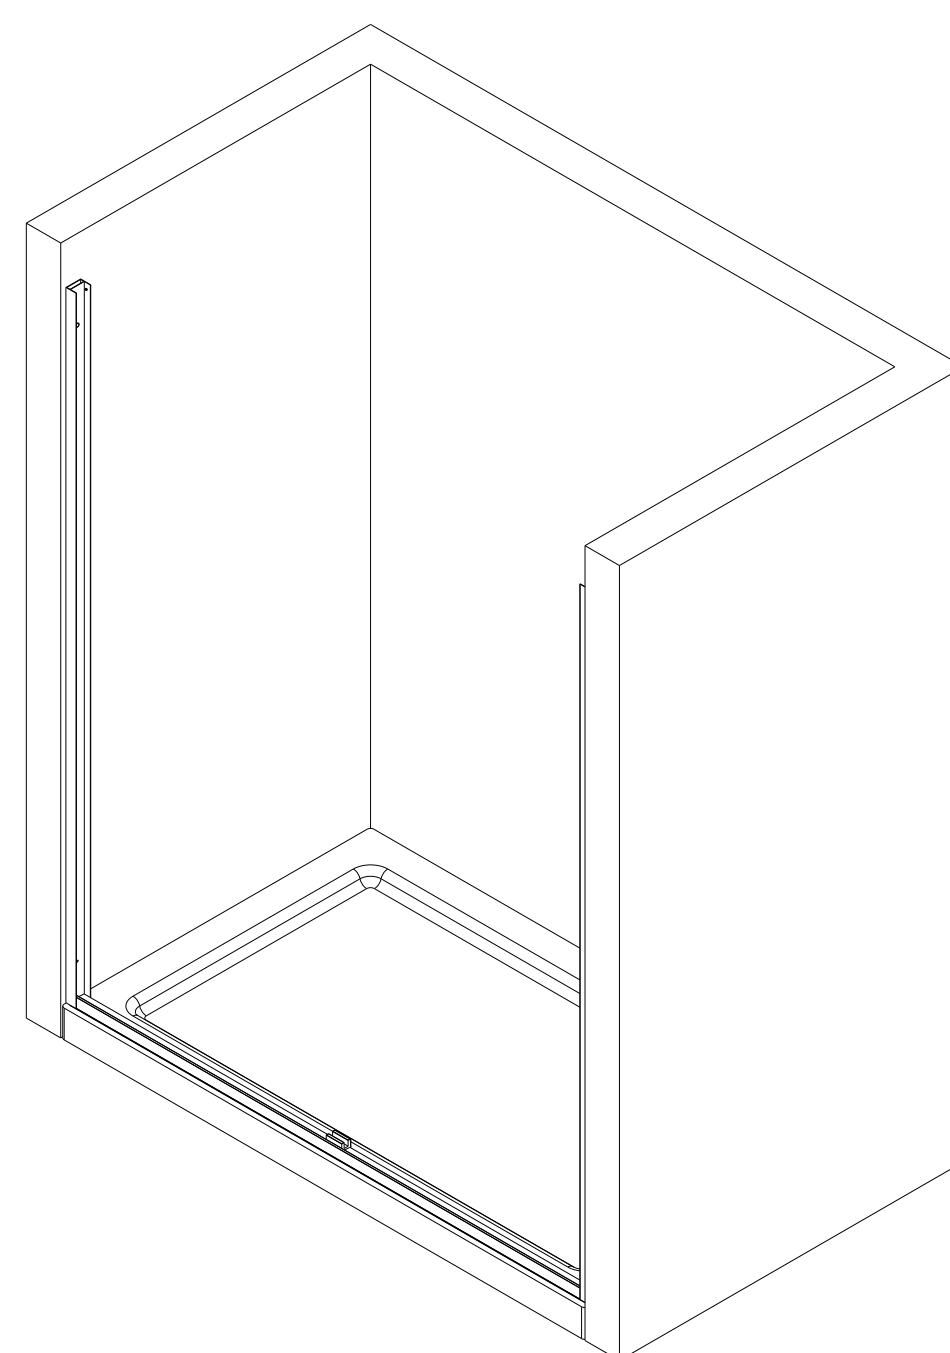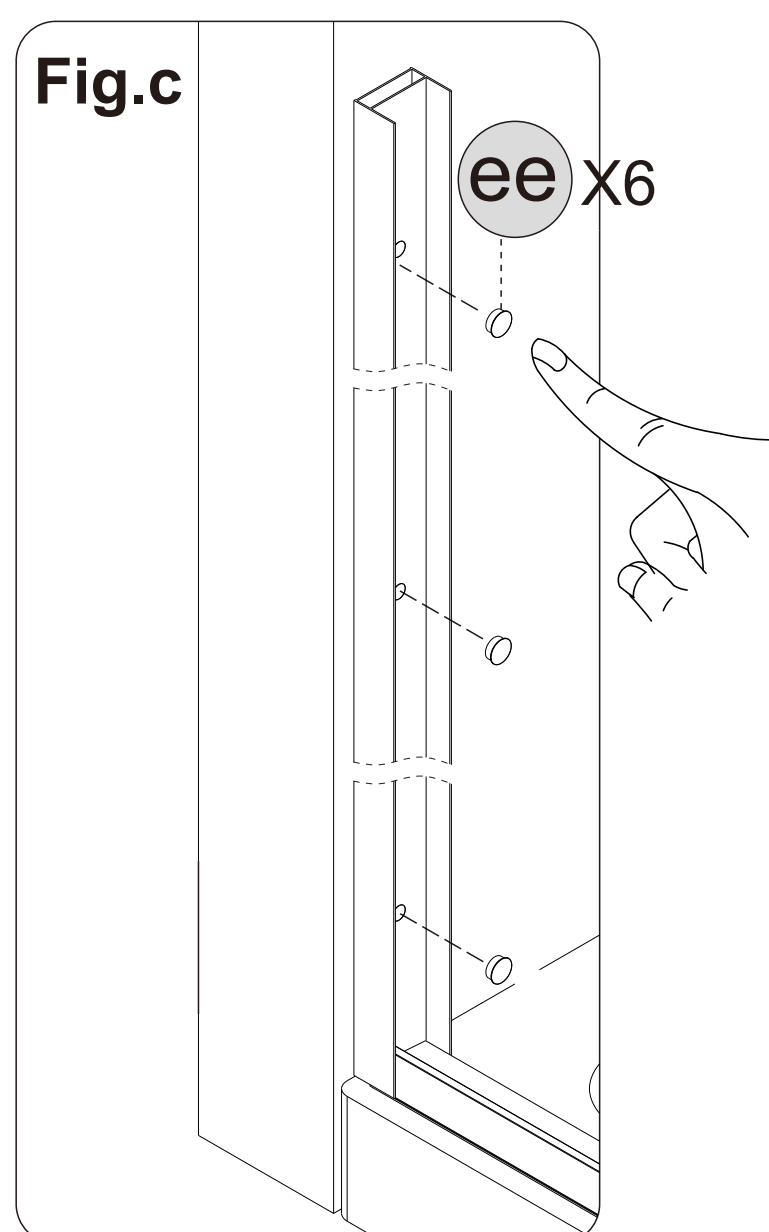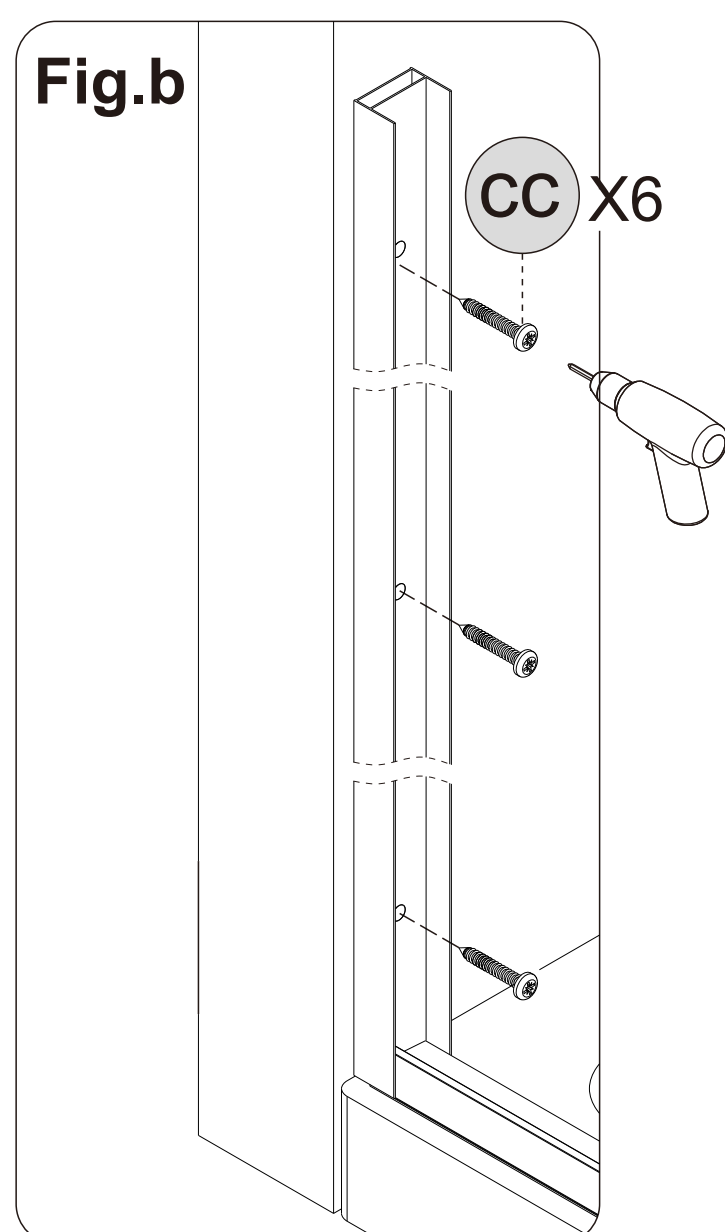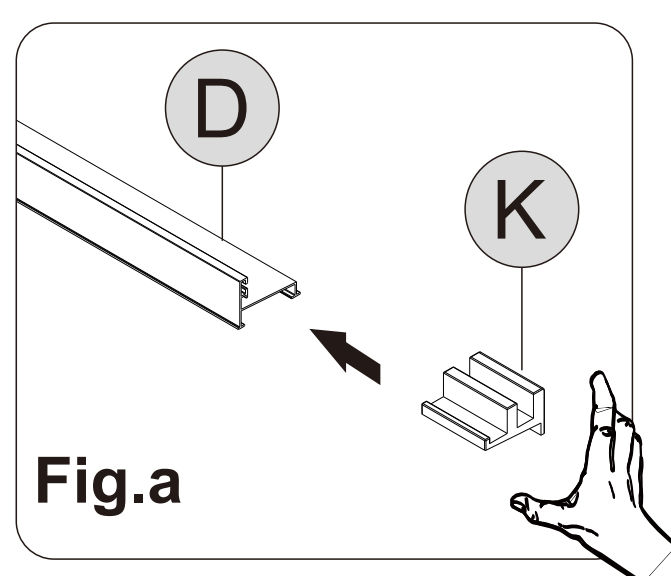

5

Install the **Roller (E)** on the **Glass Door (A)**.


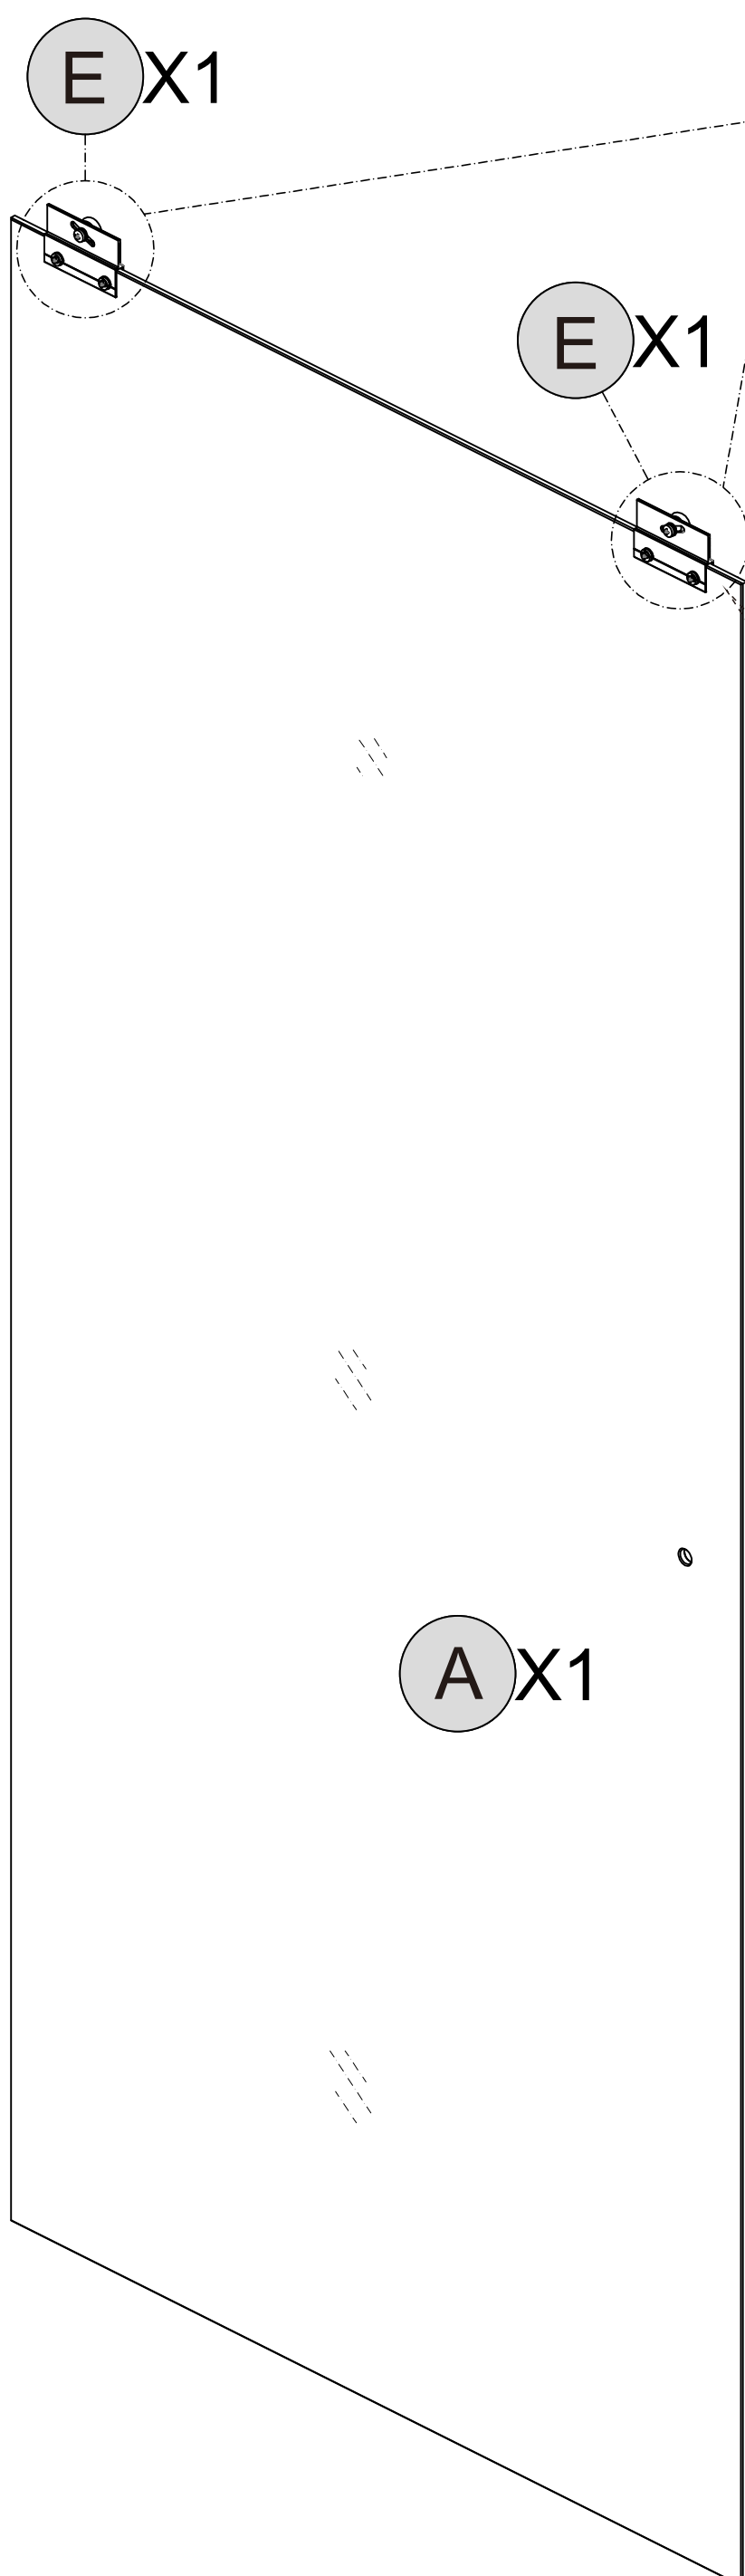


Fig.a



1.The **Roller(E)** faces inside as Fig.a

NOTE

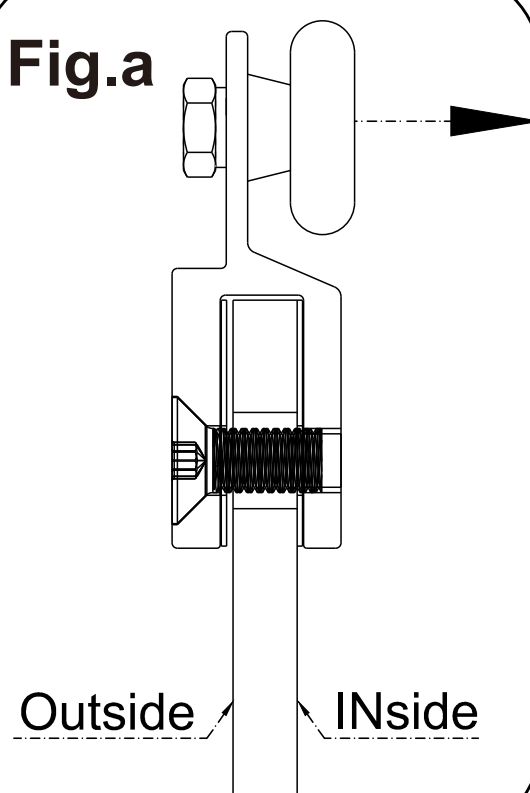


Smooth glass surface,
all facing the inside of
the shower room

NOTE


1.Insert the plastic tube in to **Glass Door(A)** as Fig.b
2.Use the screws attach the **Roller(E)** as Fig.c

Fig.b

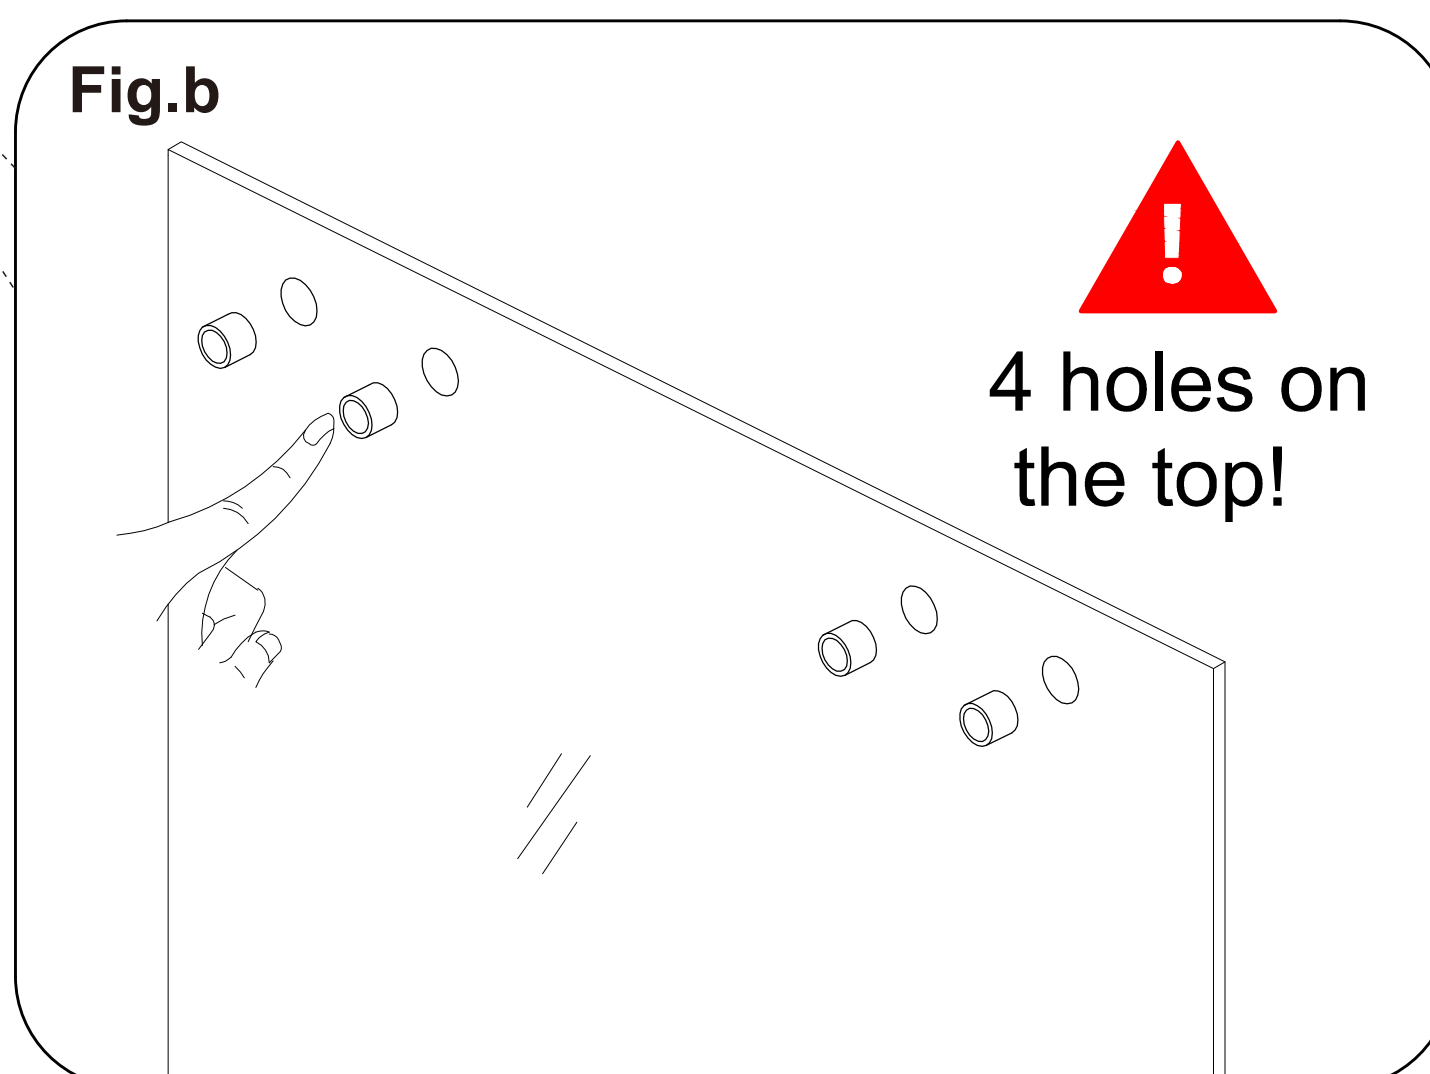

4 holes on
the top!

Fig.c

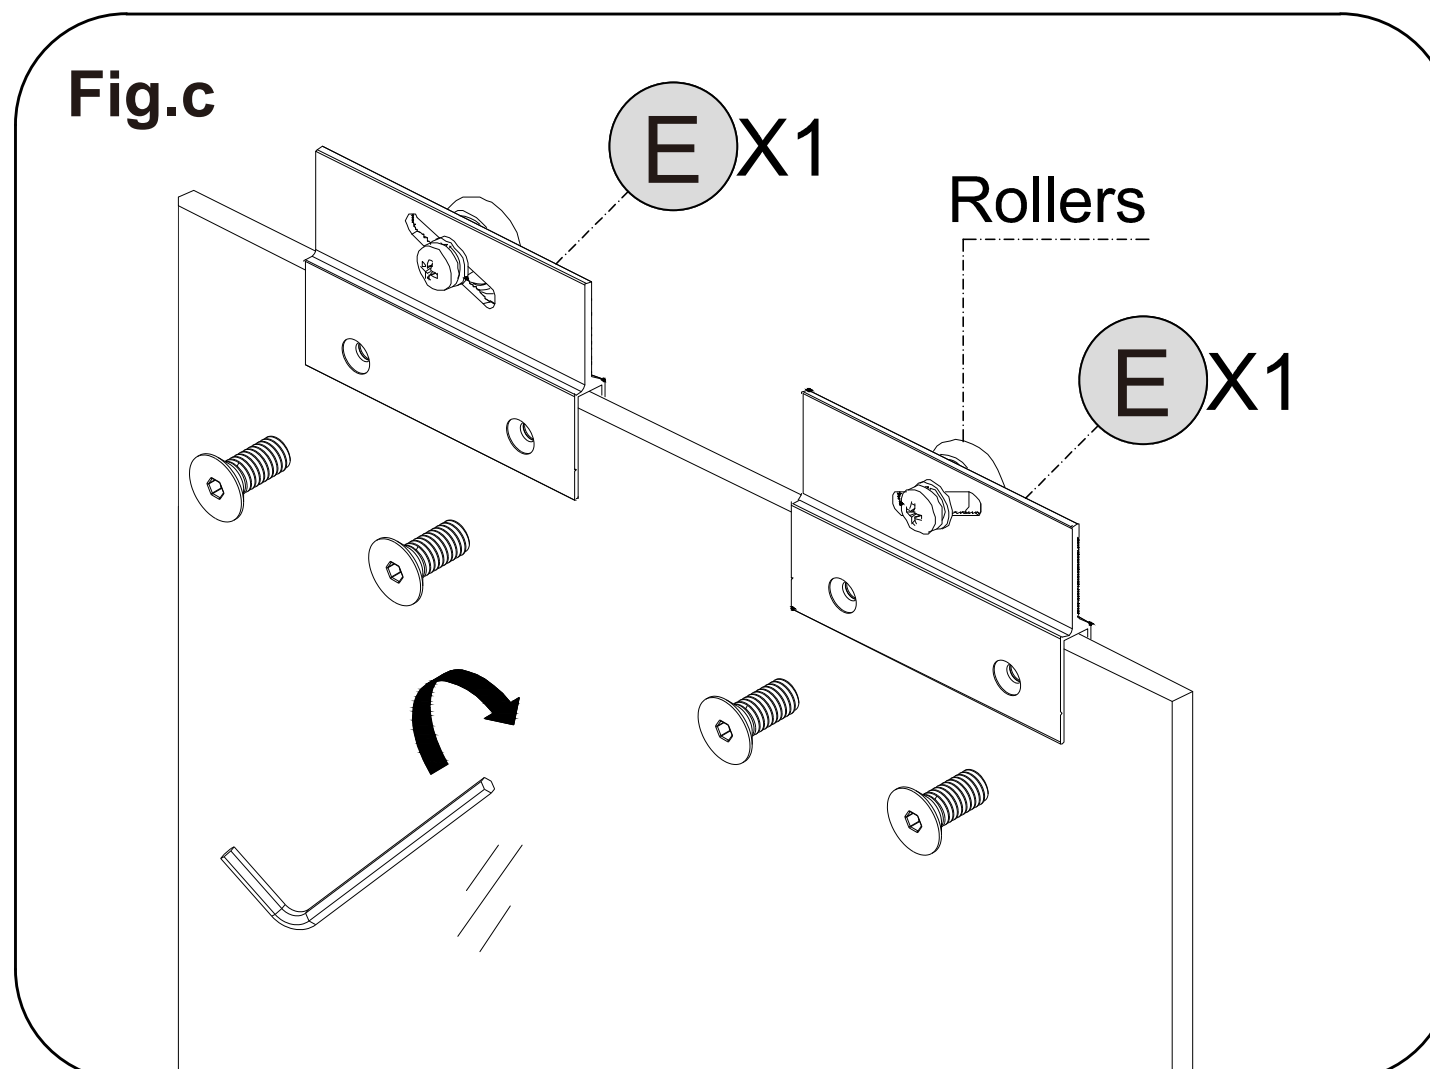


6 Install Upper Guide Rail(C)

NOTE

1.Insert the **Upper Guide Rail(C)** into the installed **Wall Jamb(B)** as Fig.a

NOTE


Put **Inside Glass Door (A)** inside the shower place before install the **Upper Guide Rail(C)**.

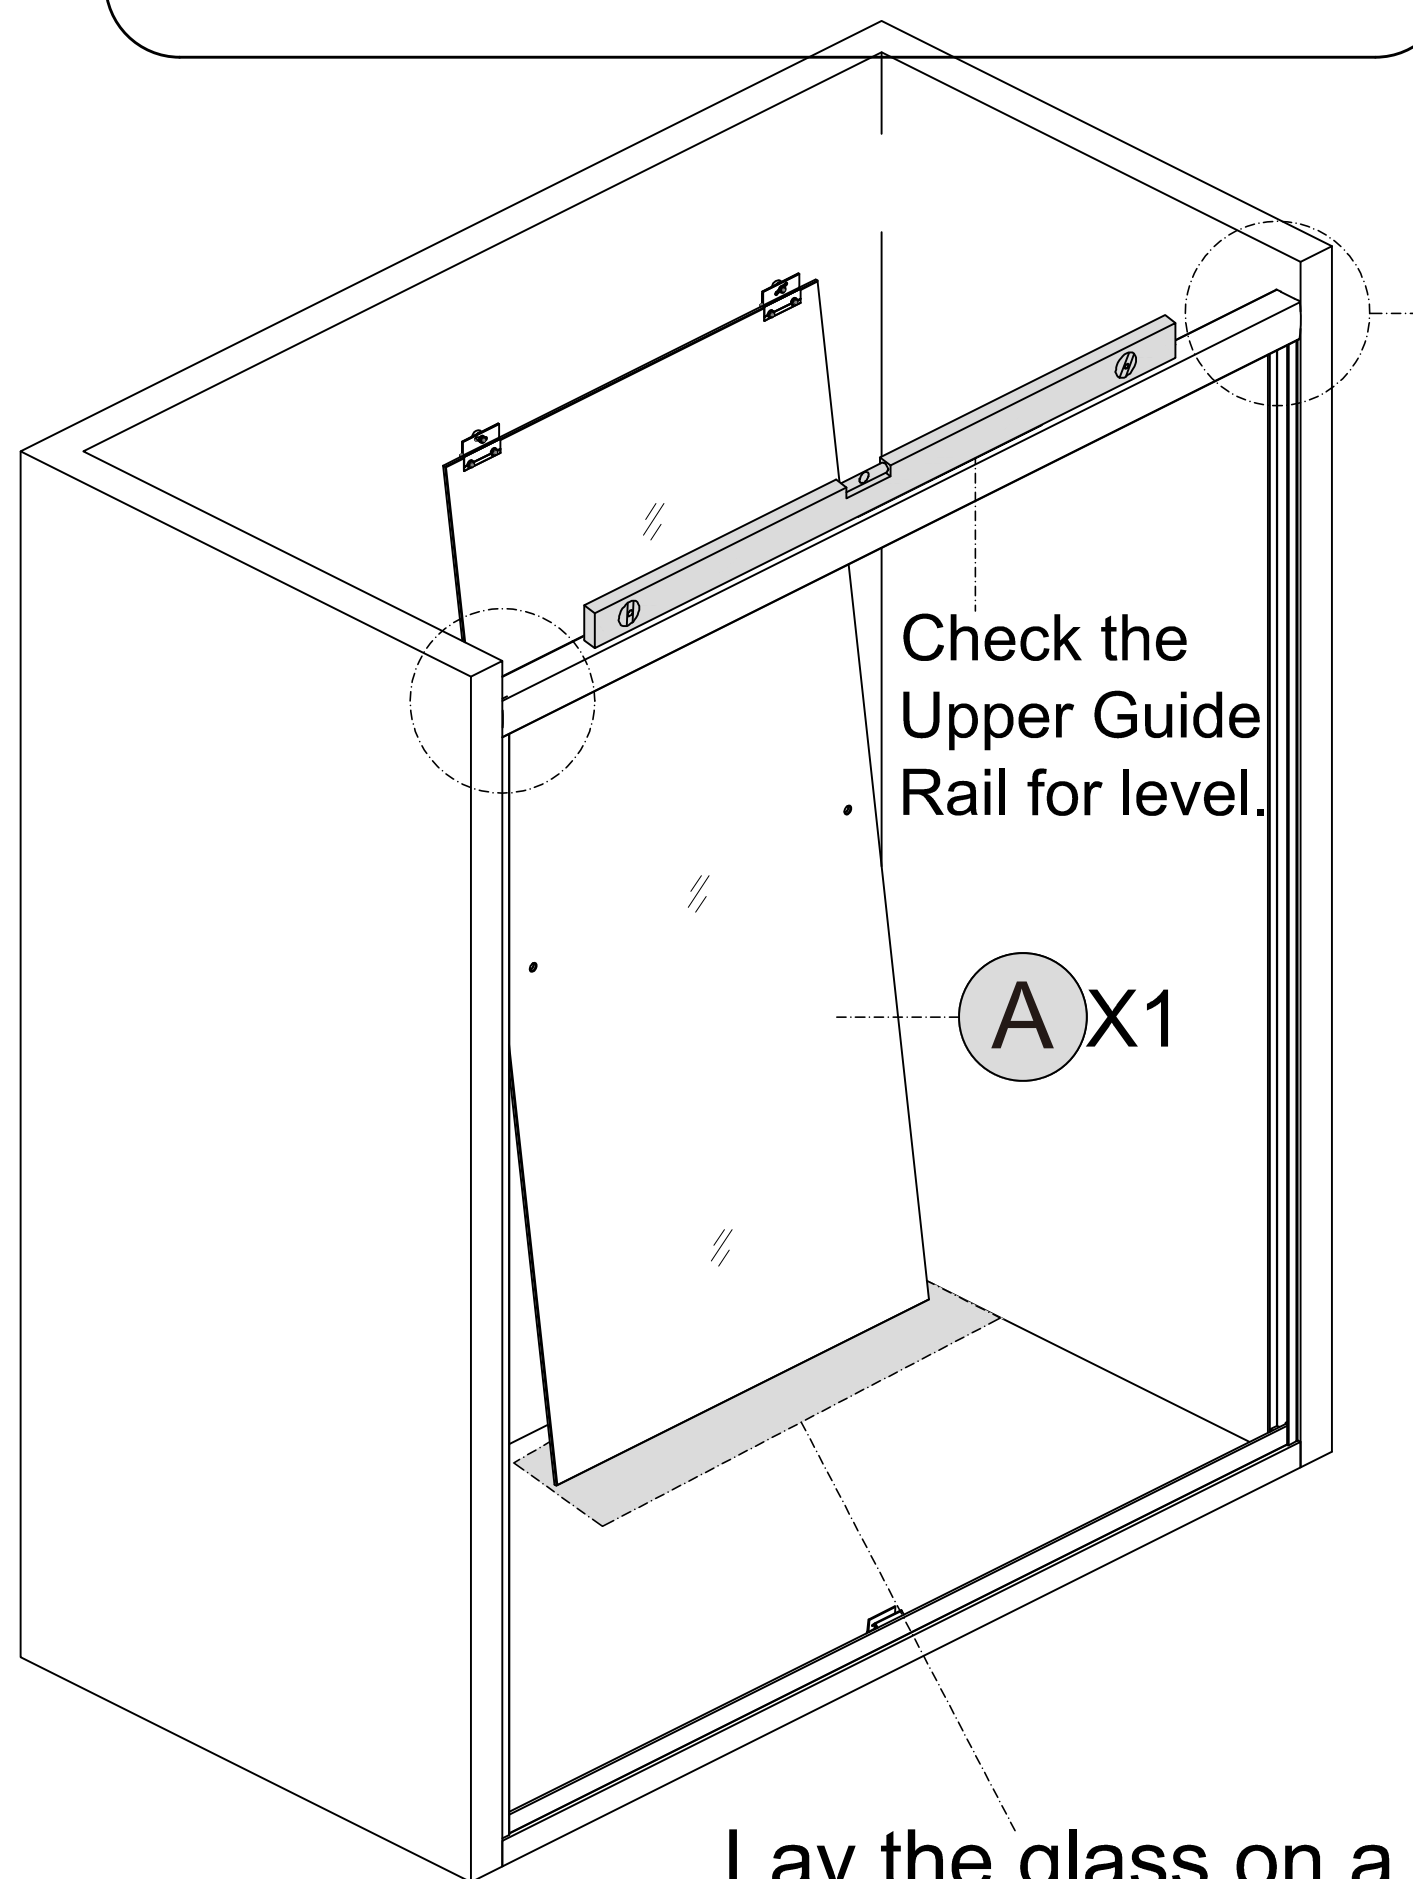

Lay the glass on a soft padded surface!

Fig.a

C X1

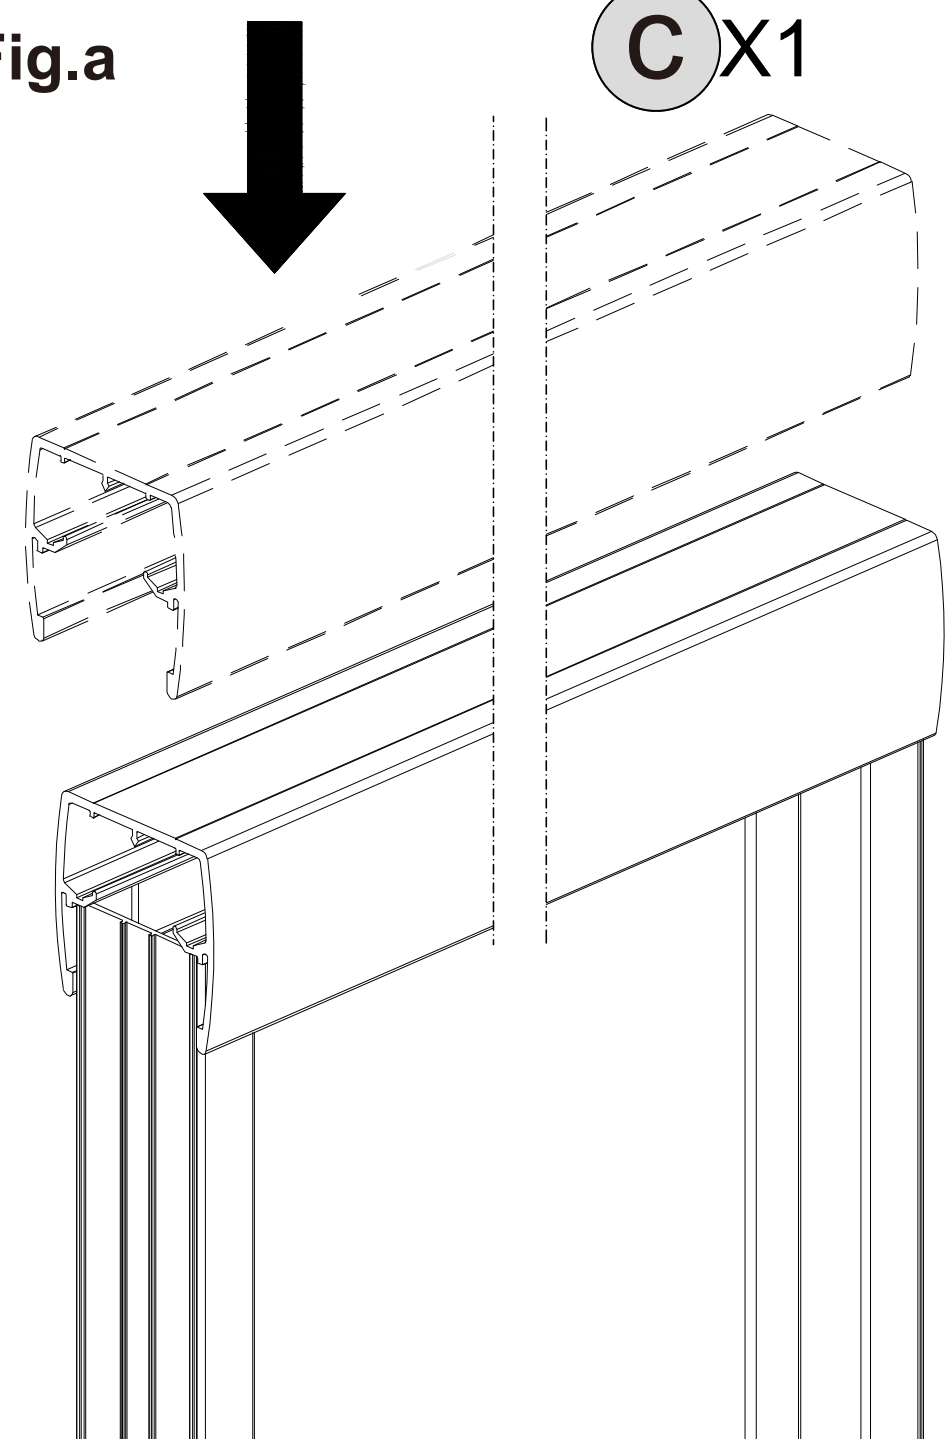

7

Install the **Roller (E)** on the **Glass Door (A)**.

NOTE


1.The **Roller(E)** faces Outside as Fig.a

EX1

EX1

AX1

Fig.a

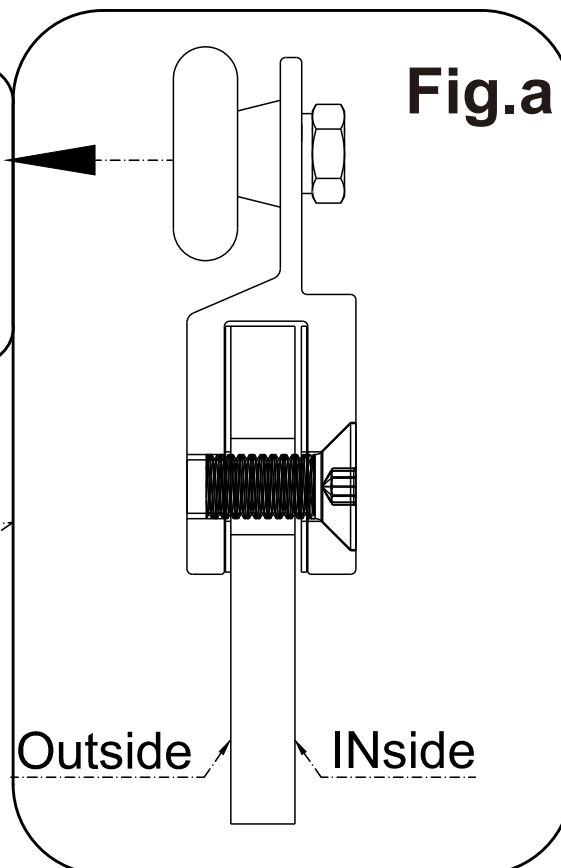


Smooth glass surface,
all facing the inside of
the shower room

NOTE


1. Insert the plastic tube in to **Glass Door(A)** as Fig.b
2. Use the screws attach the **Roller(E)** as Fig.c

Fig.b

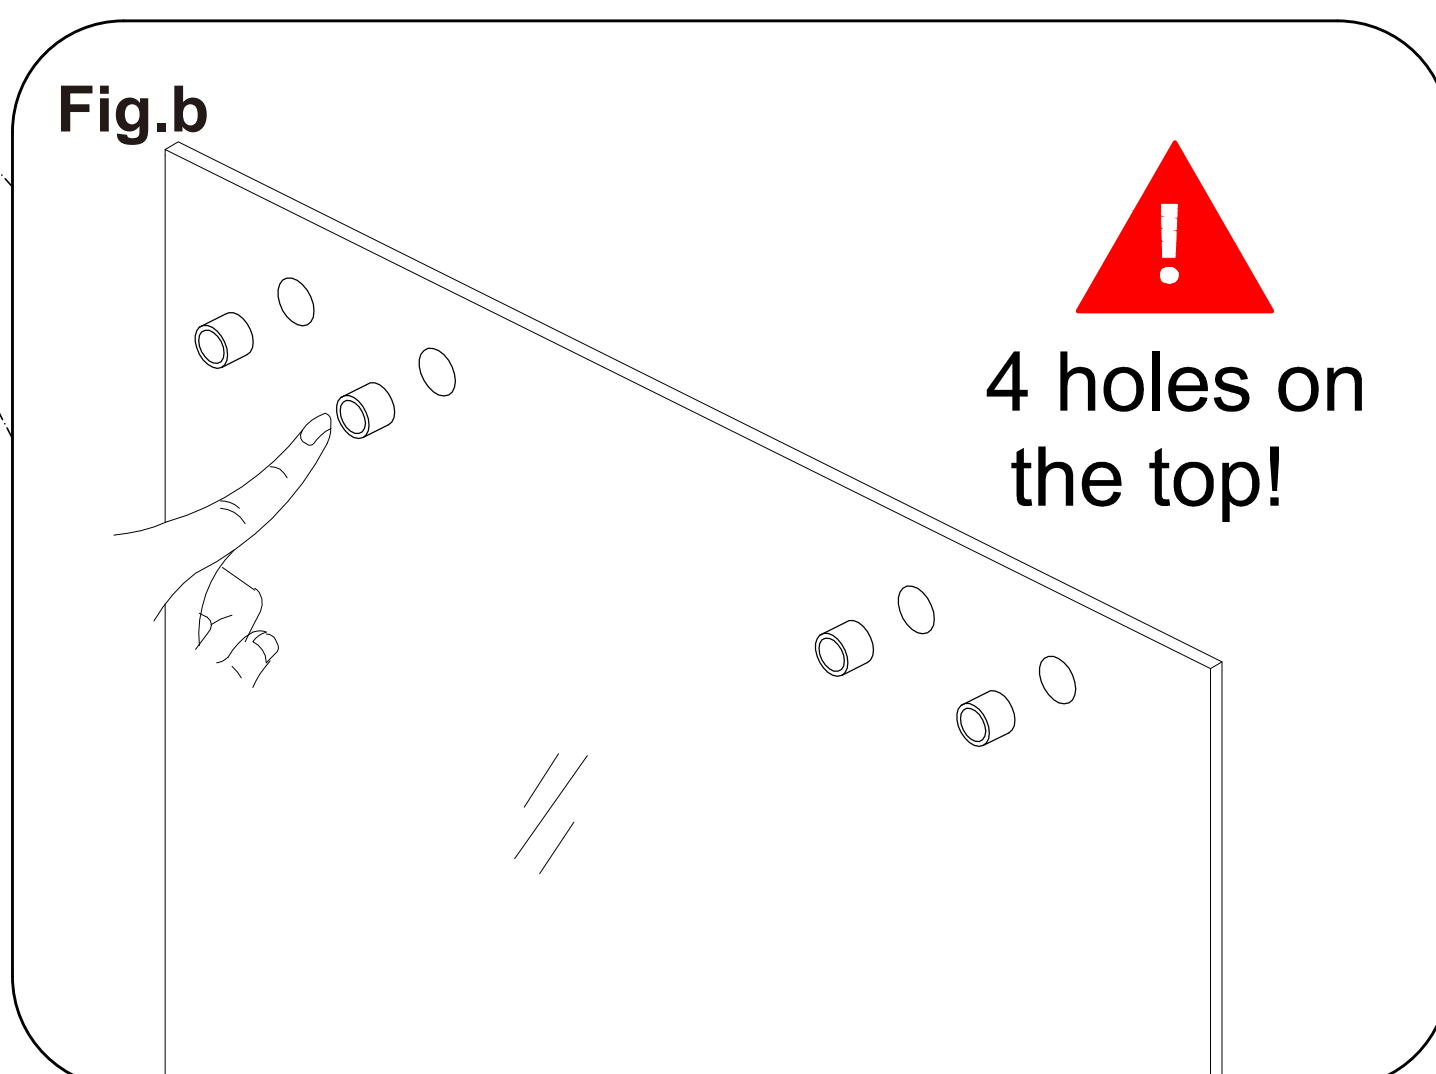

4 holes on
the top!

Fig.c

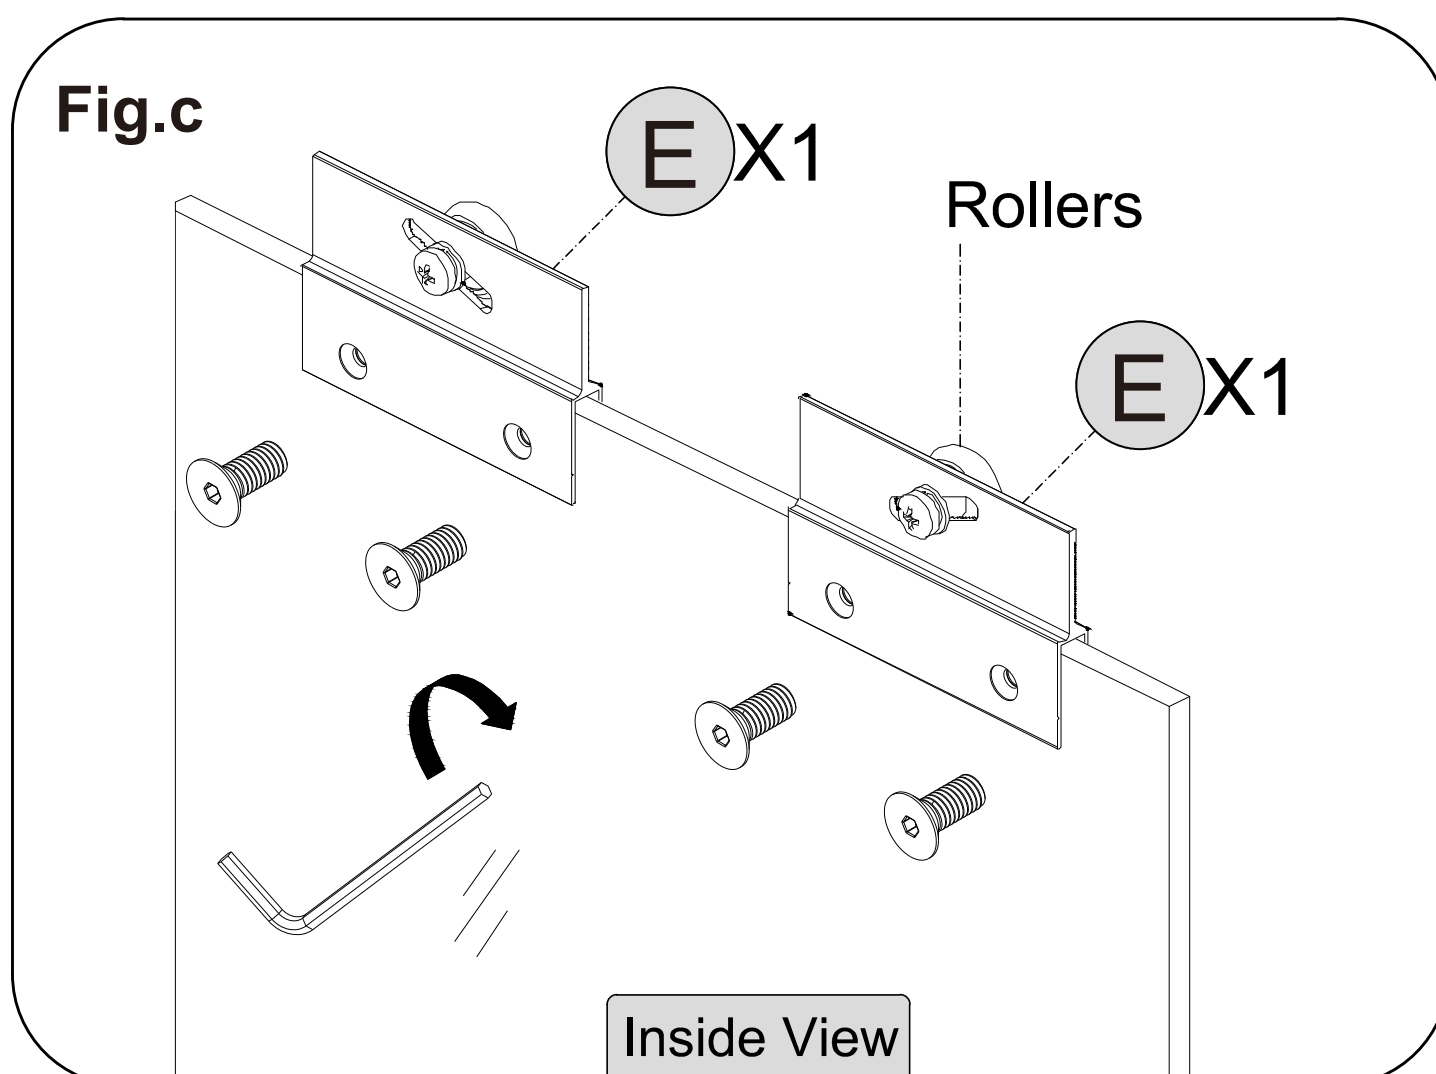

8

Outside **Glass Door(A)** Installation

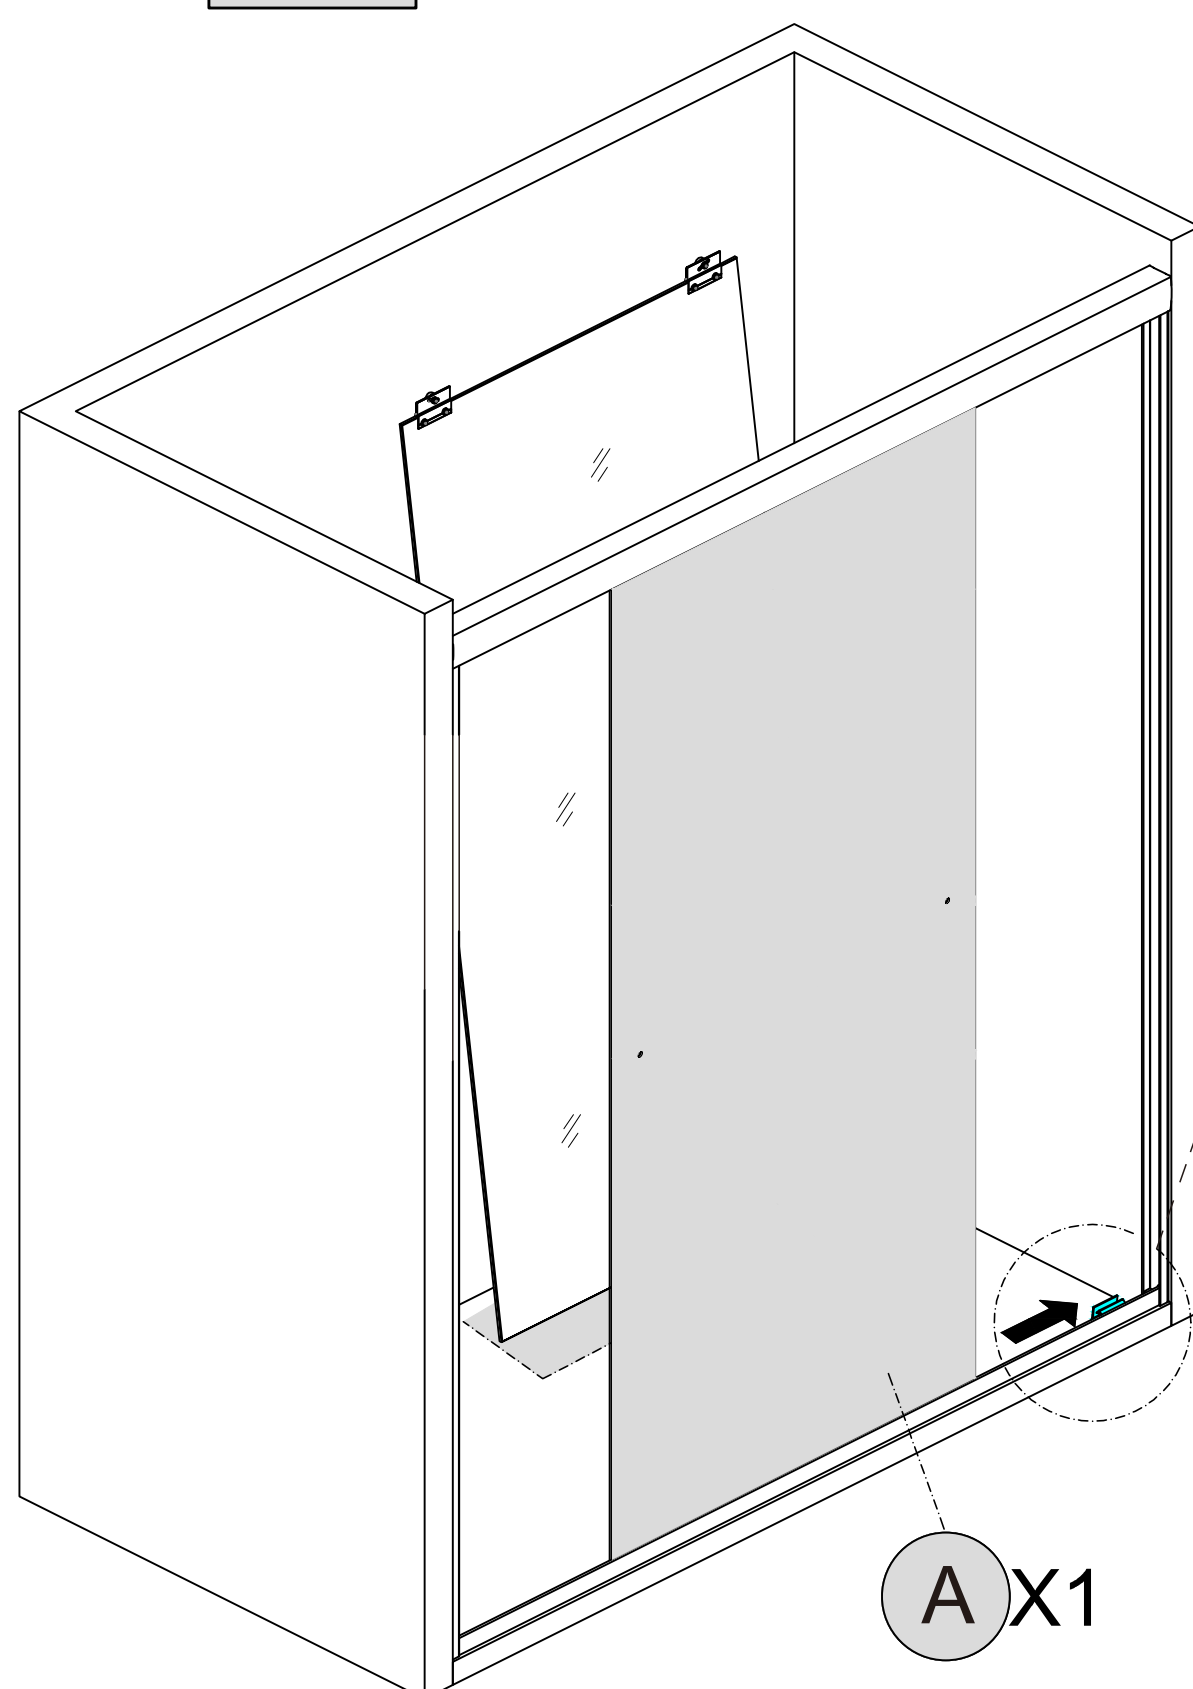


Fig.a

K



Fig.b

Inside

Outside

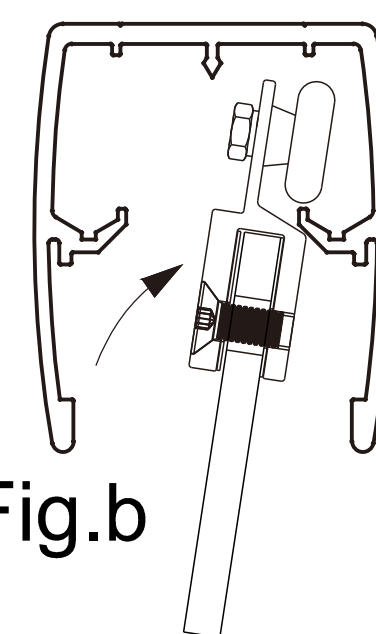


Fig.c

Smooth surface

Inside

Outside

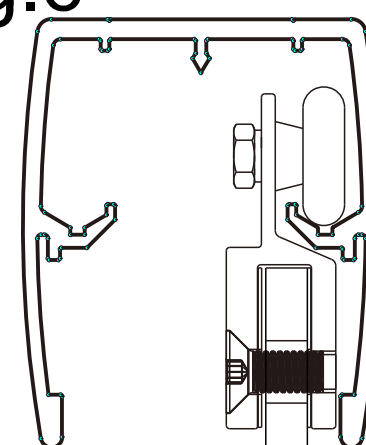


Fig.d




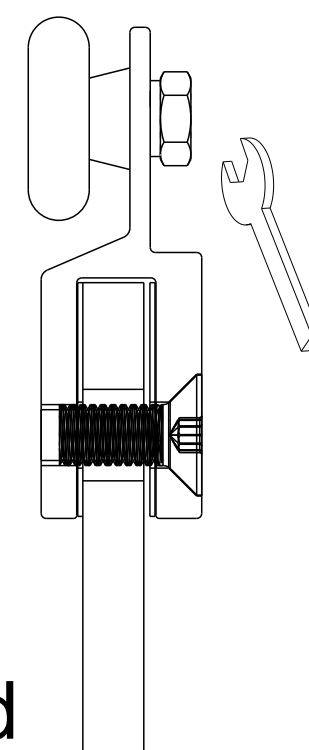


Fig.e

Raise Roller Wheel
to lower Glass door

Lower Roller Wheel
to raise Glass door

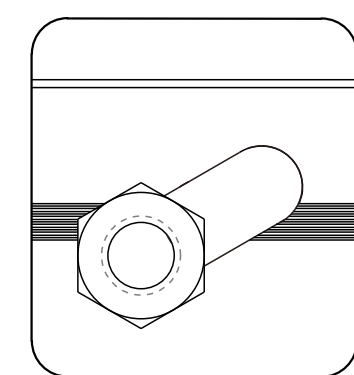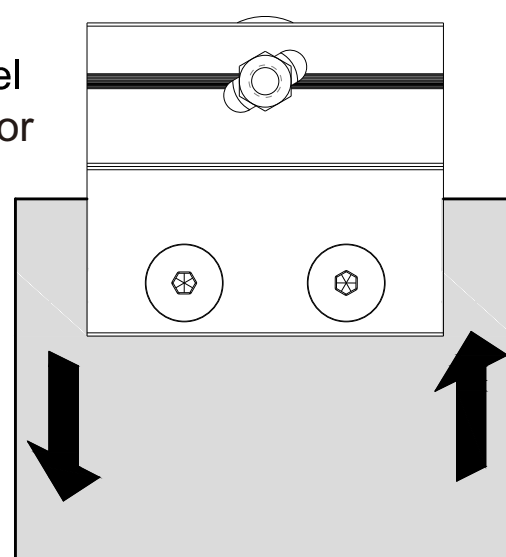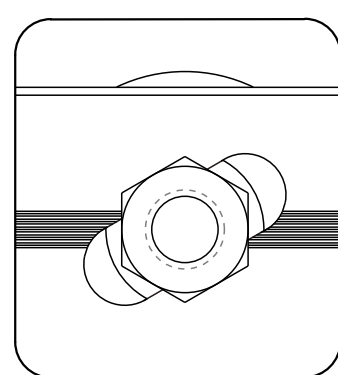

1. Move the bottom guide slider of the **Guide Block(K)** to the side as Fig.a;
2. Insert the **Outside Glass Door (A)** into the **Upper Guide Rail(C)** as Fig.b and Fig.c .

NOTE







DO NOT install the towel bars on the glass until instructed.

DO NOT lift the glass using the towel bars;

1. The **Roller Wheels (E)** can be adjusted to better align the vertical edges of the Door Glass with the Wall Profiles if needed, to prevent leaks;
2. In order to adjust the **Roller Wheels (E)**, remove that door from the **Upper Guide Rail (C)**. Please make sure the glass is put on the padded surface;
3. Unscrew the screw first with Phillips Screw Driver as Fig.d ;
4. Adjusting a Roller Wheel up (higher in the slot) will lower the door glass, and adjusting a Roller Wheel down (lower in the slot) will raise the door glass as Fig.e;
5. Tighten the screw, put the door on the guide rail, gently move the door and observe the door whether aligns with the **Wall Jamb(B)**;
6. Repeat step 2-5 until the door aligns with the **Wall Jamb(B)**.

9

Inside Glass Door (A) Installation

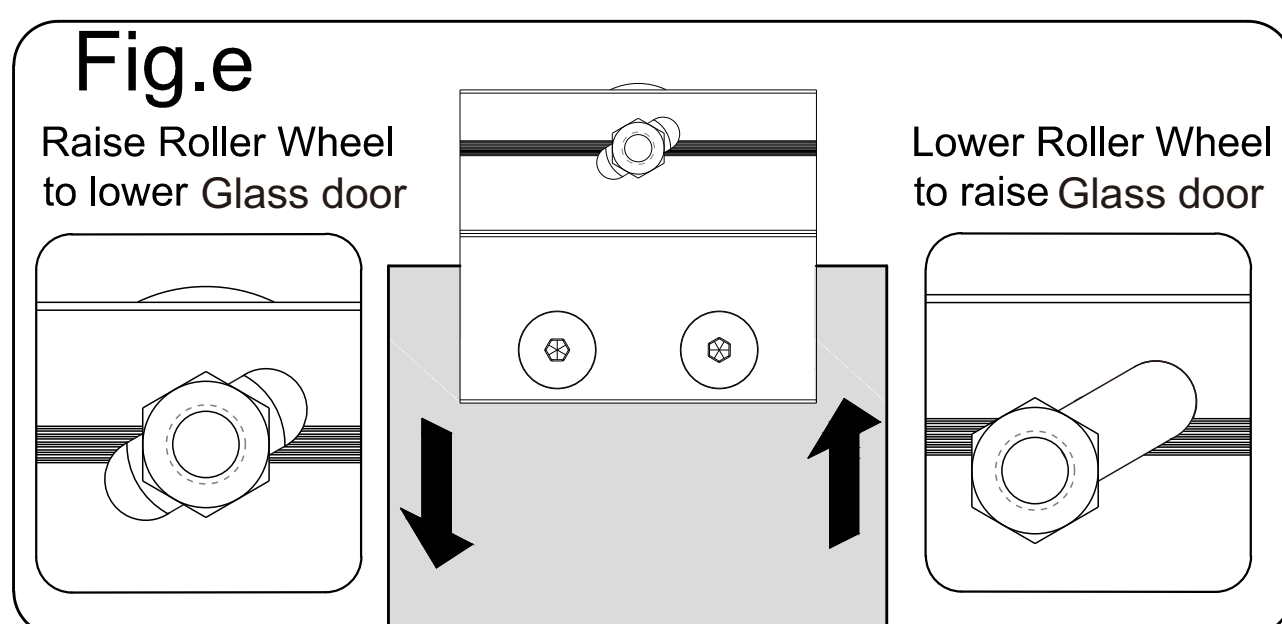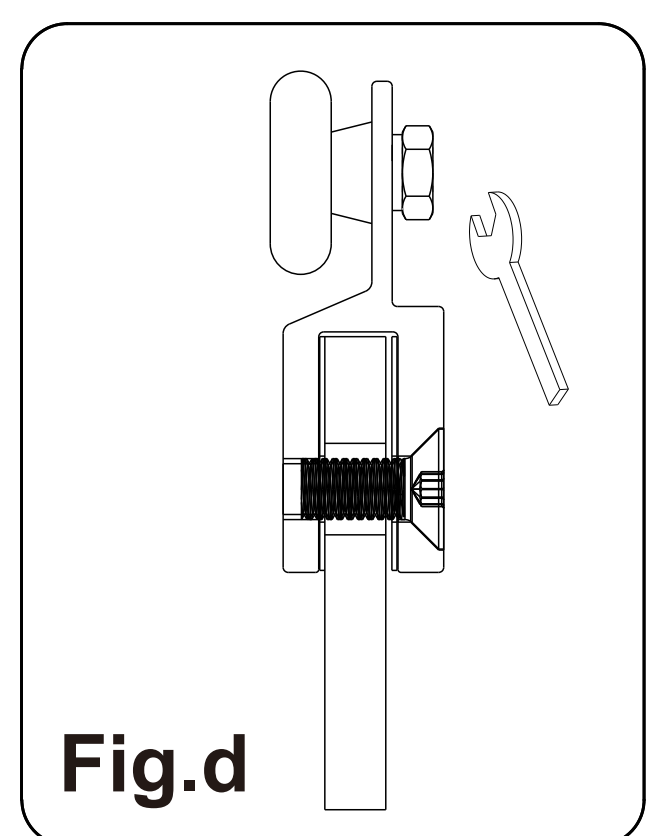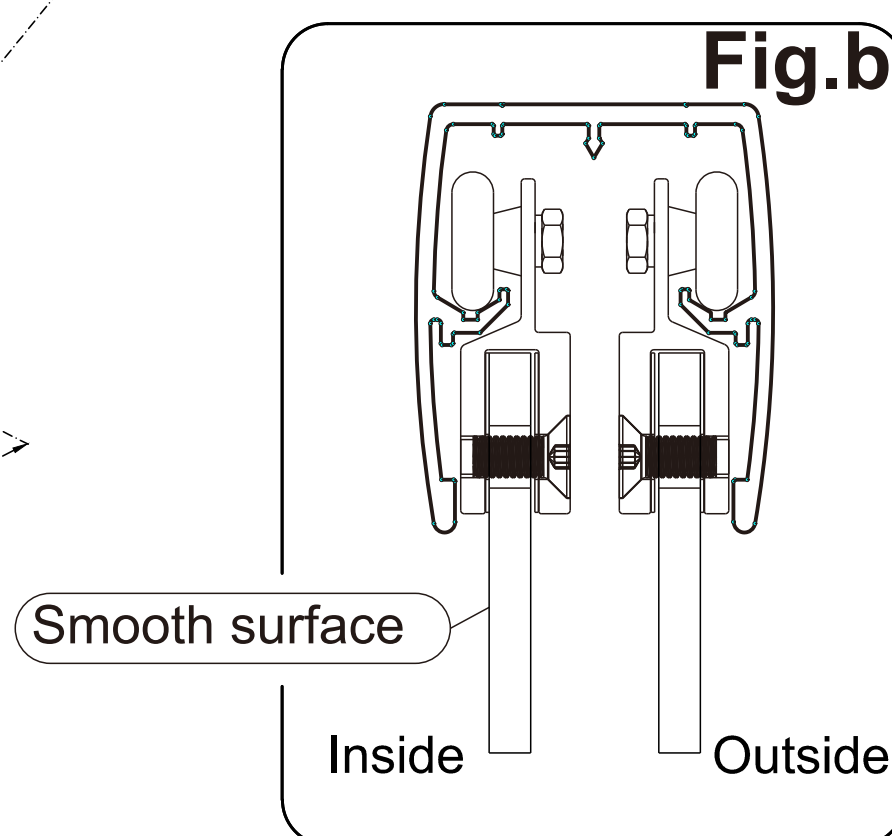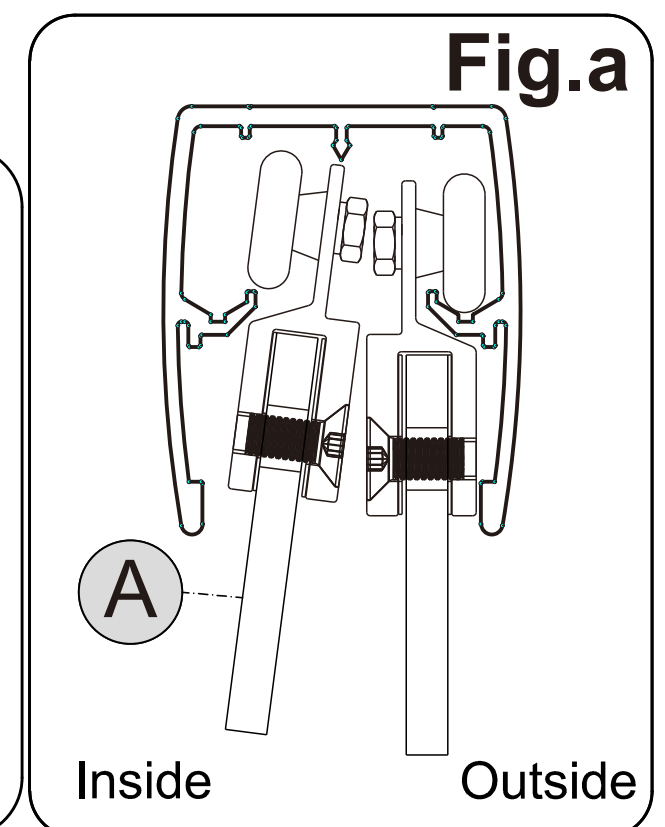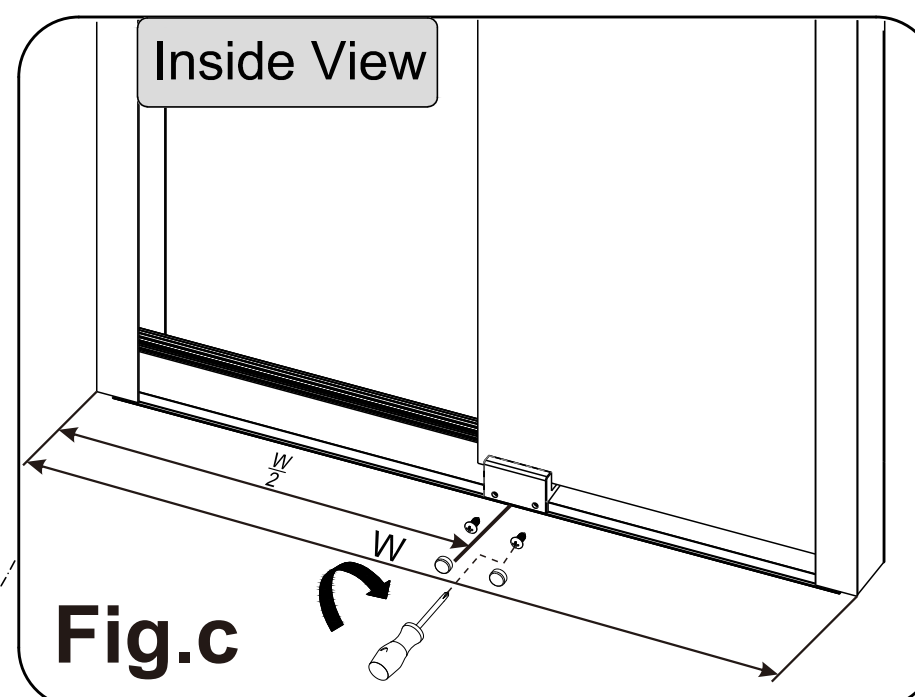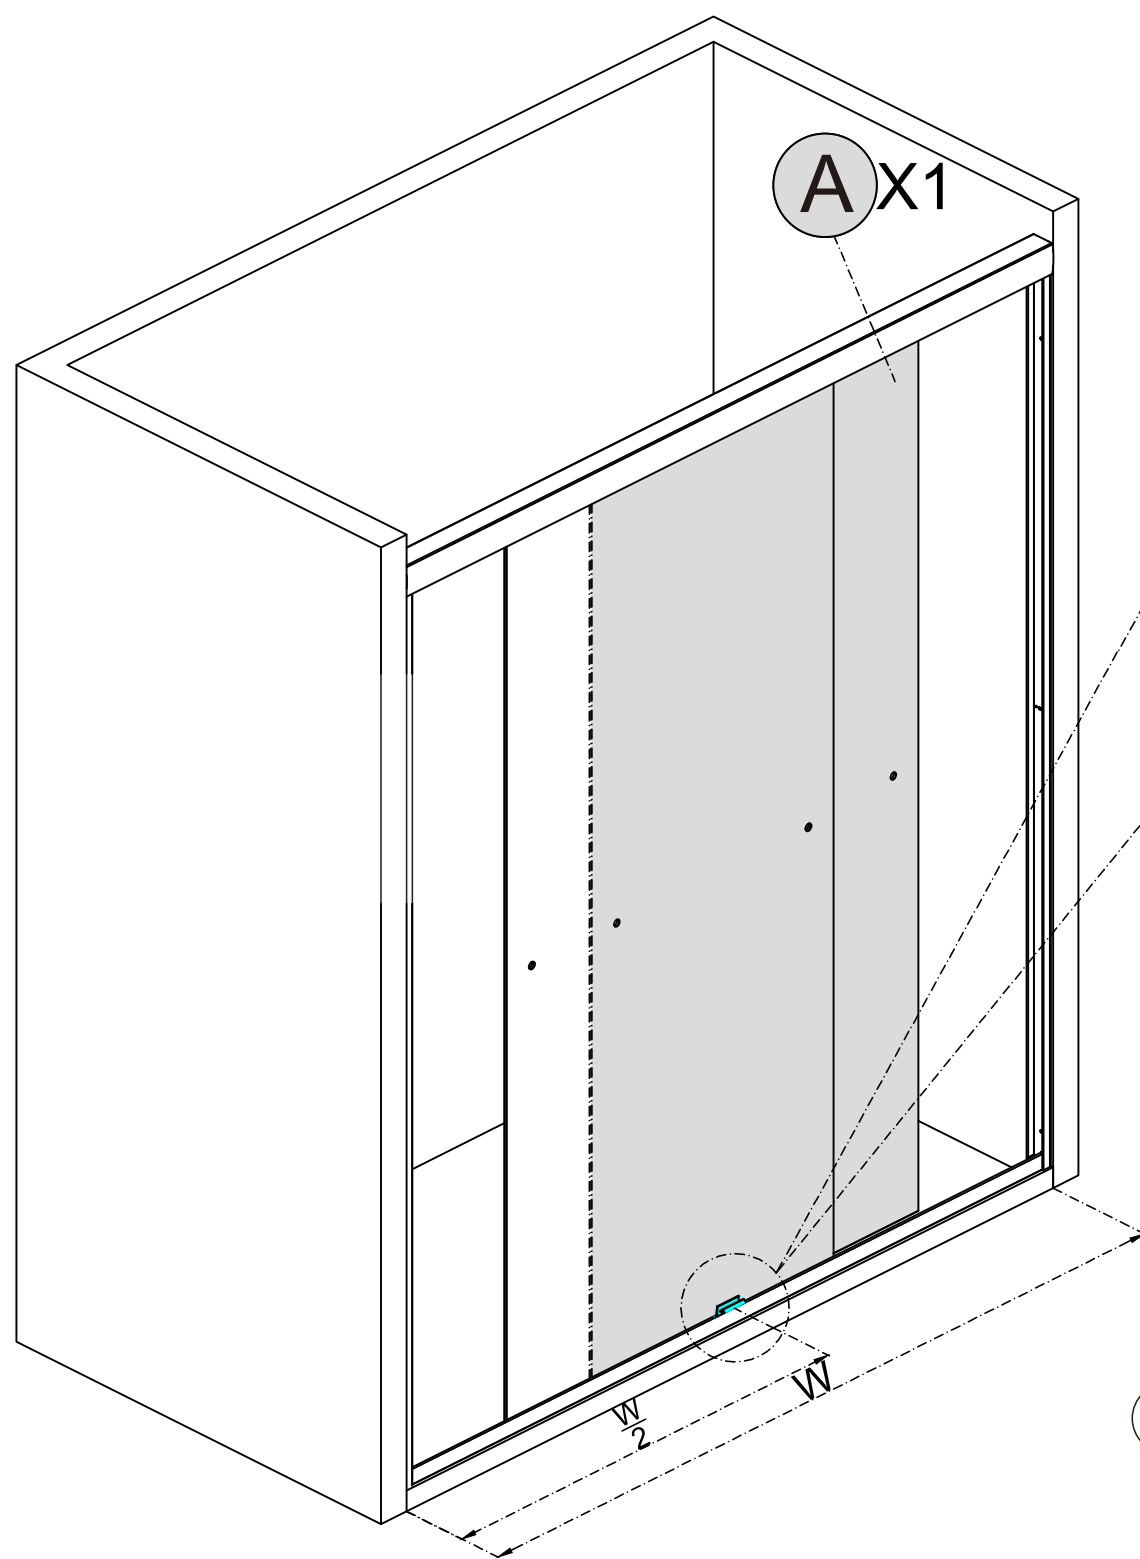

- 1.Insert the **Inside Glass Door(A)** into the **Upper Guide Rail(C)** as **Fia** and **Fig.b**
2. Move the bottom guide slider to the middle as Fig.c
- 3.Lock the **screws(aa)** and **screws cap(bb)** as Fig.c

NOTE

DO NOT install the towel bars on the glass until instructed.

DO NOT lift the glass using the towel bars;

1. The **Roller Wheels (E)** can be adjusted to better align the vertical edges of the Door Glass with the Wall Profiles if needed, to prevent leaks;
- 2.In order to adjust the **Roller Wheels (E)**, remove that door from the **Upper Guide Rail (C)**. Please make sure the glass is put on the padded surface;
- 3.Unscrew the screw first with Phillips Screw Driver as Fig.d ;
- 4.Adjusting a Roller Wheel up (higher in the slot) will lower the door glass, and adjusting a Roller Wheel down (lower in the slot) will raise the door glass as Fig.e;
- 5.Tighten the screw, put the door on the guide rail, gently move the door and observe the door whether aligns with the **Wall Jamb(B)**;
6. Repeat step 2-5 until the door aligns with the **Wall Jamb(B)**.

10 Handle (H) 、Handle (G) and Towel Bar (F) Installation

NOTE

Attach the **Handle (H) & Handle (G)** to the **Inside Glass Door (A)** and Attach the **Towel Bar (F)** to the **Outside Glass Door (A)** . Be sure to use all of the supplied rubber gaskets to protect the glass. as Fig.a;Fig.b and Fig.c

Fig.a



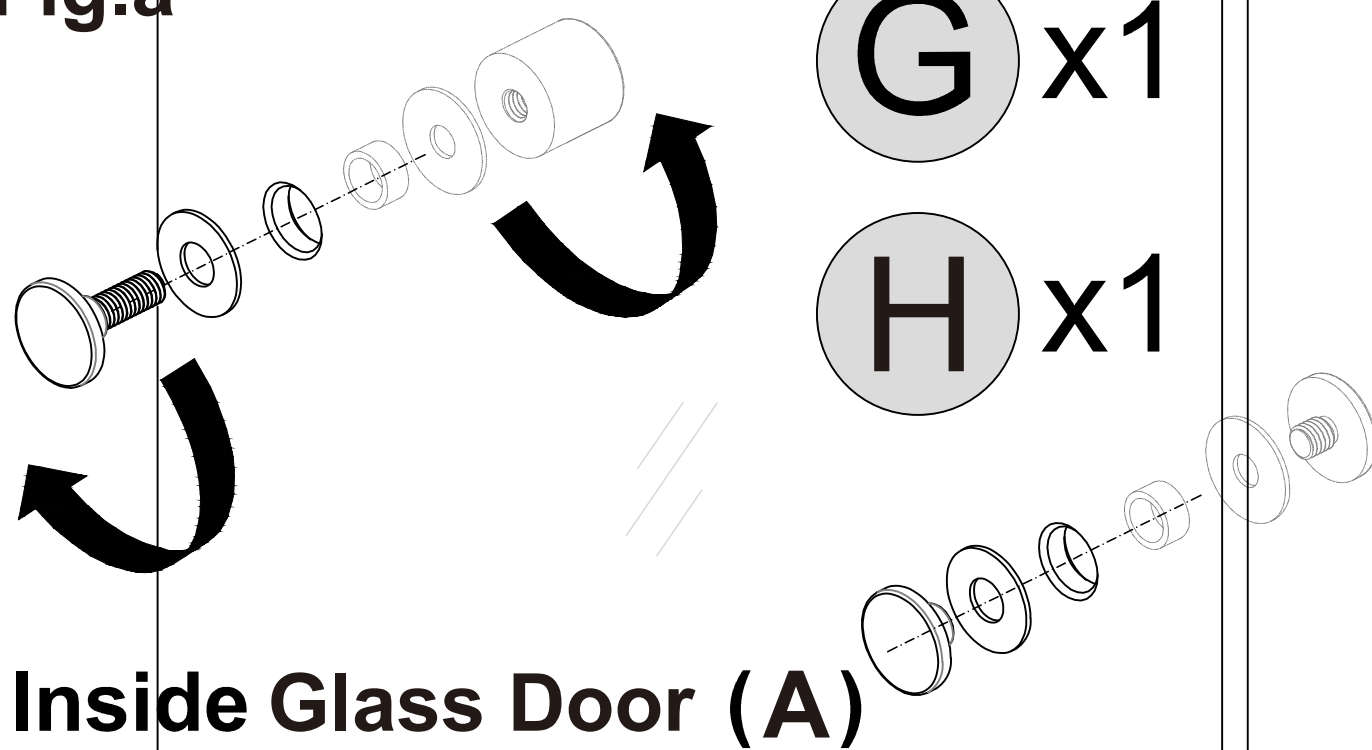


Fig.b

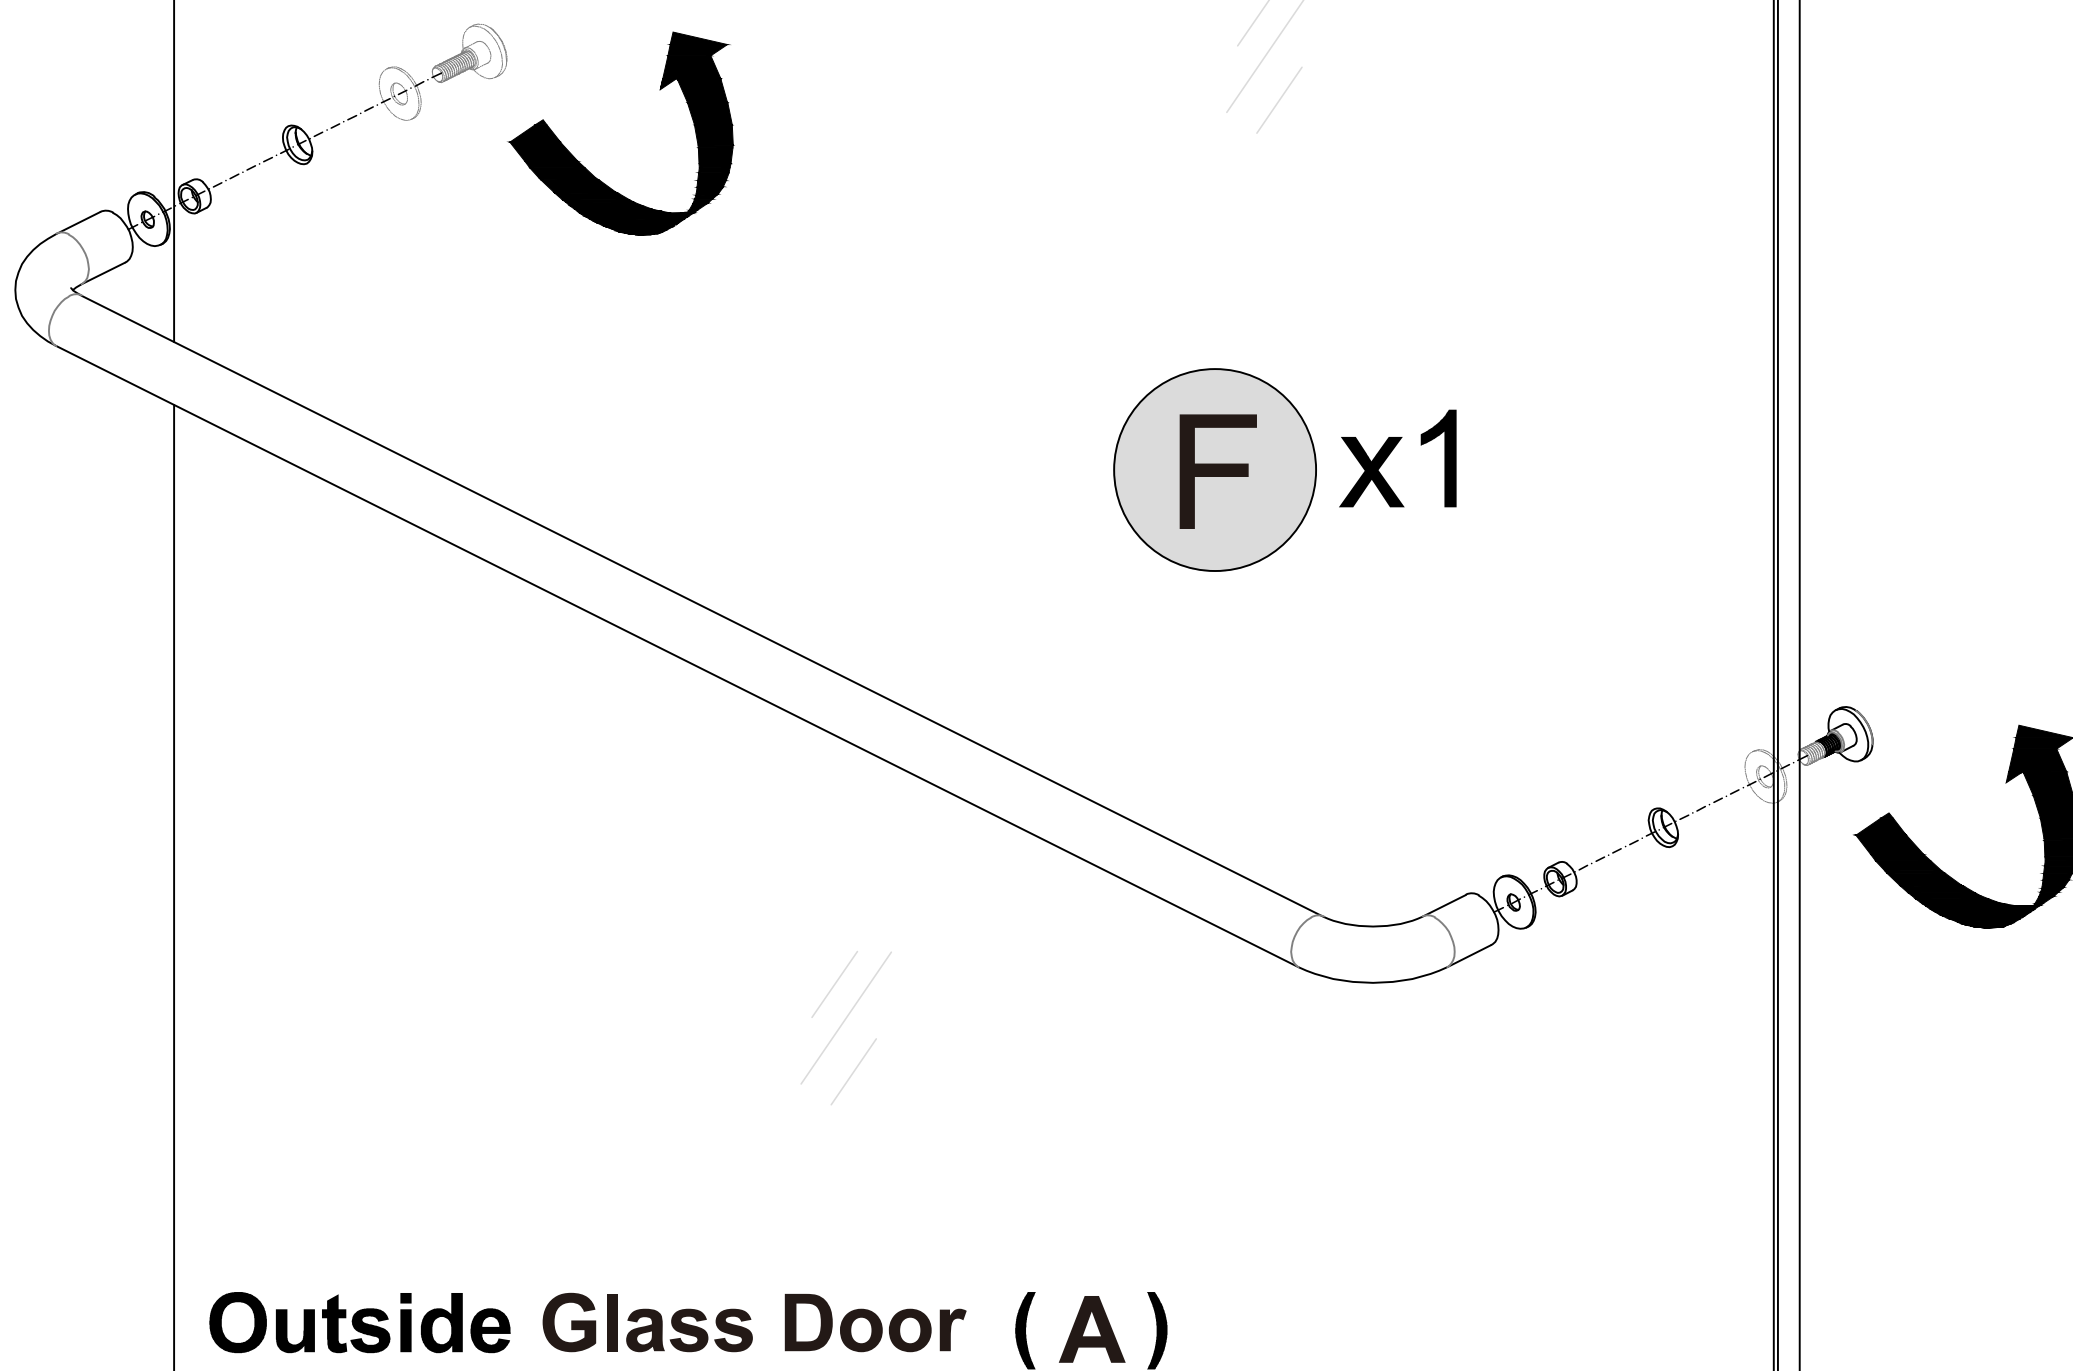

11 Attaching the **Upper Guide Rail tab (J)** and the **screw cap (bb)**

Fig.a

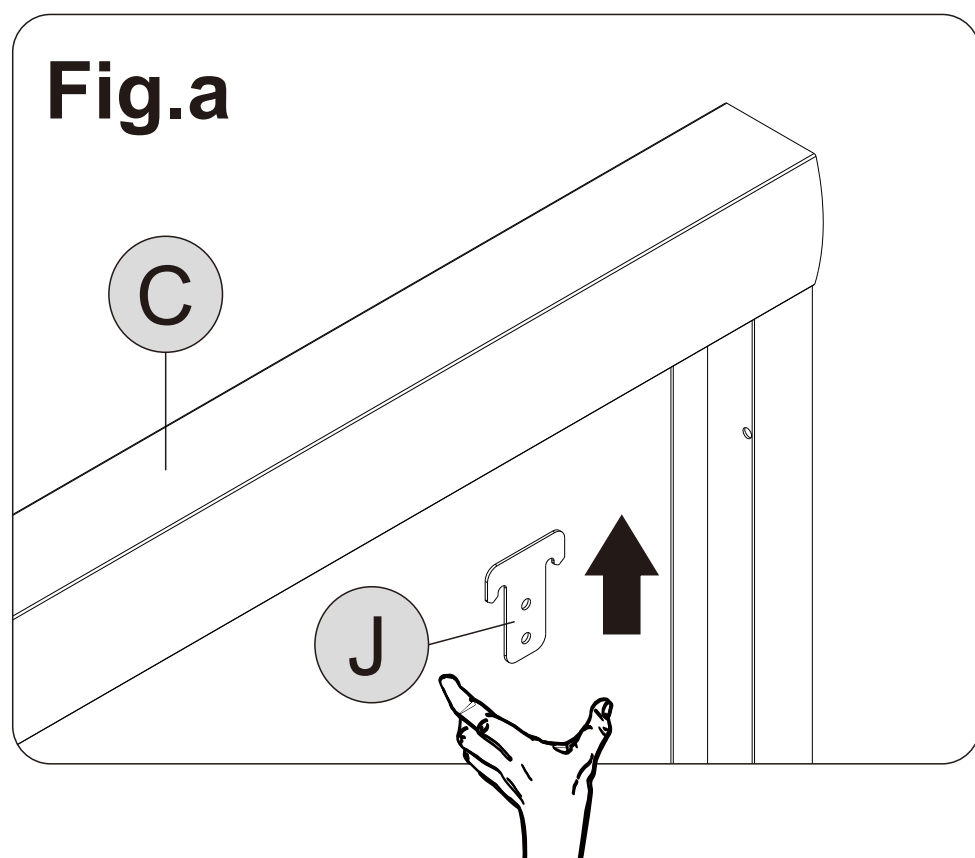

NOTE

1. Attaching the **Upper Guide Rail tab (J)** to the **Upper Guide Rail (C)** as Fig.a and Fig.b
2. Use **screws (aa)** to fix the **Upper Guide Rail tab (J)** as Fig.c
3. Install **Screw caps(bb)** as Fig.d

Fig.b

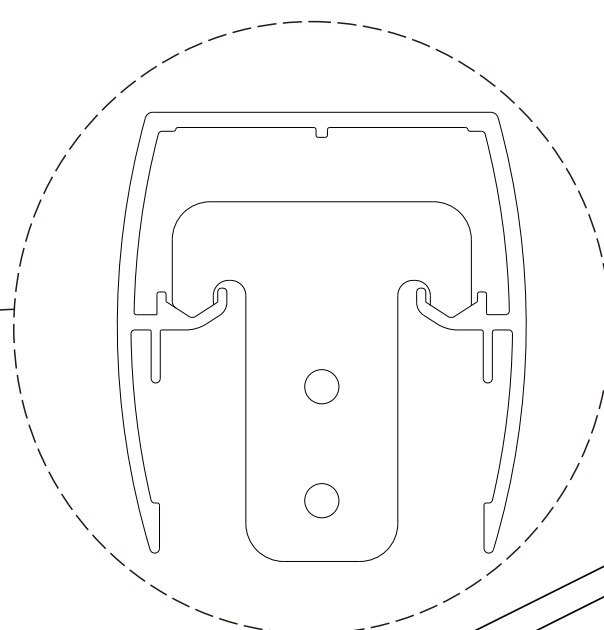
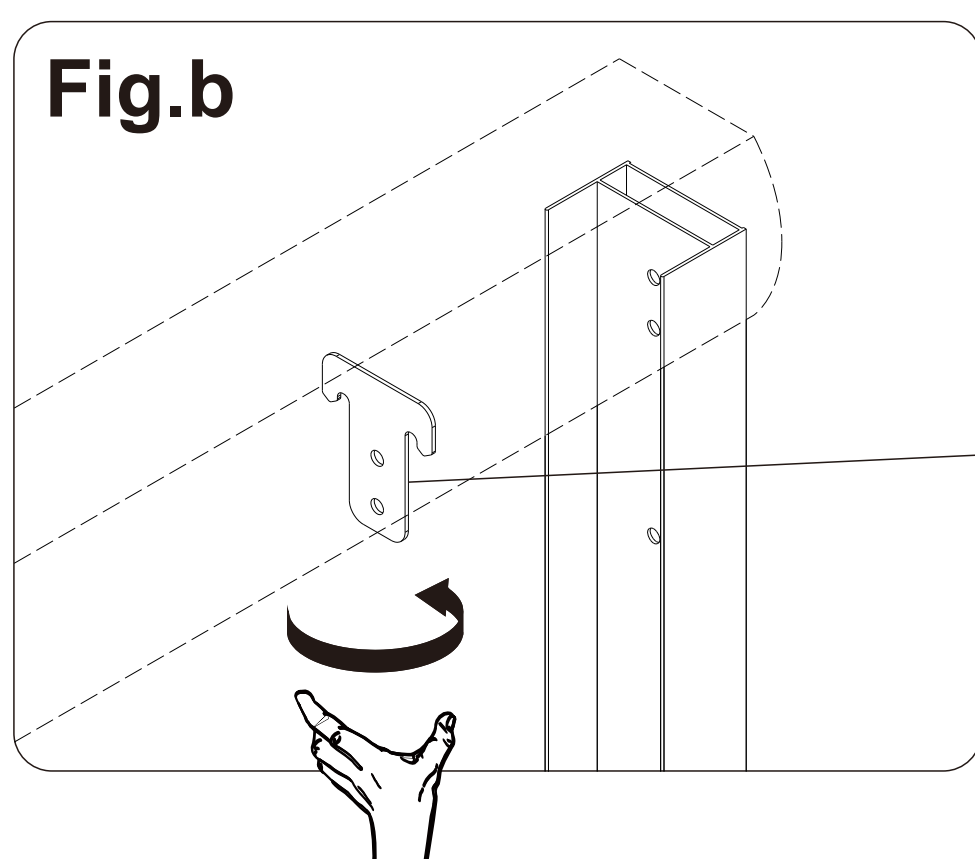


Fig.c



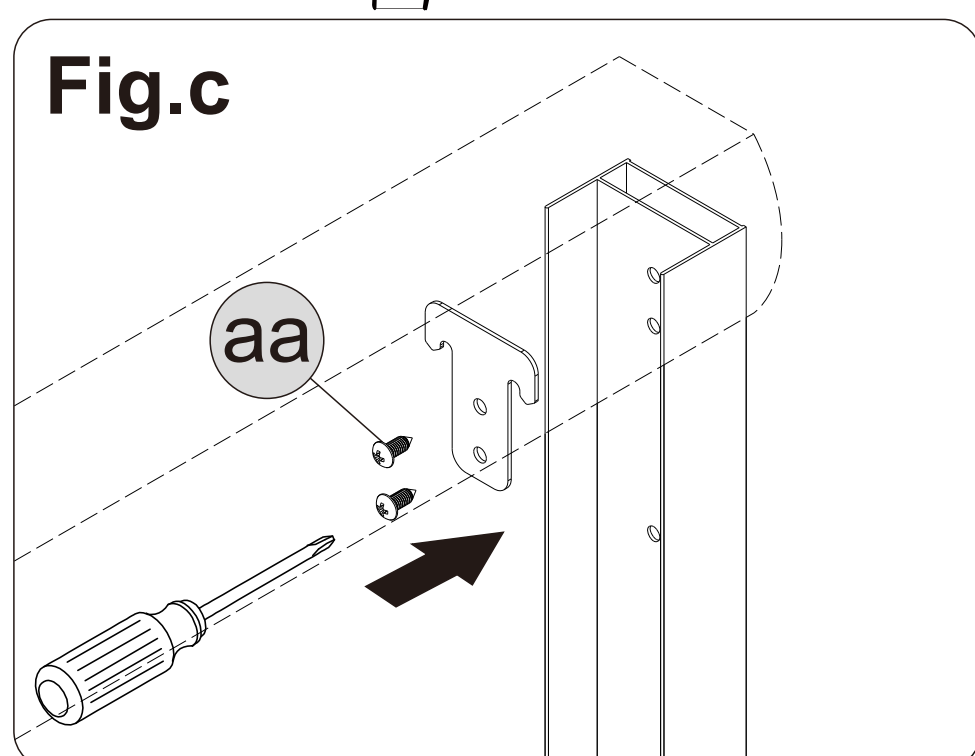



Fig.d

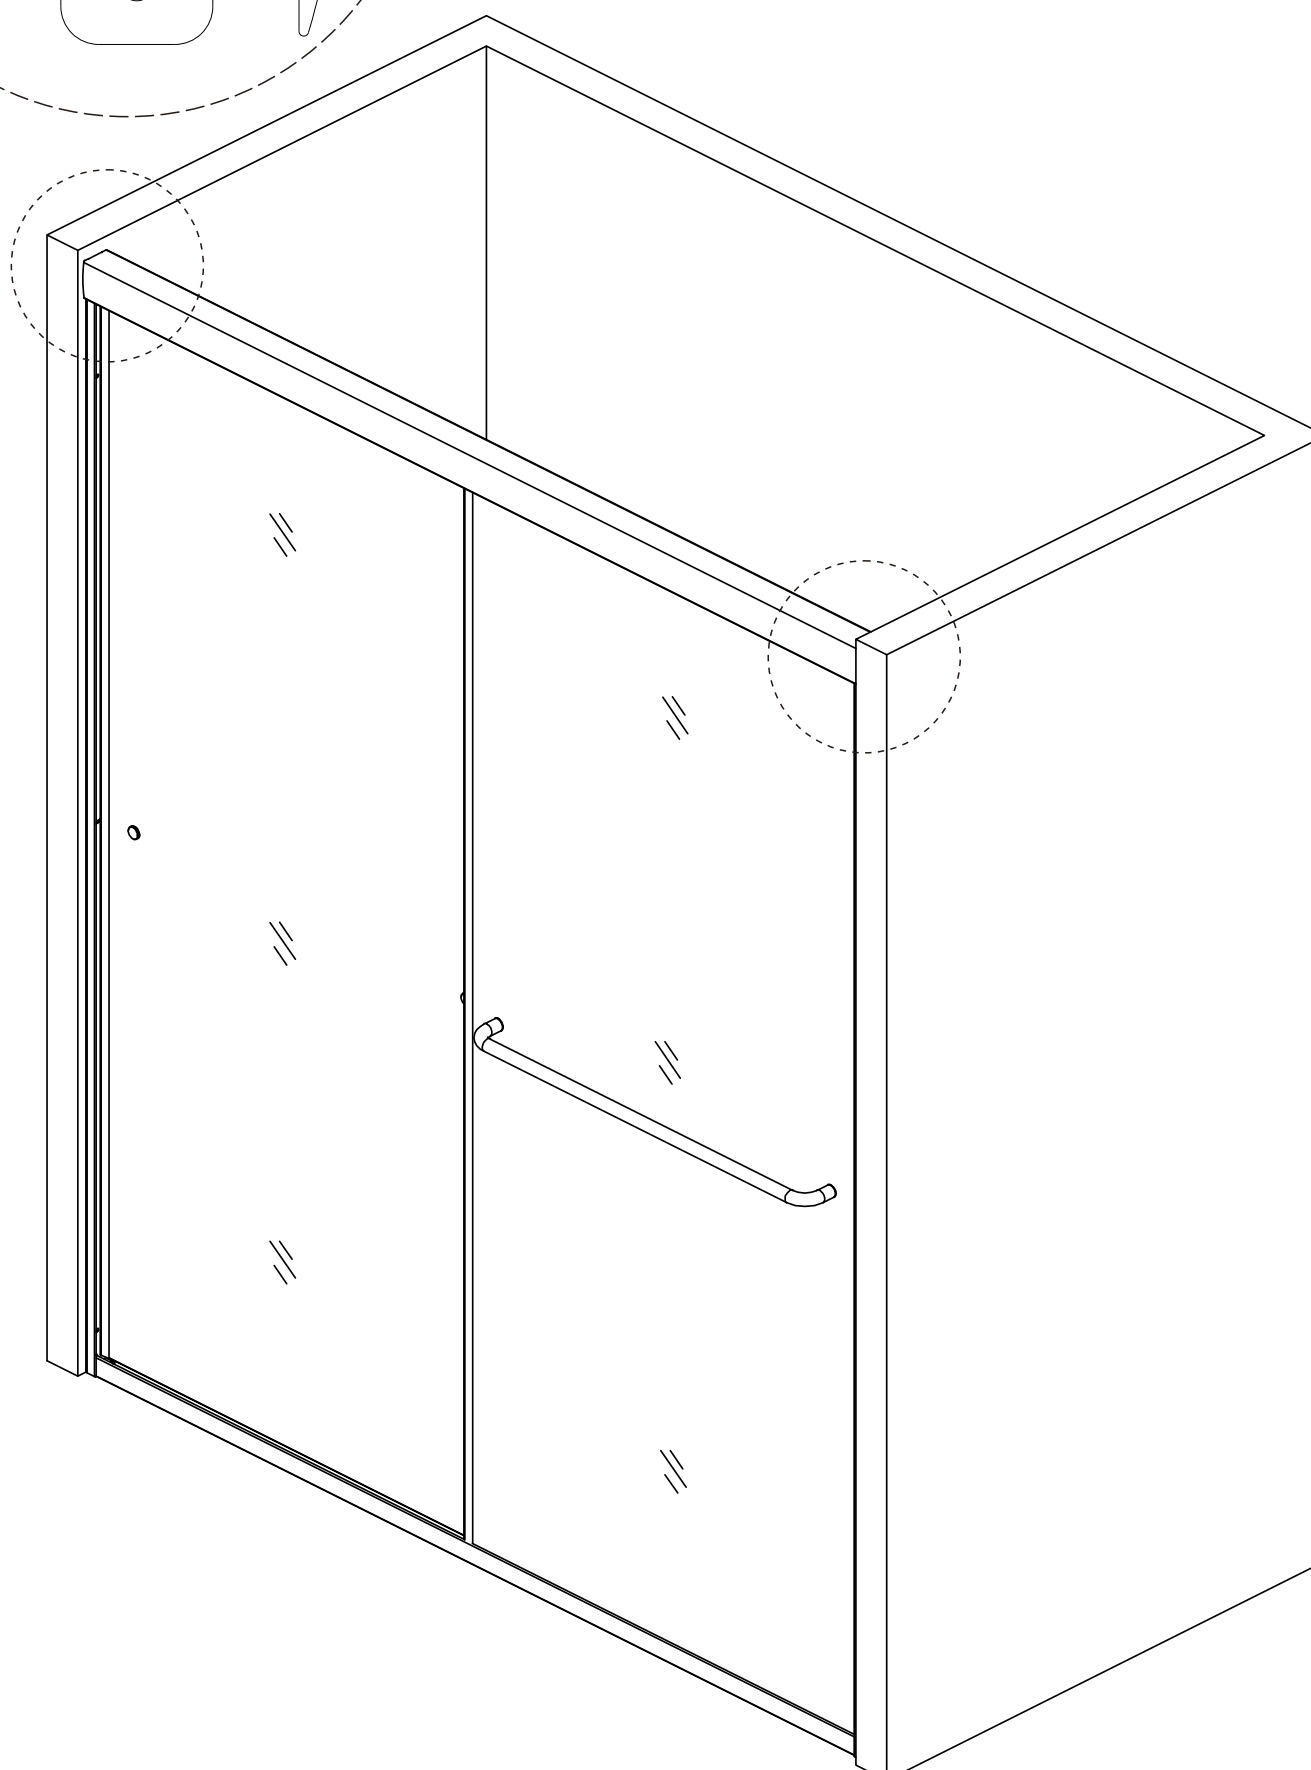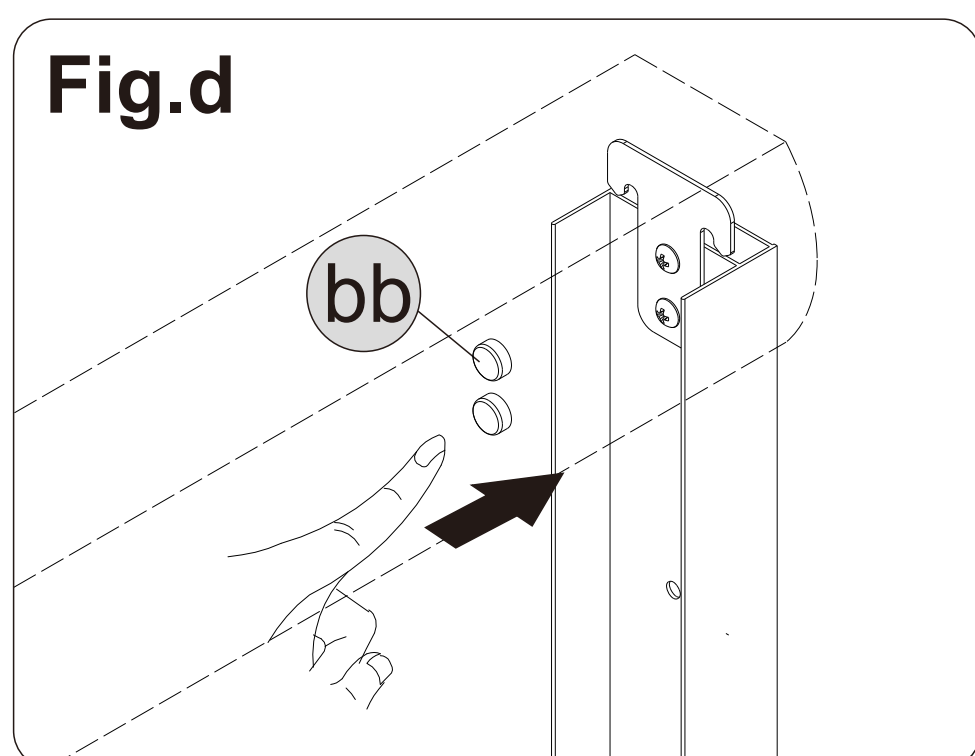

12 Install the **Anti-water strip (I)** on the **Glass Door (A)**.

NOTE

2 pieces on each door as Fig.a

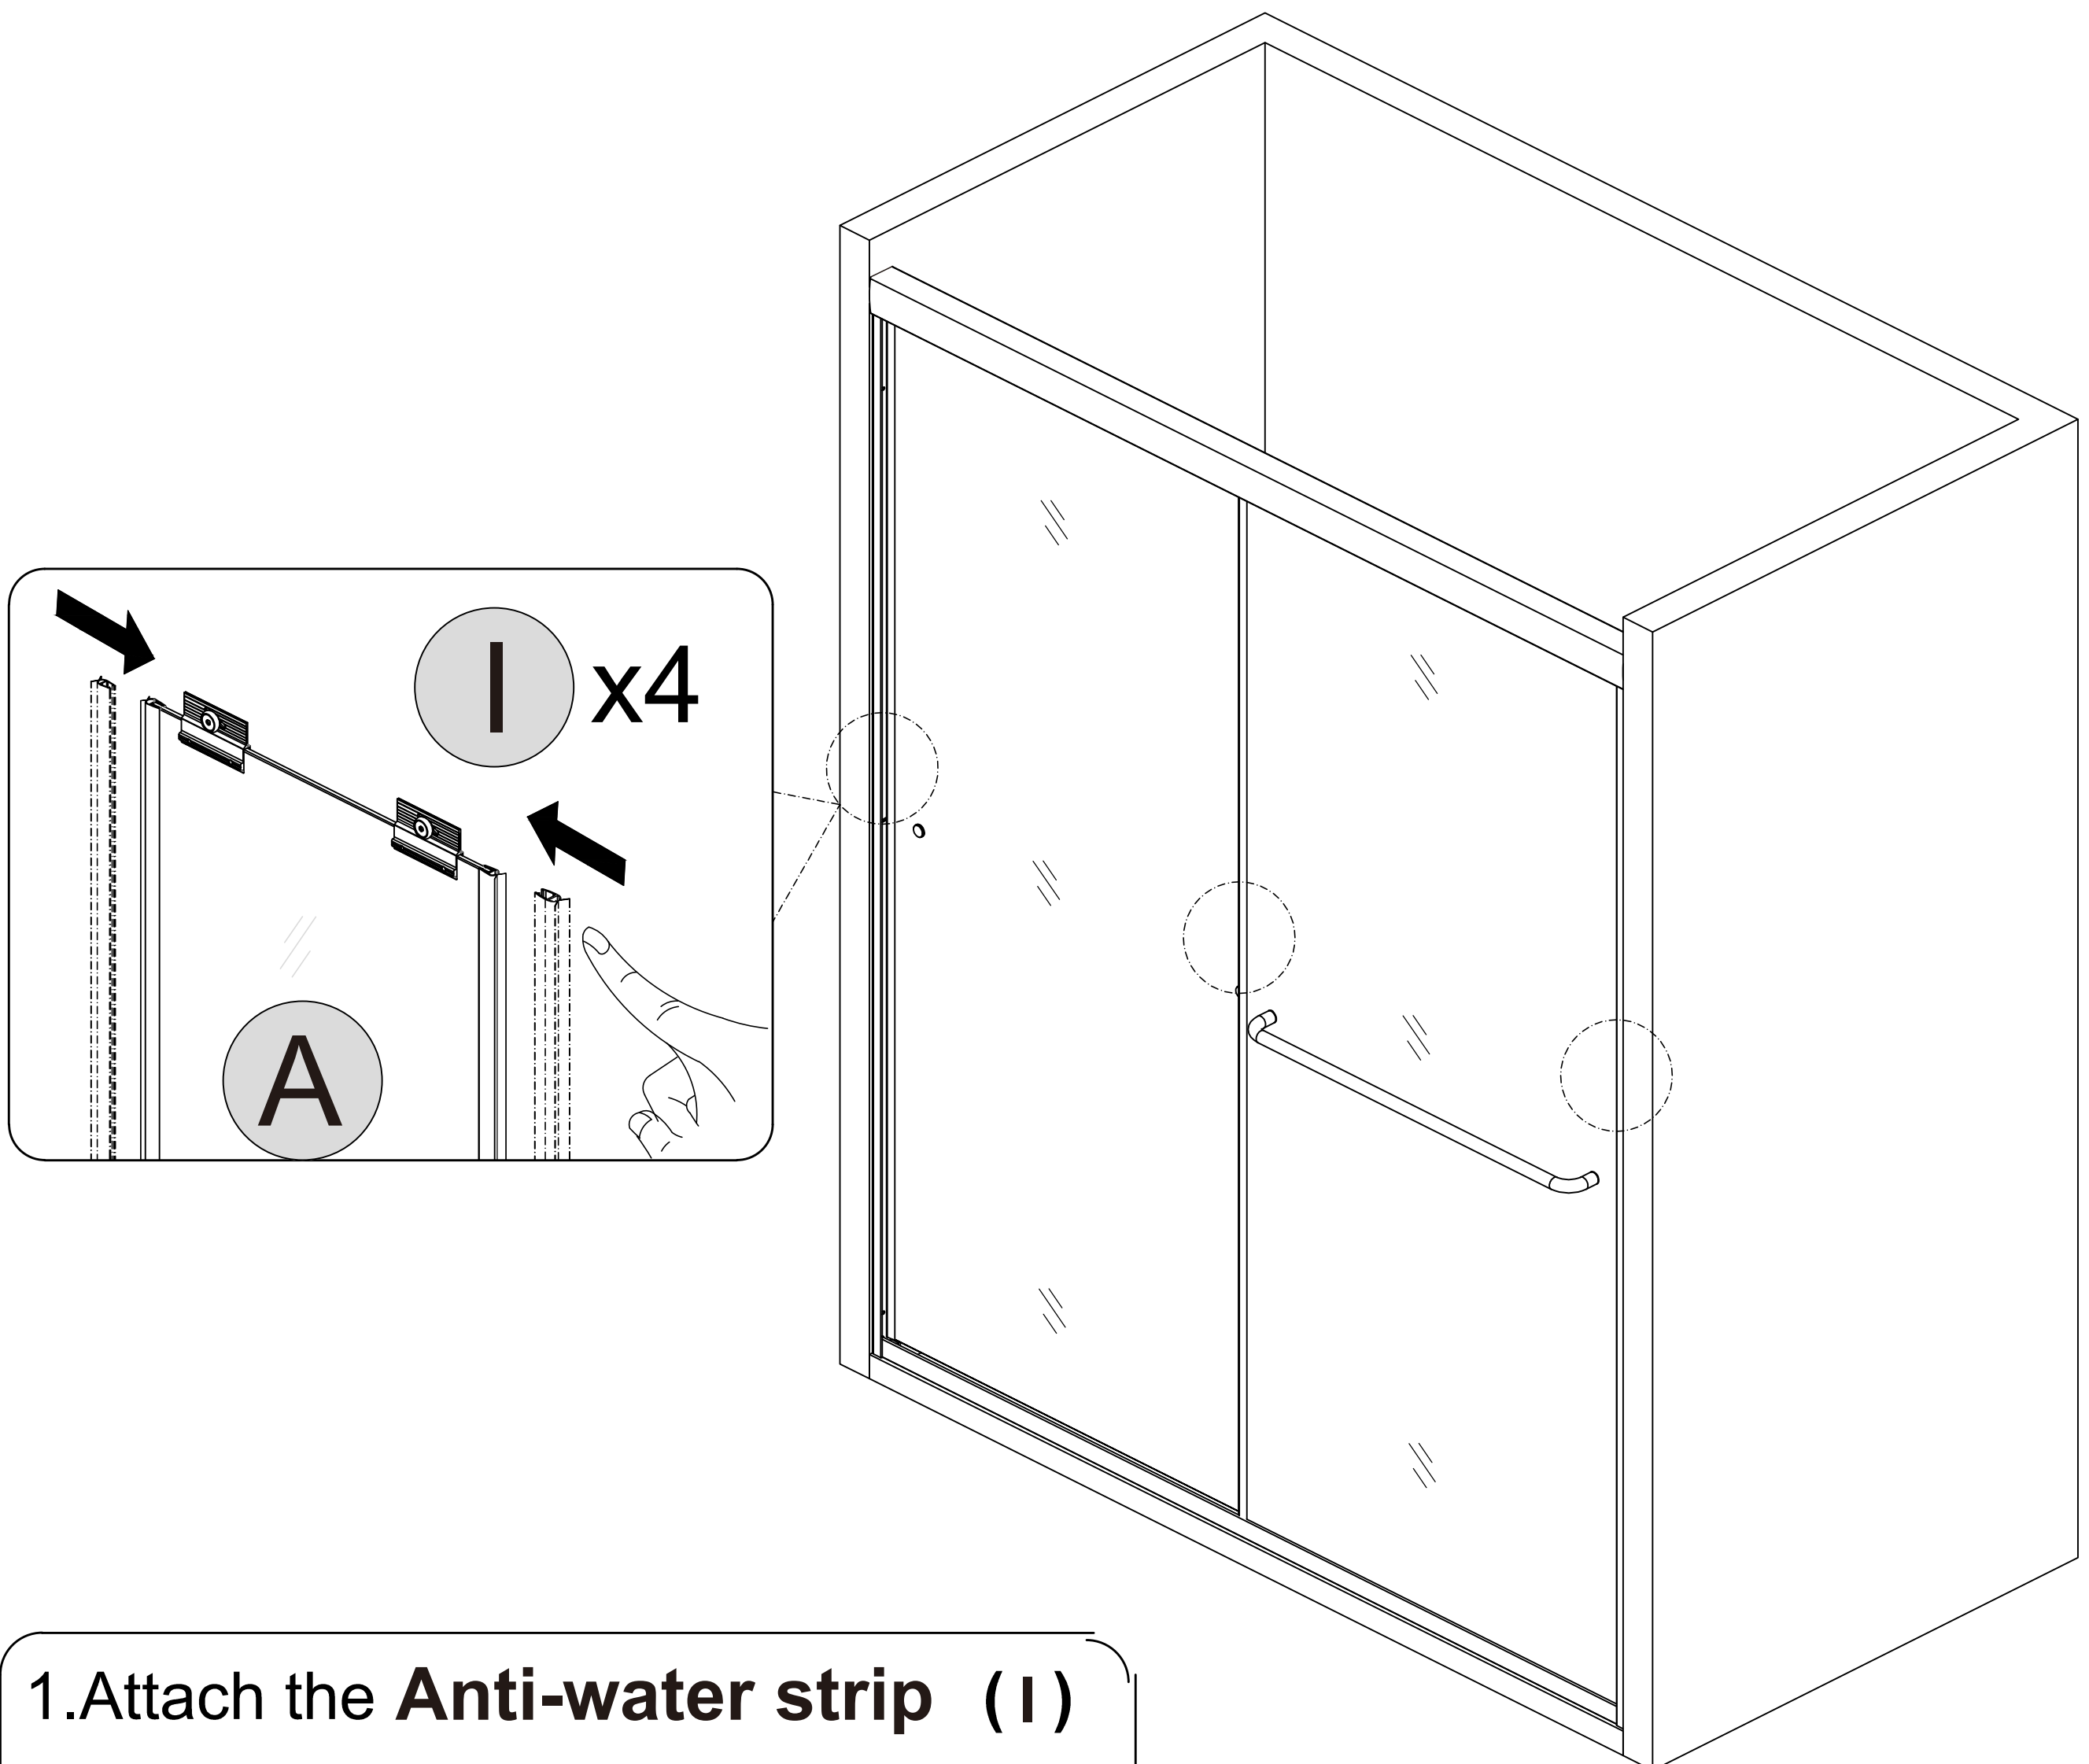

1. Attach the **Anti-water strip (I)** to **Glass Door (A)**;
2. Seal is same height as **Glass Door (A)**.




13 SEALING



NOTE The surfaces need to be clean and free of debris before applying silicone.

NOTE Ensure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the Wall Jamb (B) and Lower Guide Rail (D) .

! Allow 24 hours for the silicone to cure before using the shower.

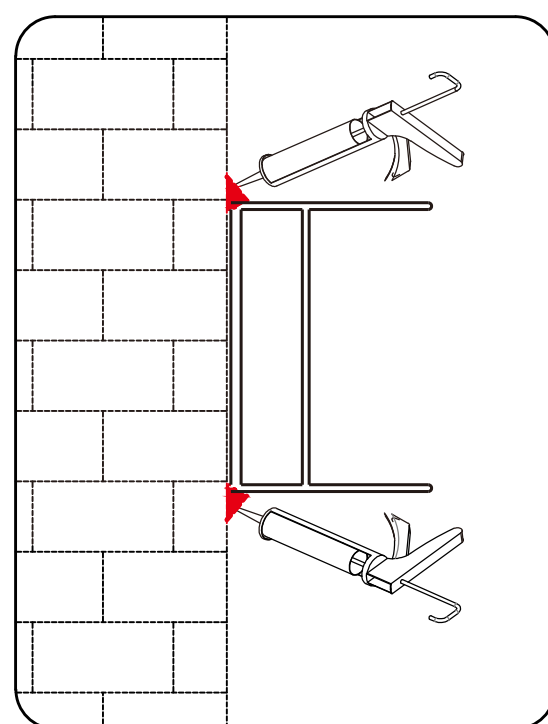

! Apply Silicone Sealant, (not supplied).

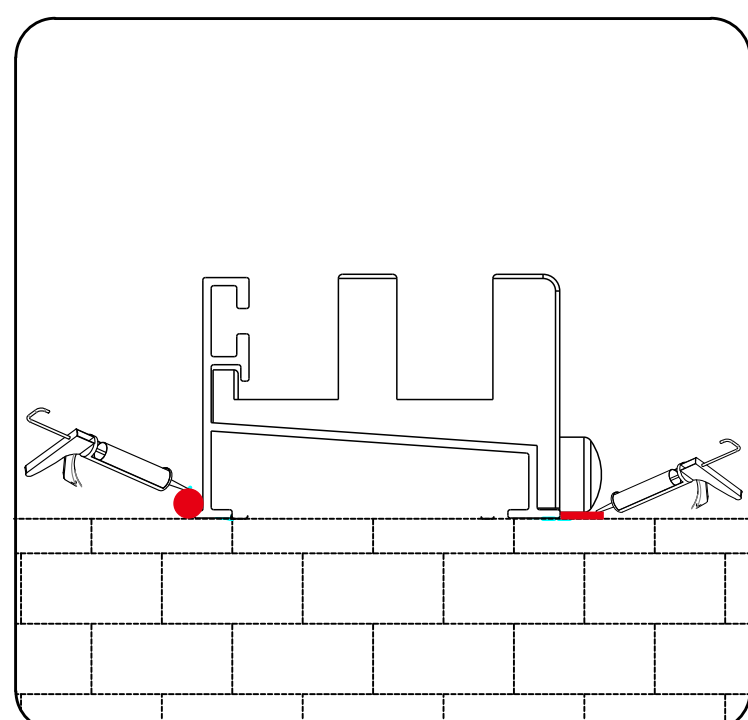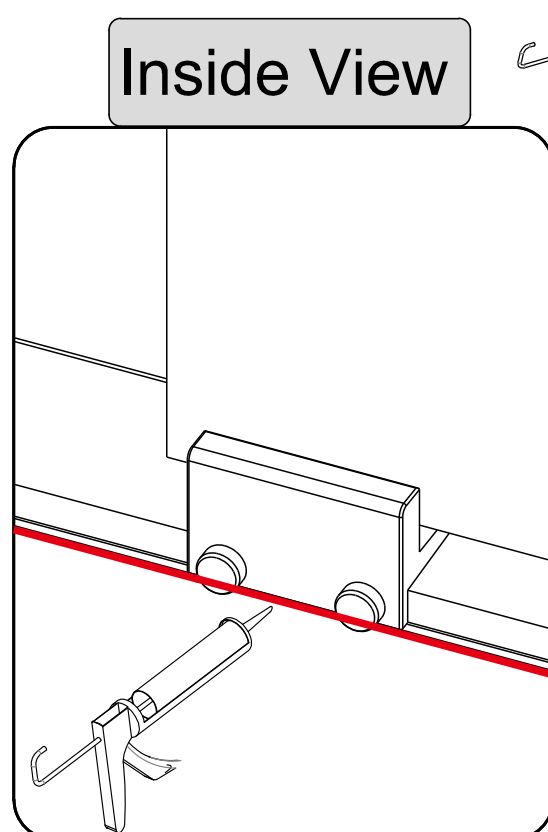

Apply silicone around the bottom rail.