


COSIEST[®] Gazebo

C0350595 C0350596 C0350597 C0350598
C0350667 C0350668 C0350669 C0350670

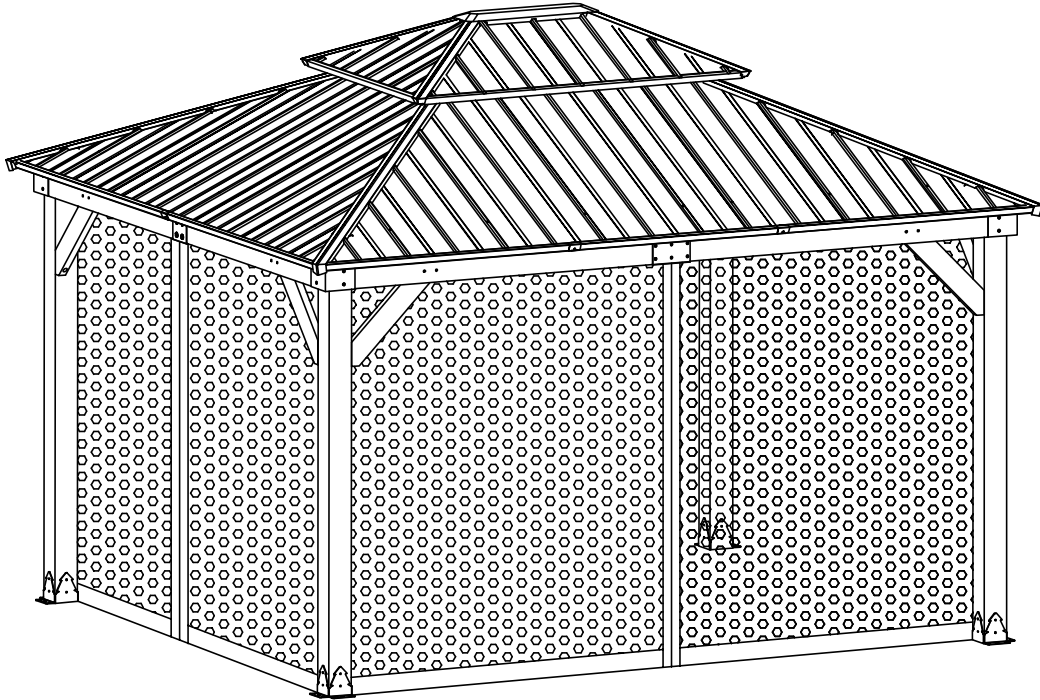

Thank You for Choosing COSIEST !

Our goal is to provide high quality indoor furniture with outstanding customer service-all at an affordable price.

Please let us know how we are doing!

Problems?

We will fix it immediately.

✉ help@icosiest.com [24/7]

☎ (909) 312-3668 [9AM-5PM(PT) Monday to Friday]

As a valued customer, your satisfaction is our #1 priority!

Happy?

How satisfied are you with our products? Your comments mean a lot to us!

Find more awesome deals on www.icosiest.com

For latest information, follow us on facebook.com/icosiest

For daily design inspirations, like us on instagram.com/icosiest_furniture/

***THE DIAGRAM IS FOR REFERENCE ONLY**

Tools Required For Assembly



1. It required two or more people to complete assembly.




2. You will need one stepladder.




3. You may need to wear protective gloves.



4. A safety hat is recommended.



5. Use the hex keys in the box.


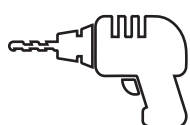












6. Please use a screwdriver. For ease of construction, you may need to use a drill.











7. Please do not tighten screws fully prior to complete assembly.

10X12






Item no	Qty	Reference Image
01	4	 1515mm 2/4 BOX
02	4	 1714mm 1/4 BOX
04	8	 4/4 BOX
05	4	 1/4 BOX:2PCS 2/4 BOX:2PCS













Item no	Qty	Reference Image
A1	4	
B1	6	
D1	2	
D2	2	
E1	2	
E2	2	
E3	2	
E4	2	
F1	4	
H2	2	 F
H6	2	 F
H7	2	 F
H8	2	 F
H9	2	 F
I5	2	
I6	2	
K1	2	
K2	2	
K3	2	

3/4 BOX











Item no	Qty	Reference Image	3/4 BOX
K4	2	 794	
K16	2	 1105	
K17	2	 1105	
K12	2	 629	
K13	2		
K14	4		
S1	4		
S2	4		
L1	1		
L2	1		




3/4 BOX

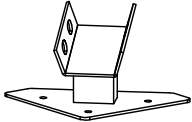Item no	Qty	Reference Image	Item no	Qty	Reference Image
M1	4		N1	4	
Z2	4		Z3	2	
Z4	6		Z6	2	
X1	8		X2	8	
X3	4		X4	4	
Q1	10		Q2	1	



Item no	Qty	Description	Reference Image
AA	8	M8X145	
BB	40+4	M5X30	
CC	8	M10*80	
DD	8	M6*70	
EE	12+2	M5*40	
FF	20+1	M8*25	
GG	14+2	M6	
HH	16	M8X60	
KK	12+1	M6X55	
LL	20+2	M6X45	
MM	22+1		
NN	2+1	M6X25	
TT	138+14	M6X15	
UU	16	6X200	
Y1	1	M6	
Y2	1	M6	
Y3	2	M10	
Y4	2	M8	
Y5	2	M8	
Y6	2	M6	
Y7	1	M6	
Y8	1	M8	

3/4 BOX

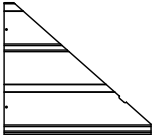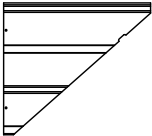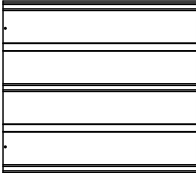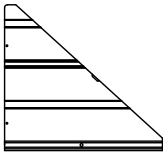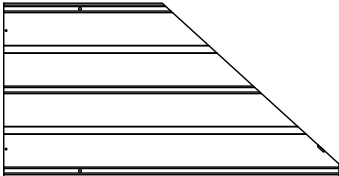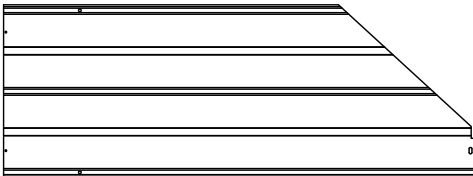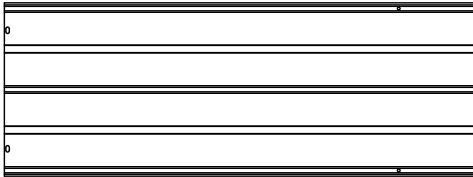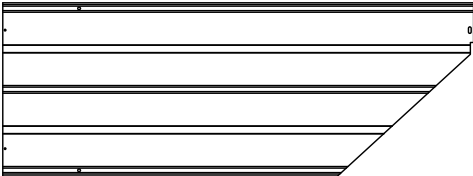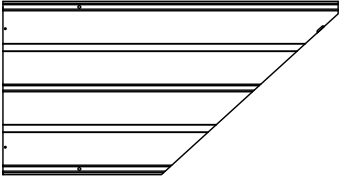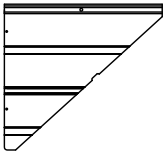Item no	Qty	Reference Image	4/4 BOX
T1	4		
T7	4		
T8	2		
T12	4		
T13	4		
T14	4		
T15	2		
T16	4		
T17	4		
T18	4		

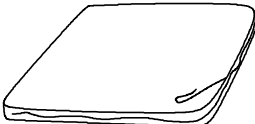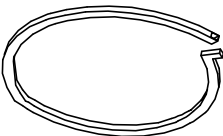
Item no	Qty	Reference Image	4/4 BOX
VV	1		
WW	1		
SS	104+5		

STEP. 1

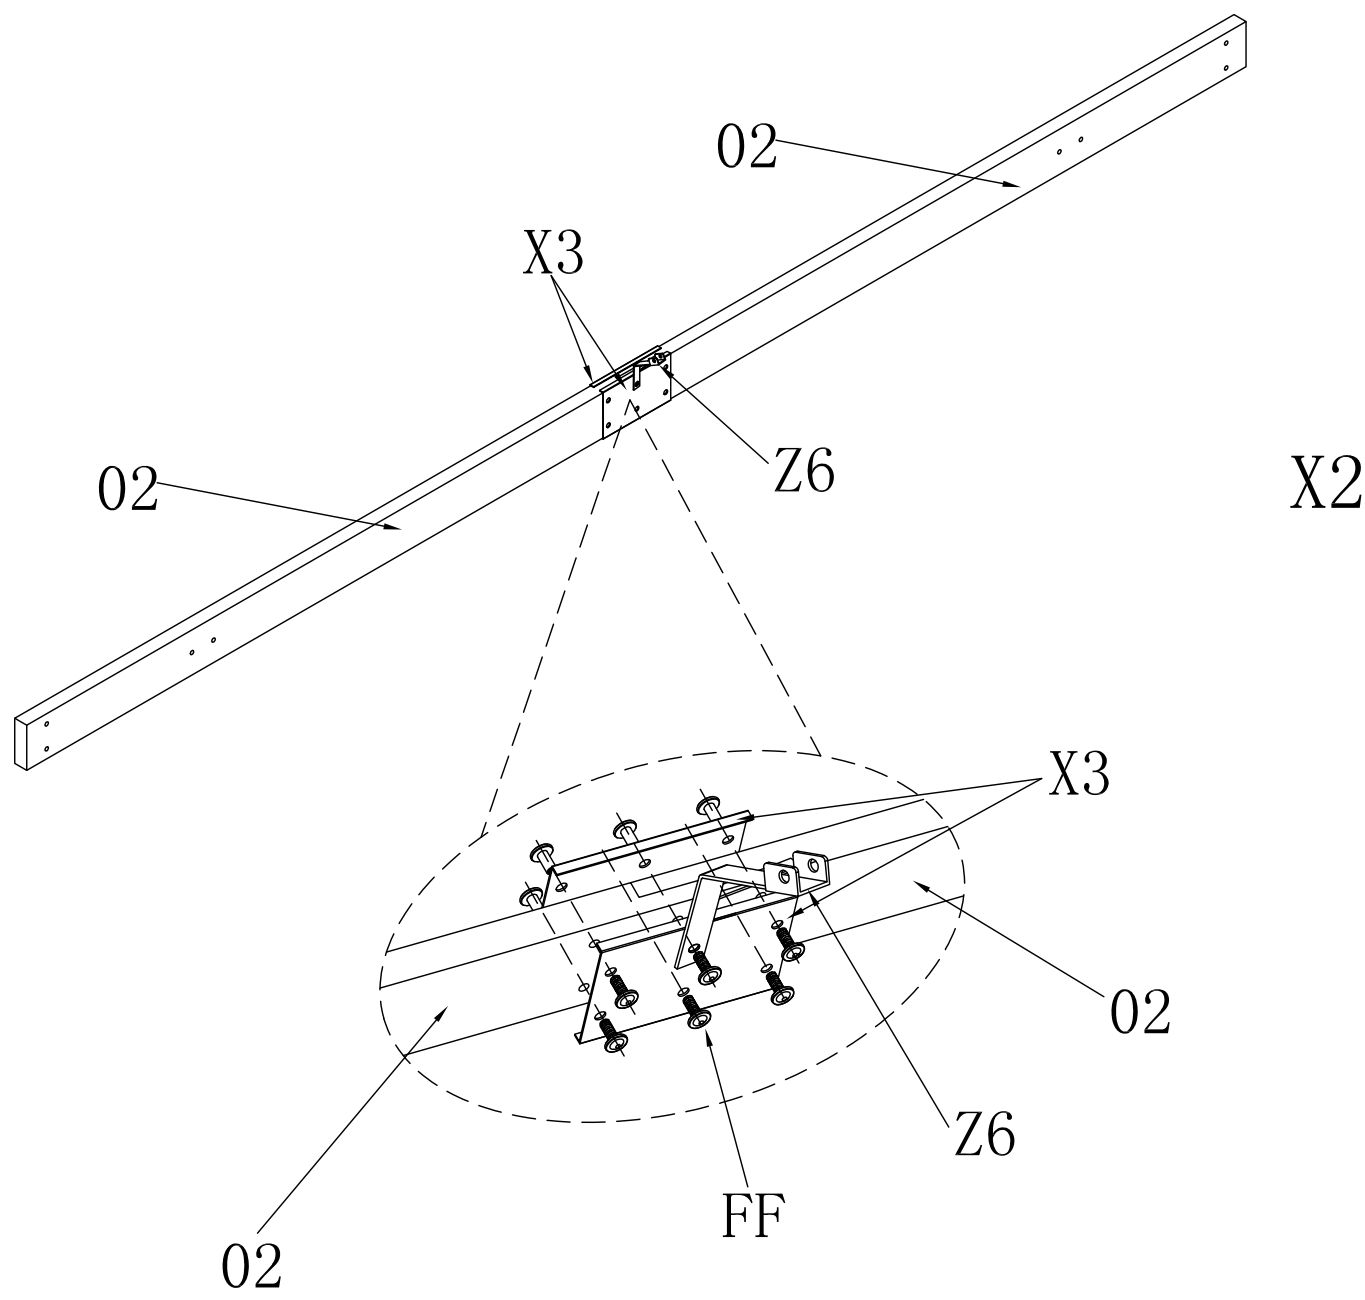


1714mm

02 4X



Z6 2X









X3 4X





M8*25

FF 12X



STEP. 2

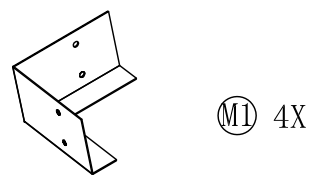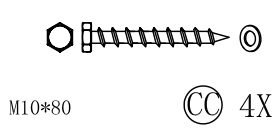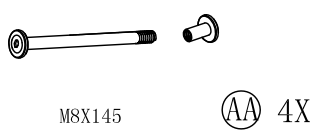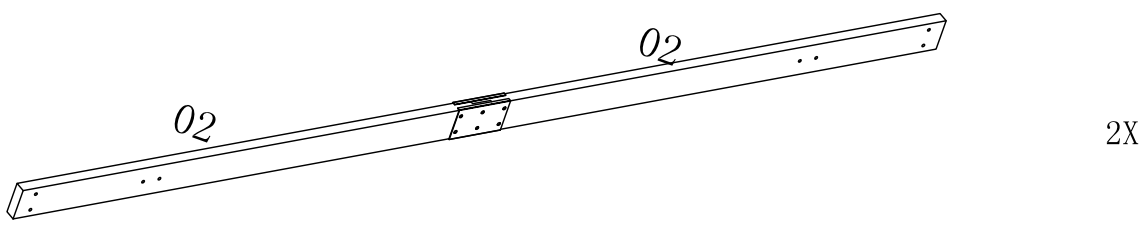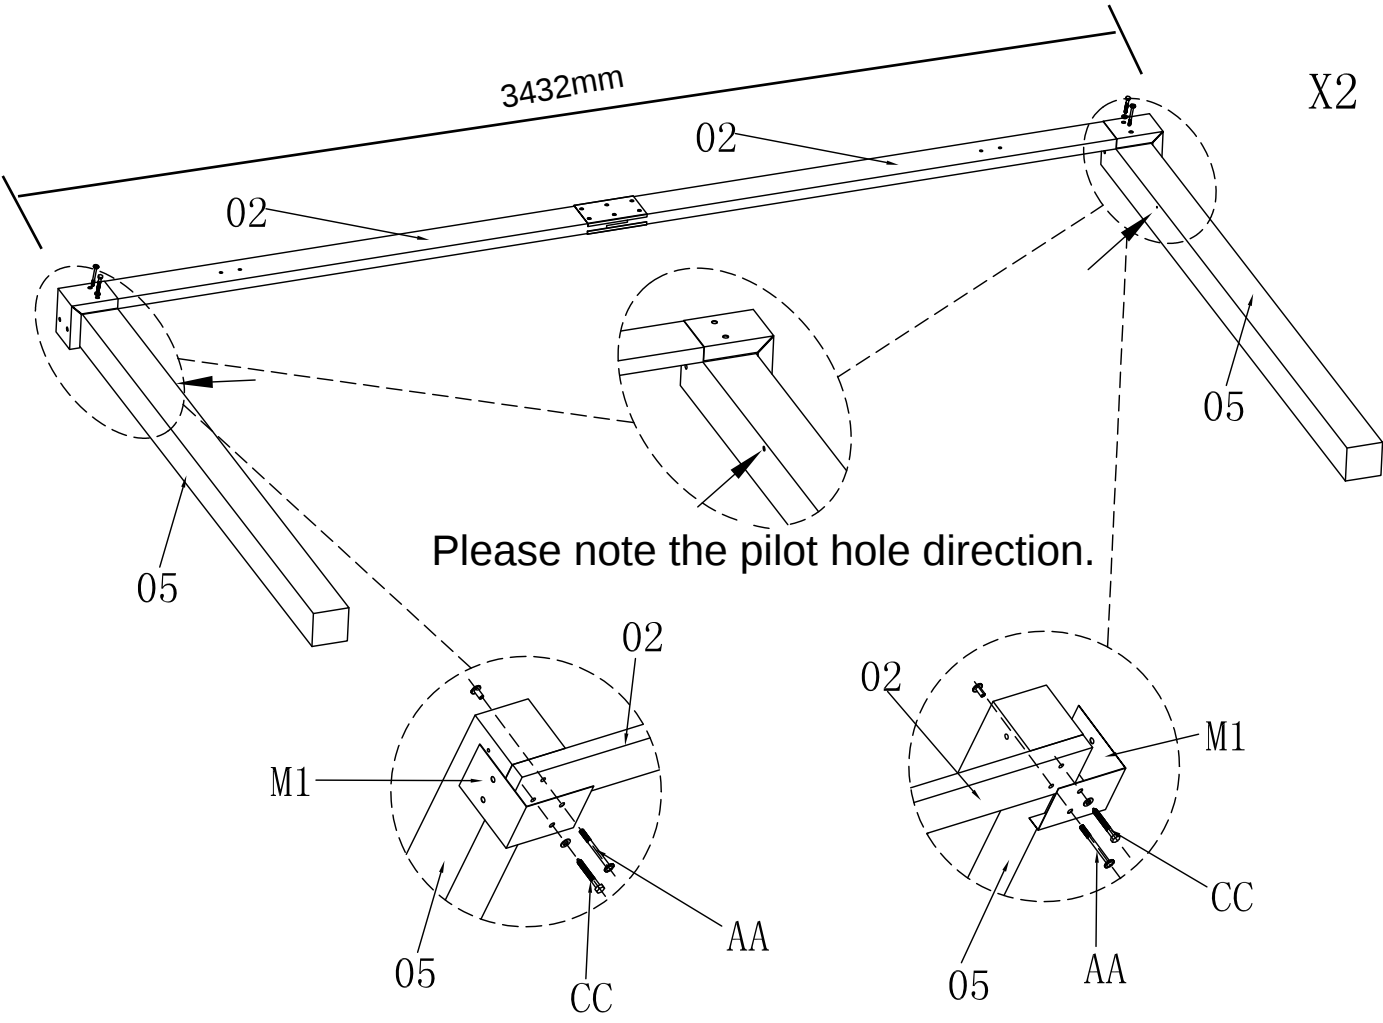

STEP. 3

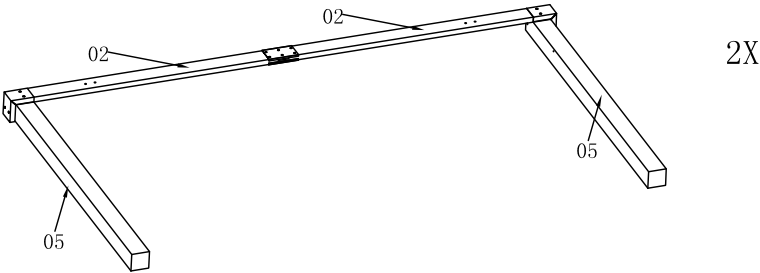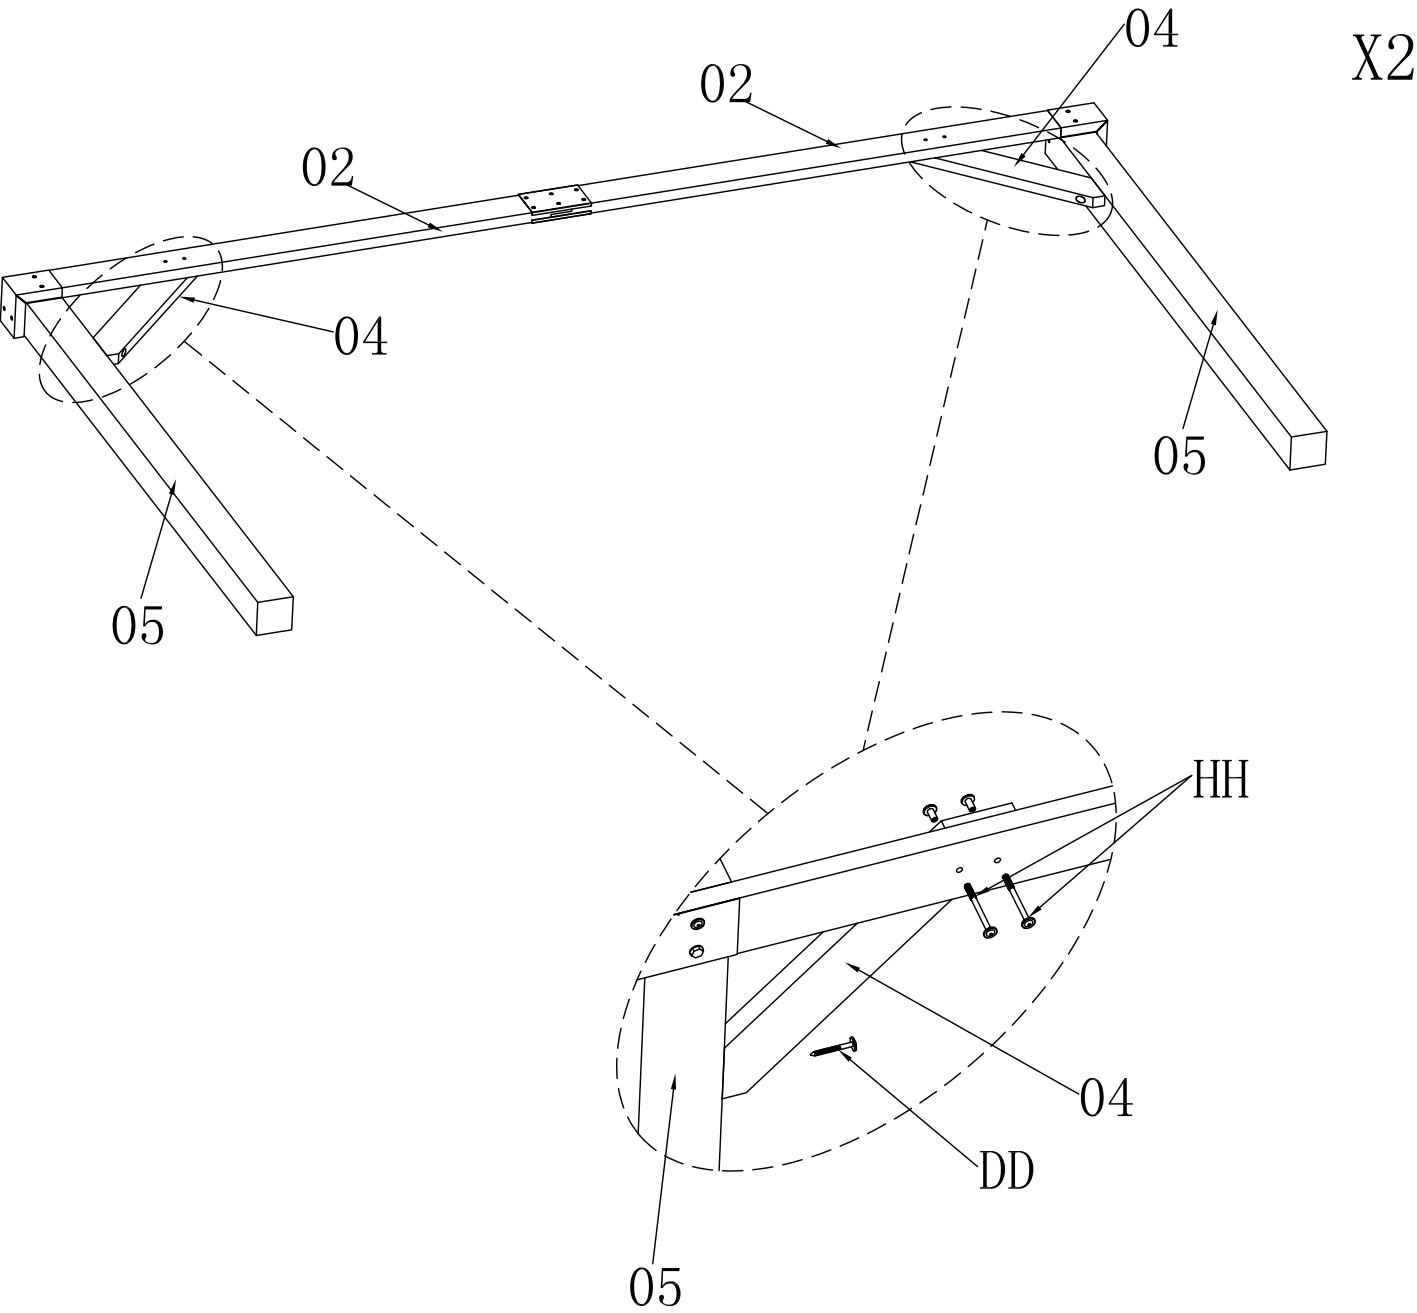

STEP. 4

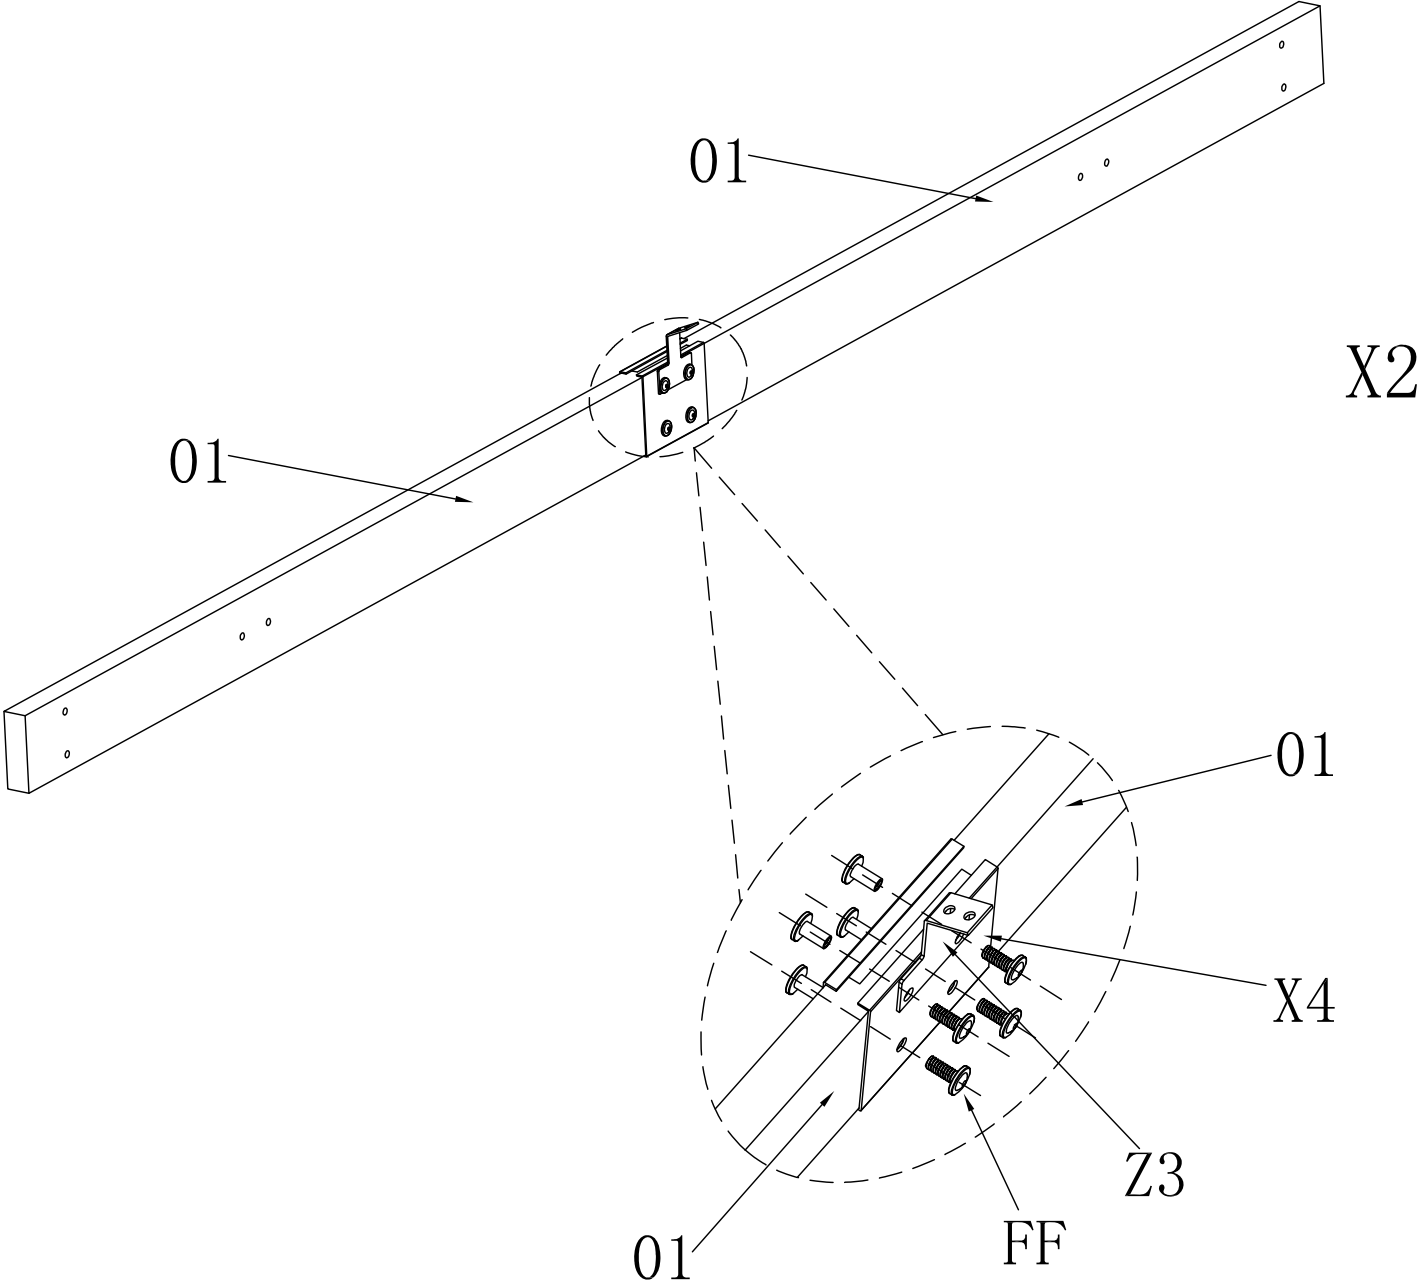

1515mm

01 4X



Z3 2X




X4 4X




M8*25

FF 8X


STEP. 5

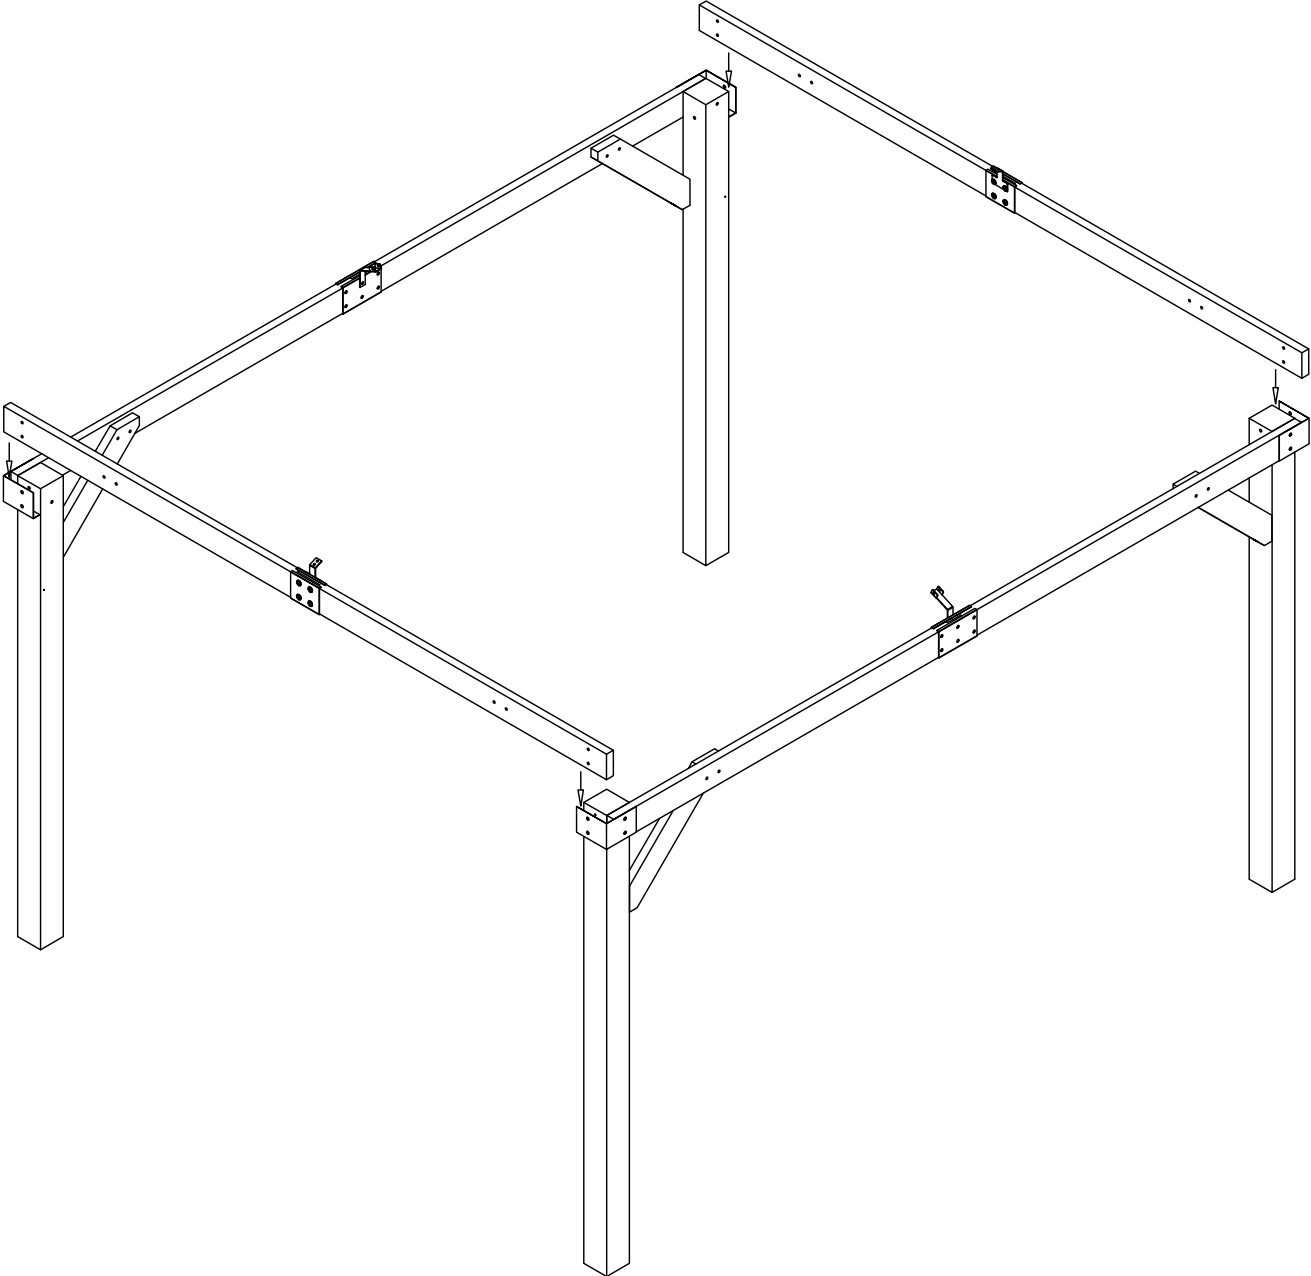

STEP. 6

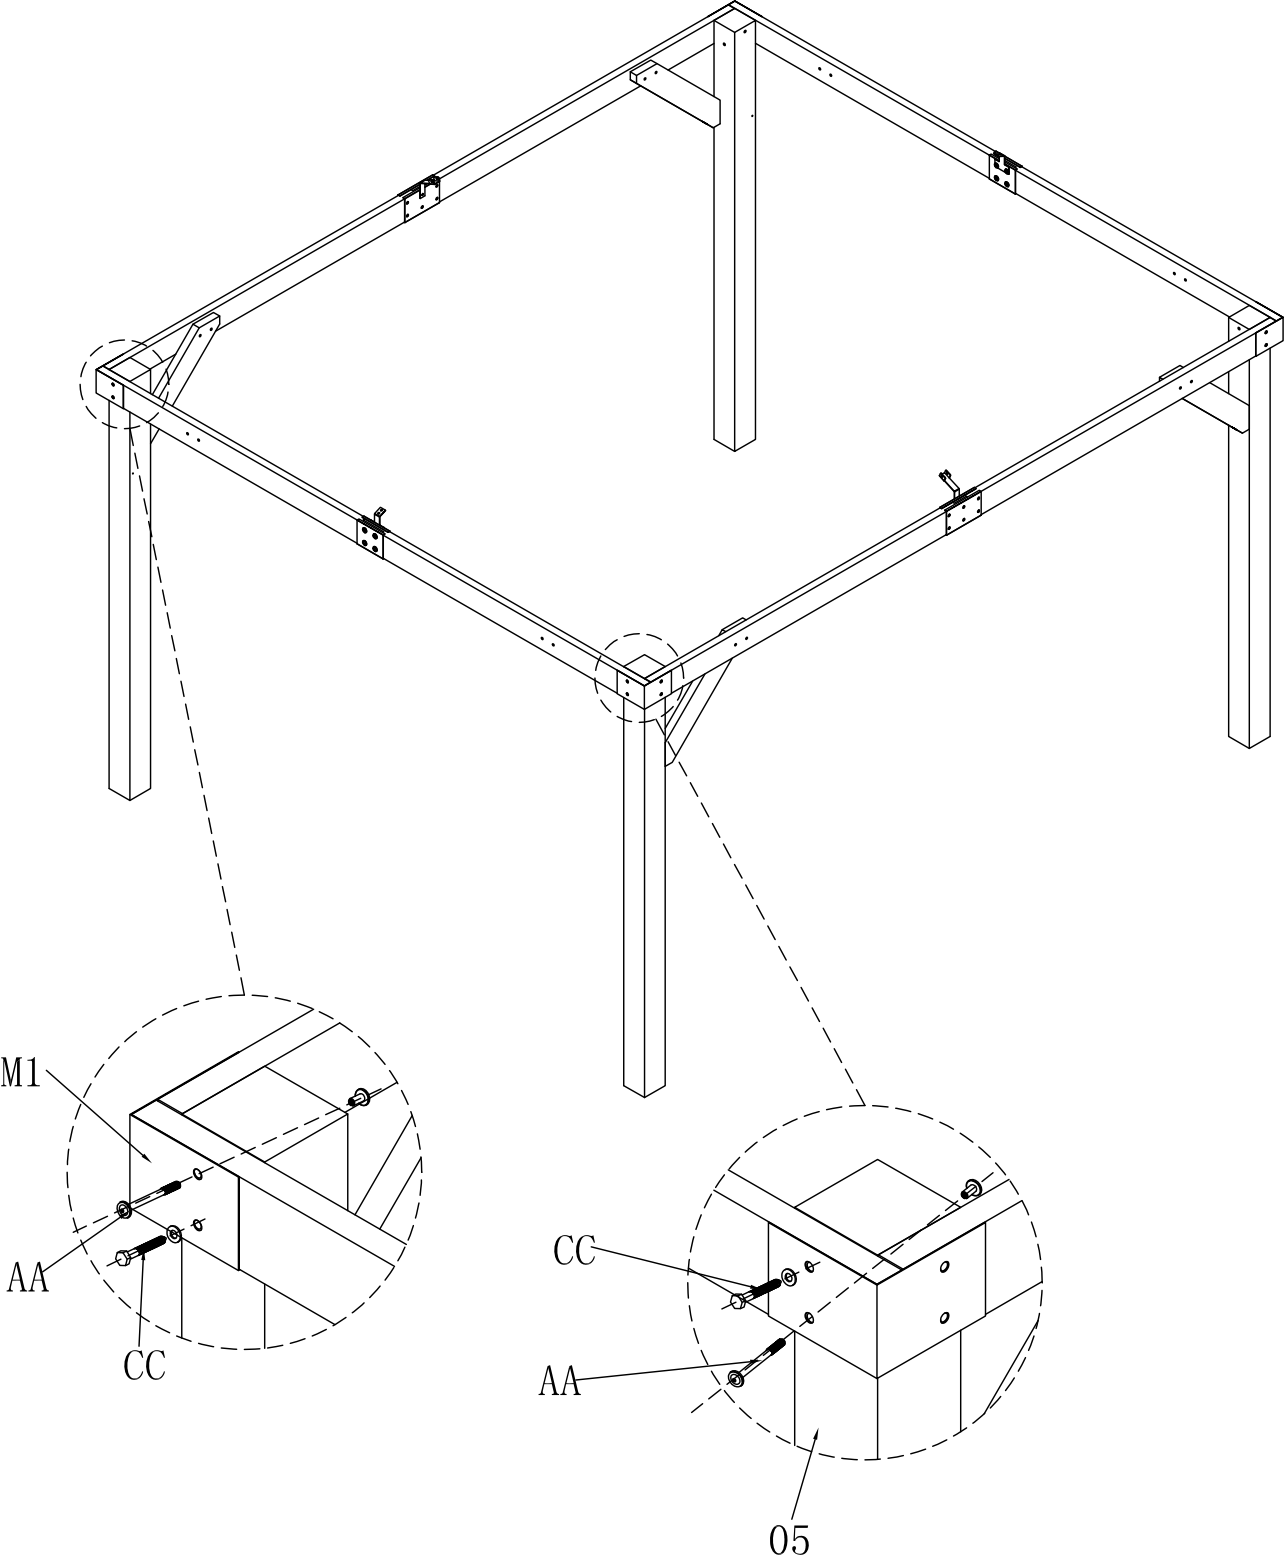


M8X145 AA 4X




M10*80 CC 4X

STEP. 7

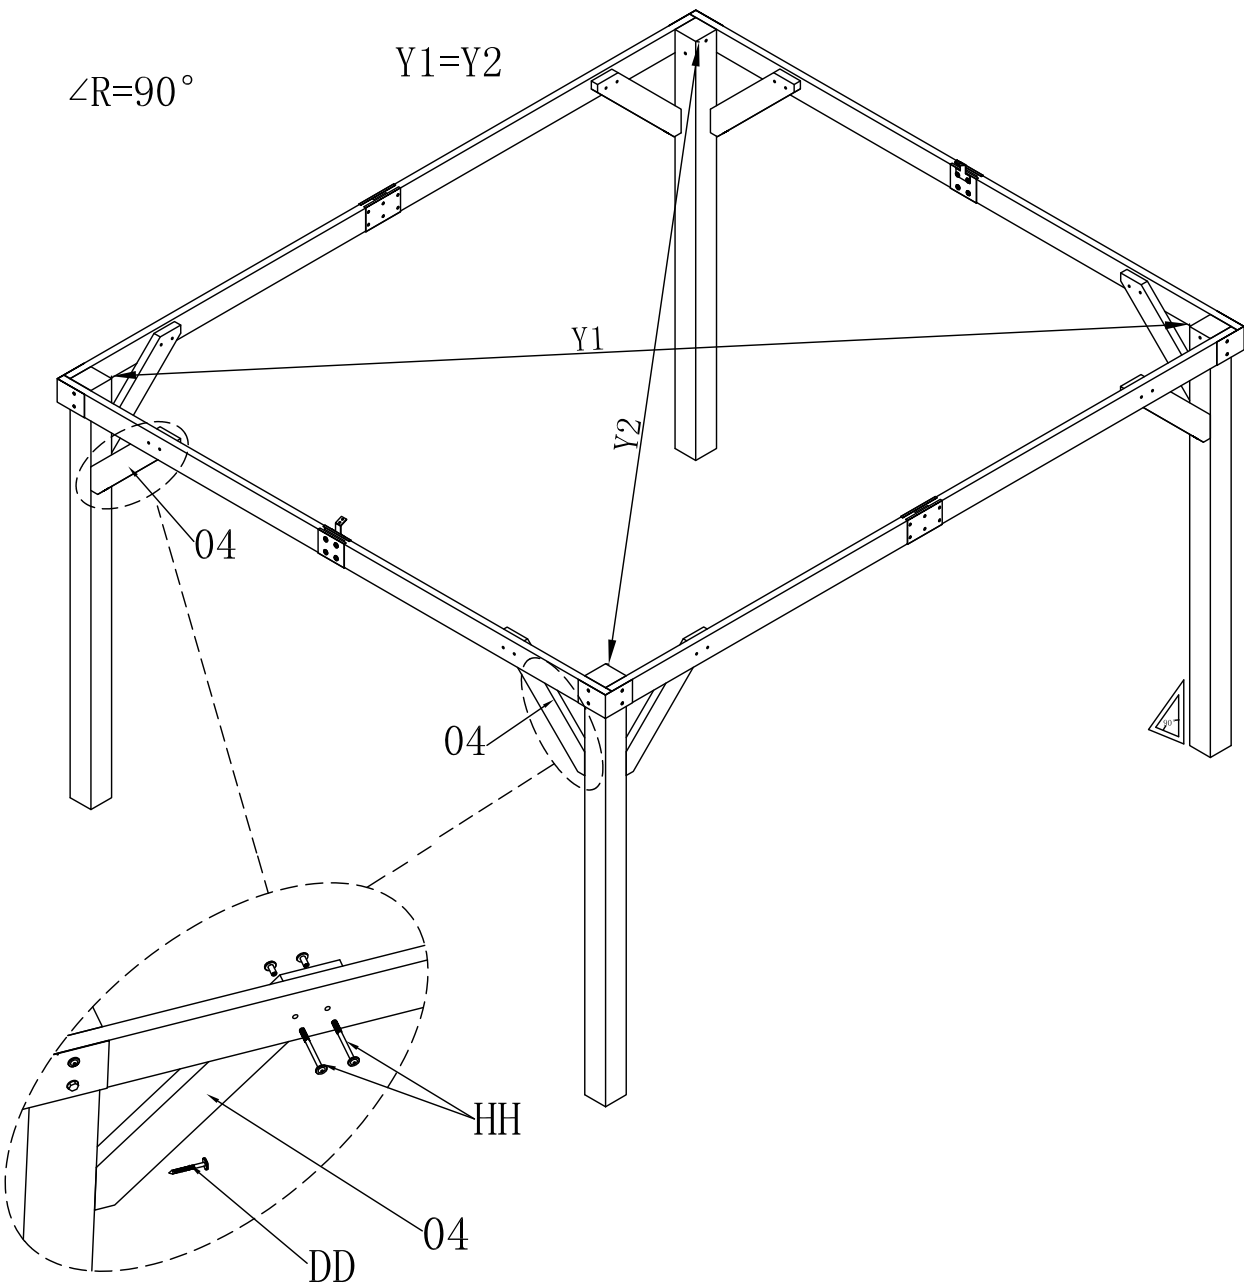

④ 4X



M6*70



④ 4X



M8X60

④ 8X

STEP. 8

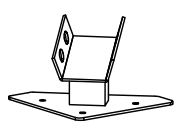
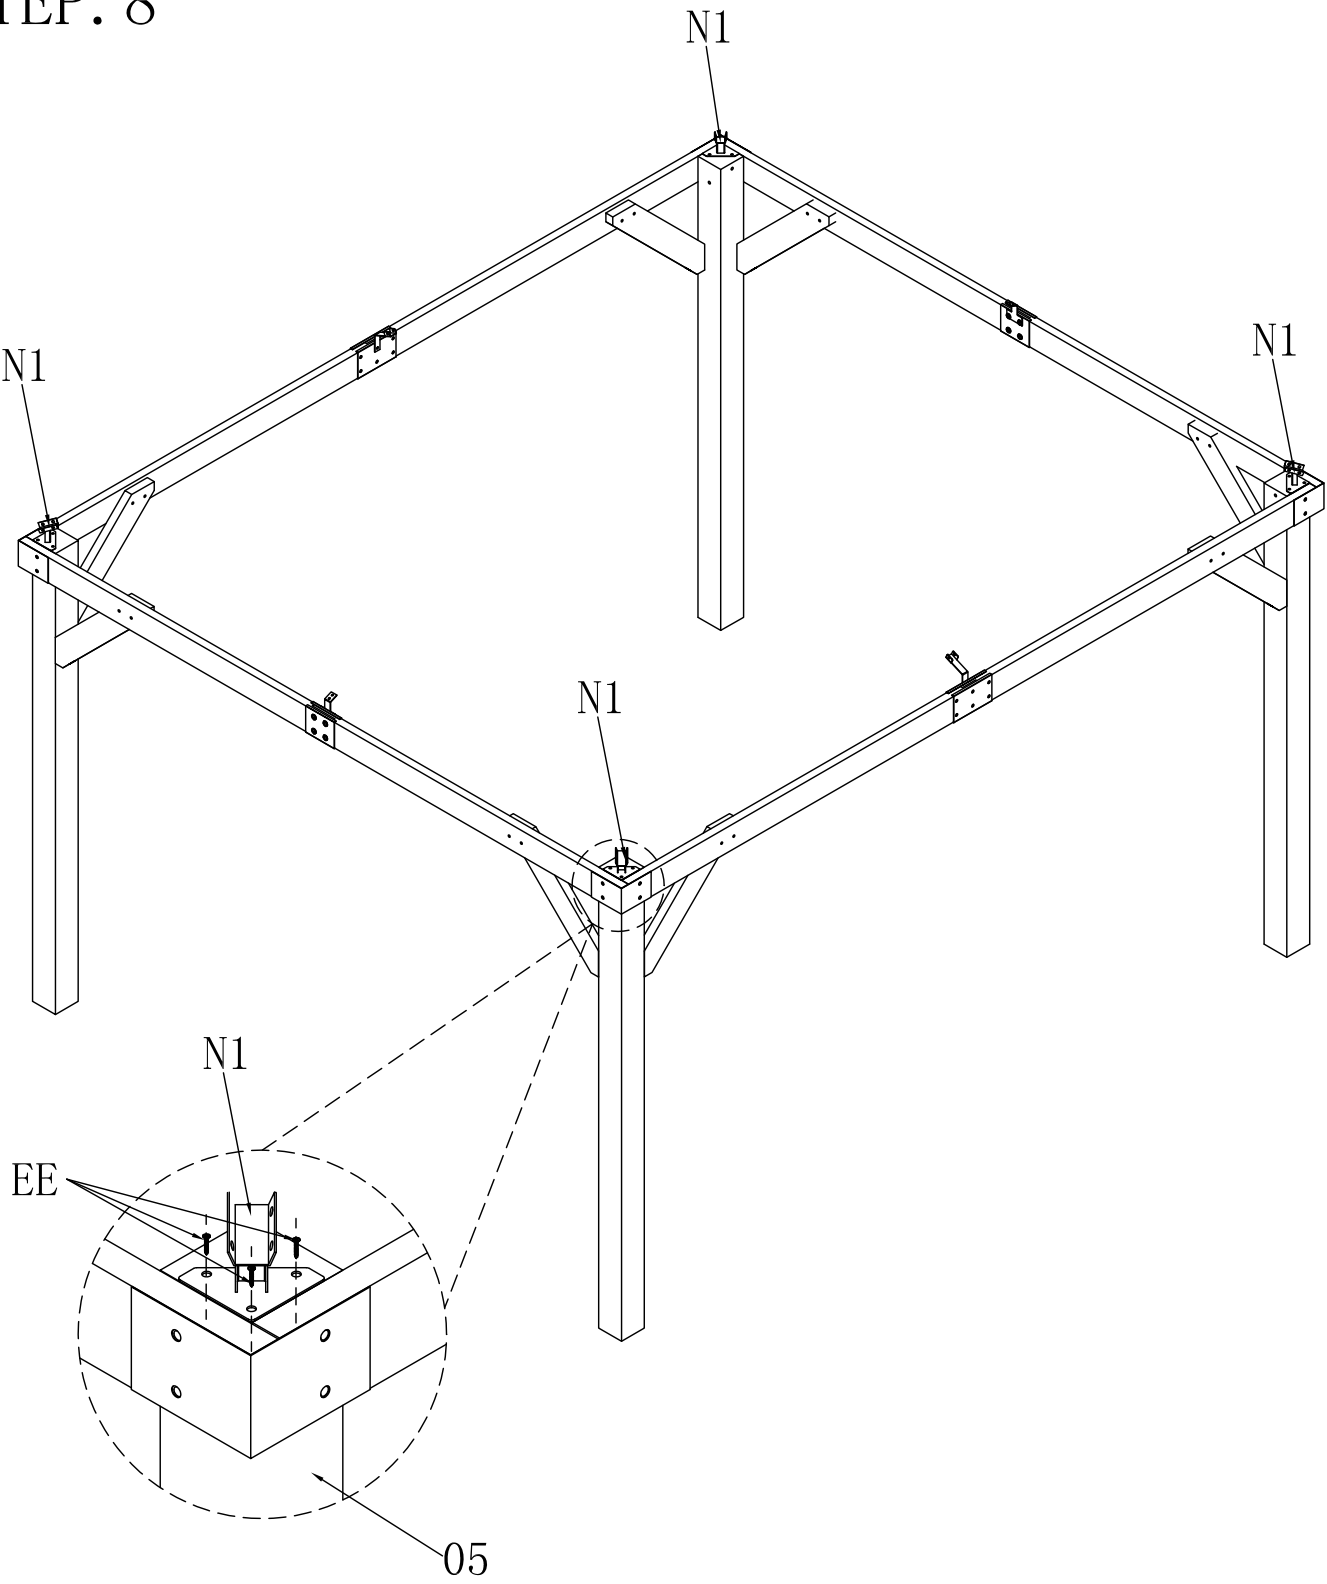


(N1) 4X



(EE) 12X

STEP. 9

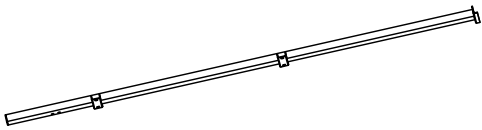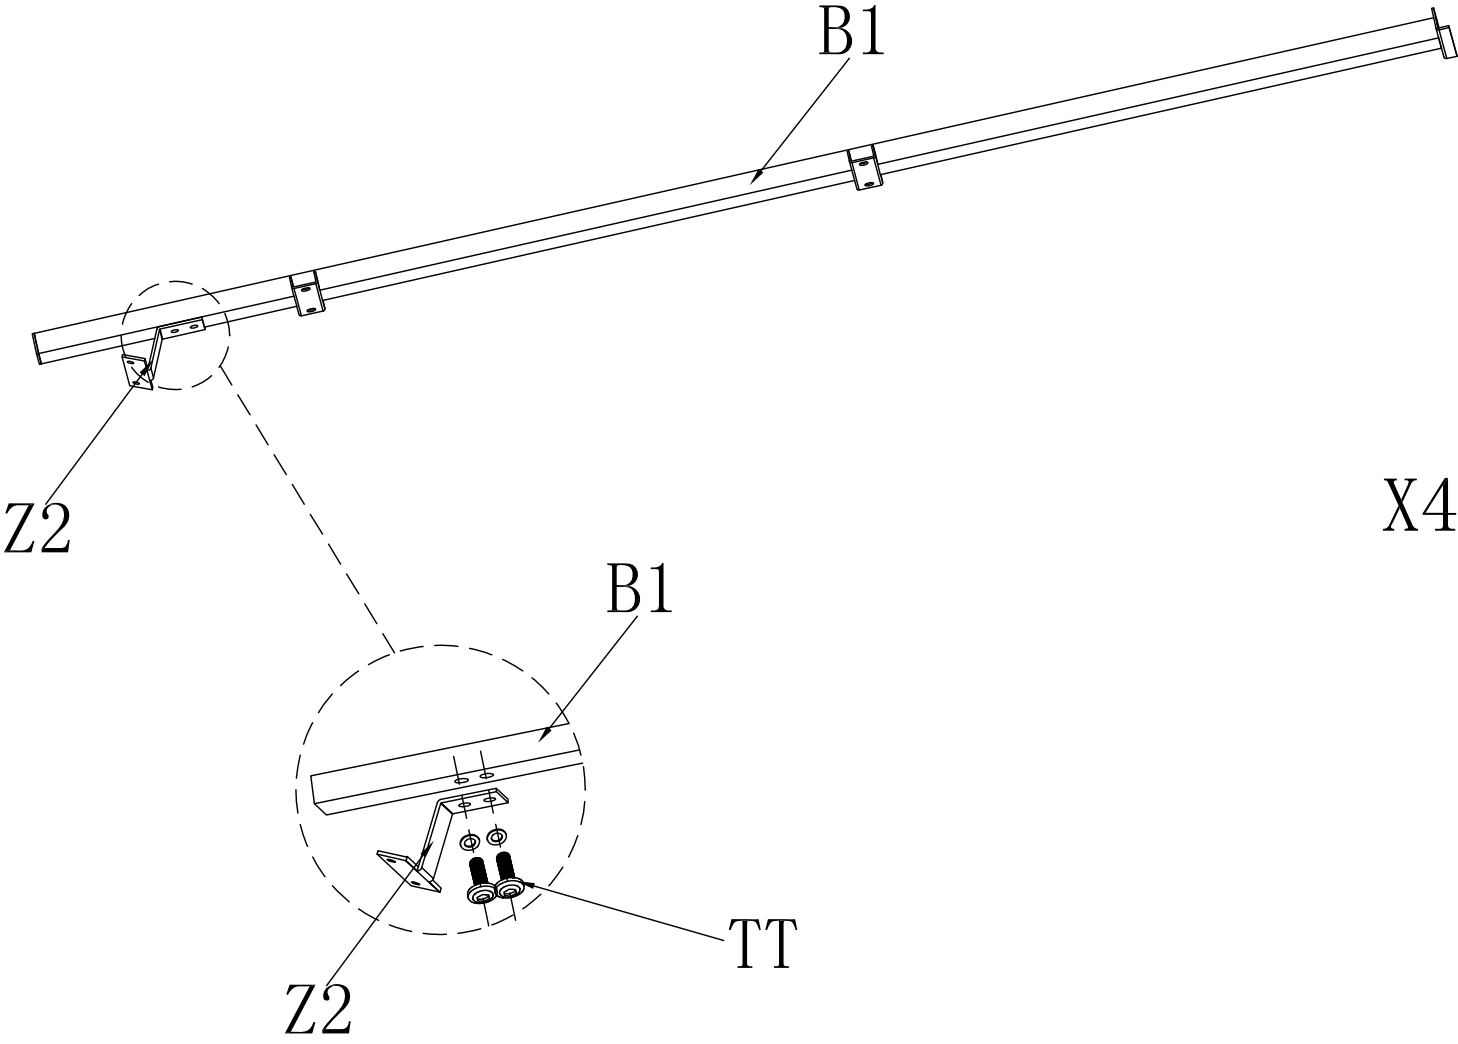

(B1) 4X





(Z2) 4X




M6X15

(TT) 8X

STEP. 10

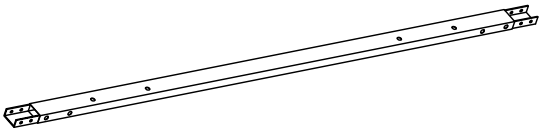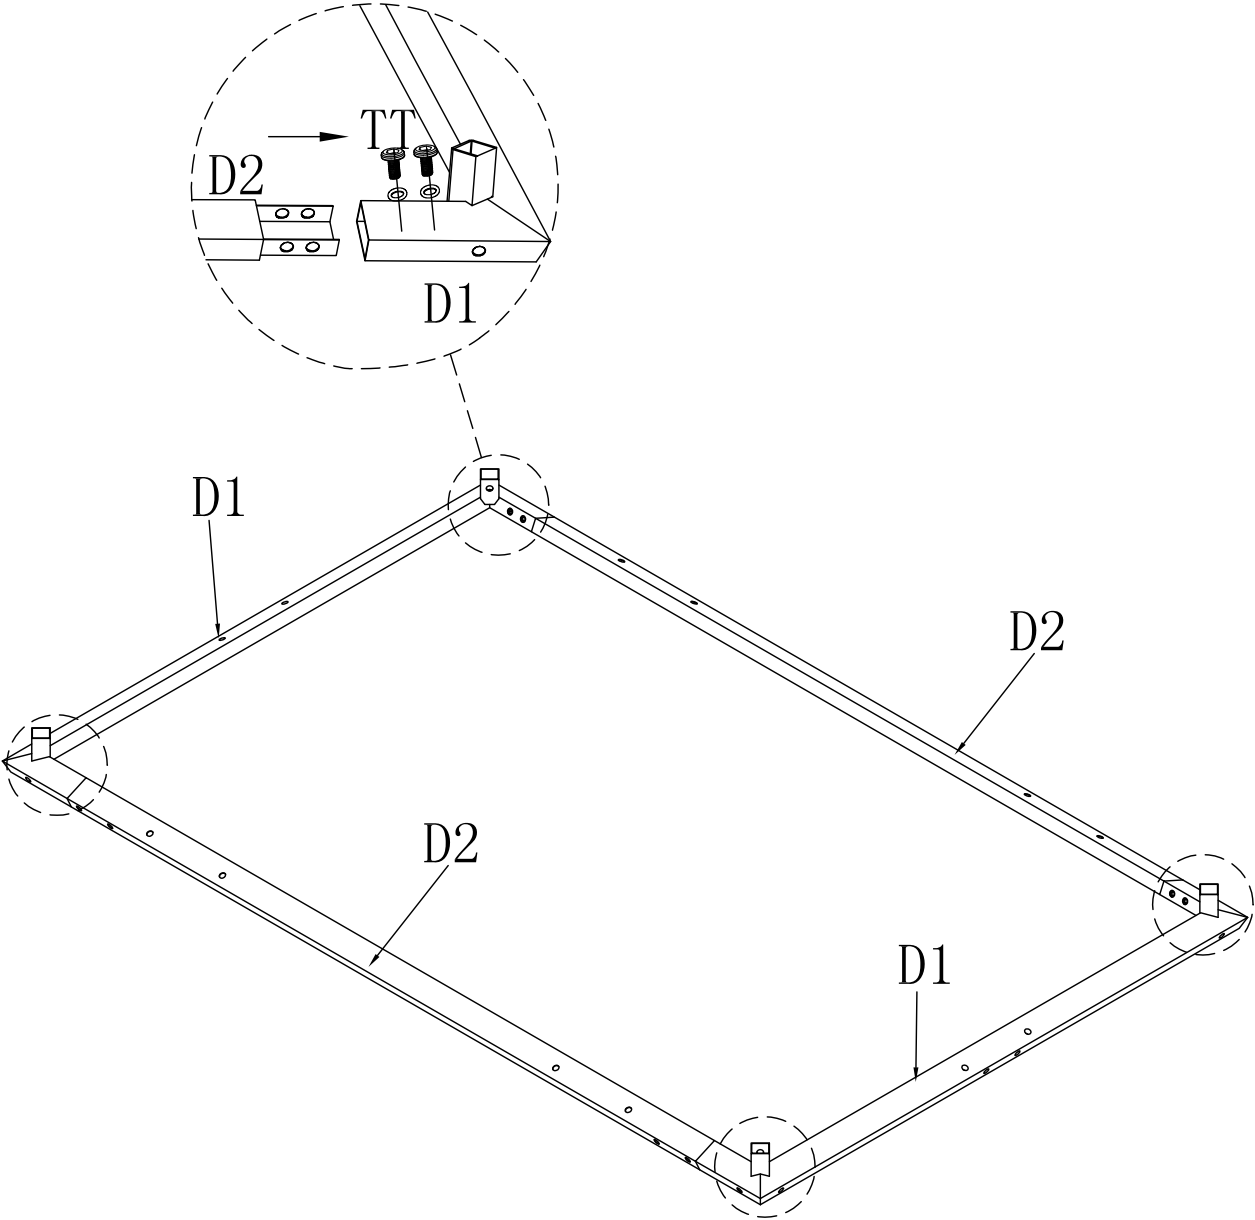

⌀2 2X

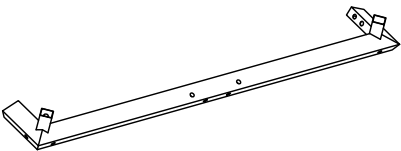


⌀1 2X





M6X15

Ⓣ 8X

STEP. 11

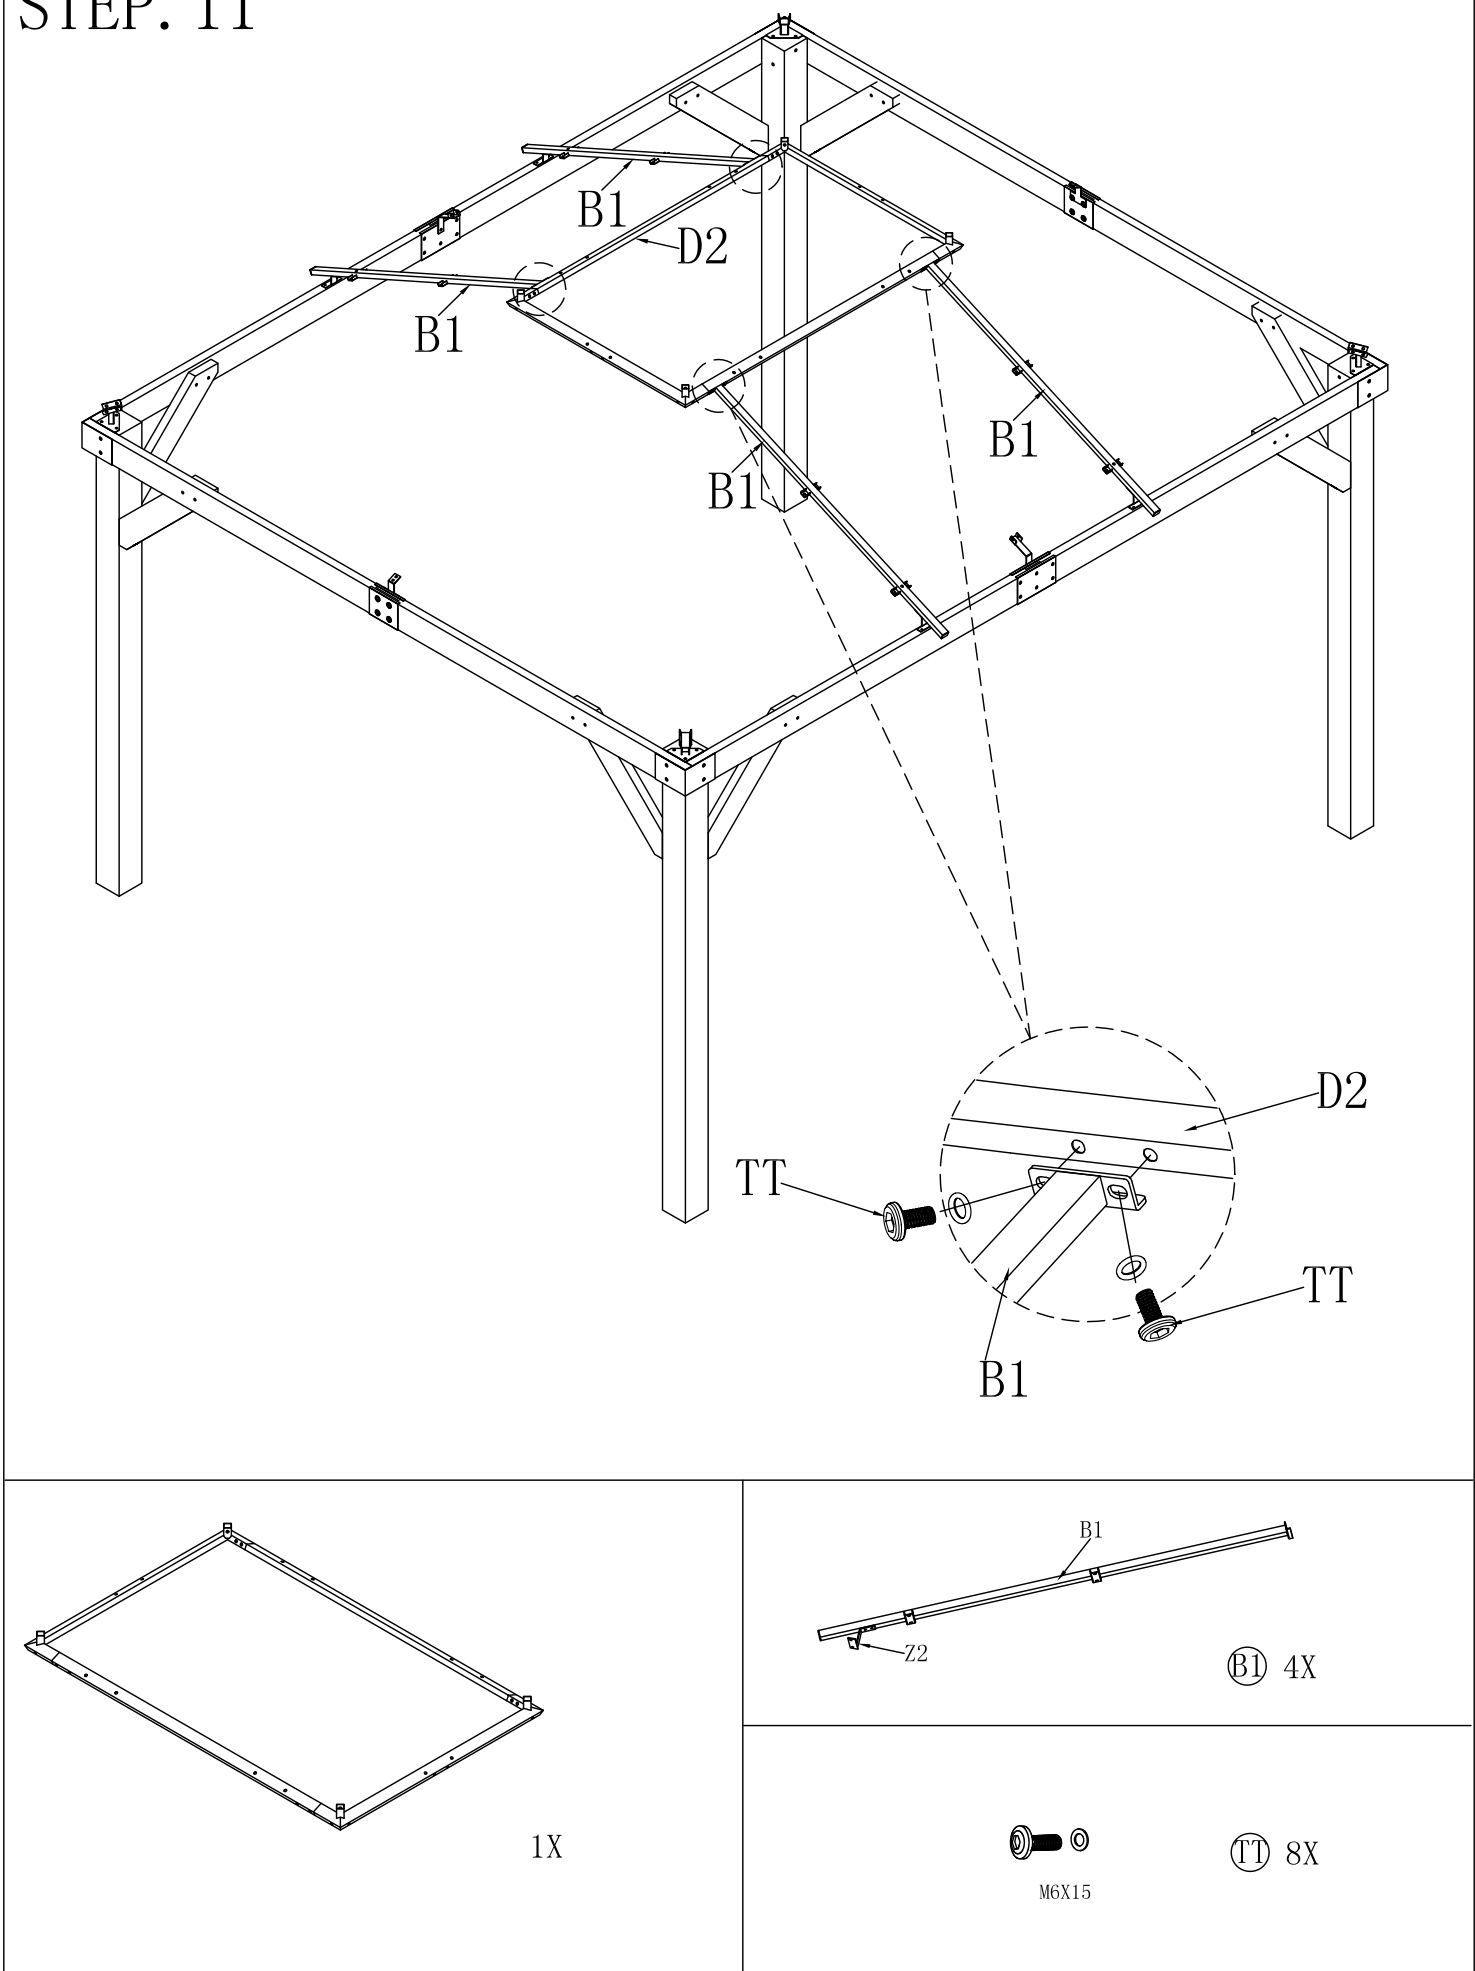

STEP. 12

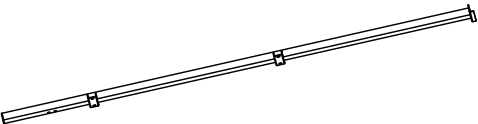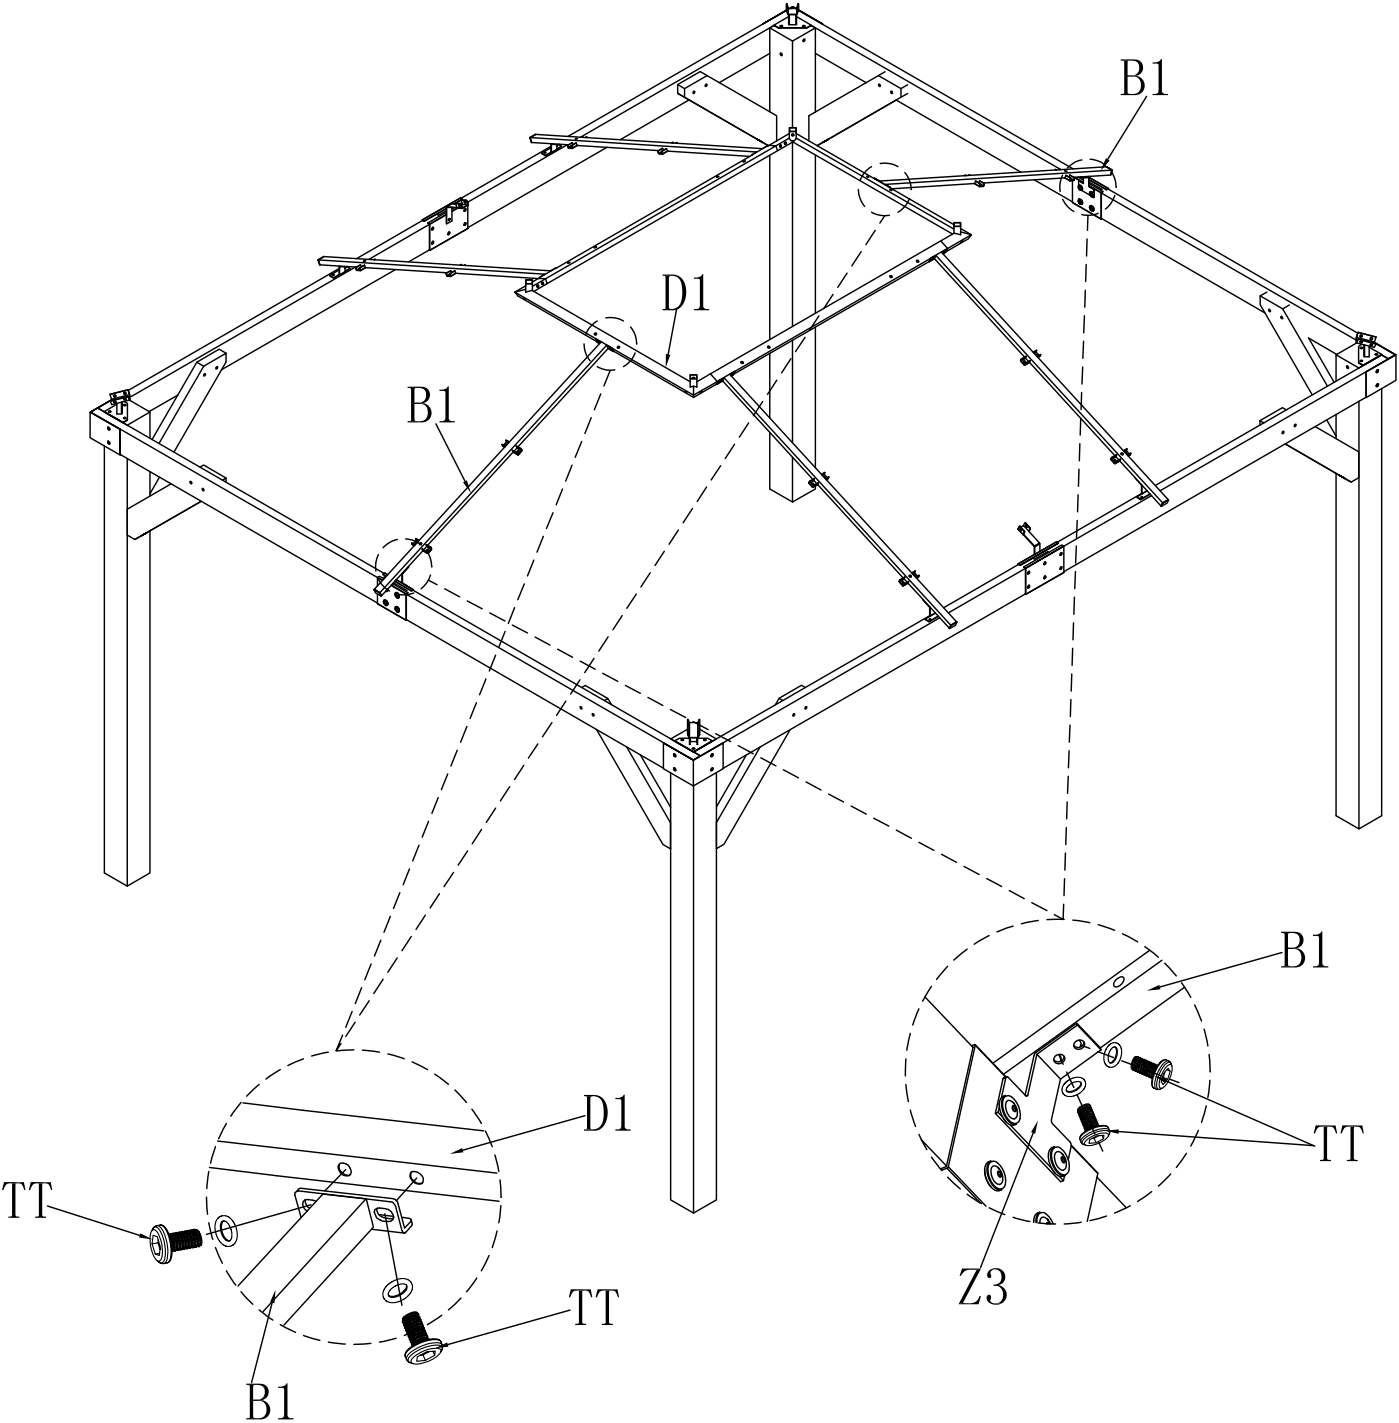


(B1) 2X



M6X15

(TT) 8X


STEP. 13

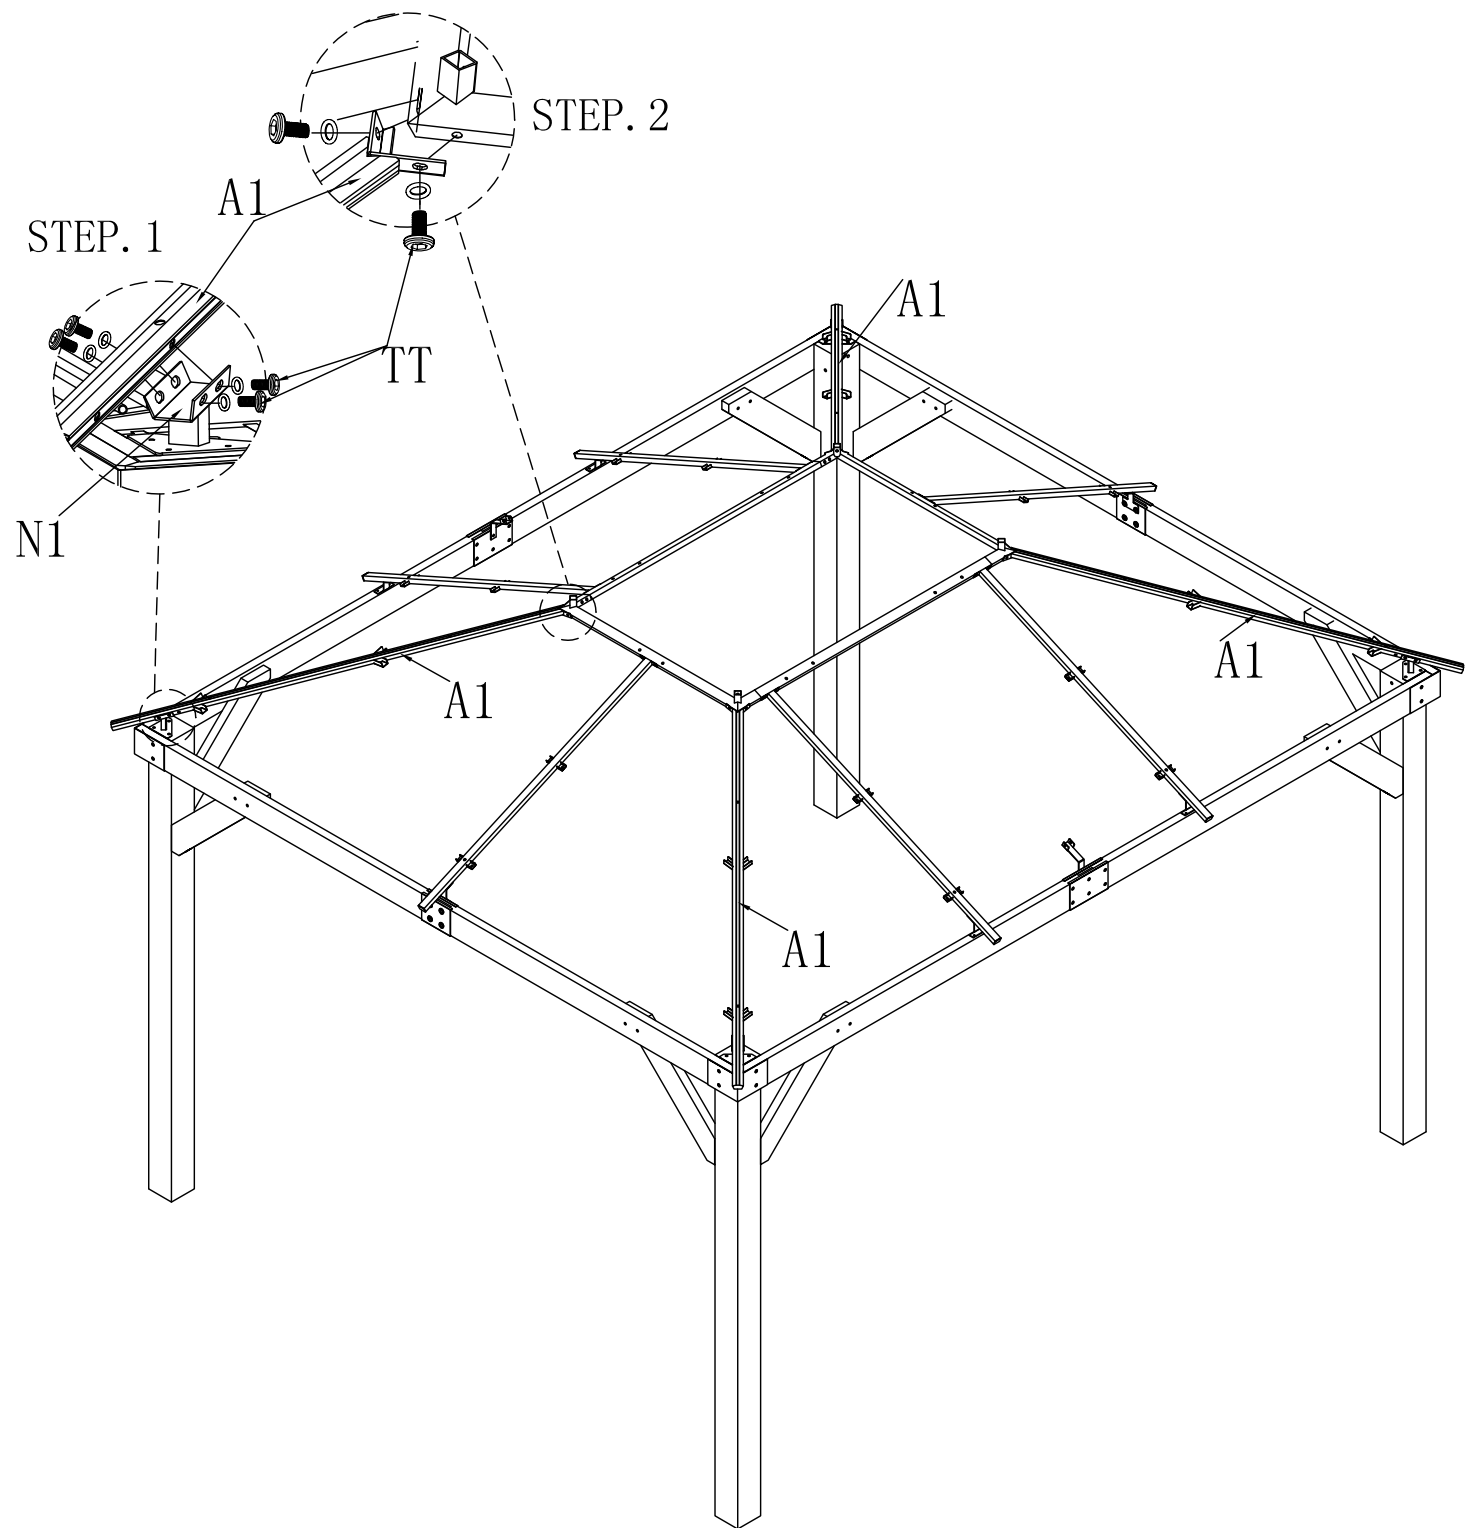

(A1) 4X





M6X15




TT 24X

STEP. 14

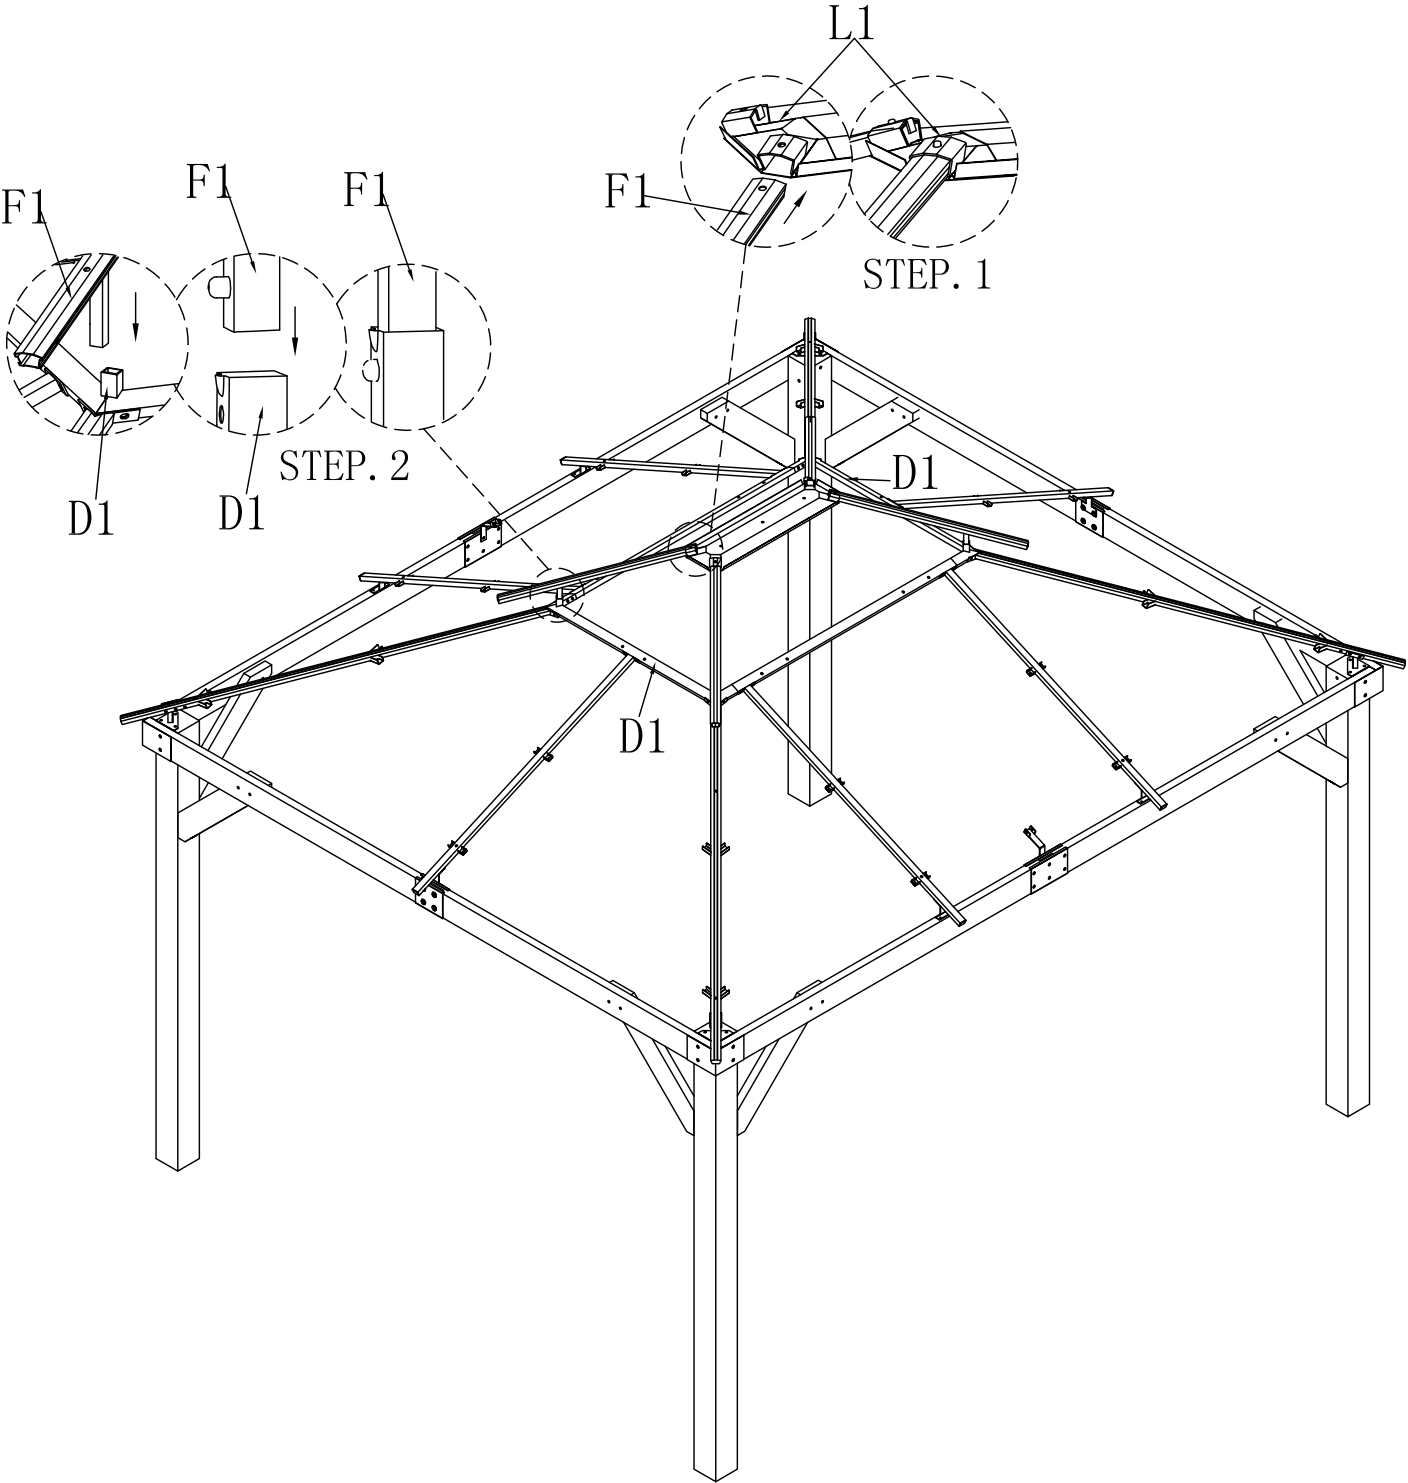


(F1) 4X




(L1) 1X

STEP. 15

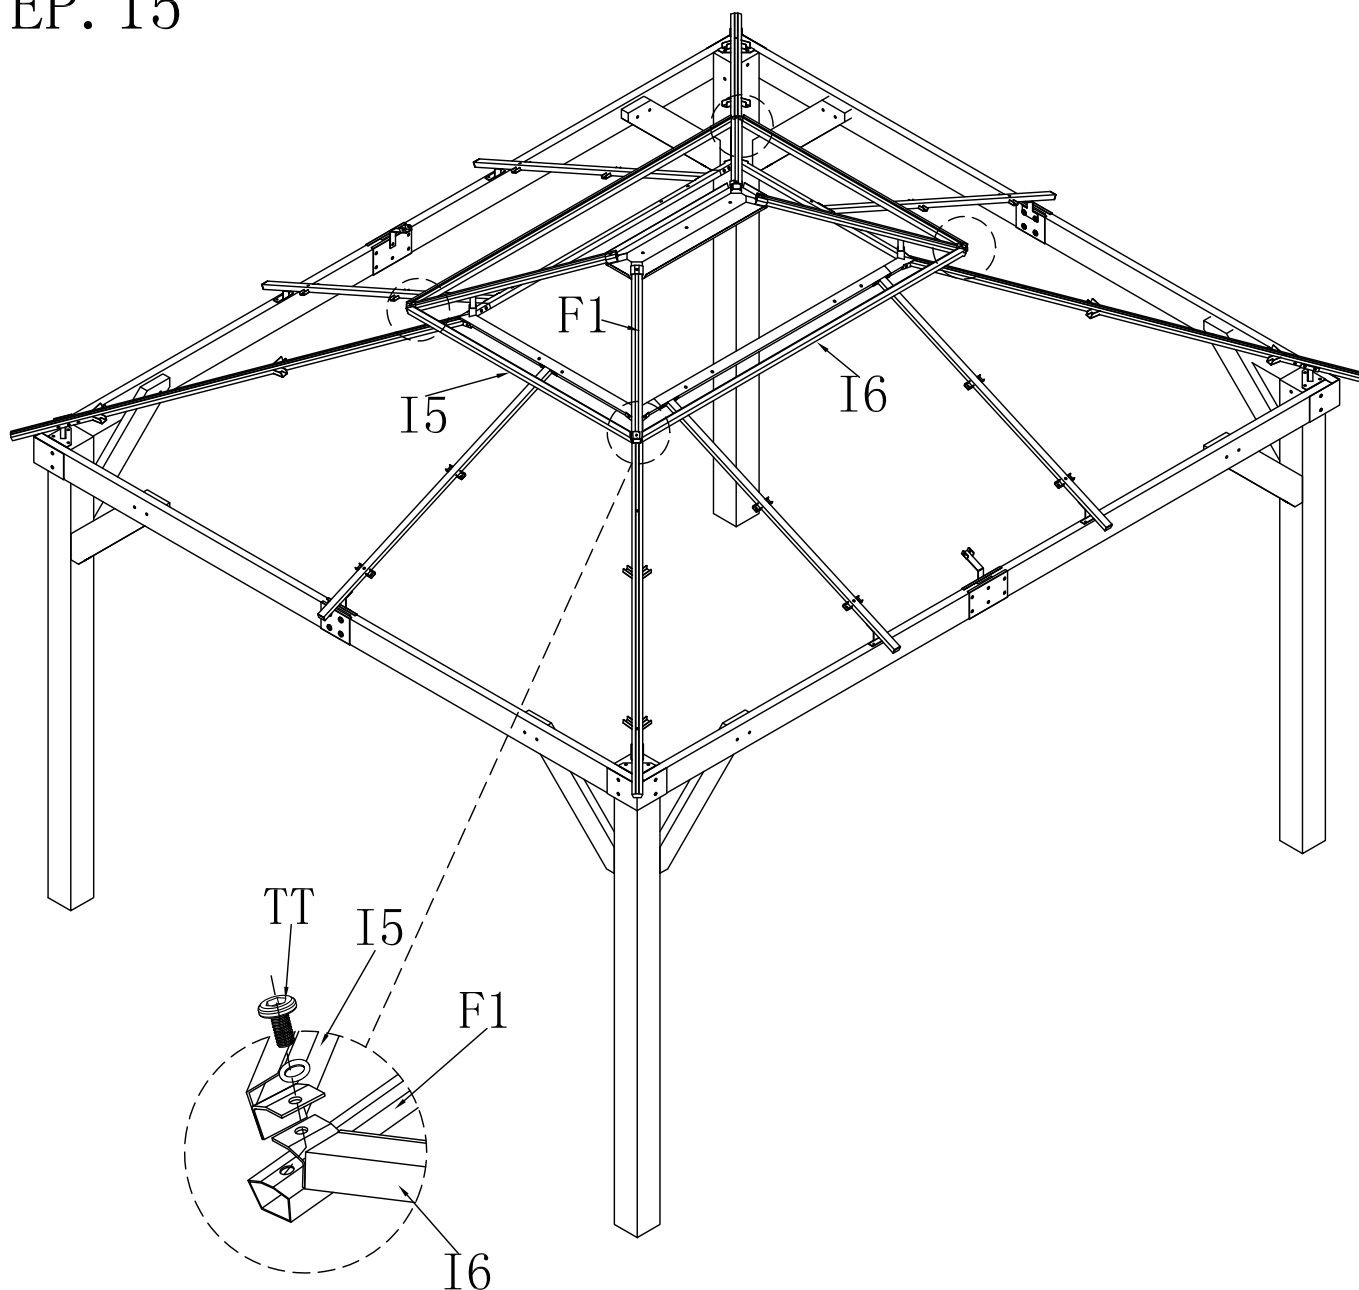

⑮ 2X





⑮ 2X




M6X15

Ⓣ 4X


STEP. 16

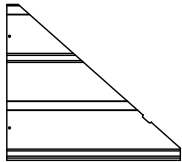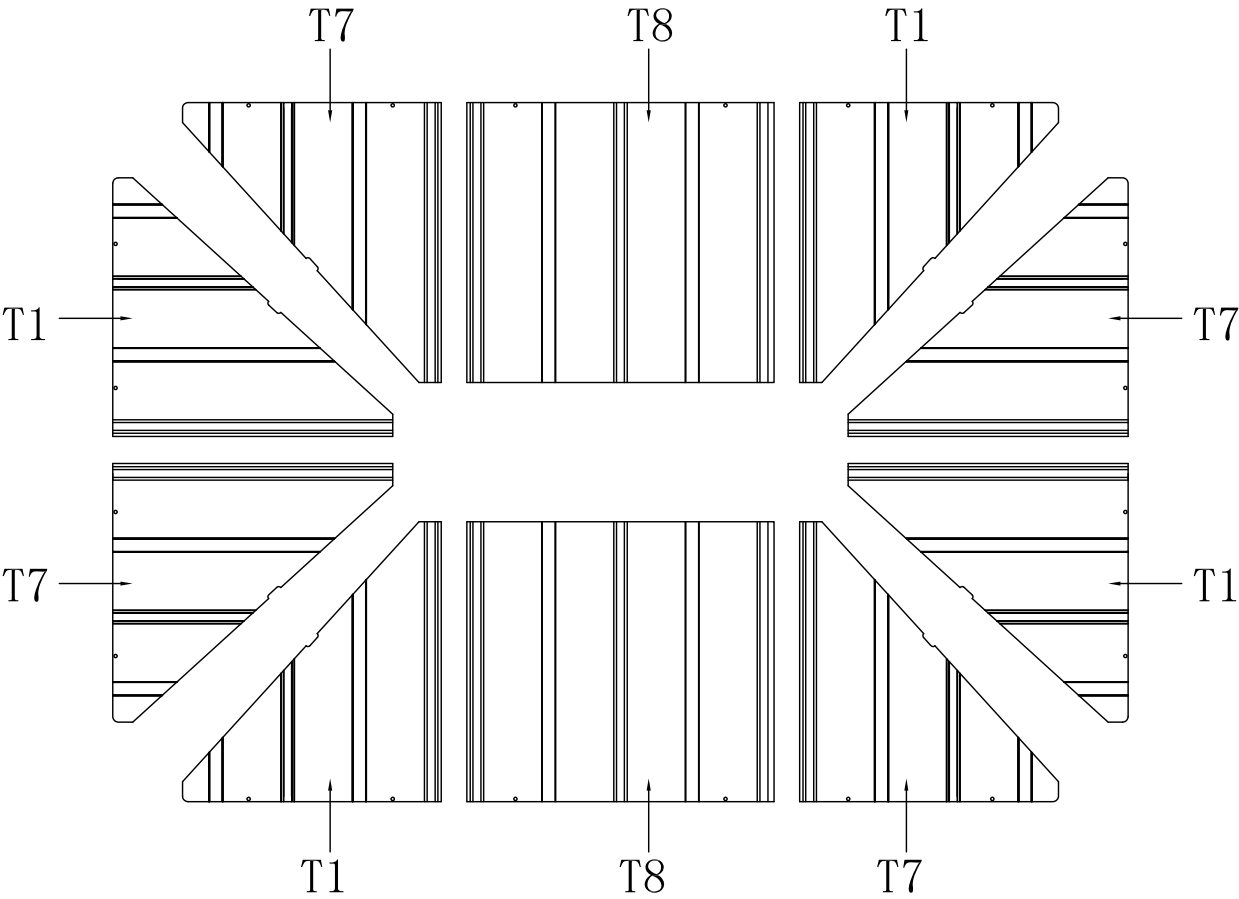

Ⓣ1 4X



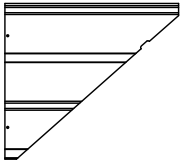


Ⓣ7 4X

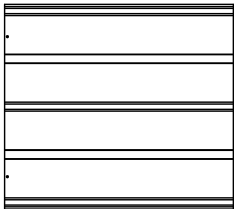


Ⓣ8 2X


STEP. 17

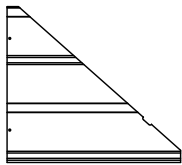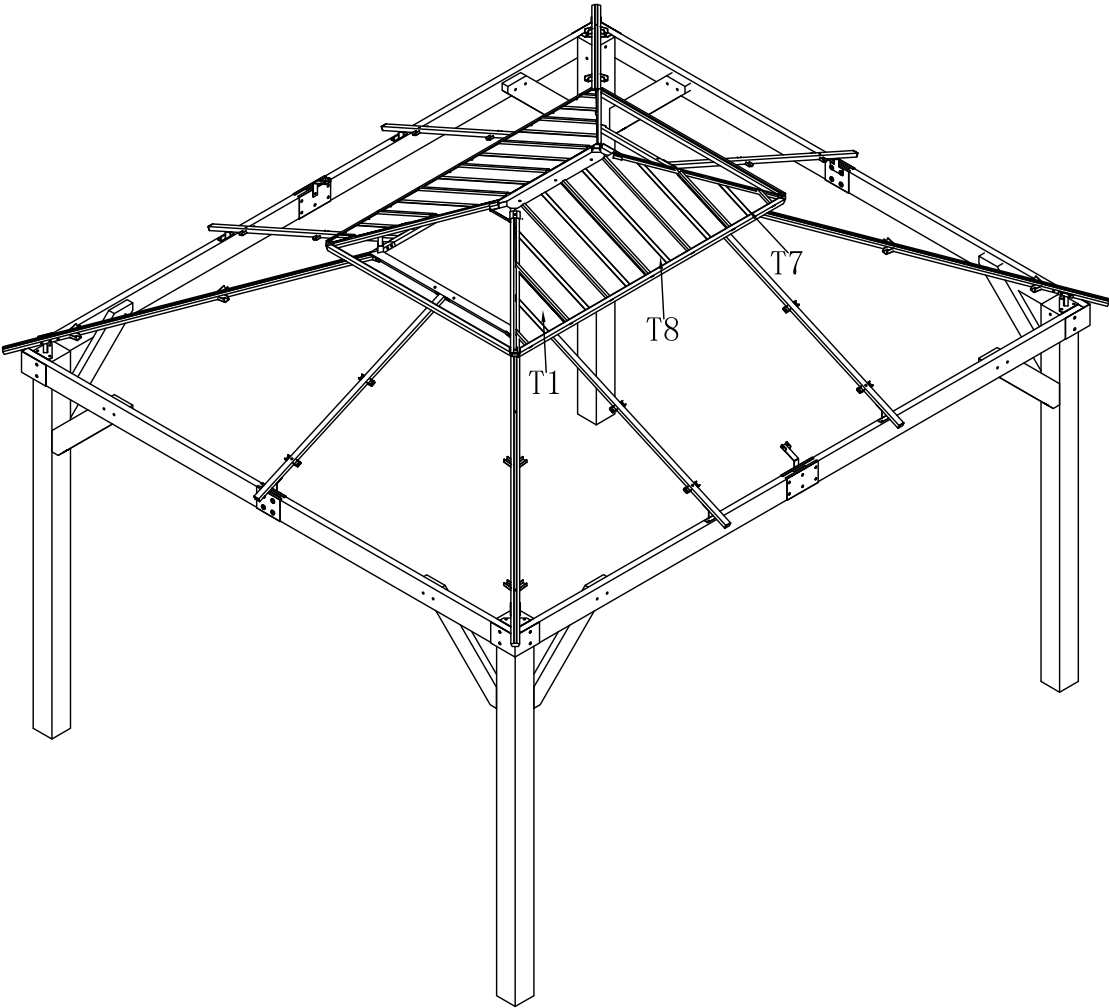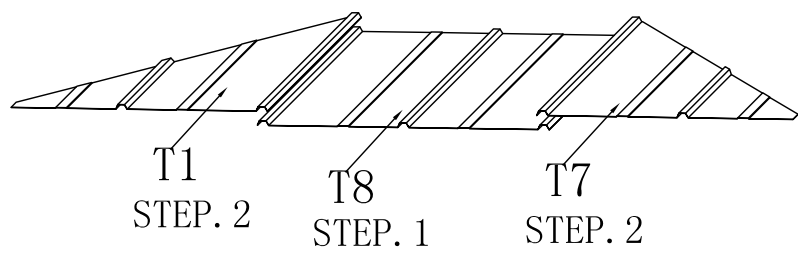

(T1) 2X



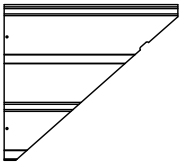


(T7) 2X

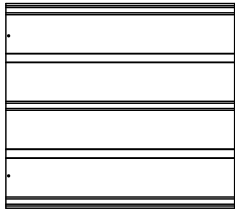


(T8) 2X

STEP. 18

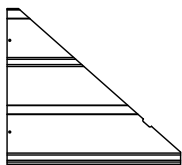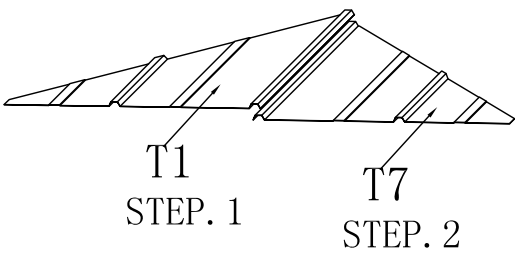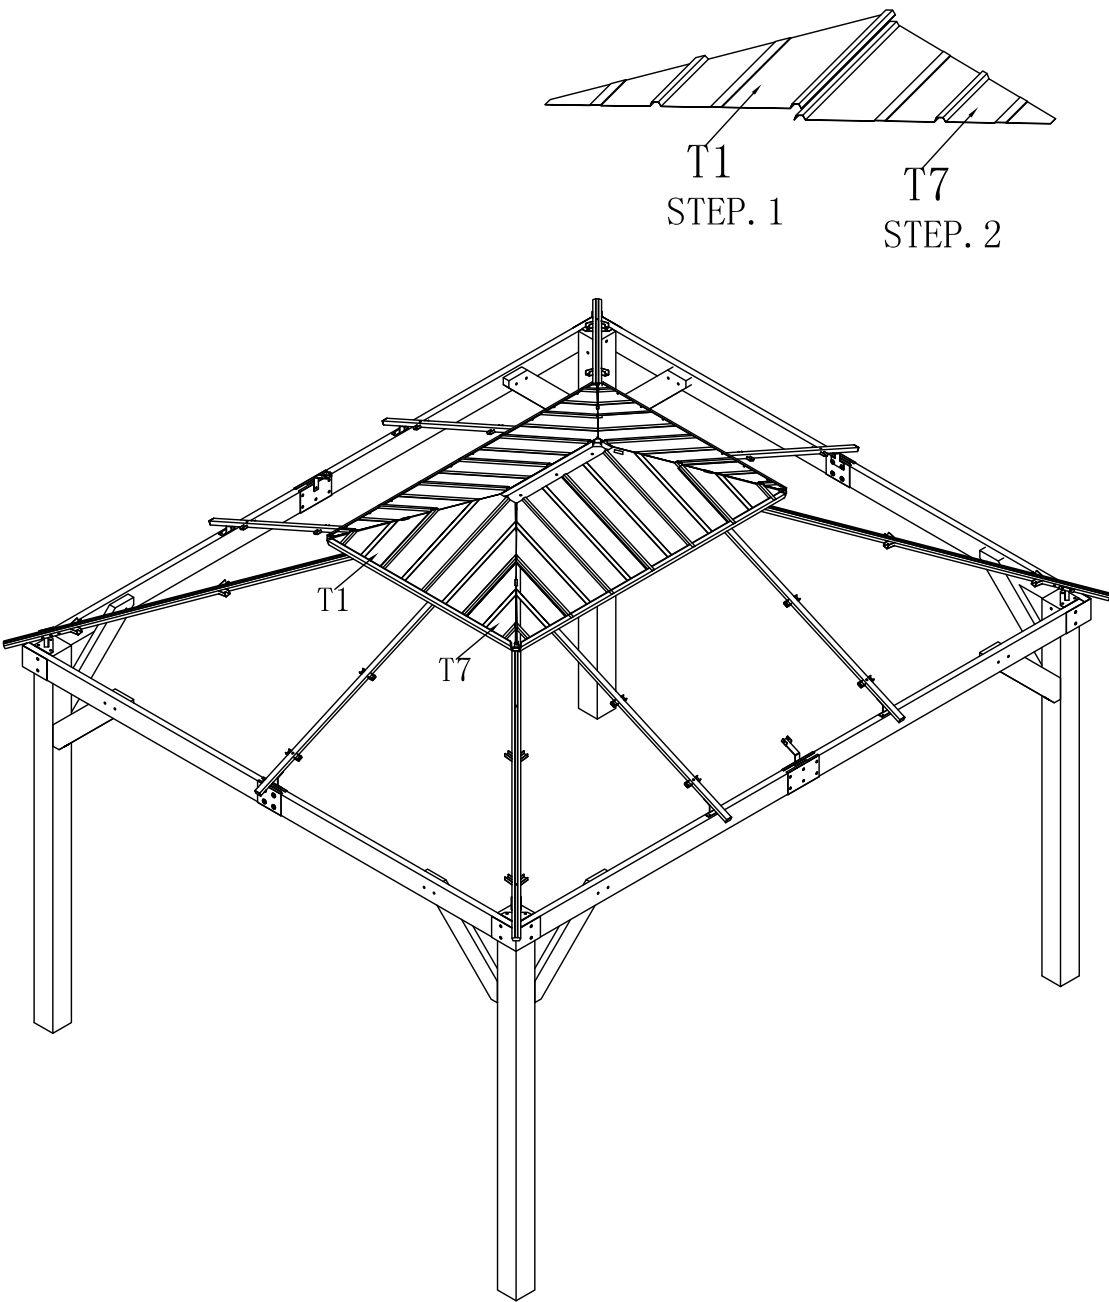


(T1) 2X

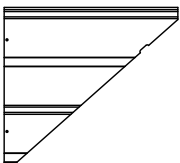


(T7) 2X

STEP. 19

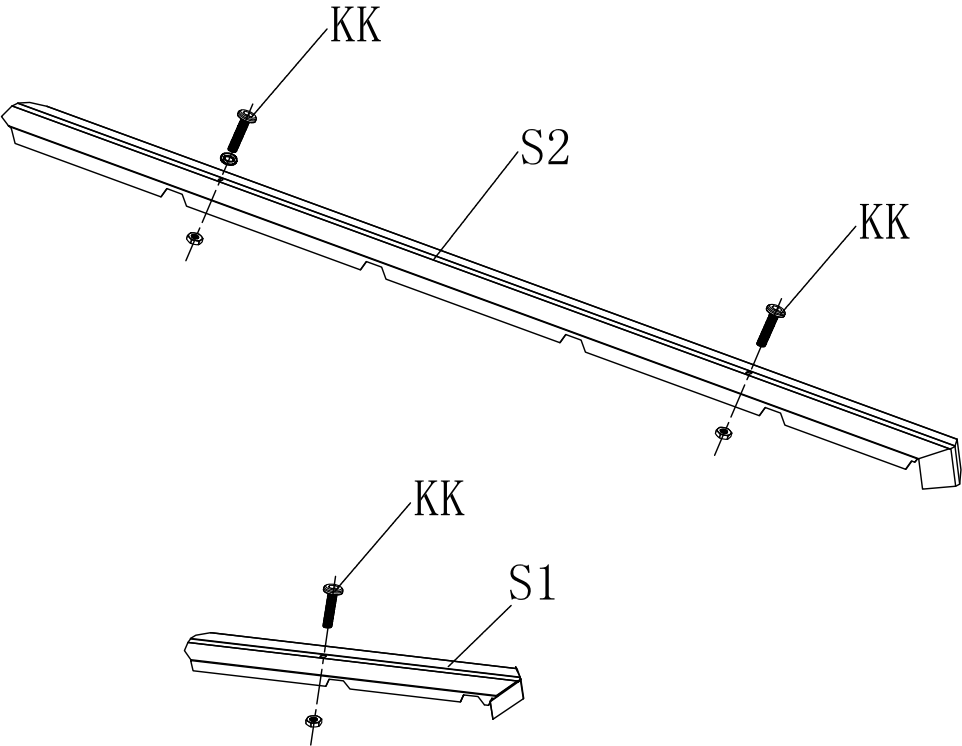


Fix S1 and S2 with screws KK.



Ⓢ1 4X




ⓀⓀ 12X M6*55



Ⓢ2 4X

STEP. 20

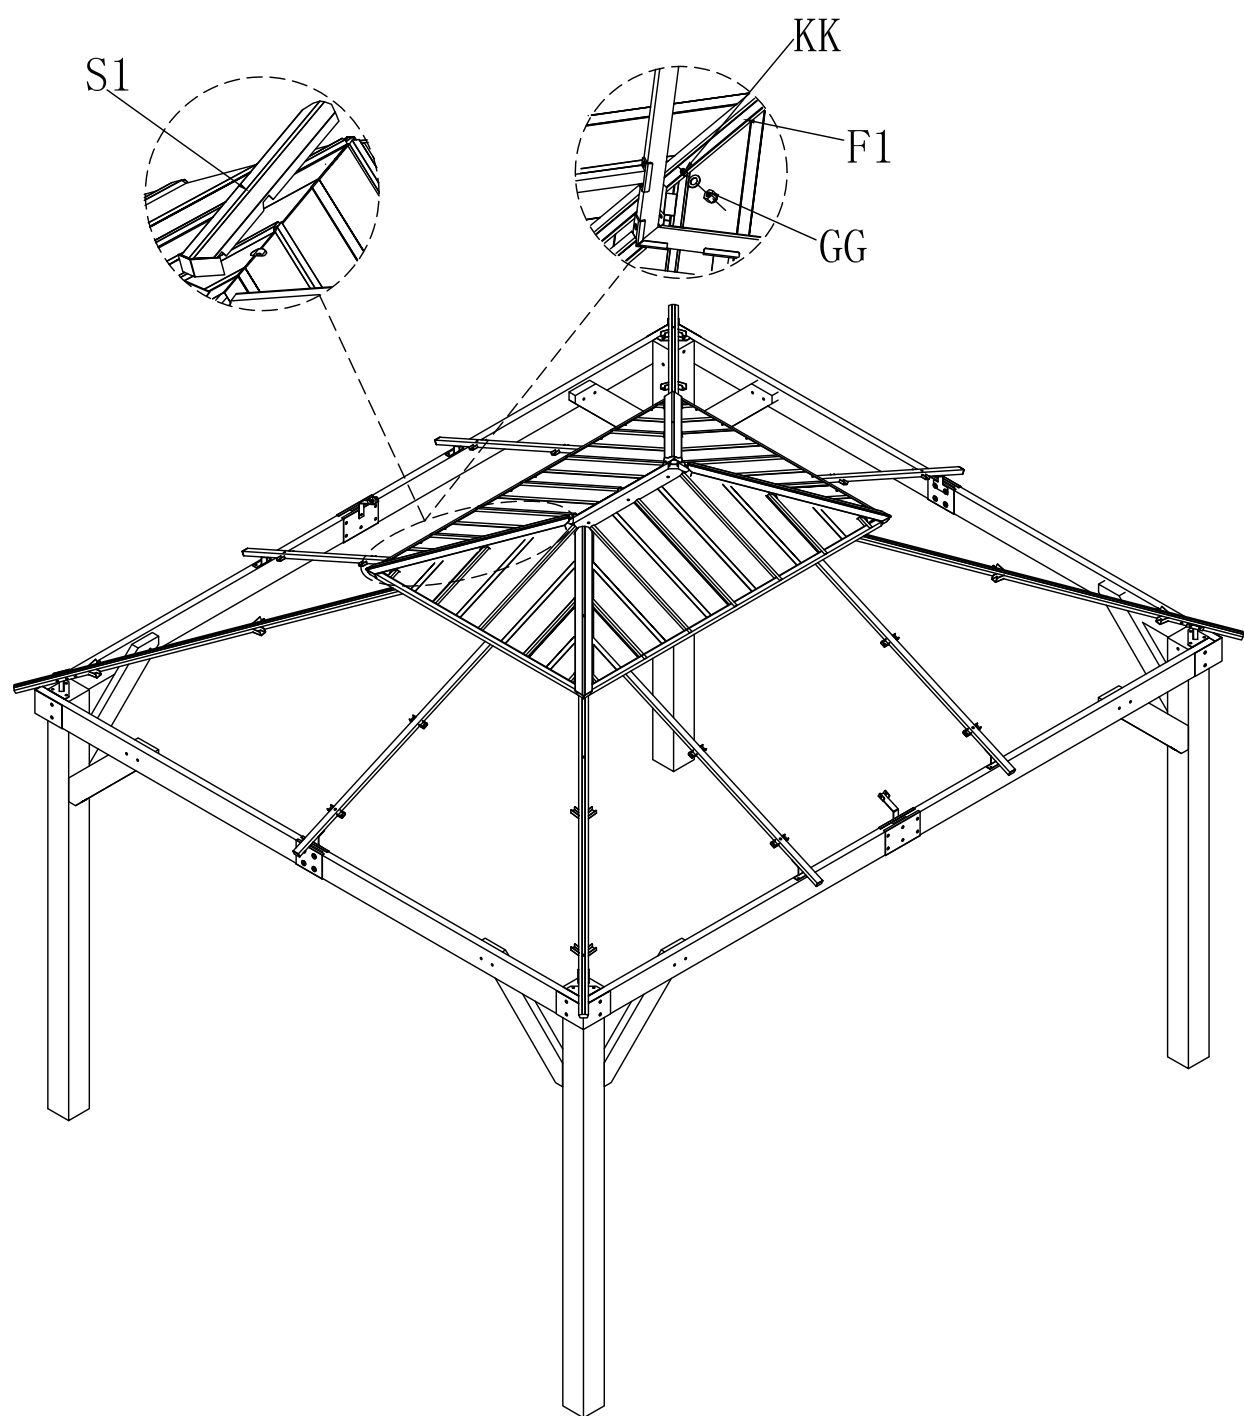


Ⓢ1 4X




ⓖⓖ 4X


STEP. 21

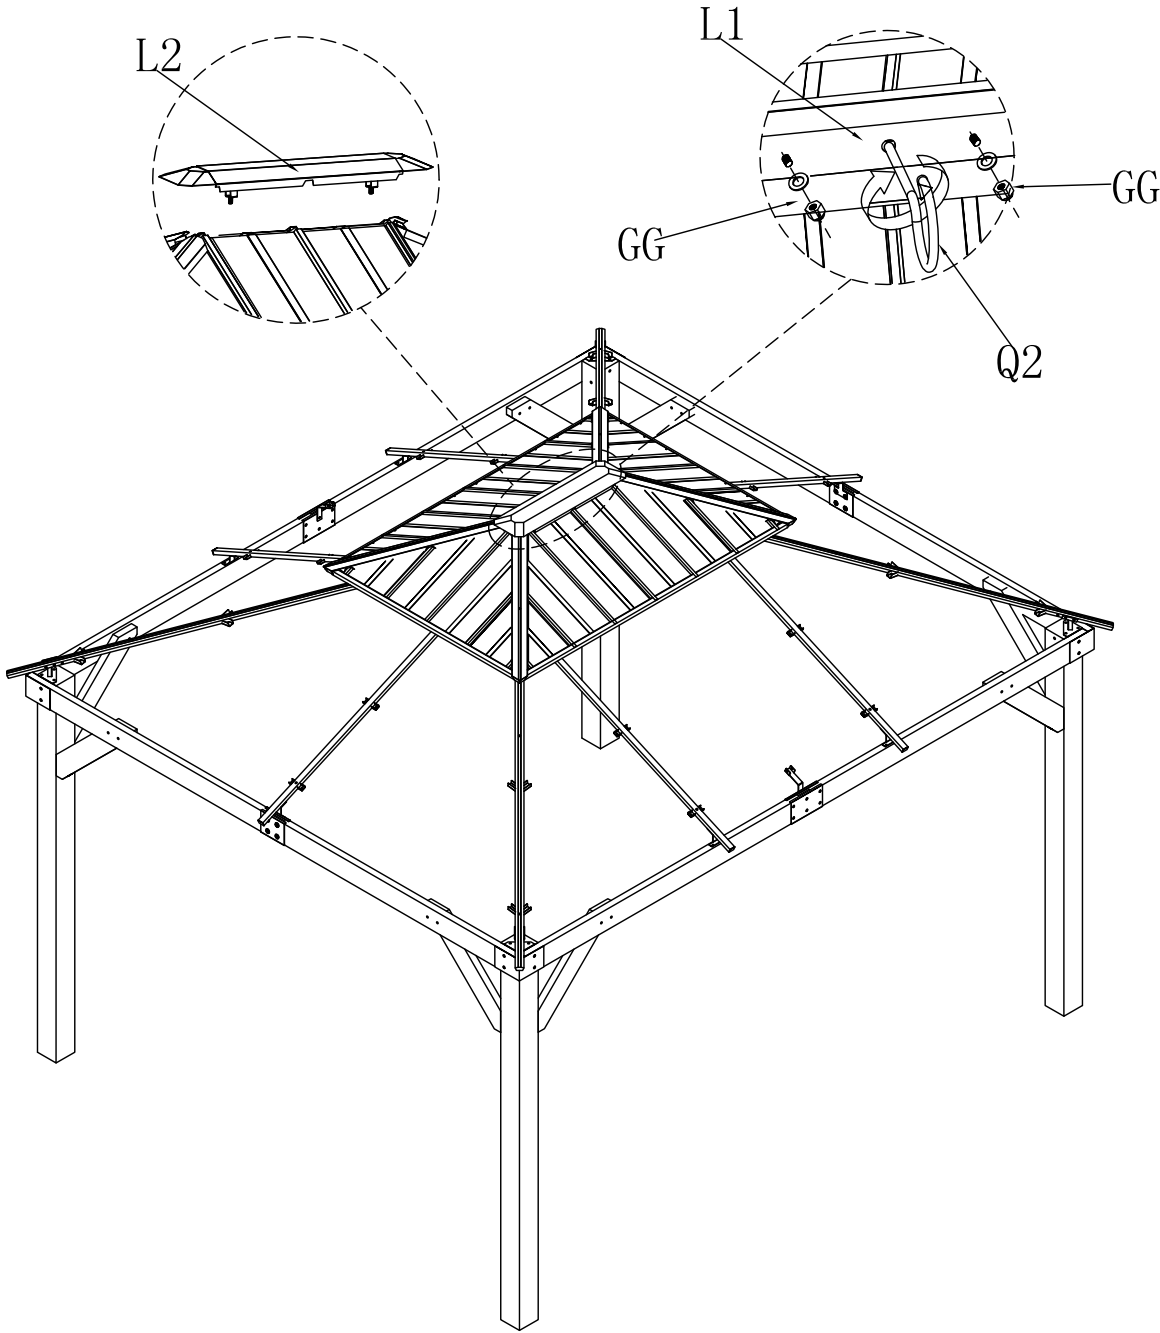

Ⓛ2 1X






ⓖⓖ 2X




Ⓚ2 1X

STEP. 22

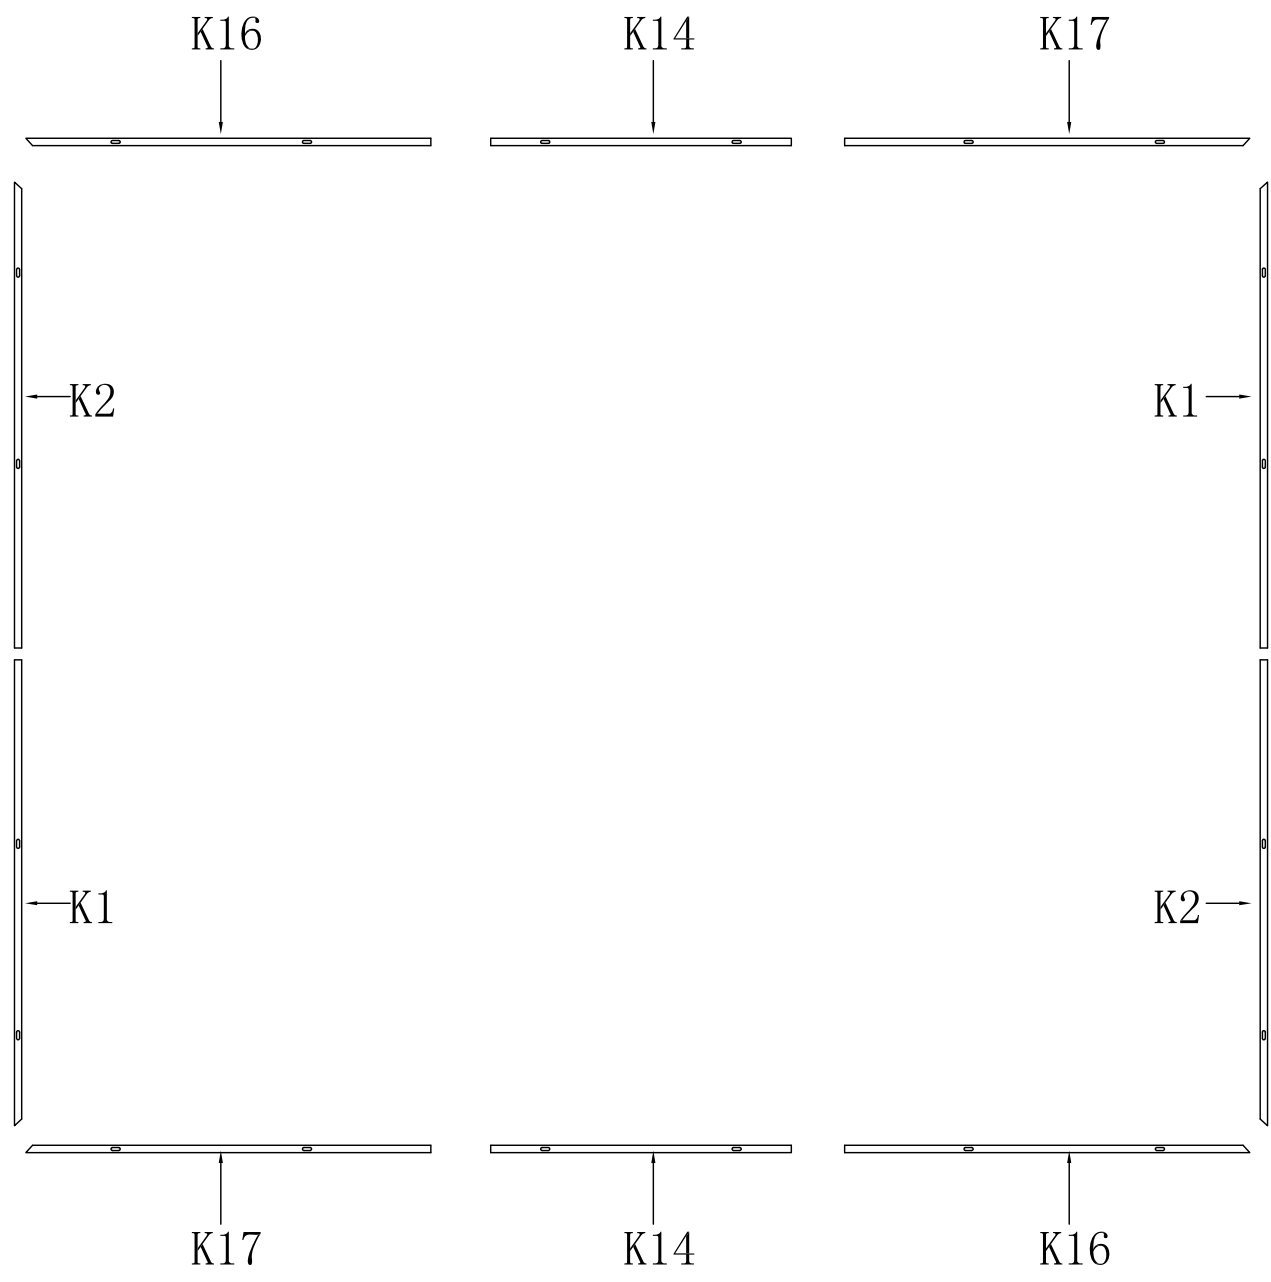


 (K16) 2X	 (K17) 2X
 (K14) 2X	 (K1) 2X
 (K2) 2X	

STEP. 23

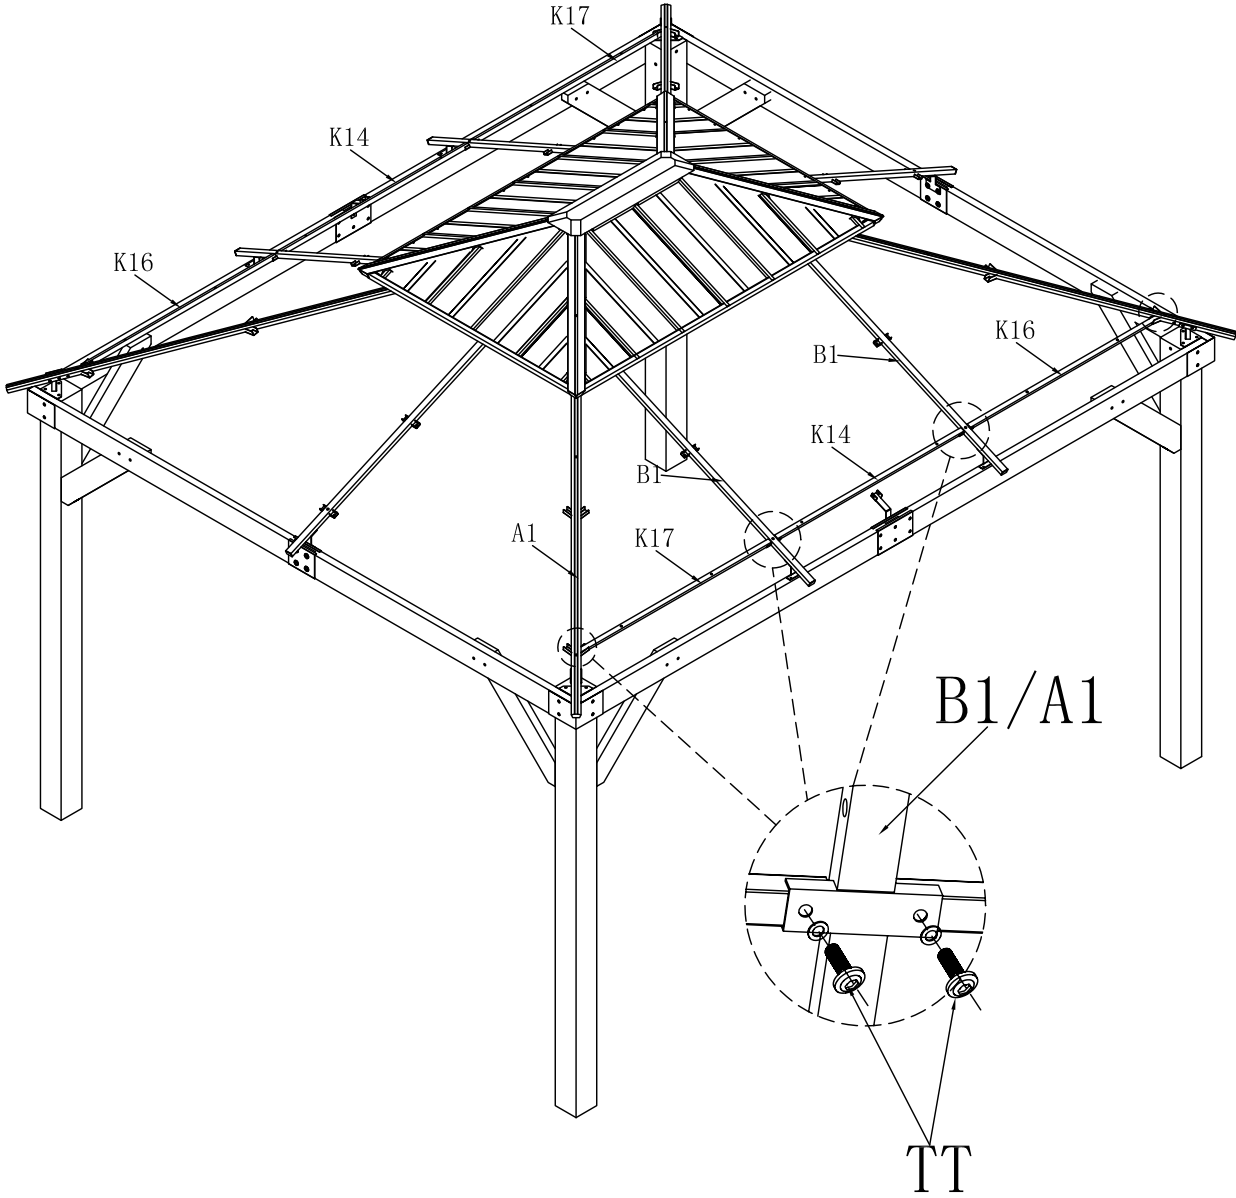

DO NOT FULLY TIGHTEN.



(K16) 2X



(K17) 2X





(K14) 2X



(TT) 12X


STEP. 24

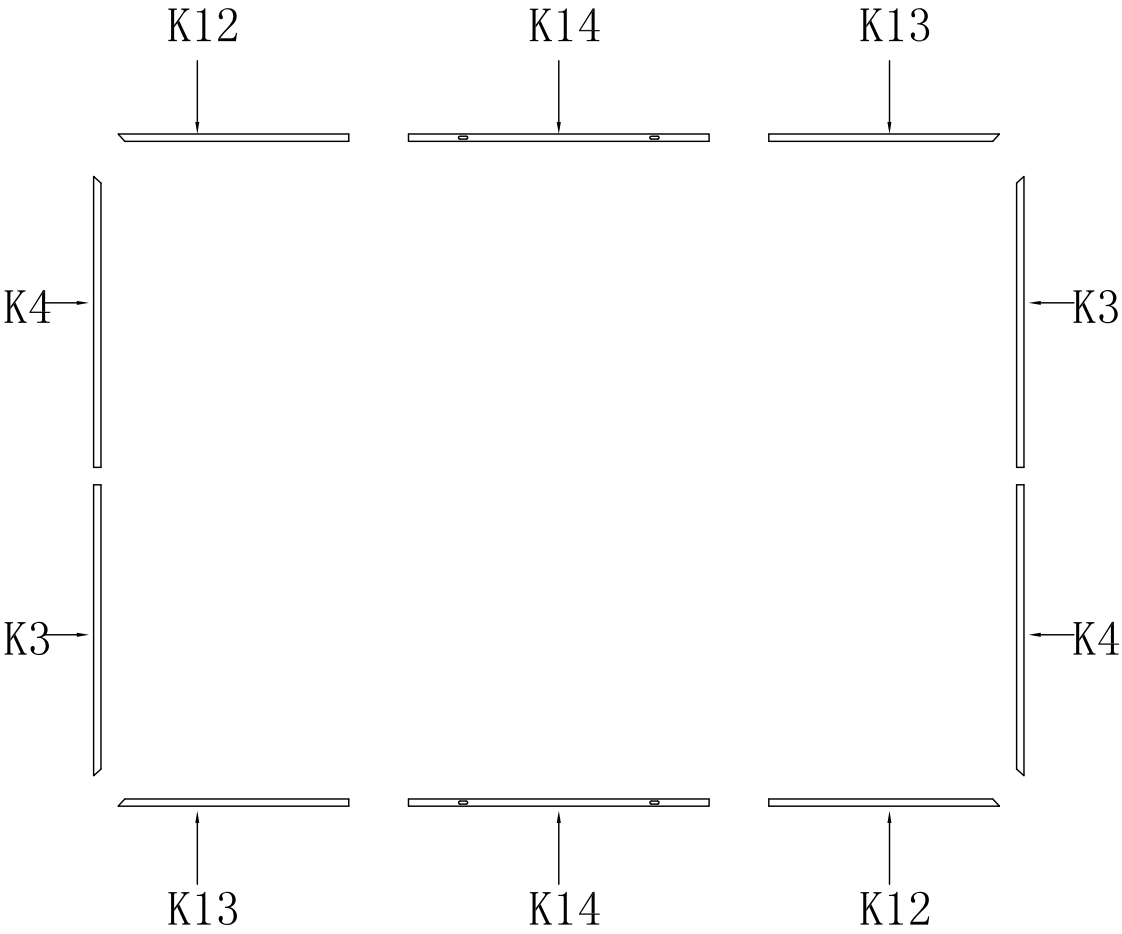


(K12) 2X



(K14) 2X


(K4) 2X



(K13) 2X


(K3) 2X

STEP. 25

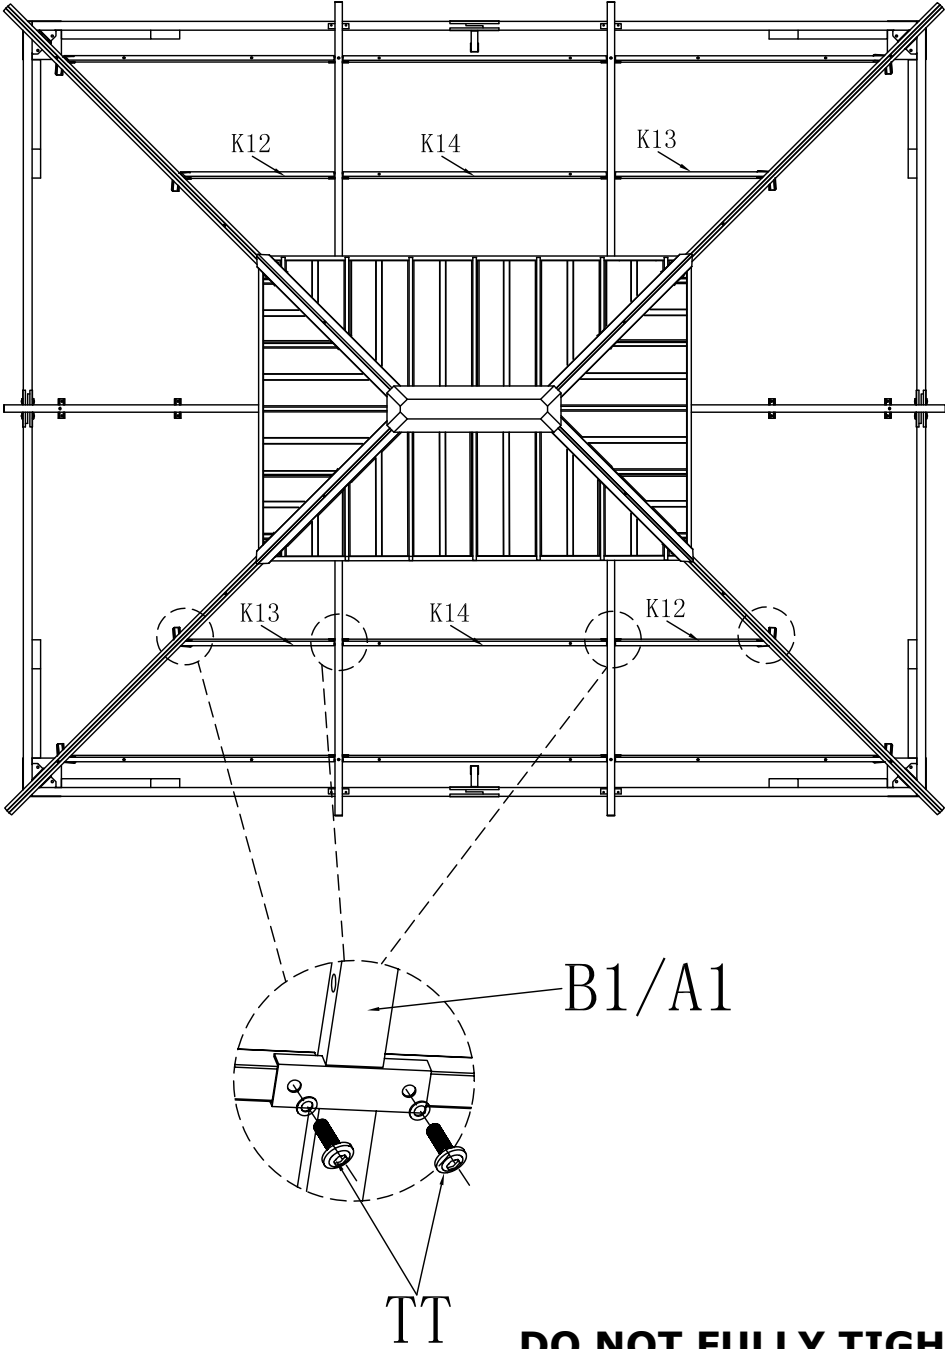

DO NOT FULLY TIGHTEN.



(K12) 2X



(K13) 2X




(K14) 2X




(TT) 12X

STEP. 26

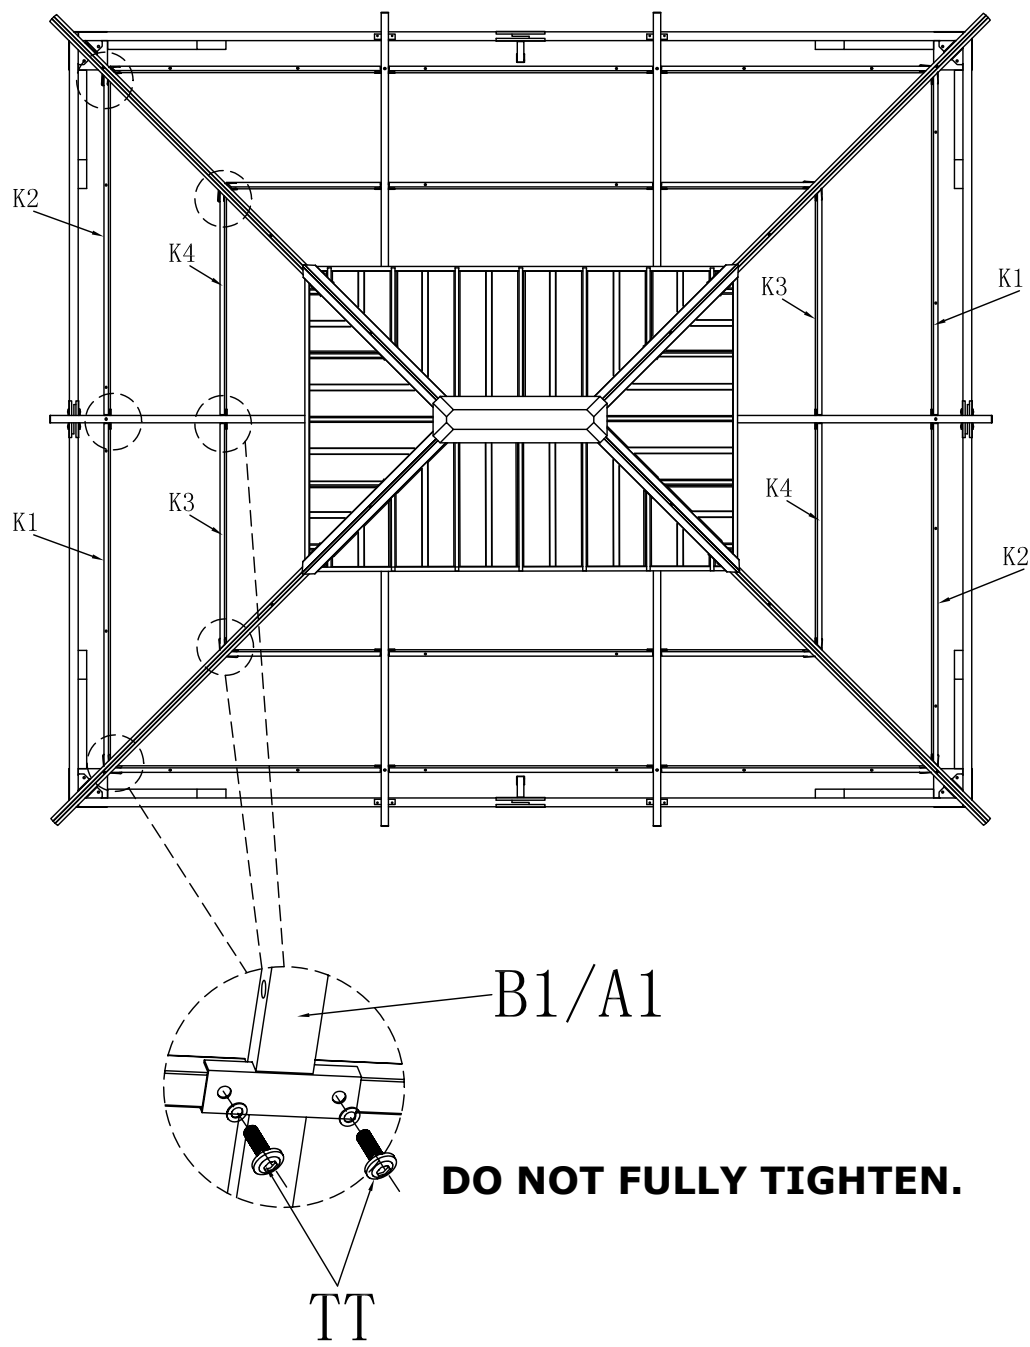


 (K1) 2X		 (K2) 2X	
 (K3) 2X	 (K4) 2X	 M6X15 (TT) 16X	

STEP. 27

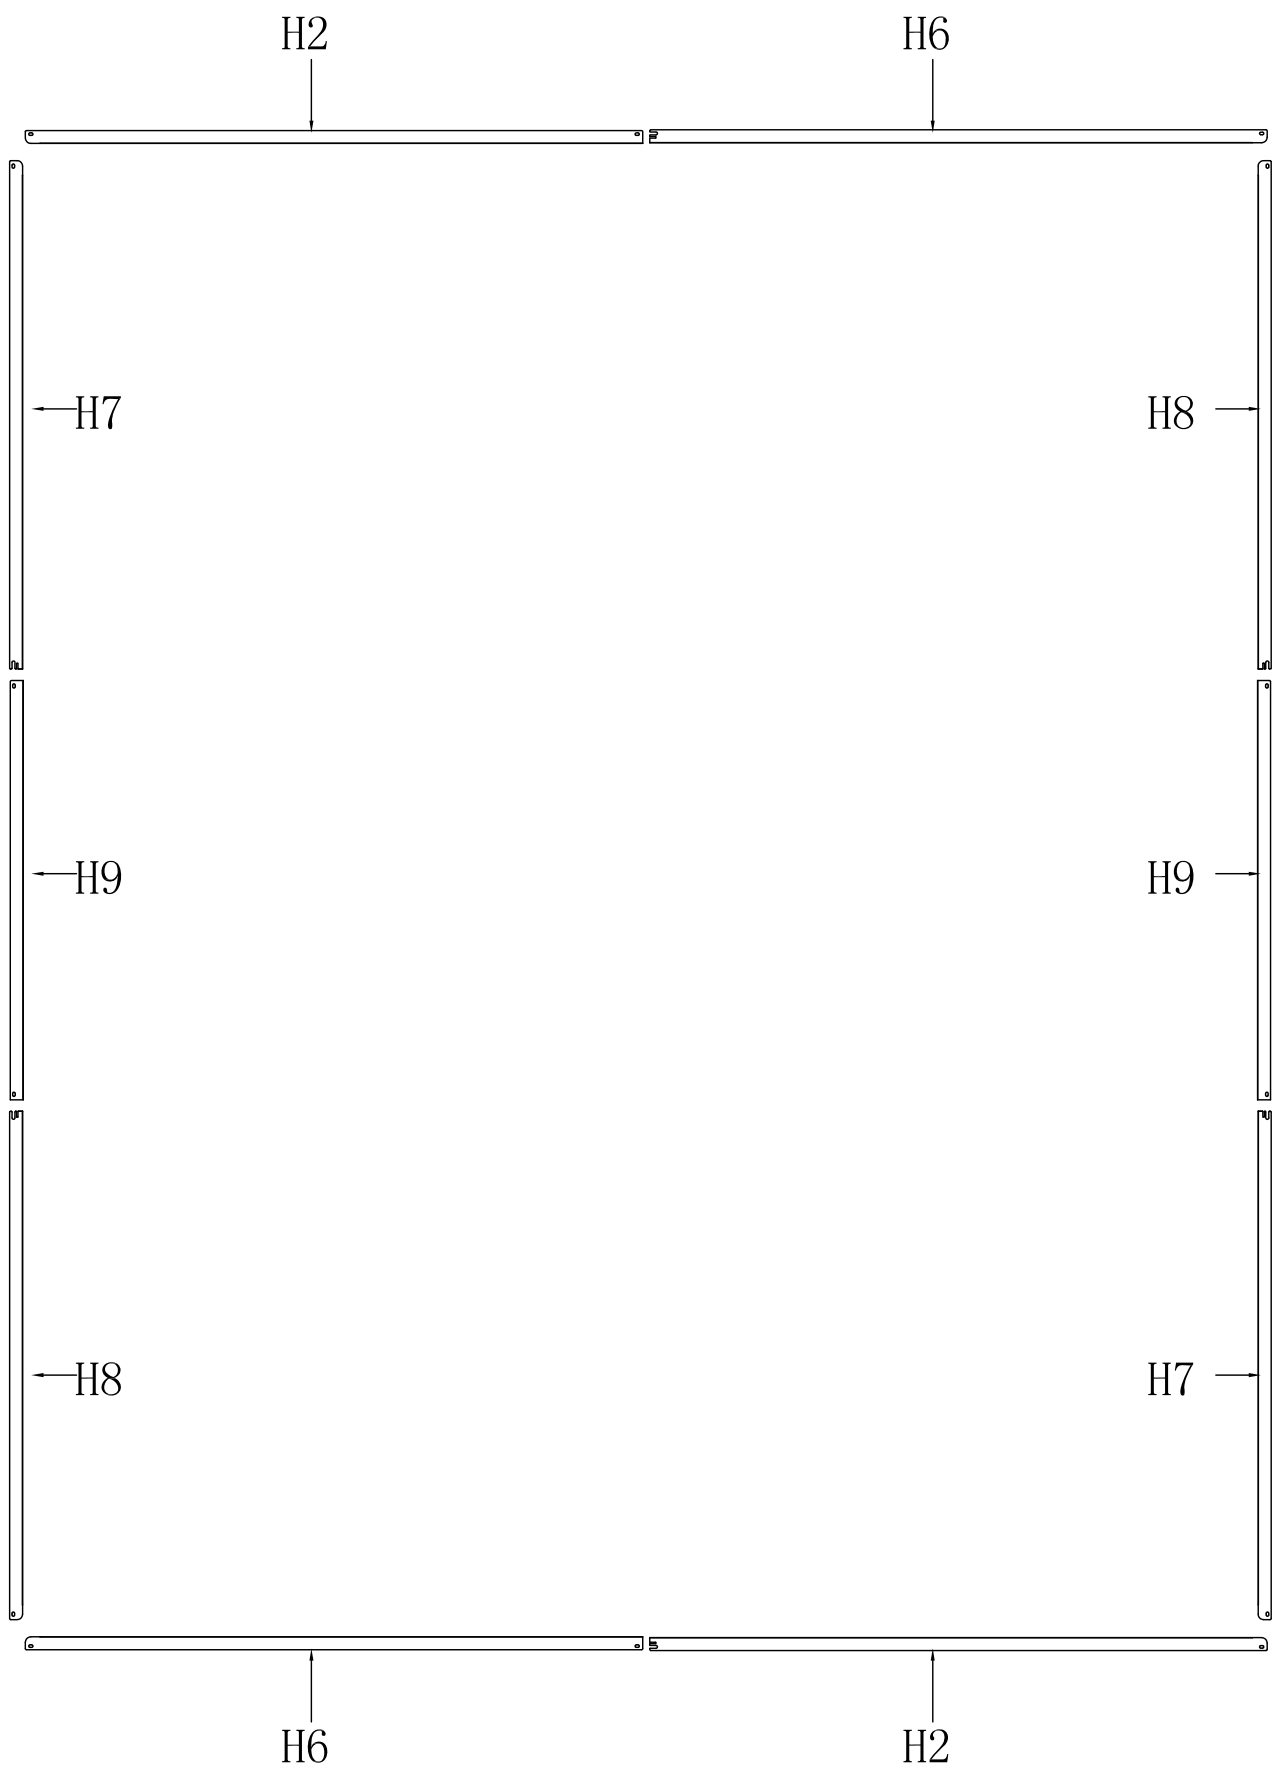

STEP. 28

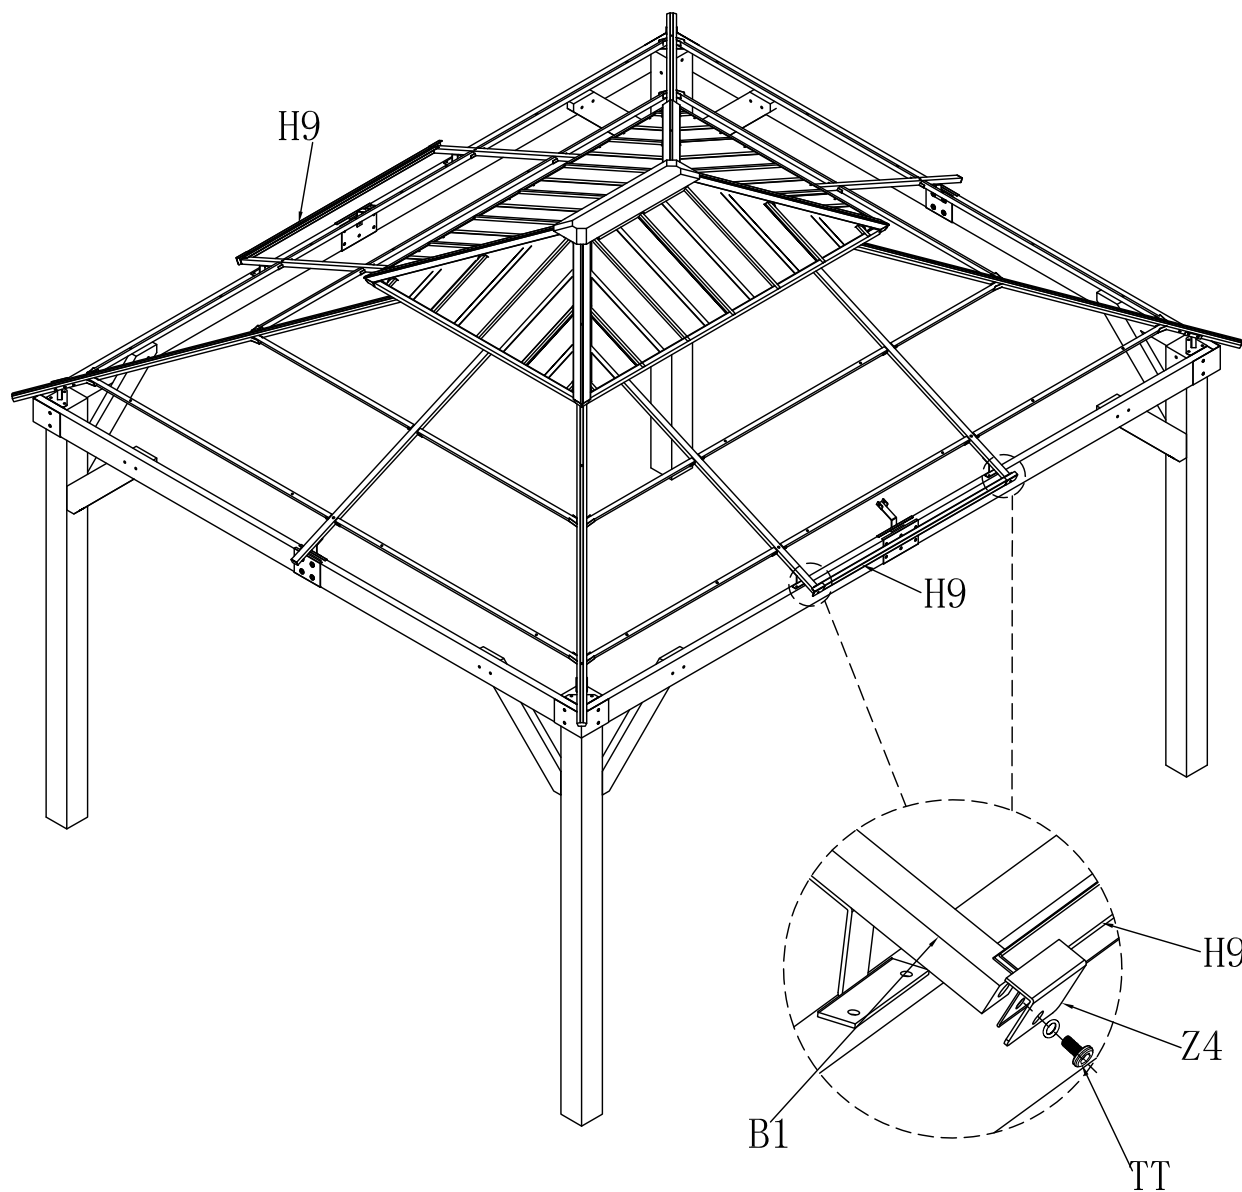

DO NOT FULLY TIGHTEN.



(H9) 2X




(Z4) 4X



M6X15

(TT) 4X

STEP. 29

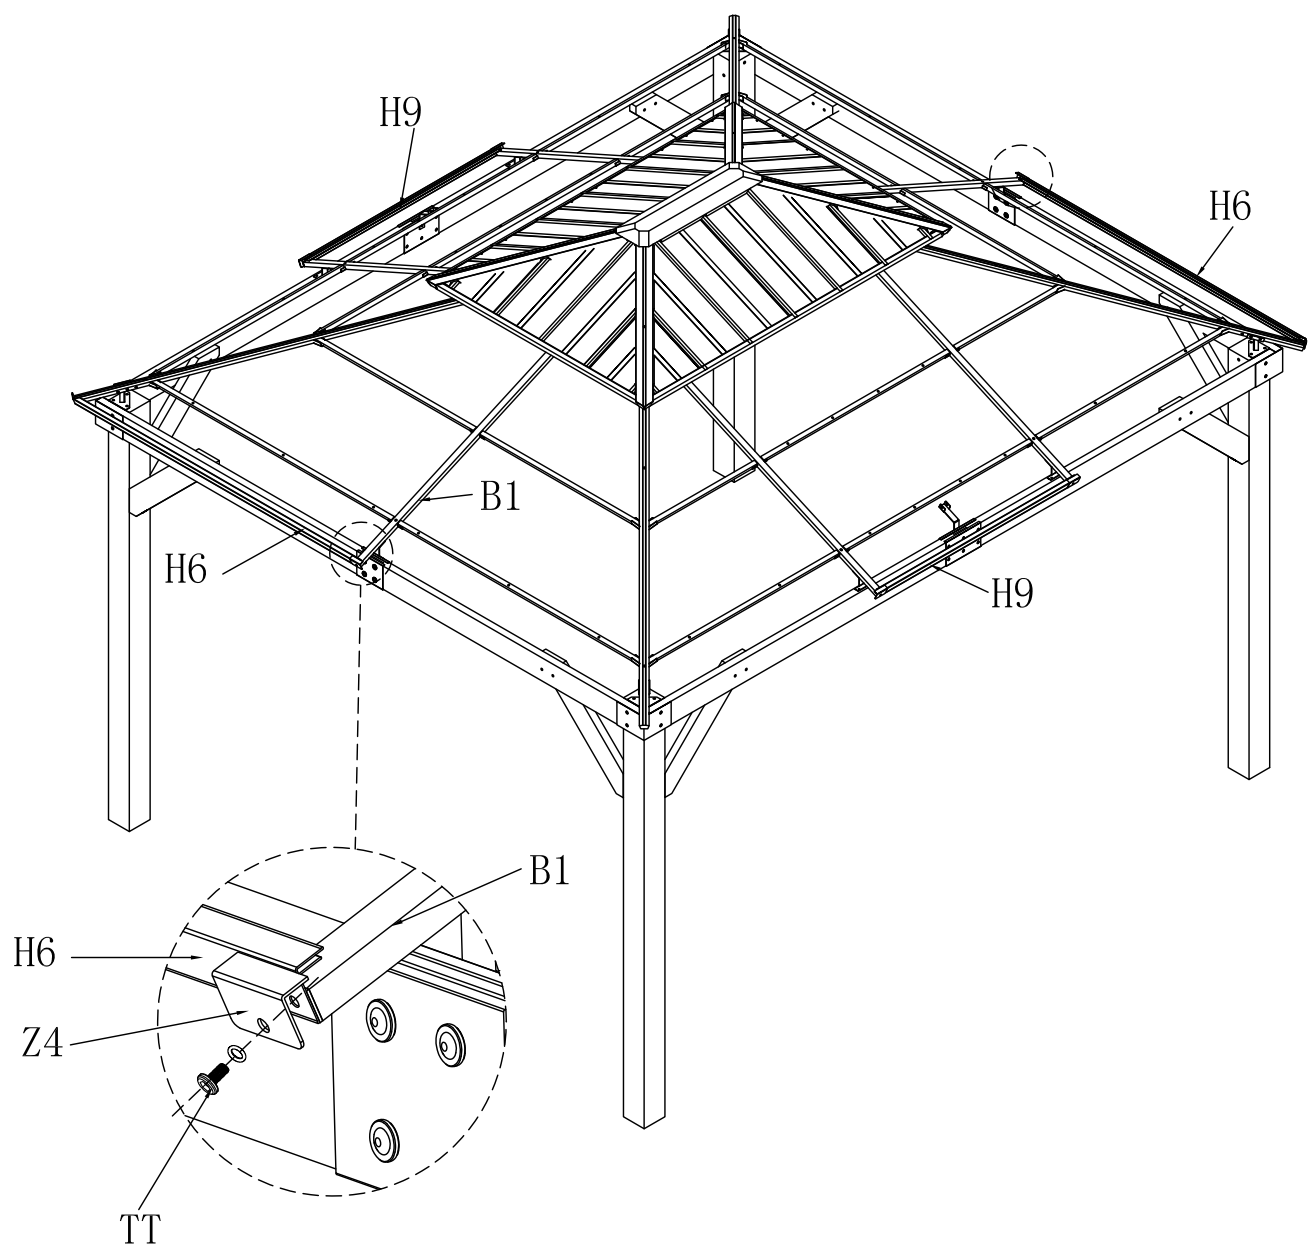

DO NOT FULLY TIGHTEN.



(H6) 2X





(Z4) 2X



M6X15

(TT) 2X

STEP. 30

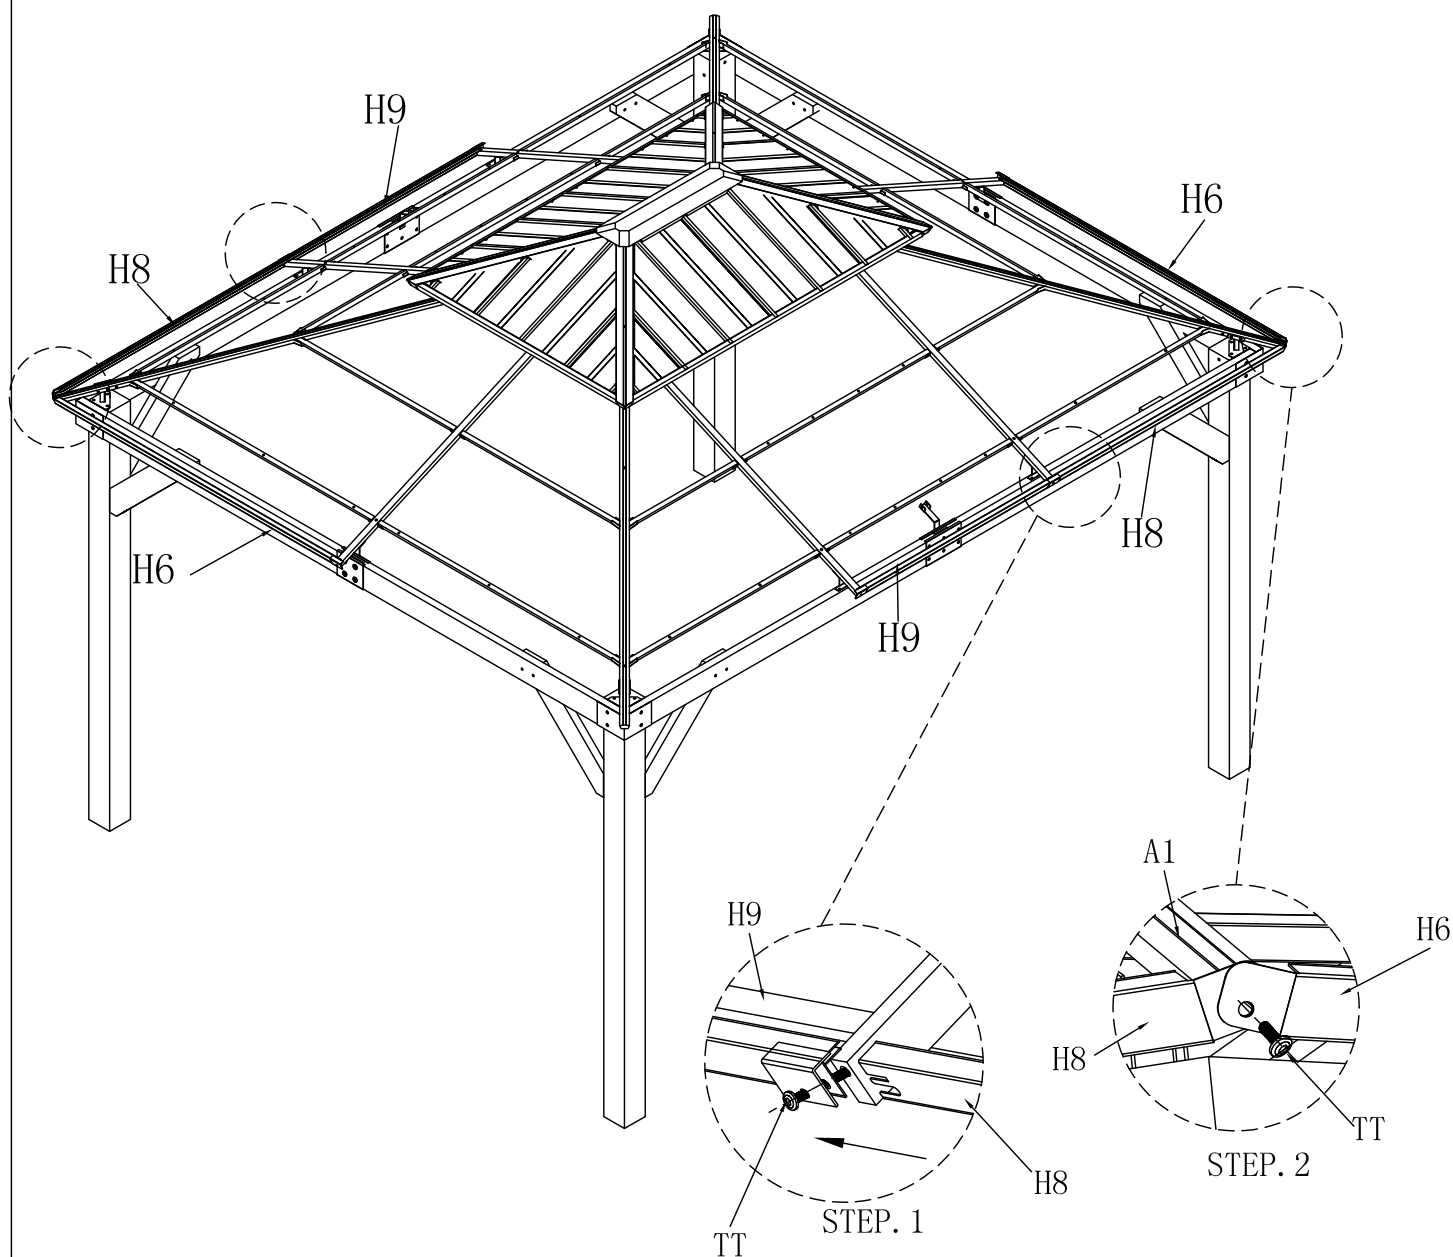


(H8) 2X



M6X15

(TT) 2X

STEP. 31

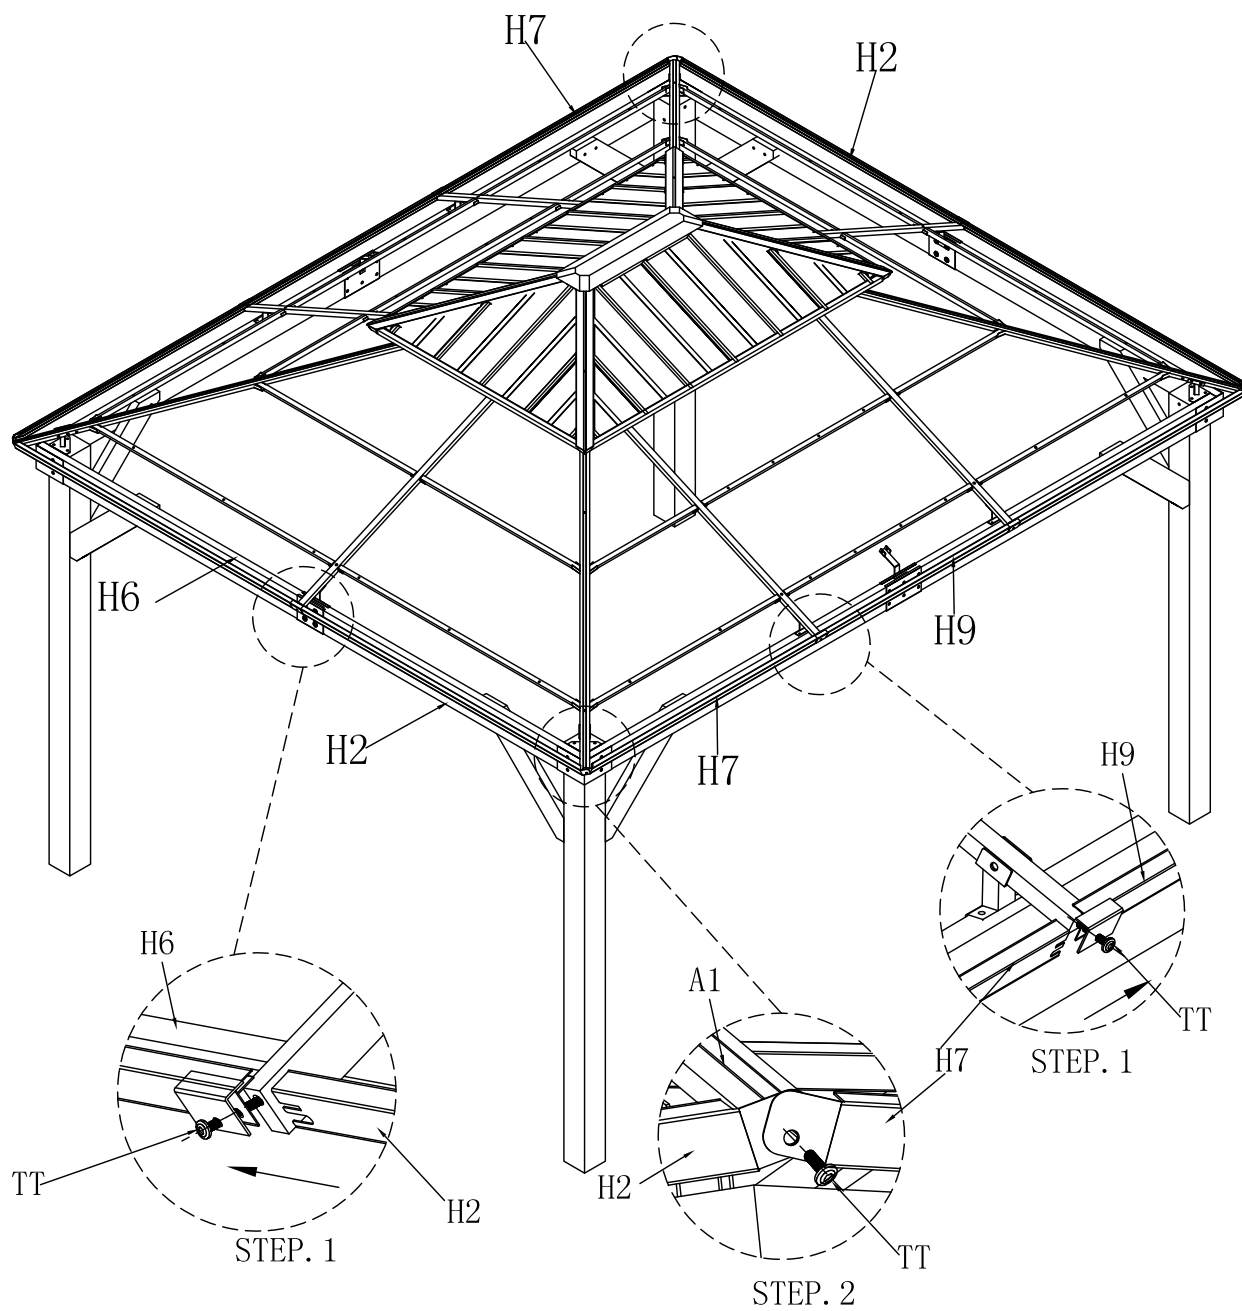

(H7) 2X




(H2) 2X



M6X15

(TT) 2X

STEP. 32

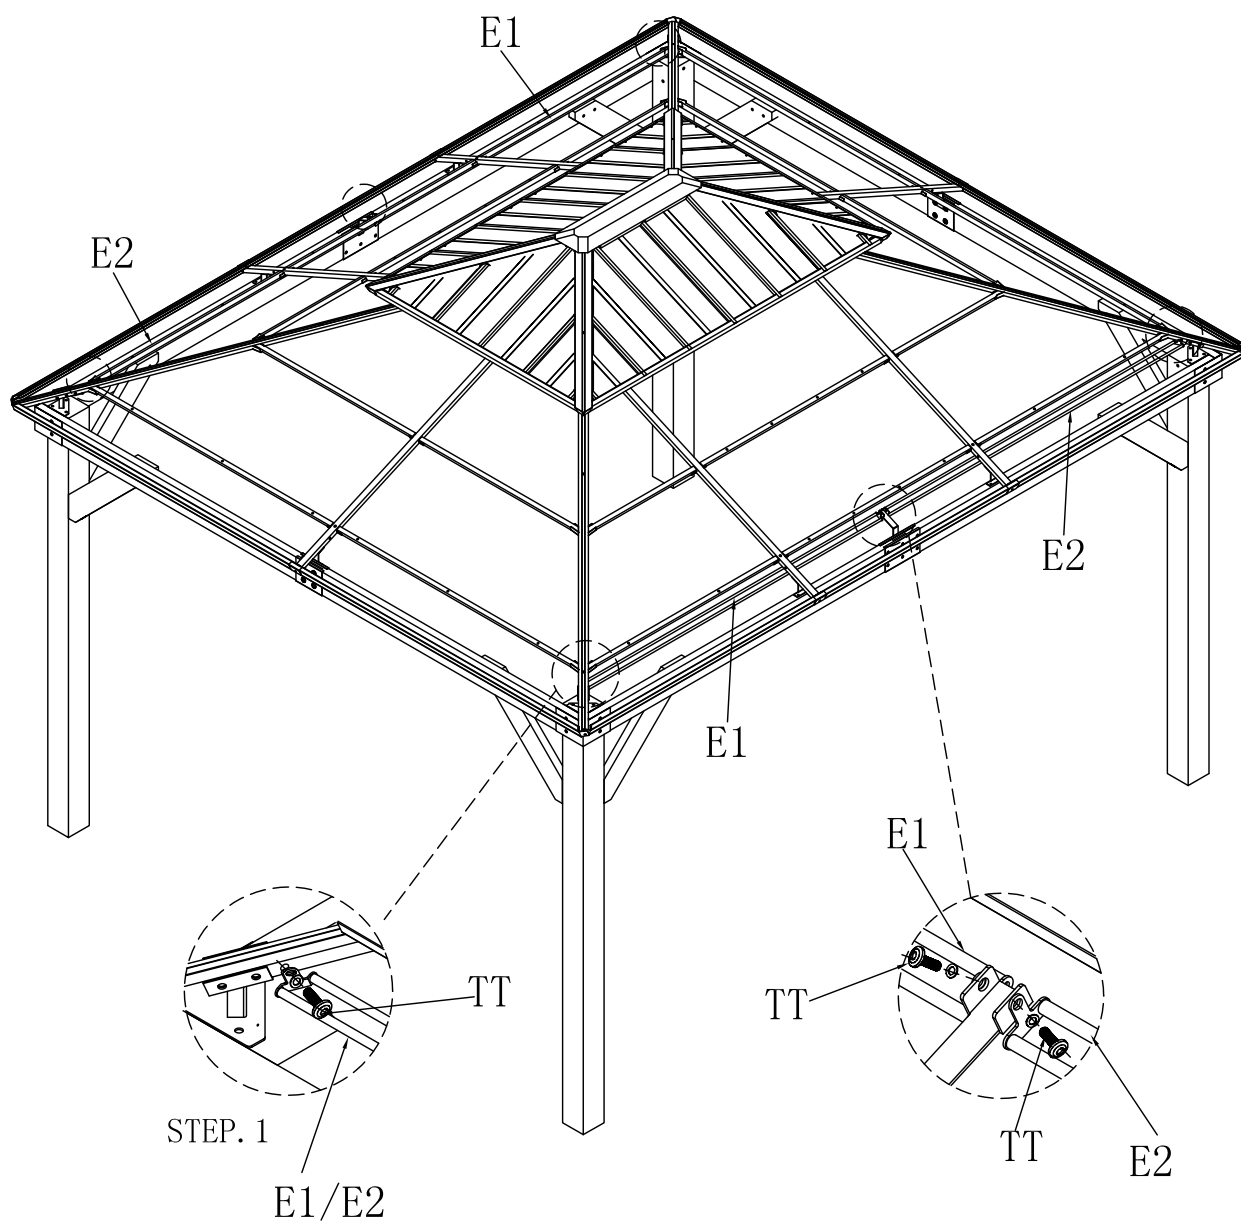

Ⓔ1 2X




Ⓔ2 2X



M6X15

Ⓙ1 8X

STEP. 33

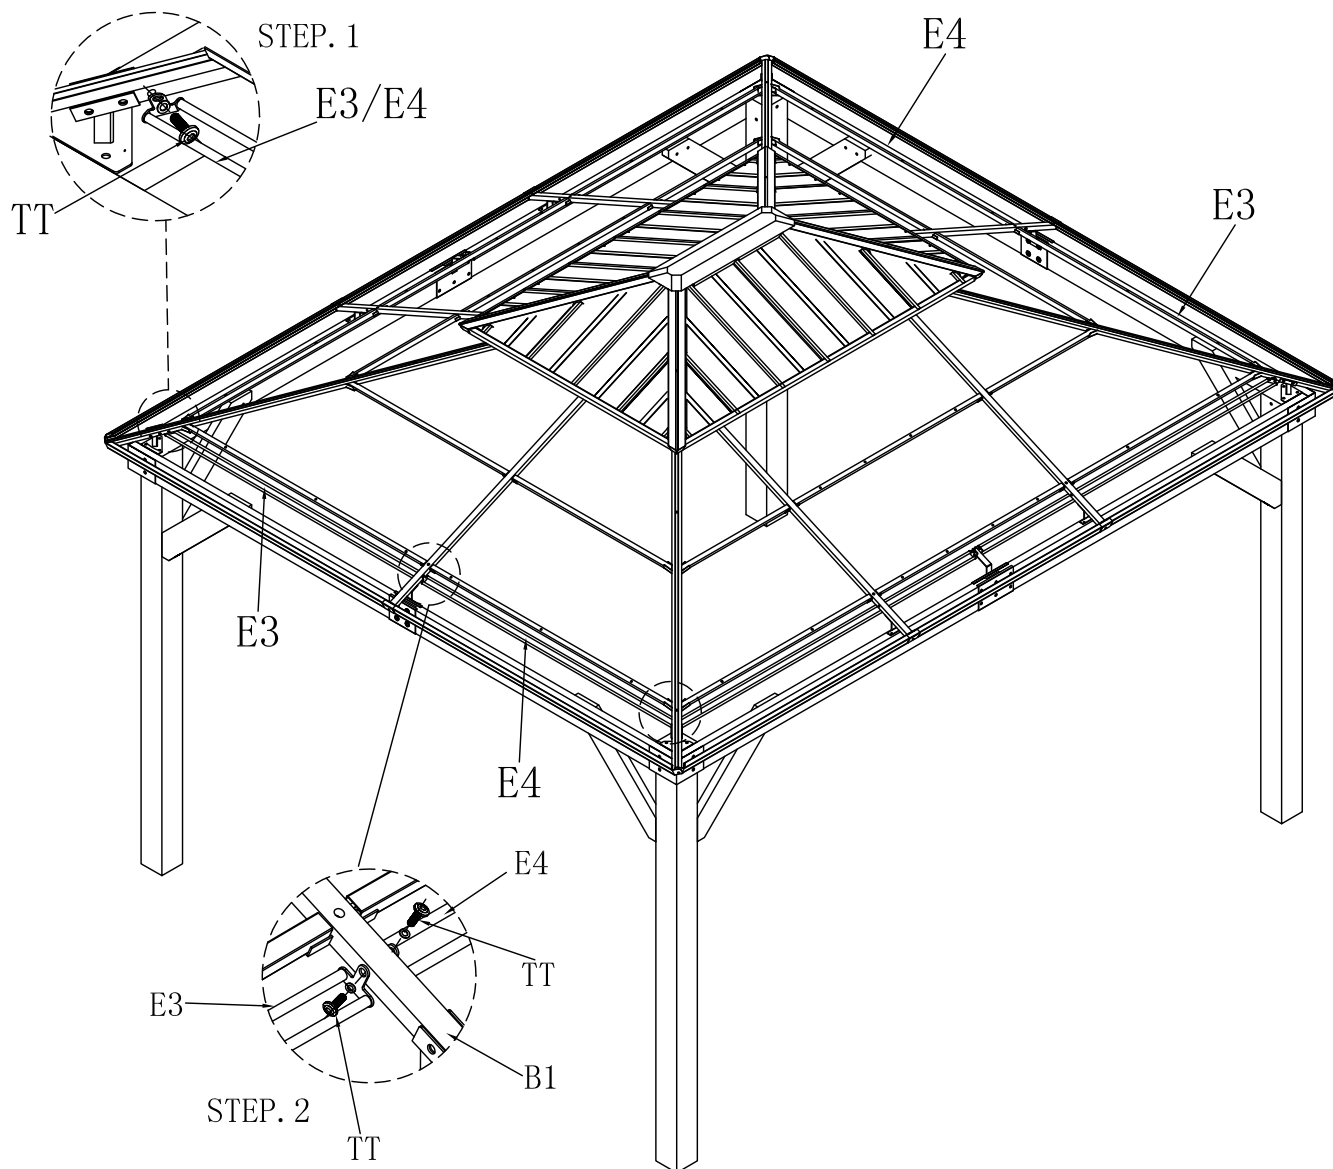

Ⓔ3 2X




Ⓔ4 2X



M6X15

Ⓙ 8X

STEP. 34

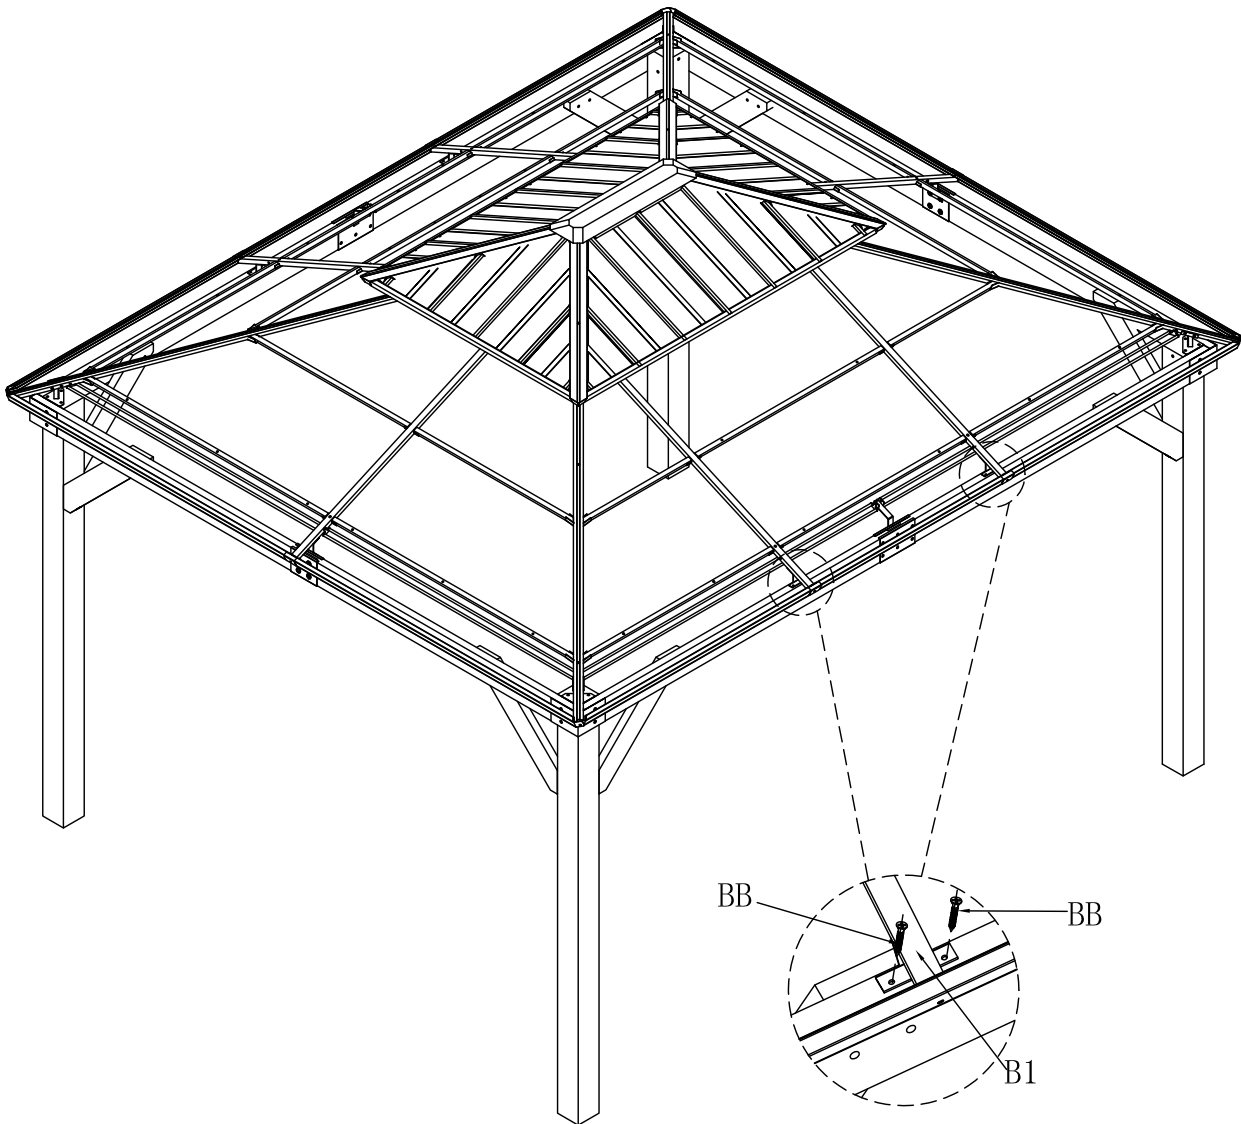


**Adjust alignments and NOW
TIGHTEN ALL SCREWS with Allen key .**




Fix B1 and 02 with BB.




STEP. 35

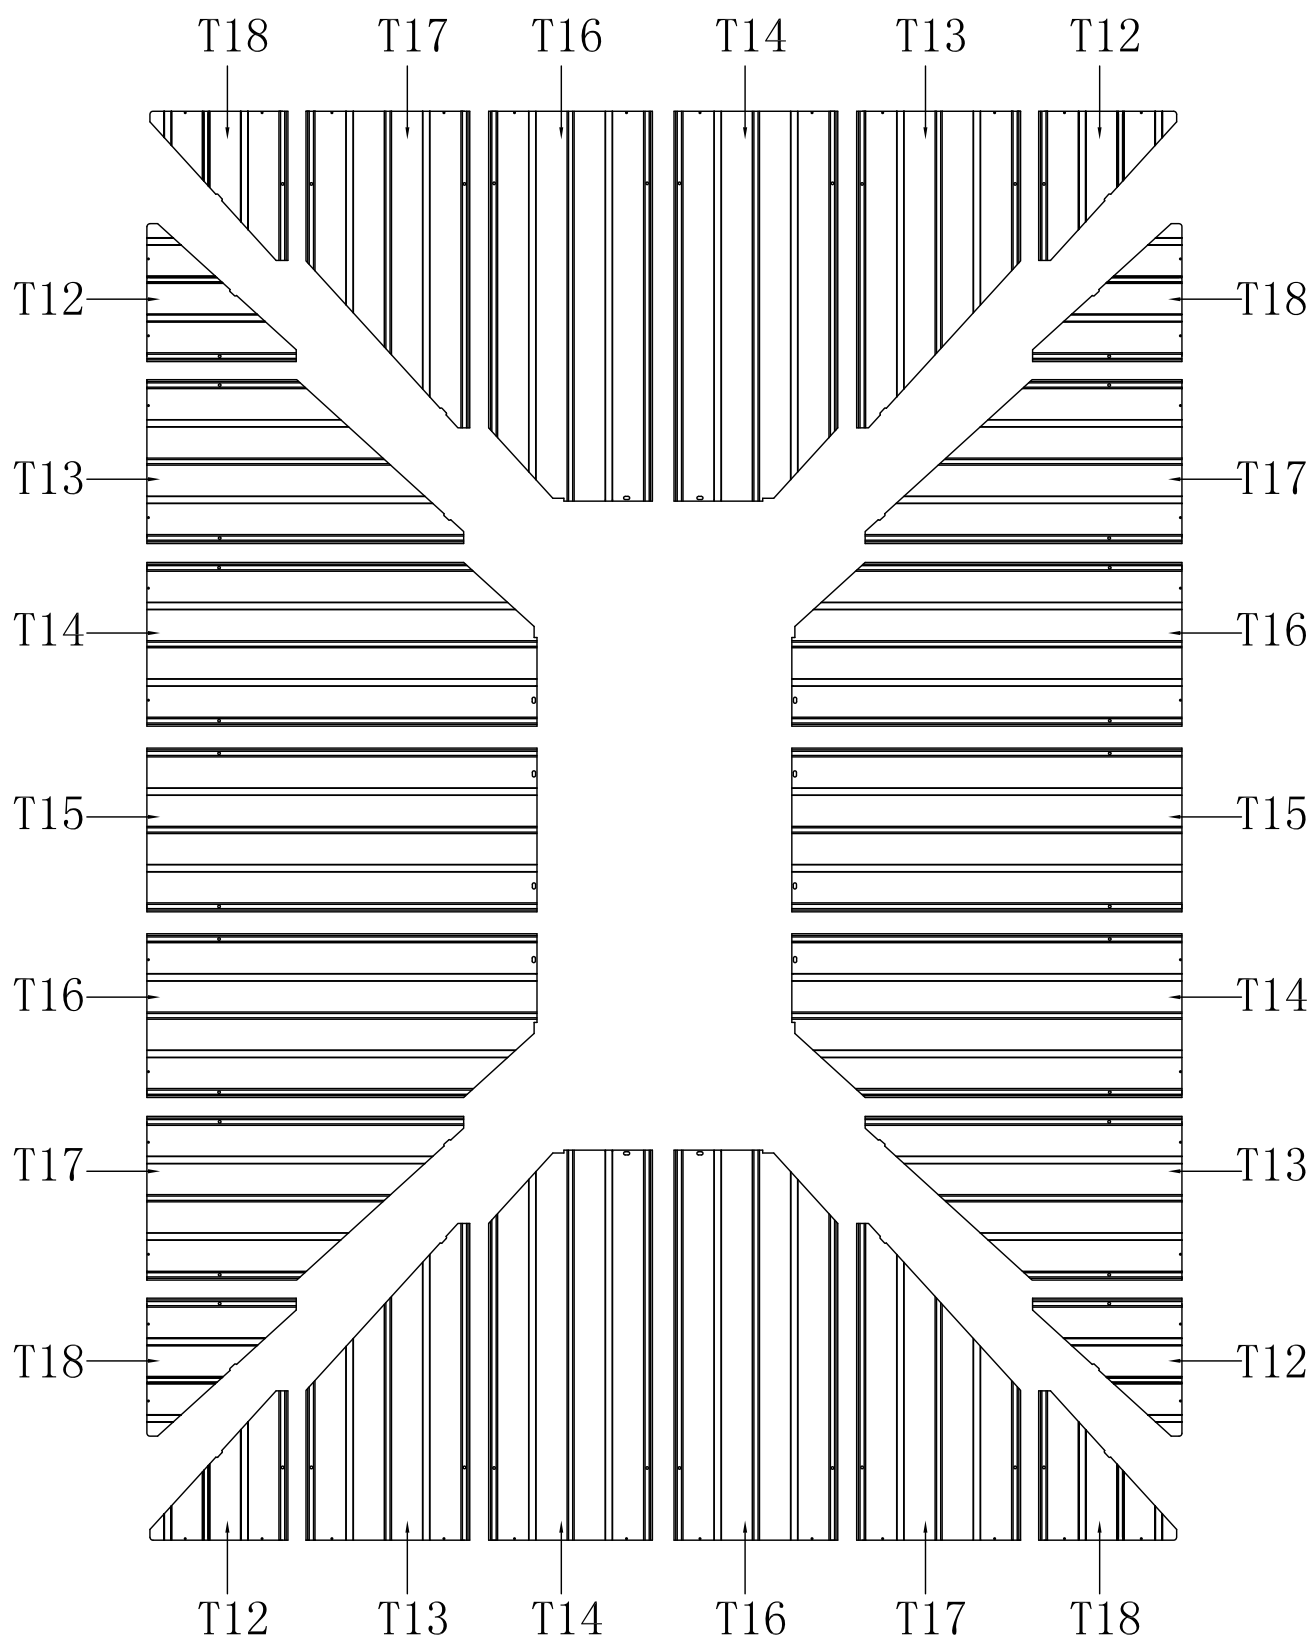


STEP. 36

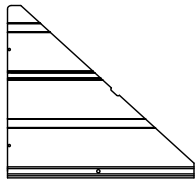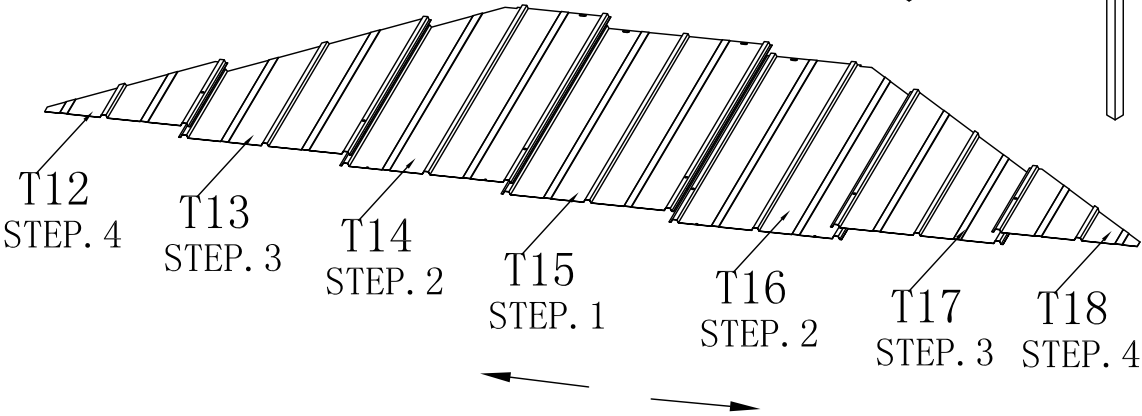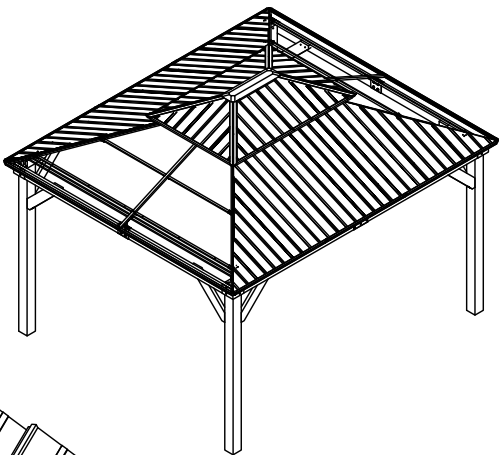


(T12) 2X

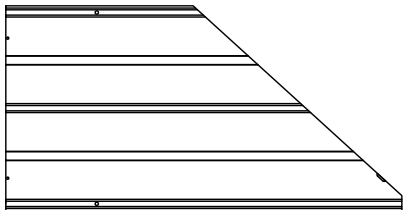


(T13) 2X

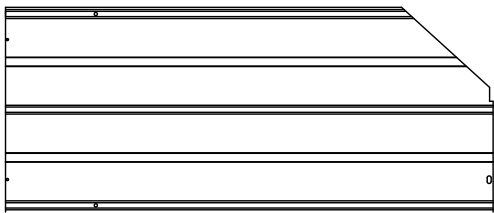


(T14) 2X

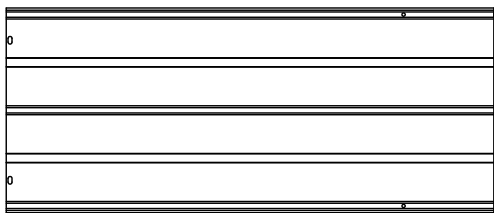


(T15) 2X

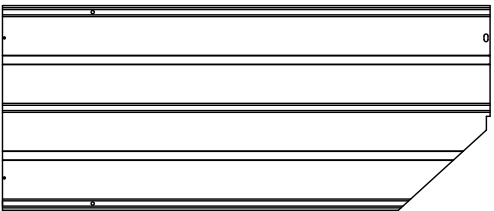

(T16) 2X

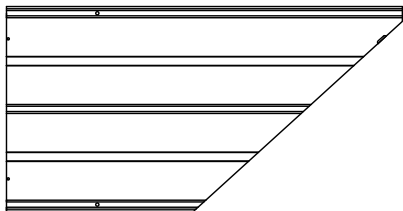


(T17) 2X

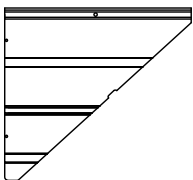


(T18) 2X



STEP. 37

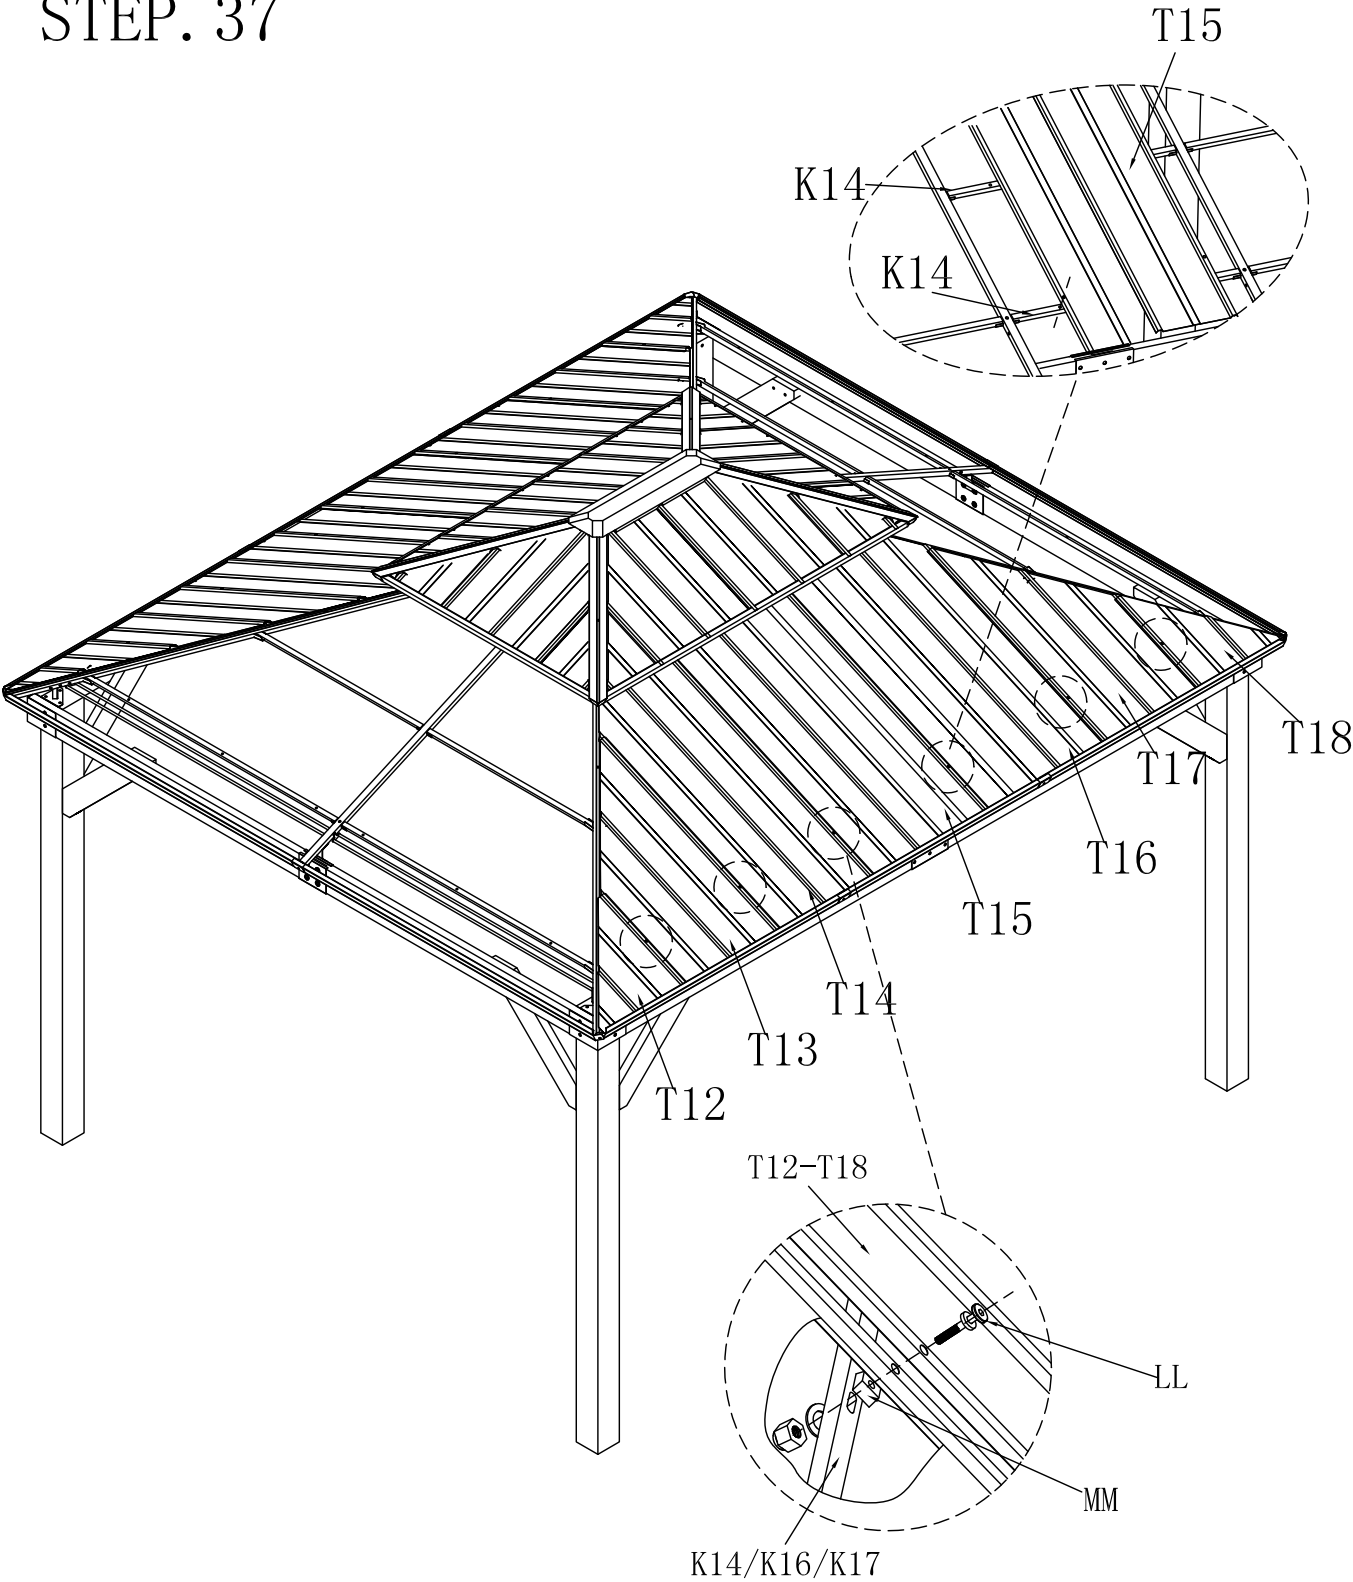


DO NOT FULLY TIGHTEN.




STEP. 38

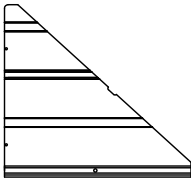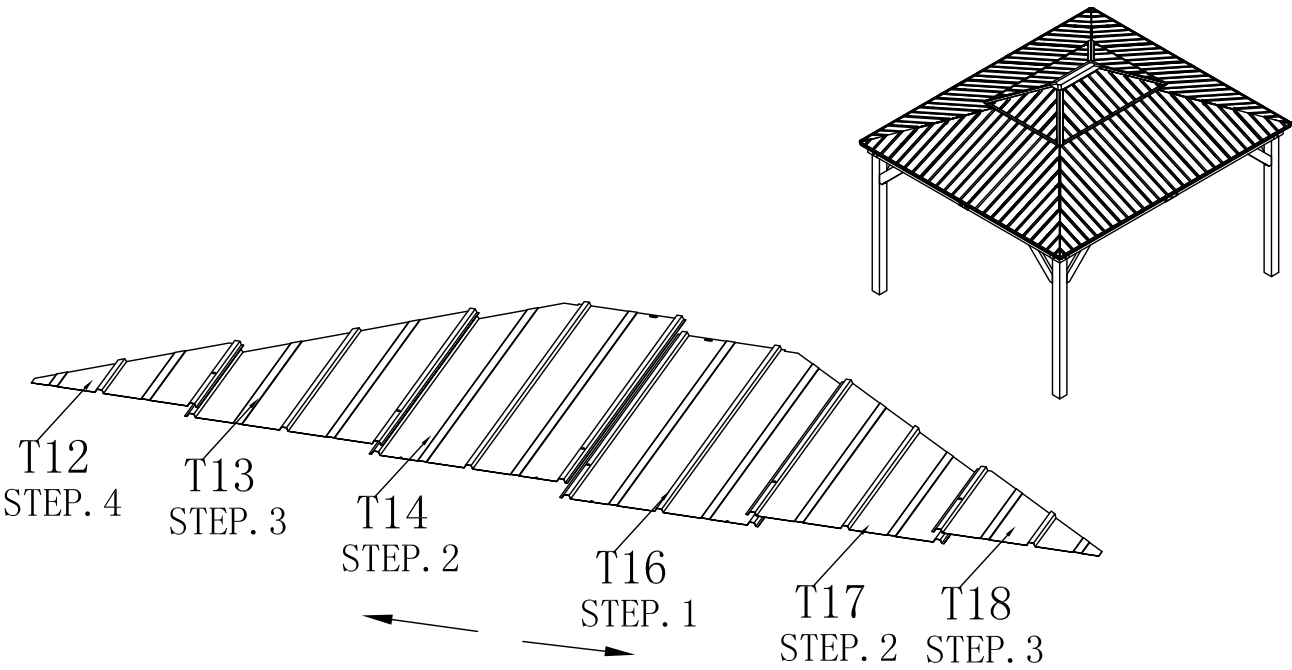


T12 2X

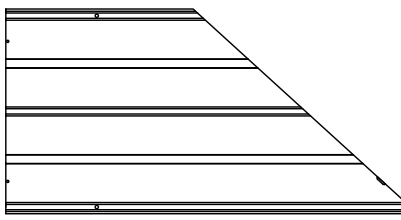


T13 2X

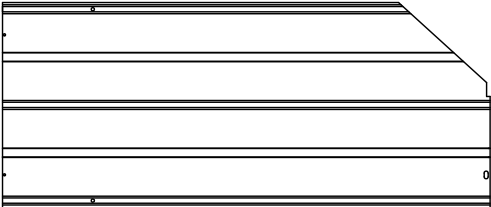


T14 2X

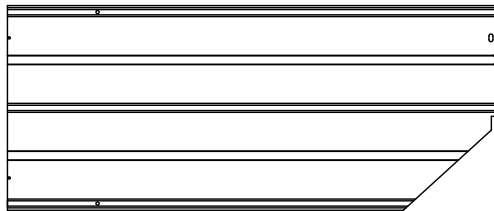

T16 2X

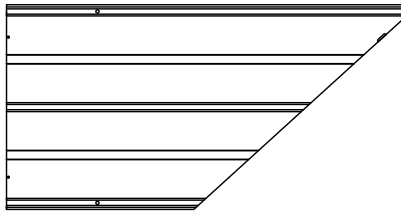


T17 2X

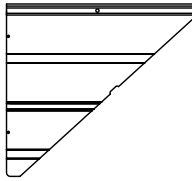

T18 2X

STEP. 39

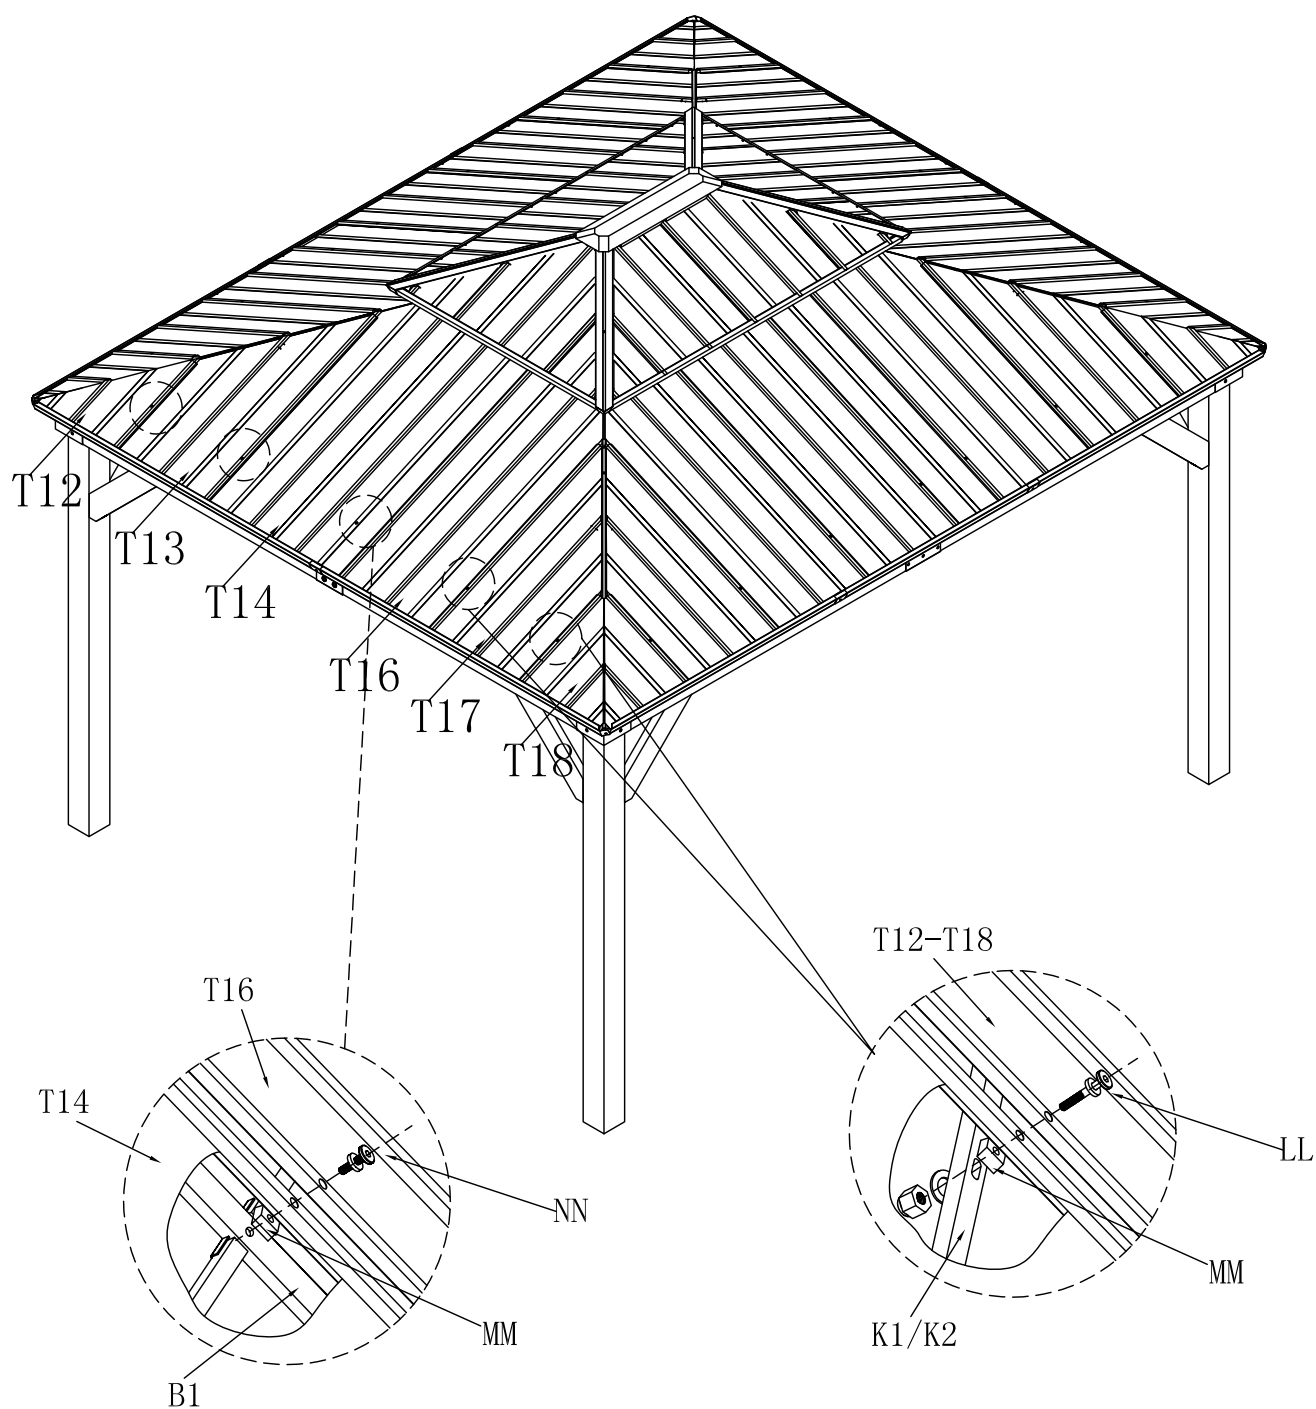



DO NOT FULLY TIGHTEN.

M6X25
 NN 2X

M6X45
 LL 8X

MM 10X

STEP. 40

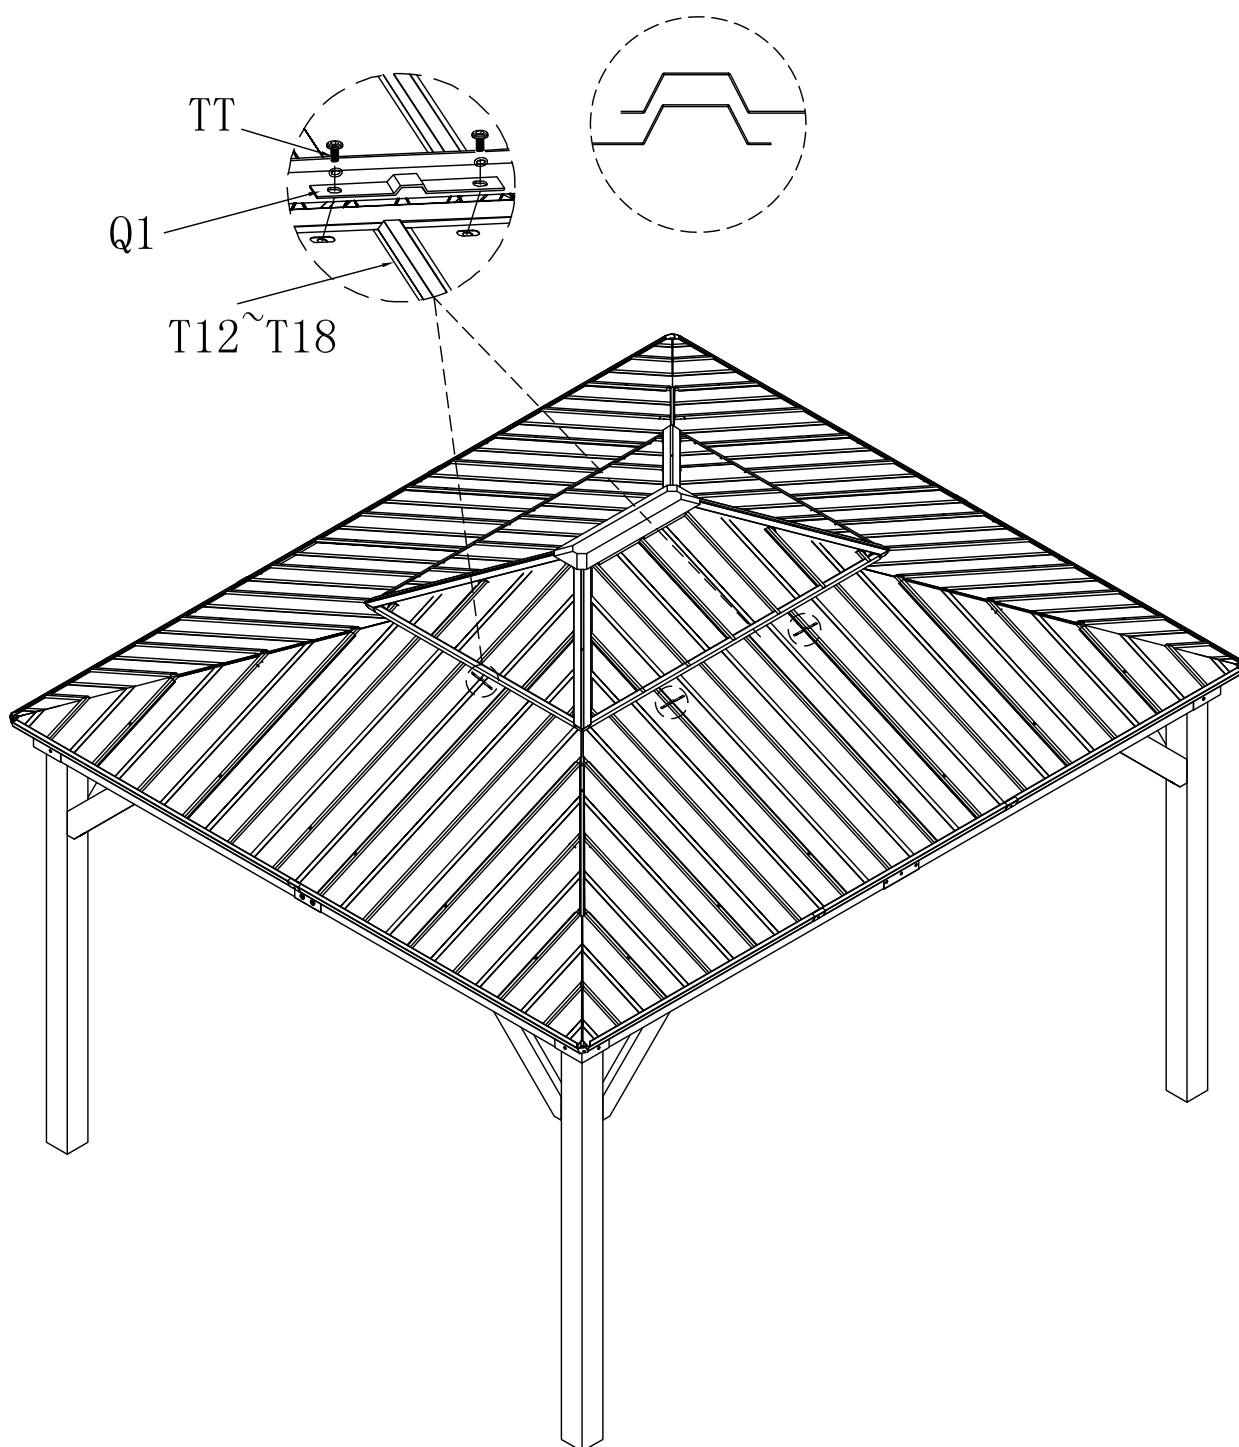



Q1 6X



M6X15

TT 12X


STEP. 41

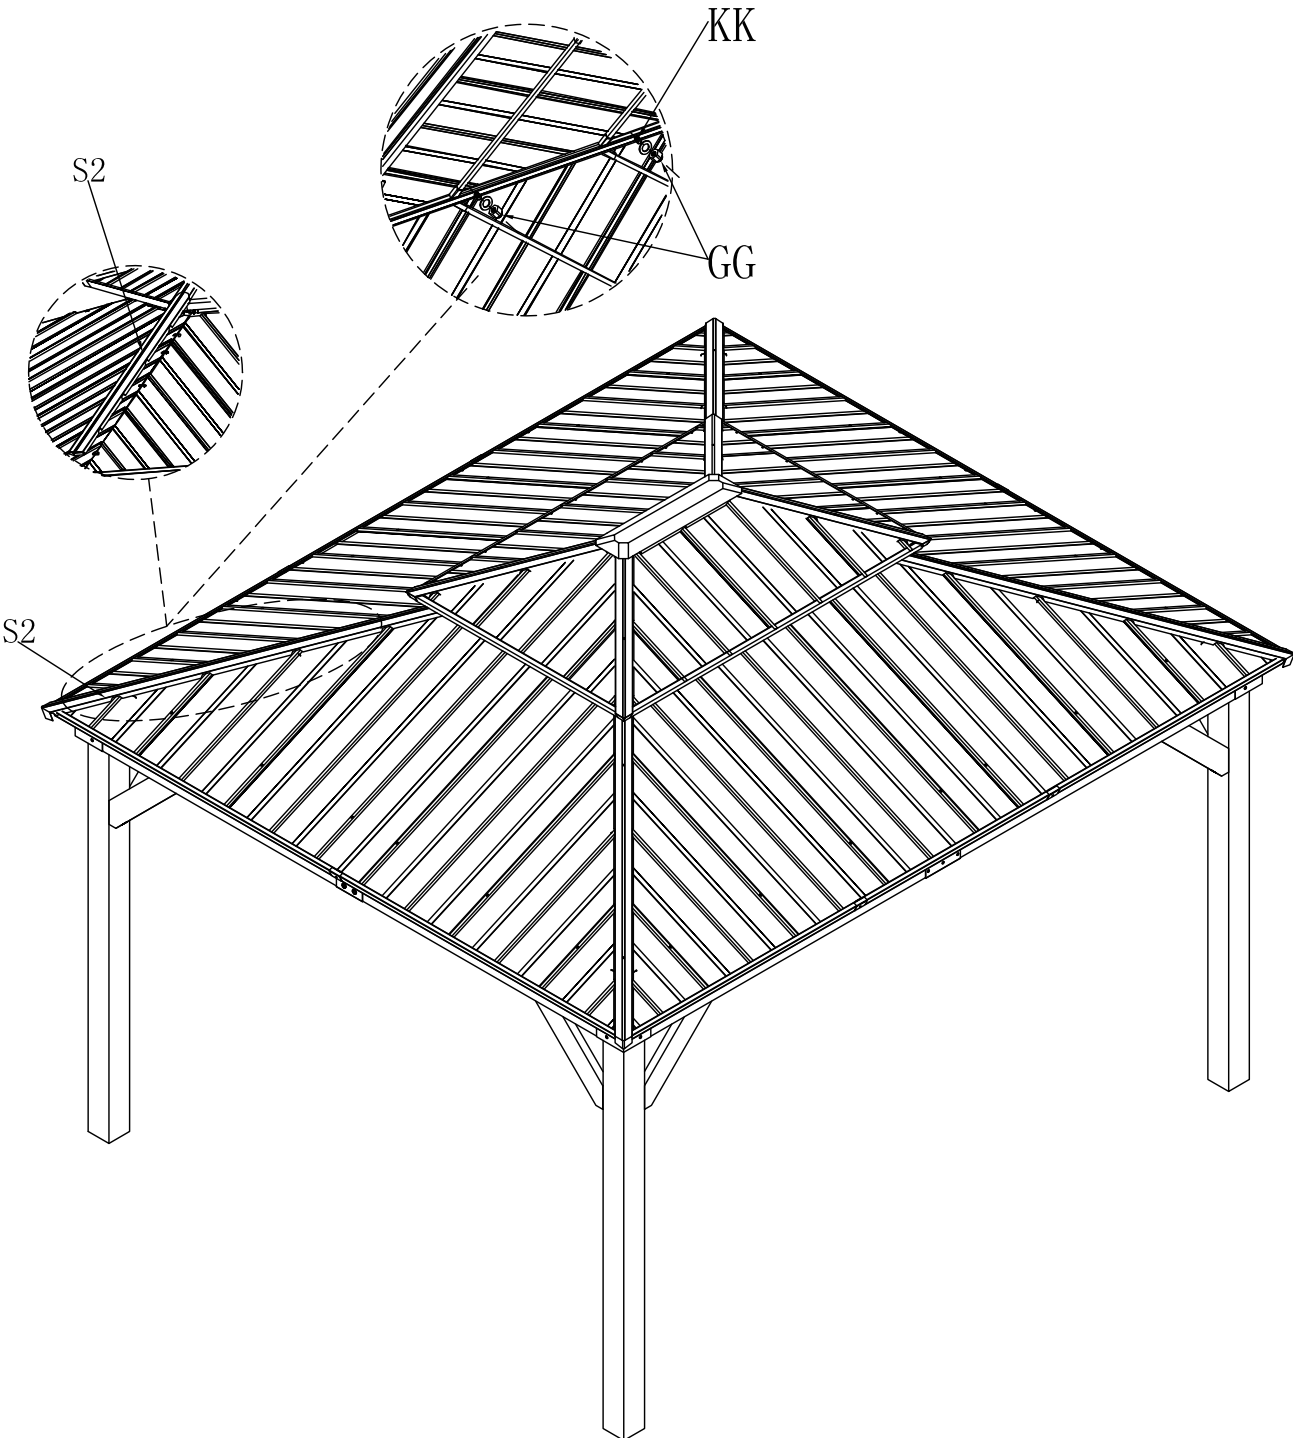

Ⓢ2 4X

⓪  ⓖⓖ 8X

STEP. 42

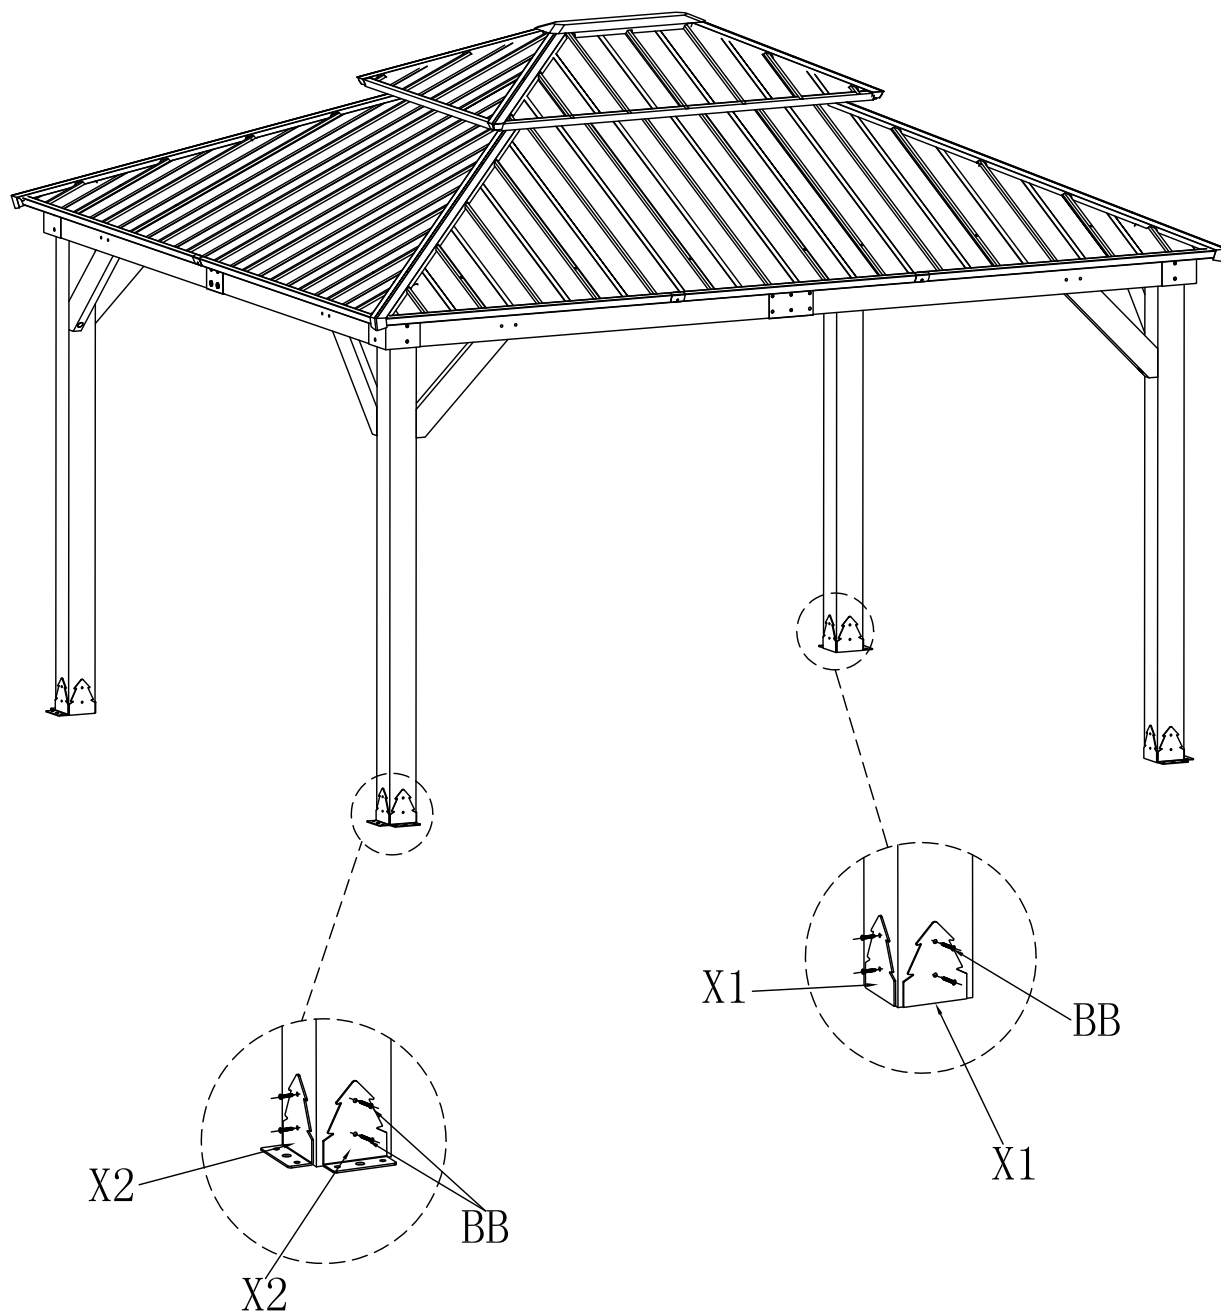

(X1) 8X





(X2) 8X



M5X30

(BB) 32X






STEP. 43

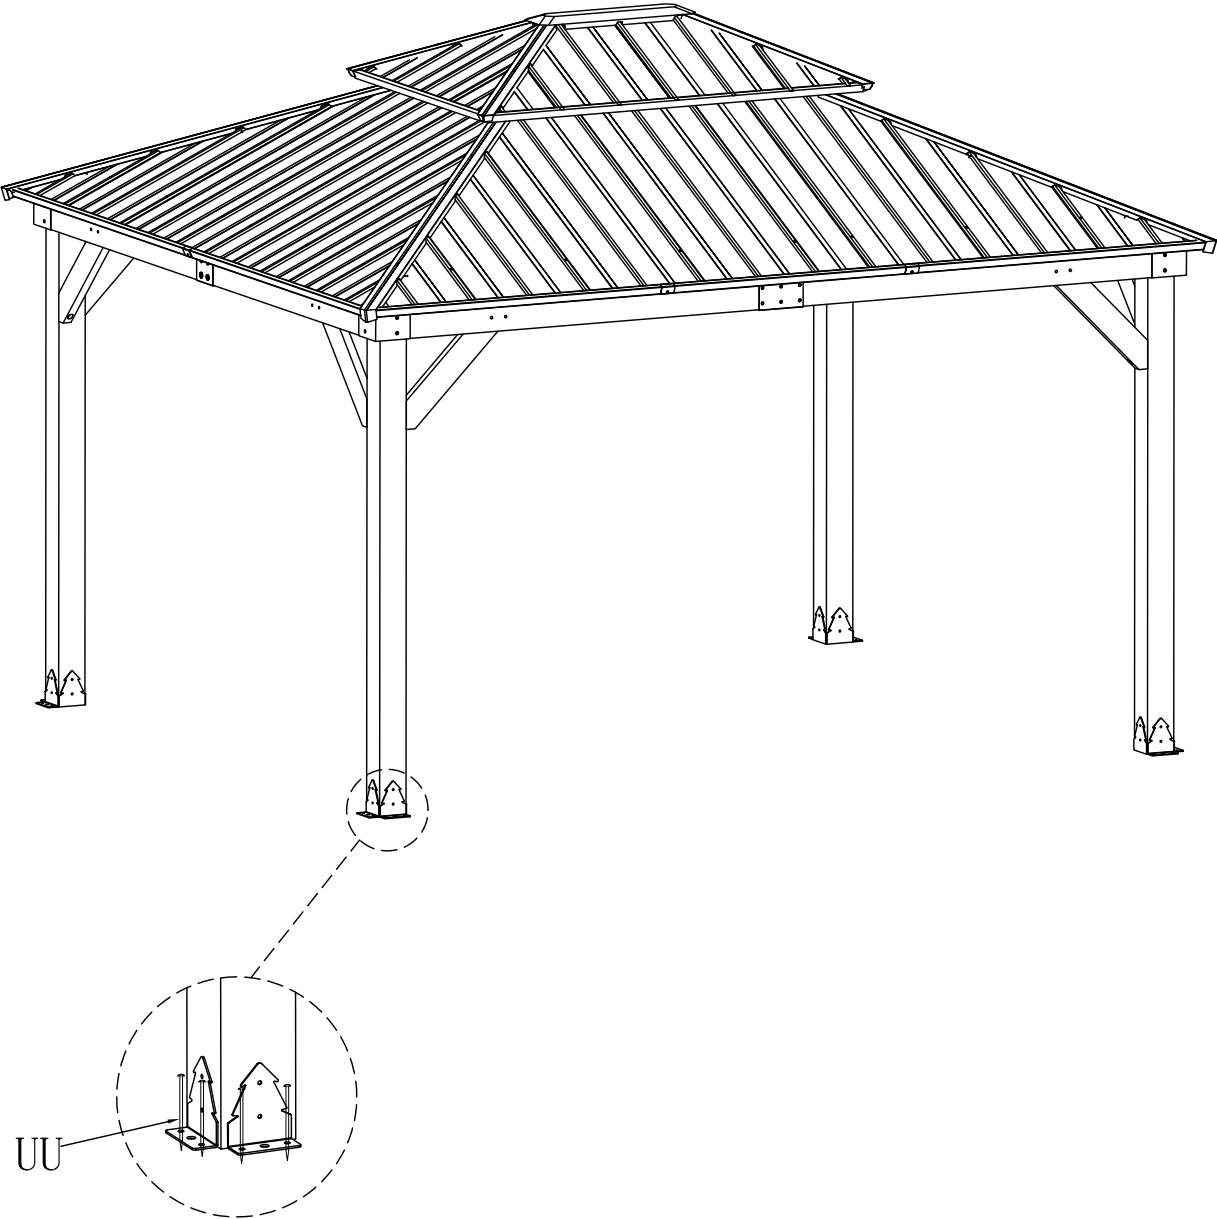


UU

16X

STEP. 44


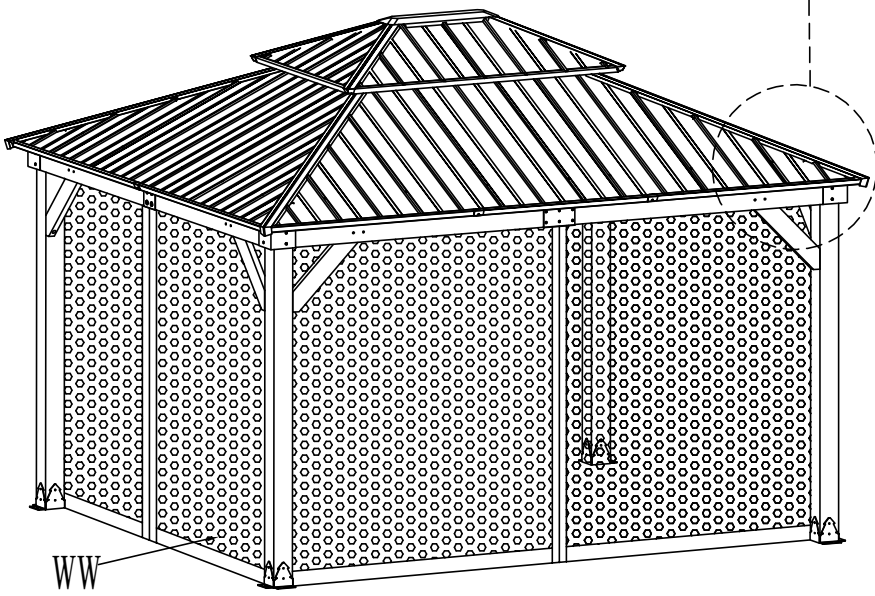
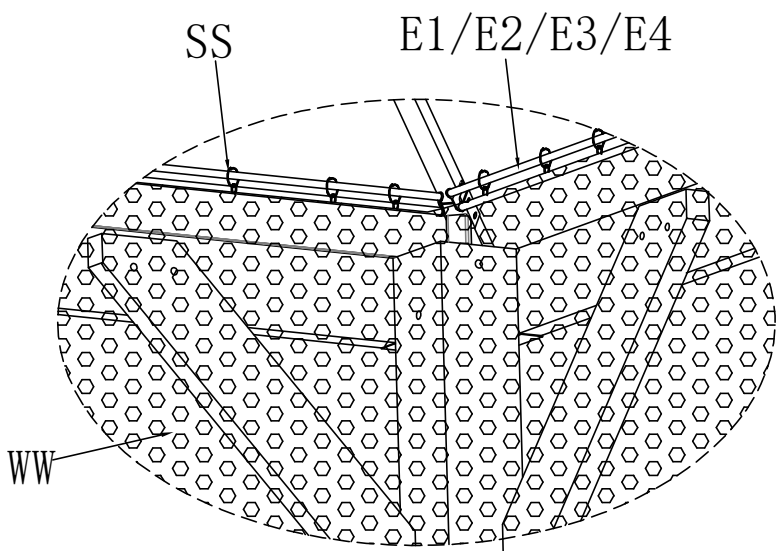
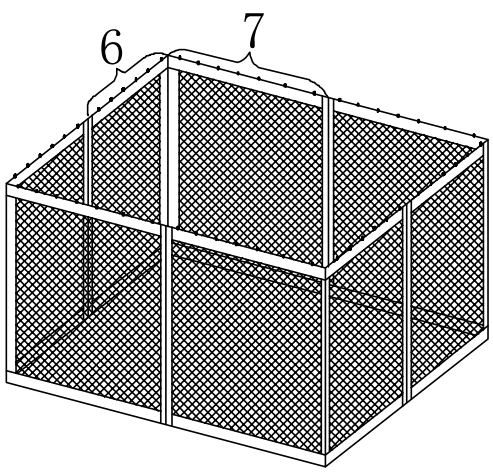
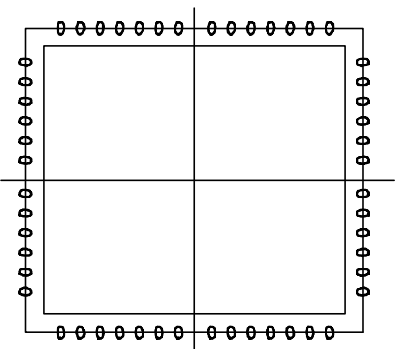


WW 1X

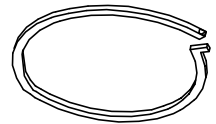


SS 52X

STEP. 45

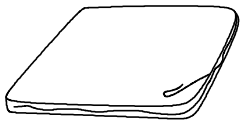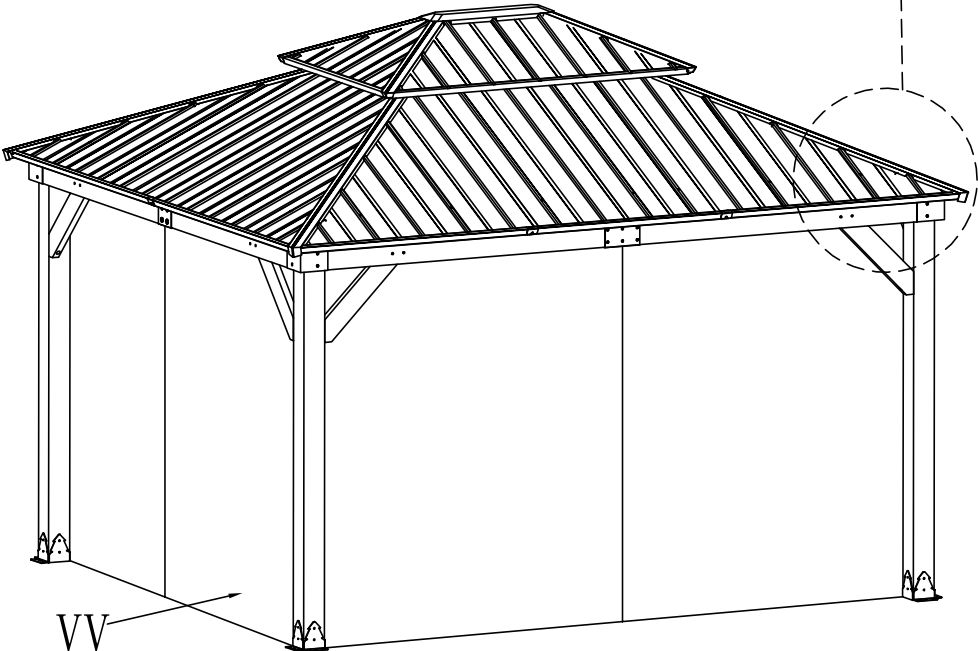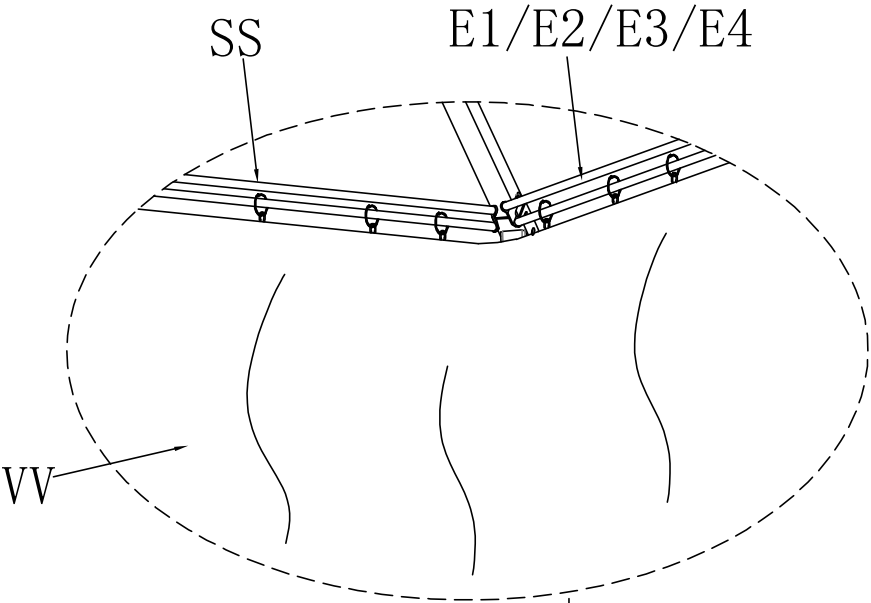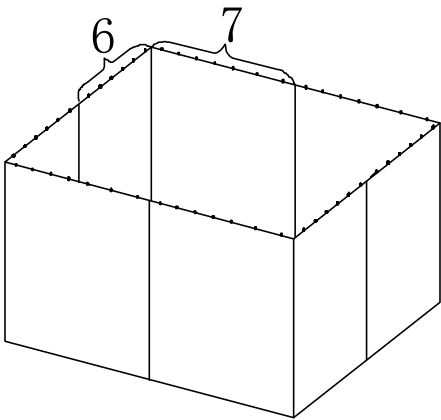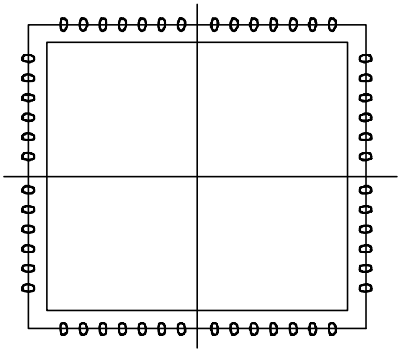

Ⓥ 1X

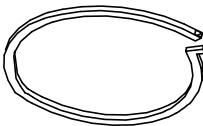

Ⓢ 52X