


ASSEMBLY INSTRUCTIONS

EEI-7169

V2.28.01.25

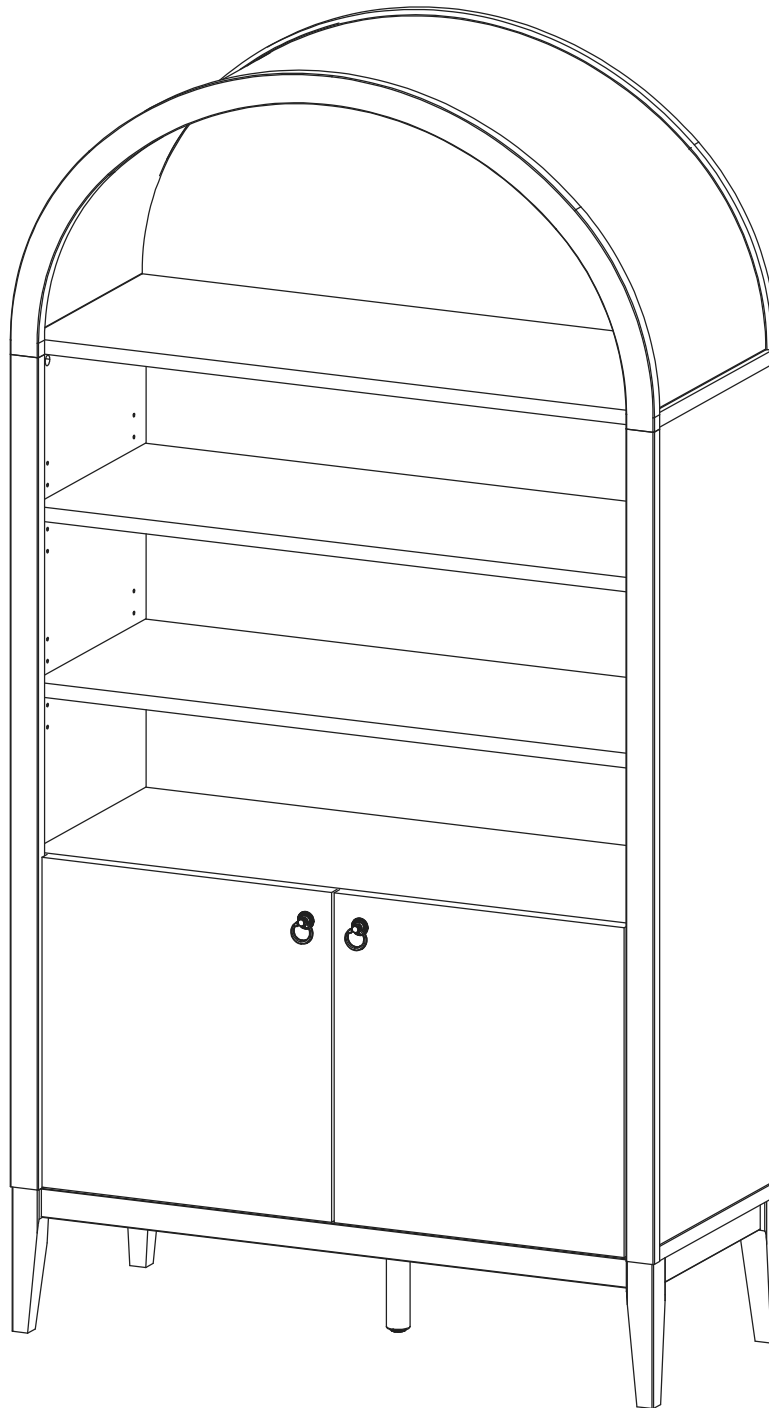

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 90 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.



Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Front Board Hutch	x1
6	Support Board Hutch	x3
7	Back Board Hutch	x1
8	PVC Board	x1
9	Bottom Skirt 1	x1

10	Bottom Skirt 2	x1
11	Bottom Skirt 3	x2
12	Leg	x4
13	Front Skirt 1	x1
14	Front Skirt 2	x1
15	Door Left	x1
16	Door Right	x1
17	Center Board	x1
18	Adjustable Shelf 1	x2



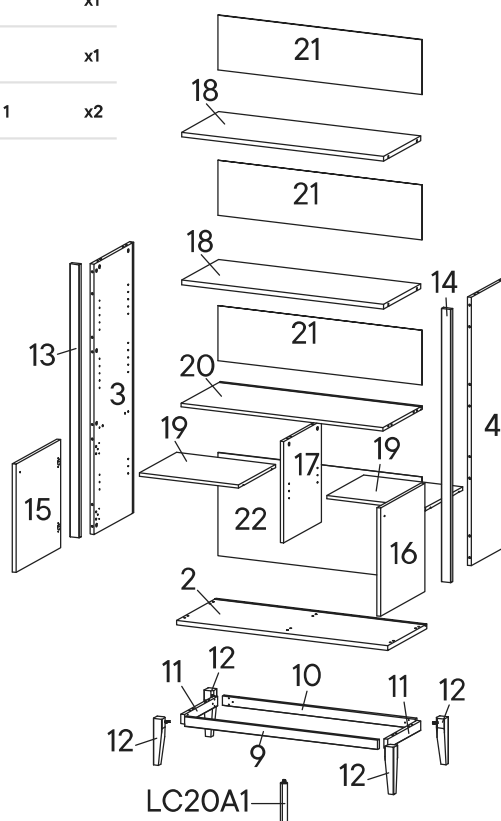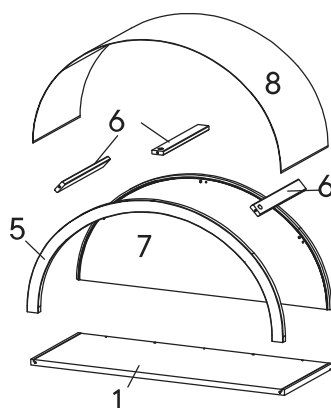


























19	Adjustable Shelf 2	x2
20	Fixed Shelf	x1
21	Back Board 1	x3
22	Back Board 2	x1
LC20A1	Center Leg	x1



Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x26	L		Allen Key	x2	W		Flange Nut	x4
B		Cam Lock Ø15 mm	x26	M		Wedge	x26	X		Wrench	x1
C		Wood Dowel Ø8 x 30 mm	x35	N		Screw M 3.5 x 15.5 mm	x26	Y		List	x2
D		Screw M 6.4 x 14 mm	x3	O		Screw M 7 x 50 mm	x6	HS26C		Hinge	x4
E		Joining Strip	x2	P		Screw Cap Ø15 mm (Short)x2		BC410		Corner Brace	x4
F		Cam Bolt Ø6 x 19.5 mm	x8	Q		Plate	x3	PM3		Mounting Plate	x1
G		Screw Cap Ø15 mm (Long) x12		R		Screw M 6.4 x 53 mm	x7	<h2>What you need:</h2> <div>  Phillips Head Screwdriver </div>			
H		Screw M 4.5 x 12.5 mm	x63	S		Floor Protector	x4				
I		Handle	x2	T		Shelf Pin	x8				
J		Screw M 4 x 22 mm	x2	U		Support Hinge	x4				
K		Screw M 6.4 x 25 mm	x4	V		Screw M 8 x 39 mm	x3				

Components Carton Placement

Carton 1 of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
5	Front Board Hutch	x1
6	Support Board Hutch	x3
7	Back Board Hutch	x1
9	Bottom Skirt 1	x1
10	Bottom Skirt 2	x1
11	Bottom Skirt 3	x2

Carton 2 of 2

Label	Description	Qty
12	Leg	x4
18	Adjustable Shelf 1	x2
20	Fixed Shelf	x1
21	Back Board 1	x3
22	Back Board 2	x1
LC20A1	Center Leg	x1
	Hardware Pack	x1
3	Side Board Left	x1
4	Side Board Right	x1
8	PVC Board	x1
13	Front Skirt 1	x1
14	Front Skirt 2	x1
15	Door Left	x1
16	Door Right	x1
17	Center Board	x1
19	Adjustable Shelf 2	x2

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com





Step 1

HARDWARE

- C** Wood Dowel Ø8 x 30 mm x16
- F** Cam Bolt Ø6 x 19.5 mm x8

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1

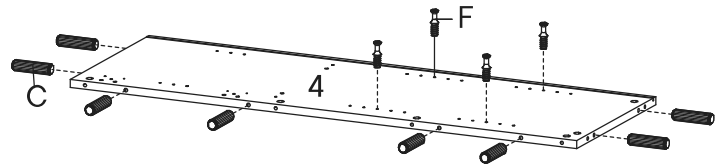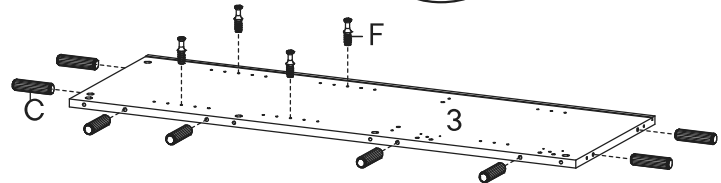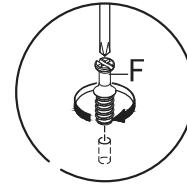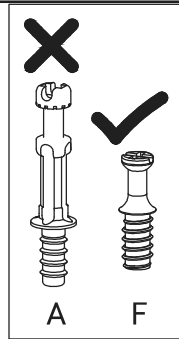




Step 2

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1

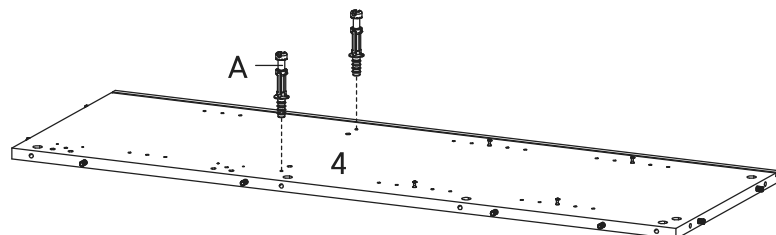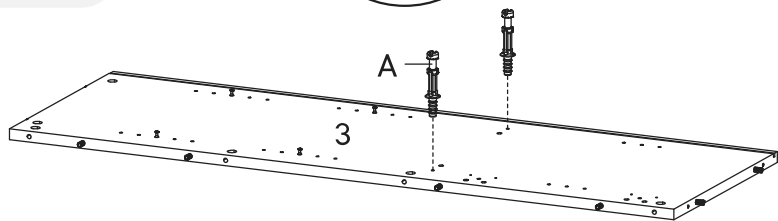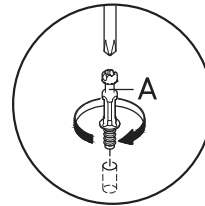


Step 3

HARDWARE

H	Screw M 4.5 x 12.5 mm	x8
K	Screw M 6.4 x 25 mm	x4
L	Allen key	x1
U	Support Hinge	x4

COMPONENTS

3	Side Board Left	x1
4	Side Board Right	x1

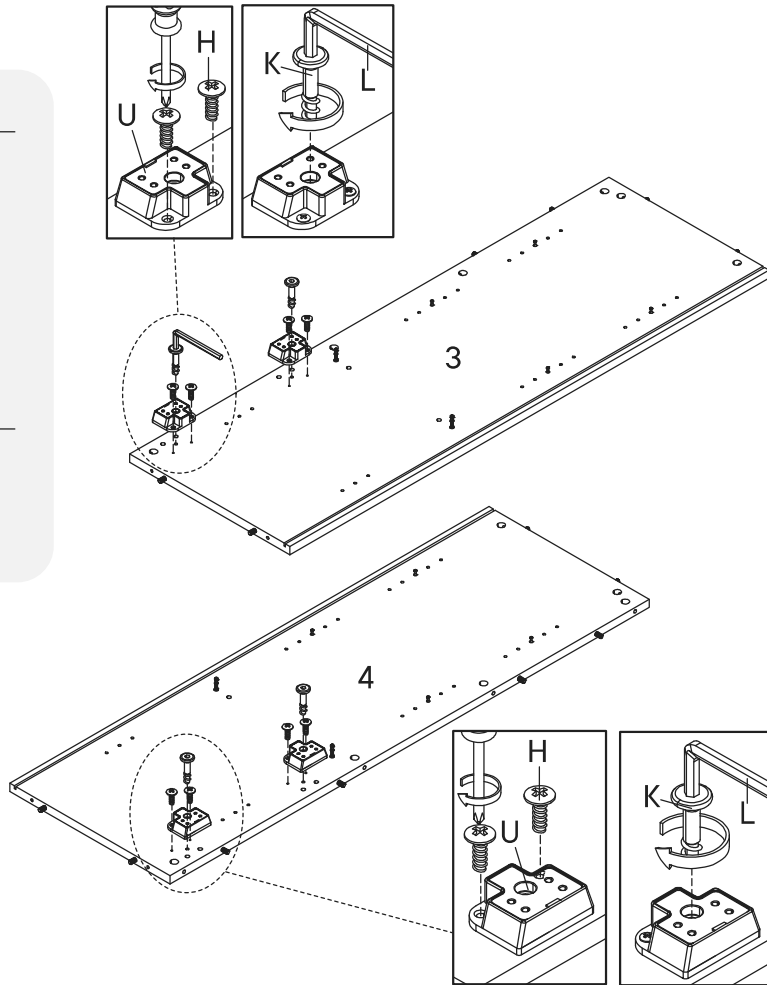


Step 4

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x2
C	Wood Dowel Ø8 x 30 mm	x8

COMPONENTS

17	Center Board	x1
20	Fixed Shelf	x1

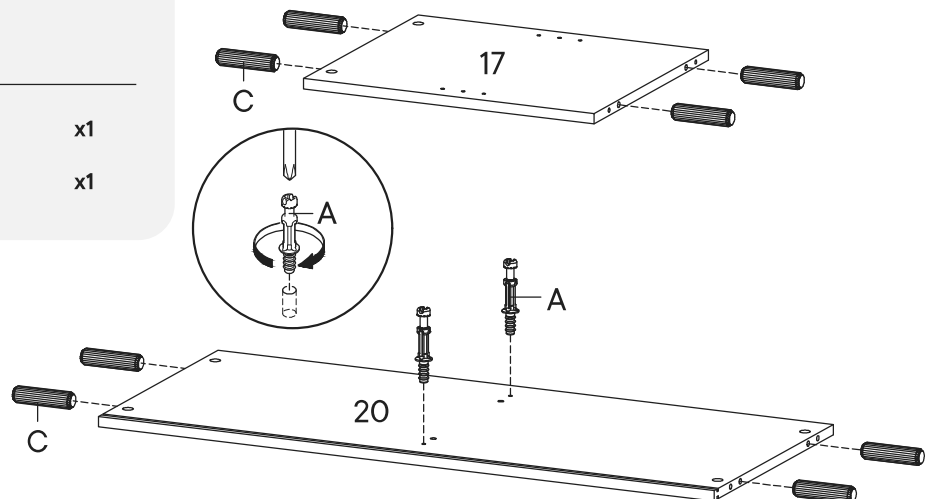

Step 5

HARDWARE


B Cam Lock Ø15 mm x4

COMPONENTS

3 Side Board Left x1

4 Side Board Right x1

20 Fixed Shelf x1

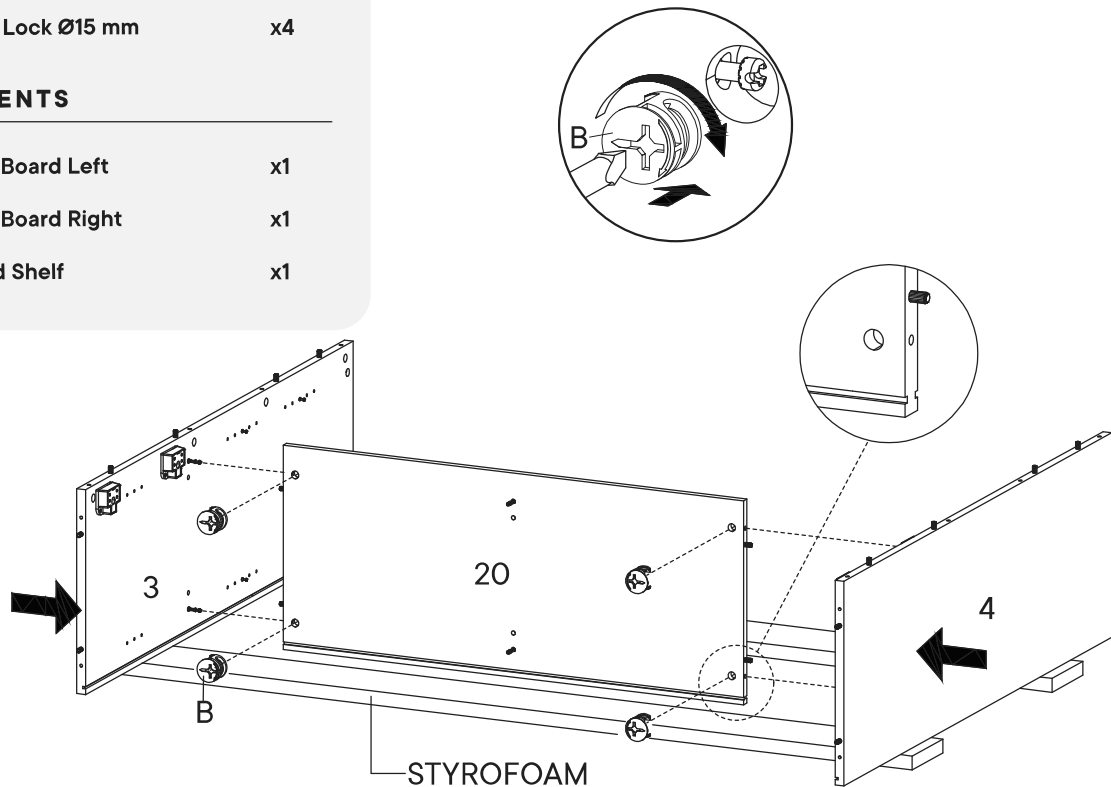

Step 6



HARDWARE

B Cam Lock Ø15 mm x2

P Screw Cap Ø15 mm (Short) x2



COMPONENTS

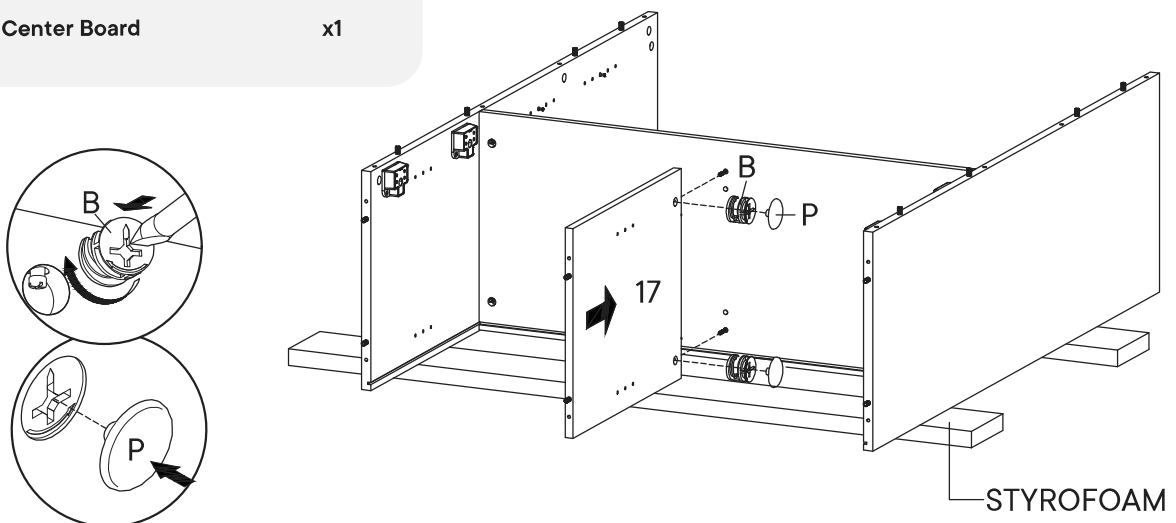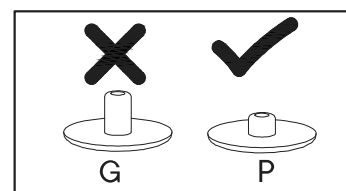17 Center Board x1








Step 7

HARDWARE

- | | | |
|---|-------------------|----|
|  | Allen key | x1 |
|  | Screw M 7 x 50 mm | x6 |


COMPONENTS

- | | | |
|---|--------------|----|
|  | Bottom Board | x1 |
|  | Back Board 2 | x1 |

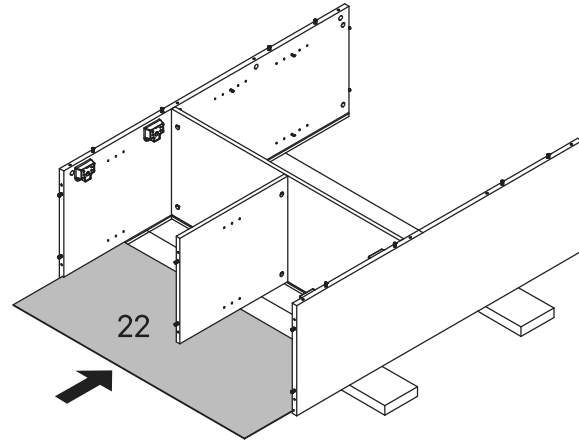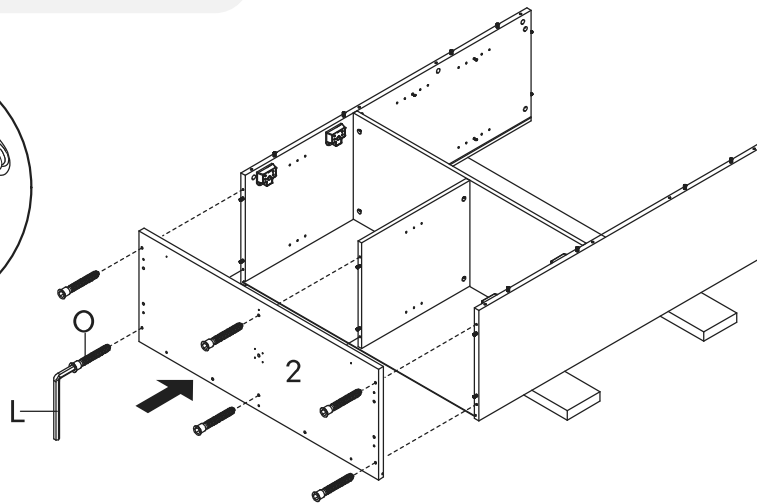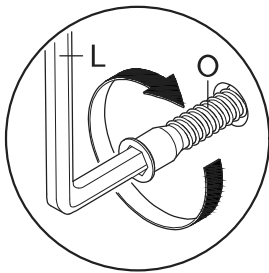






Step 8

HARDWARE

- | | | |
|---|---------------------------------------|----|
|  | Cam Bolt $\varnothing 6 \times 35$ mm | x8 |
|---|---------------------------------------|----|

COMPONENTS

- | | | |
|---|---------------|----|
|  | Front Skirt 1 | x1 |
|  | Front Skirt 2 | x1 |

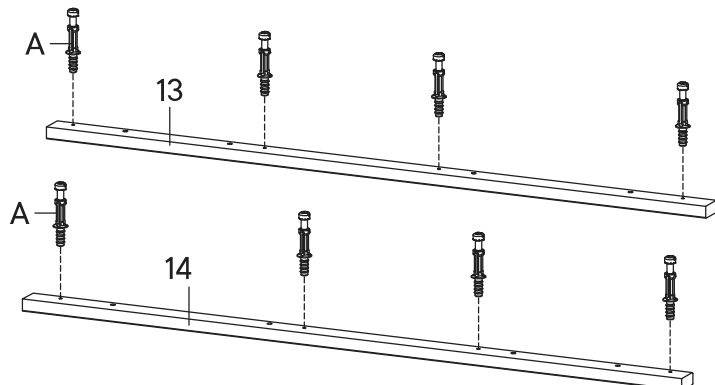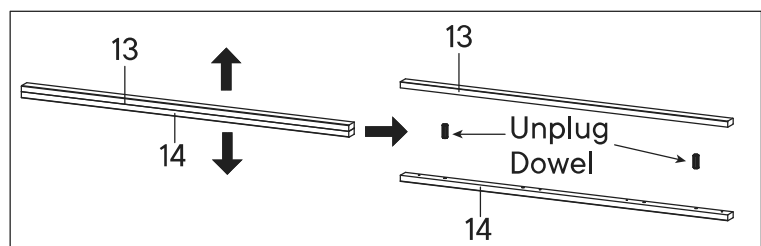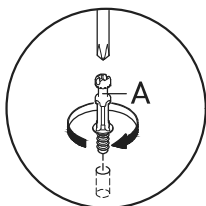

Step 9


HARDWARE

B Cam Lock Ø15 mm x8

COMPONENTS

13 Front Skirt 1 x1

14 Front Skirt 2 x1

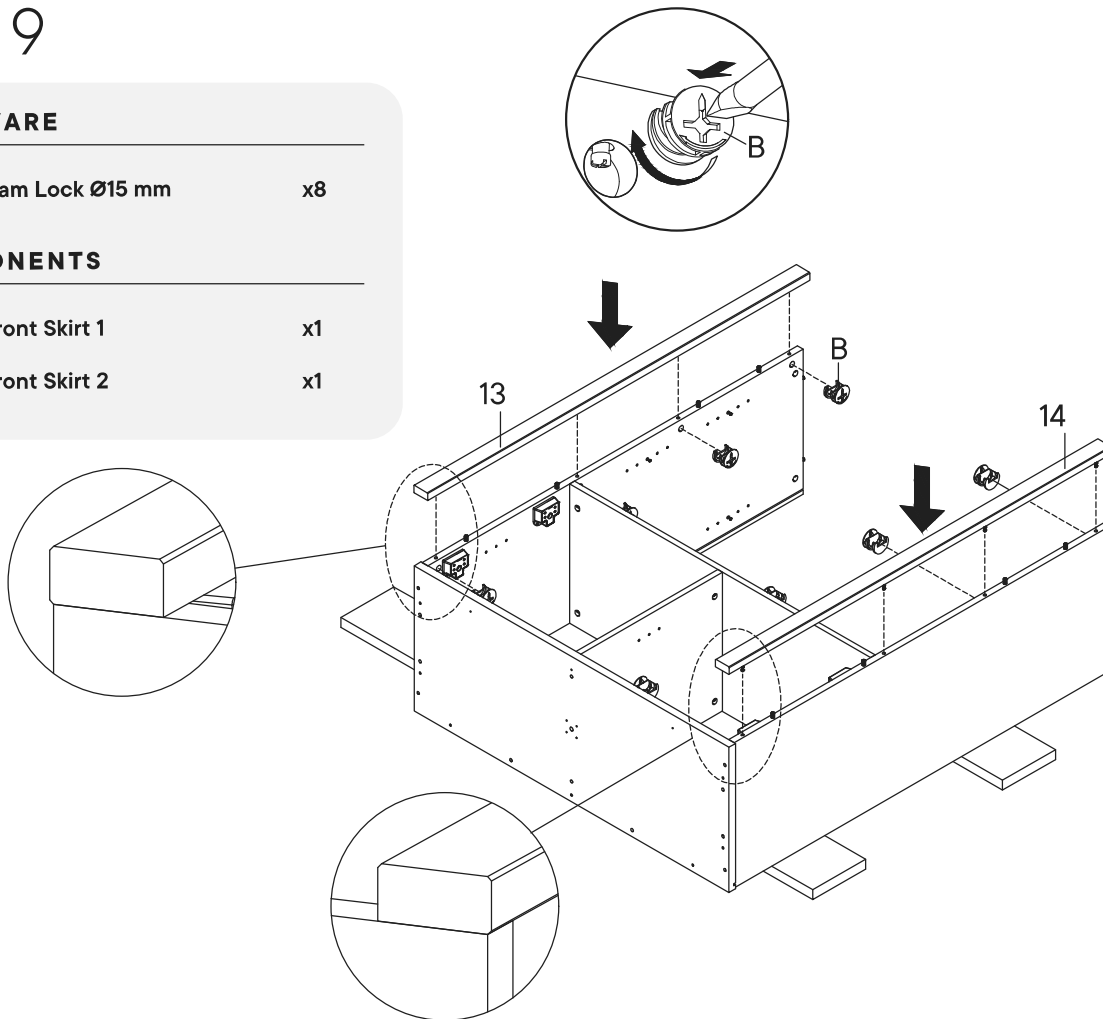

Step 10


HARDWARE

H Screw M 4.5 x 12.5 mm x12

BC410 Corner Brace x4

COMPONENTS

11 Bottom Skirt 3 x2

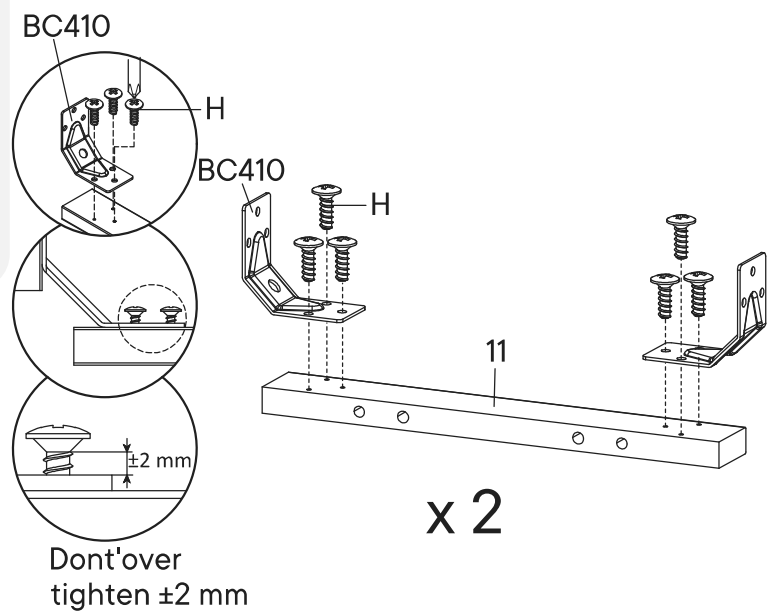


Step 11

HARDWARE

D	Screw M 6.4 x 14 mm	x3
L	Allen Key	x1
Q	Plate	x3

COMPONENTS

9	Bottom Skirt 1	x1
----------	----------------	----

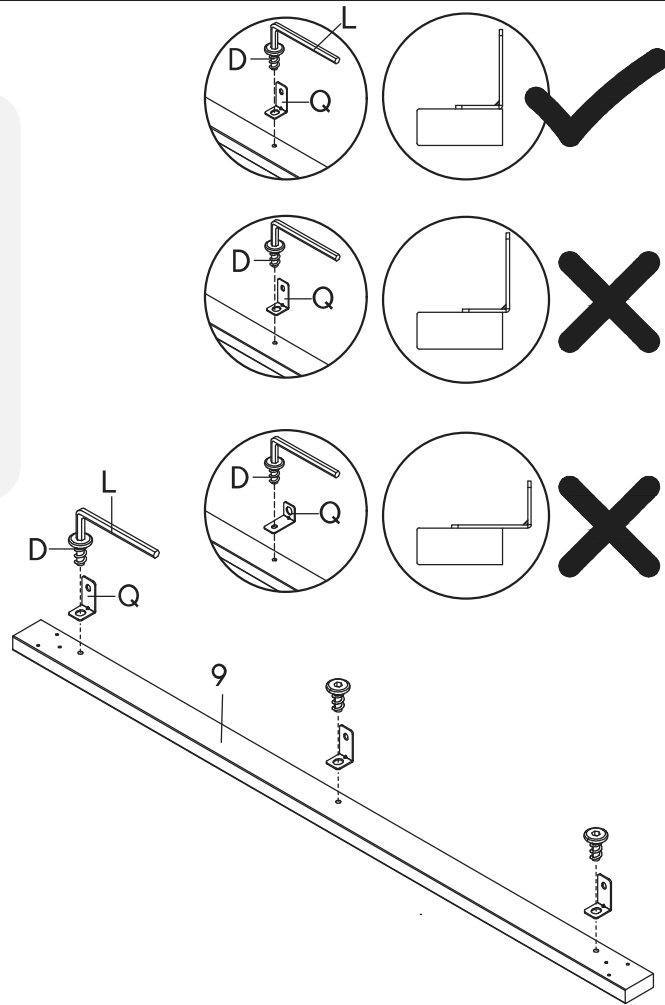


Step 12

HARDWARE

H	Screw M 4.5 x 12.5 mm	x6
----------	-----------------------	----

COMPONENTS

10	Bottom Skirt 2	x1
11	Bottom Skirt 3	x2

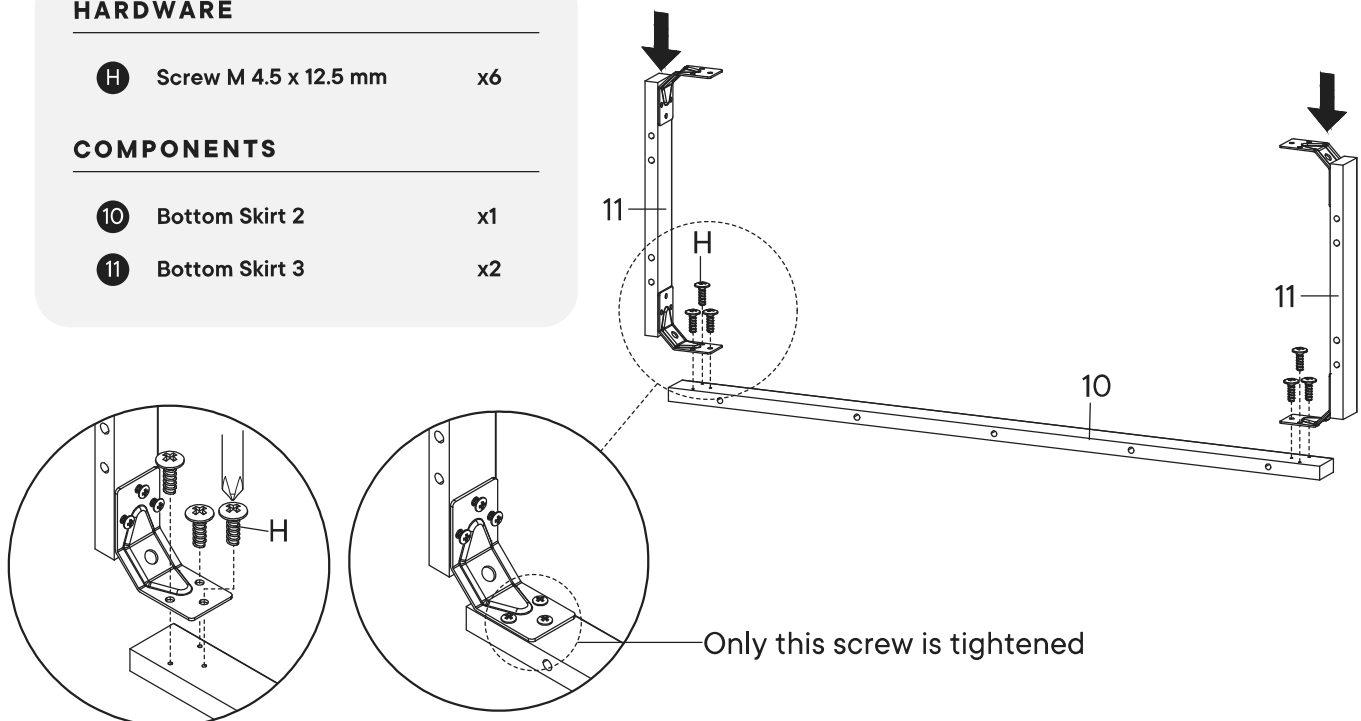


Step 13

HARDWARE

H Screw M 4.5 x 12.5 mm x6

COMPONENTS


9 Bottom Skirt 1 x1

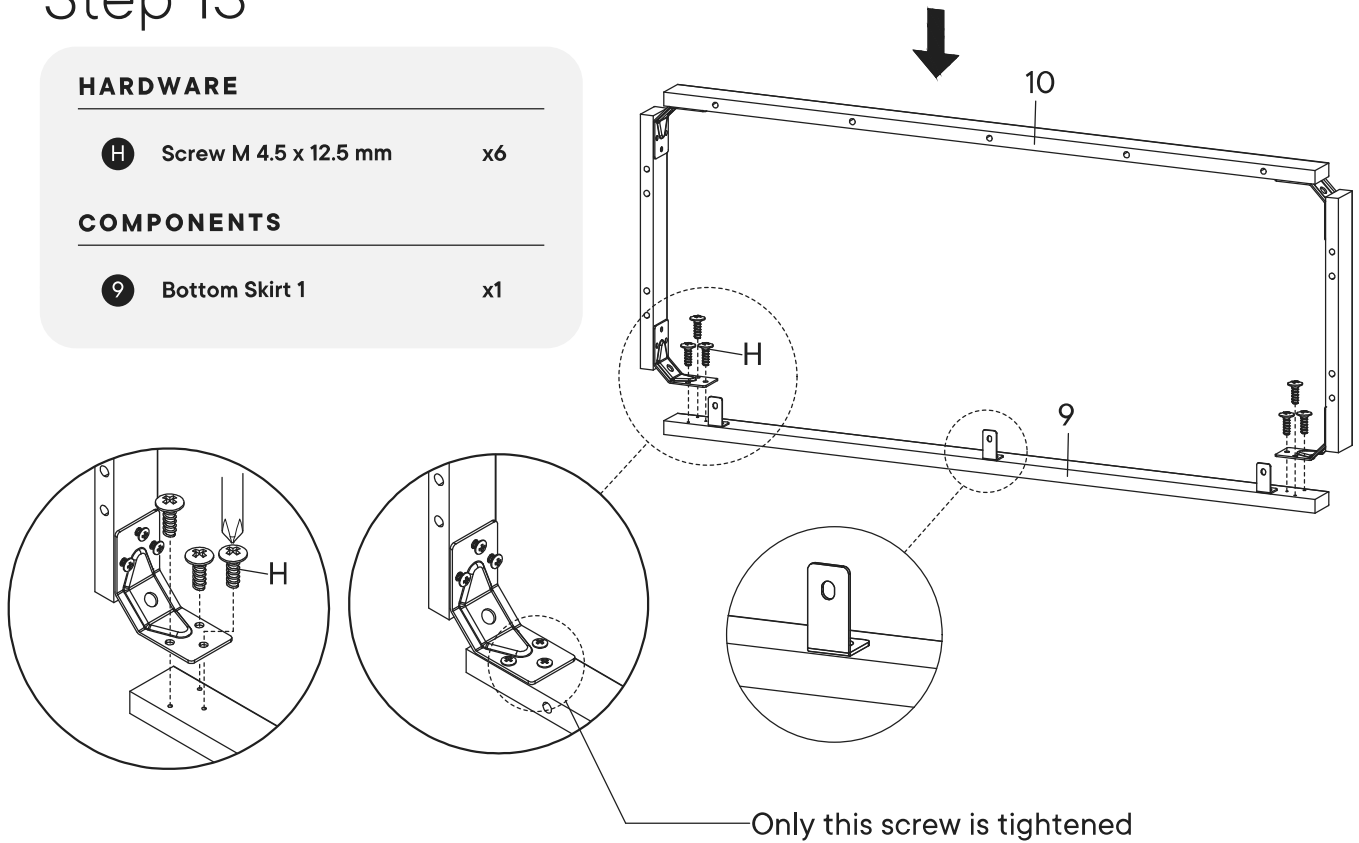

Step 14

HARDWARE


C Wood Dowel Ø8 x 30 mm x6

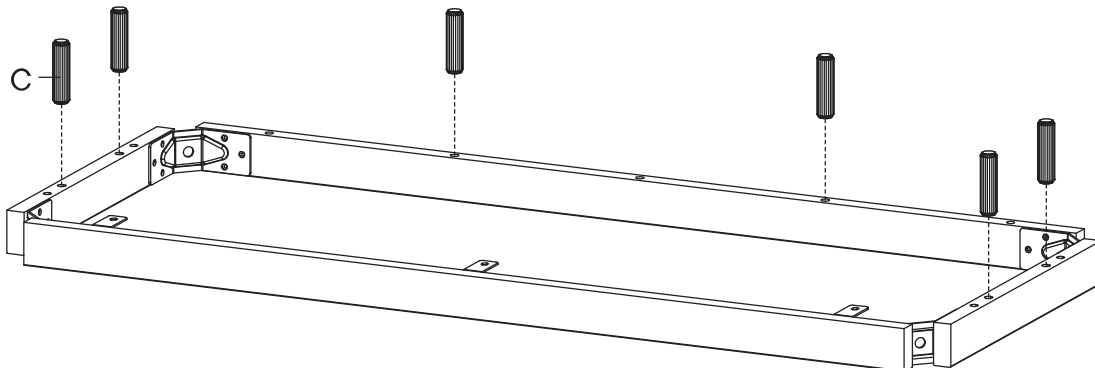

Step 15

HARDWARE

- L** Allen Key x1
- R** Screw M 6.4 x 53 mm x7

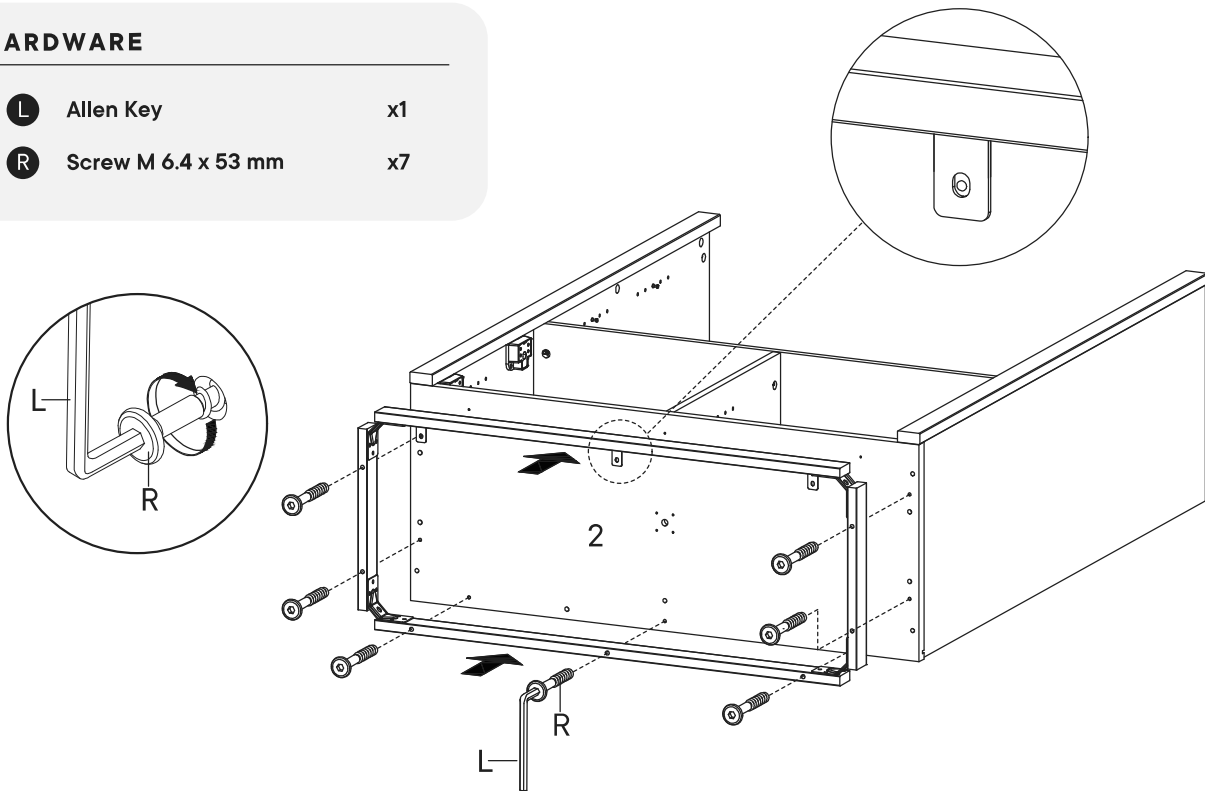




Step 16

HARDWARE

- W** Flange Nut x4
- X** Wrench x1

COMPONENTS



- 12** Leg x4

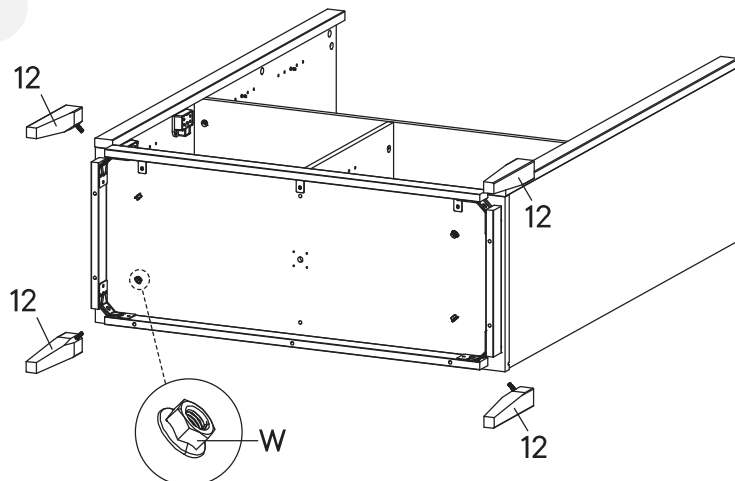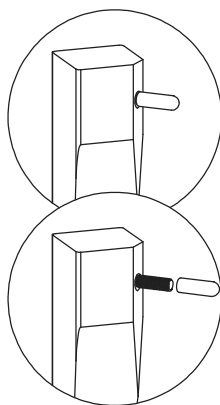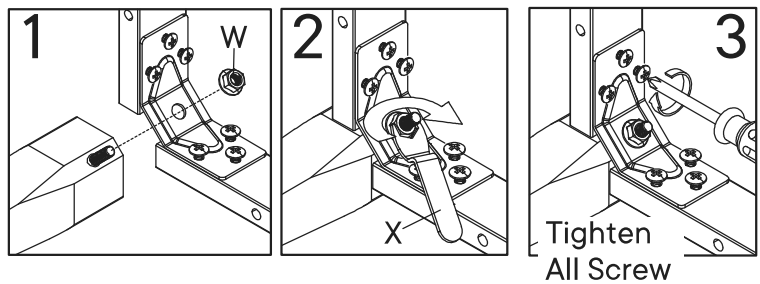


Step 17

HARDWARE

H	Screw M 4.5 x 12.5 mm	x7
S	Floor Protector	x4
PM3	Mounting Plate	x1

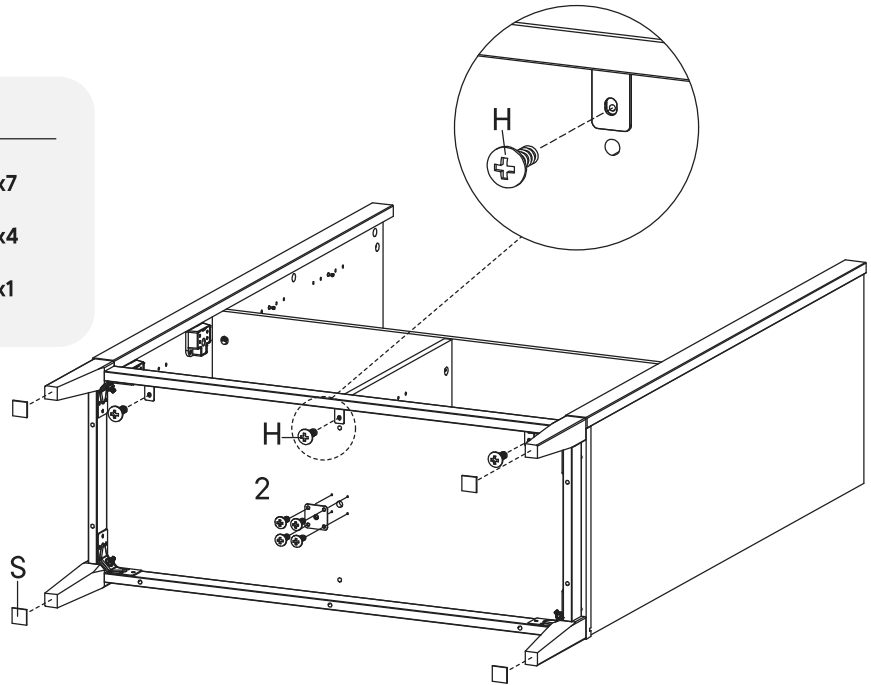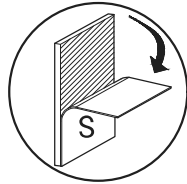



Mounting Plate
Sitting Correct Potition

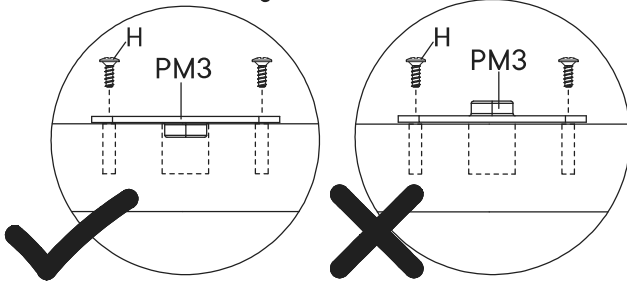

Step 18

COMPONENTS

LC20A1	Center Leg	x1
---------------	------------	----

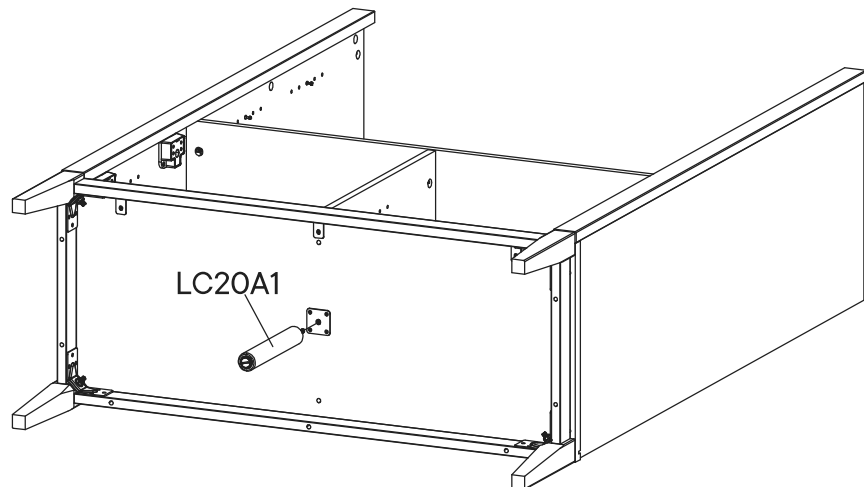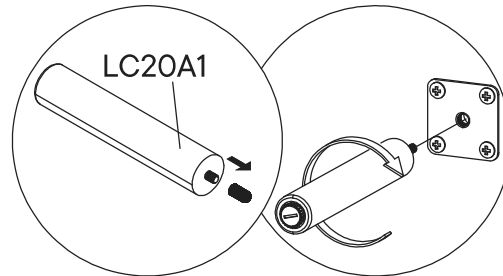

Step 19


HARDWARE

E Joining Strip x2

COMPONENTS

21 Back Board 1 x3

When assembling this component, please ensure the color match color "2"

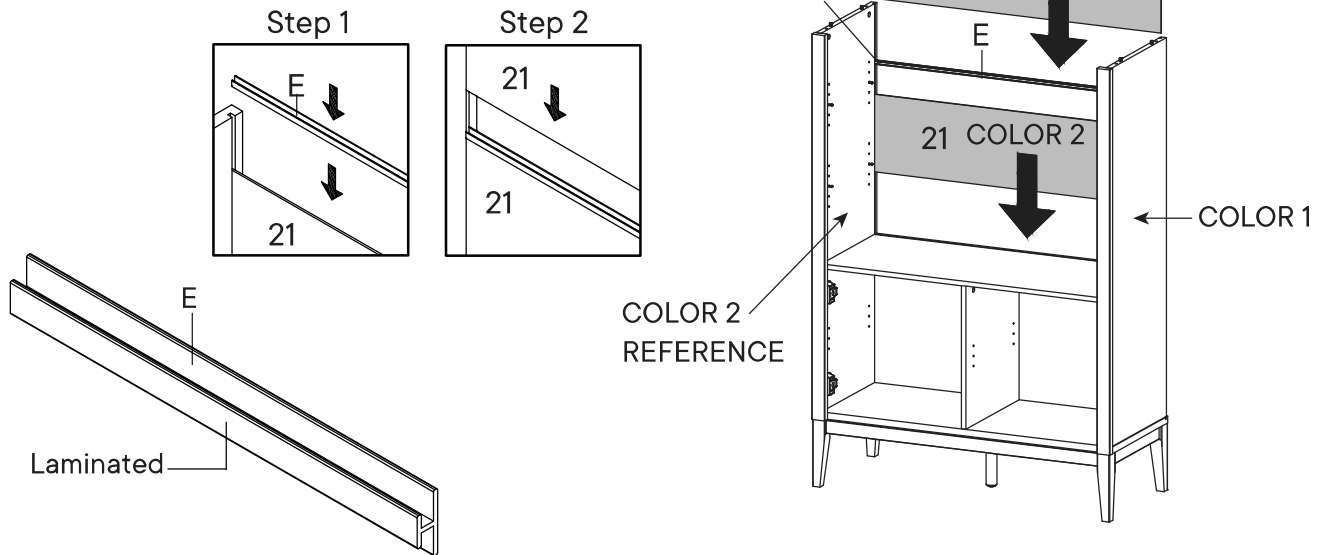

Step 20

HARDWARE

A Cam Bolt $\varnothing 6 \times 35$ mm x8

C Wood Dowel $\varnothing 8 \times 30$ mm x5


COMPONENTS

1 Top Board x1

5 Front Board Hutch x1

6 Support Board Hutch x3

7 Back Board Hutch x1

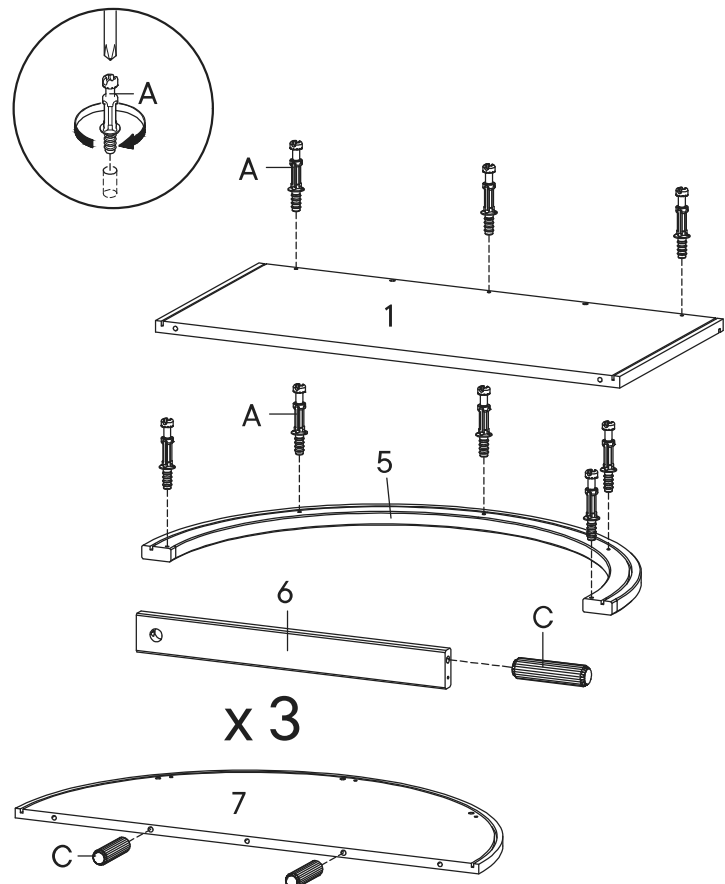

Step 21


HARDWARE

B Cam Lock Ø15 mm x3

COMPONENTS

5 Front Board Hutch x1

6 Support Board Hutch x3

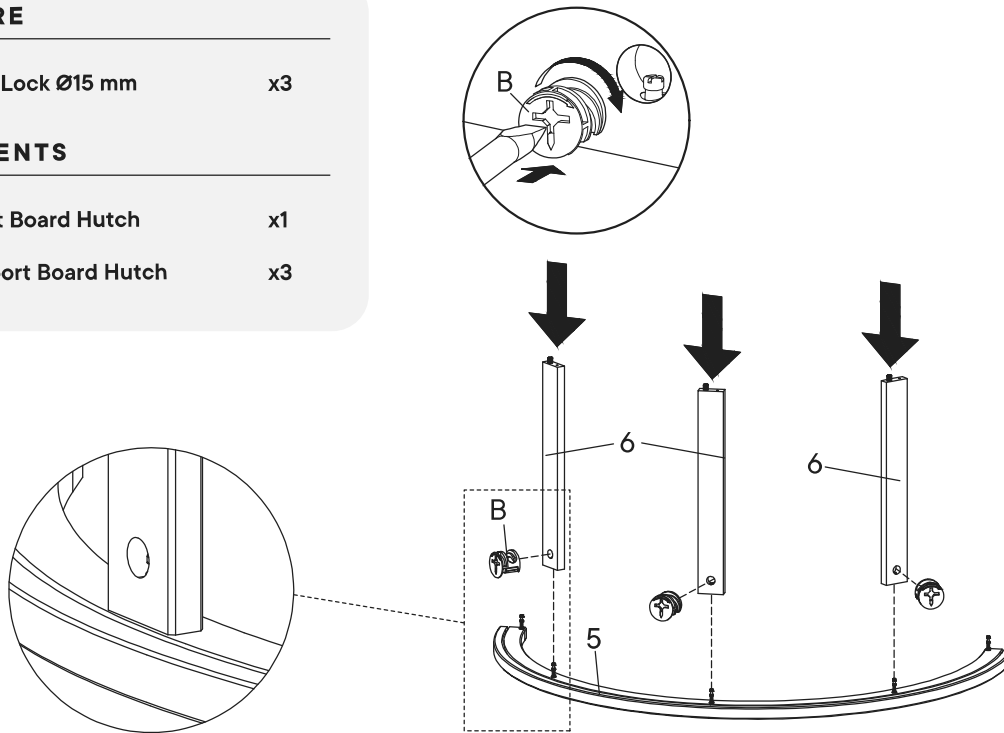


Step 22

HARDWARE

V Screw M 8 x 39 mm x3

COMPONENTS


7 Back Board Hutch x1

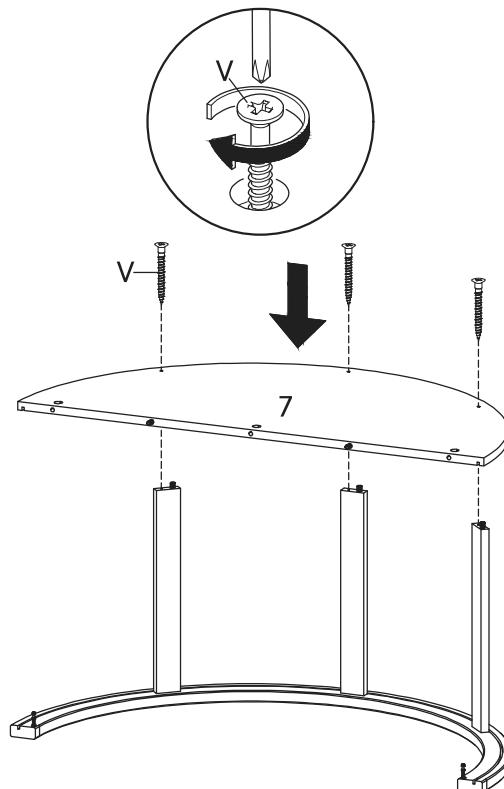

Step 23

COMPONENTS

8 PVC Board x1

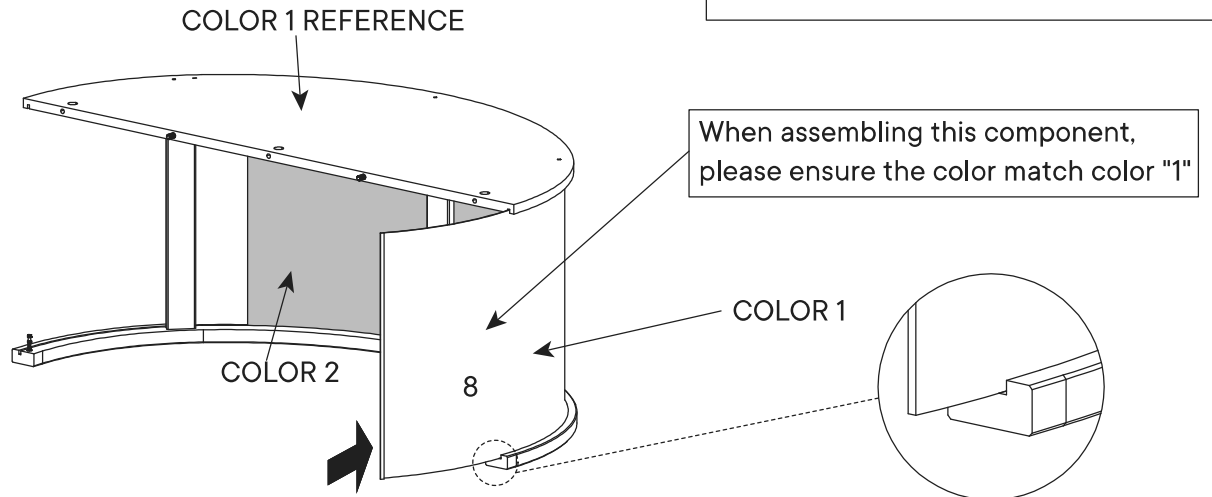



Step 24

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS


1 Top Board x1

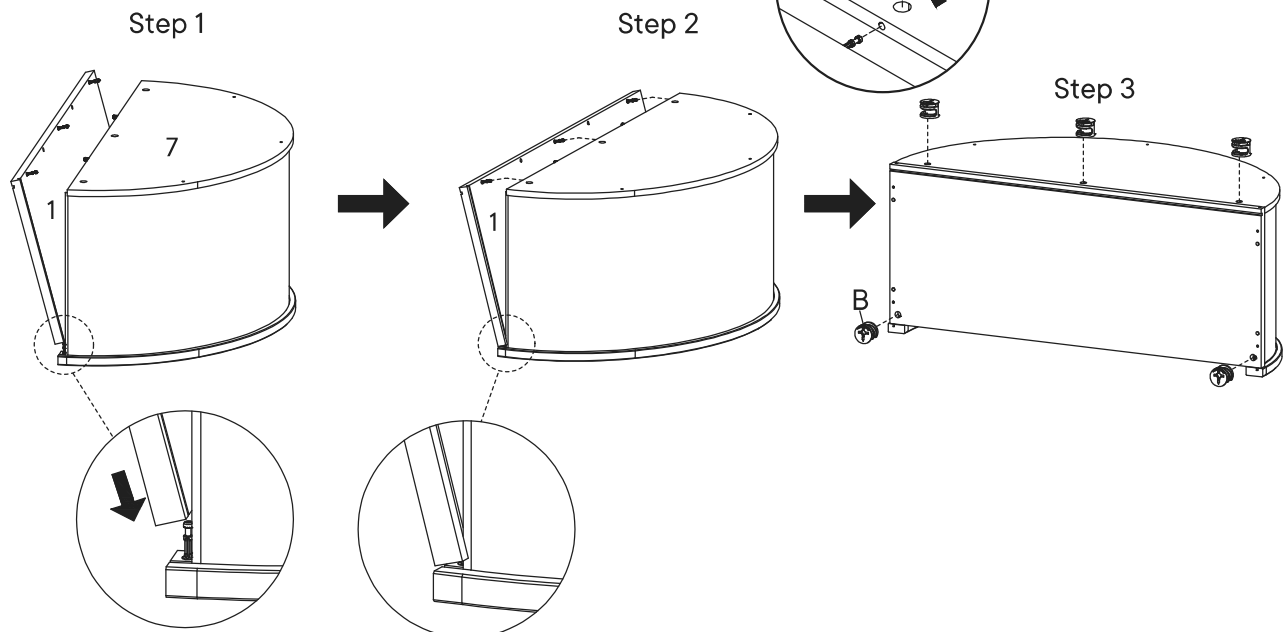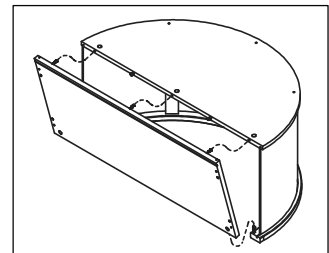

Step 25

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x4

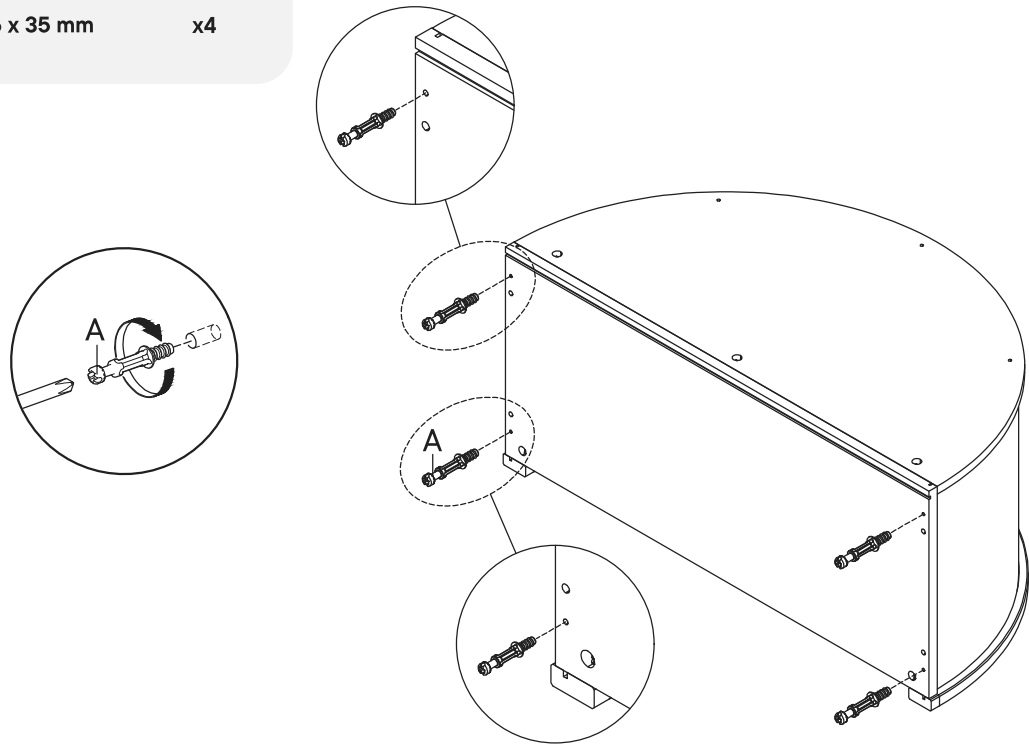

Step 26

HARDWARE



- B** Cam Lock Ø15 mm x4
G Screw Cap Ø15 mm (Long) x4

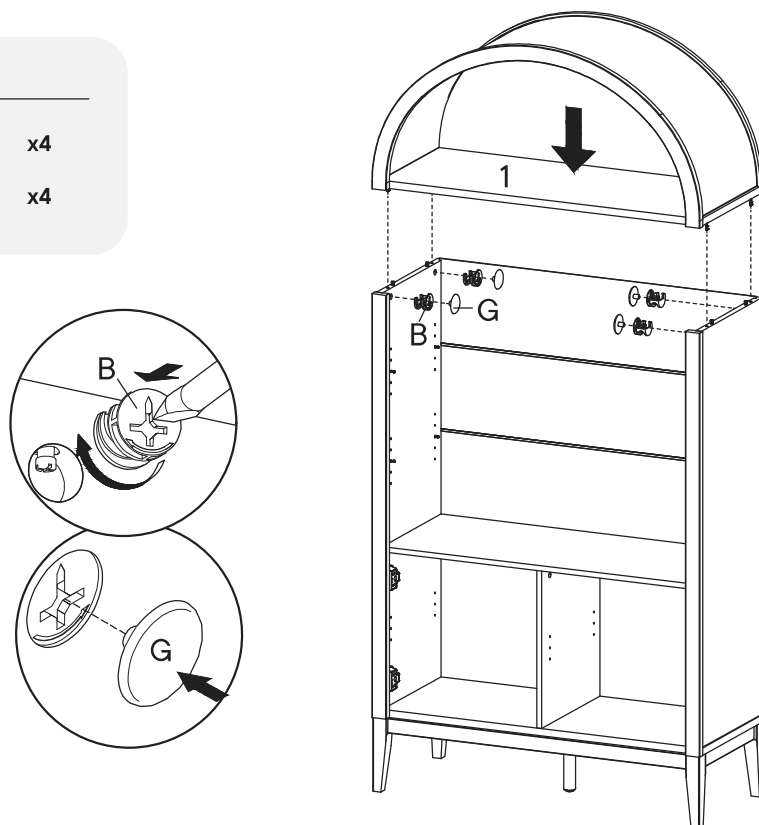

Step 27

COMPONENTS

- 18 Adjustable Shelf 1 x2

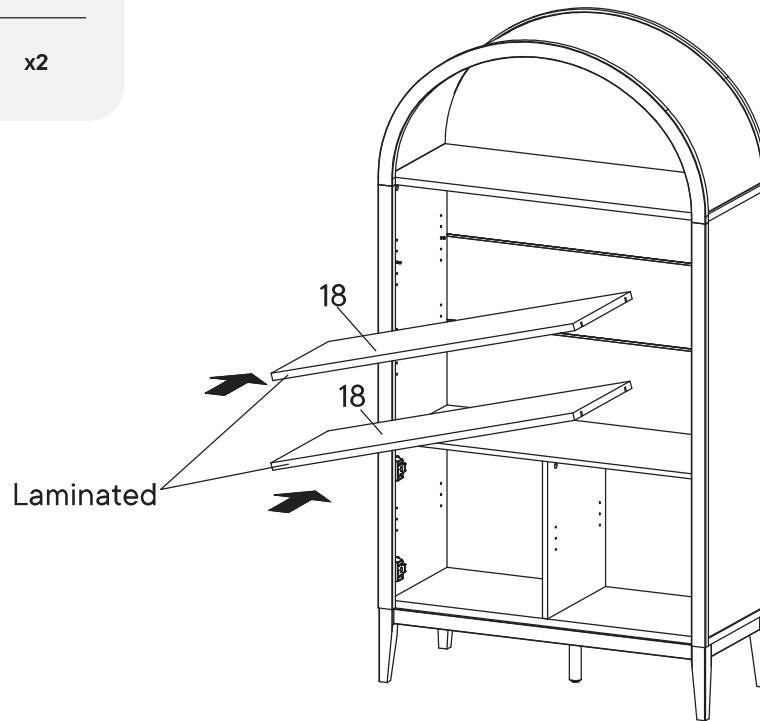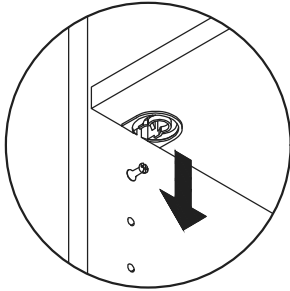




Step 28

HARDWARE

- G Screw Cap Ø15 mm (Long) x8
T Shelf Pin x8

COMPONENTS

- 19 Adjustable Shelf 2 x2

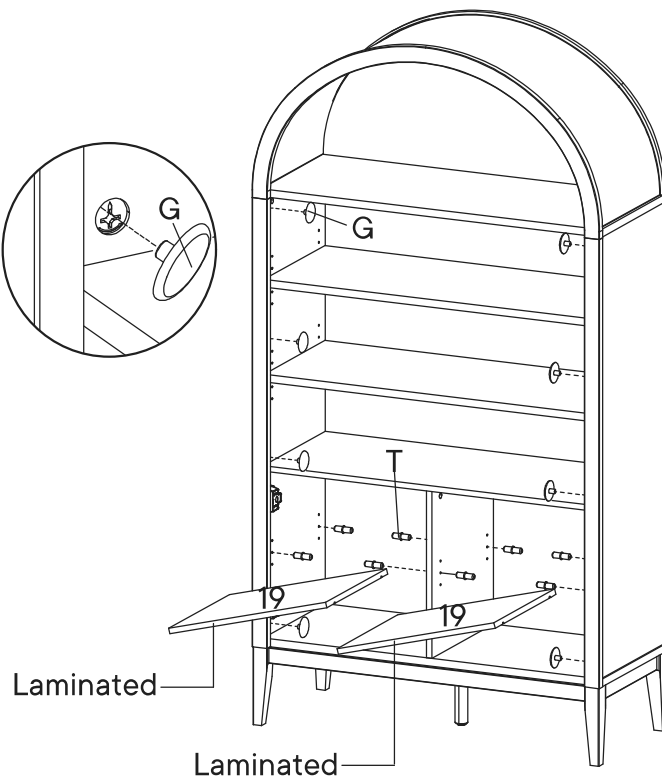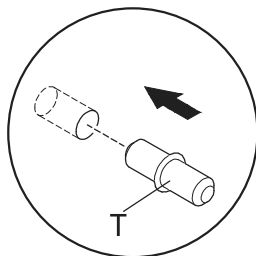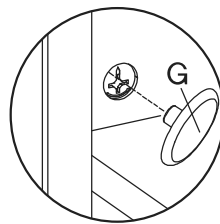

Step 29

HARDWARE




H Screw M 4.5 x 12.5 mm x8

HS26C Hinge x4

COMPONENTS

15 Door Left x1

16 Door Right x1

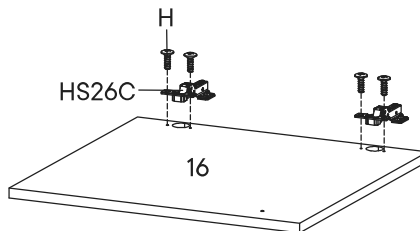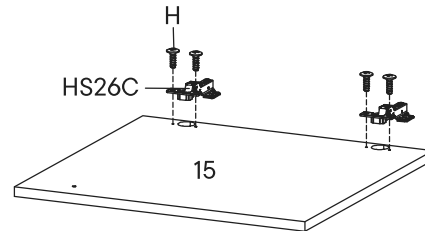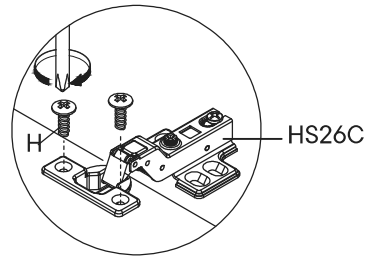

Step 30

HARDWARE

H Screw M 4.5 x 12.5 mm x16




I Handle x2

J Screw M 4 x 22 mm x2

COMPONENTS

15 Door Left x1


16 Door Right x1

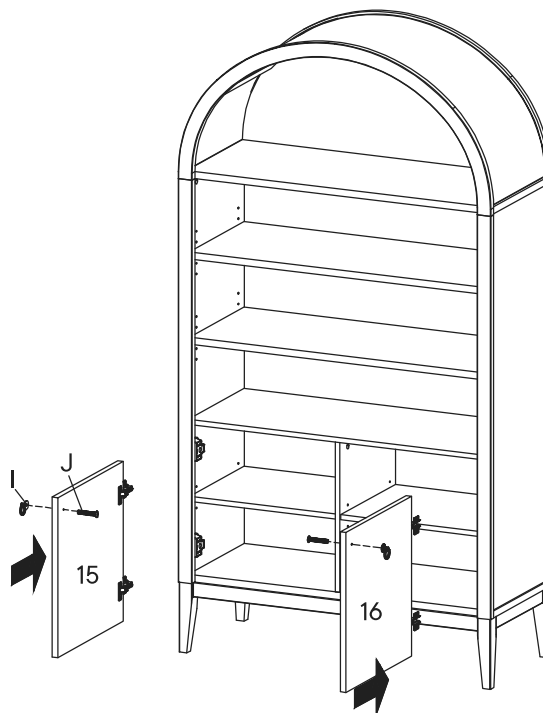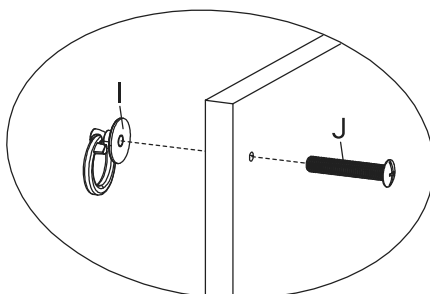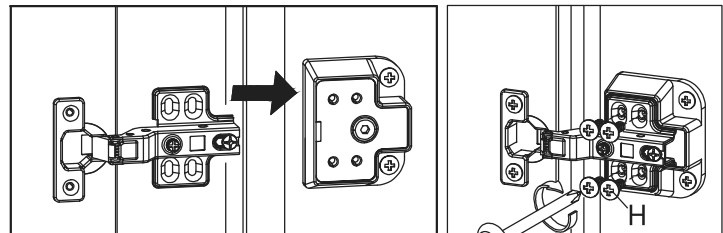


Step 31

HARDWARE

- | | | |
|----------|-----------------------|-----|
| M | Wedge | x26 |
| N | Screw M 3.5 x 15.5 mm | x26 |

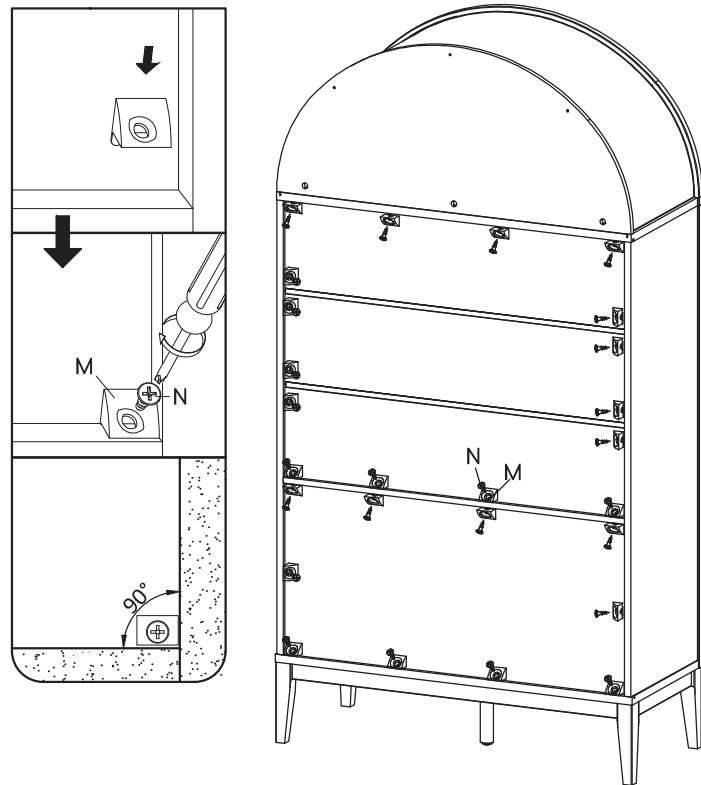

Step 32

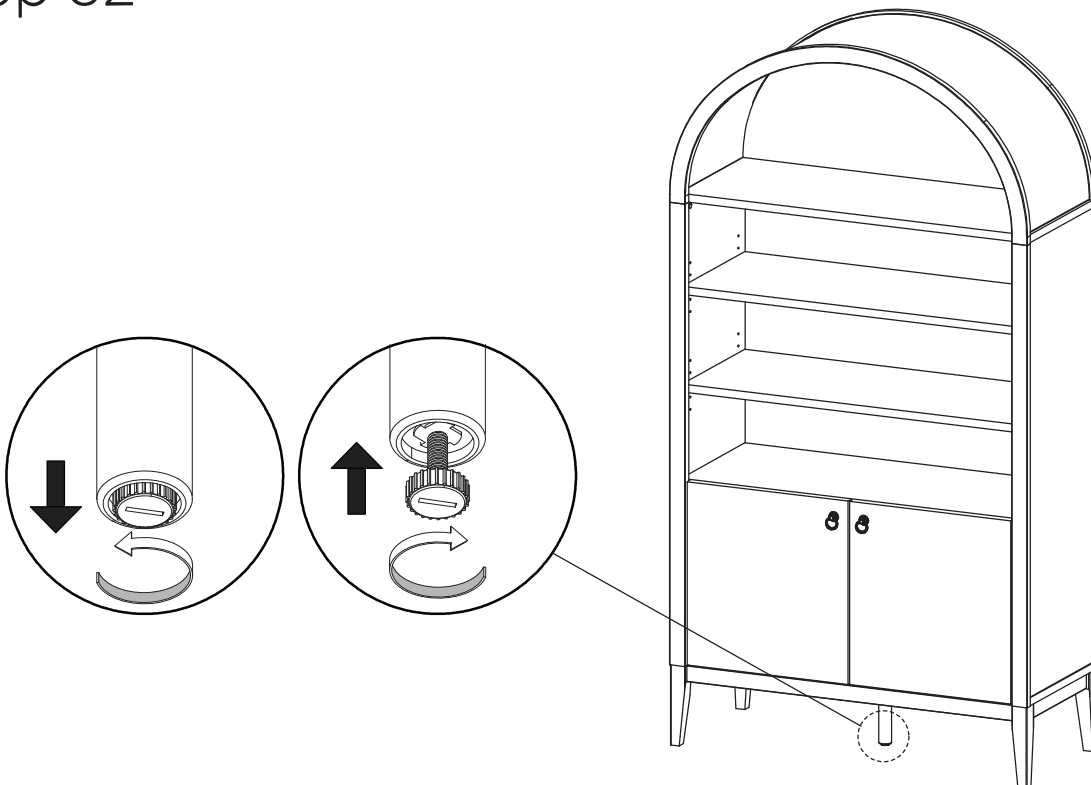



Step 33

HARDWARE



List

x2

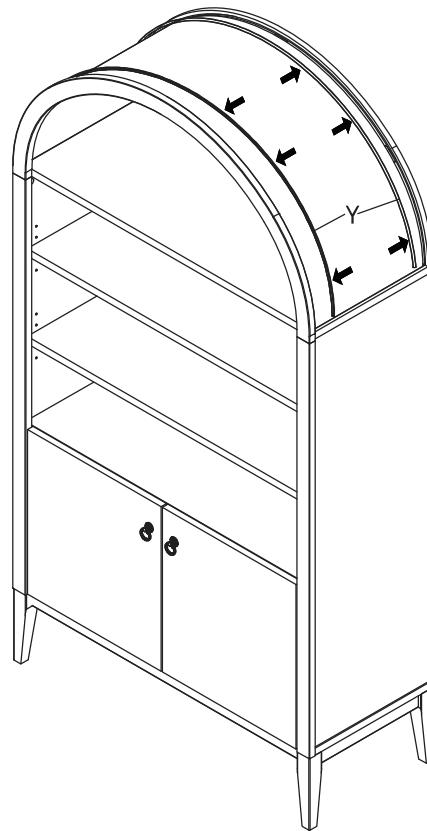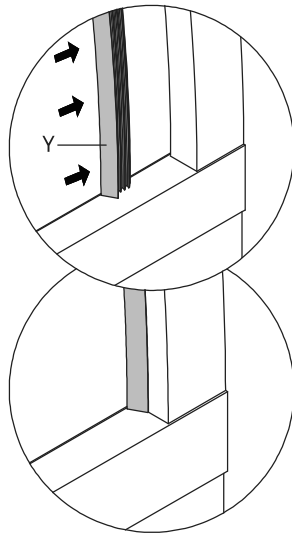

Great job!

Bookcase assembly is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.


Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

Max 20 Kg / 44 Lbs

Max 20 Kg / 44 Lbs

Max 20 Kg / 44 Lbs


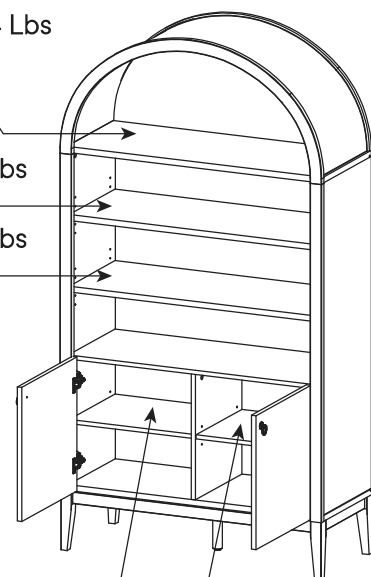


Max 10 Kg / 22 Lbs

CONNECT WITH US!   


Tag us @modway_furniture and #modway for a chance to be featured.

Cabinet Door Alignment

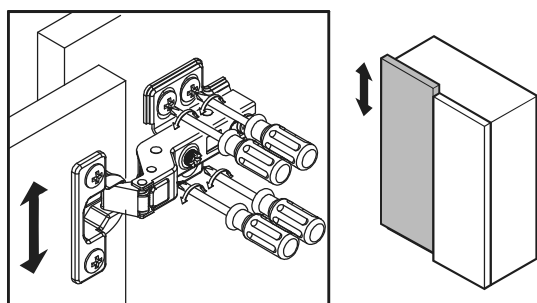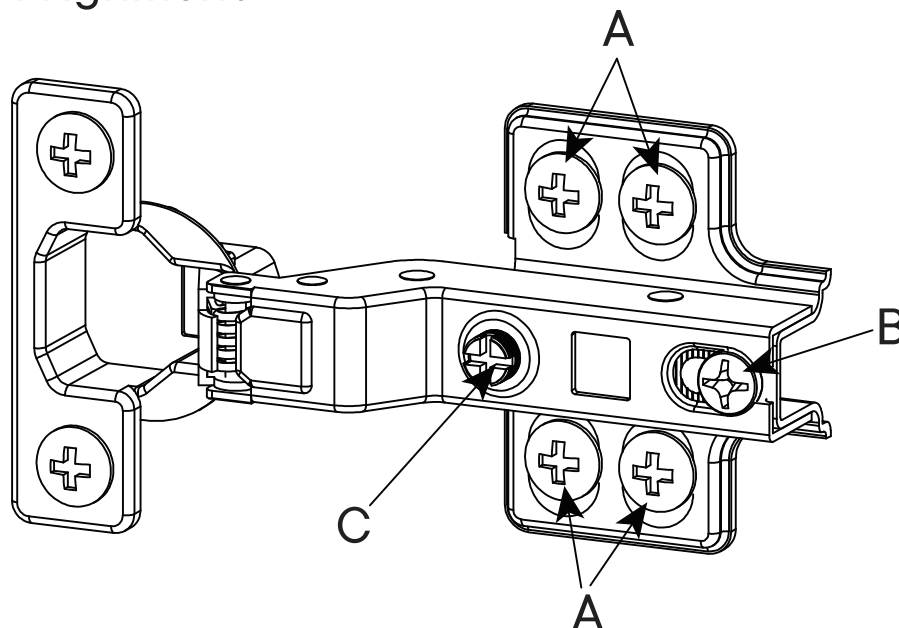


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

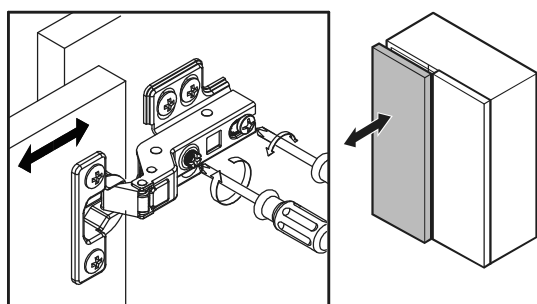

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

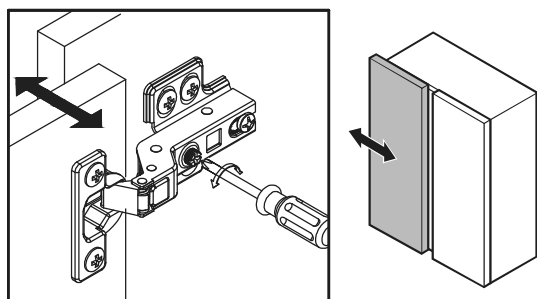

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

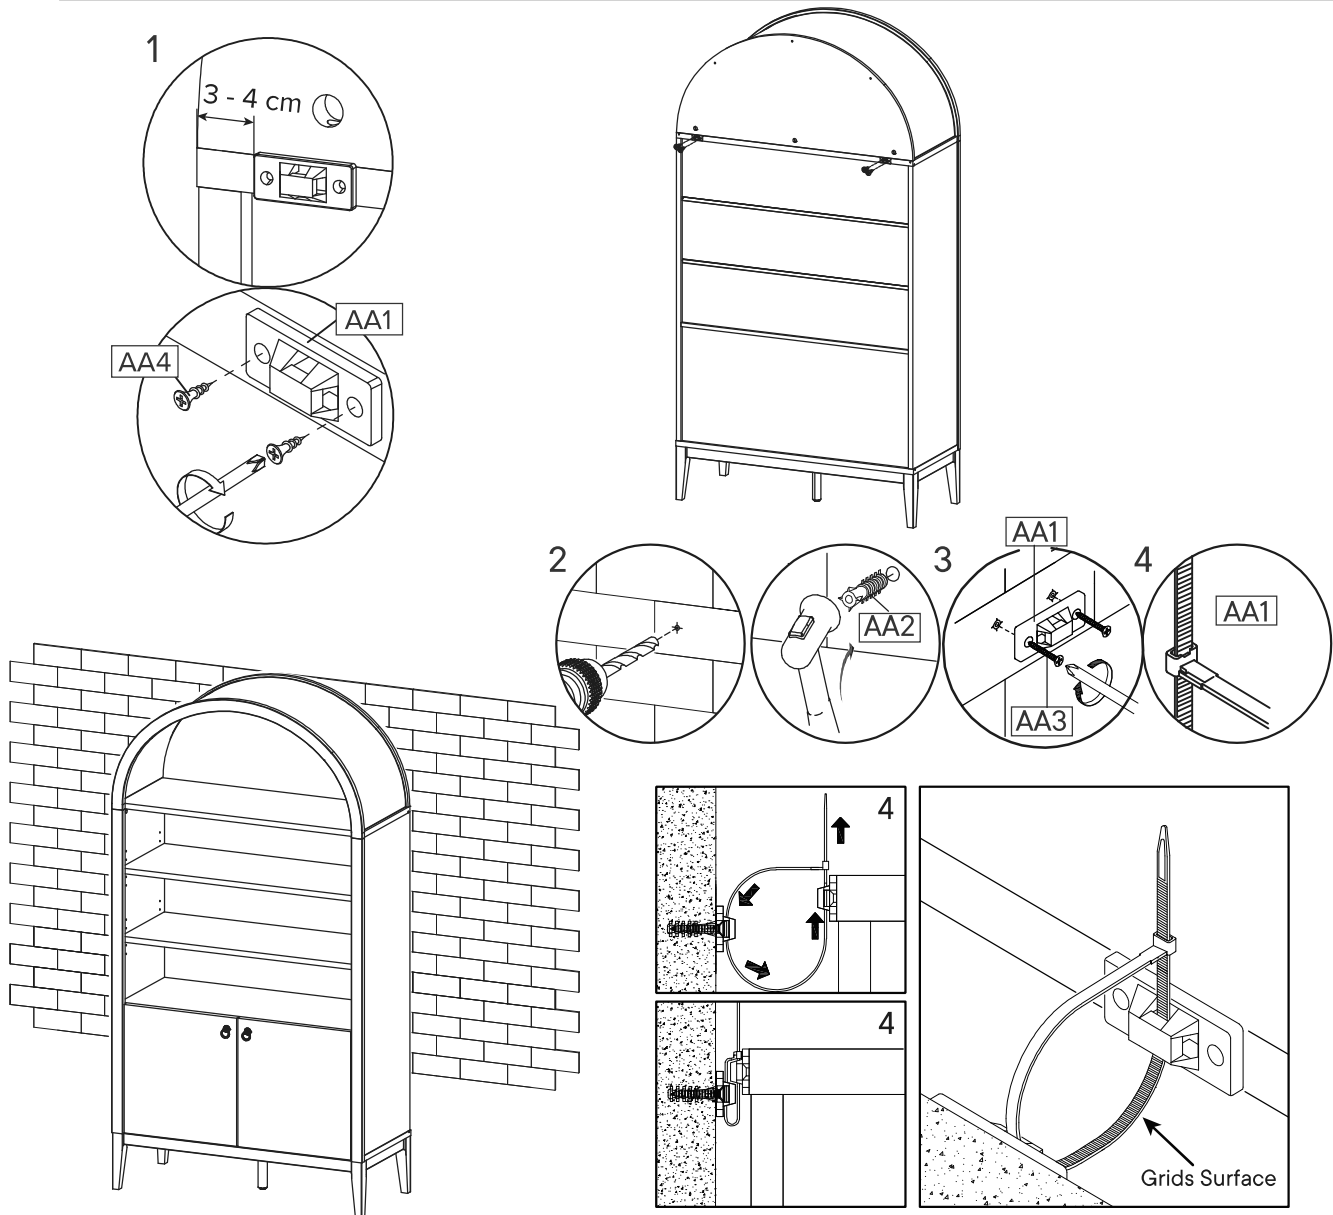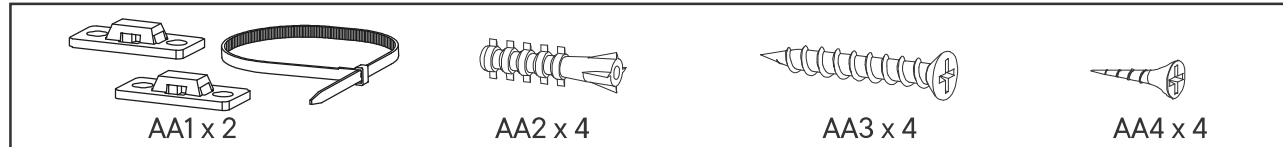

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 – 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.