


Assembly Instructions

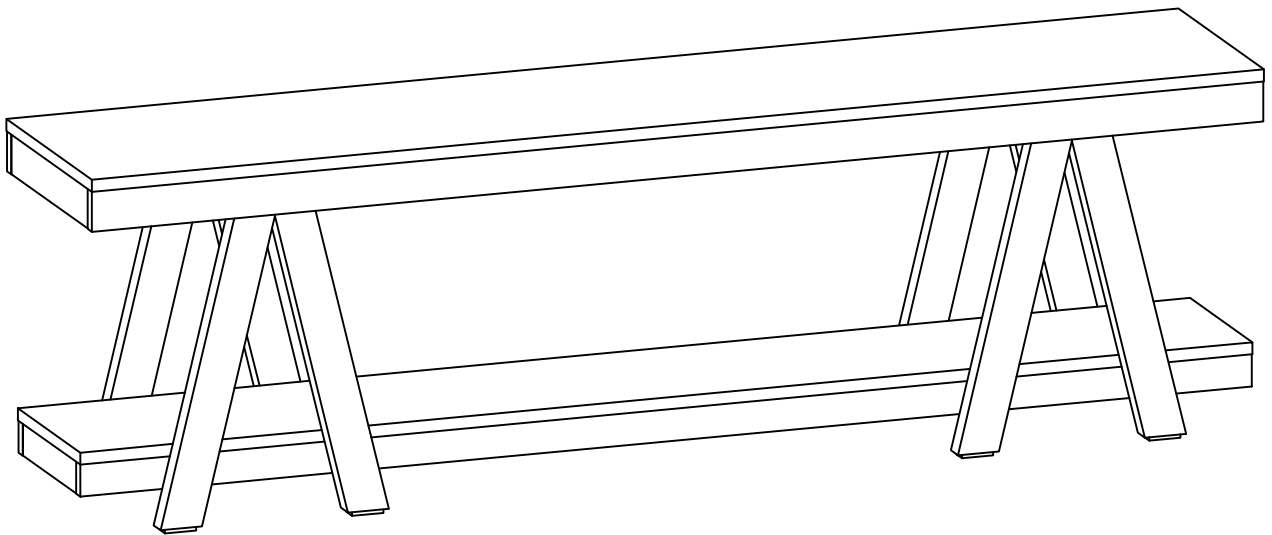




Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

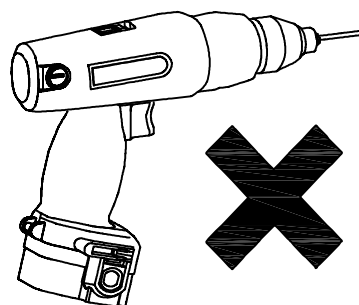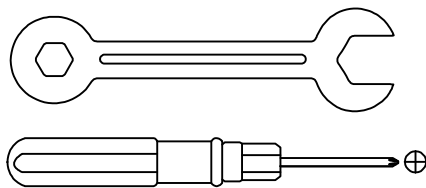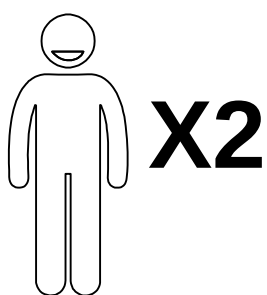



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

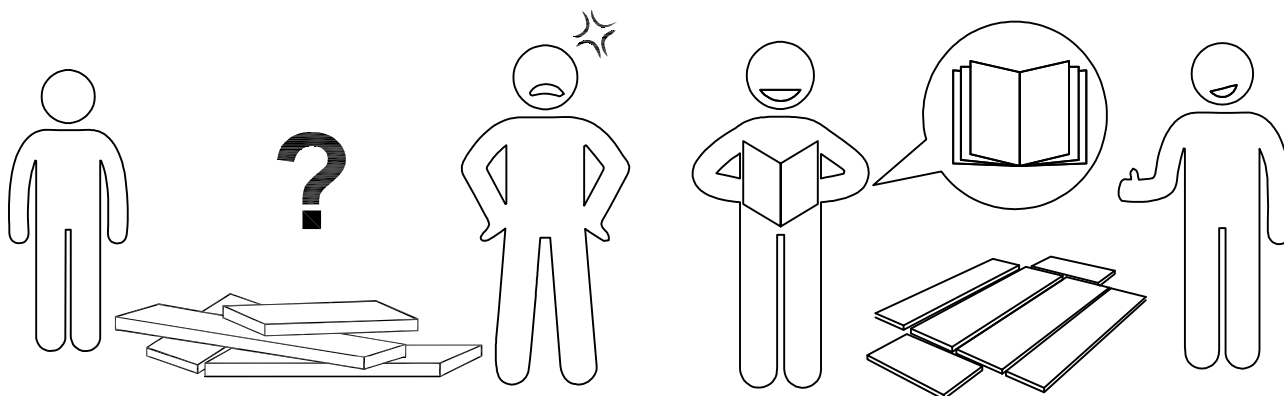

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.




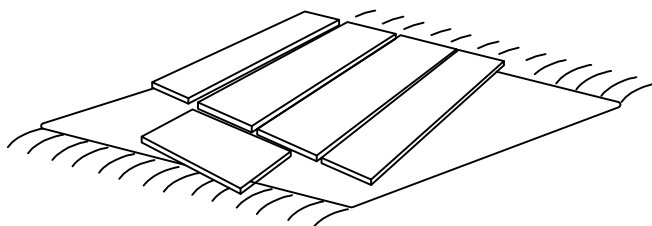
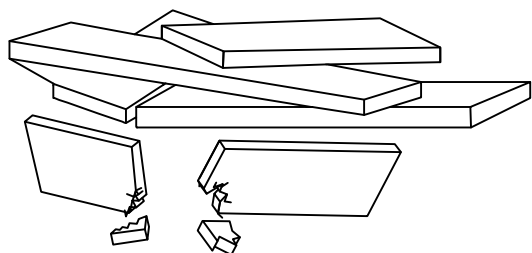


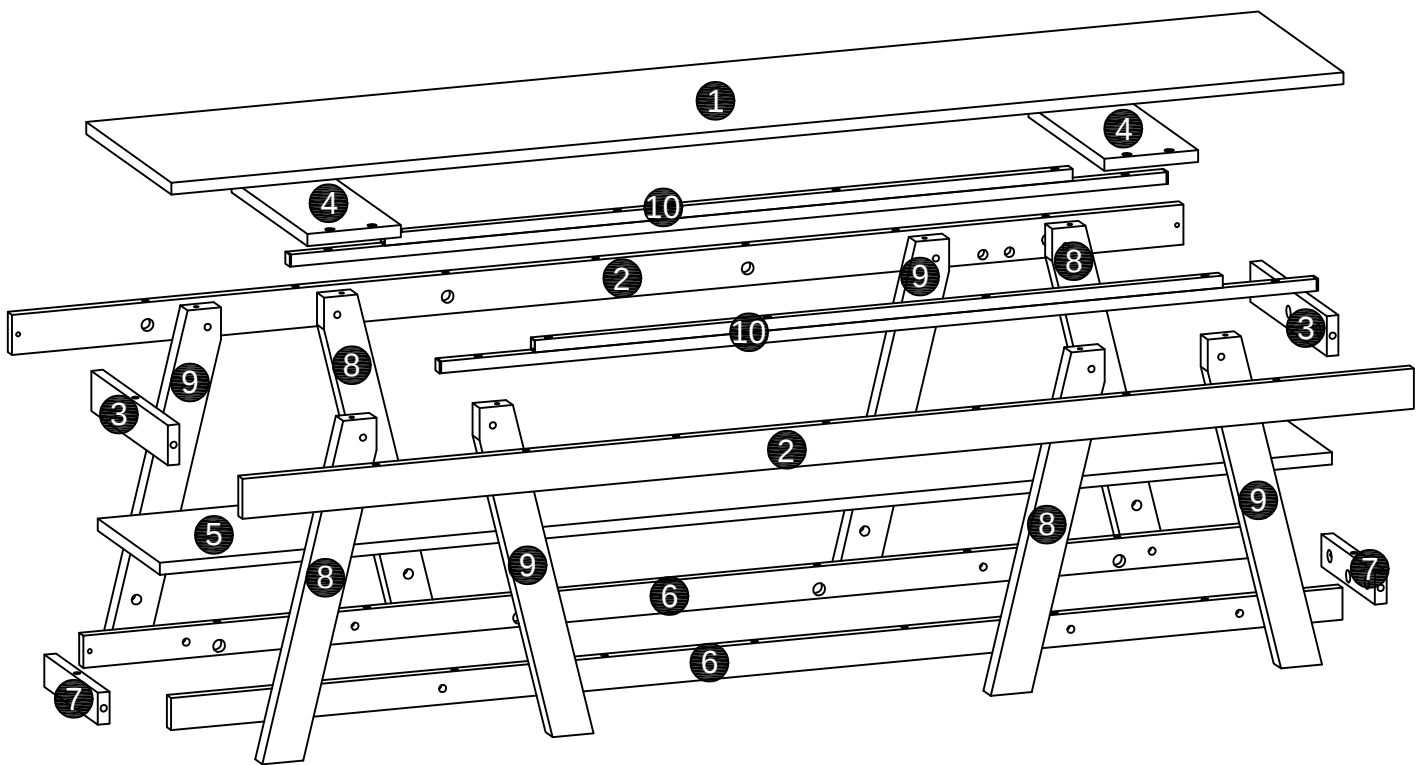


⚠ Caution




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

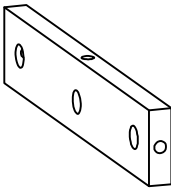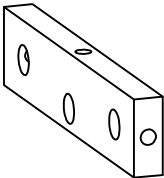1  1 pc	2  2 pcs	3  2 pcs	4  2 pcs
5  1 pc	6  2 pcs	7  2 pcs	8  4 pcs
9  4 pcs	10  2 pcs		

Hardware List


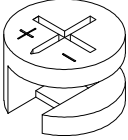
A	B	C	D
 Ø6x35mm	 Ø15x12mm	 Ø8x30mm	 Ø7x37mm
28 pcs+1 pc	28 pcs+1 pc	12 pcs+1 pc	8 pcs+1 pc

E	F	H	I
 M6x40mm	 M6x35mm	 M6x25mm	 M4
8 pcs+1 pc	8 pcs+1 pc	12 pcs+1 pc	1 pc


J	K
	
1 pc	8 pcs

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

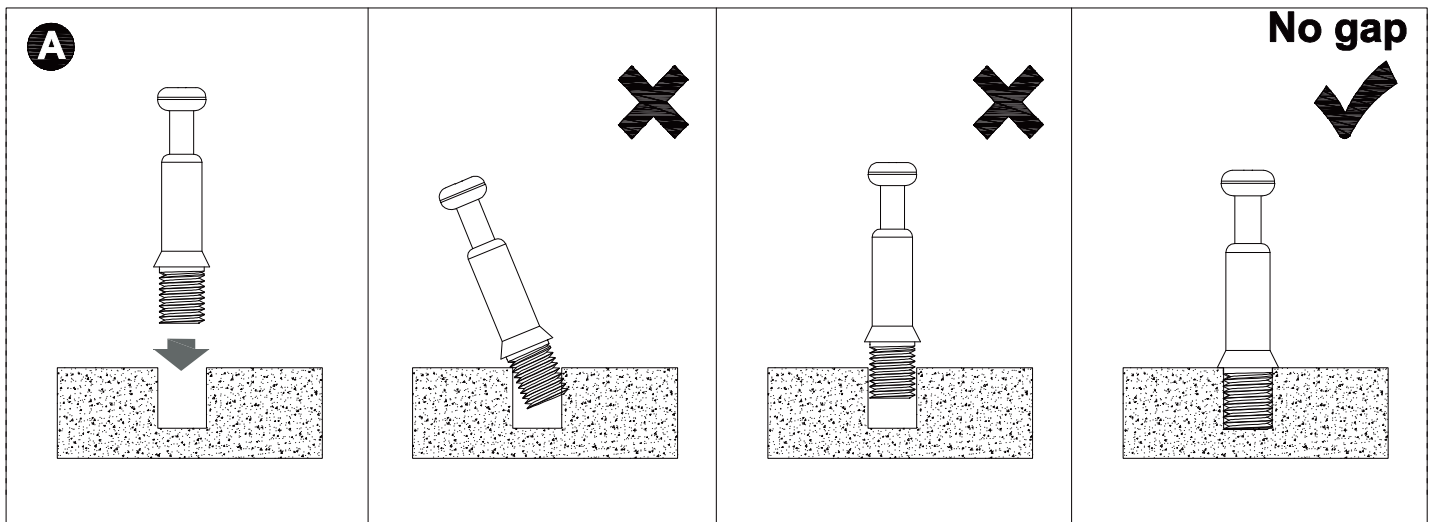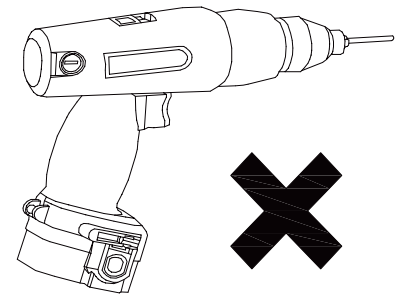

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

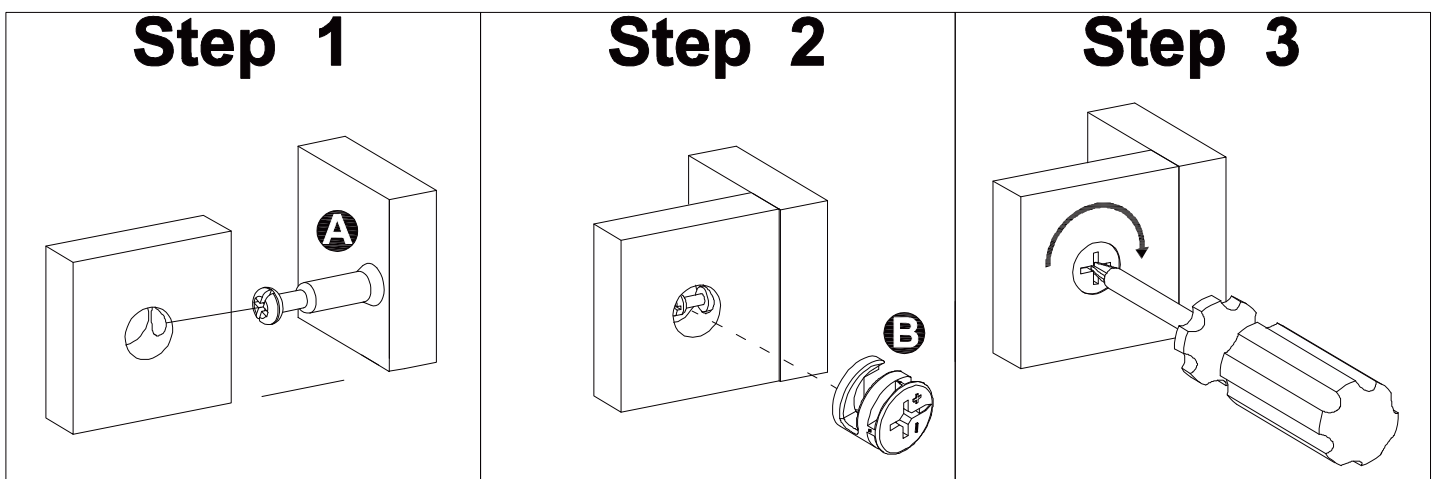


1

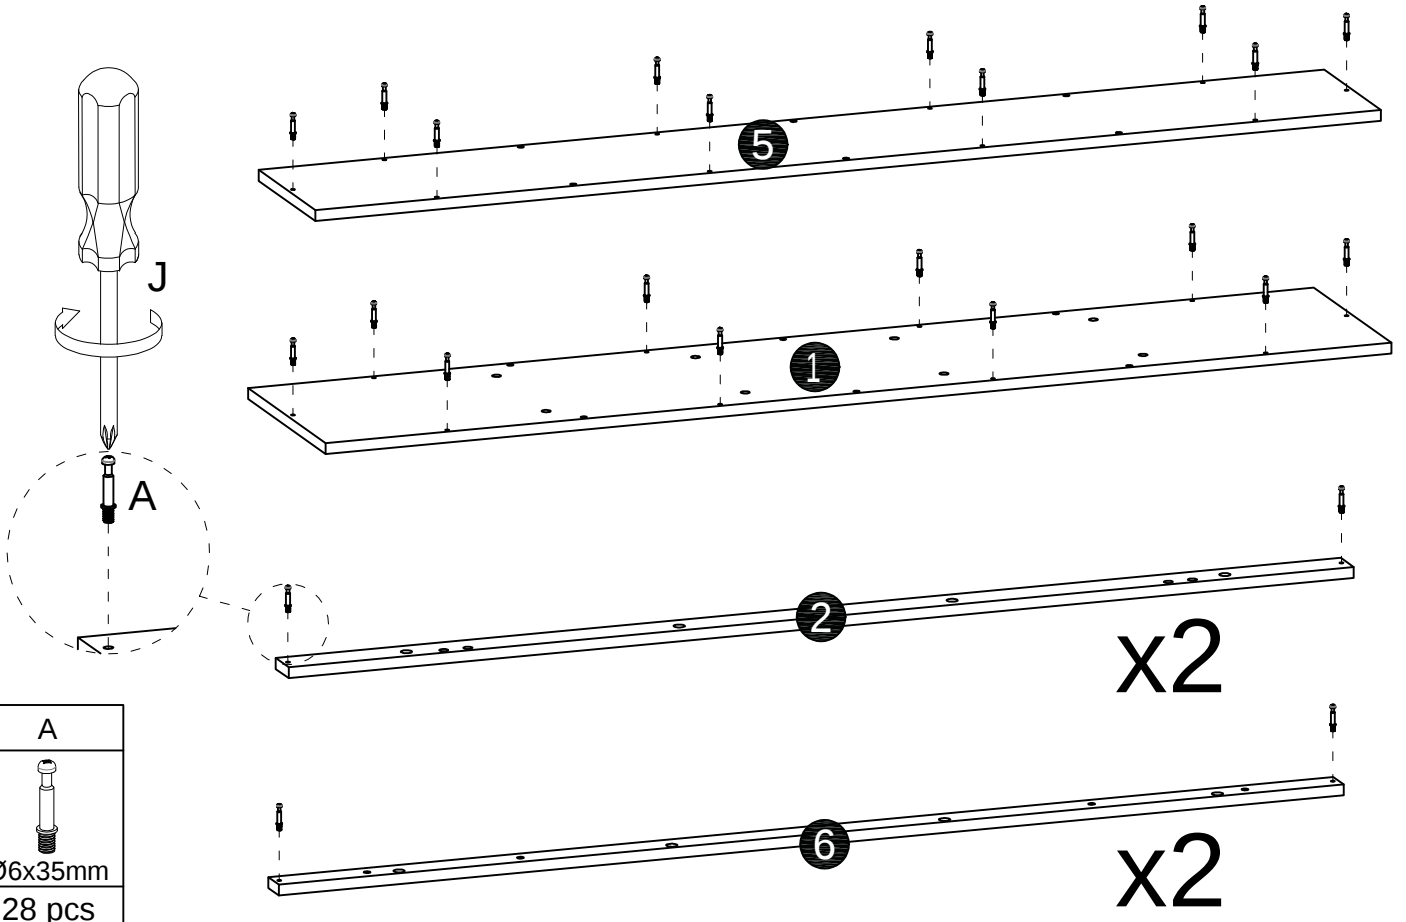

A


Ø6x35mm
28 pcs

2

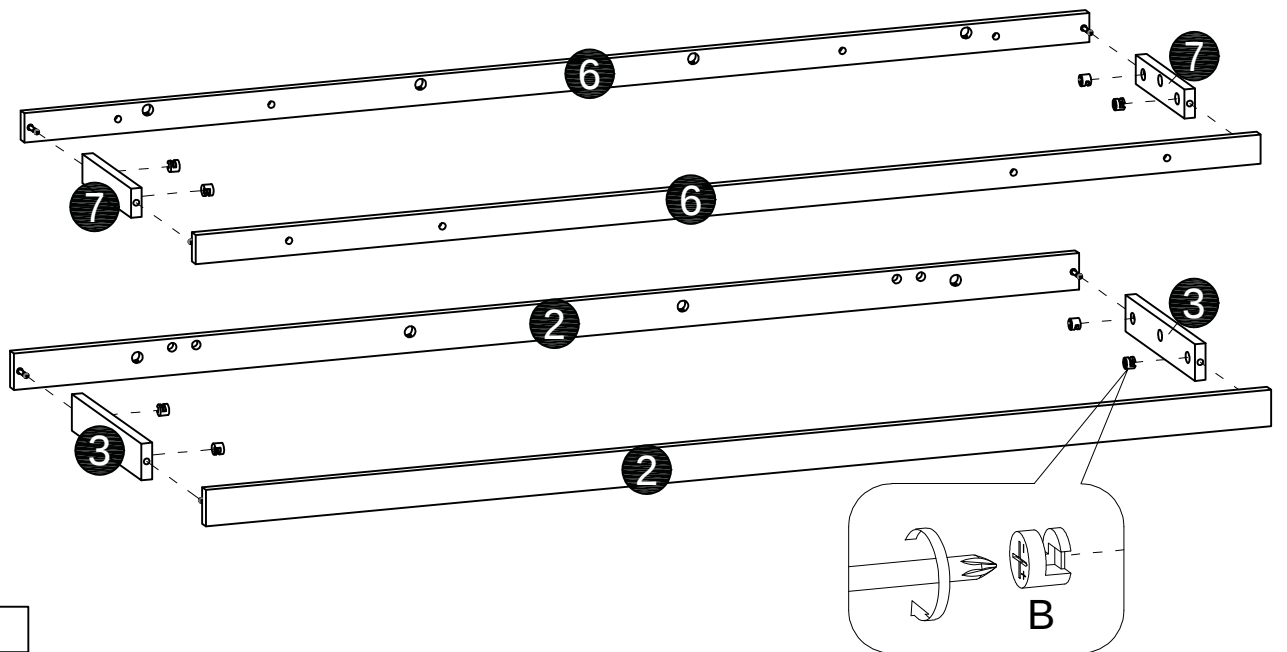


B


Ø15x12mm
8 pcs

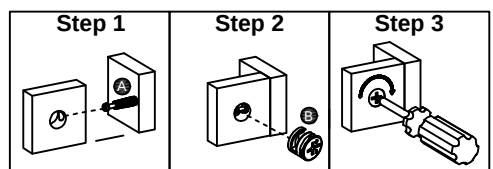


3

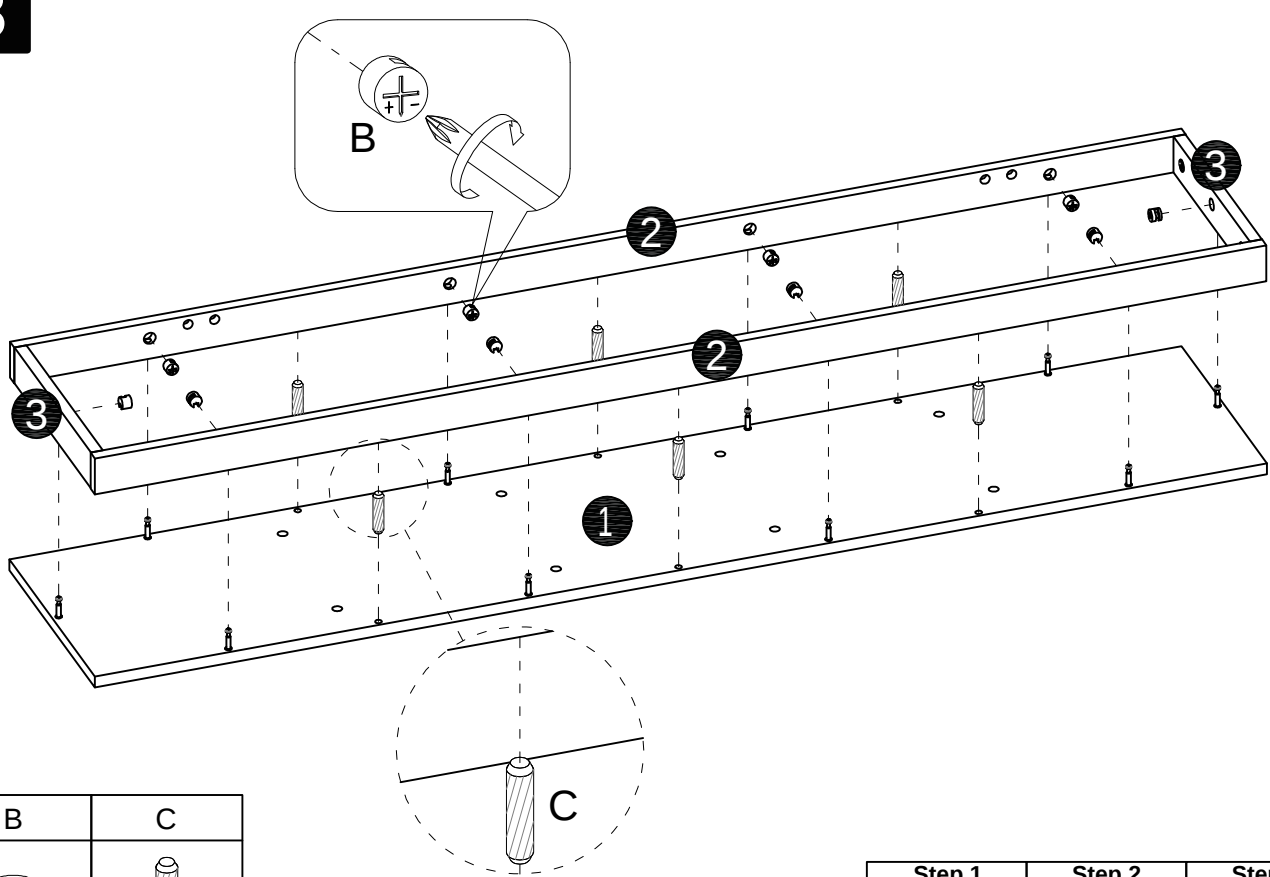


B	C
	
Ø15x12mm 10 pcs	Ø8x30mm 6 pcs

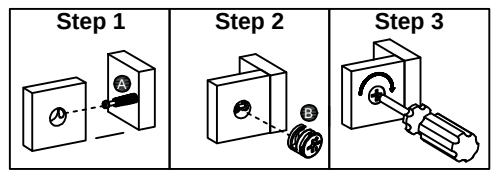



4

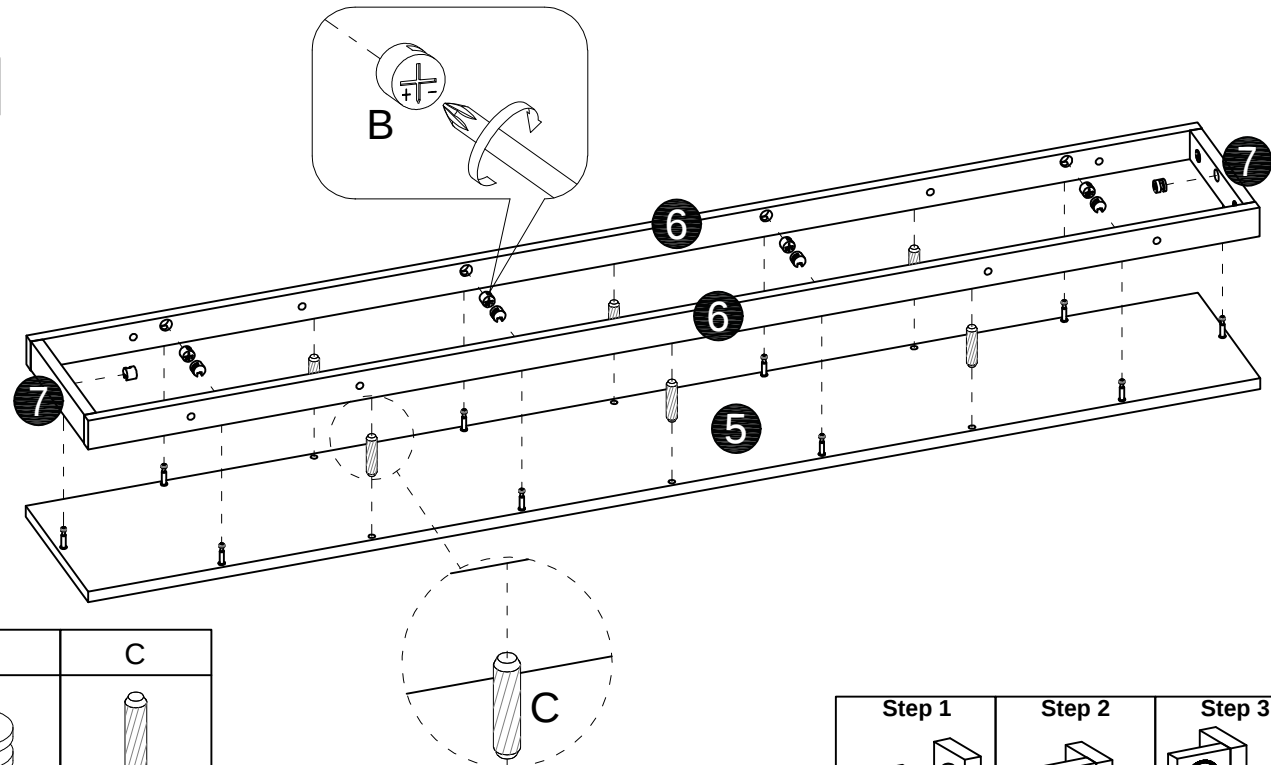

B	C
	
Ø15x12mm 10 pcs	Ø8x30mm 6 pcs

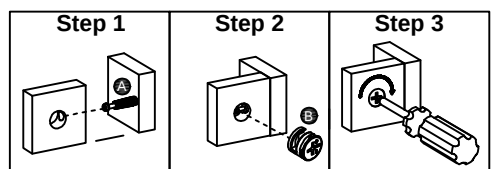


5

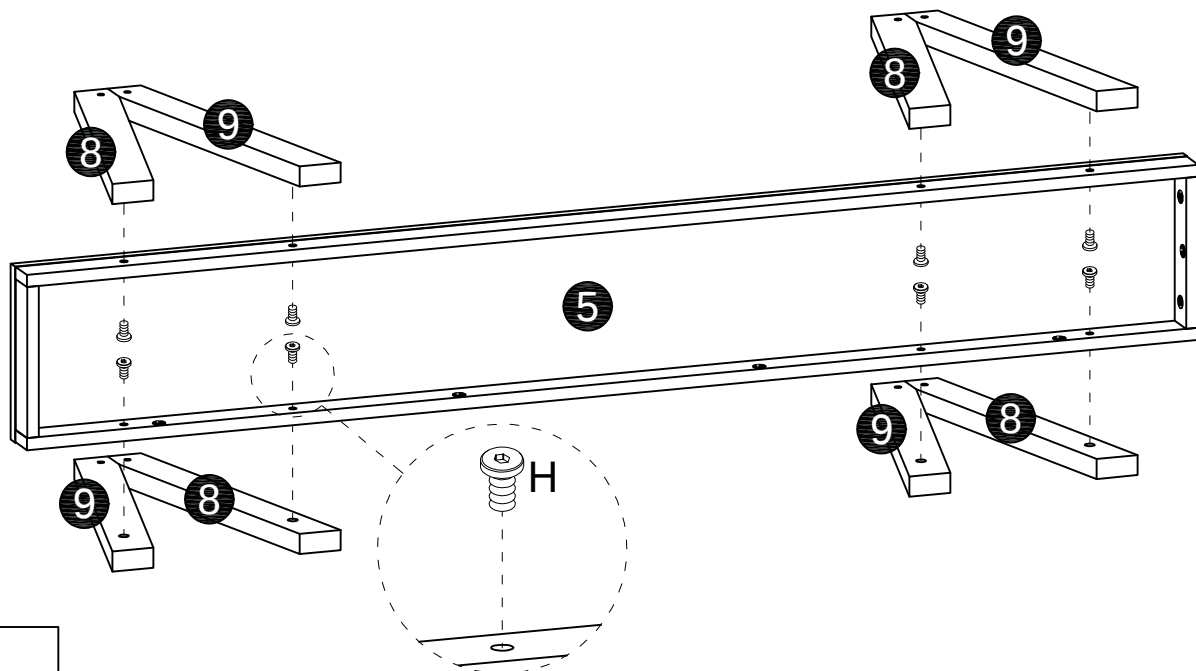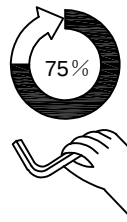

H

M6x25mm
8 pcs

6

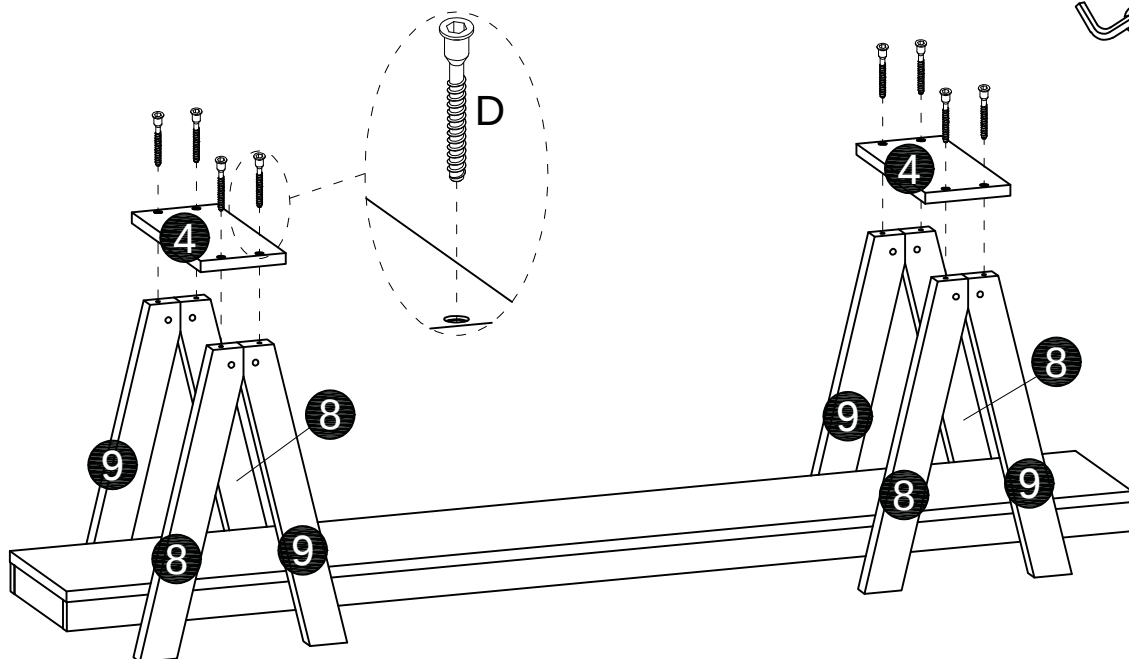


D

Ø7x37mm
8 pcs


7

75%

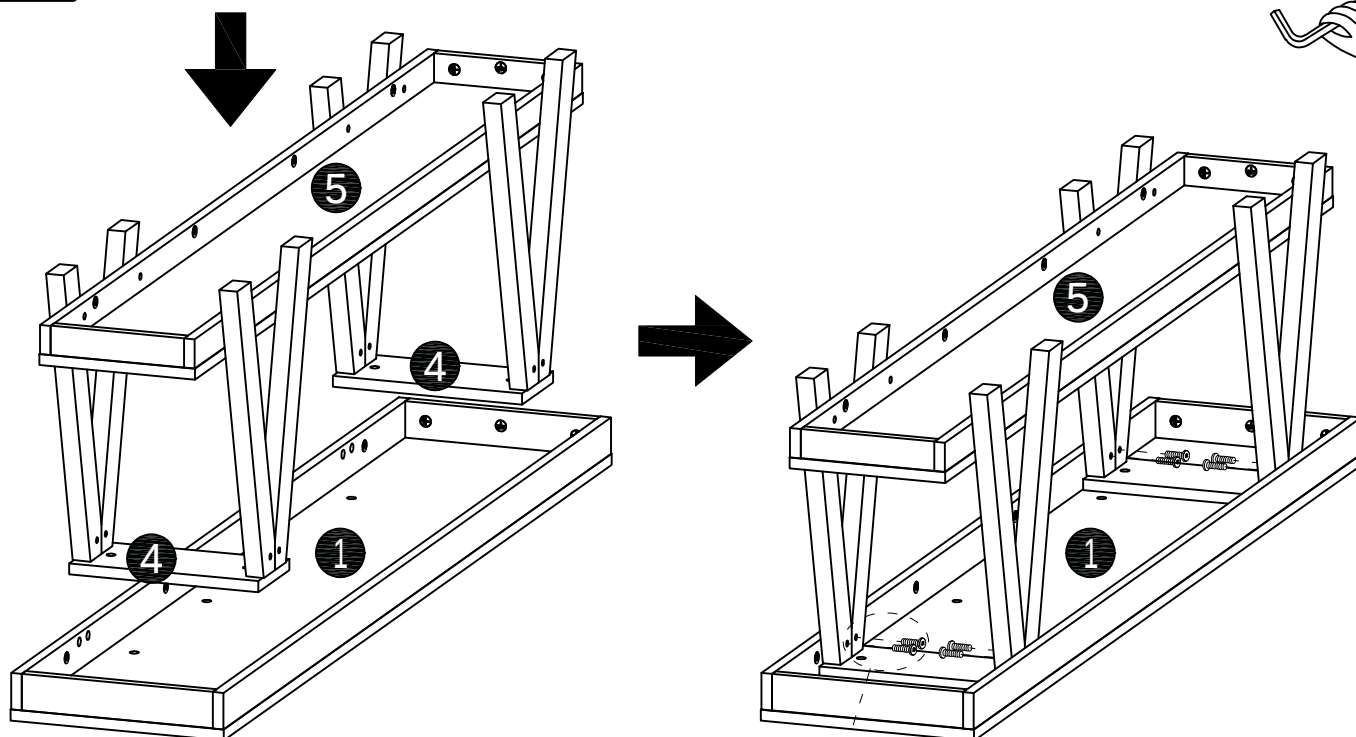


F

M6x35mm
8 pcs

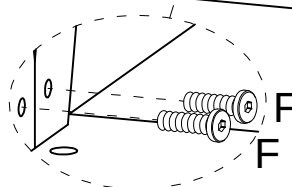


8


100%

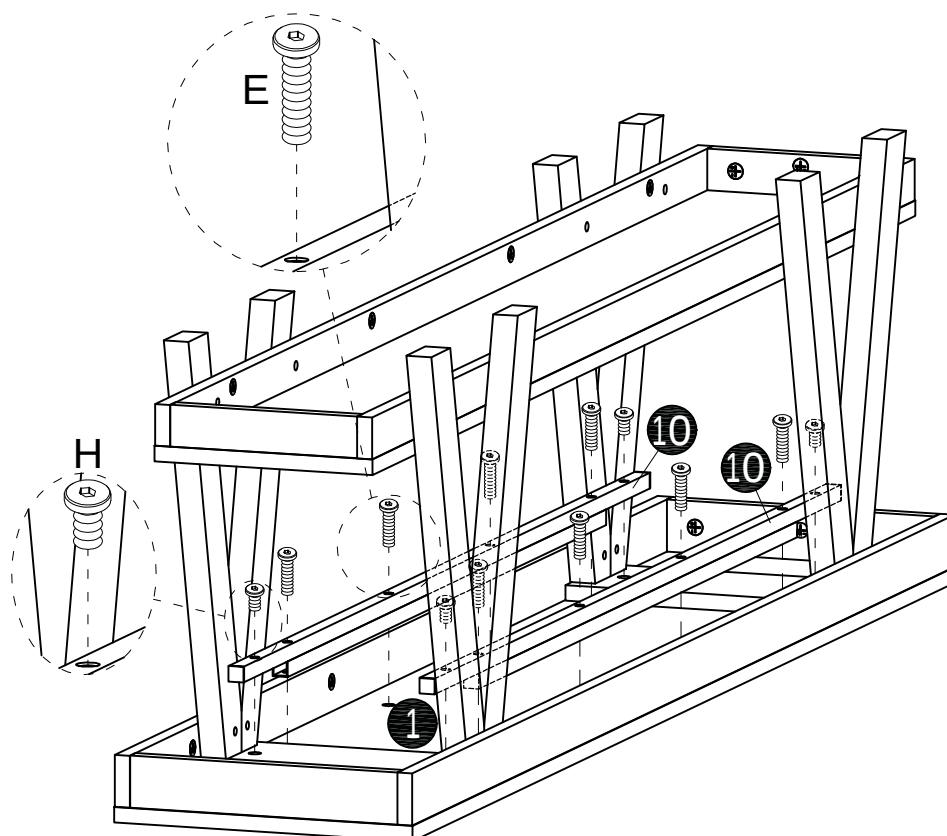


E	H
	
M6x40mm	M6x25mm
8 pcs	4 pcs

9

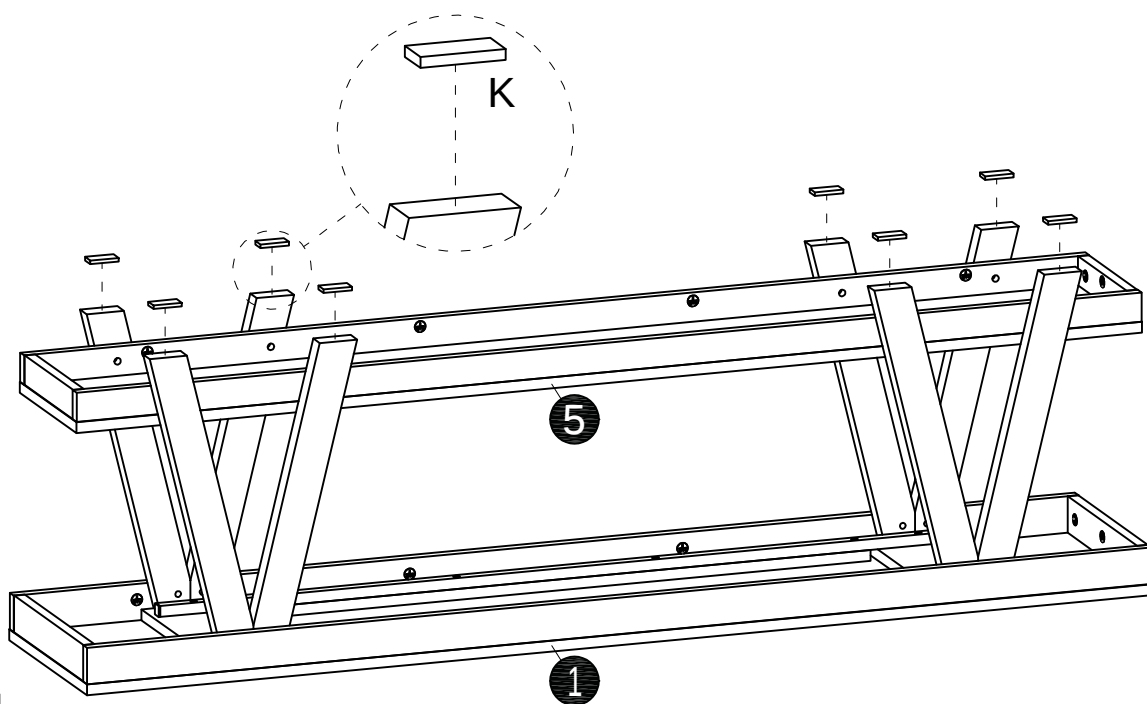

K

8 pcs

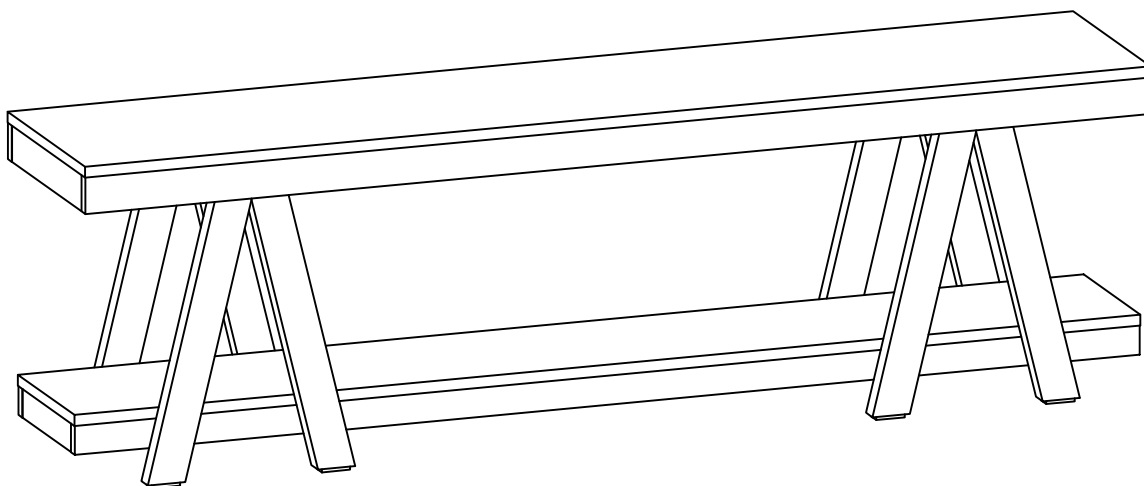10



Thank you for your support!

