




PARTS LIST

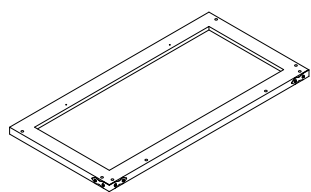


①X1

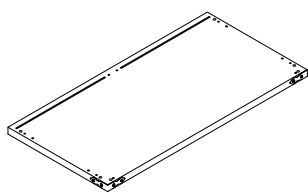


②X1

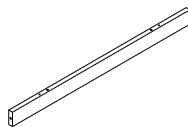


③X1

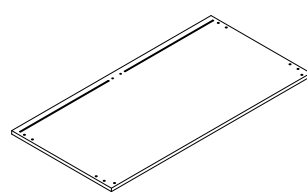

④X1



⑤X1




⑥X1



⑦X1




⑧X1




⑨X2




⑩X2

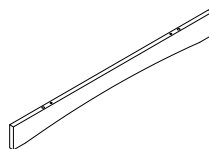


⑪X1

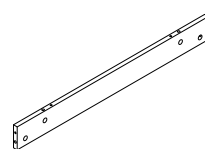


⑫X1



⑬X1



⑭X1

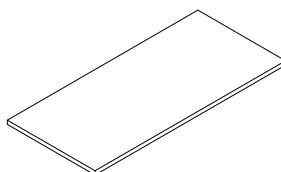

⑮X3



⑯X2




⑰X1




⑱X2




⑲X1




⑳X1




㉑X1

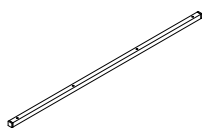

㉒X3

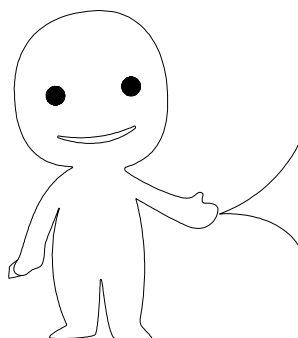

Please prepare the following tools

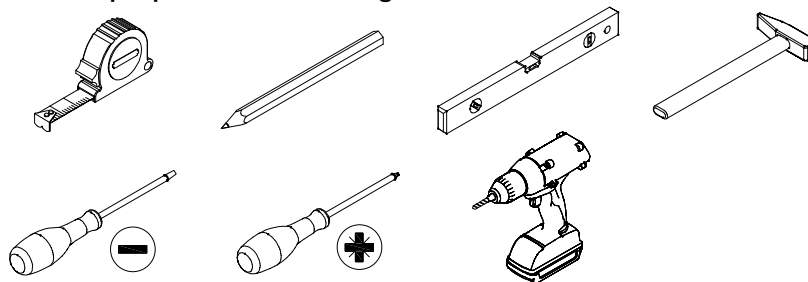

A x 34+2 Ø15 x 9.5 mm	B x 34+2 	C x 34+2 	D x 30+2 Ø6 x30 mm
E x 20+2 Ø5 x40 mm	F x 4 	G x 20+2 Ø3.5 x 12	H x 2
I x 4+1 M4 x 18	J x 12+2 Ø5 x 15	K x 1 K1 K2	L x 2 Ø3 x 12
M x 20+2 	N x 22+2 Ø3 x 16	O x 12+2 Ø3.5 x 25	P x 2 P1 P2 P3 P4 Ø4 x 15 Ø4 x 40
Q x 4+1 			




Tips: The number after "+" represents the spare hardware.





****Important Notes:****








The item you have purchased is a large furniture product. The assembly process requires numerous components. Before starting assembly, open the parts box but ****do not fully open all the component packets****. Please follow the steps in the provided installation manual to locate the ****letter-labeled parts packets**** corresponding to each stage. Then, remove the required number of components from each packet as needed. This will prevent parts from scattering and becoming difficult to identify.

After assembly, you may notice some leftover parts—this is normal. These are ****spare components provided by the manufacturer**** for future use. We kindly ask you to patiently follow the assembly instructions step-by-step. Completing this task is a remarkable achievement!

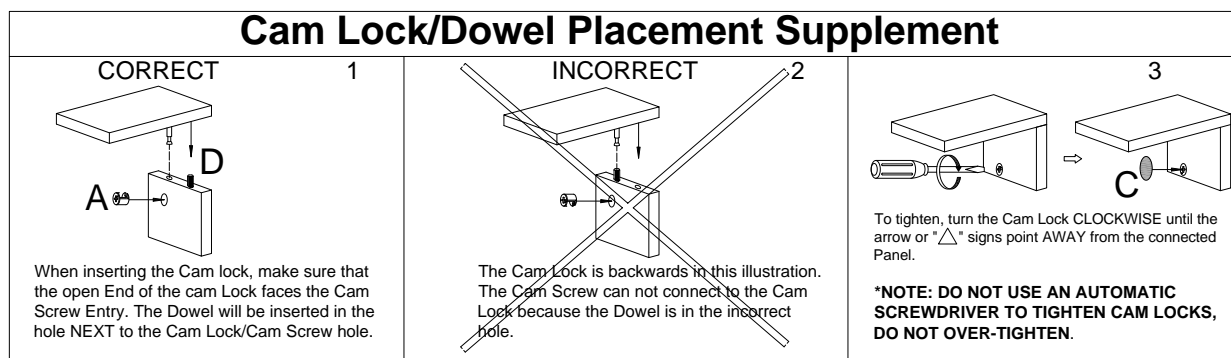

1

A x 6 	B x 16 	K1 x 1 	N x 2 	
---	--	--	--	--

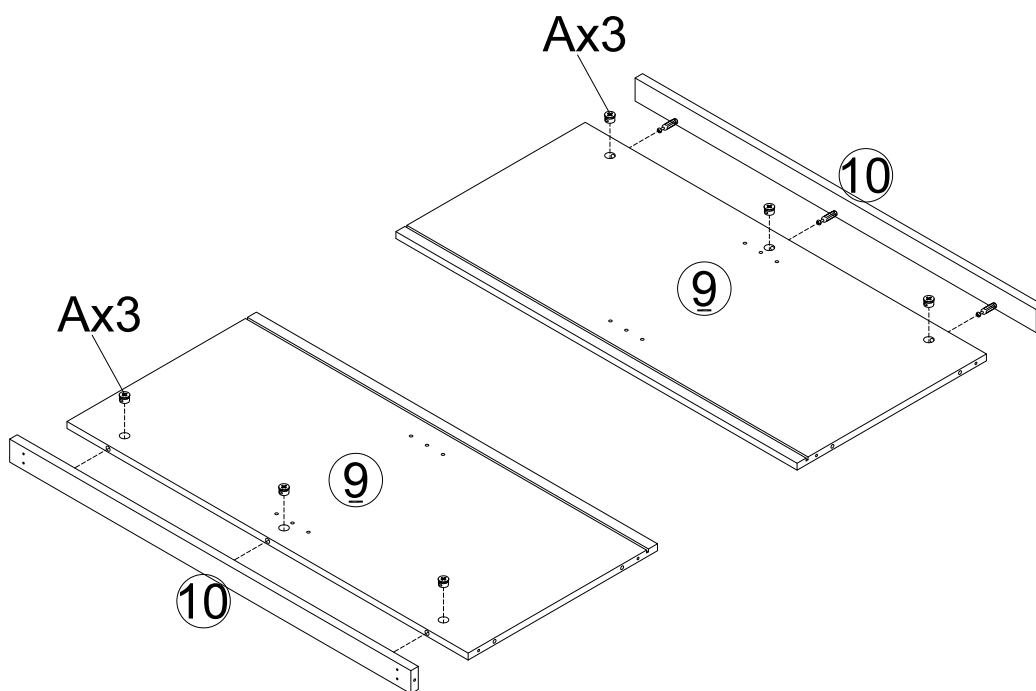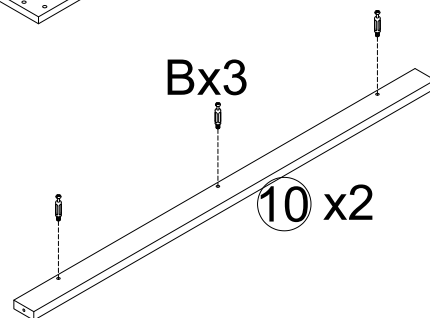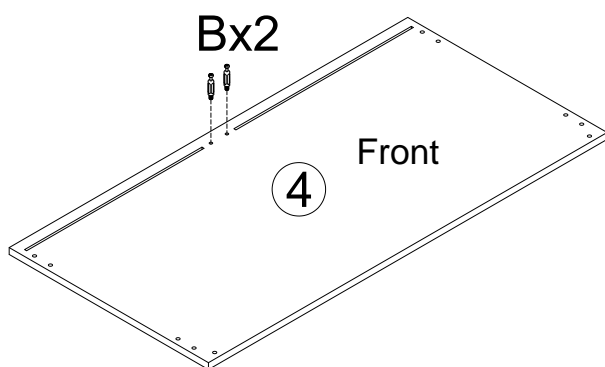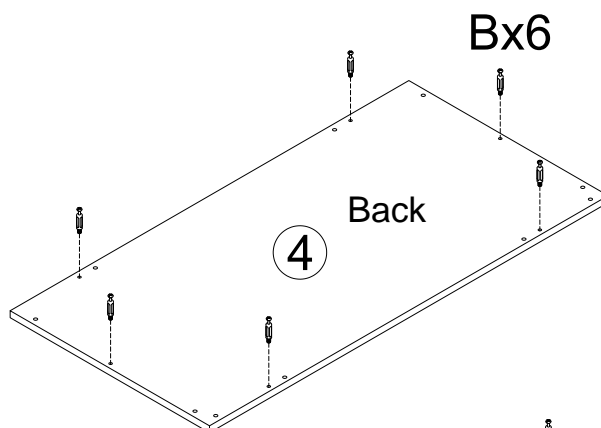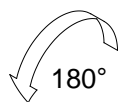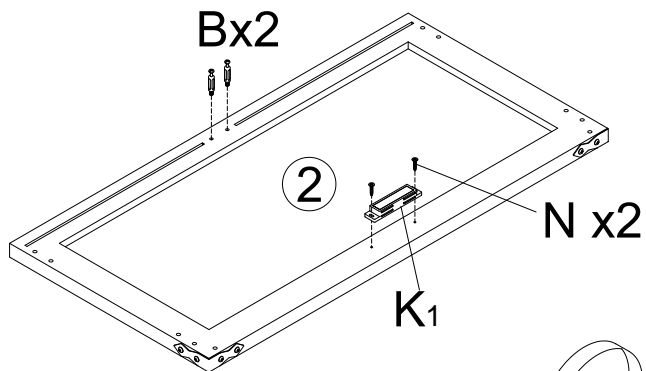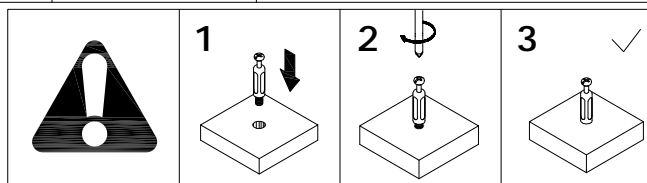


2


A x 2







D x 4



E x 6




Notice the obverse and reverse sides of Plate Component No. 2.

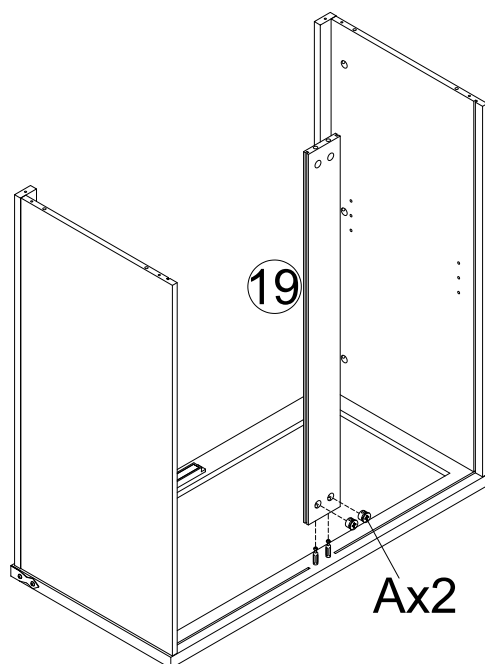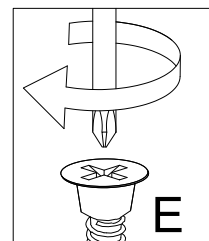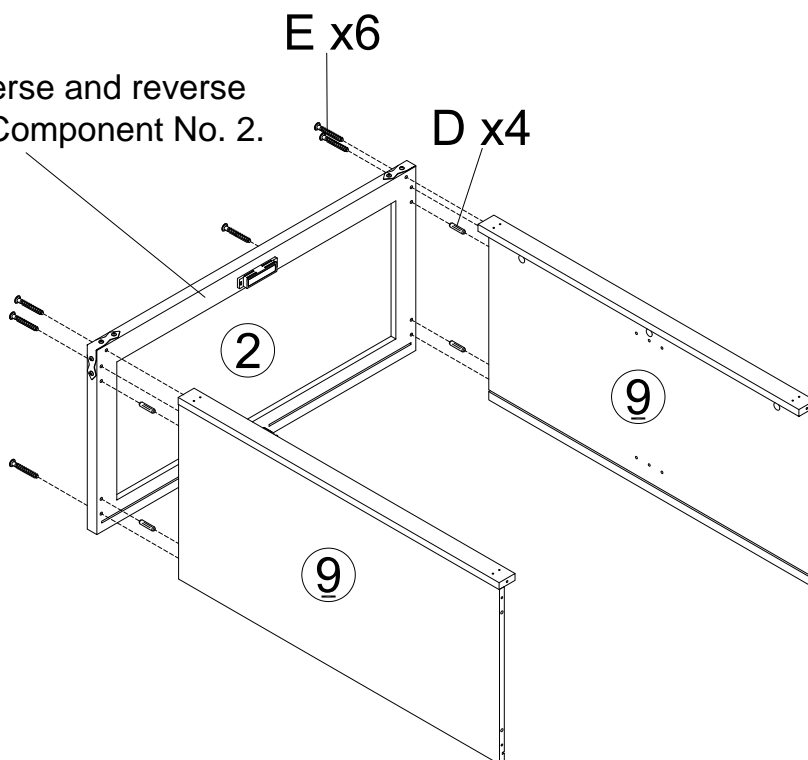


3





A x 2



D x 4




E x 6

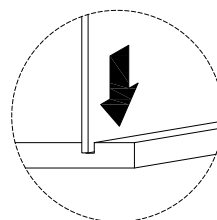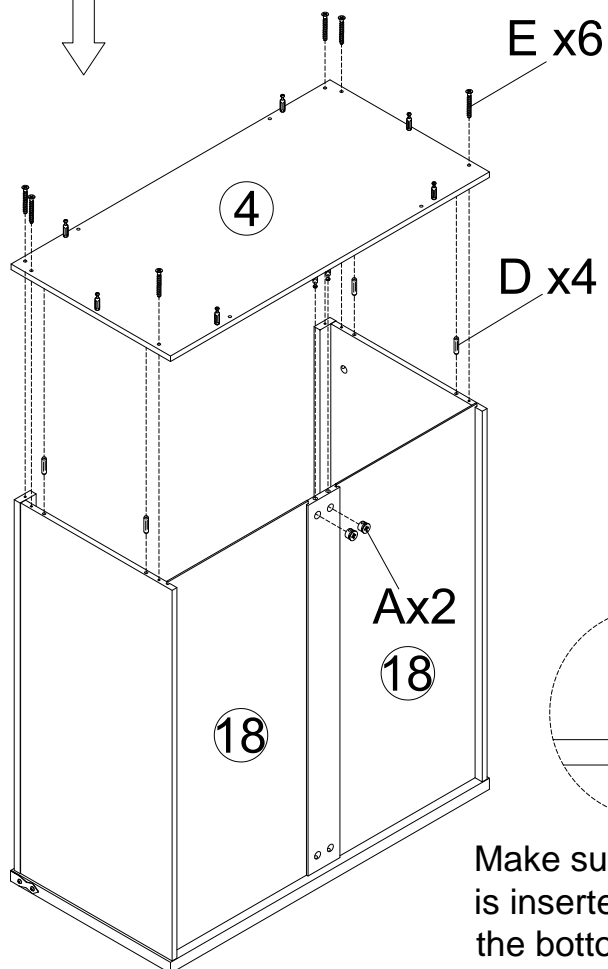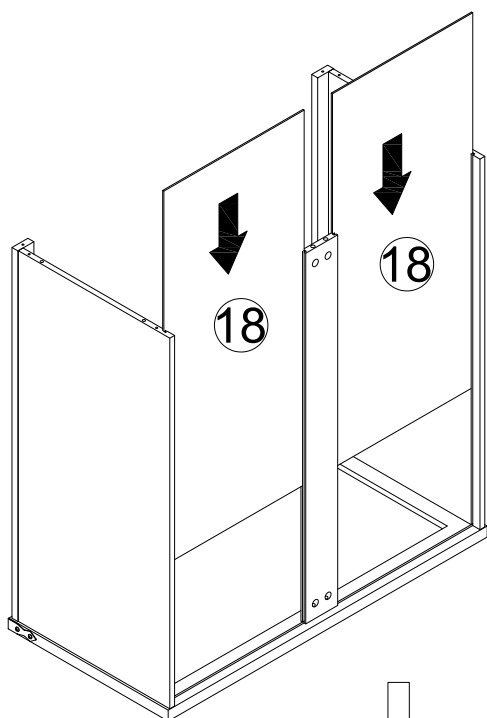


Make sure the back panel is inserted into the slot of the bottom panel before installing the cover plate.

4


A x 4




B x 4

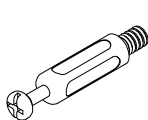


D x 4






Bx2

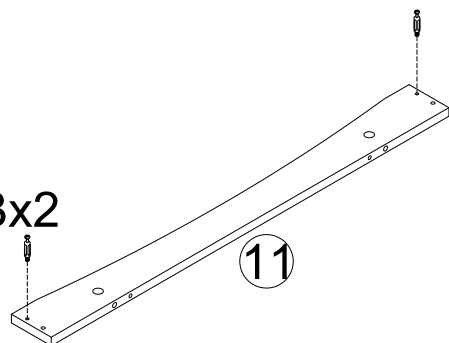

Bx1

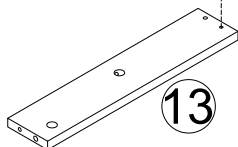


Bx1

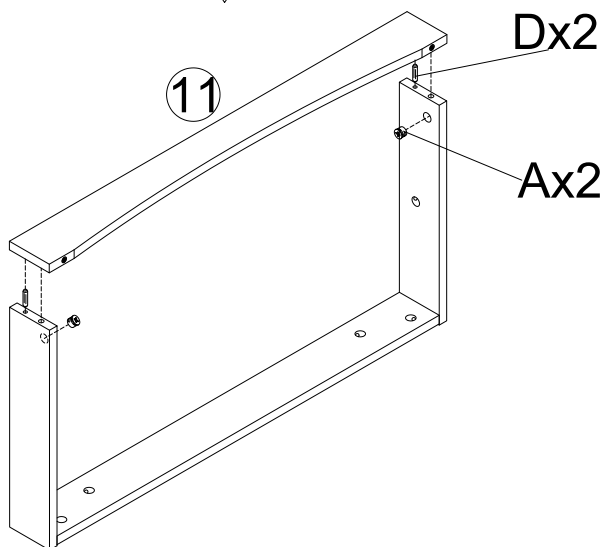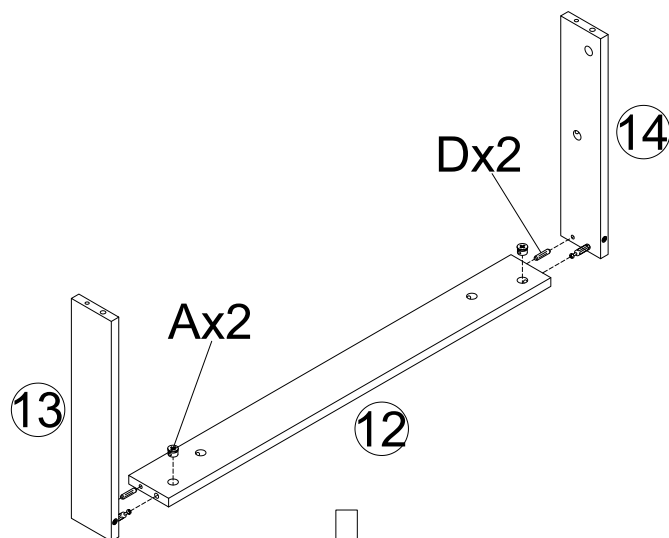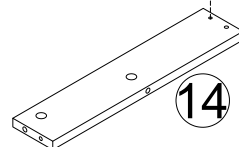


5


A x 6





B x 6



D x 4




Q x 4

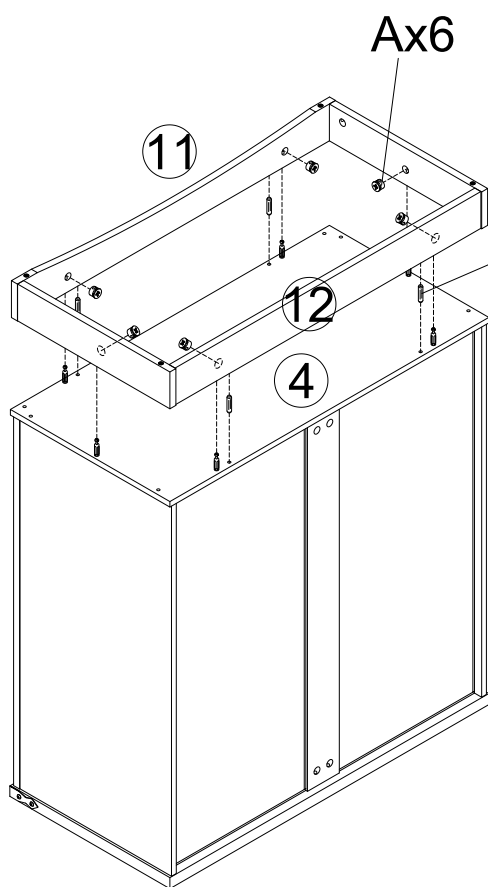


Ax6

Dx4

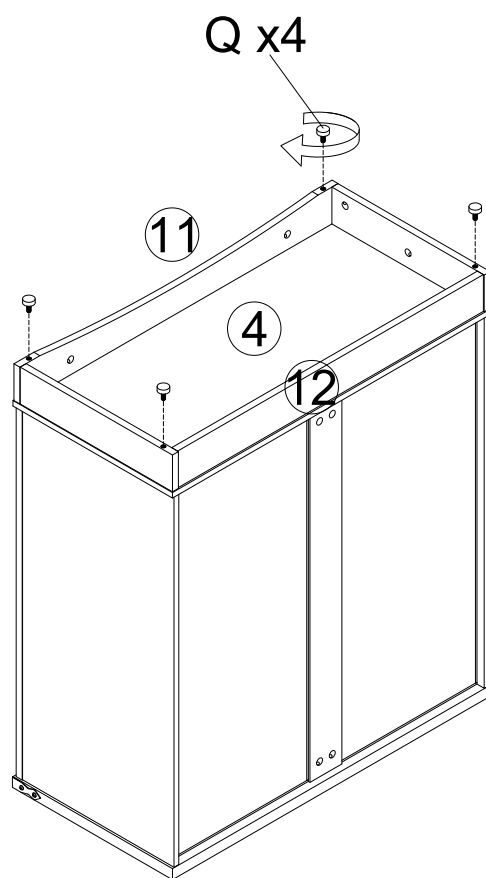


Q x4

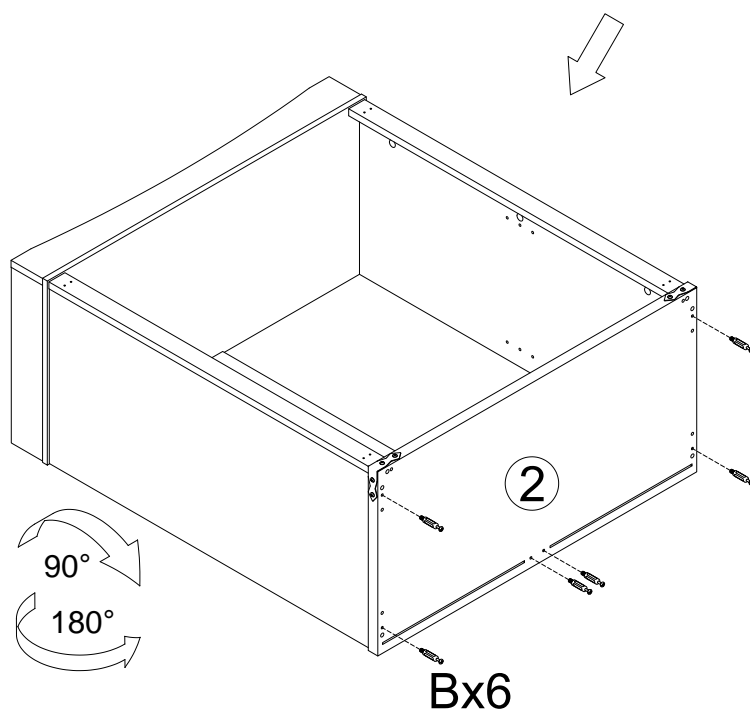







Bx6



A x 6




B x 8

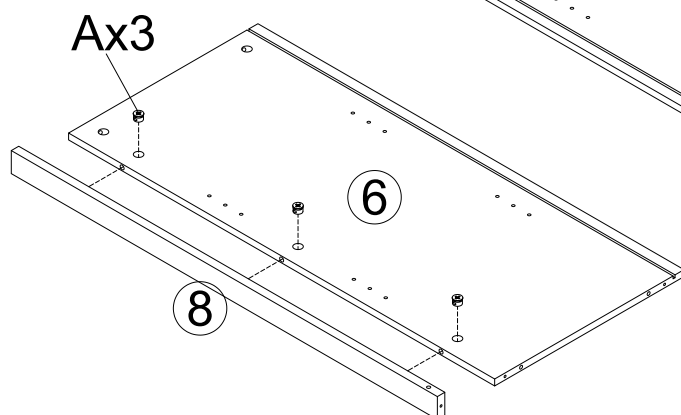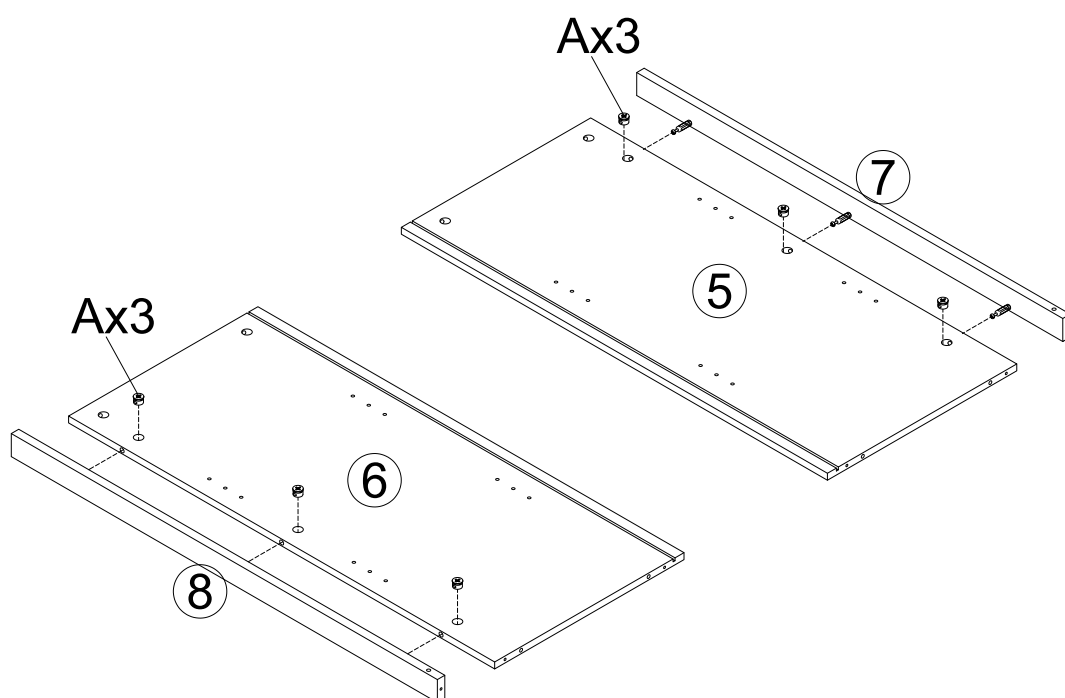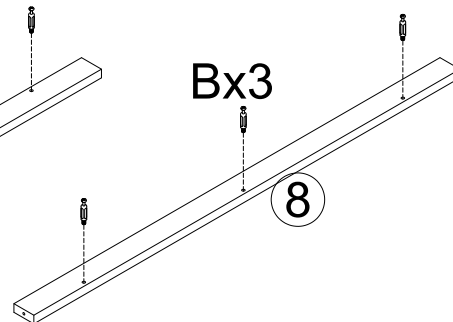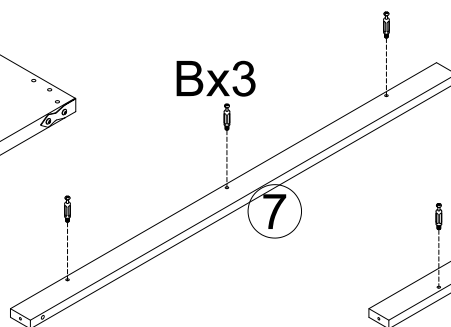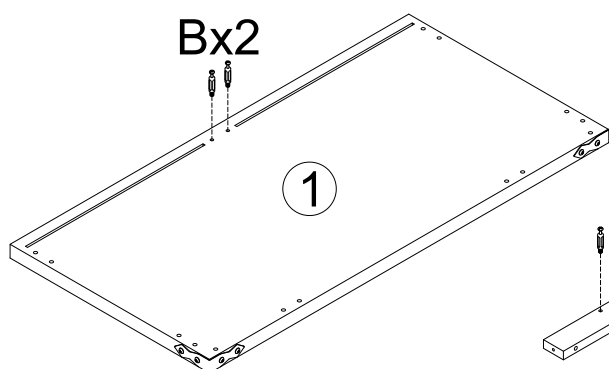



7



A x 4



D x 8

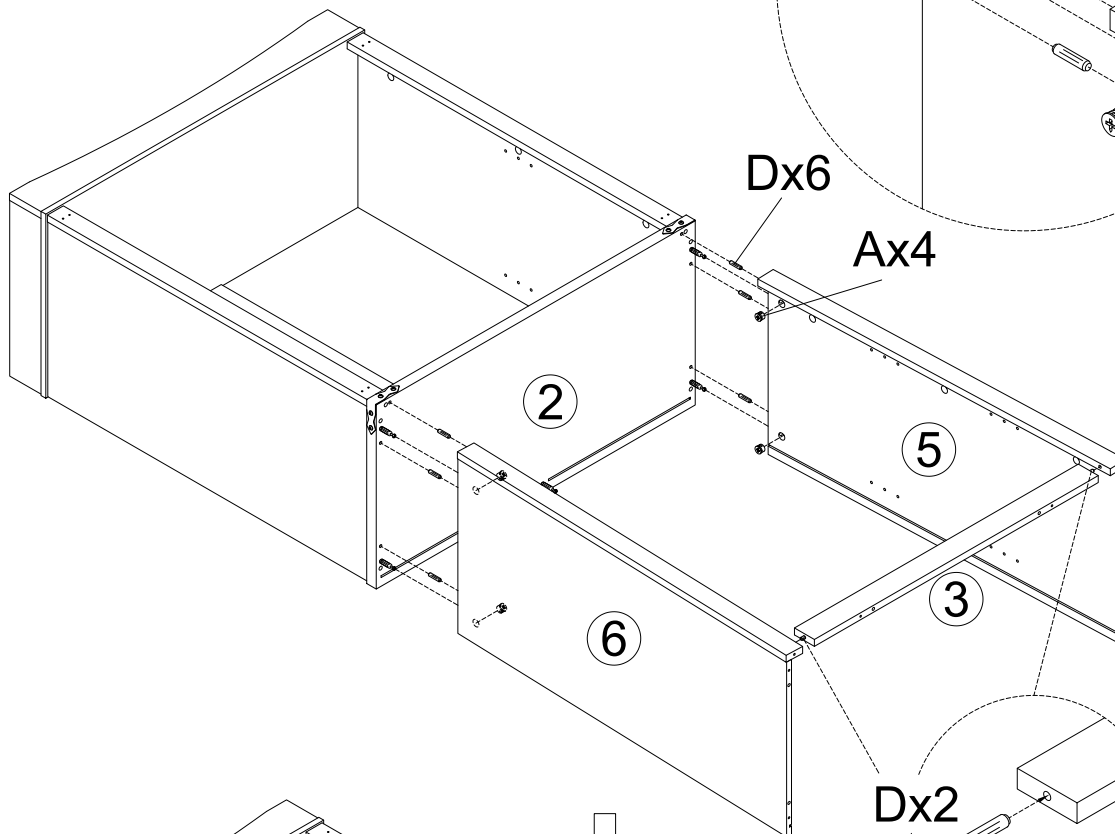

Dx2

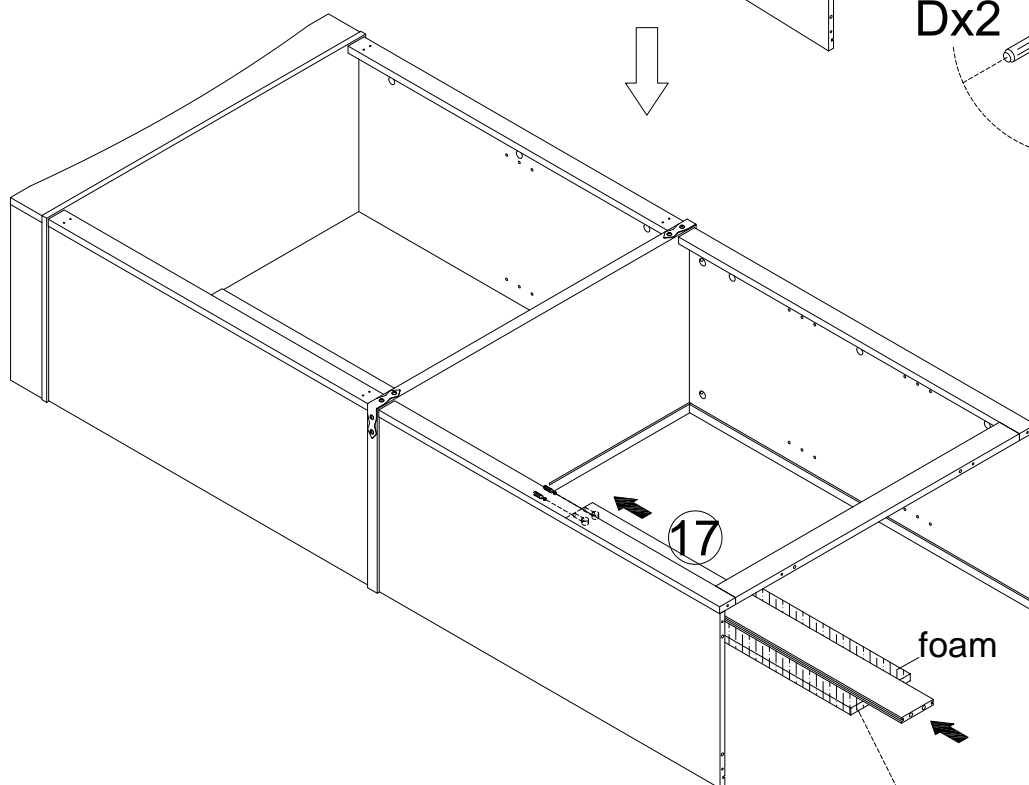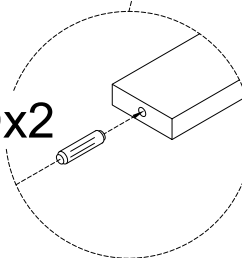


foam



Use foam to pad the back brace so that its hole position is aligned.



D x 6




E x 8

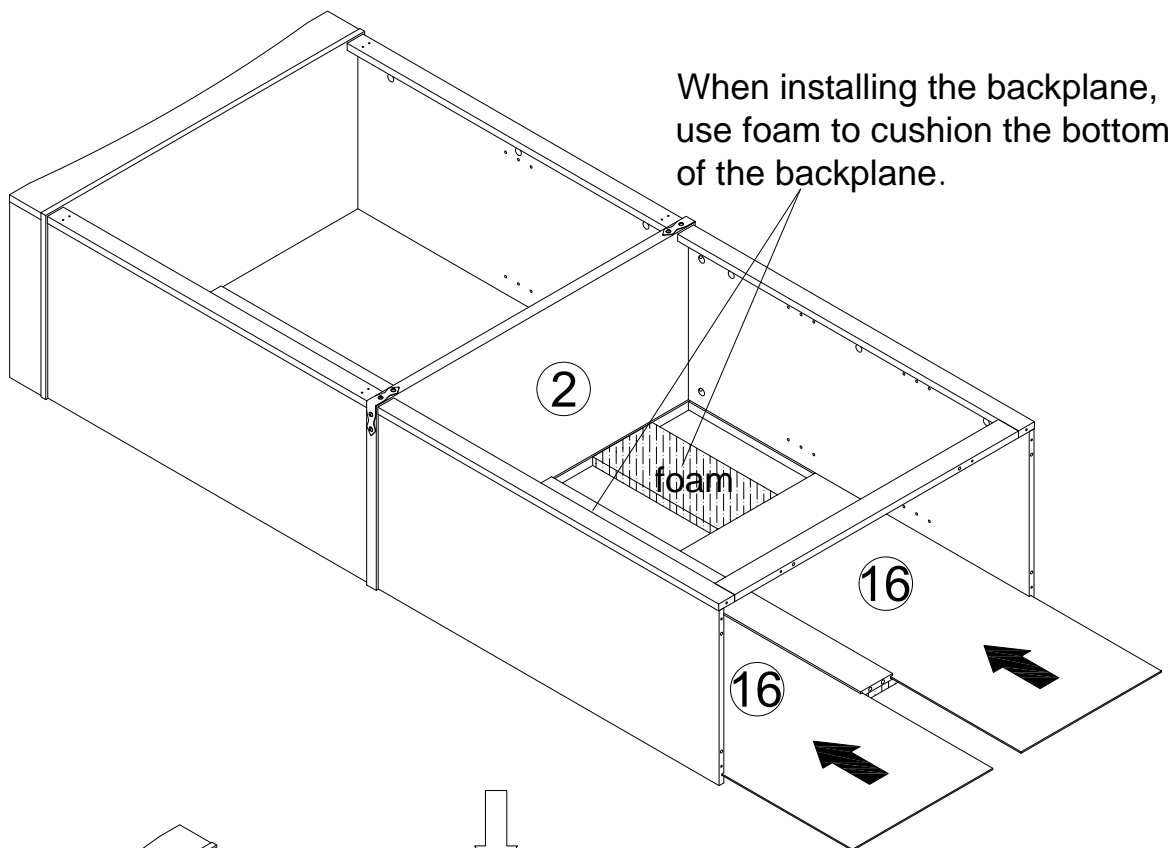

When installing the backplane,
use foam to cushion the bottom
of the backplane.

Make sure Component No. 16 is inserted
into the slot of Component No. 2 before
installing Component No. 1.


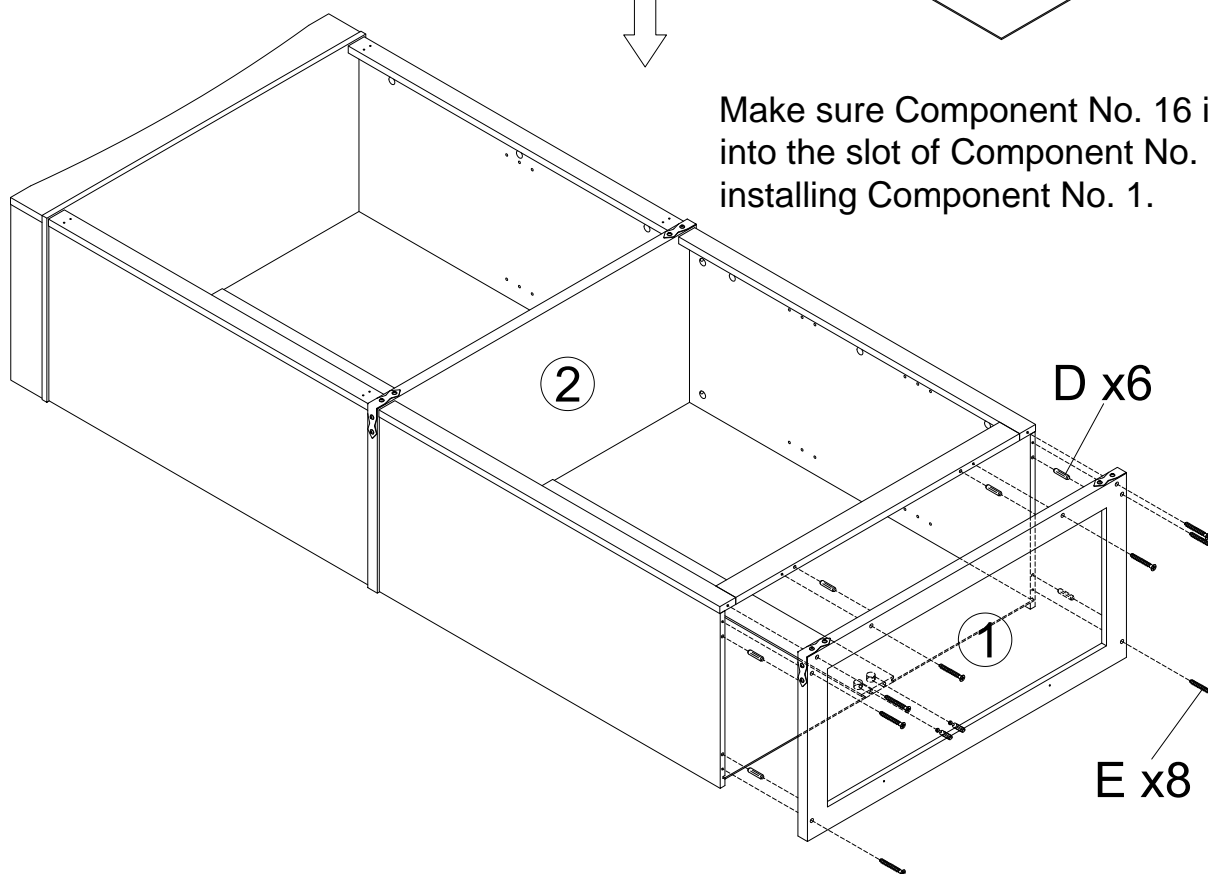


D x 6

E x 8




A x 4



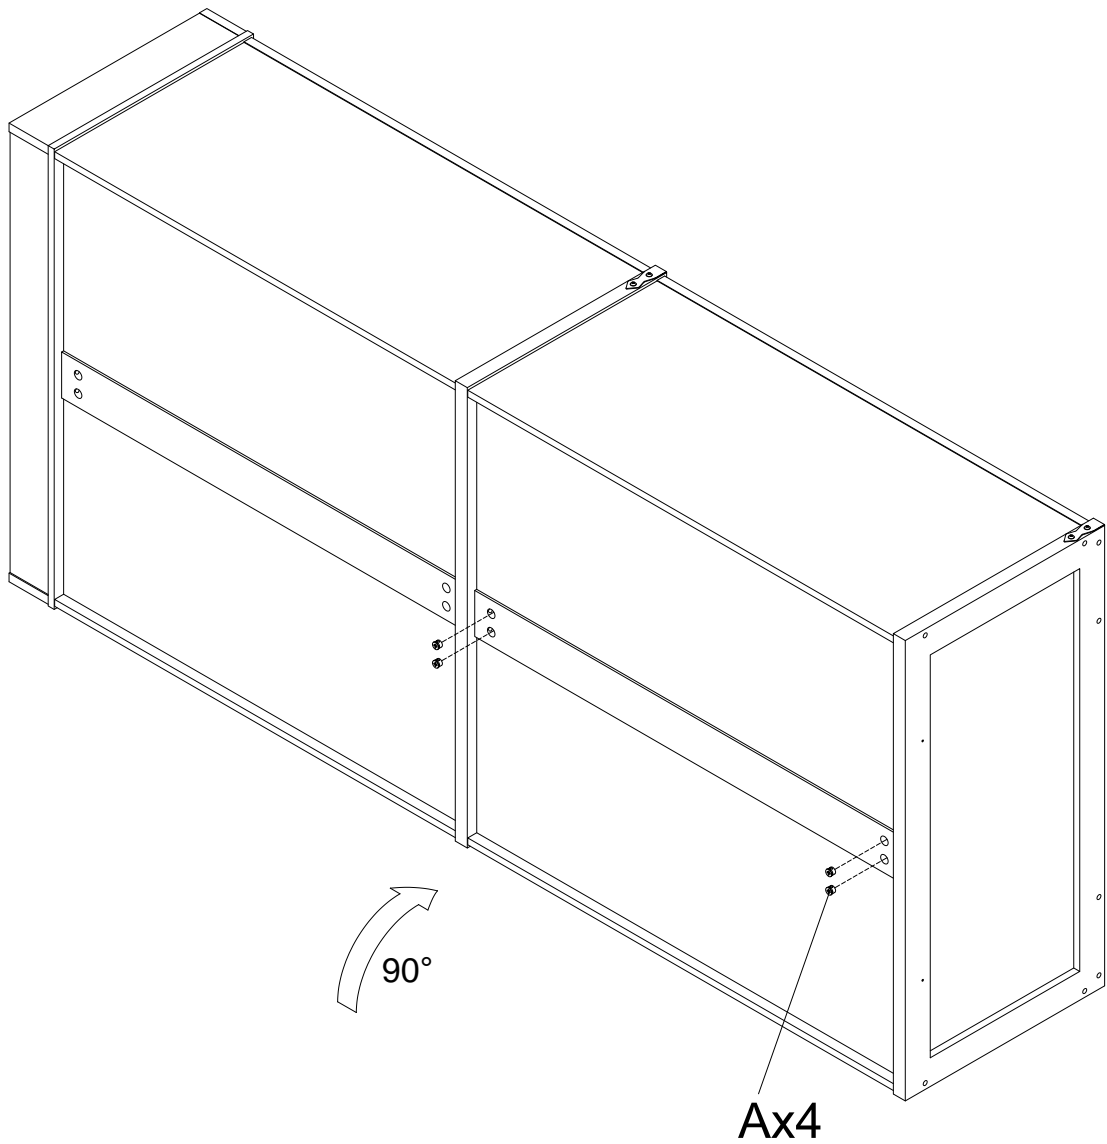



10

M x 20



N x 20

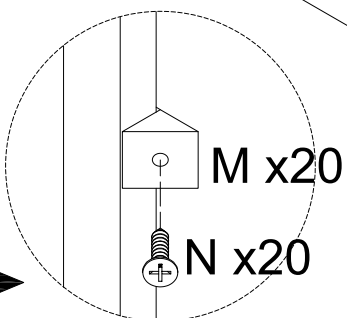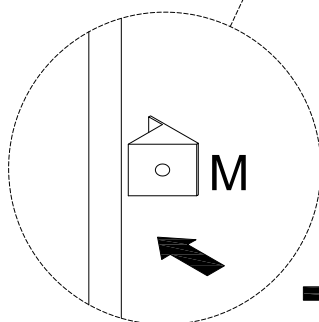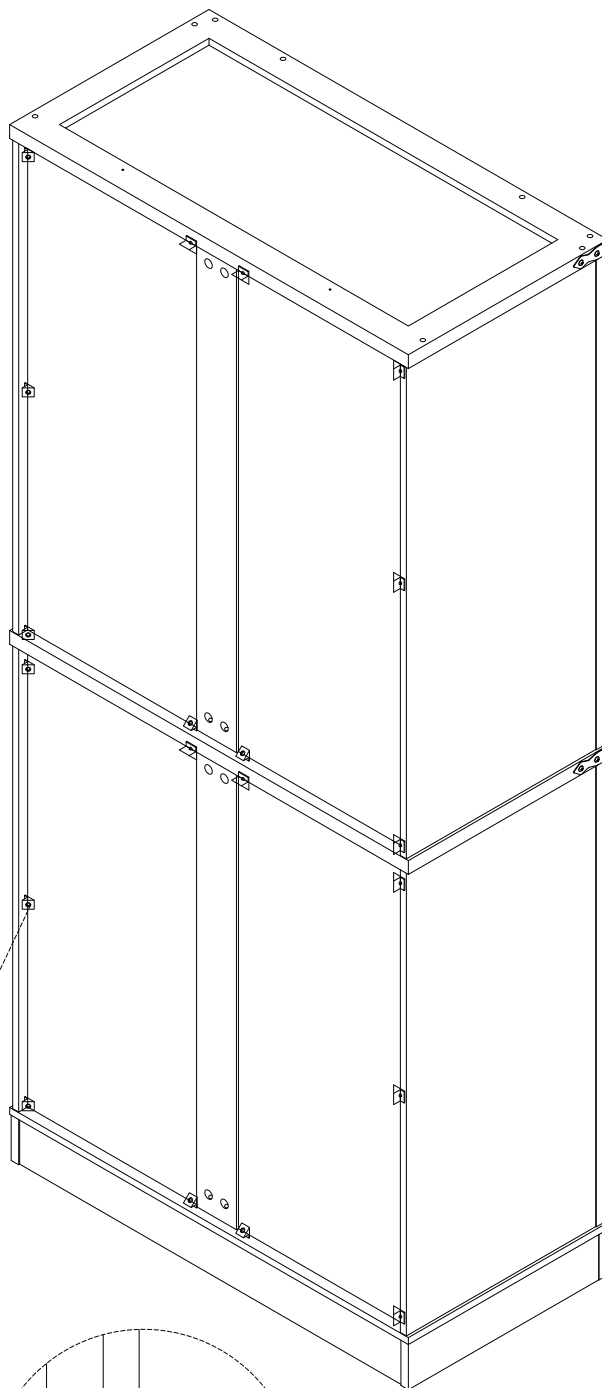


1 1


J x 12




O x 12

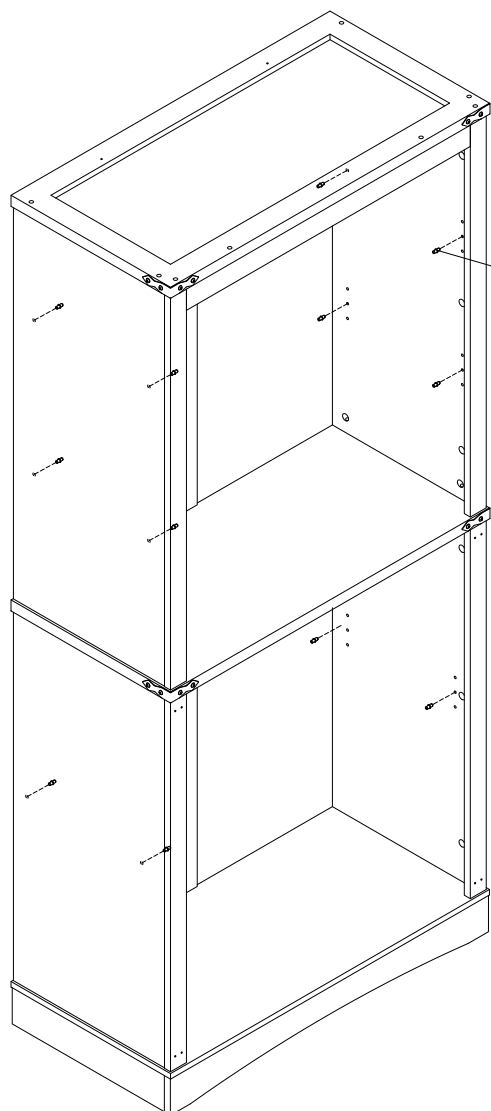





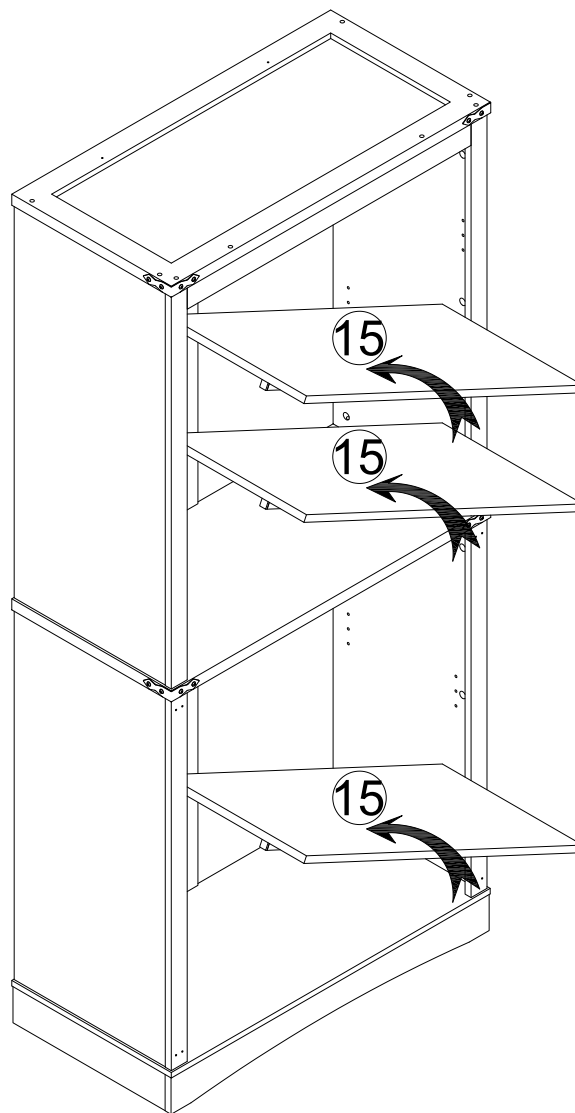

J x12


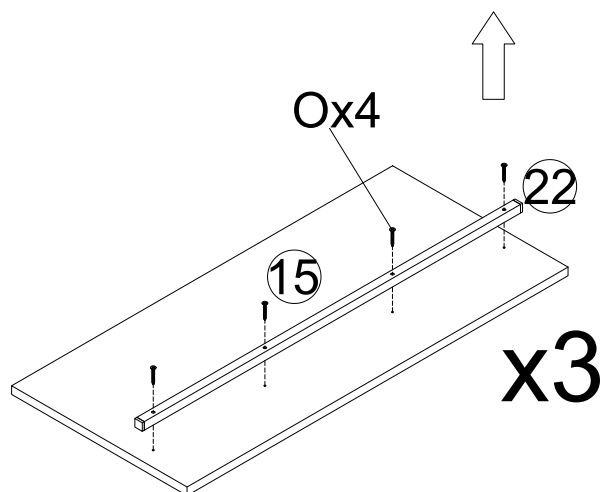


90°

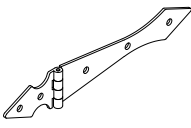



12

F x 4	G x 20	H x 2	I x 4	K ₂ x 2	L x 2	
						

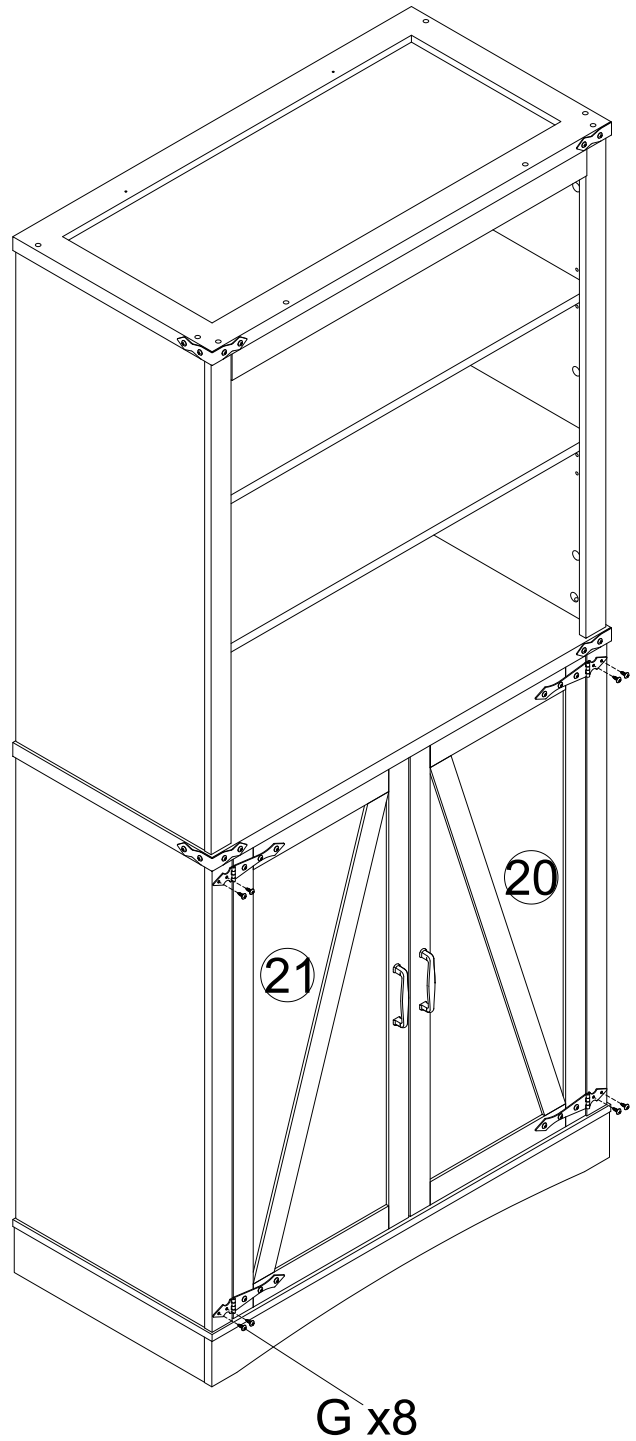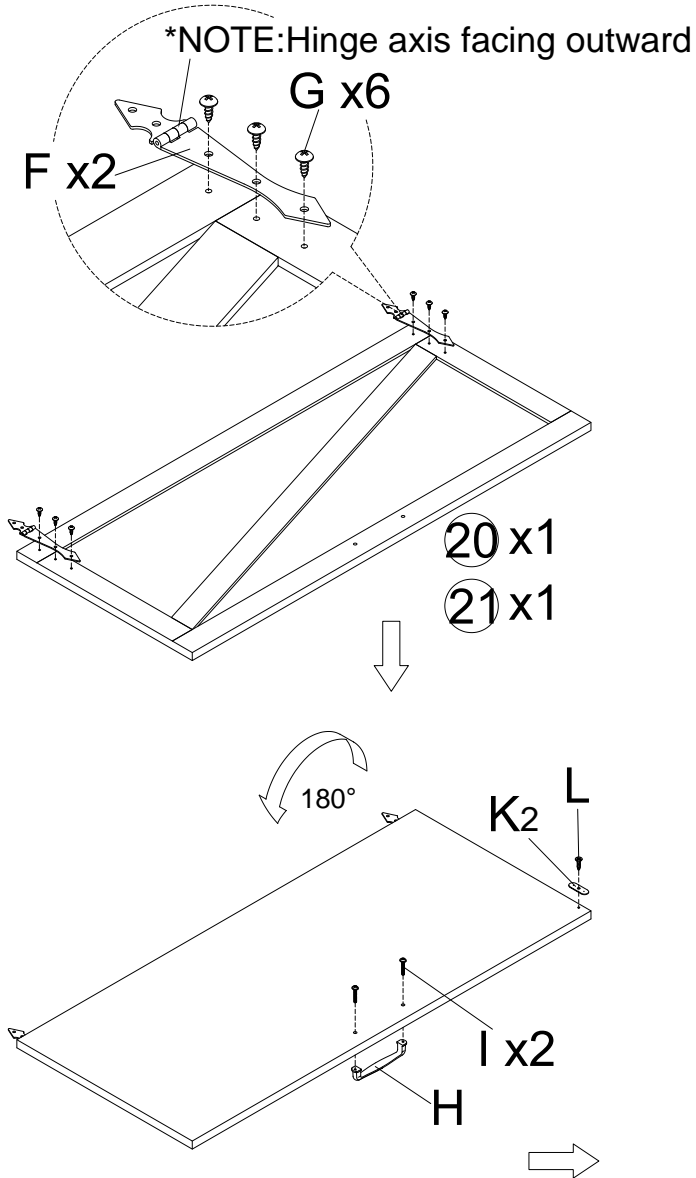


13

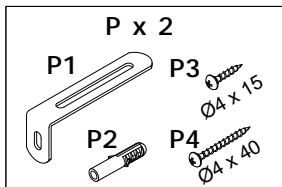

 **Warning:** If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

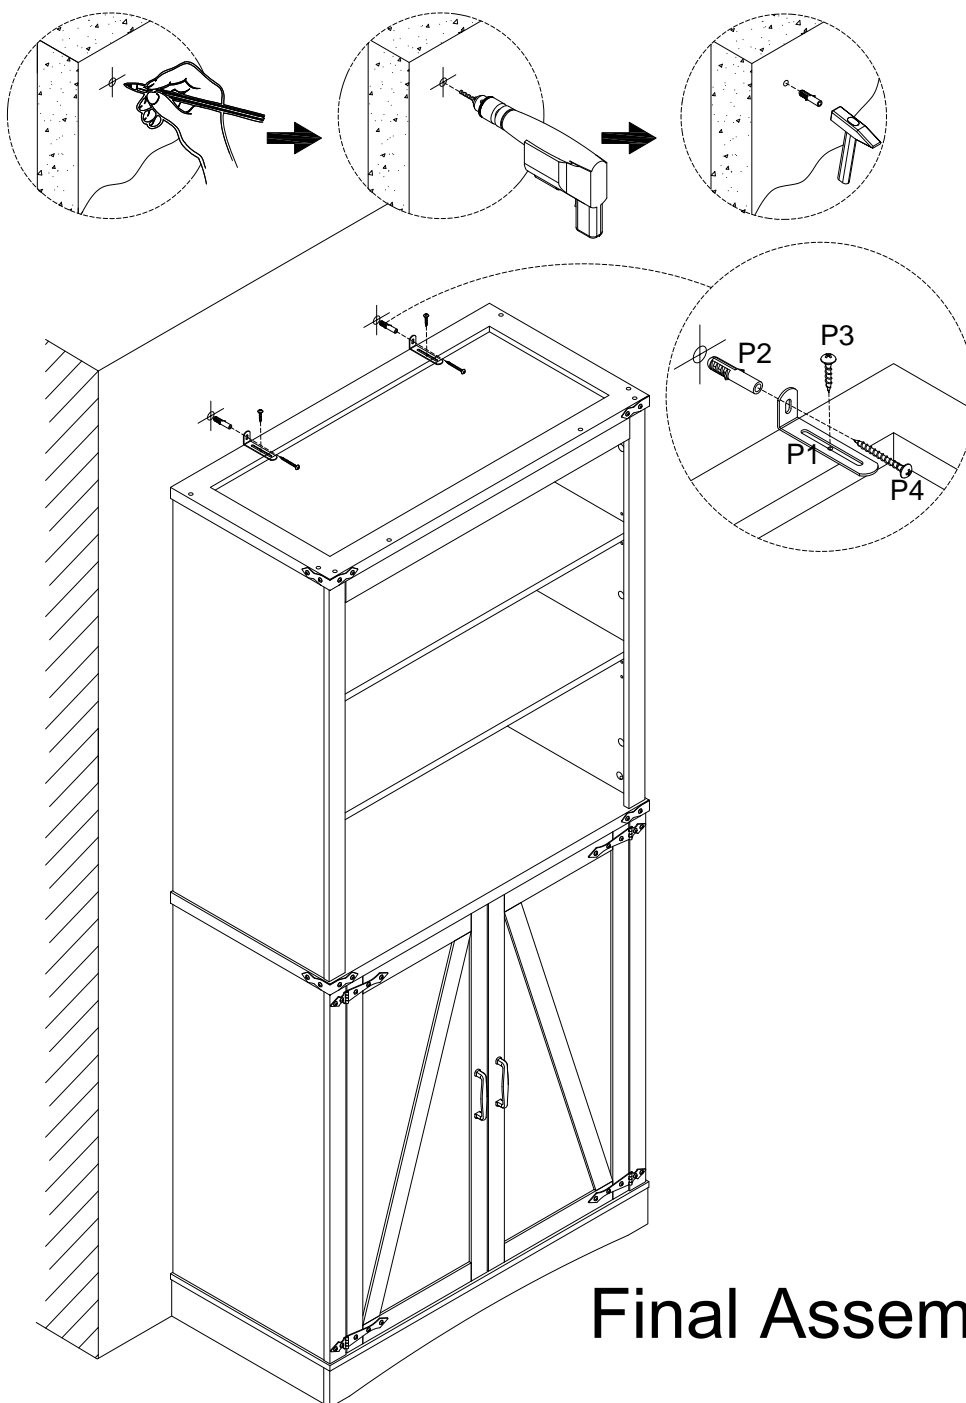

Final Assembly