


A x20

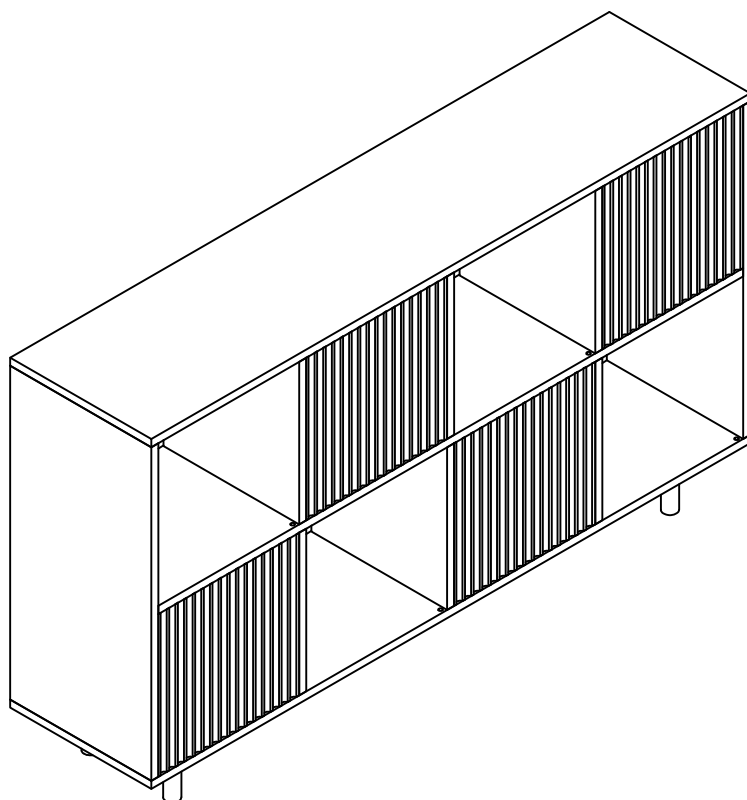

B x20




C x16



D x8



E x4




F x4




G x32




H x12




I x1

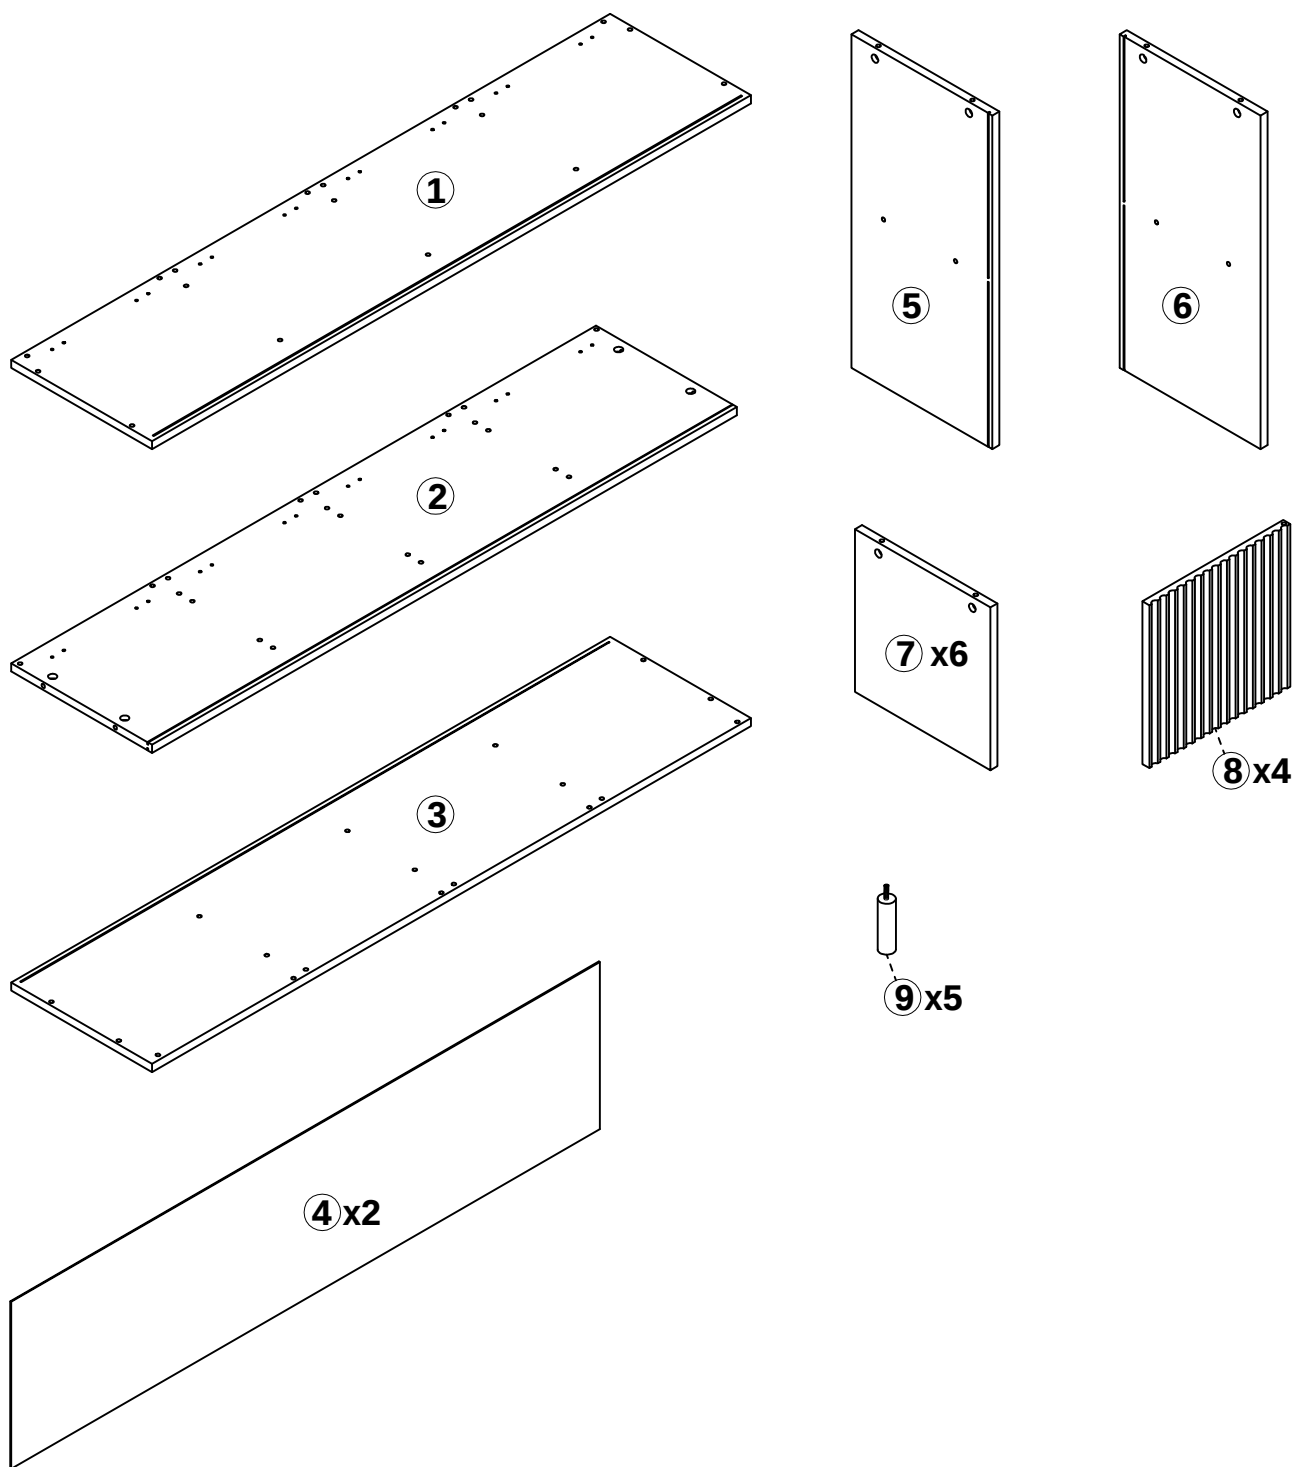


Step 1

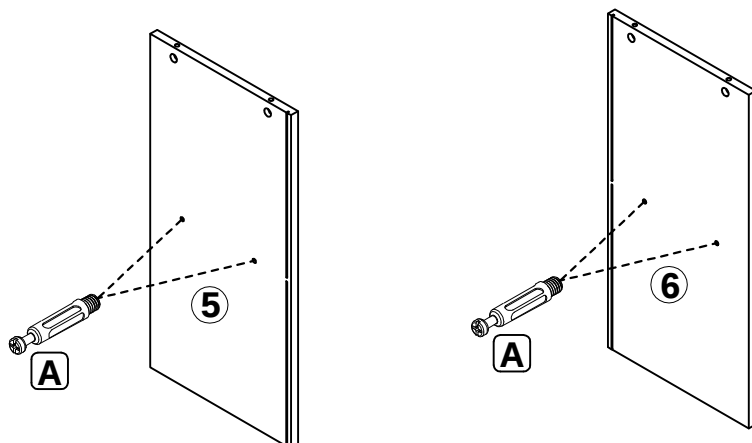


Step 2

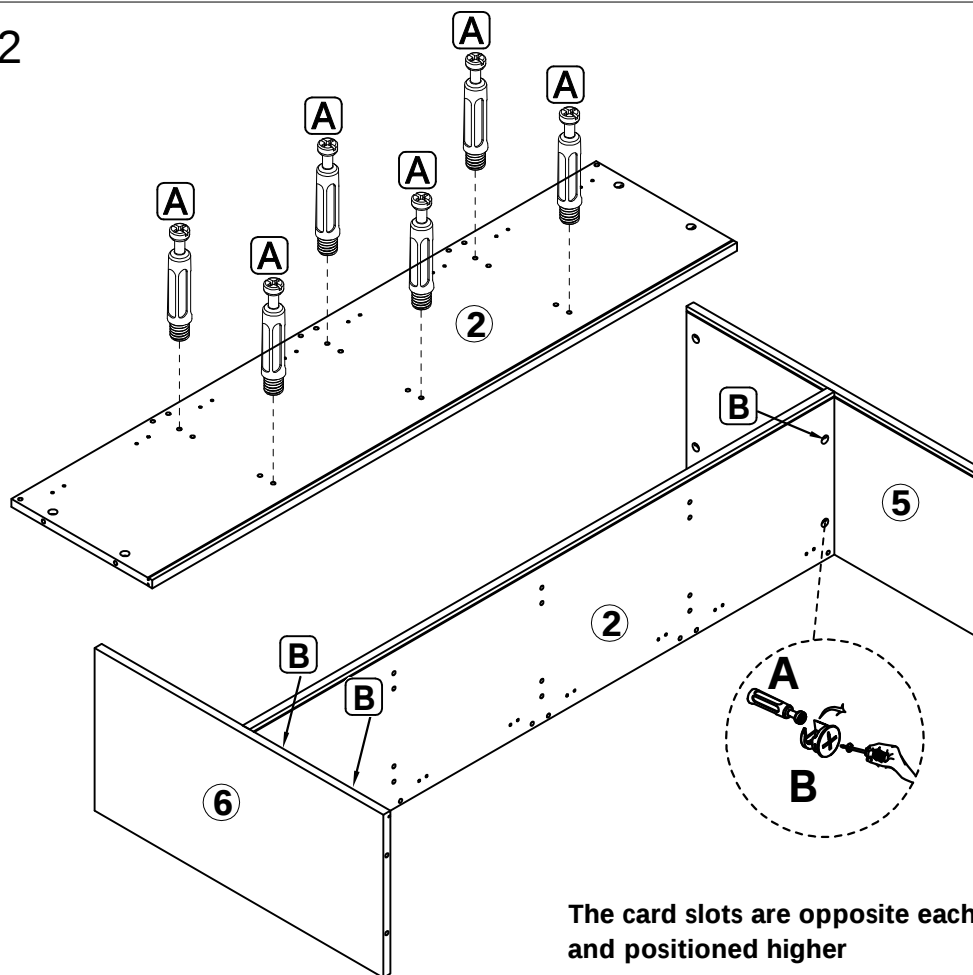


Step 3

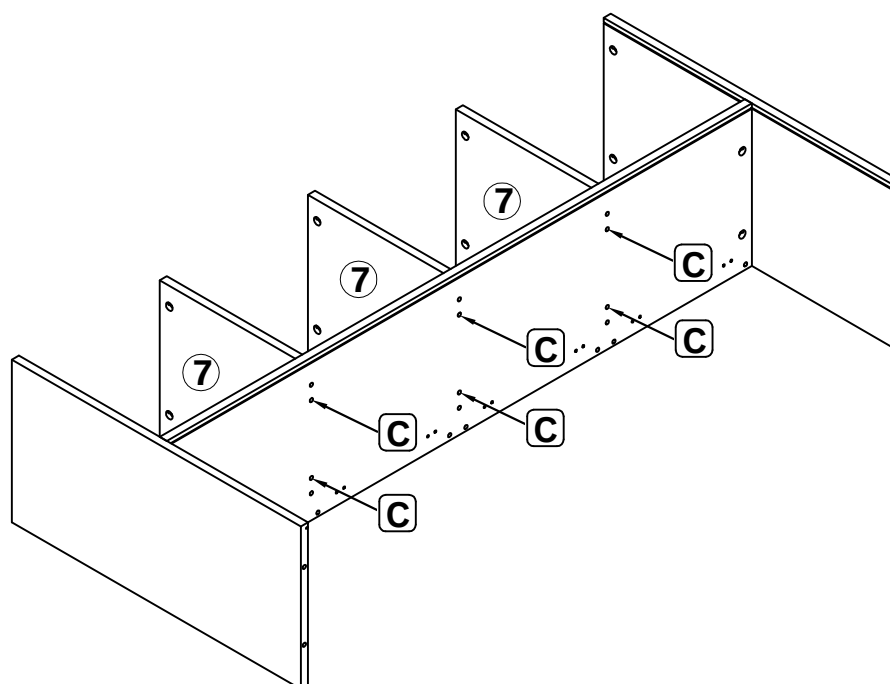

Step 4

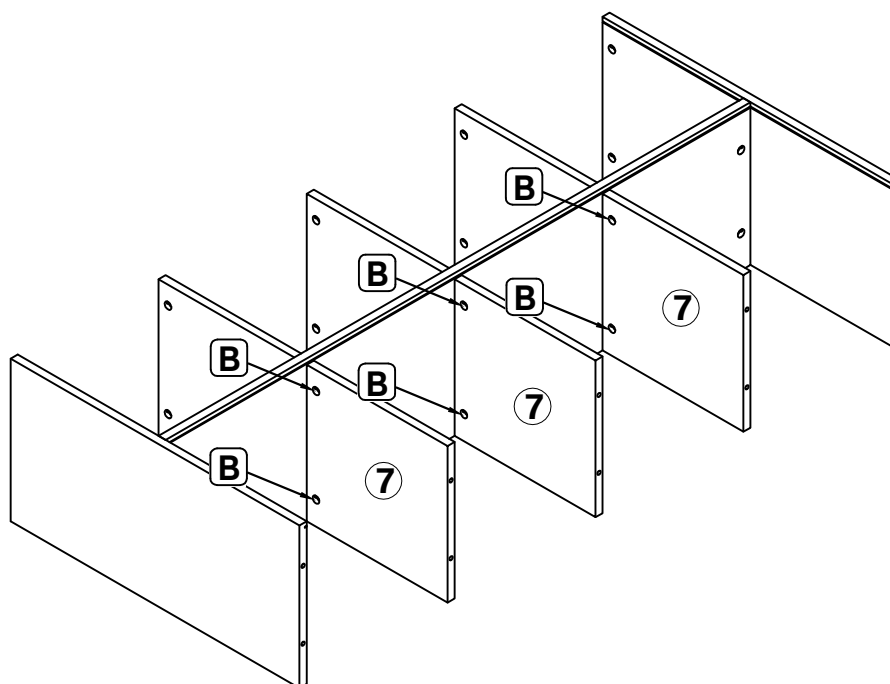


Step 5

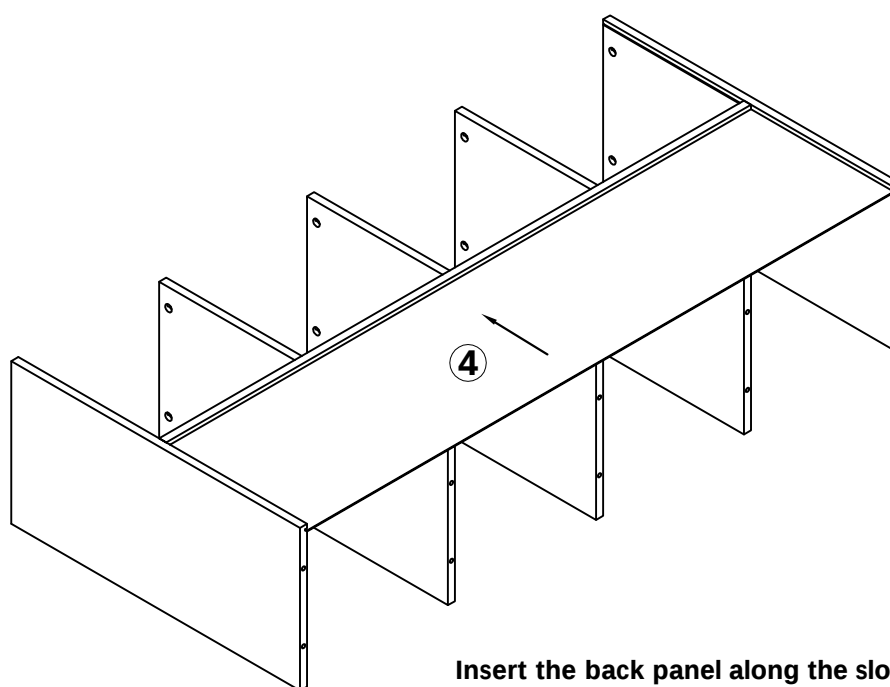


Insert the back panel along the slot

Step 6

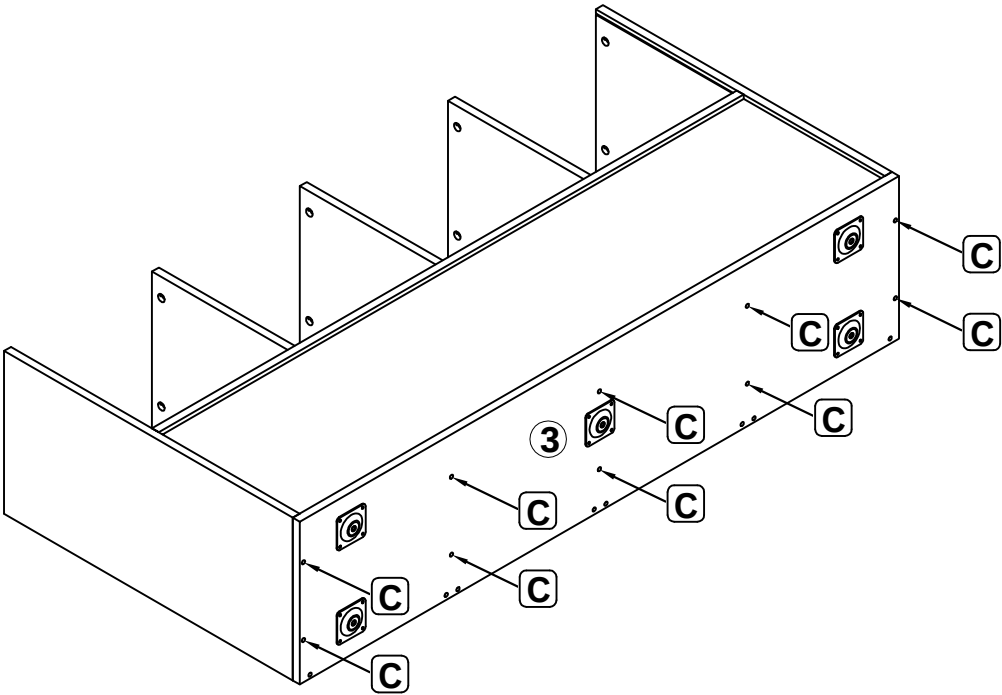


Step 7

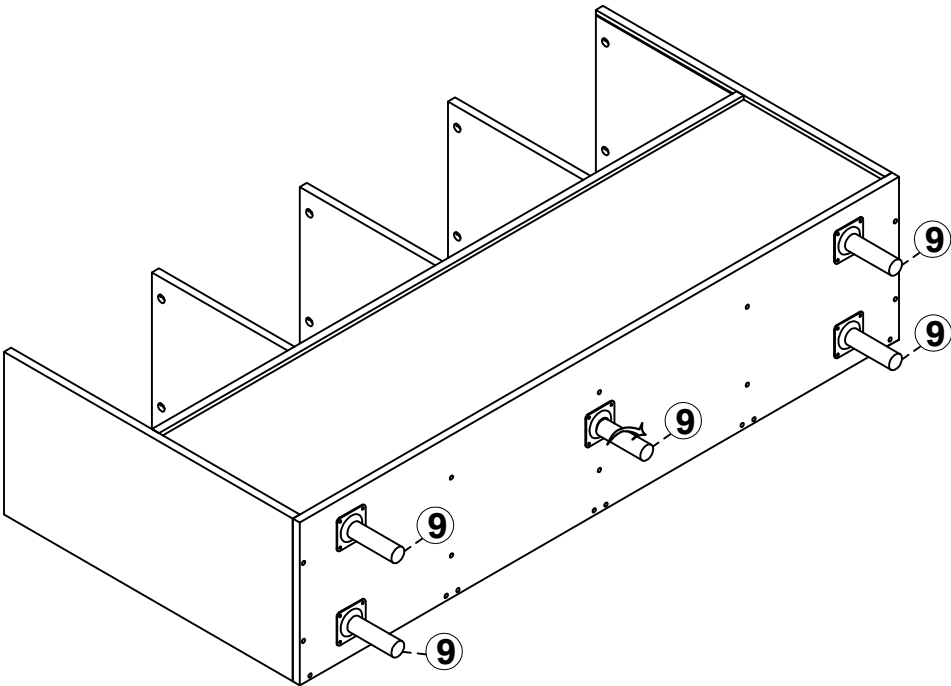


Step 8

Insert the back panel along the slot

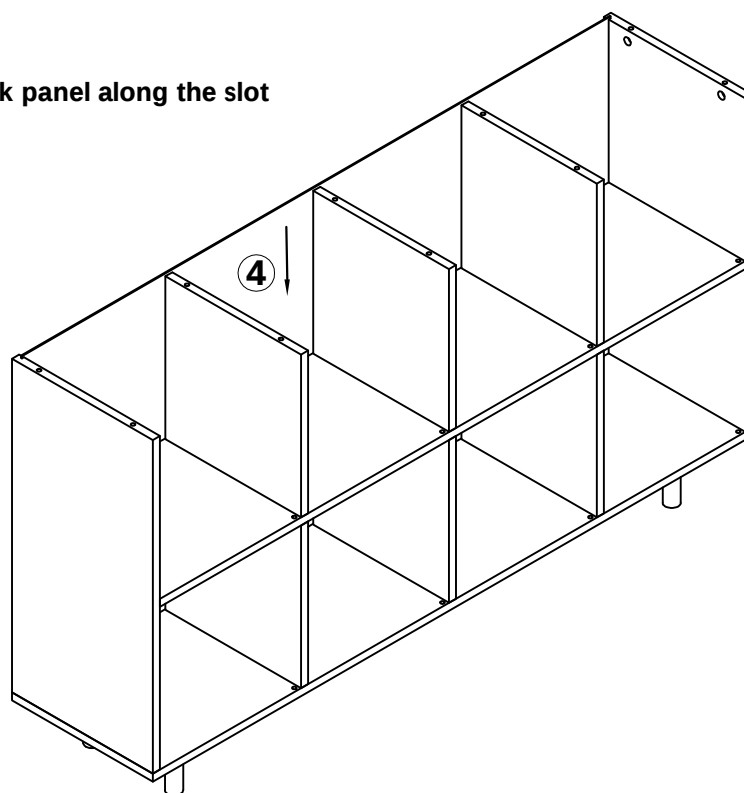


Step 9

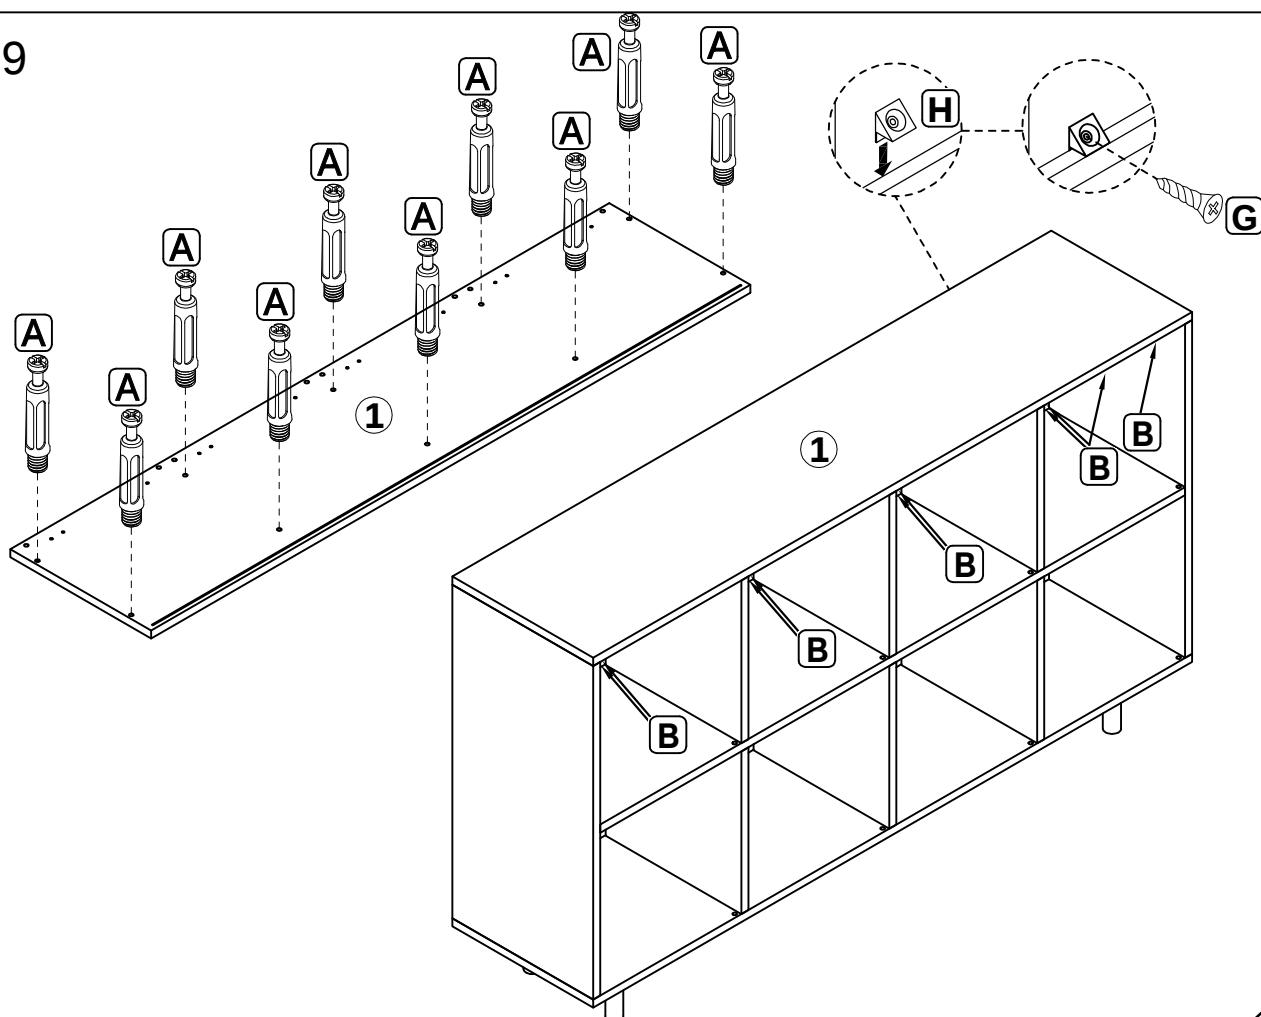

Step 10

The four door panels can be installed in any position. They can face left or right.

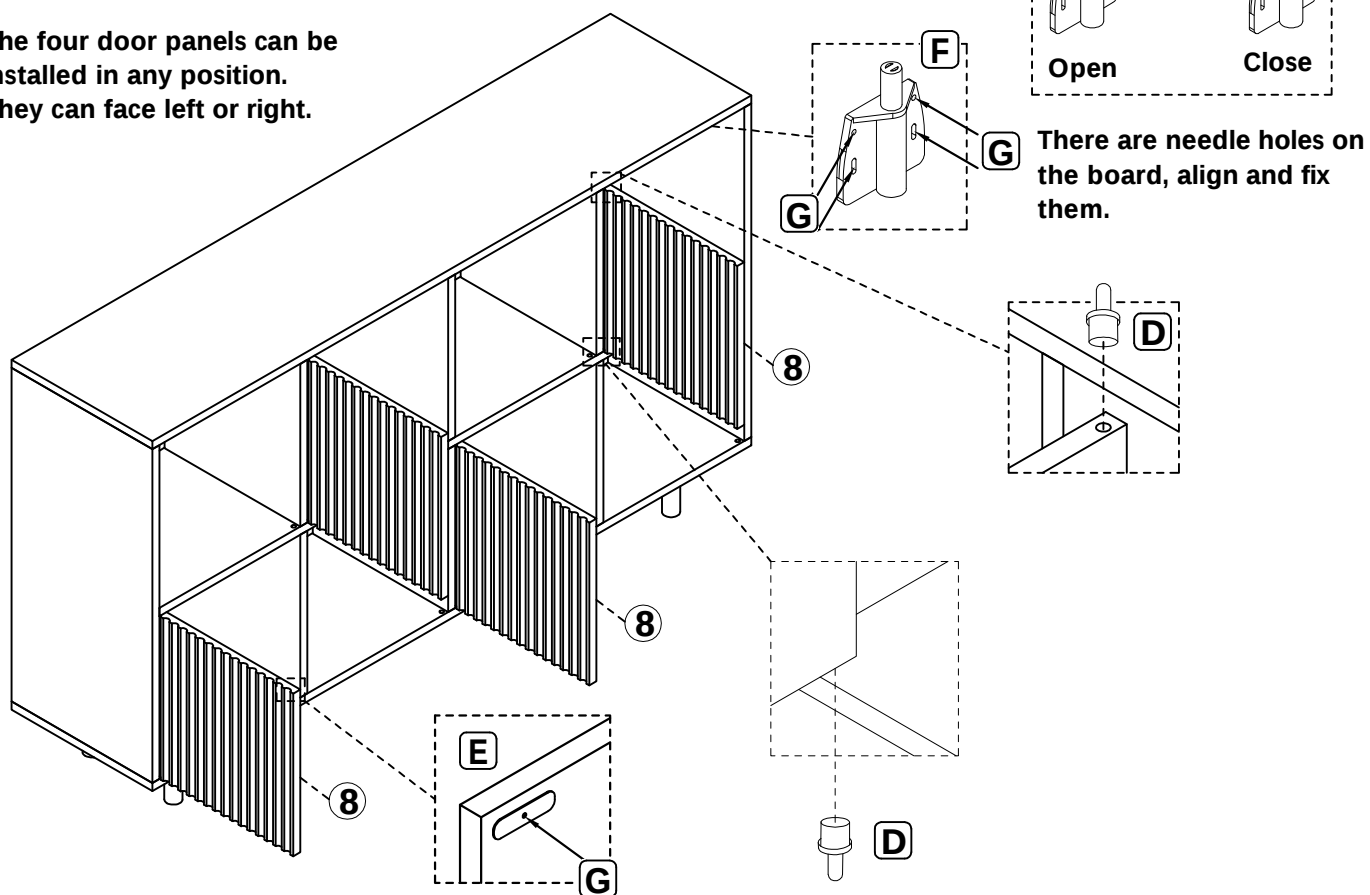

Step 11

