


INSTALLATION
Product Manual

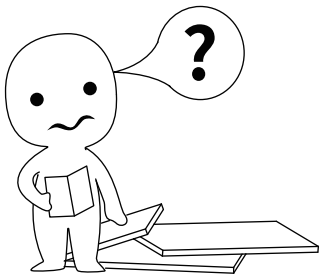

IMPORTANT INFORMATION!


please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

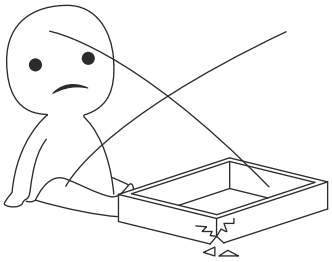


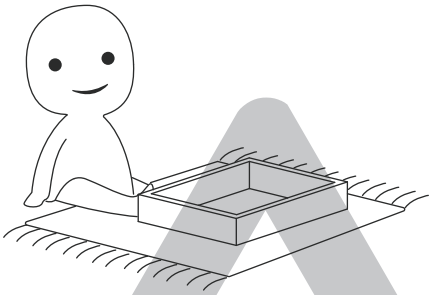

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

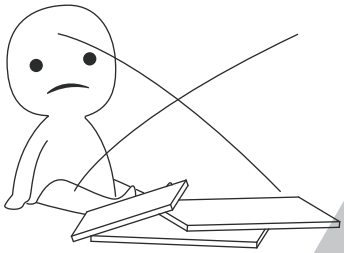


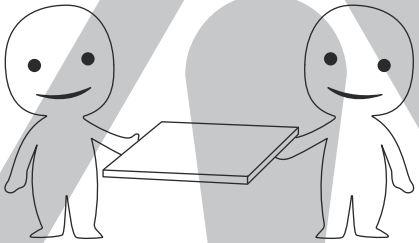

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

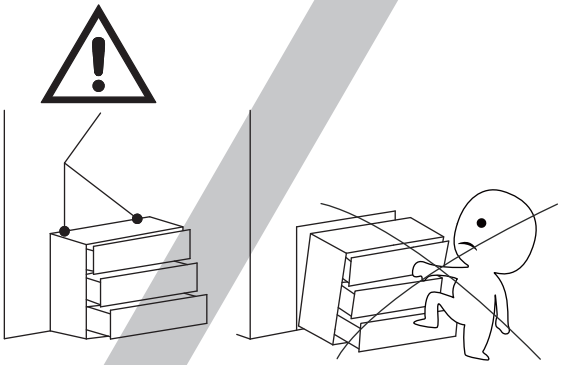

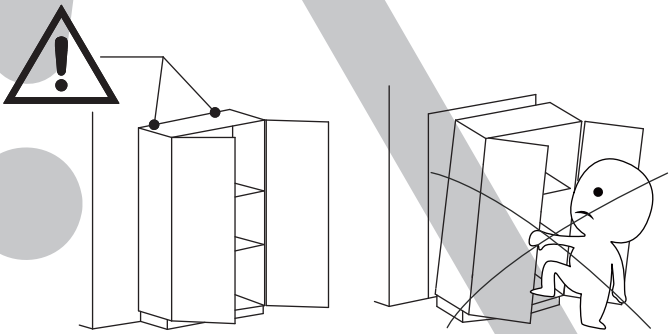

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.





For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.





Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




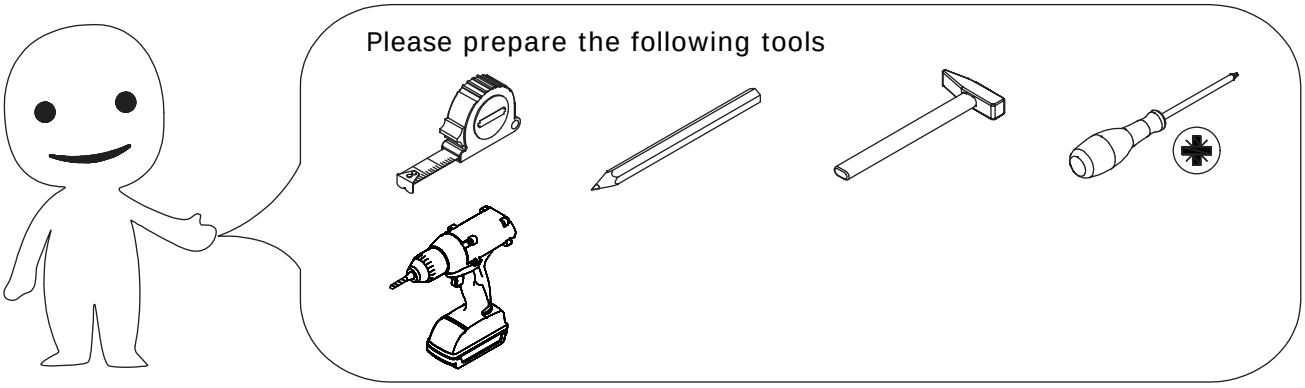





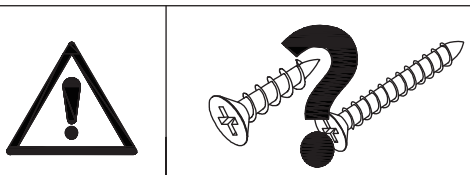



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

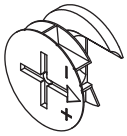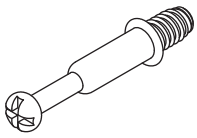A x 63	B x 63	C x 63	D x 39
			

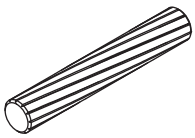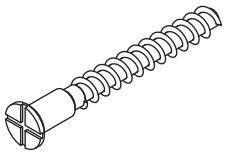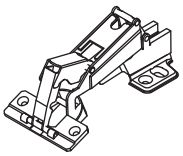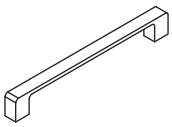E x 14	F x 30	G x 8	H x 1
			

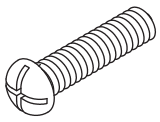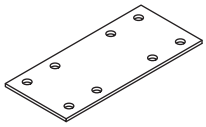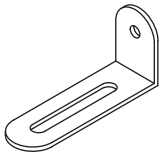J x 2	K x 14	L x 162	M x 2
			

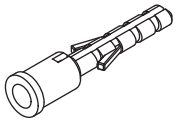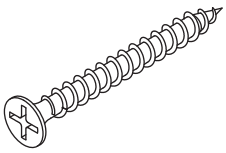N x 2	P x 2	Q x 72	R x 72
			

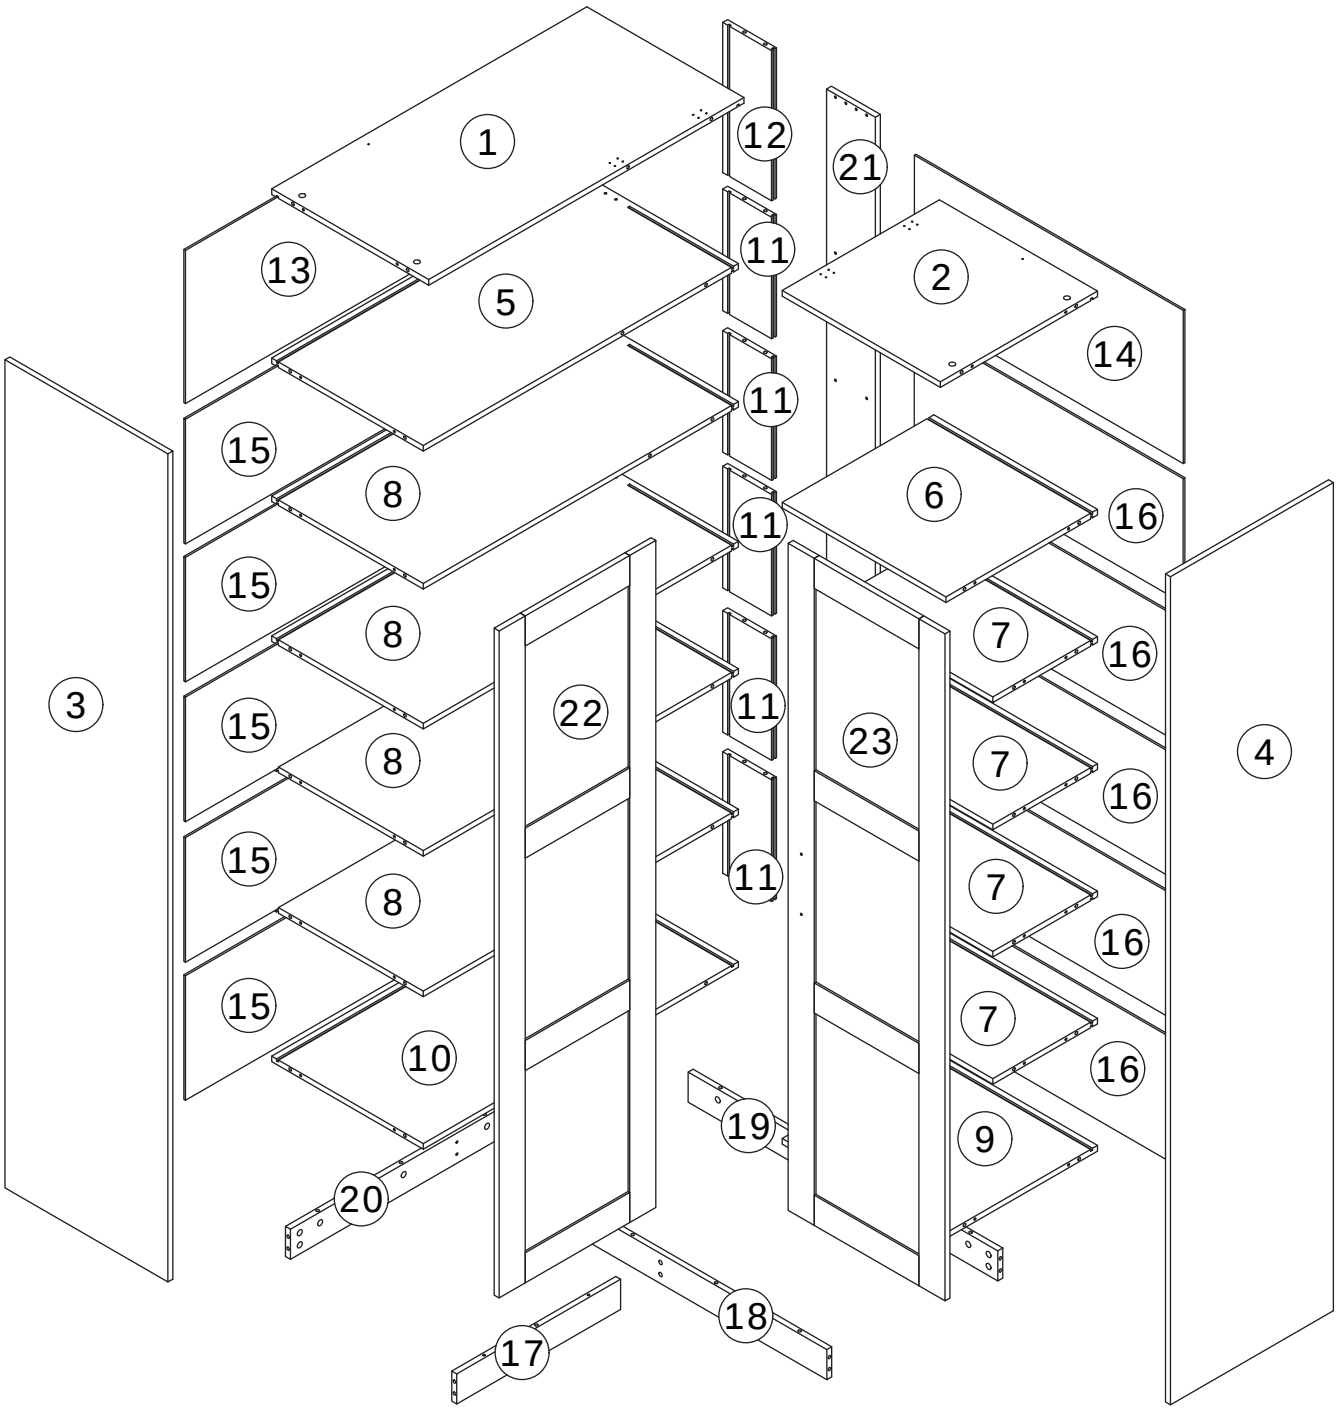

⚠WARNING







Children have died from furniture tipover.To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

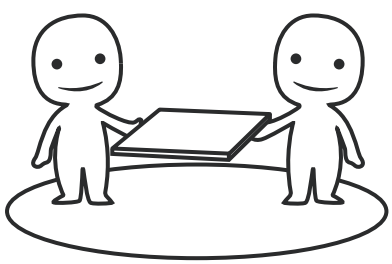

ASSEMBLED BY 2 ADULTS

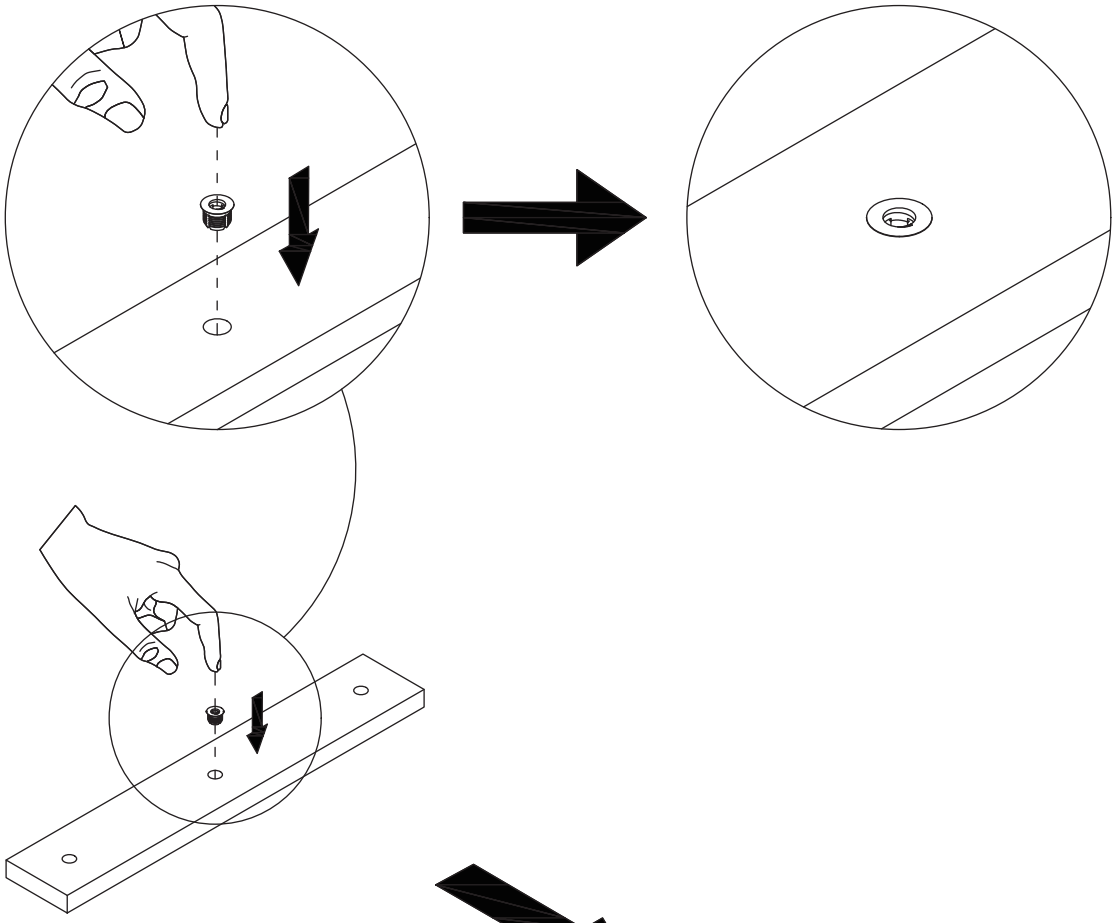


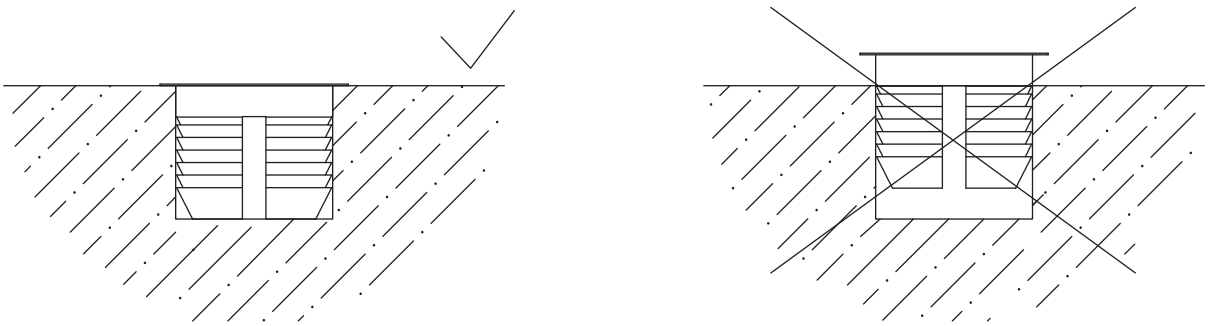

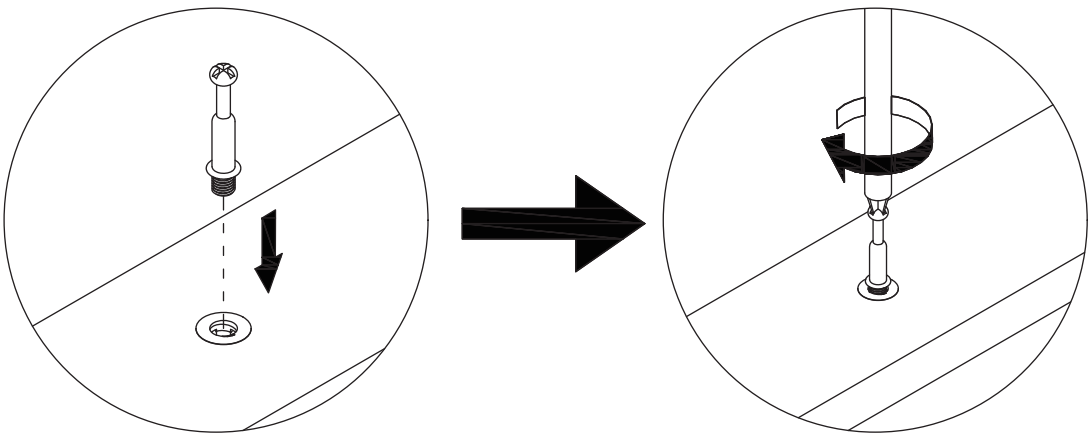



1

E x 2




CRF0840A


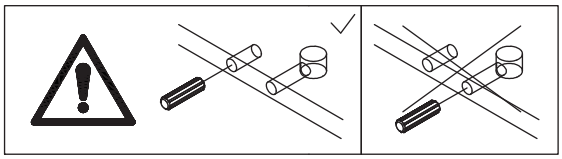


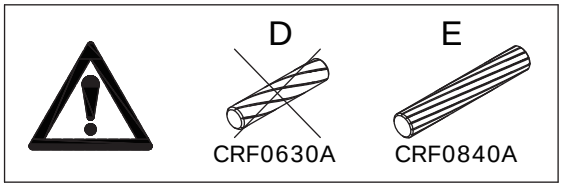

Connect panel 2 to panel 1 using wooden dowel (E).

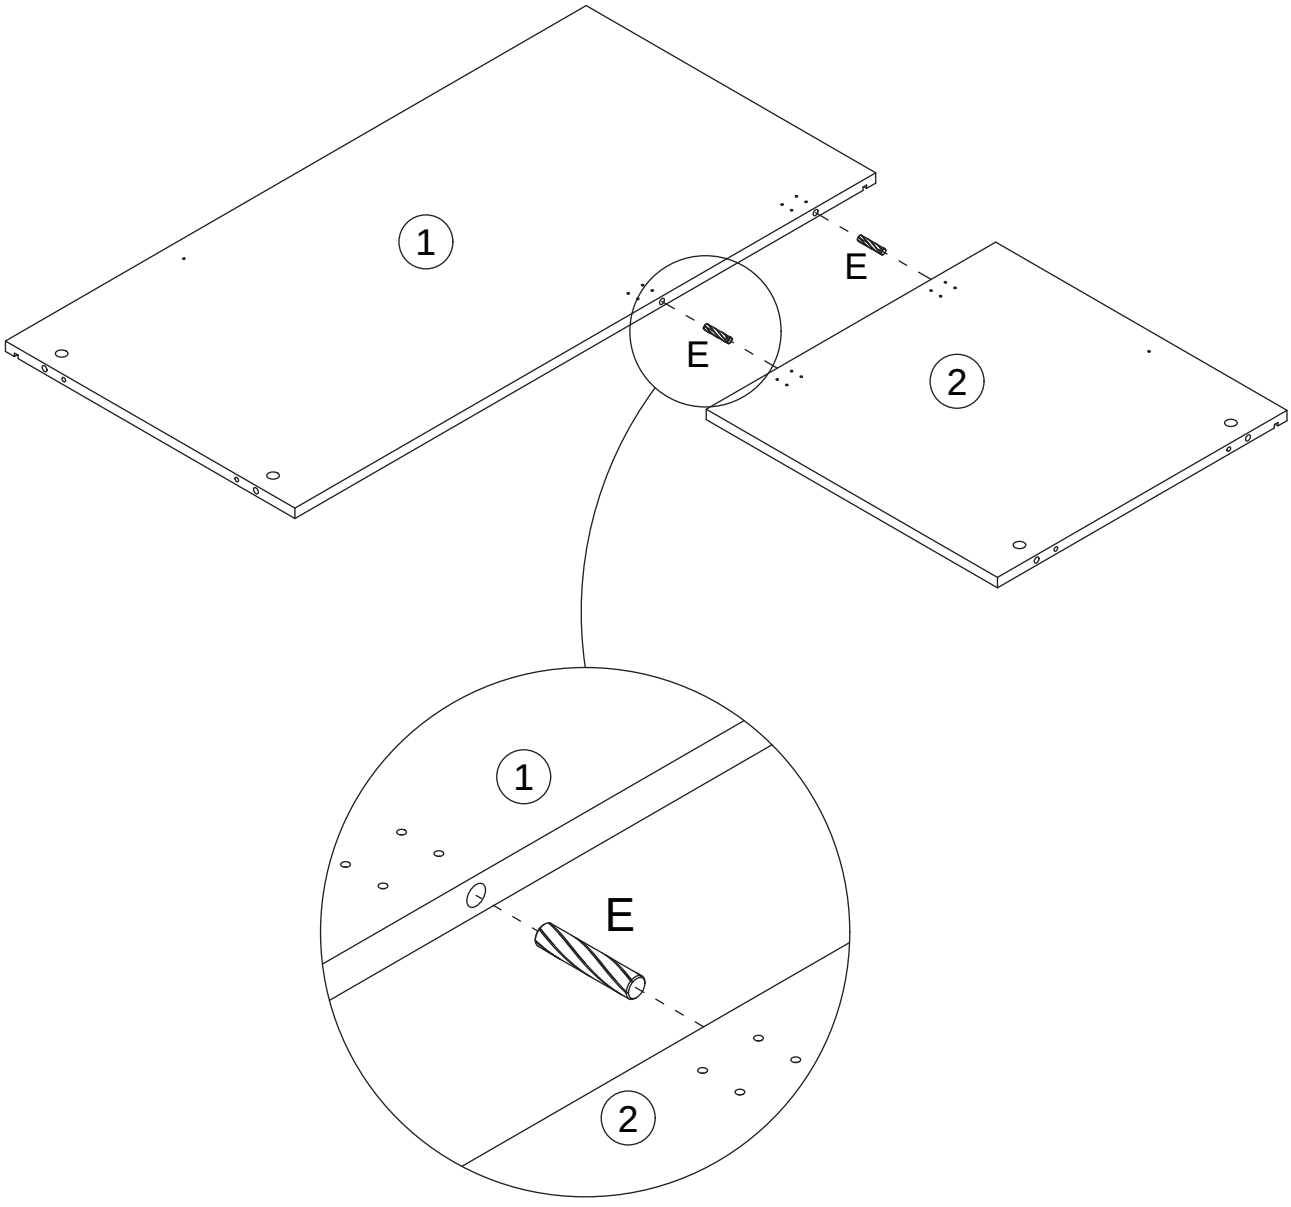

2


K x 2	L x 16	
	 CRD3514A	





L  CRD3514A


R  CRD0314A

Secure part (K) to panels 1 and 2 using screw (L).

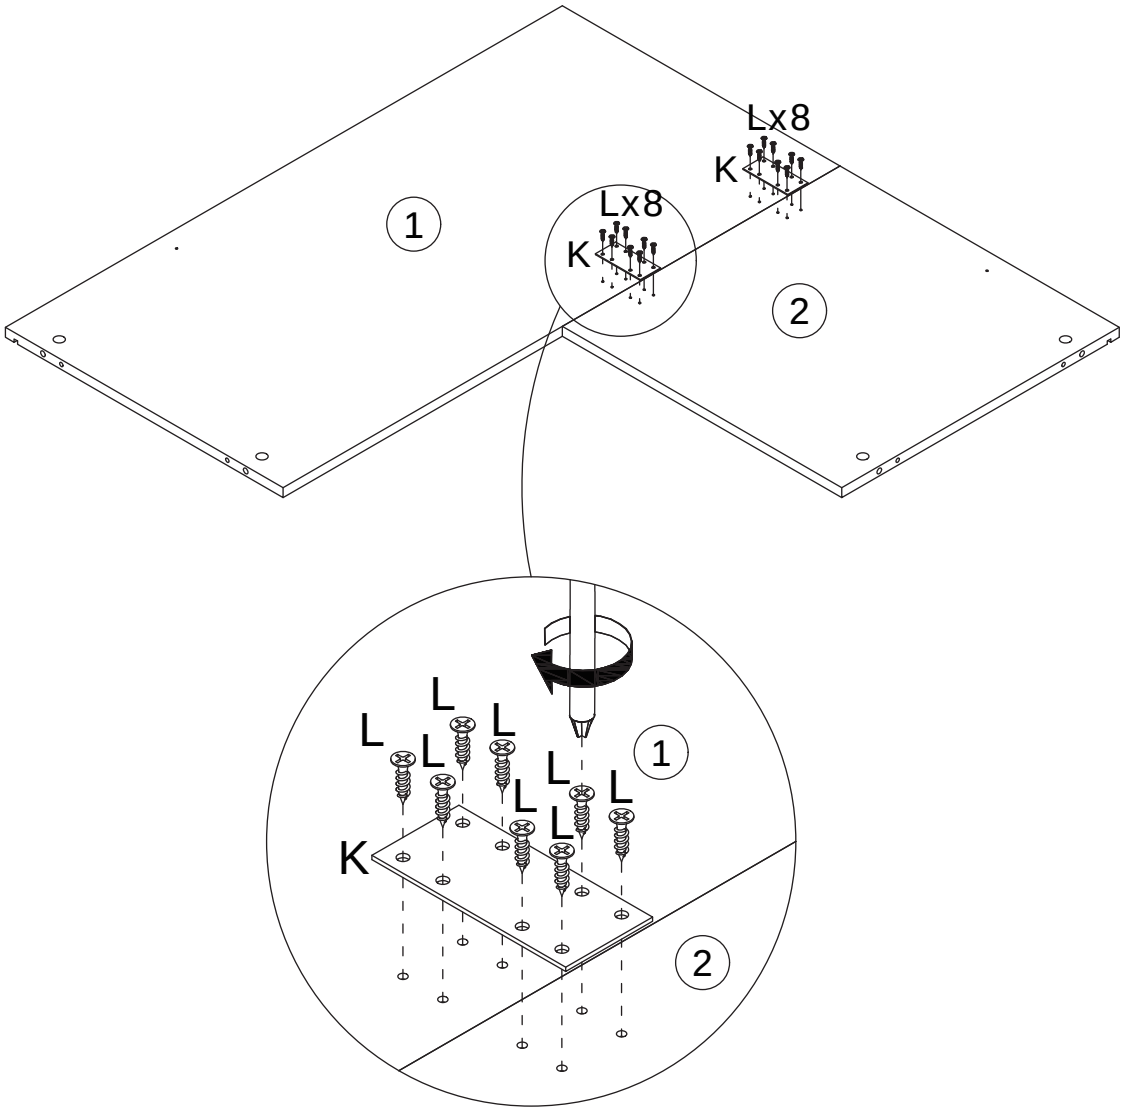


3

B x 2	C x 2	
 CRA0635B		

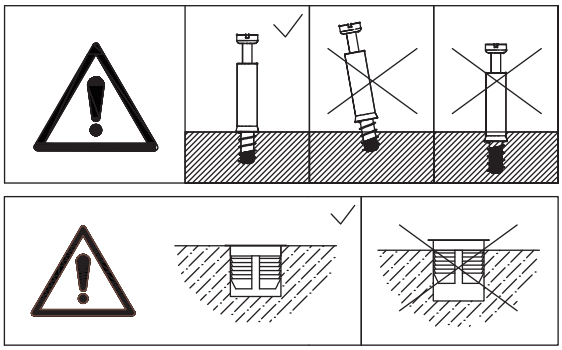


Install plug (C) onto panel 1, then screw self-tapping rod (B) into panel 1.

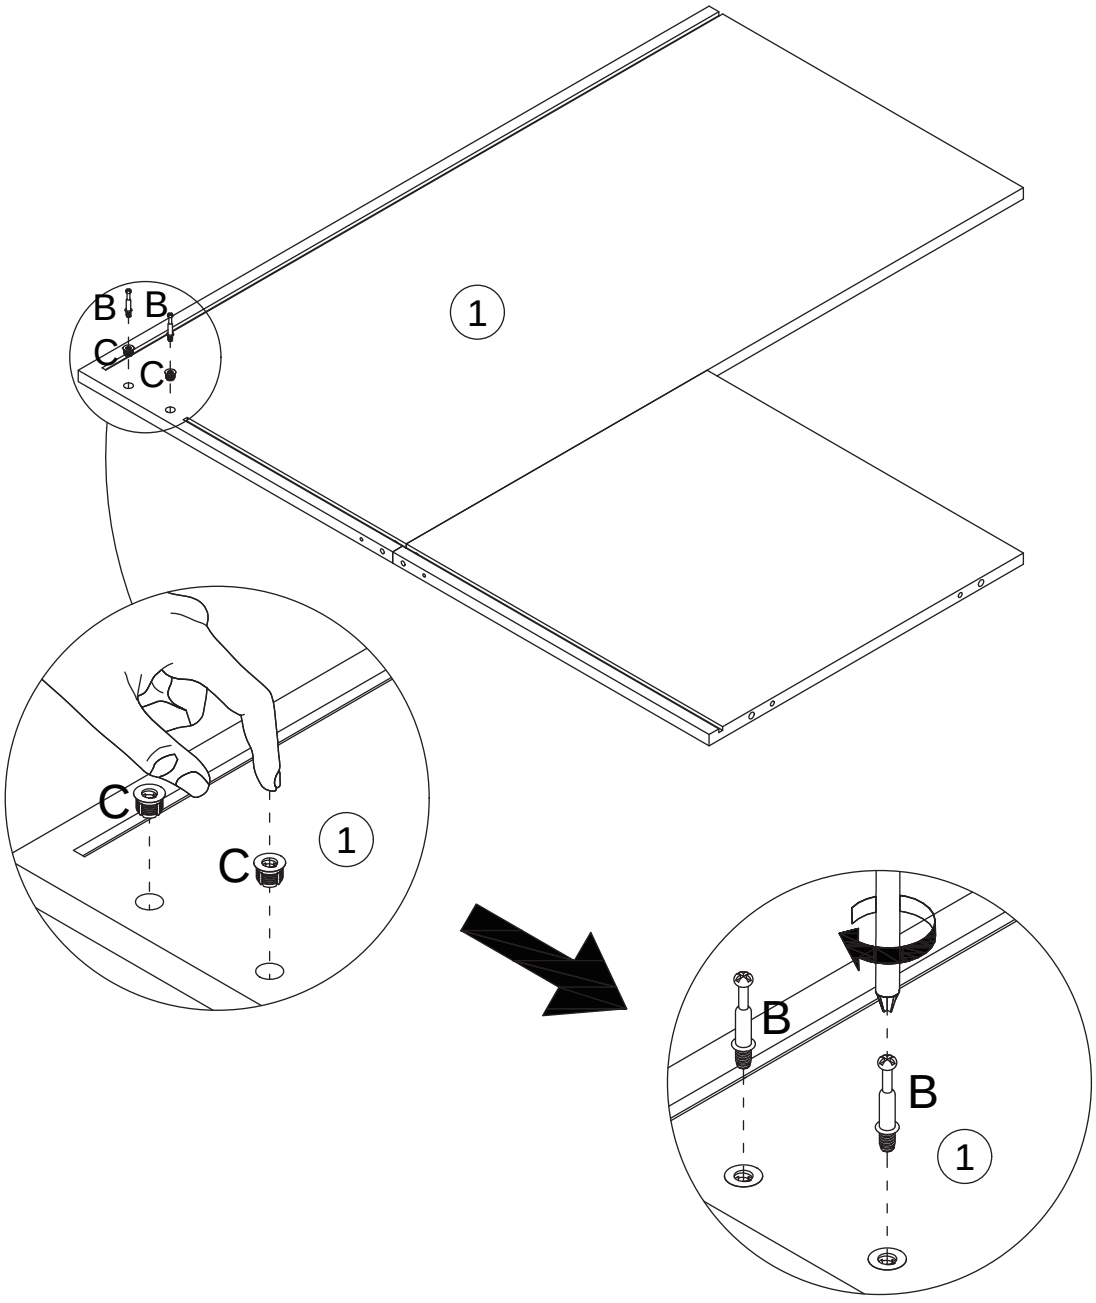



4

E x 2




CRF0840A


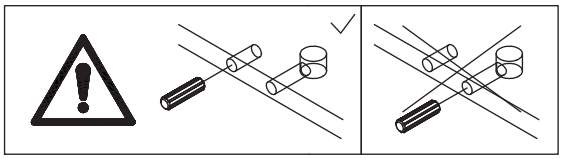


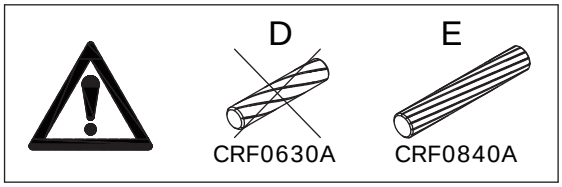

Connect panel 6 to panel 5 using wooden dowel (E).

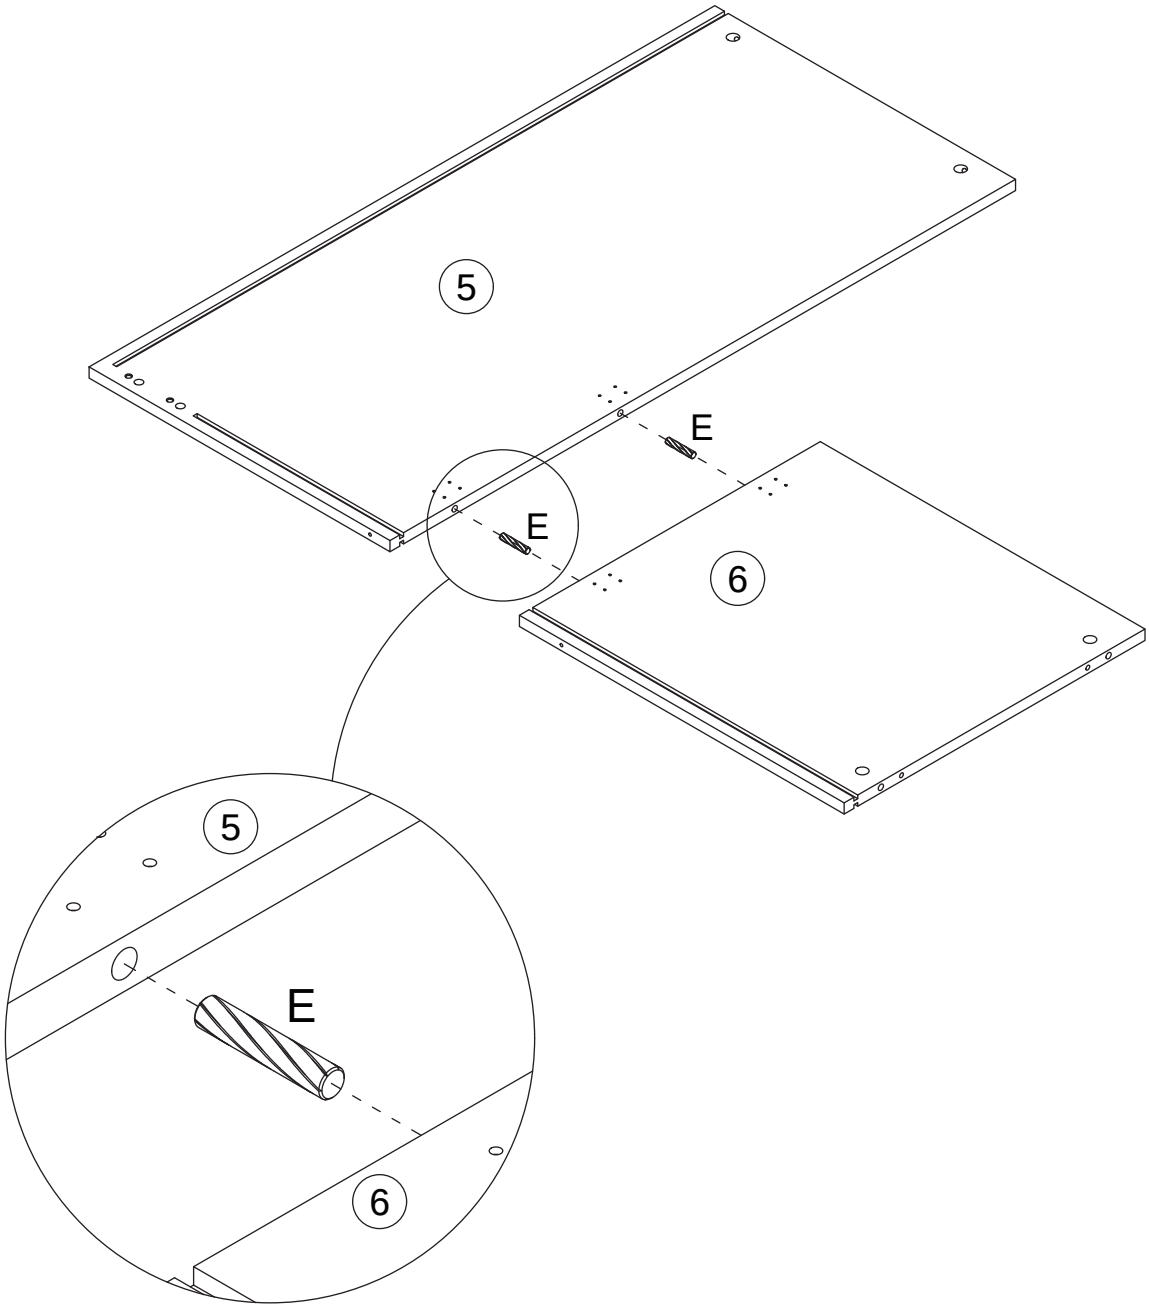

5


K x 2	L x 16	
	 CRD3514A	





L  CRD3514A


R  CRD0314A

Secure part (K) to panels 5 and 6 using screw (L).

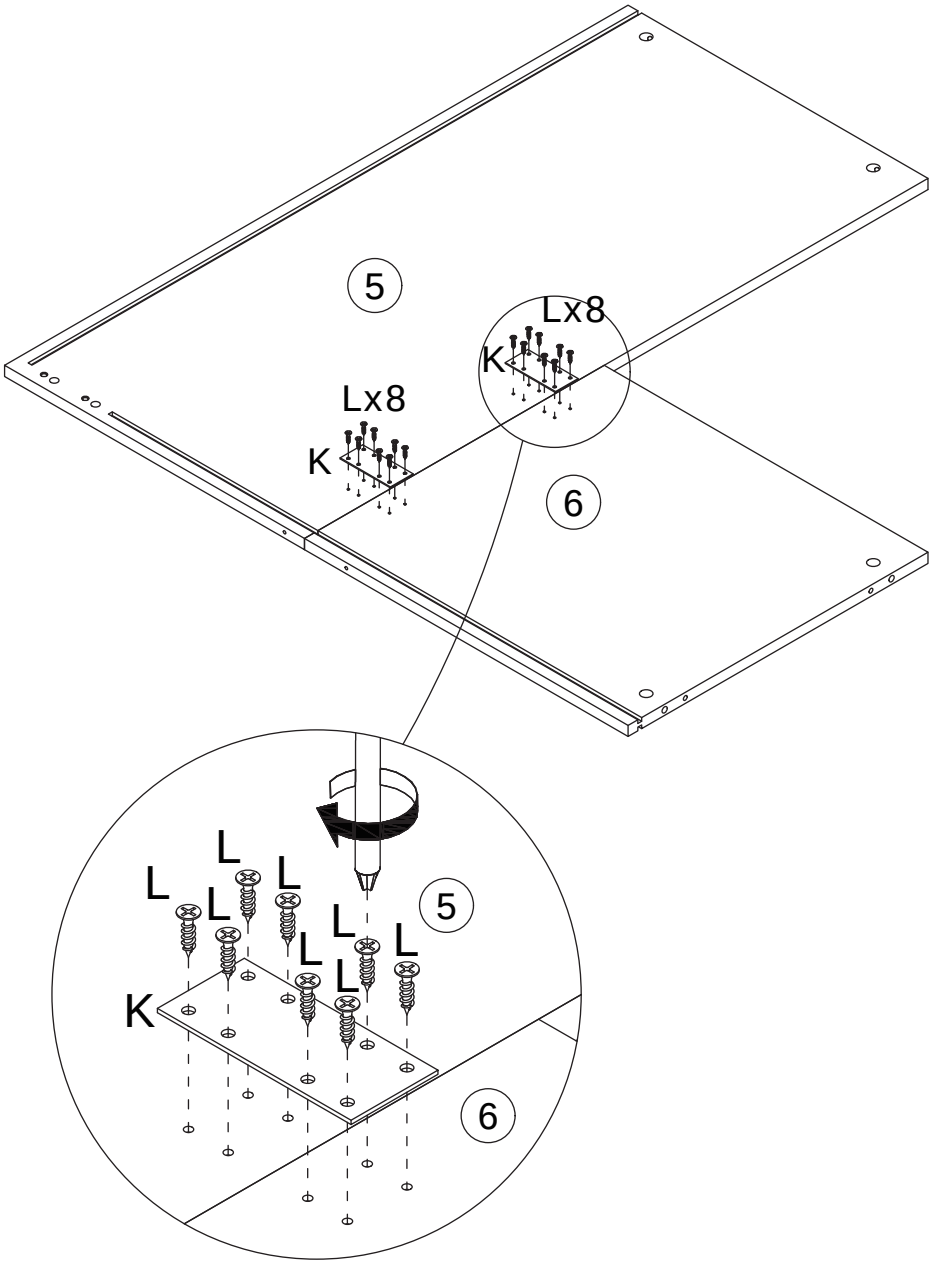


6

B x 2	C x 2	
 CRA0635B		

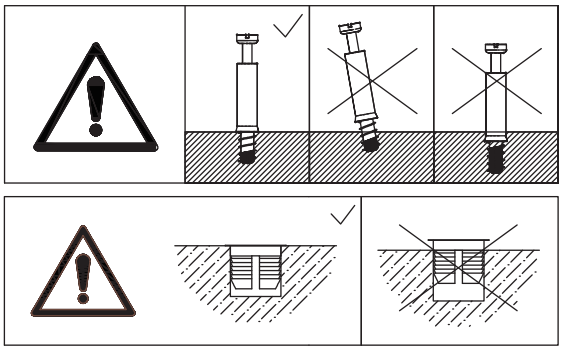


Install plug (C) onto panel 5, then screw self-tapping rod (B) into panel 5.

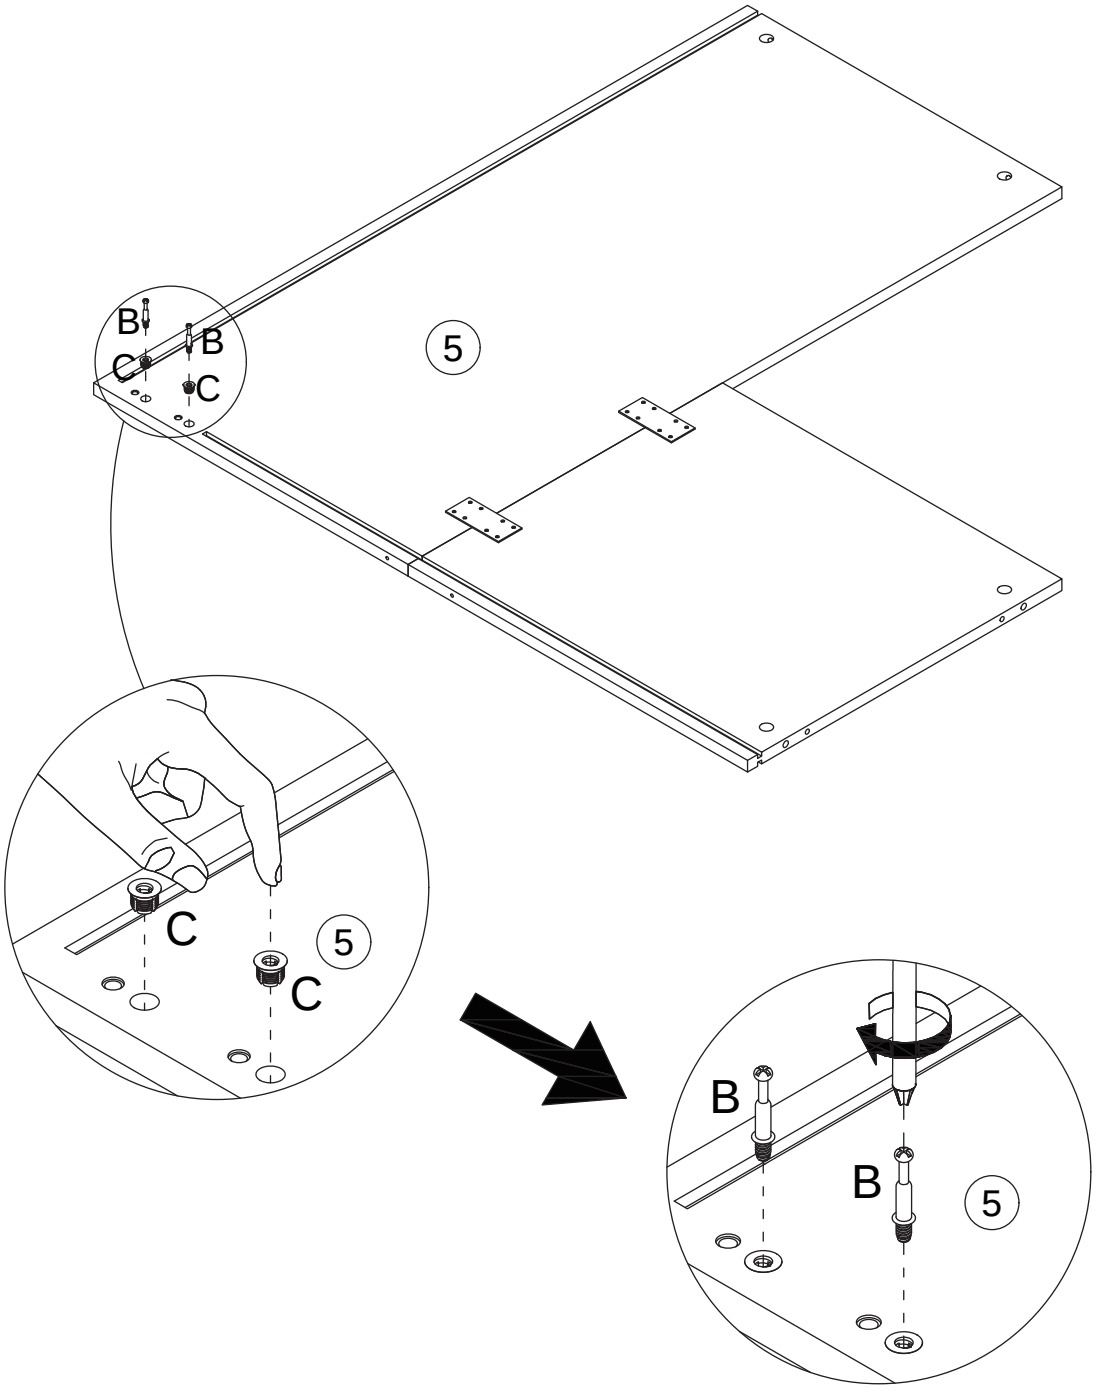



7

E x 8




CRF0840A


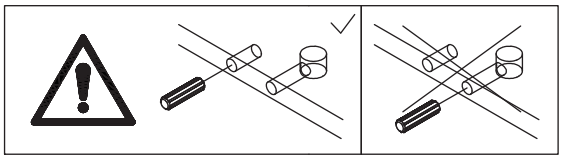


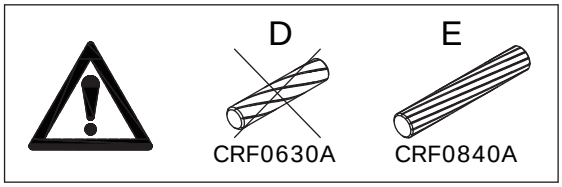

Connect panel 7 to panel 8 using wooden dowel (E).

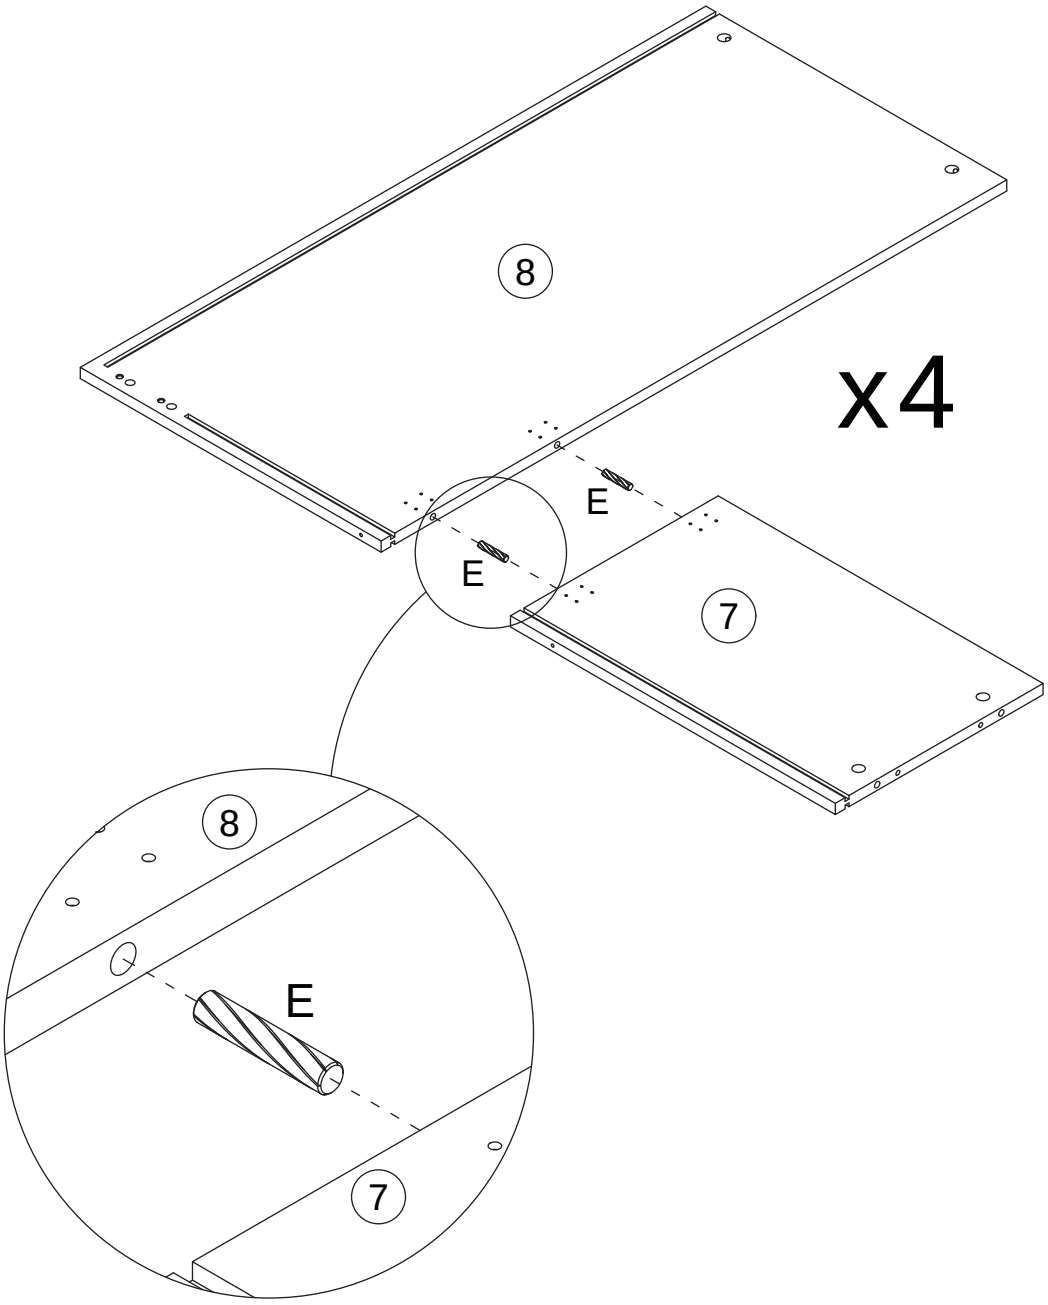

8


K x 8	L x 64	
	 CRD3514A	





L  CRD3514A


R  CRD0314A

Secure part (K) to panels 7 and 8 using screw (L).

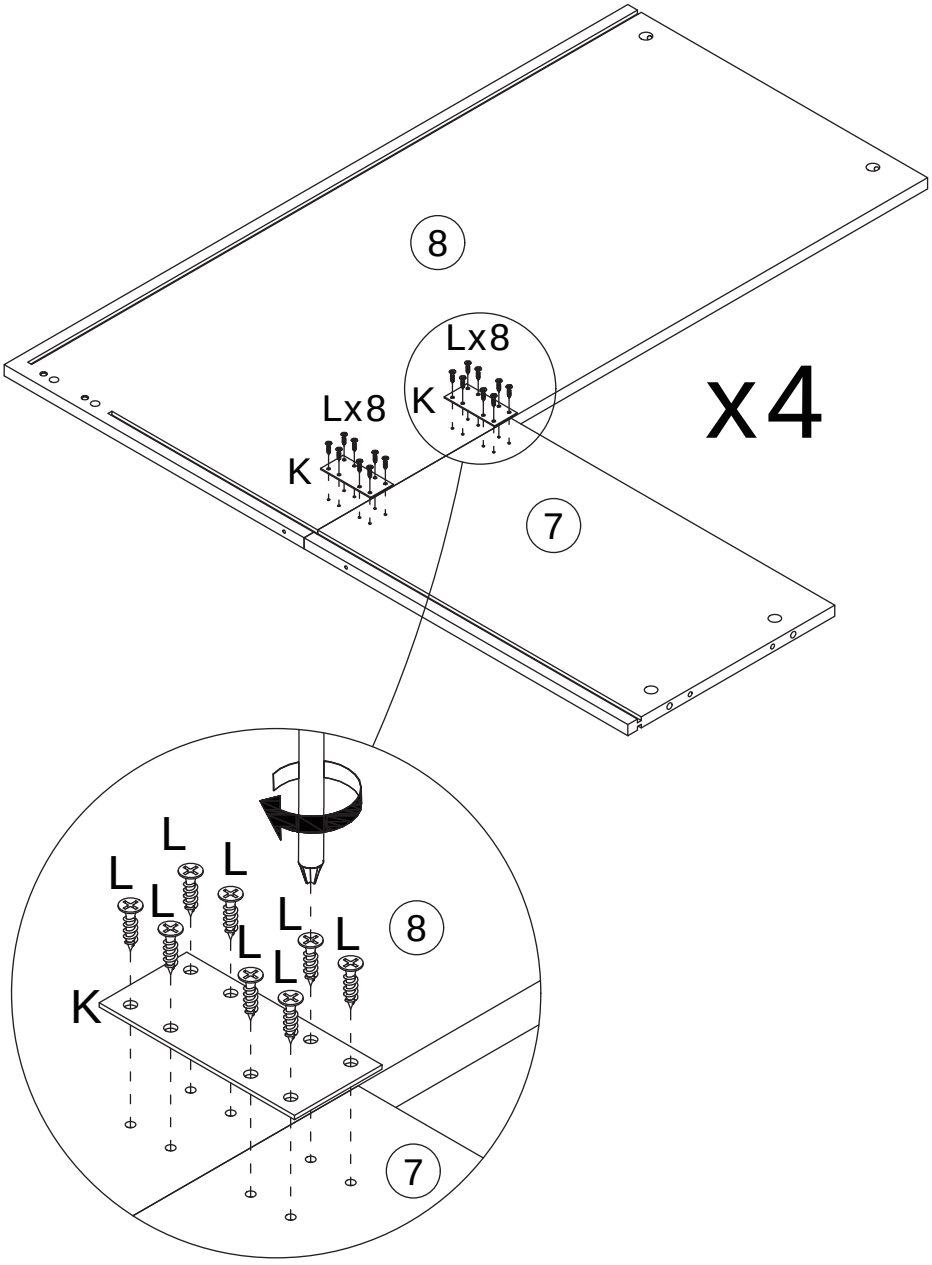


9

B x 8	C x 8	
 CRA0635B		

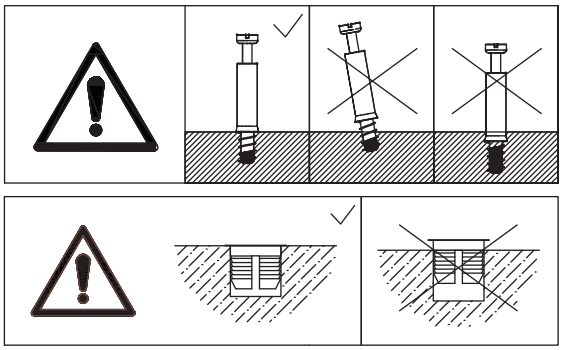


Install plug (C) onto panel 8, then screw self-tapping rod (B) into panel 8.

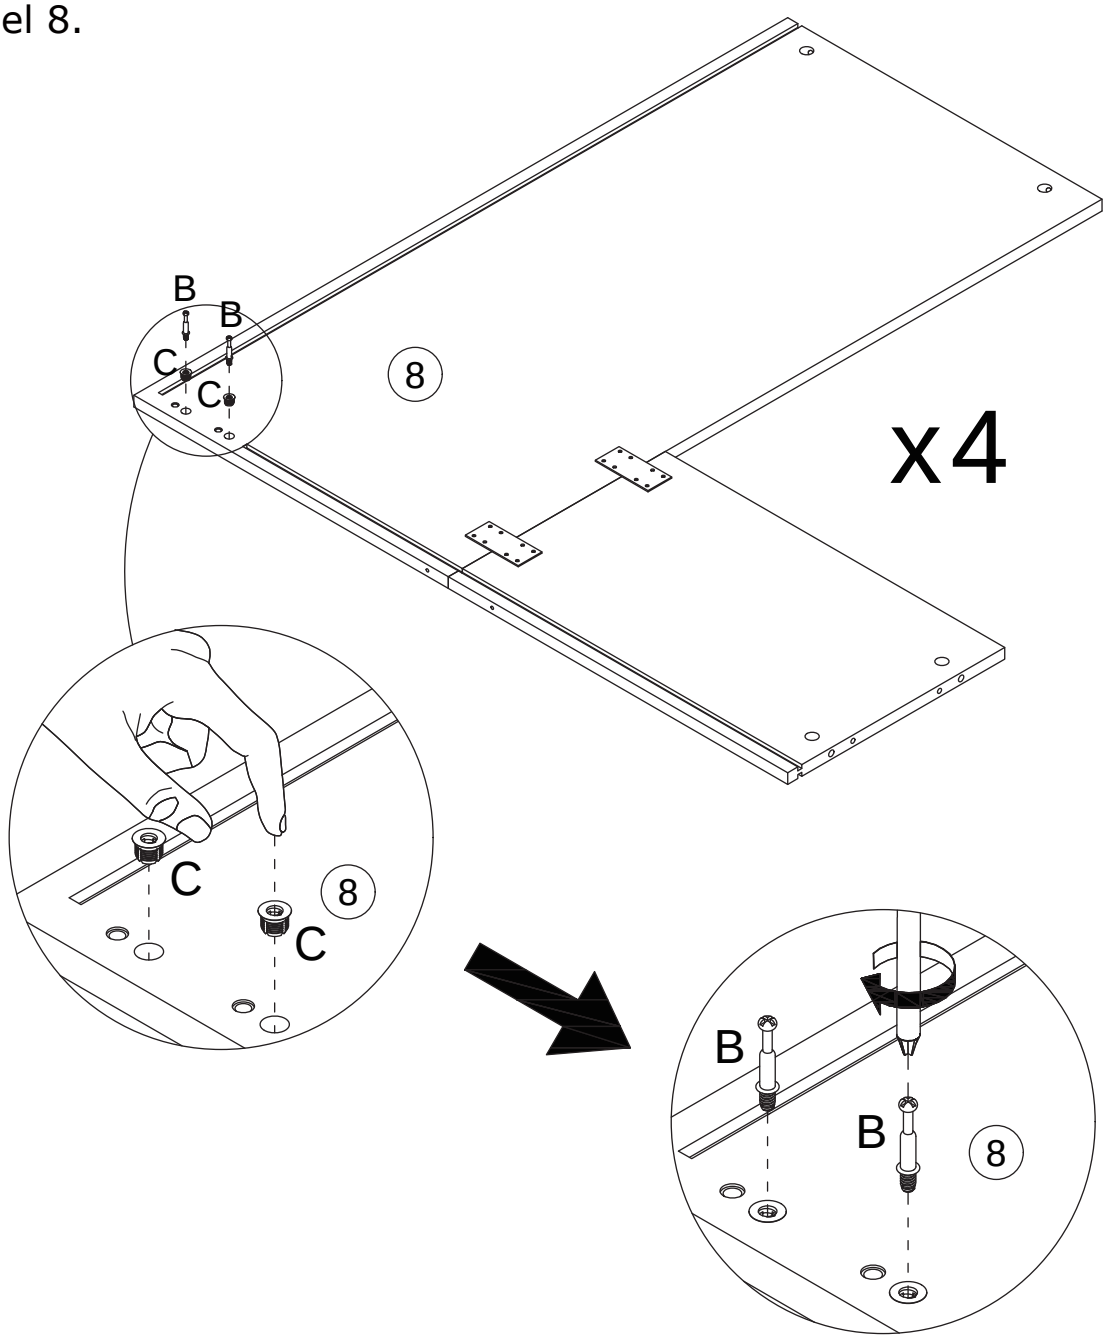



10

E x 2




CRF0840A


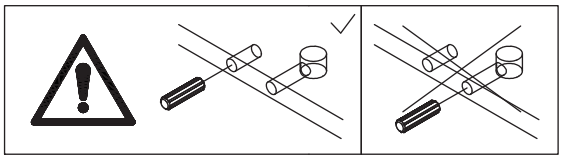


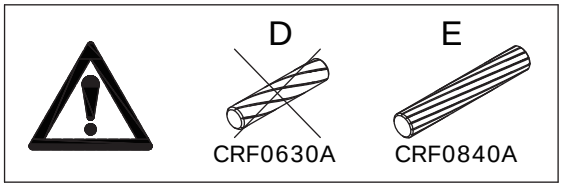

Connect panel 10 to panel 9
using wooden dowel (E).

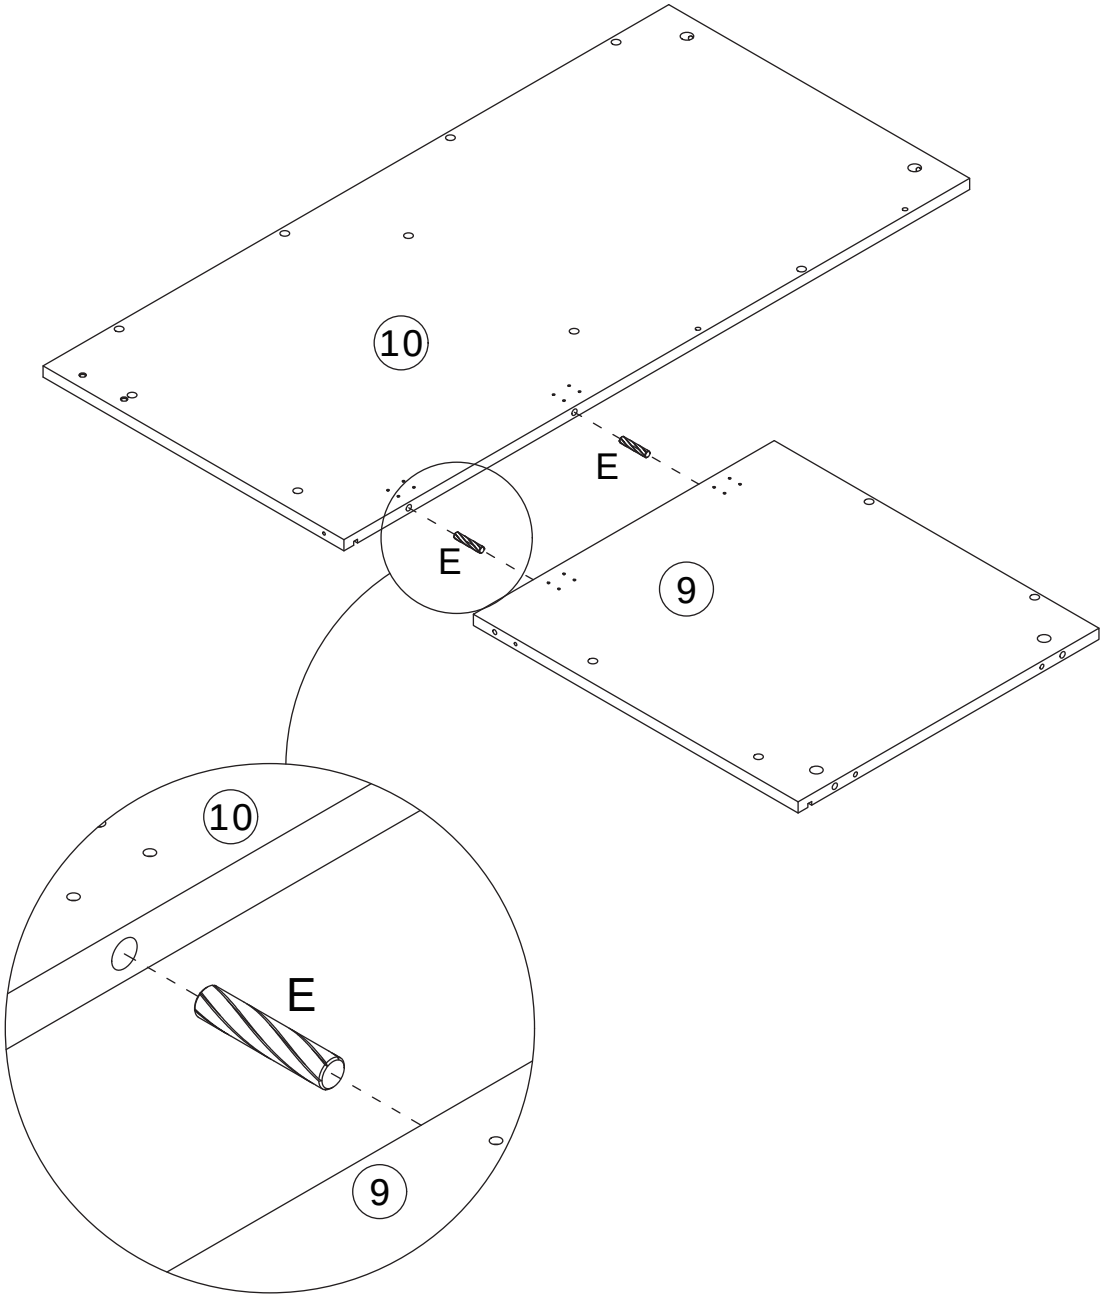

11


K x 2	L x 16	
	 CRD3514A	





L  CRD3514A


R  CRD0314A

Secure part (K) to panels 9 and 10 using screw (L).

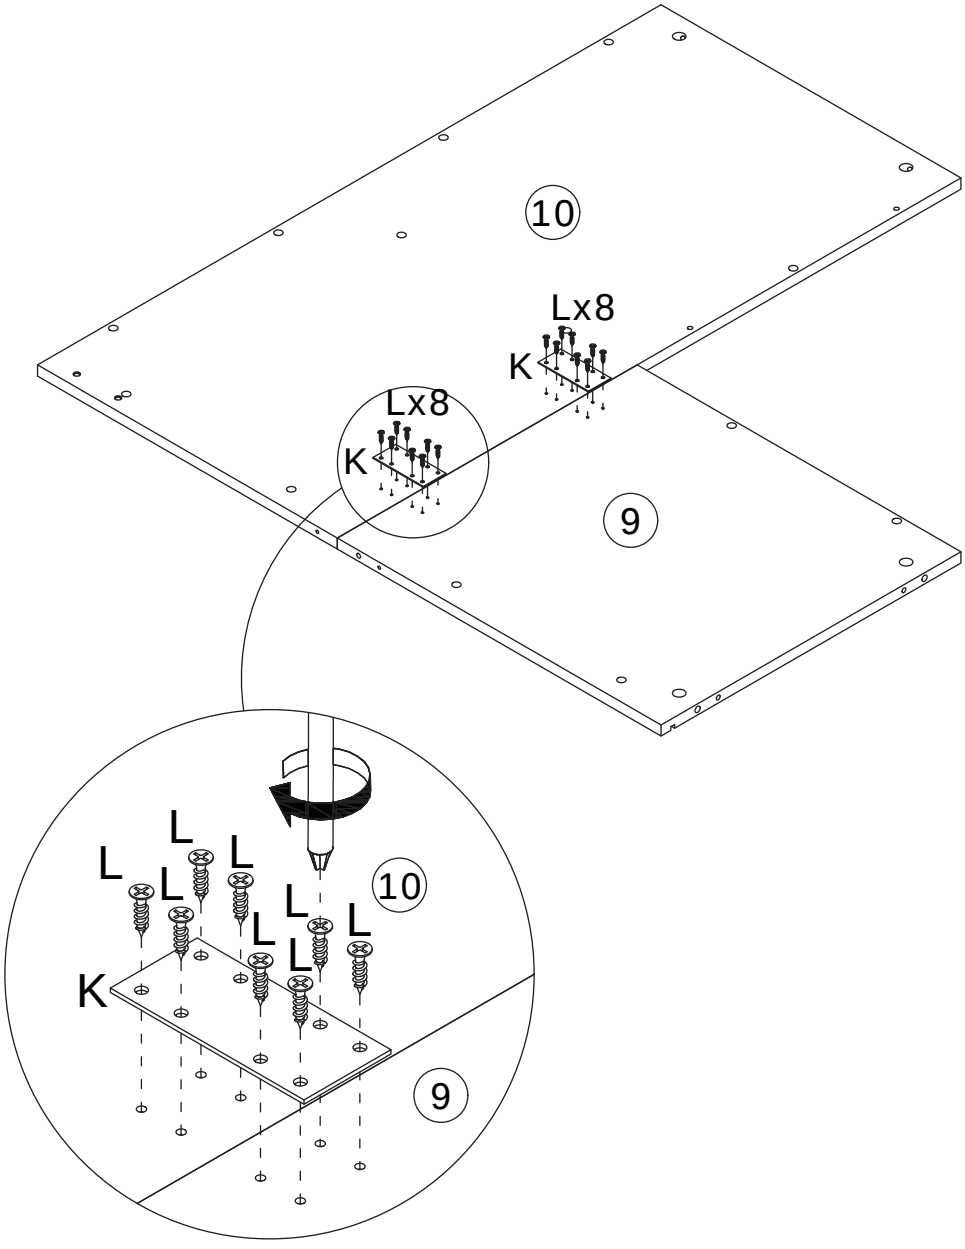


12



B x 13	C x 13	
 CRA0635B		

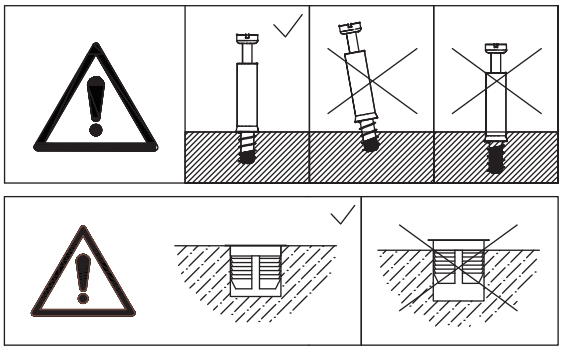


Install plug (C) onto panels 9 and 10, then screw self-tapping rod (B) into panels 9 and 10.

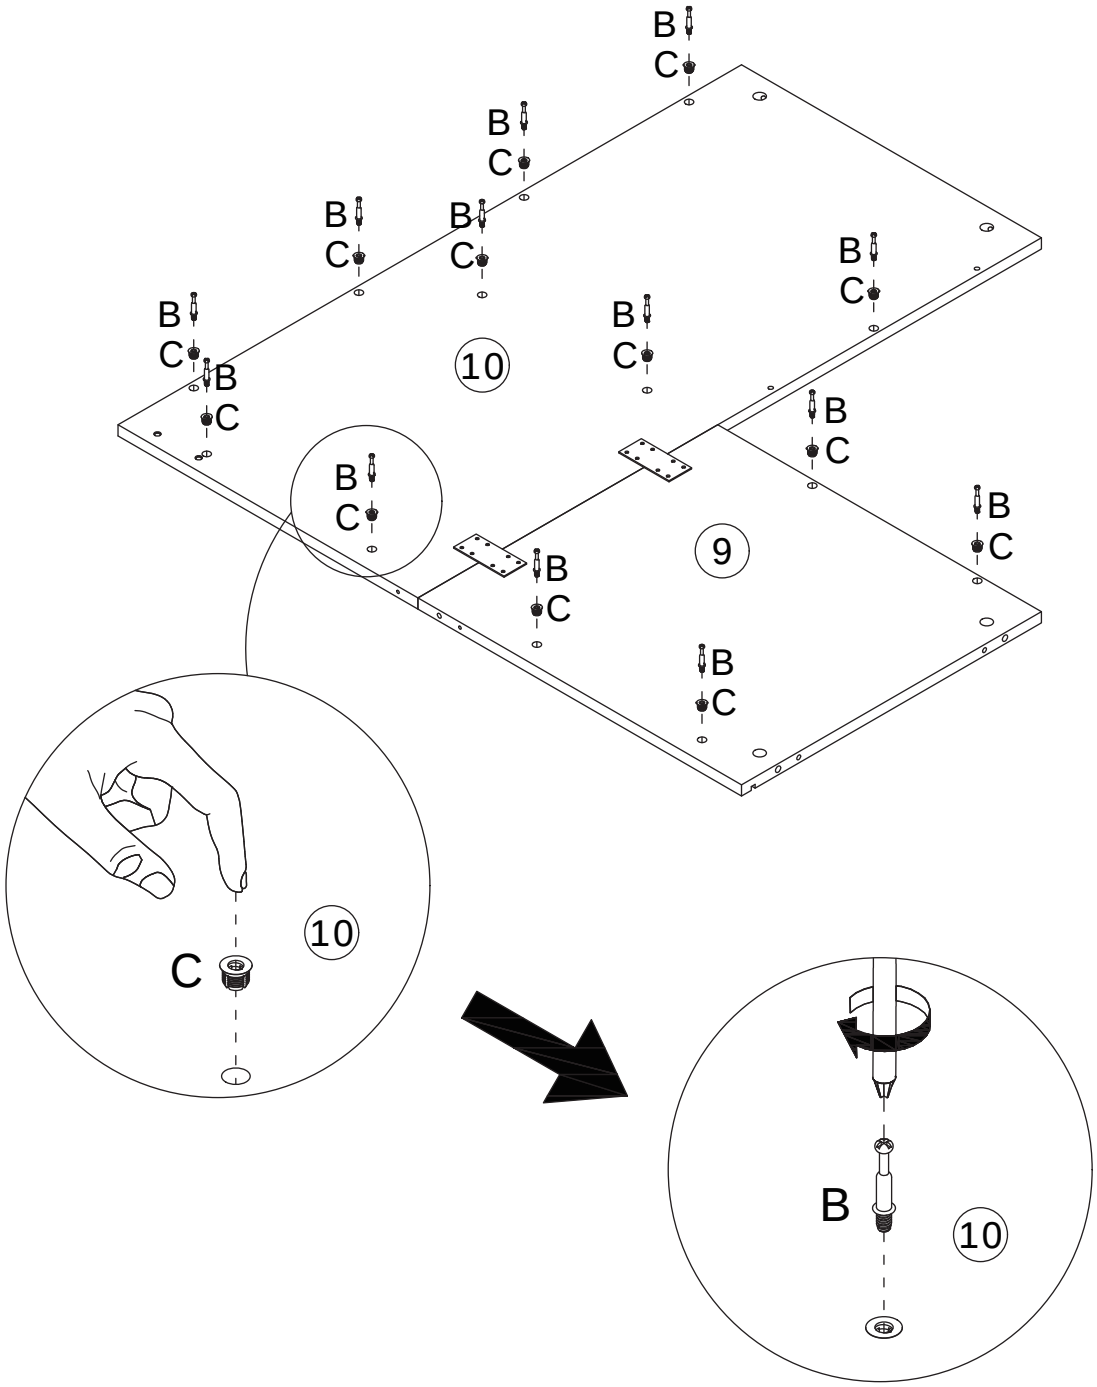


13

B x 2	C x 2	
 CRA0635B		

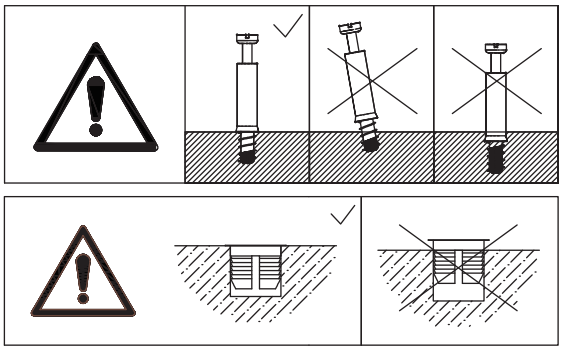

Install plug (C) onto panel 18, then screw self-tapping rod (B) into panel 18.

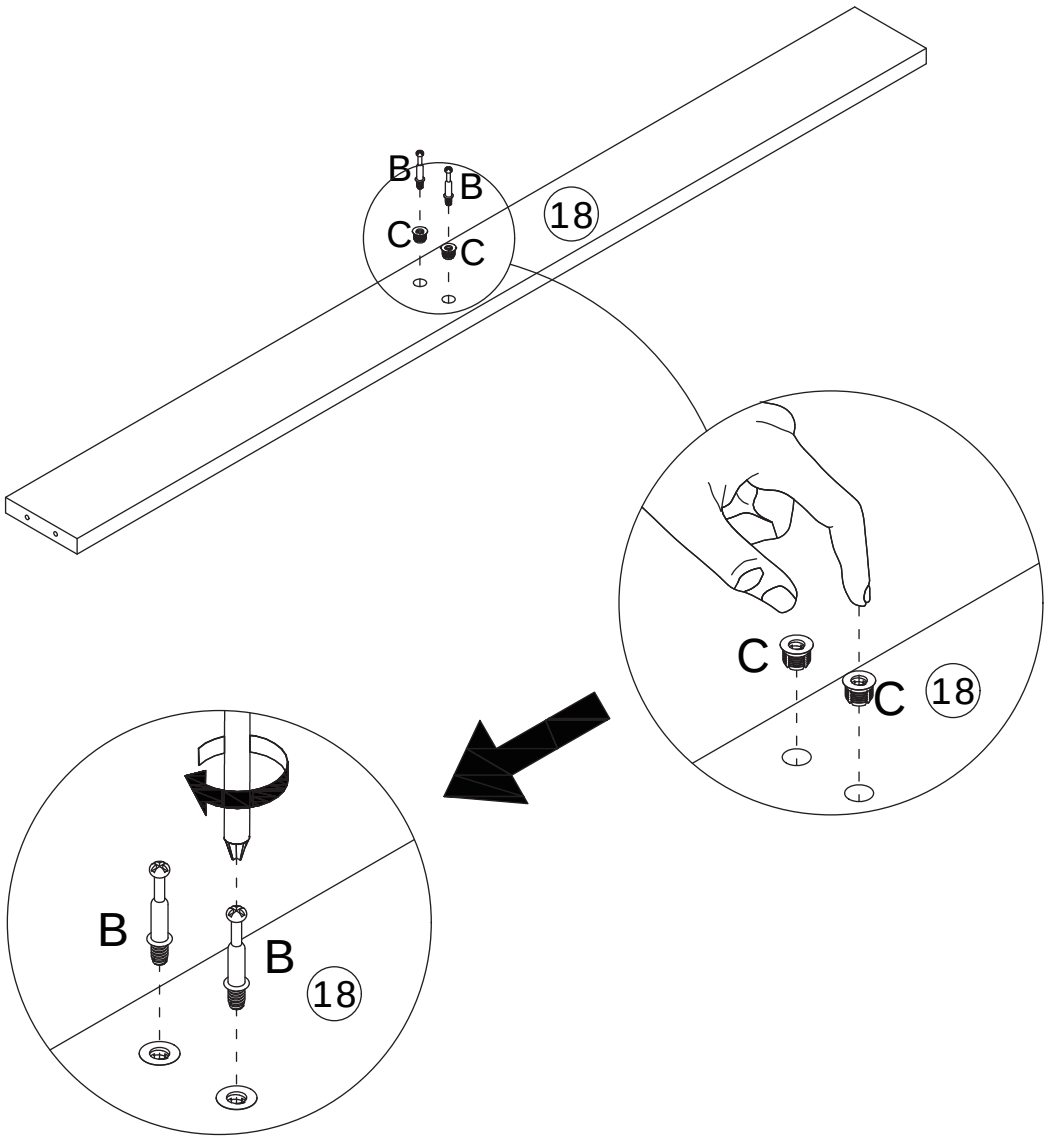



14

A x 2




CRB1595A





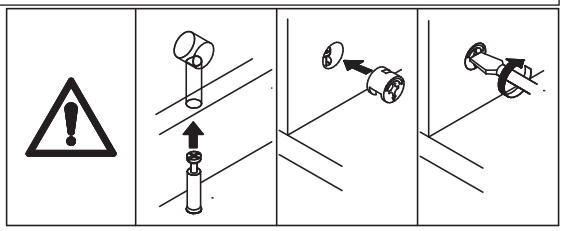


Connect panel 17 to panel 18, then tighten by turning cam lock (A) clockwise.

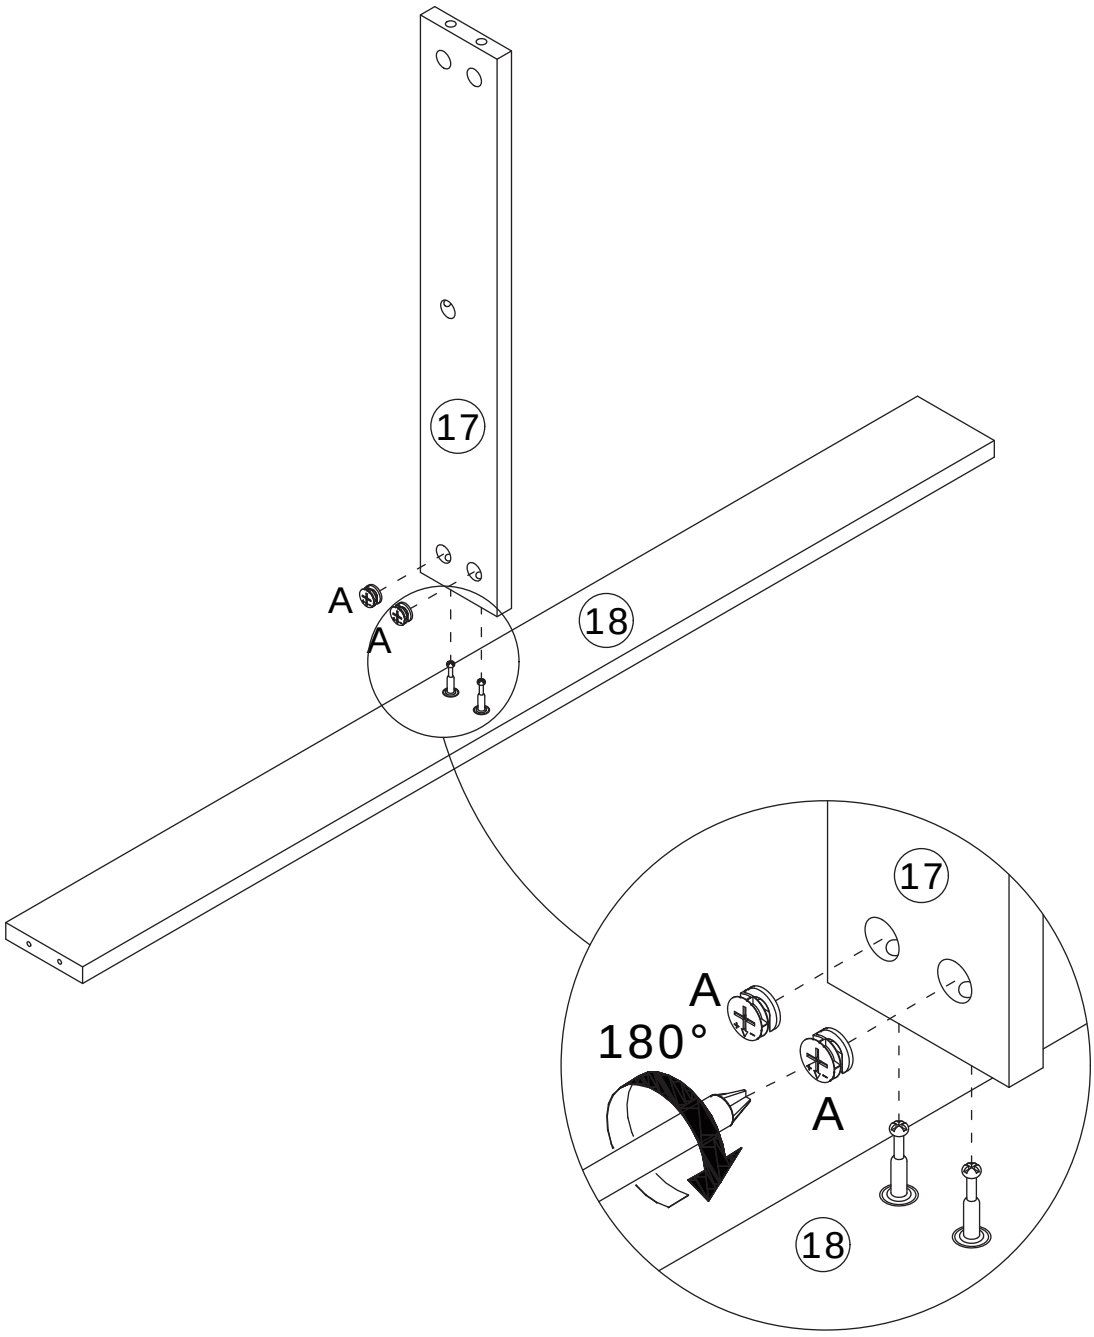



15

A x 9	D x 2	
 CRB1595A	 CRF0630A	

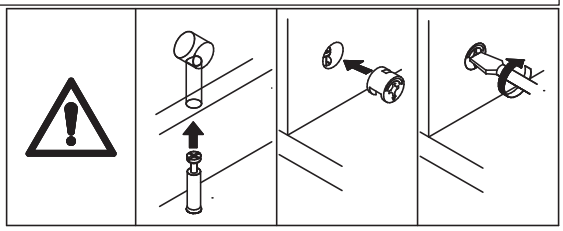


Insert wooden dowel (E) into panel 17.
Connect panels 17, 18, and 20 to panels 9 and 10, then tighten by turning cam lock (A) clockwise.

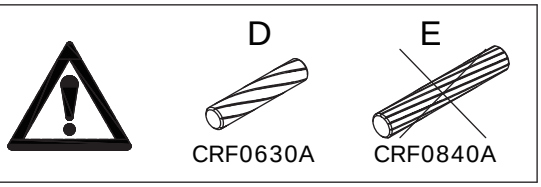

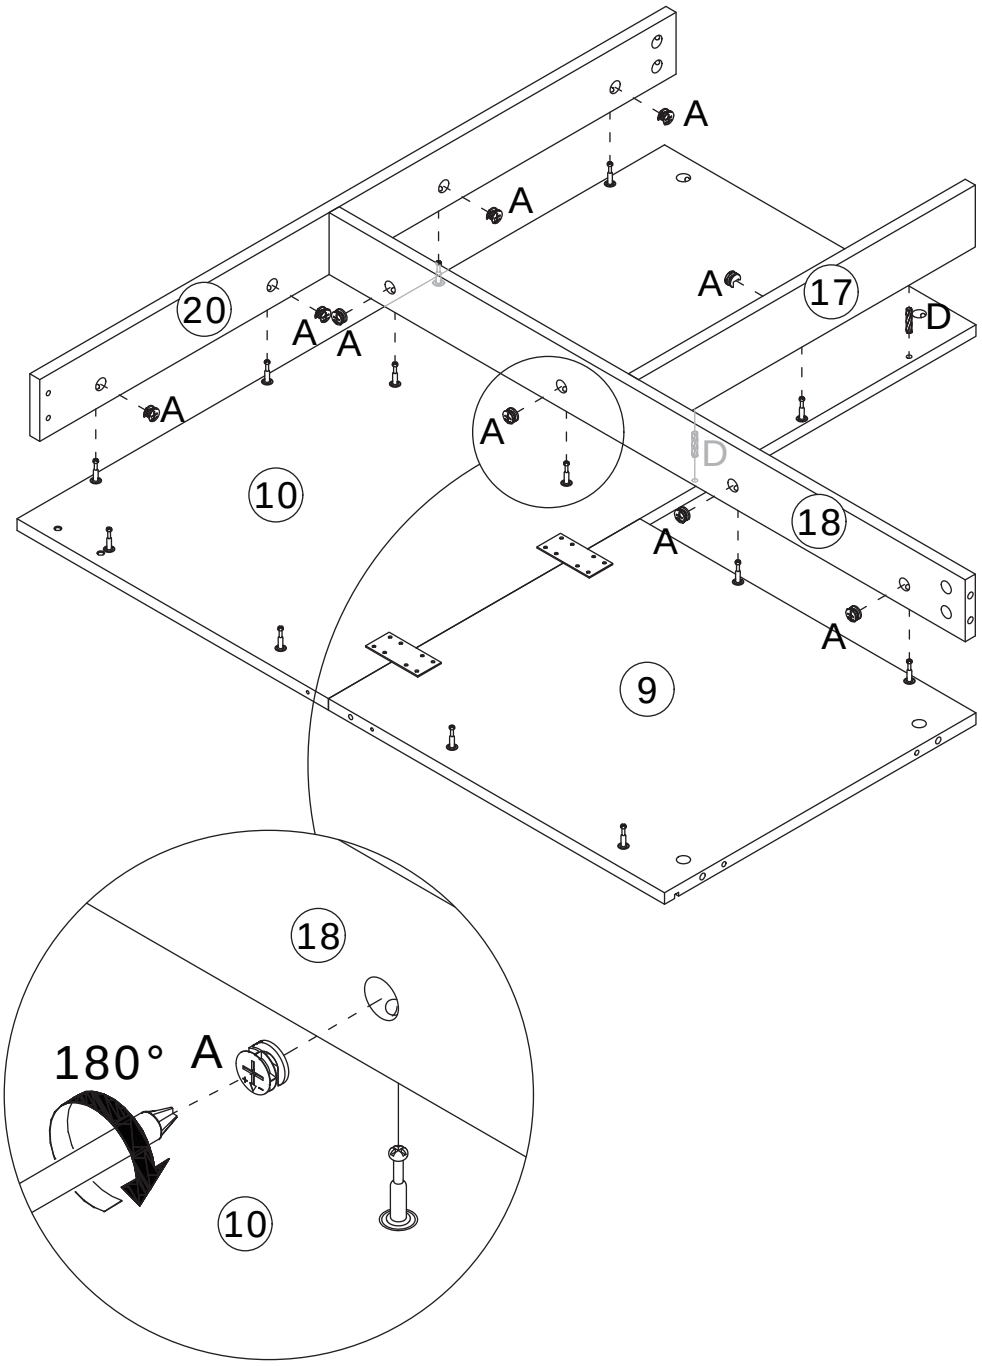


16


F x 2

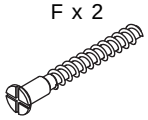

CRC0540A



Secure panel 20 to panel 18 using screw (F).

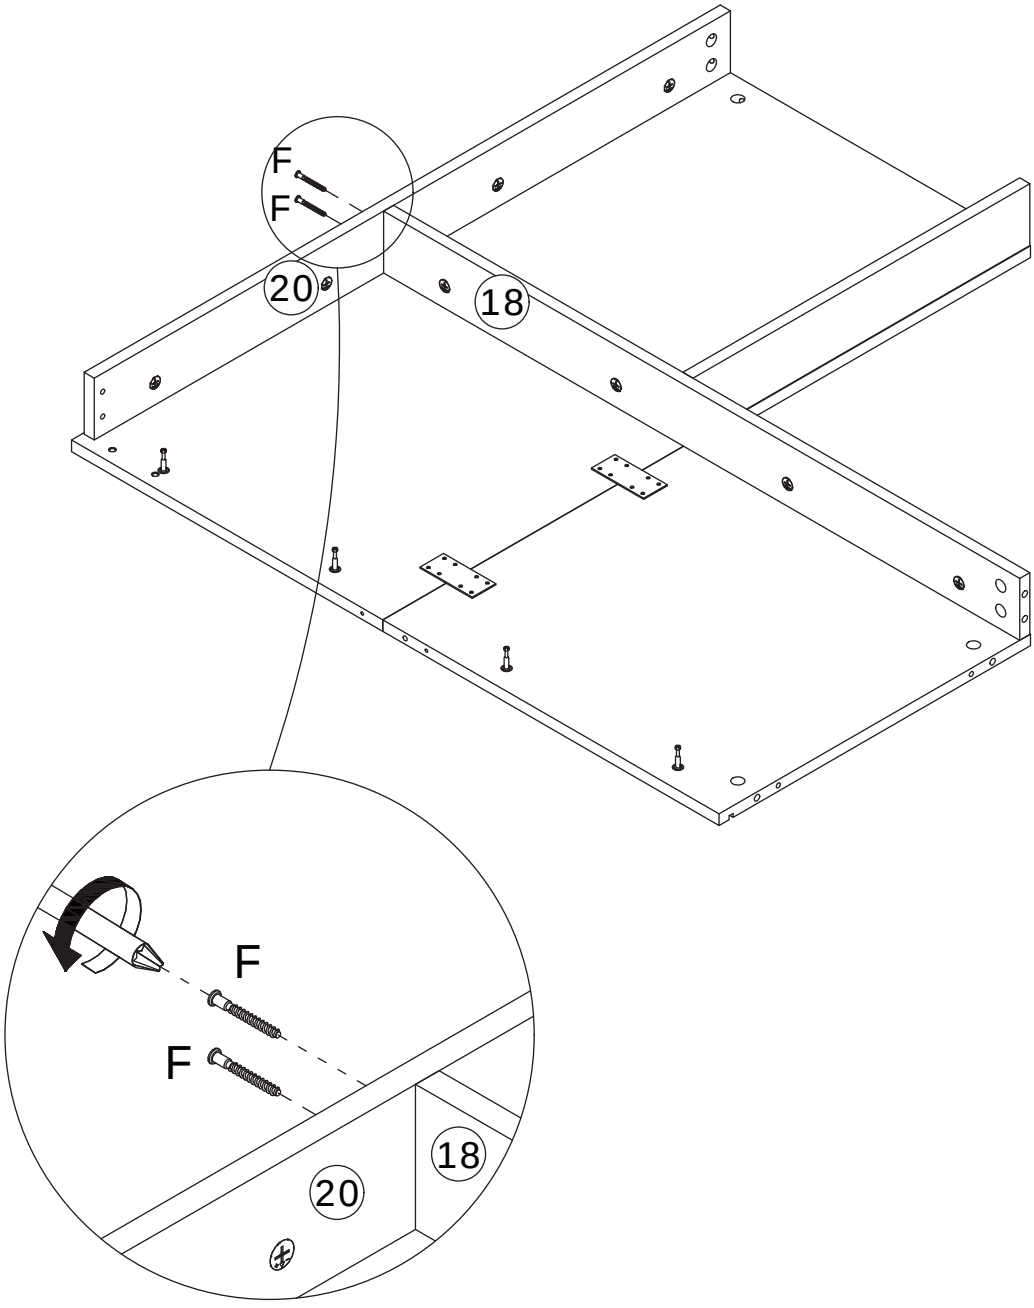



17

A x 2




CRB1595A






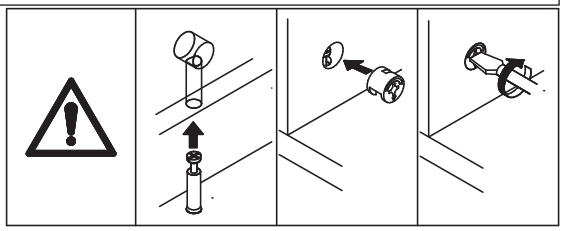

Connect panel 12 to panel 1, then tighten by turning cam lock (A) clockwise.

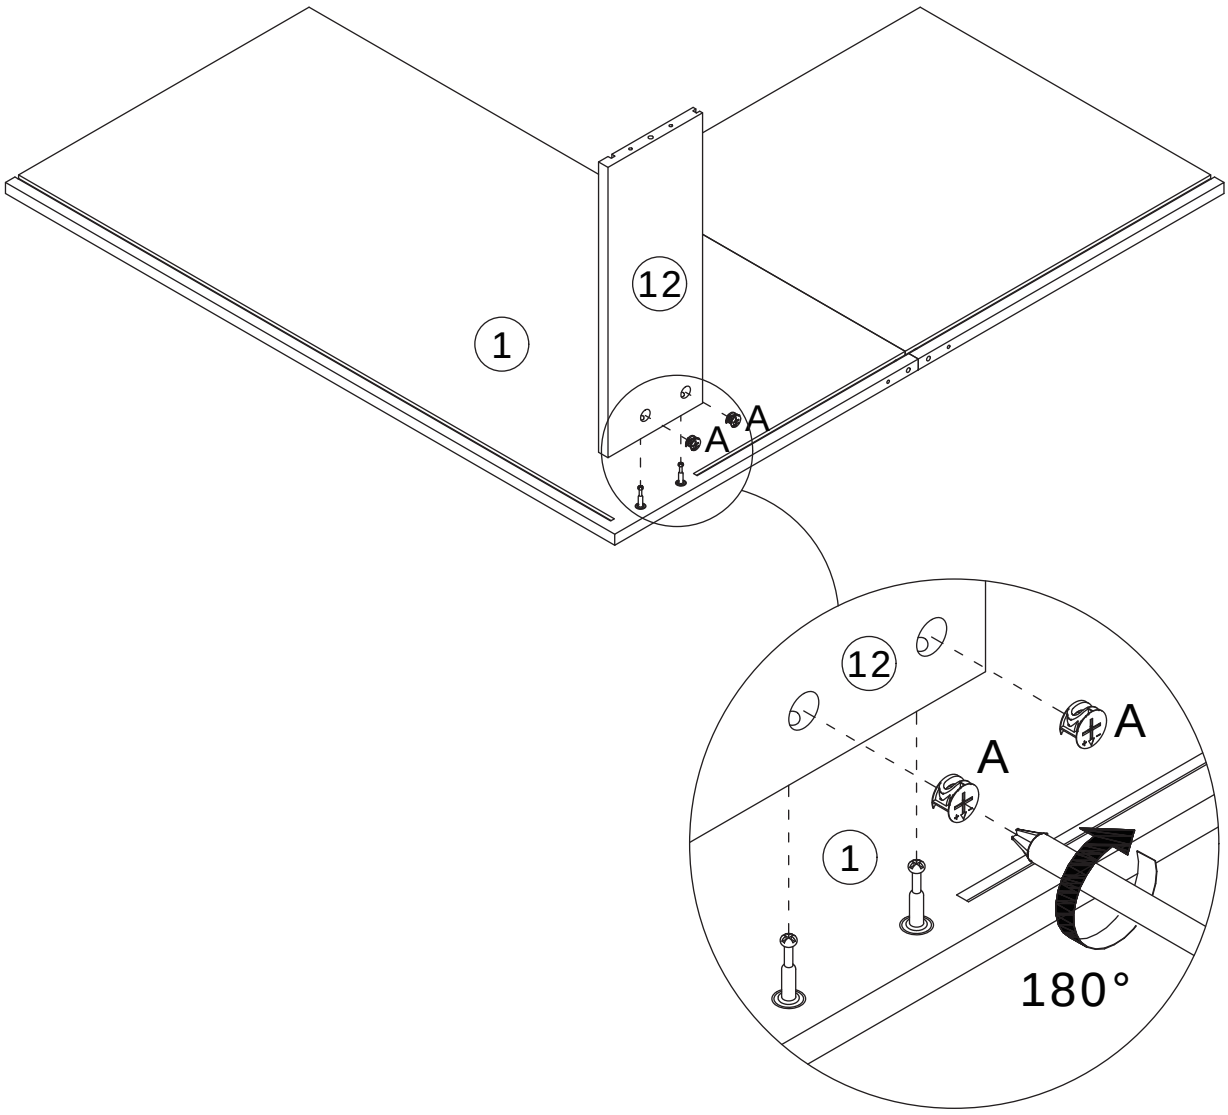


18

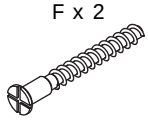D x 1	F x 2	
		
CRF0630A	CRC0540A	




D





CRF0630A

E



CRF0840A

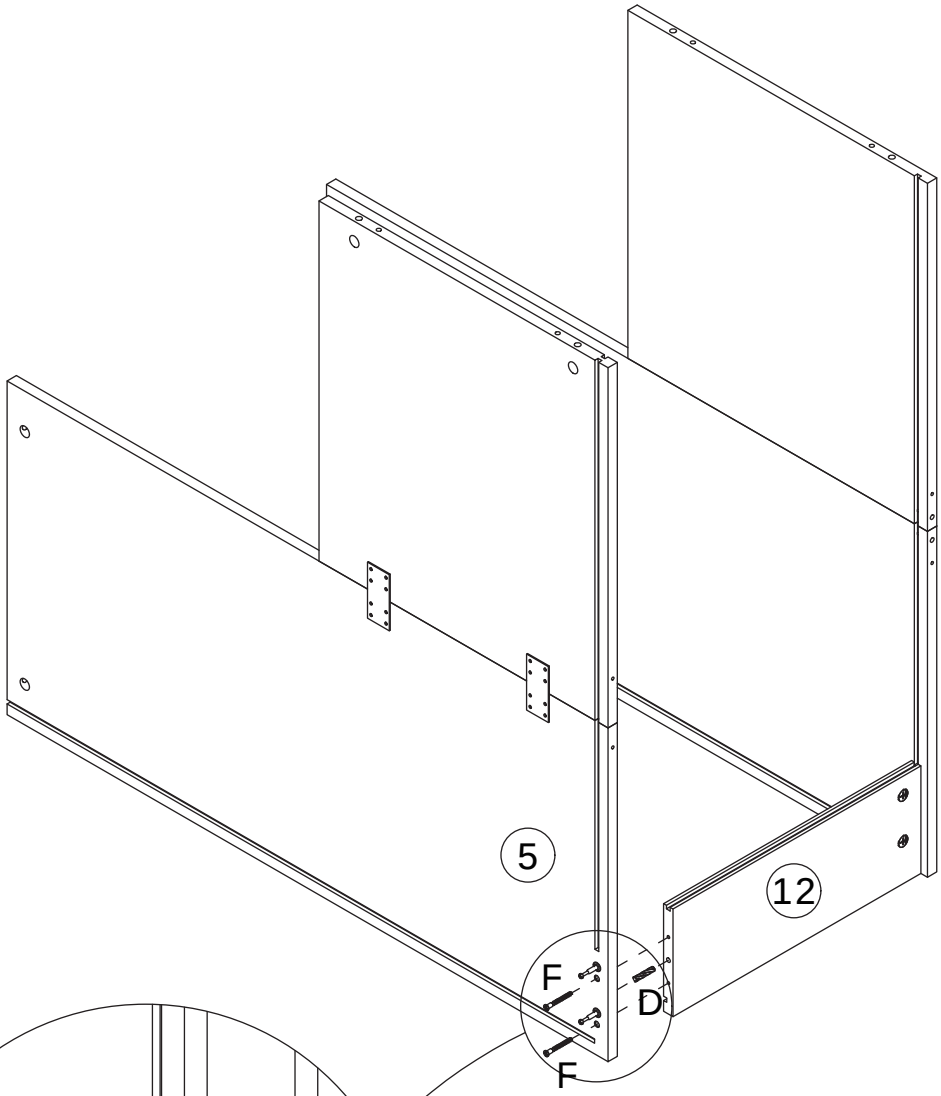

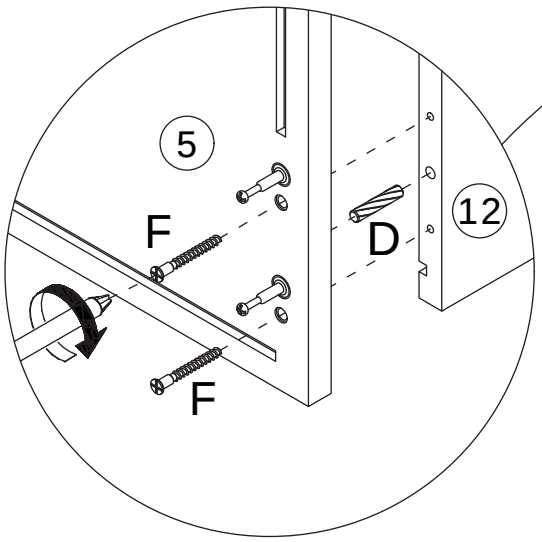


Connect panel 5 to panel 12 using wooden dowel (D) and secure them with screw (F).


19

A x 2




CRB1595A






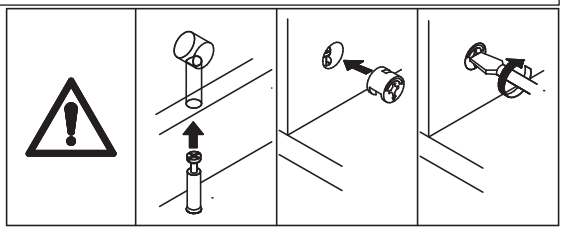

Connect panel 11 to panel 5, then tighten by turning cam lock (A) clockwise.

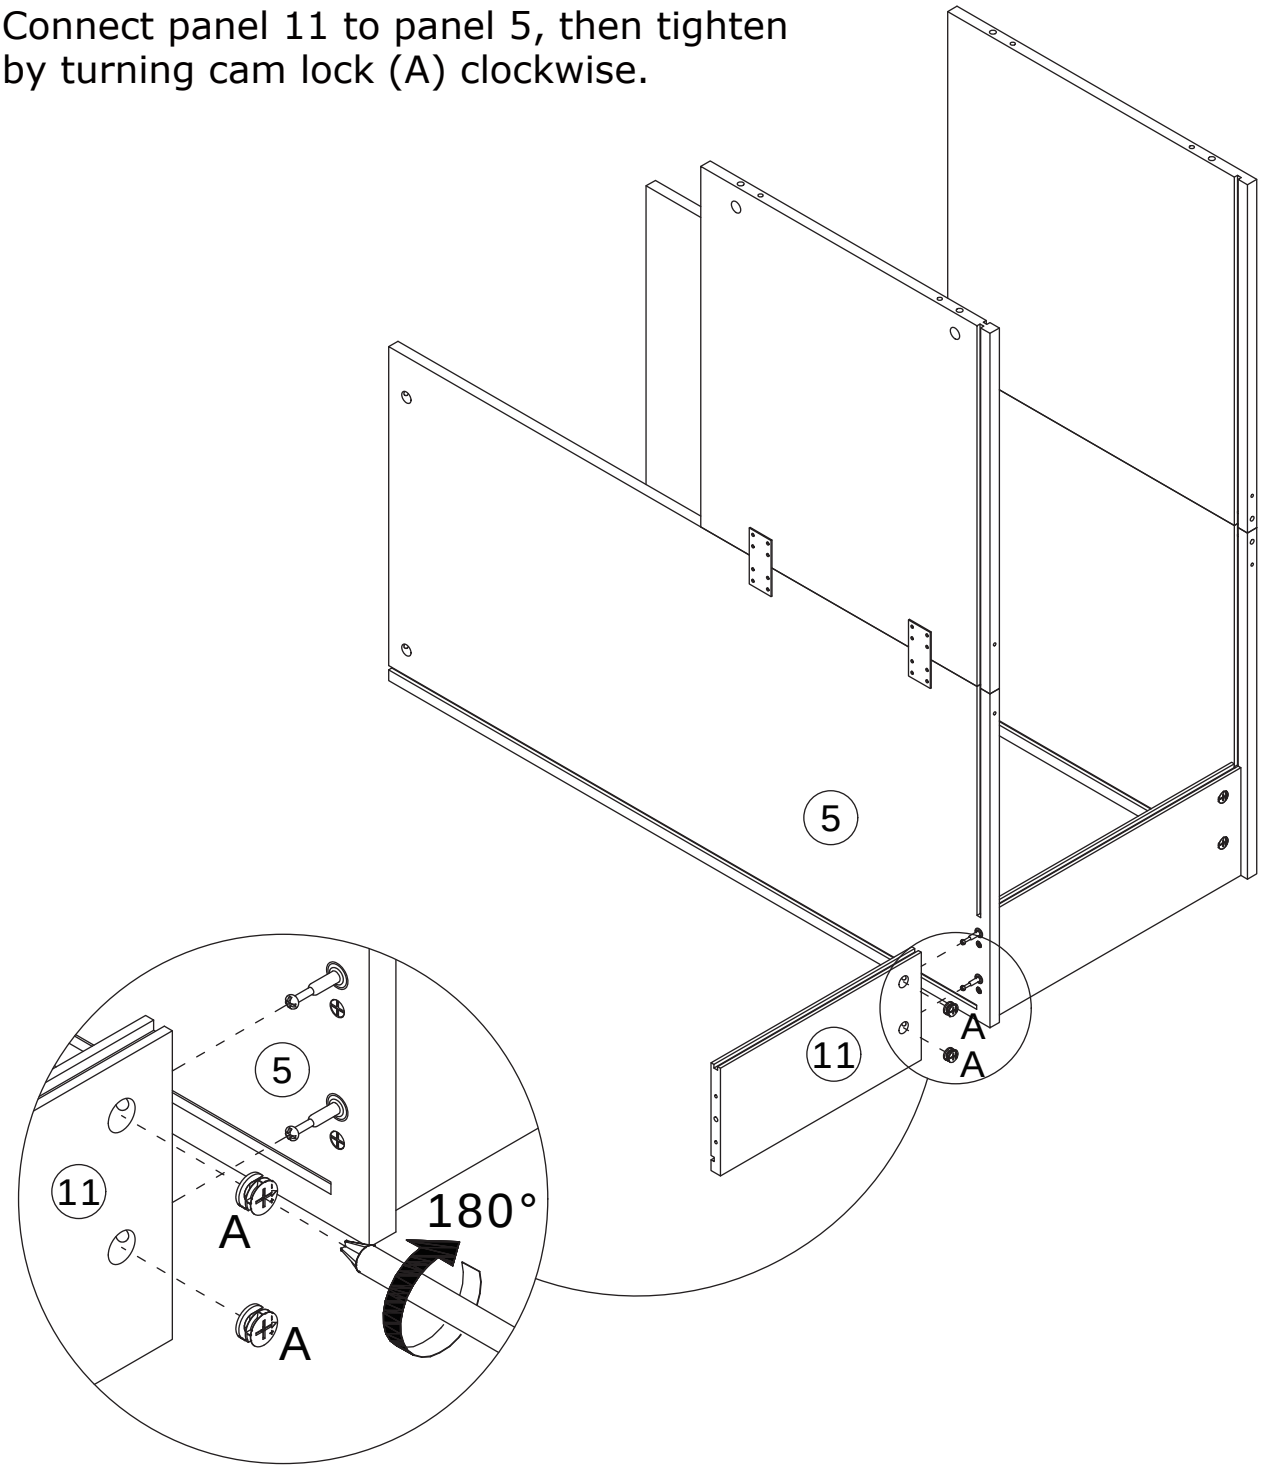


20

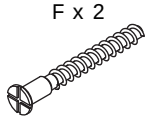D x 1	F x 2	
 CRF0630A	 CRC0540A	




D




CRF0630A

E

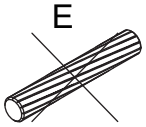

CRF0840A

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).

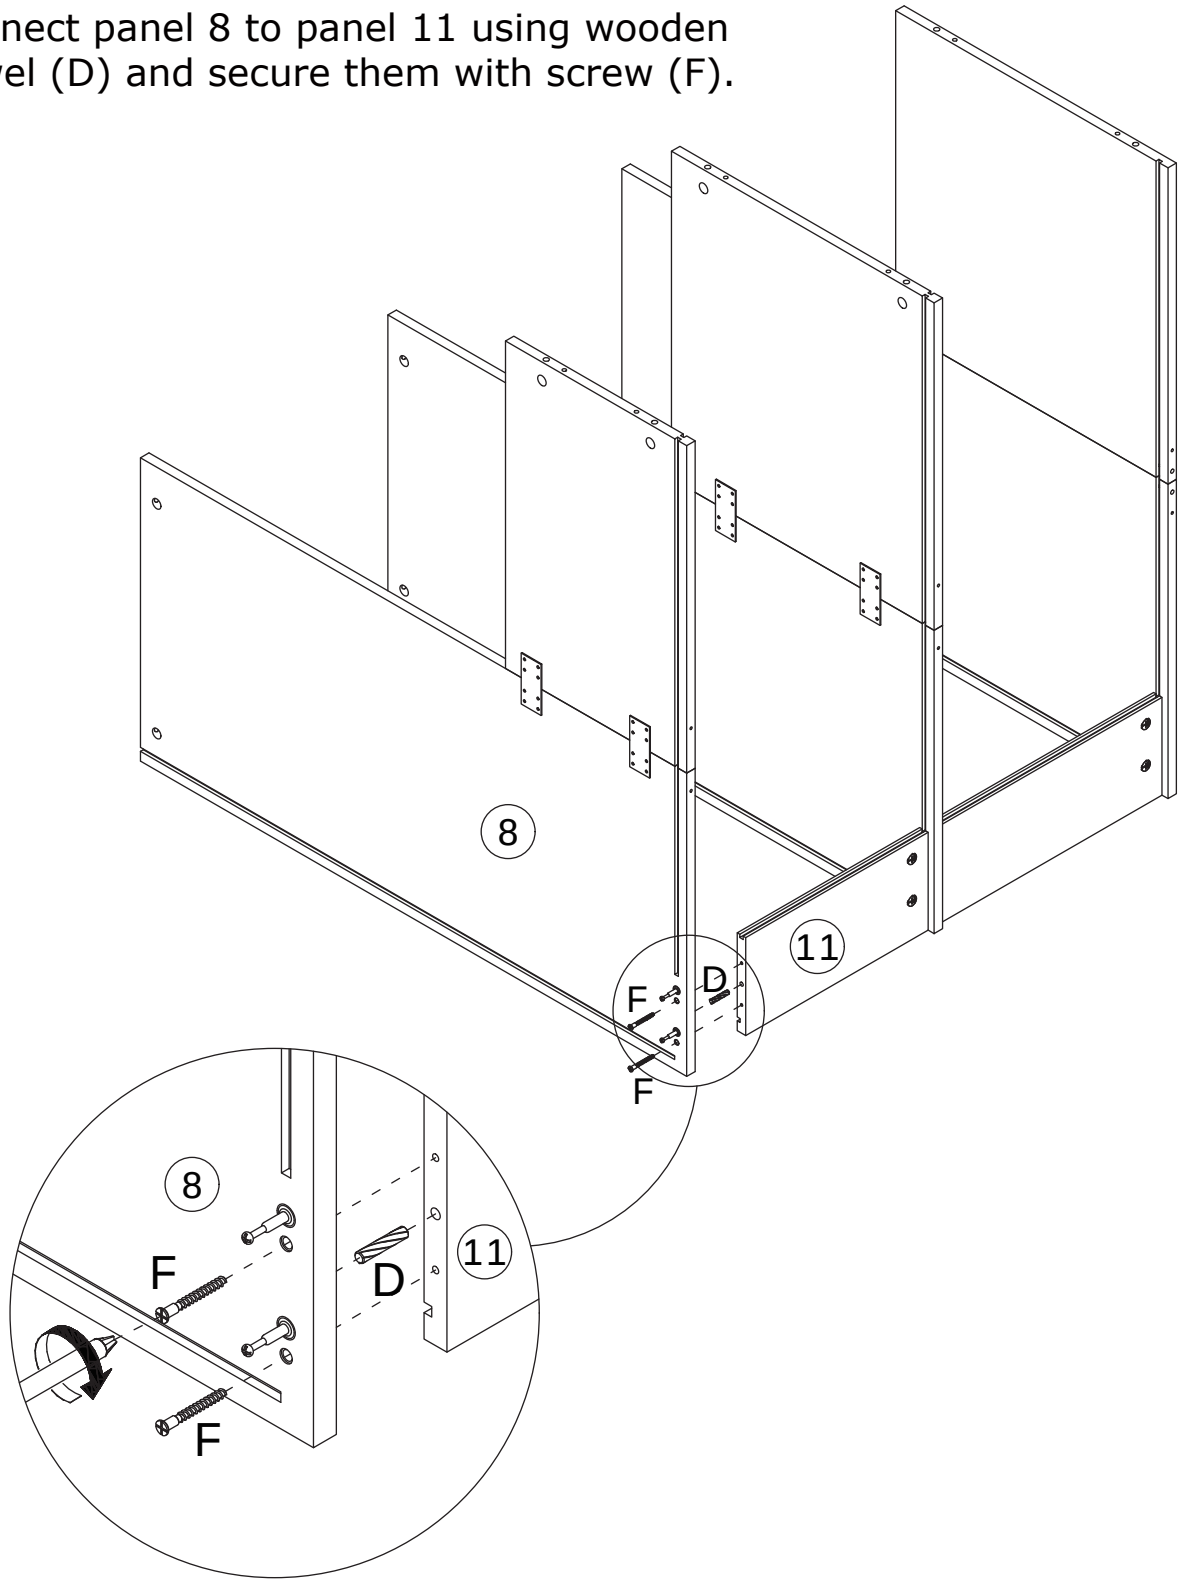



21

A x 2




CRB1595A






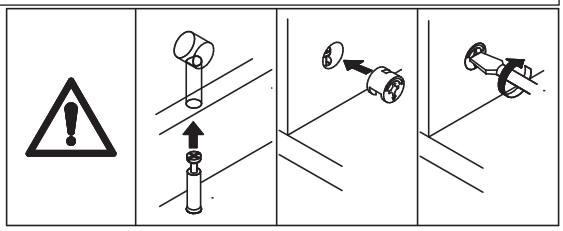


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

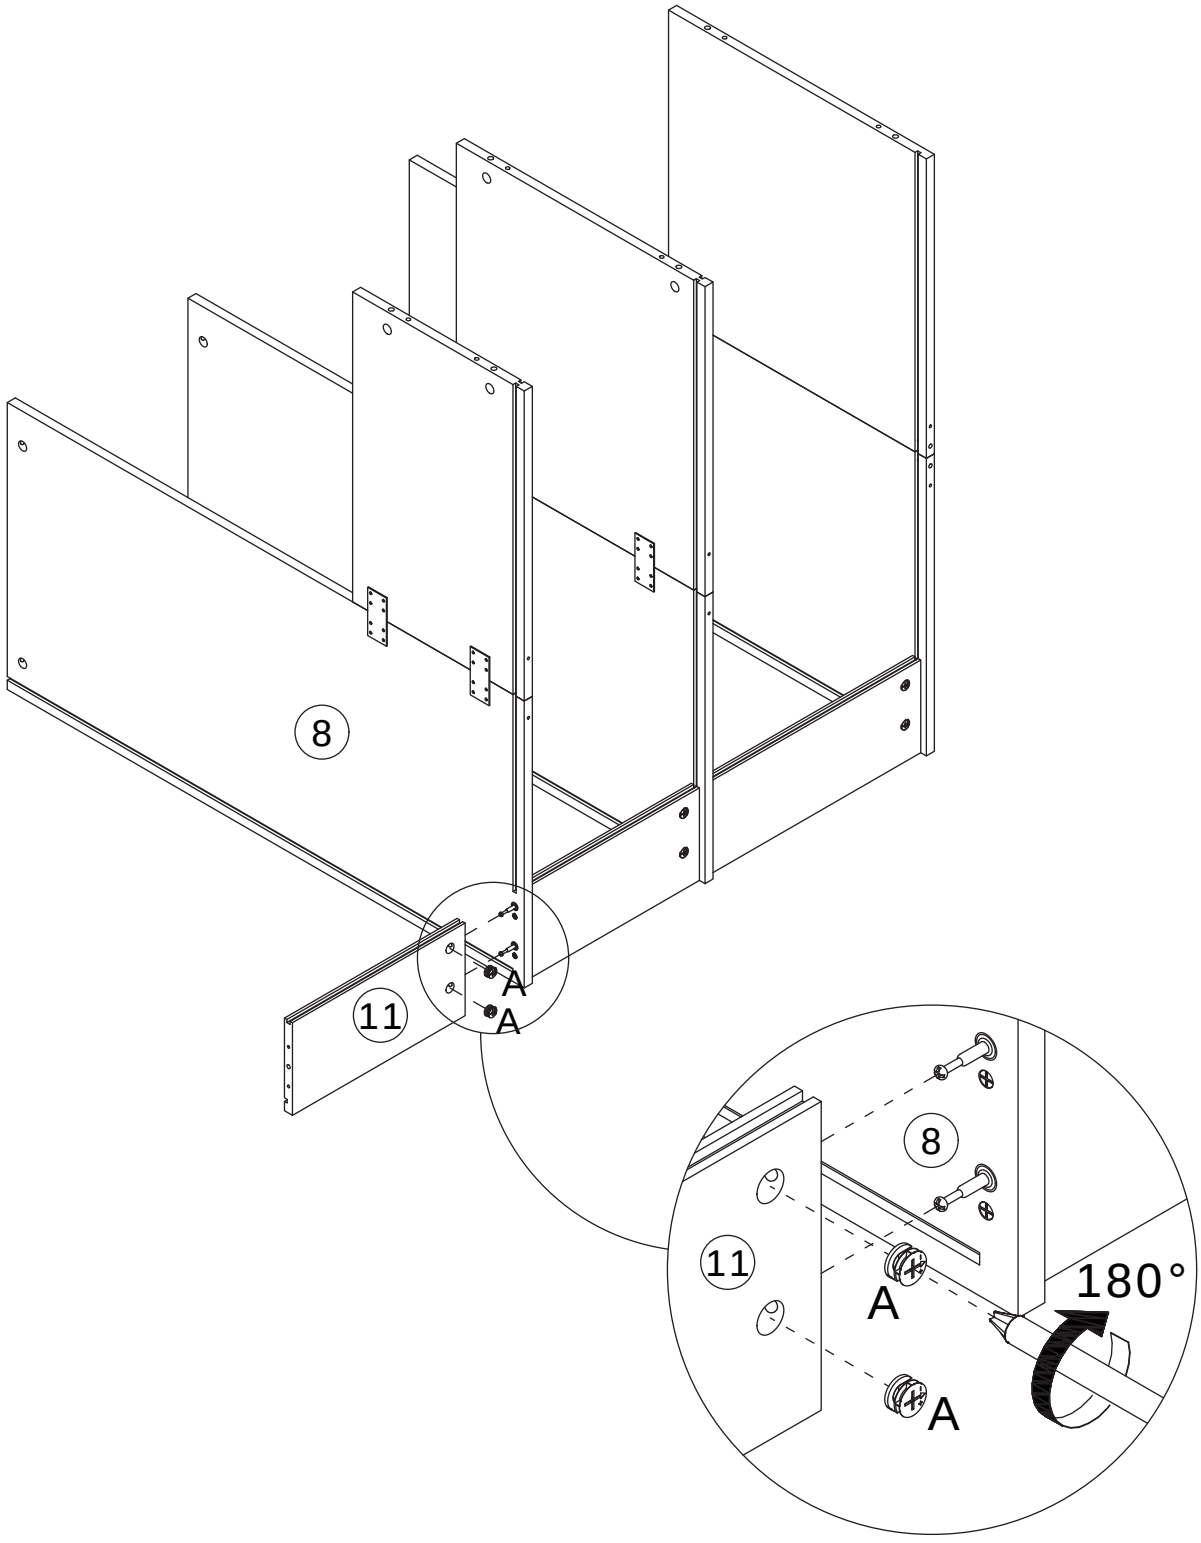


22

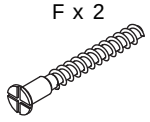
D x 1	F x 2	
 CRF0630A	 CRC0540A	



D  CRF0630A

E  CRF0840A

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).

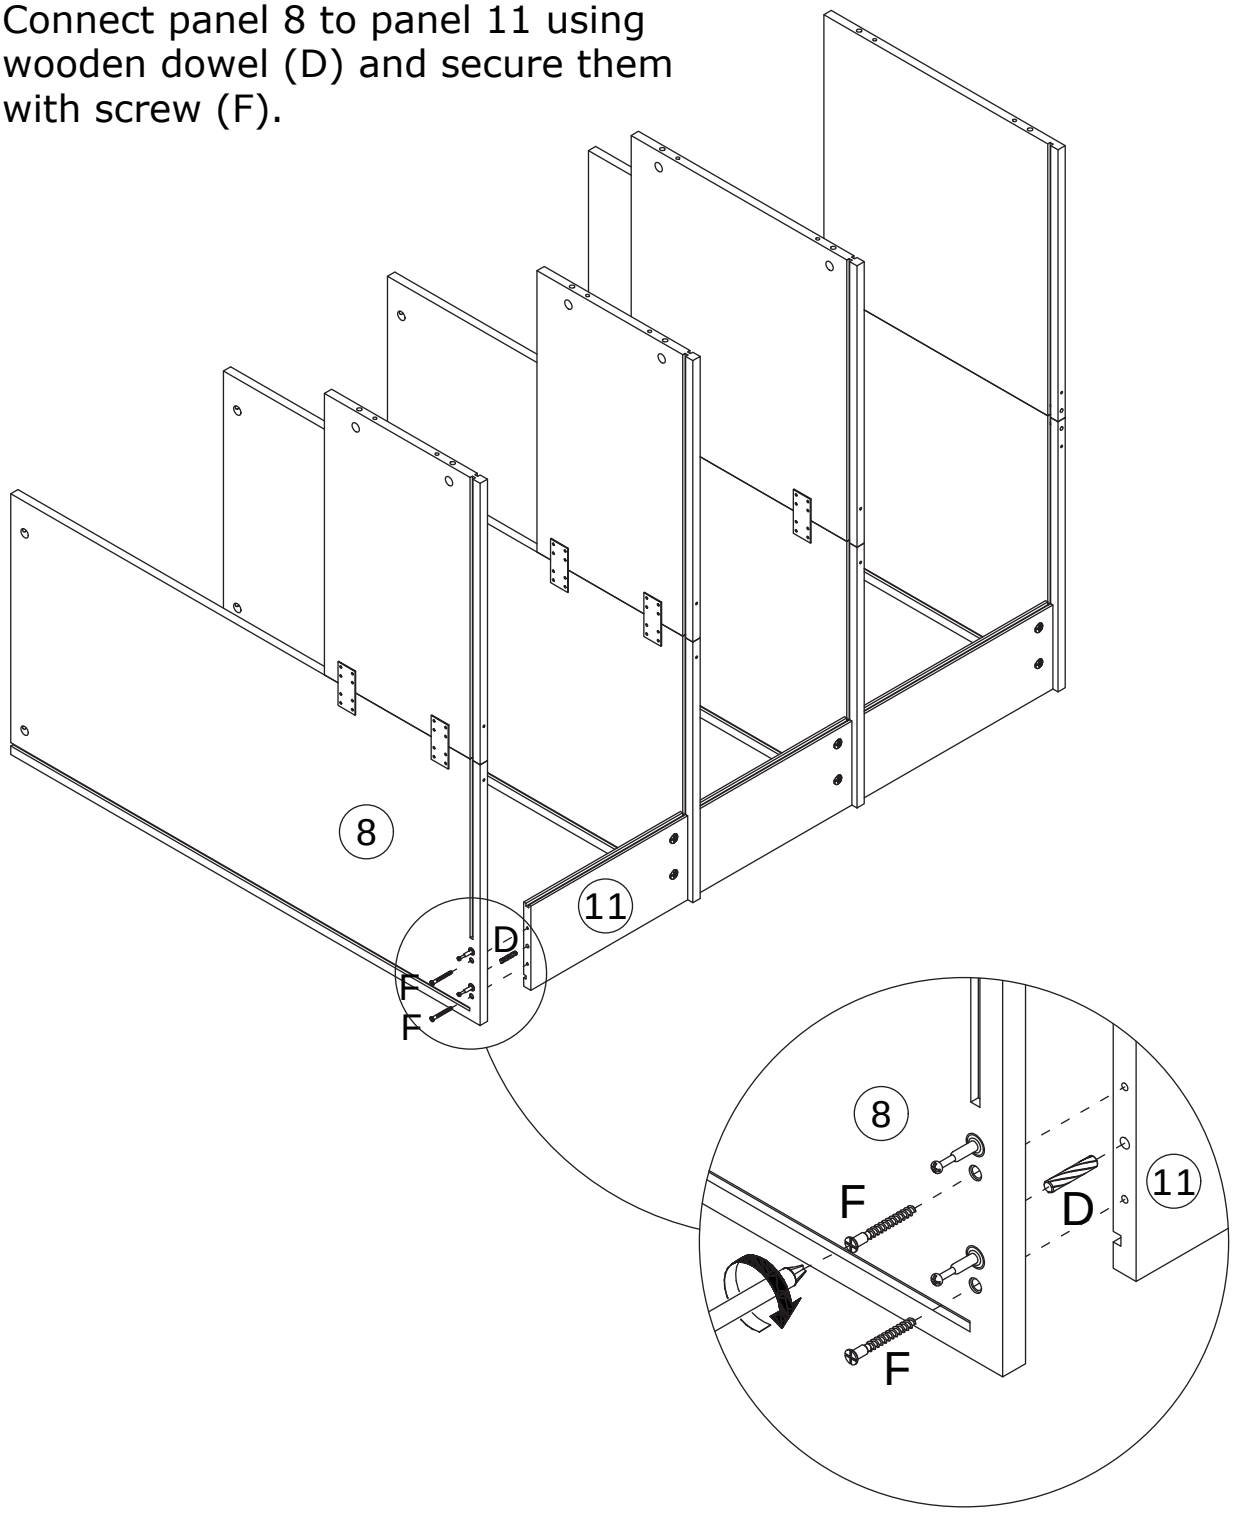



23

A x 2




CRB1595A






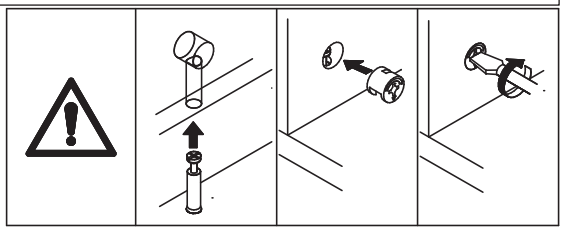

Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

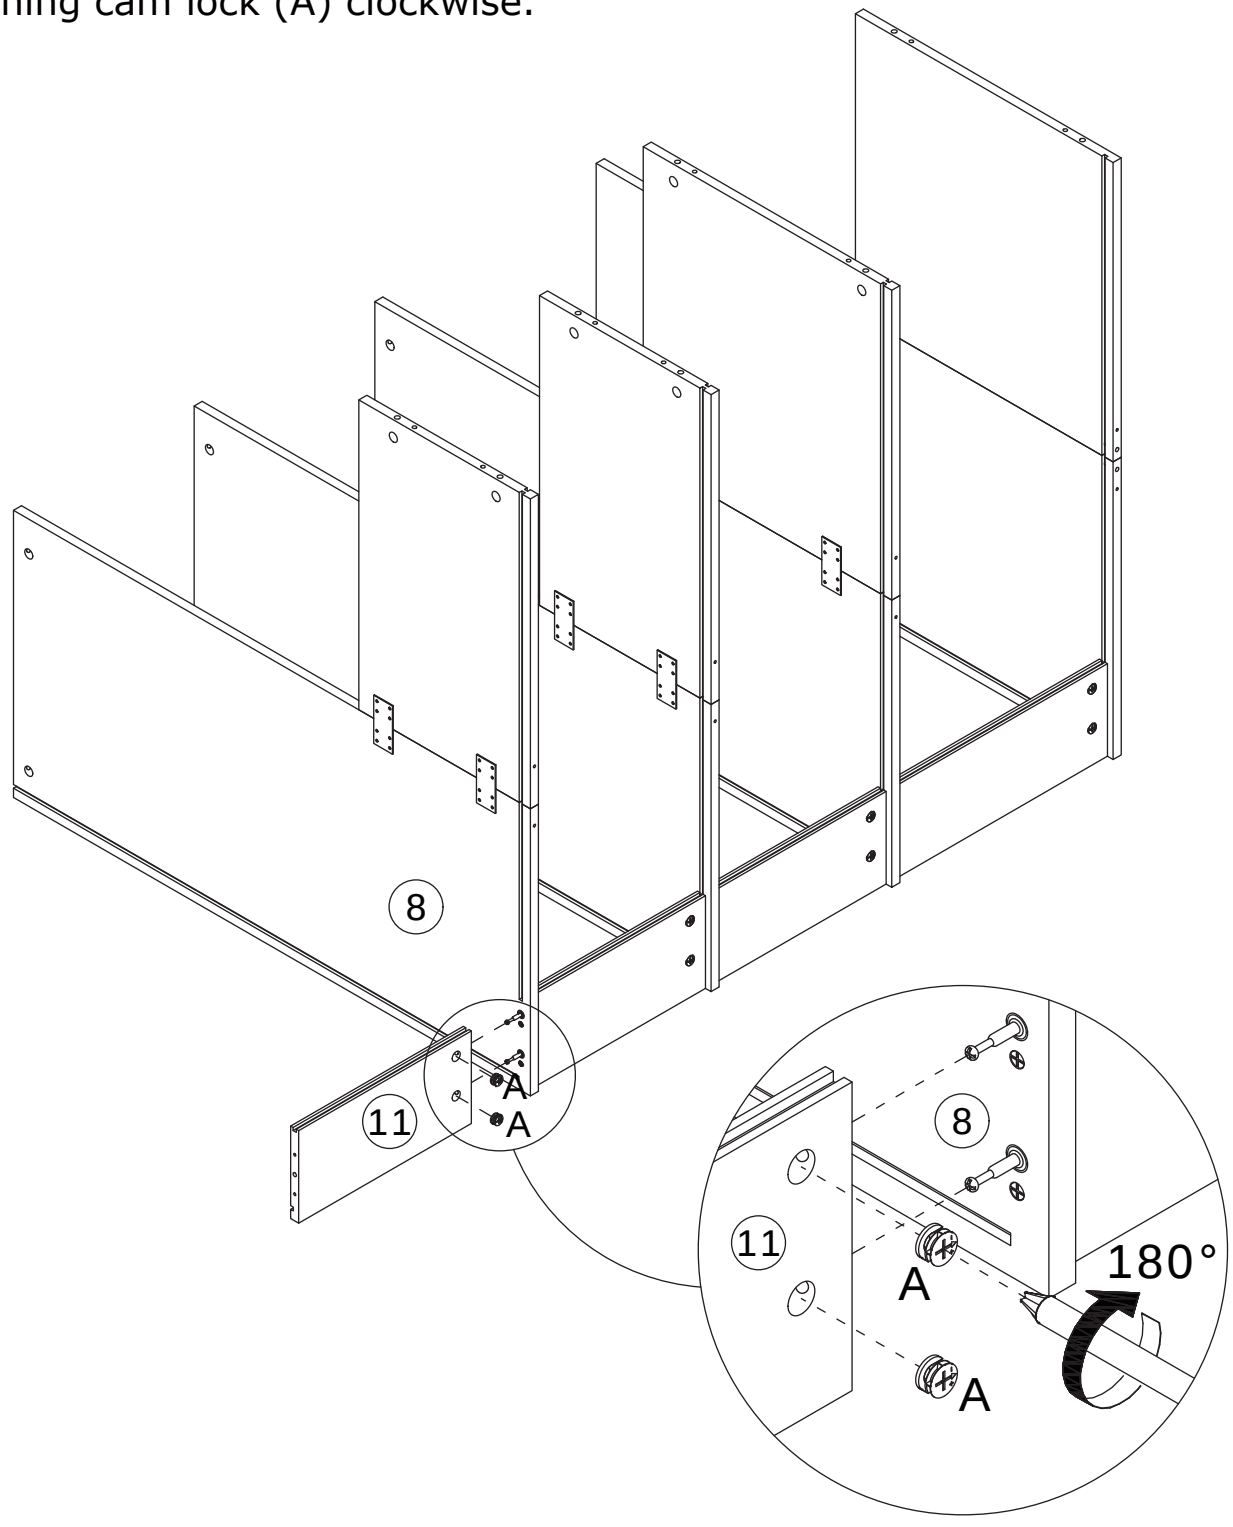


24

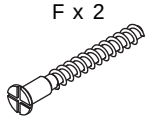D x 1	F x 2	
 CRF0630A	 CRC0540A	




D




CRF0630A

E

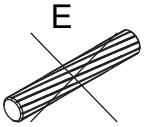

CRF0840A

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).

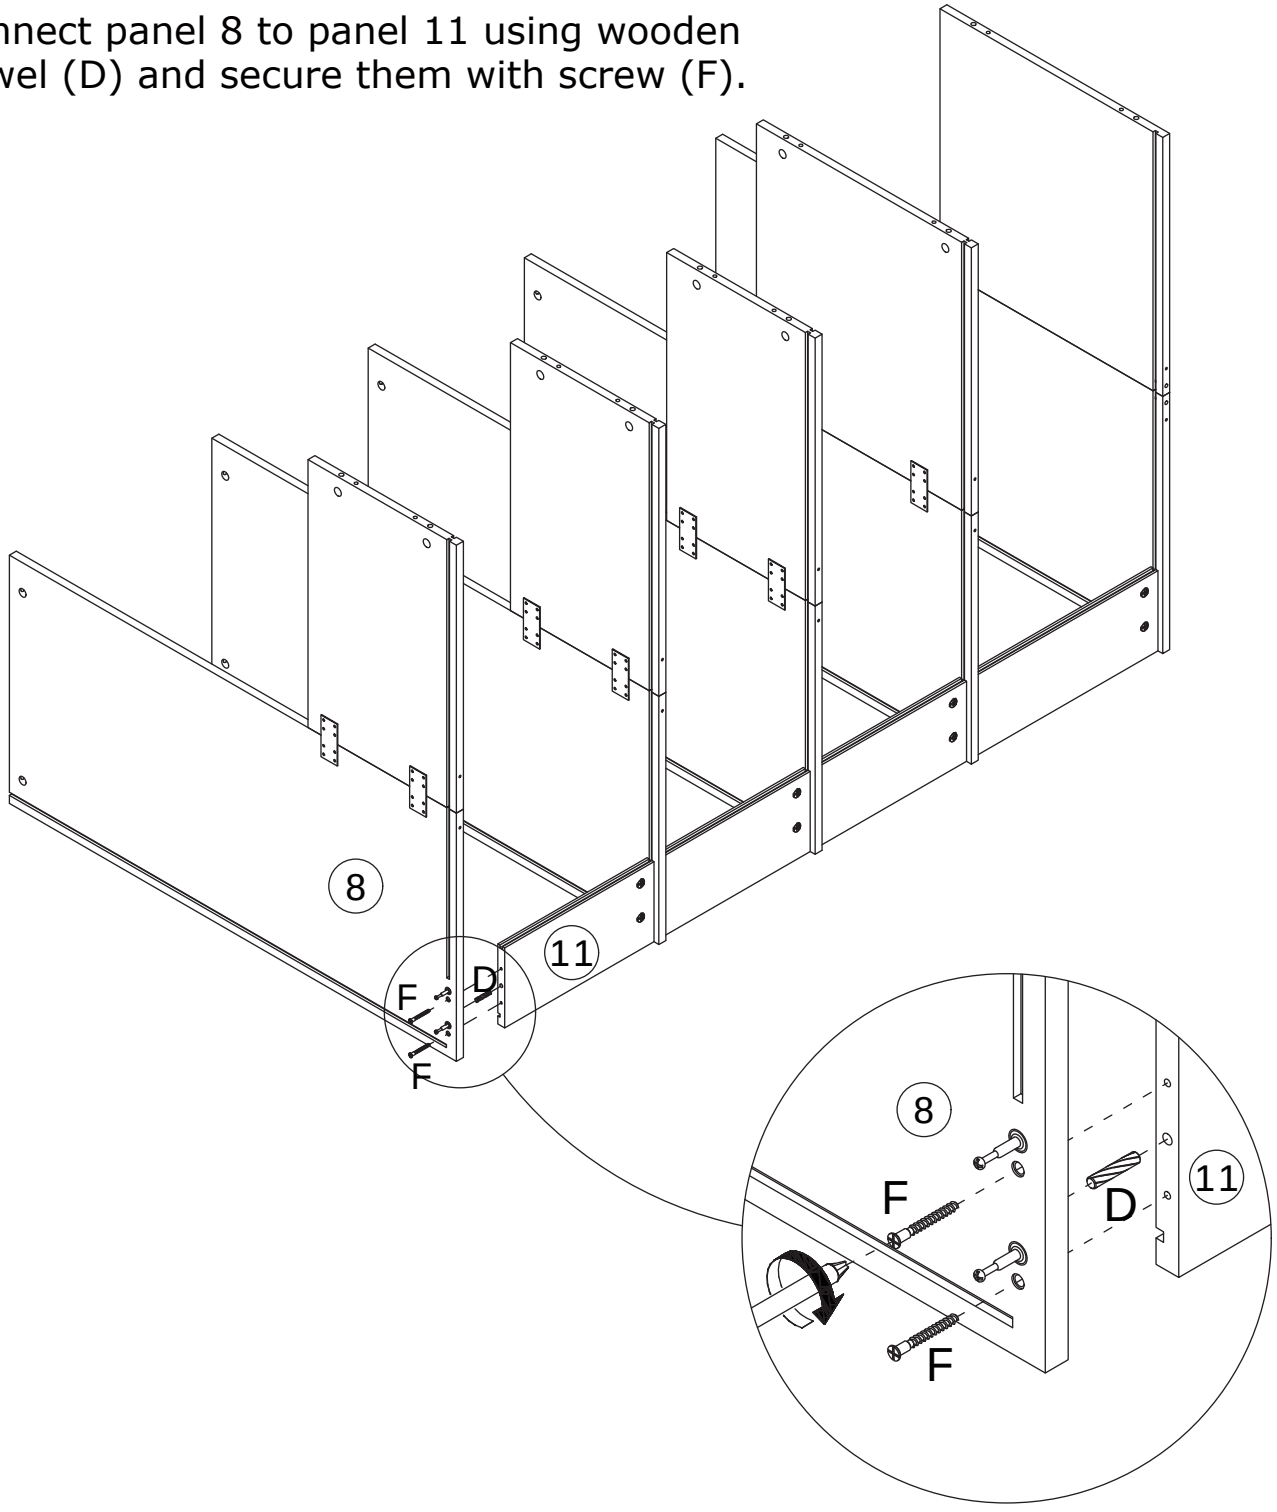



25

A x 2




CRB1595A






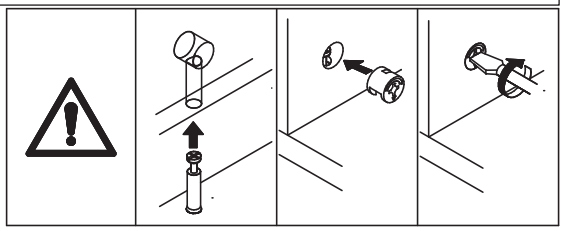


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

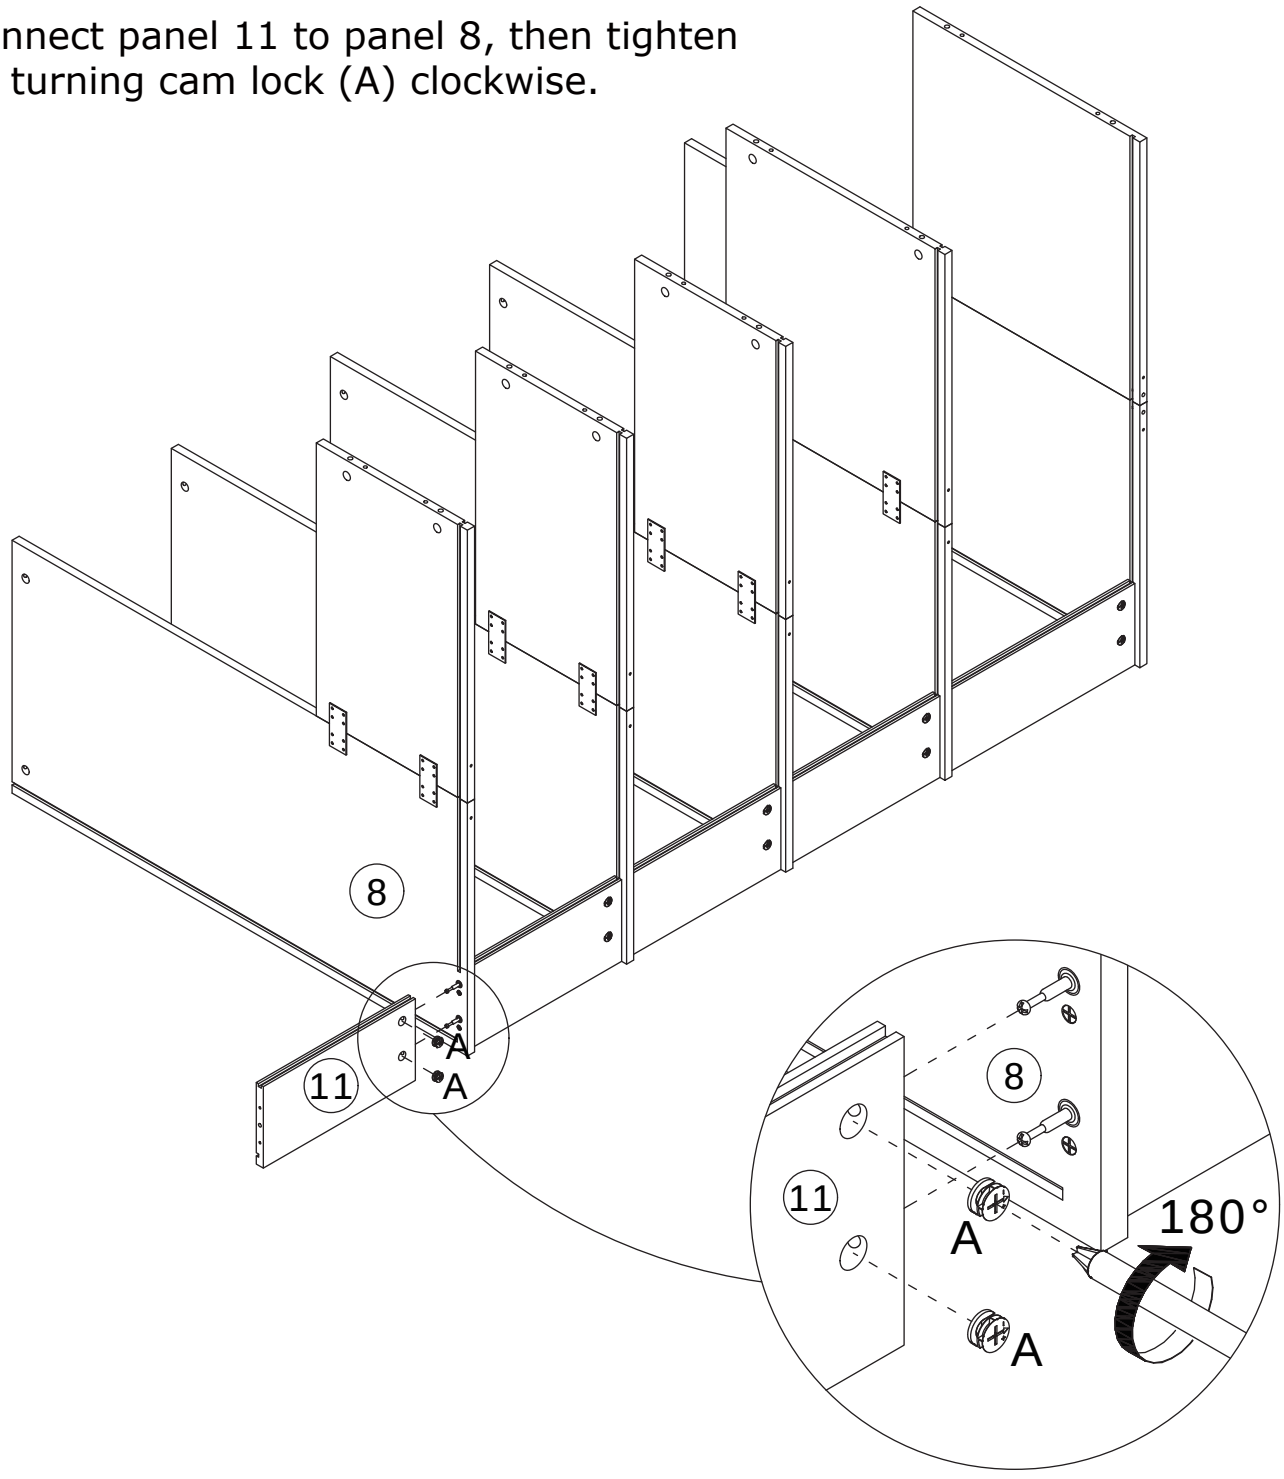


26

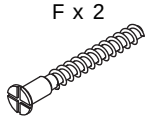
D x 1	F x 2	
 CRF0630A	 CRC0540A	



D  CRF0630A

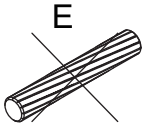E  CRF0840A

Connect panel 8 to panel 11 using wooden dowel (D) and secure them with screw (F).

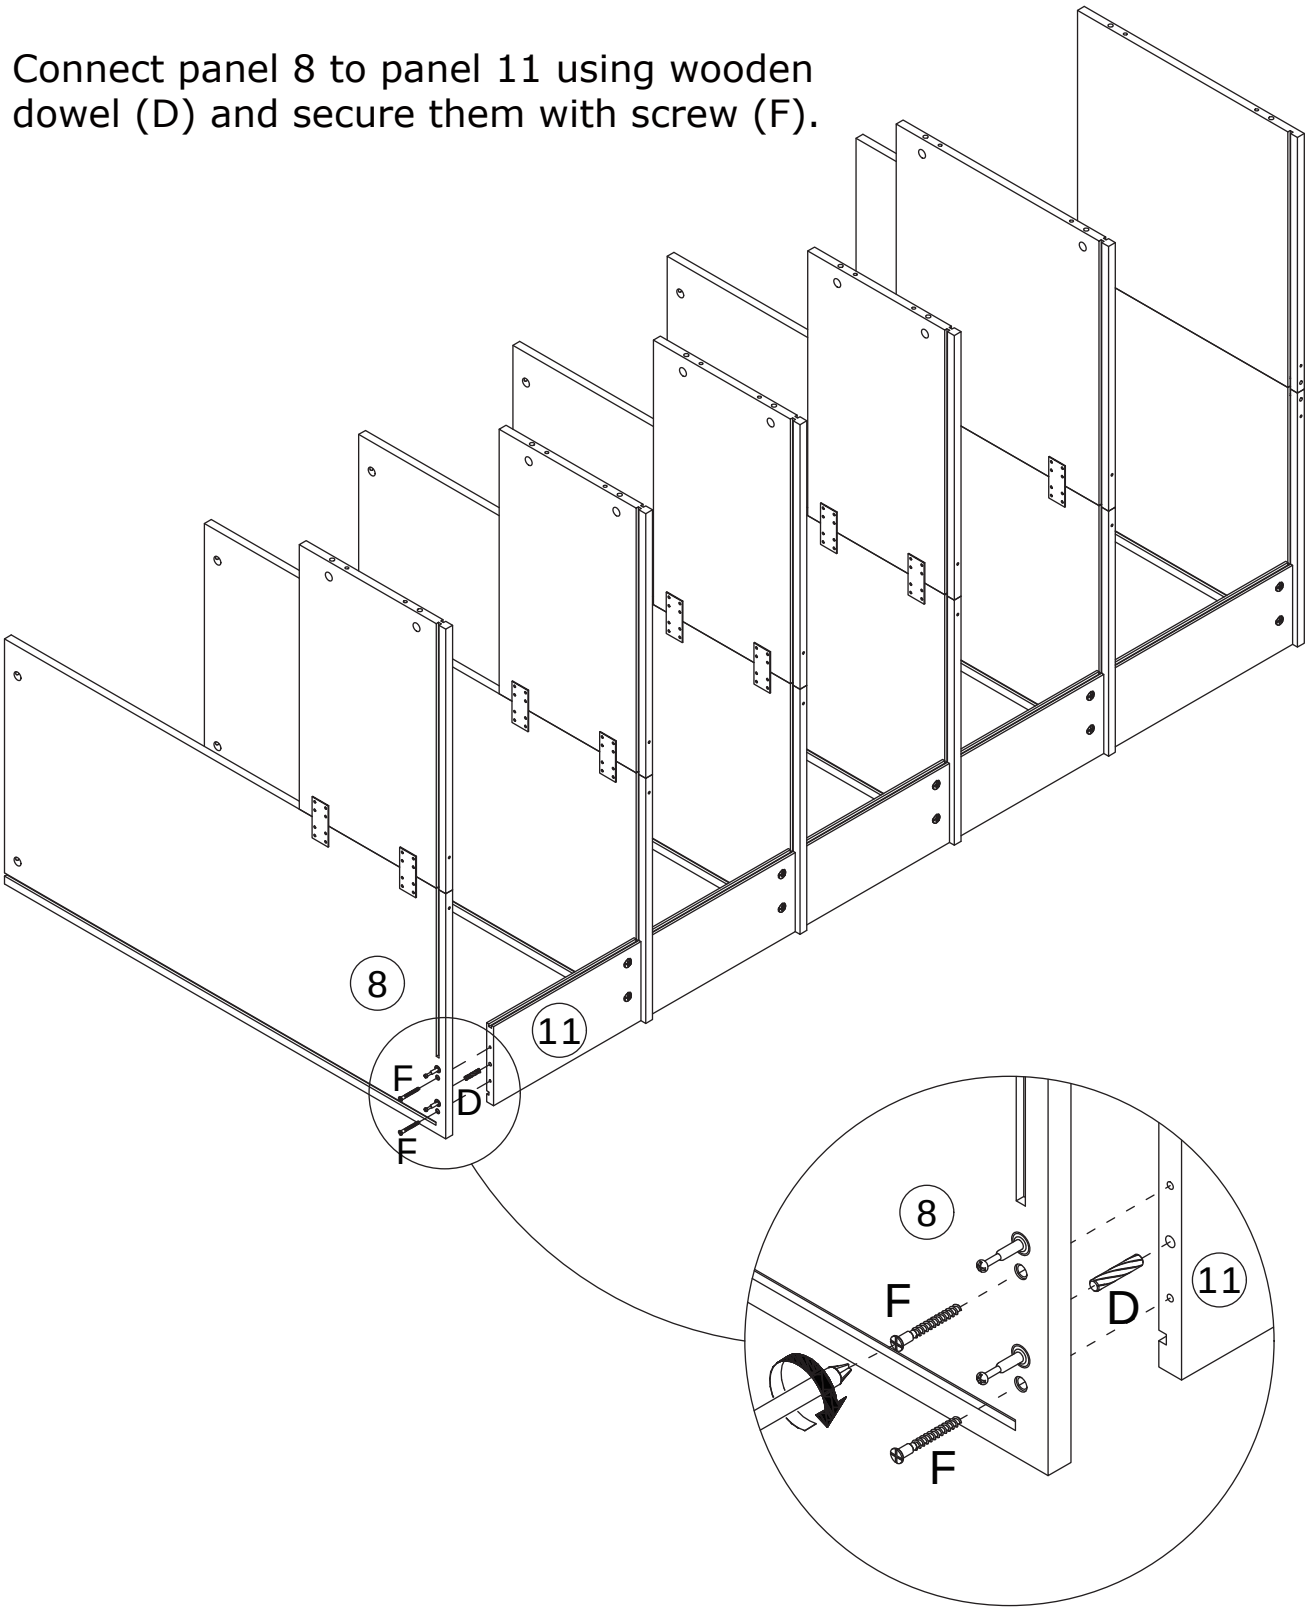



27

A x 2




CRB1595A






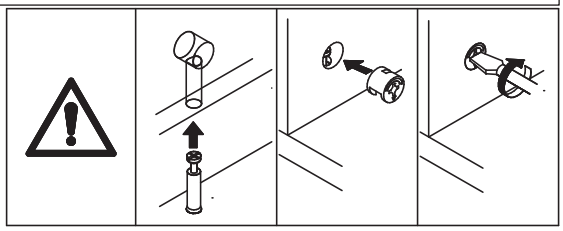


Connect panel 11 to panel 8, then tighten by turning cam lock (A) clockwise.

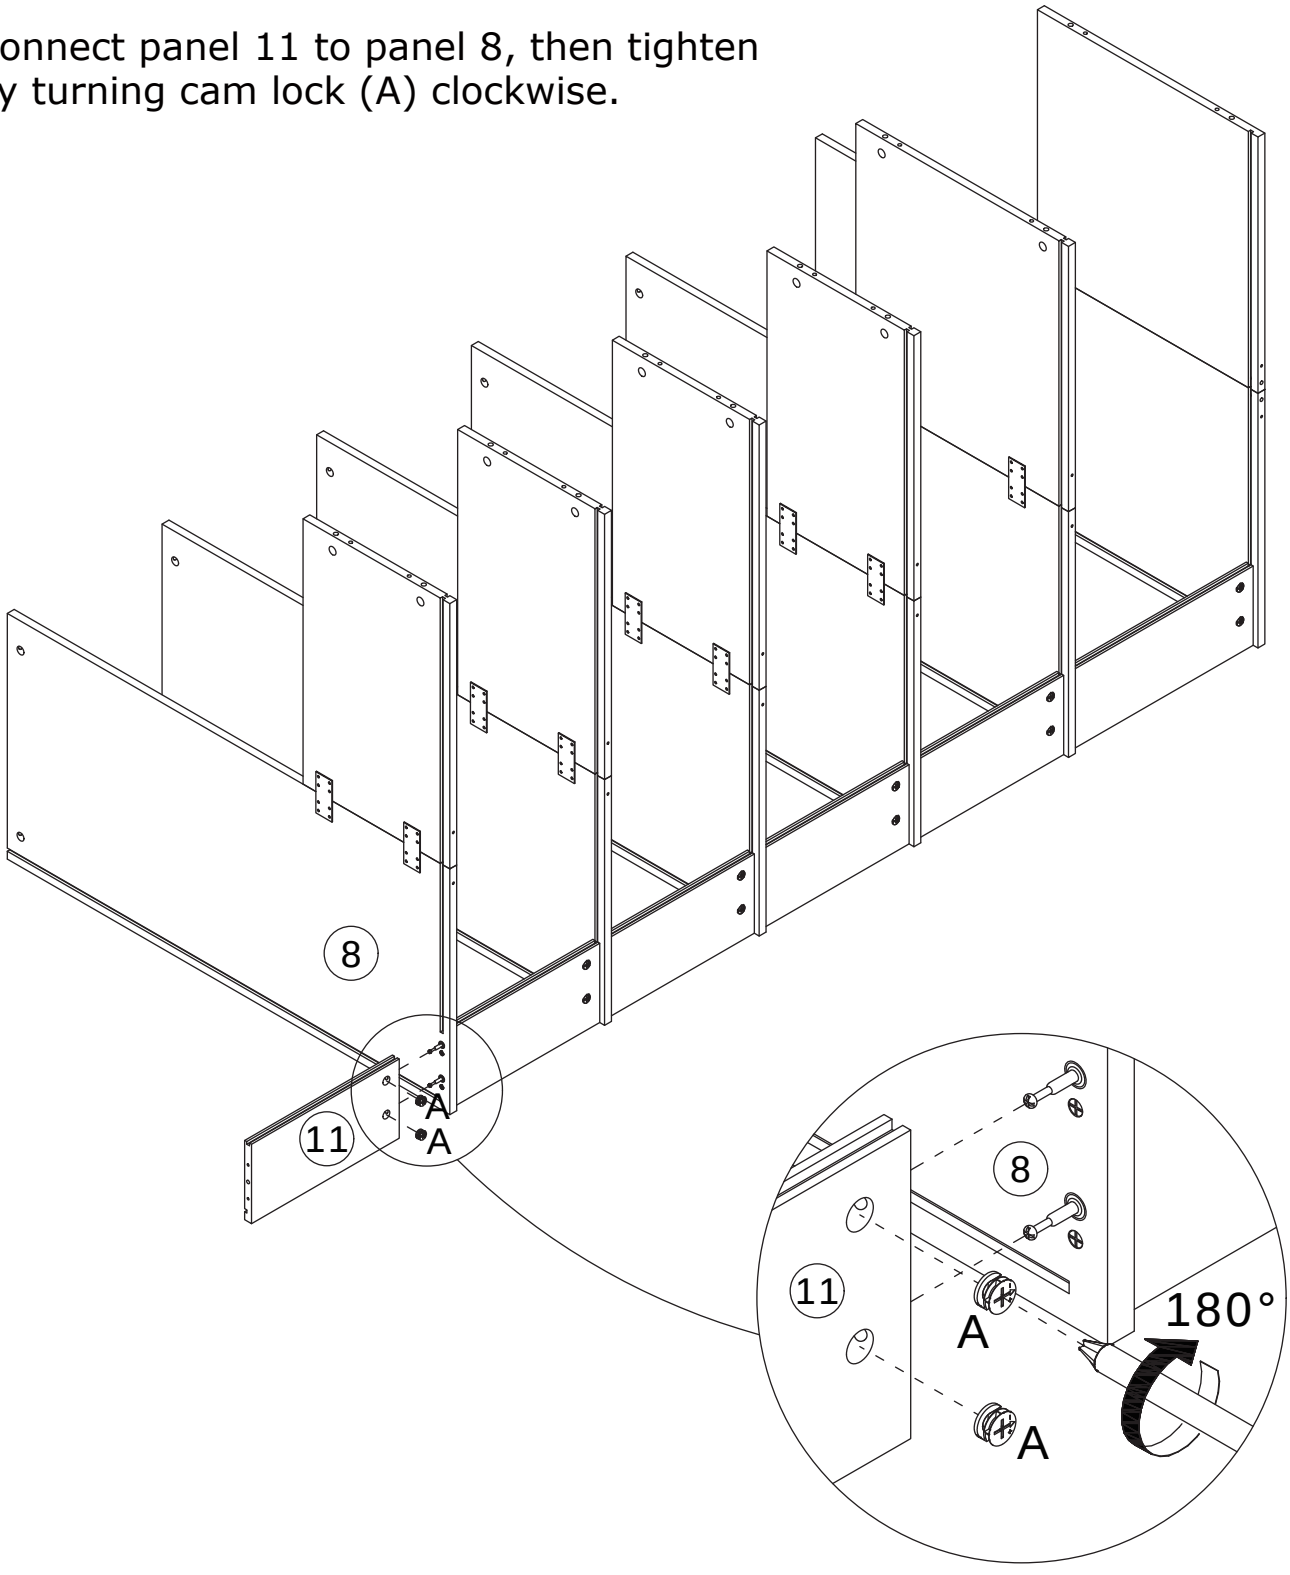


28

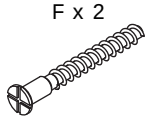
D x 1	F x 2	
 CRF0630A	 CRC0540A	



D  CRF0630A

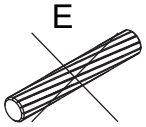E  CRF0840A

Connect panel 10 to panel 11 using wooden dowel (D), and secure them with screw (F).

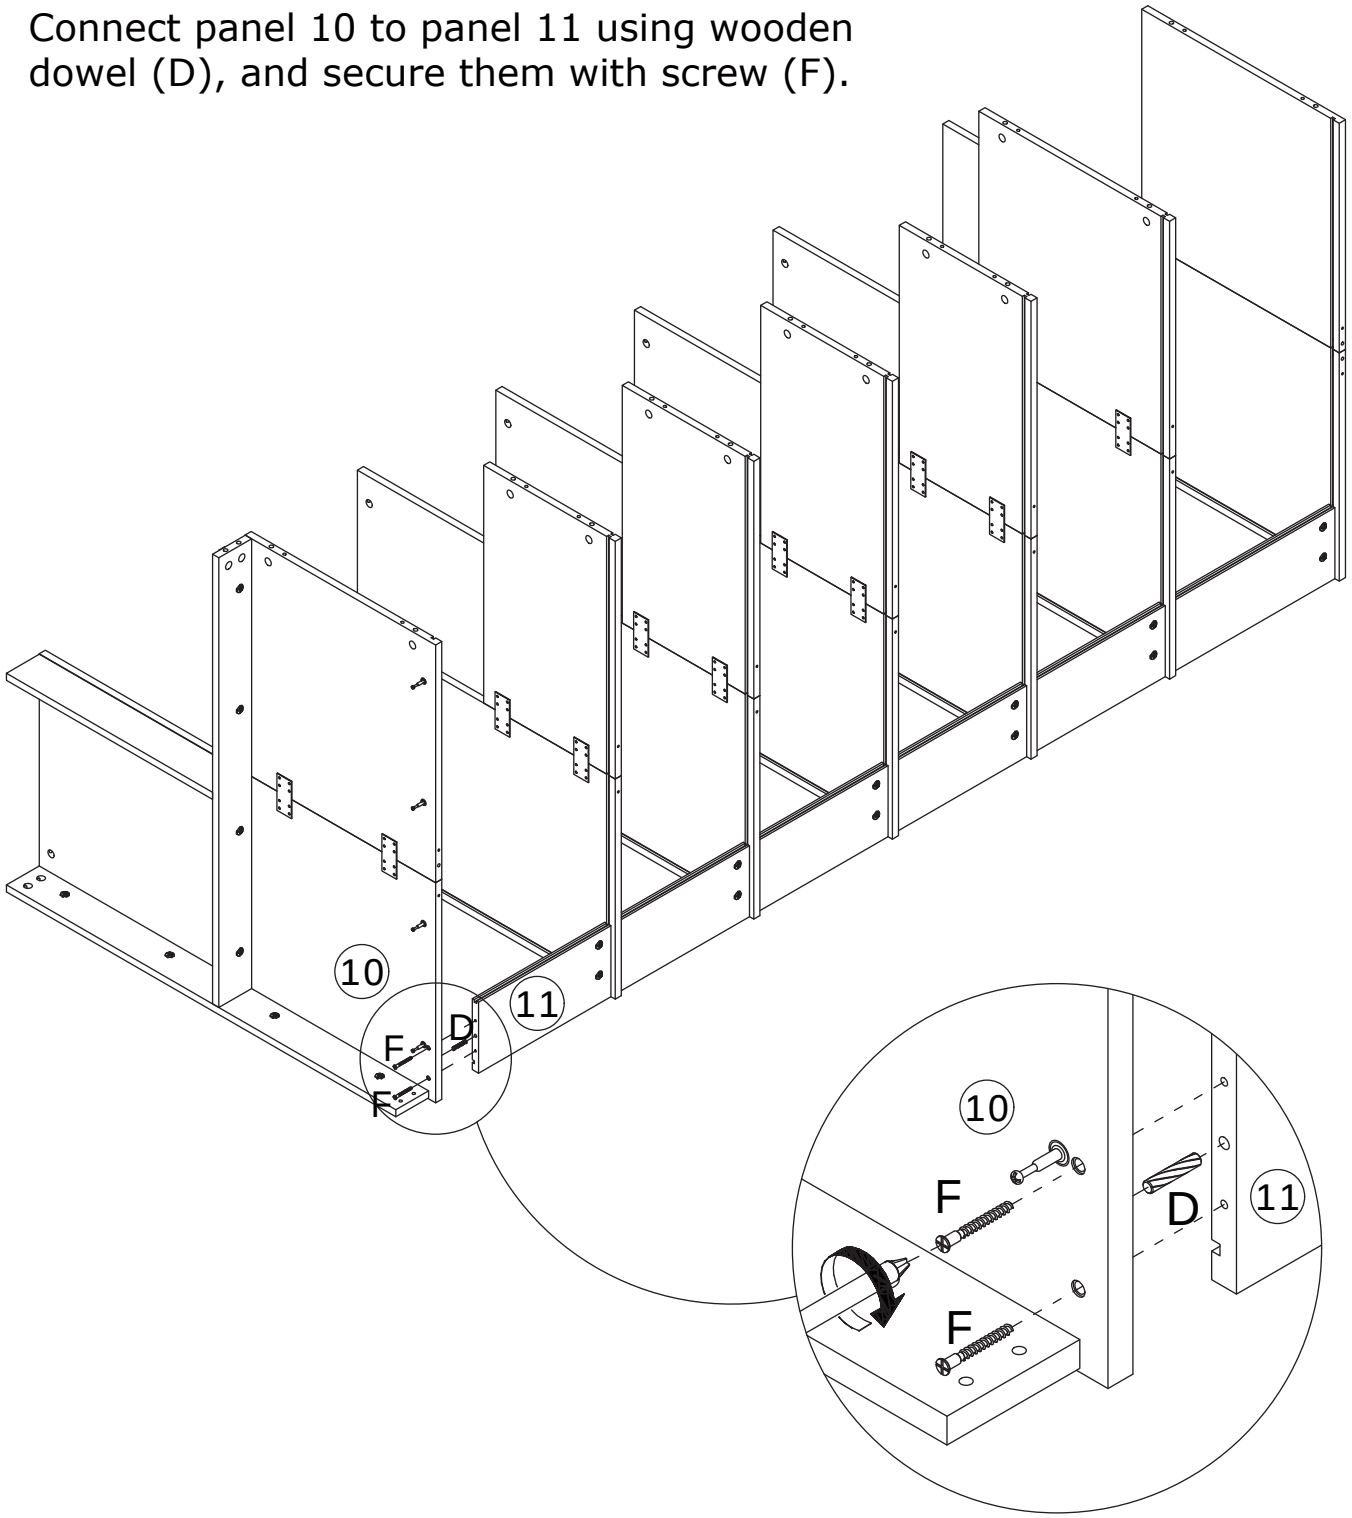



29

A x 4




CRB1595A




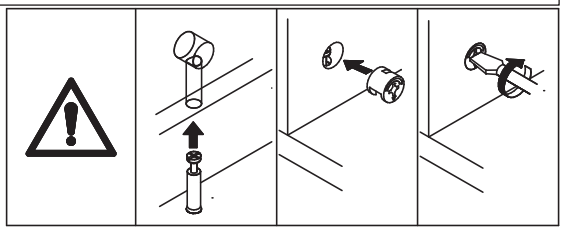

Connect panel 19 to panels 9 and 10, then tighten by turning cam lock (A) clockwise.

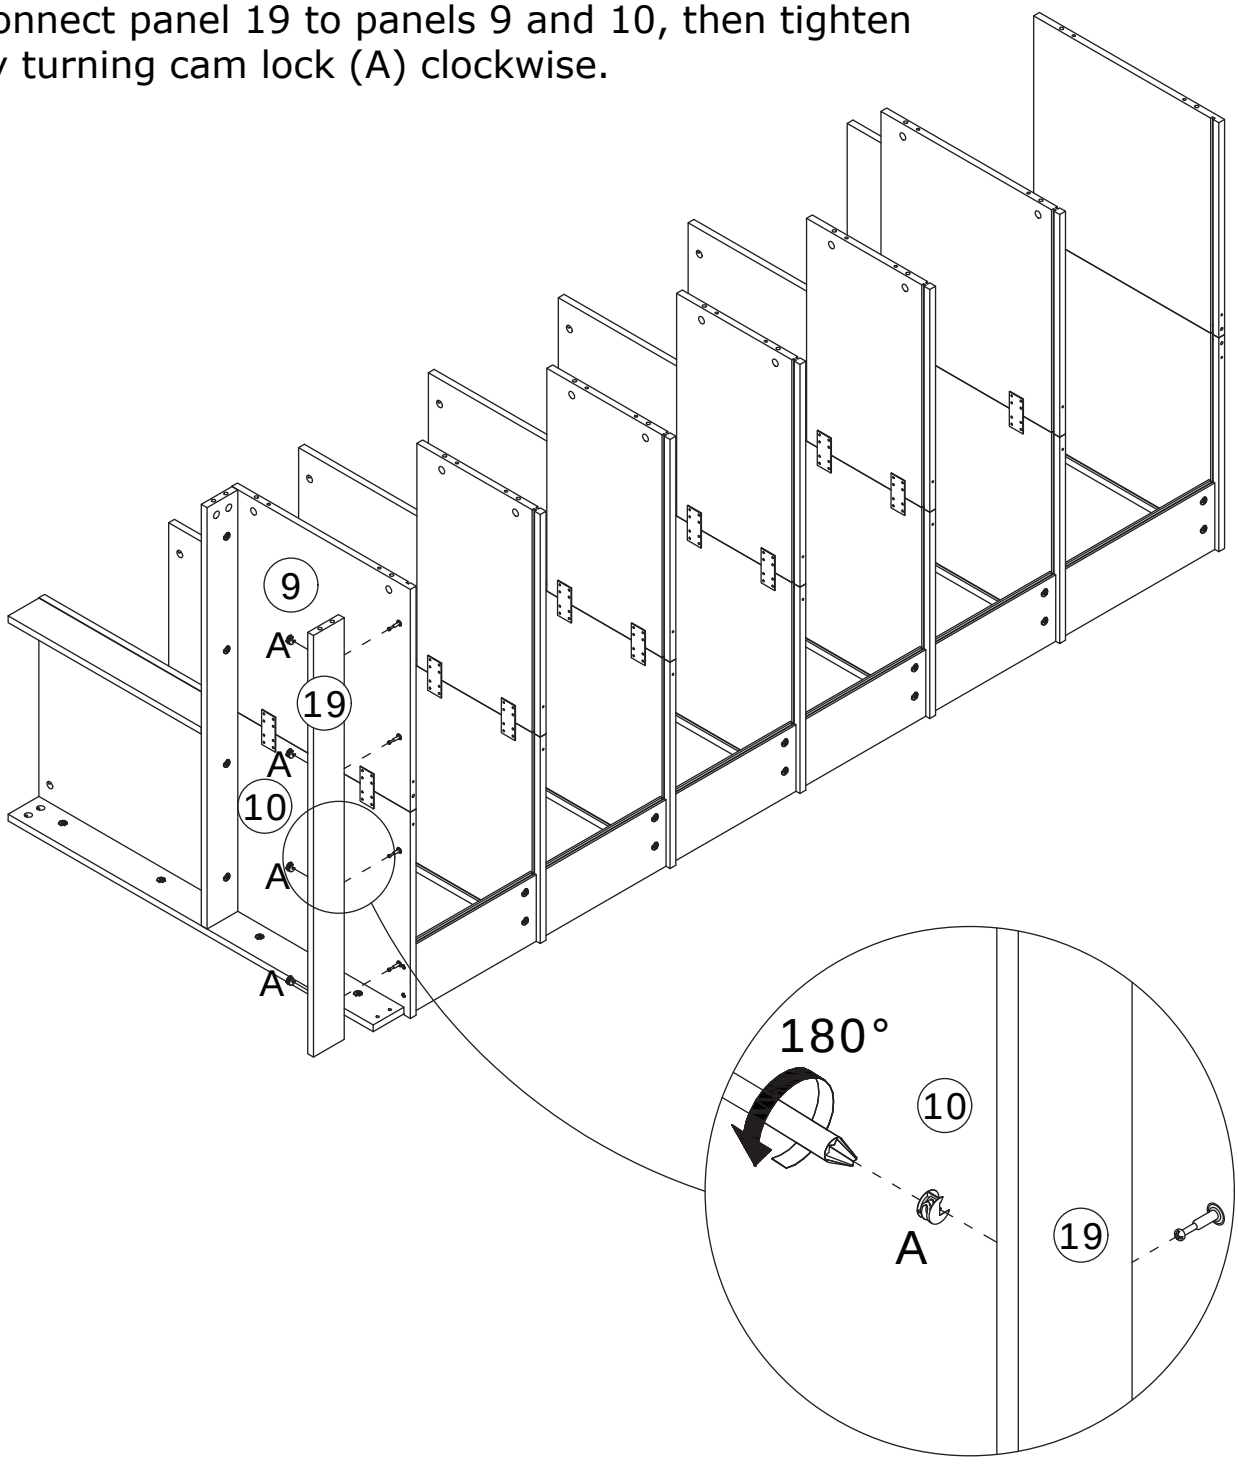


30

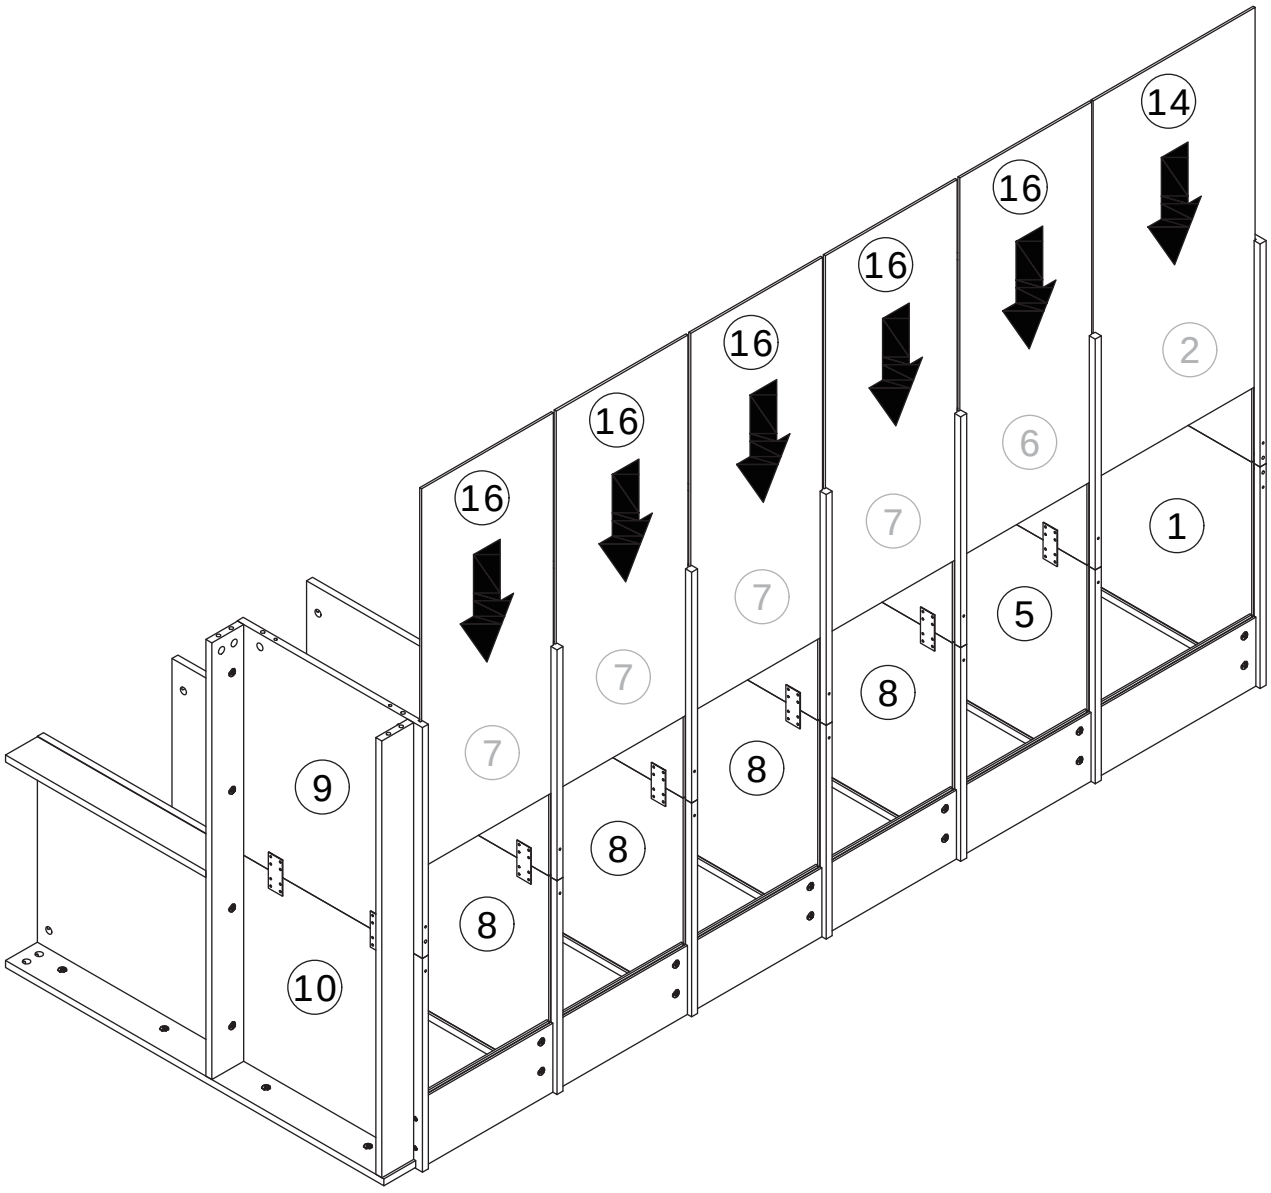


Insert panels 14 and 16 into the available slots.


31


D x 14



CRF0630A


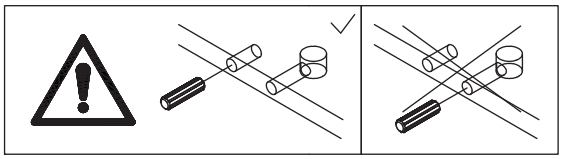


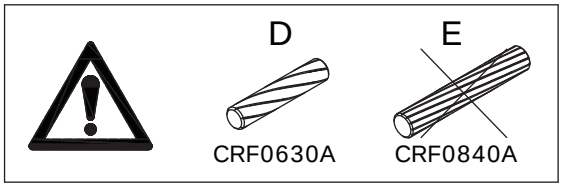


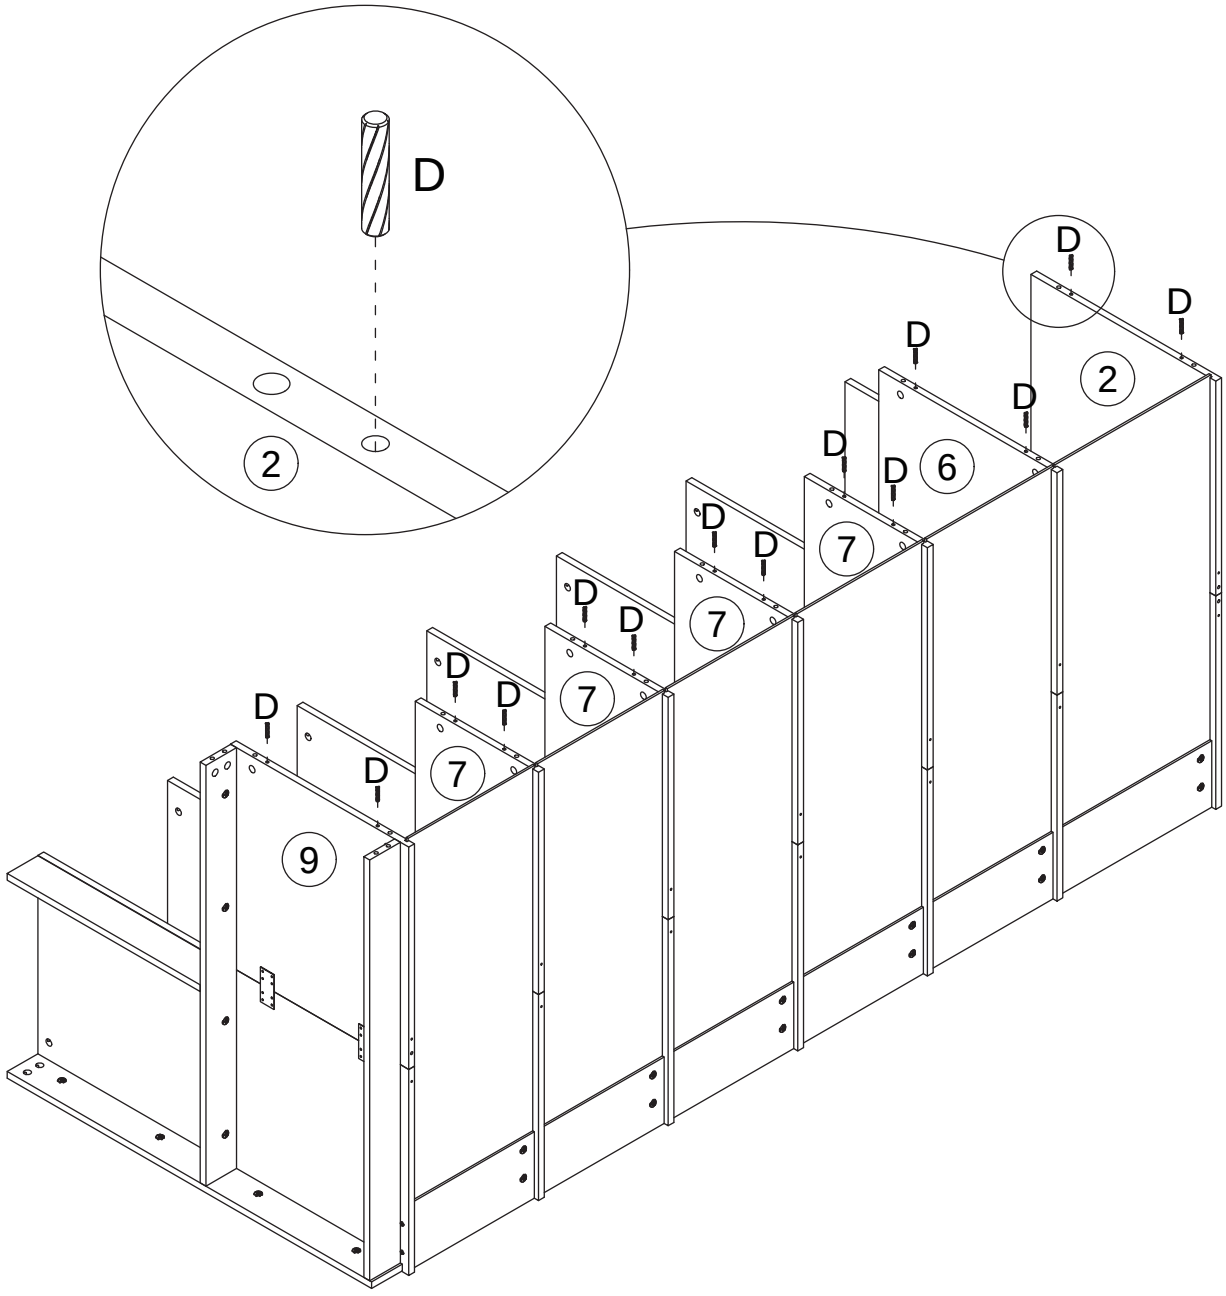


Insert wooden dowel (D) into the mounting unit.

32

B x 18	C x 18	
 CRA0635B		

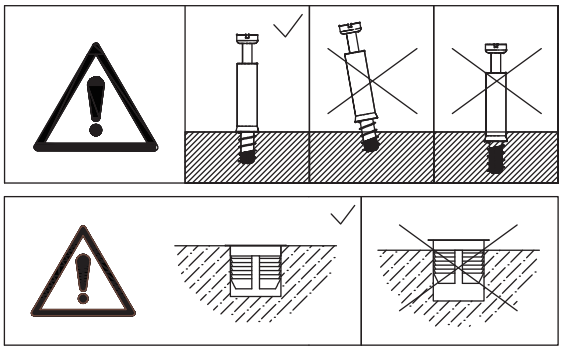

Install plug (C) onto panel 4, then screw self-tapping rod (B) into panel 4.

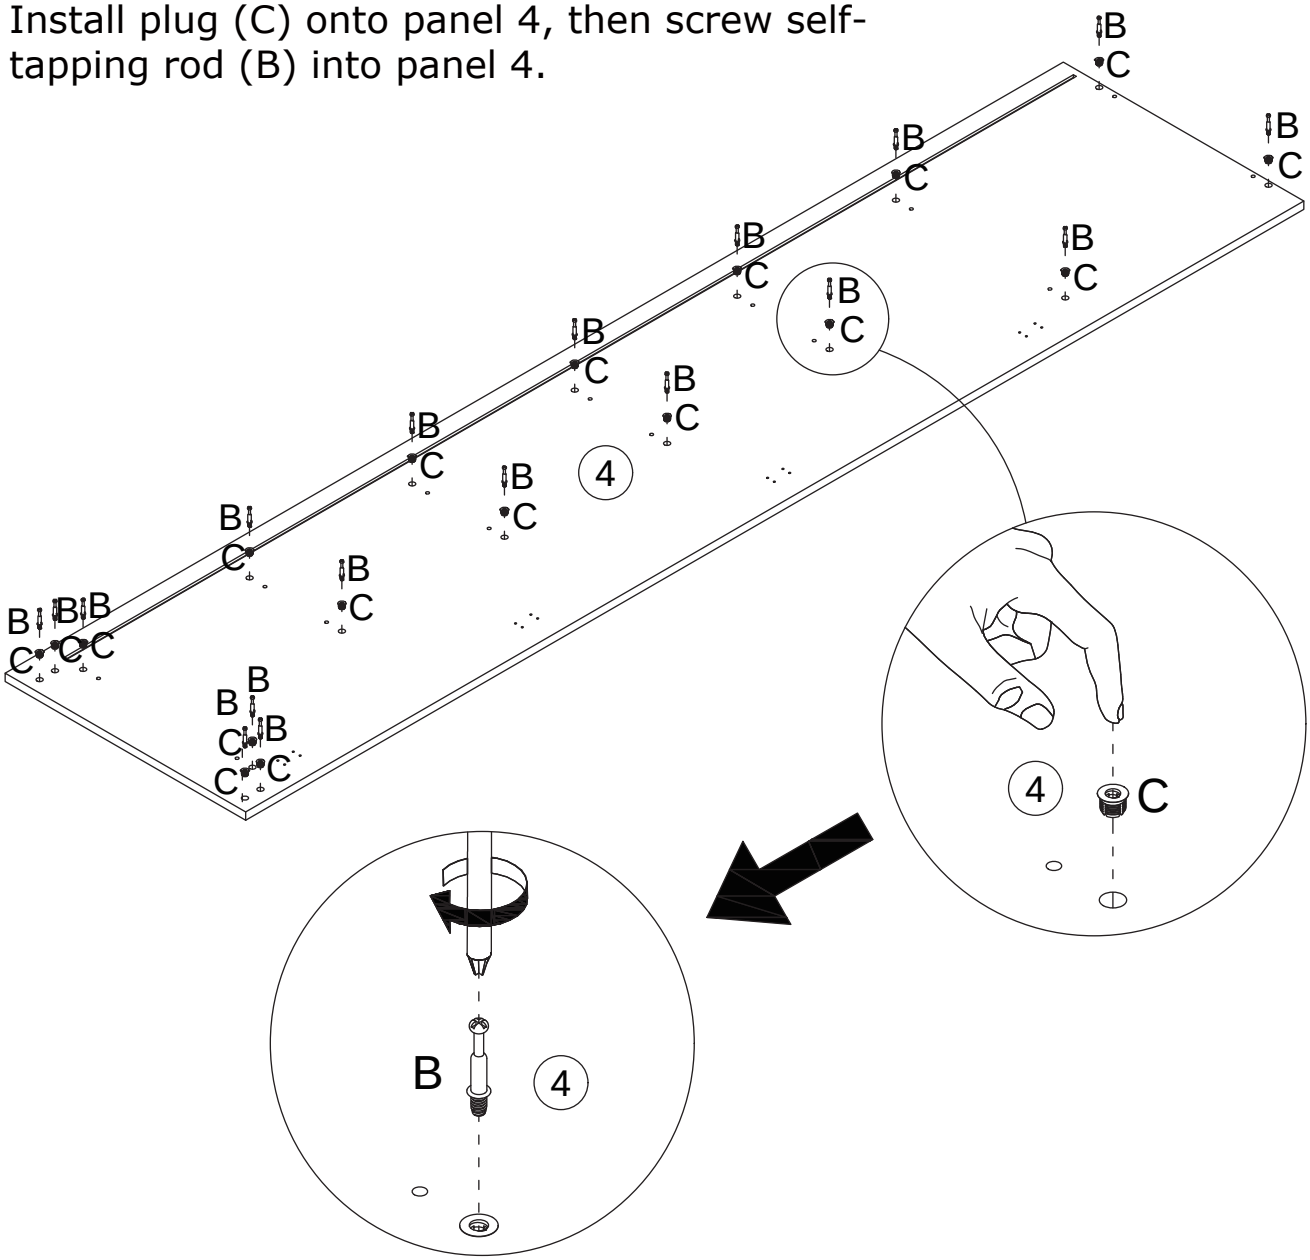



33

A x 18




CRB1595A






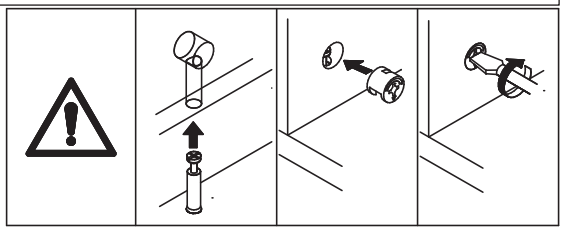



Connect panel 4 to the mounting unit, then tighten by turning cam lock (A) clockwise.

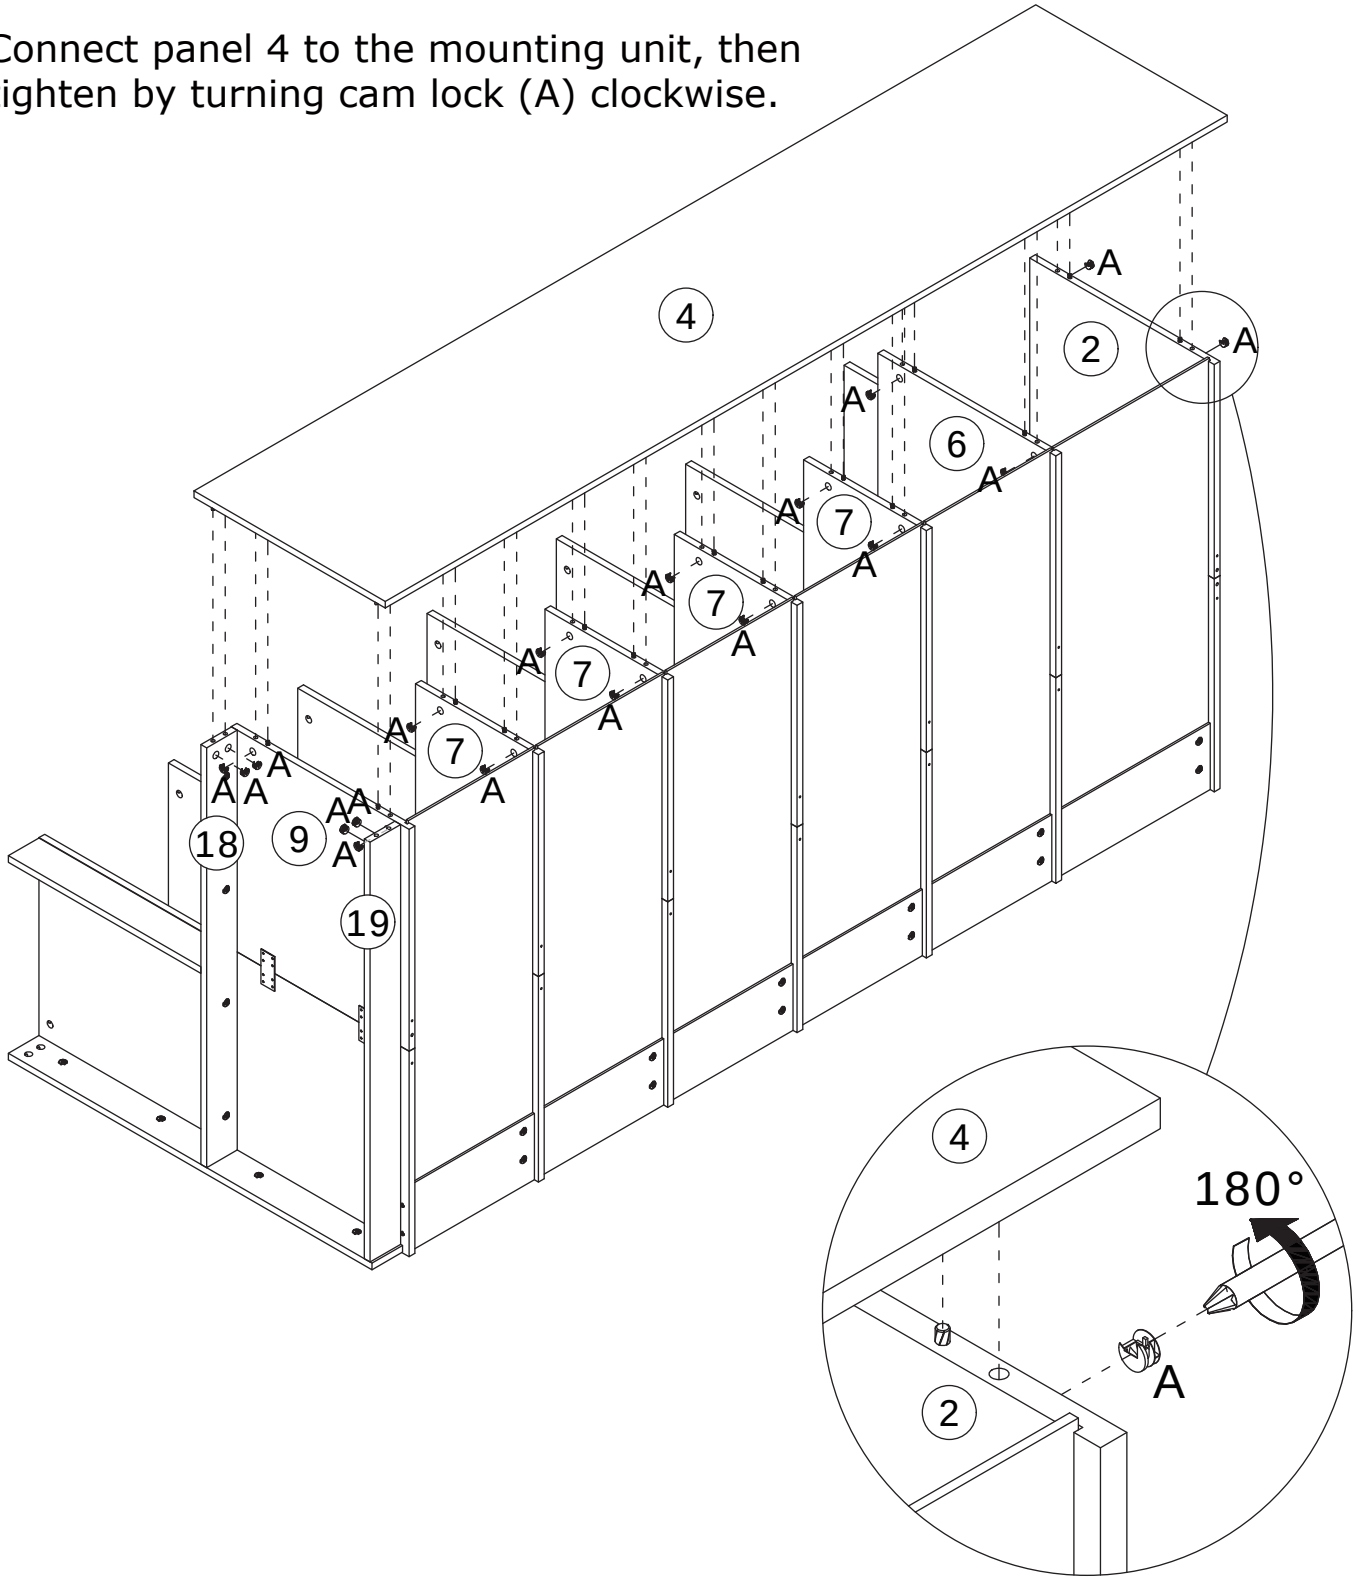


34

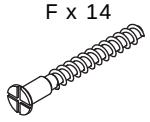D x 3	F x 14	
		
CRF0630A	CRC0540A	

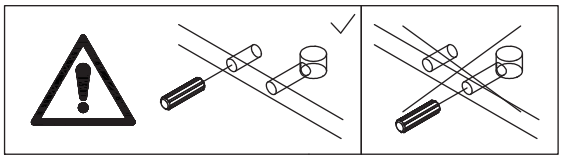

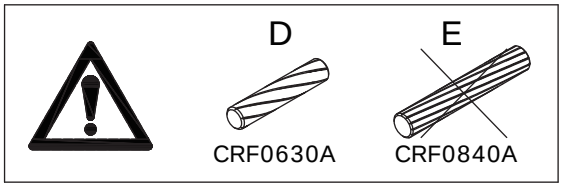


Connect panel 21 to the mounting unit using wooden dowel (D) and secure them with screw (F).

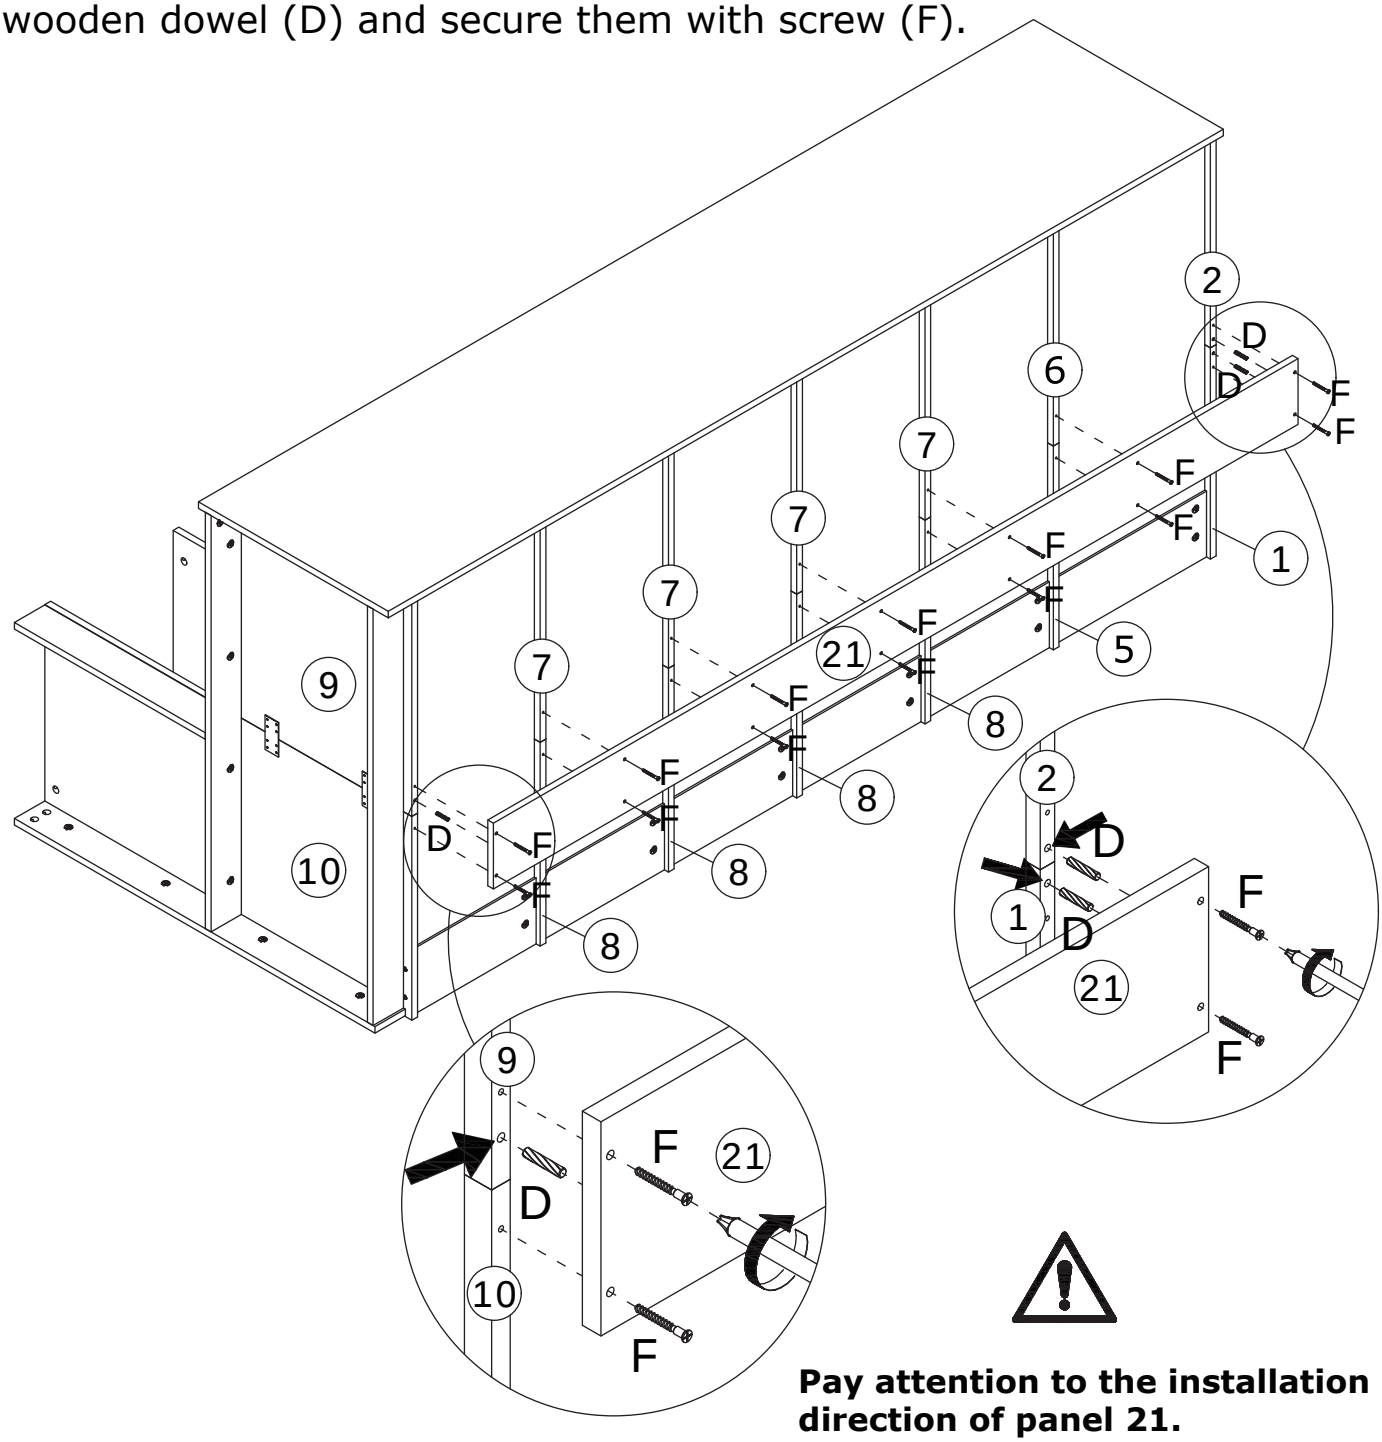


Pay attention to the installation direction of panel 21.

35


F x 2

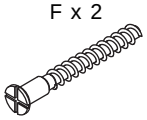

CRC0540A




Turn the cabinet upside down and secure panel 20 to panel 19 using screw (F).

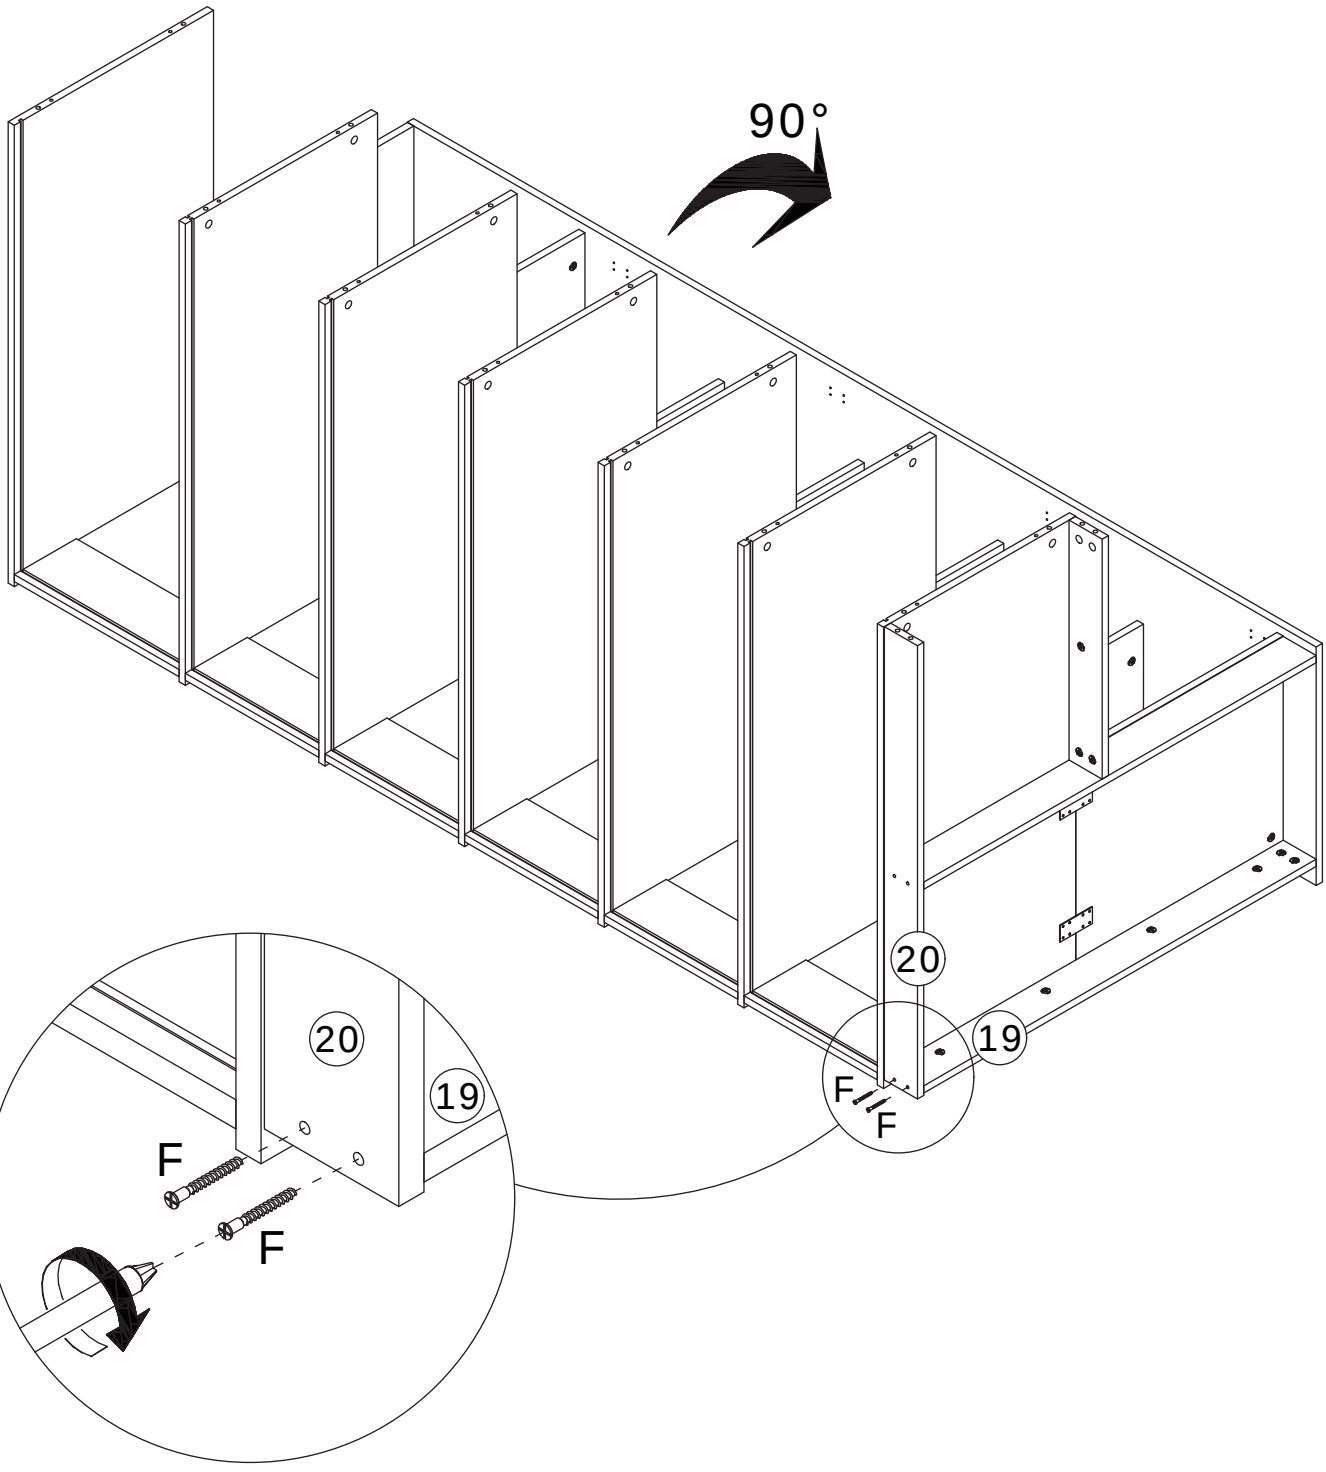


36

Insert panels 13 and 15 into the available slots.

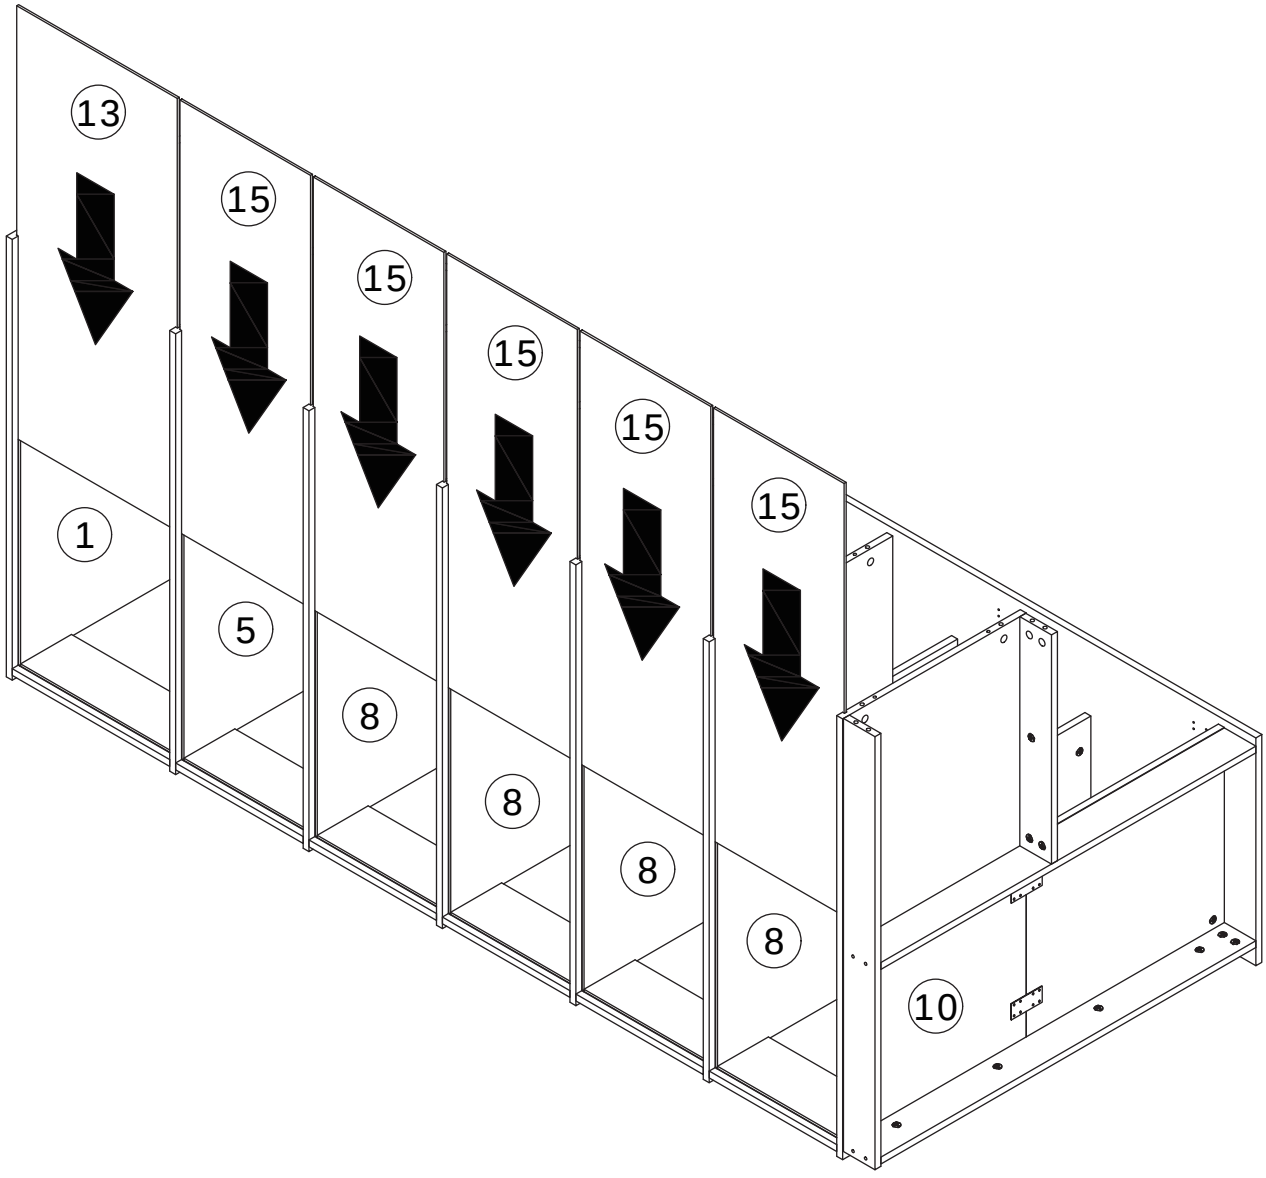



37

D x 14




CRF0630A


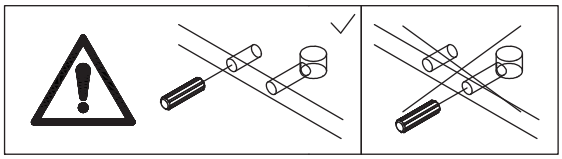


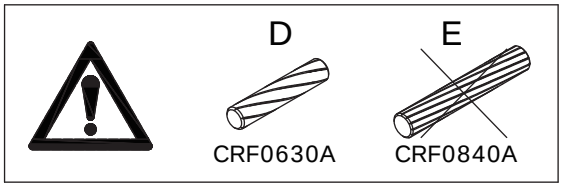


Insert wooden dowel (D) into the mounting unit.

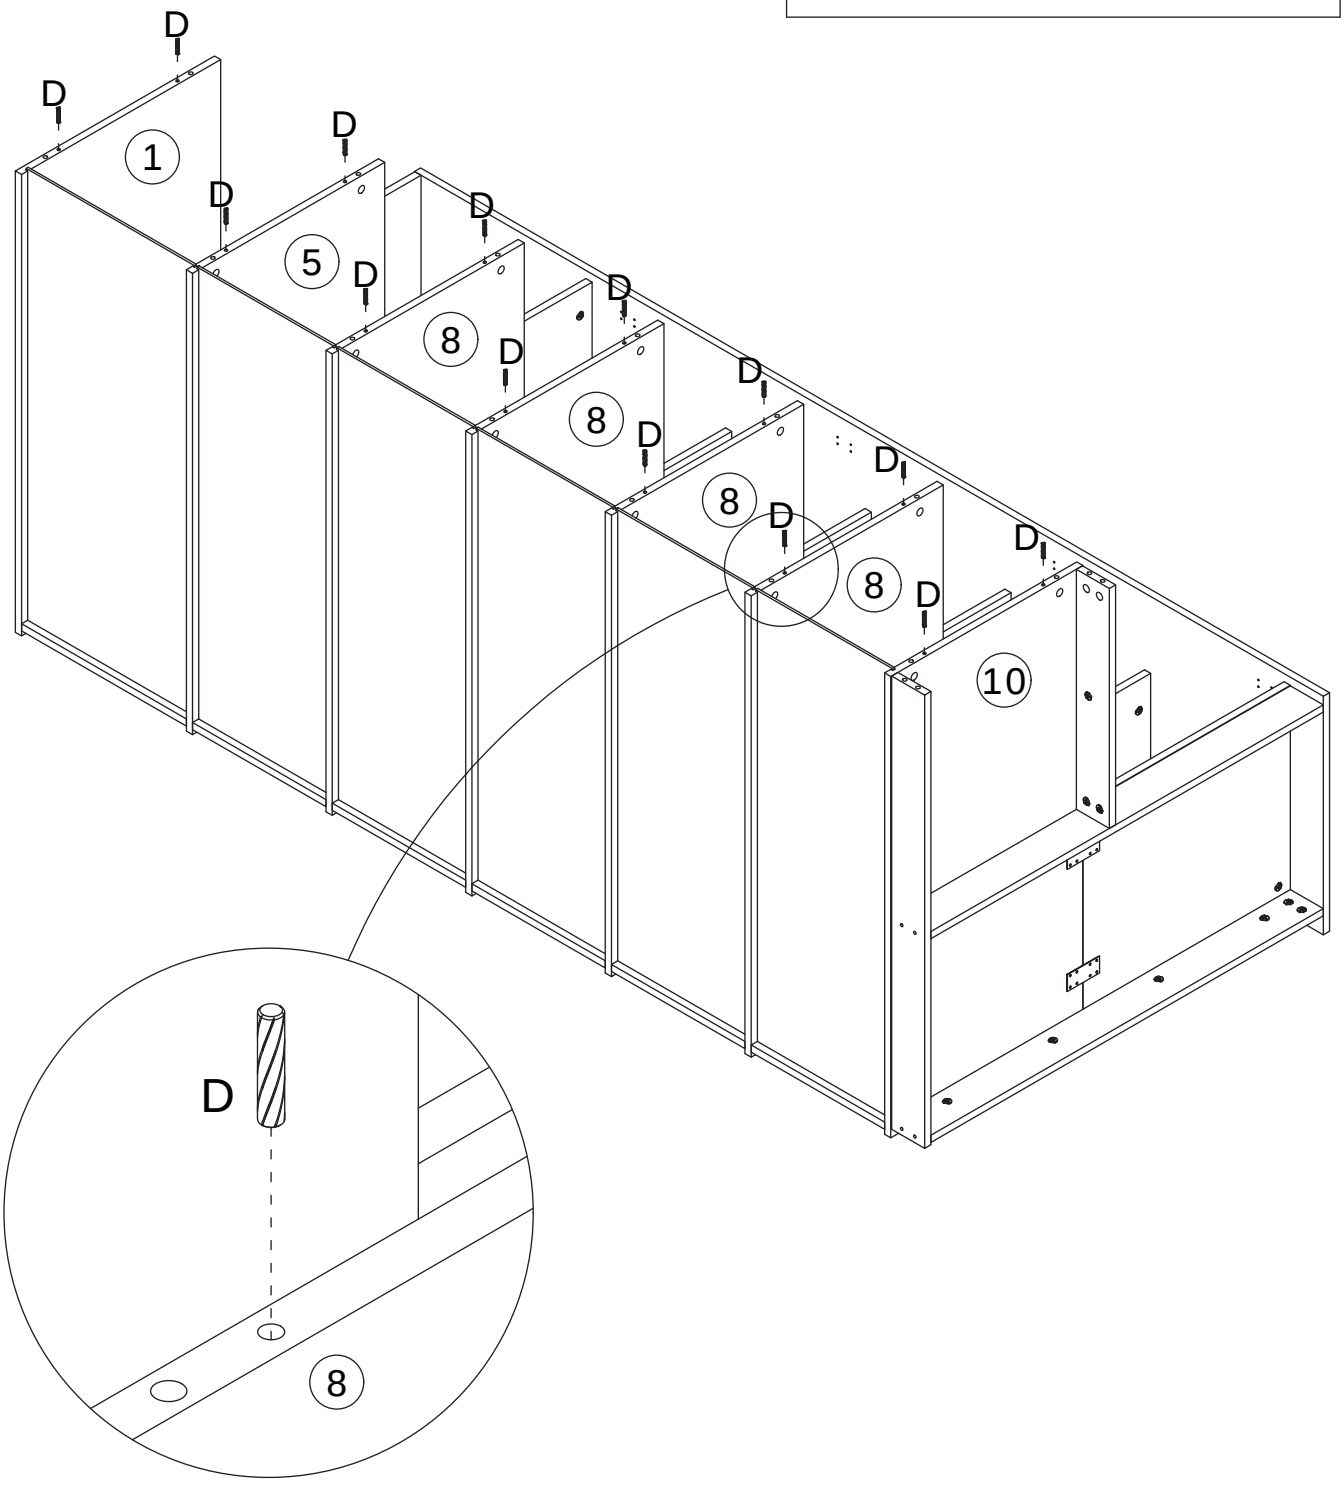


38

B x 18	C x 18	
 CRA0635B		

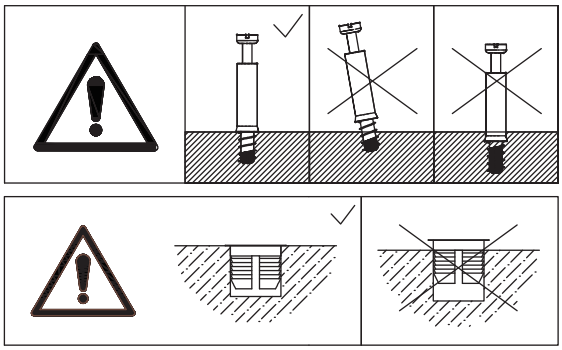

Install plug (C) onto panel 3, then screw self-tapping rod (B) into panel 3.

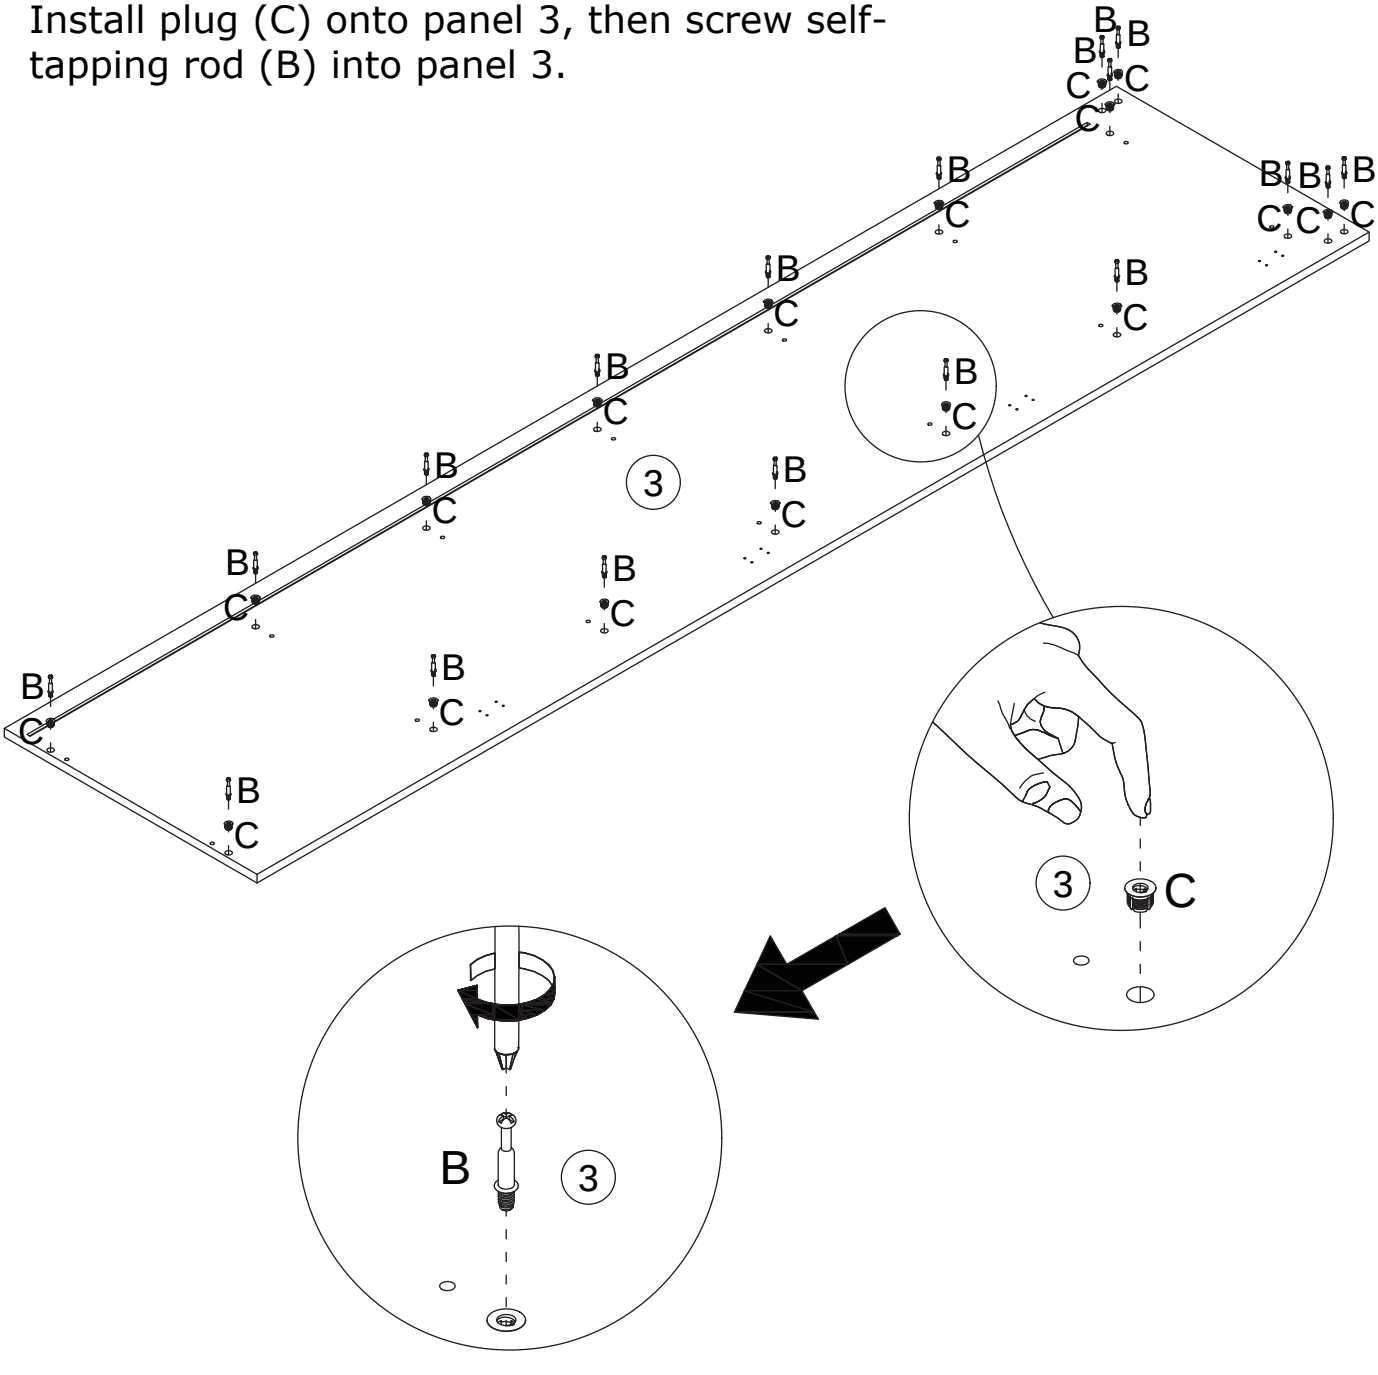



39

A x 18





CRB1595A




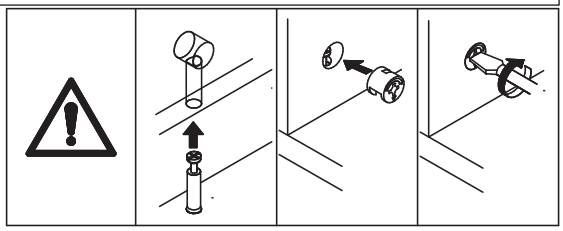


Connect panel 3 to the mounting unit, then tighten by turning cam lock (A) clockwise.

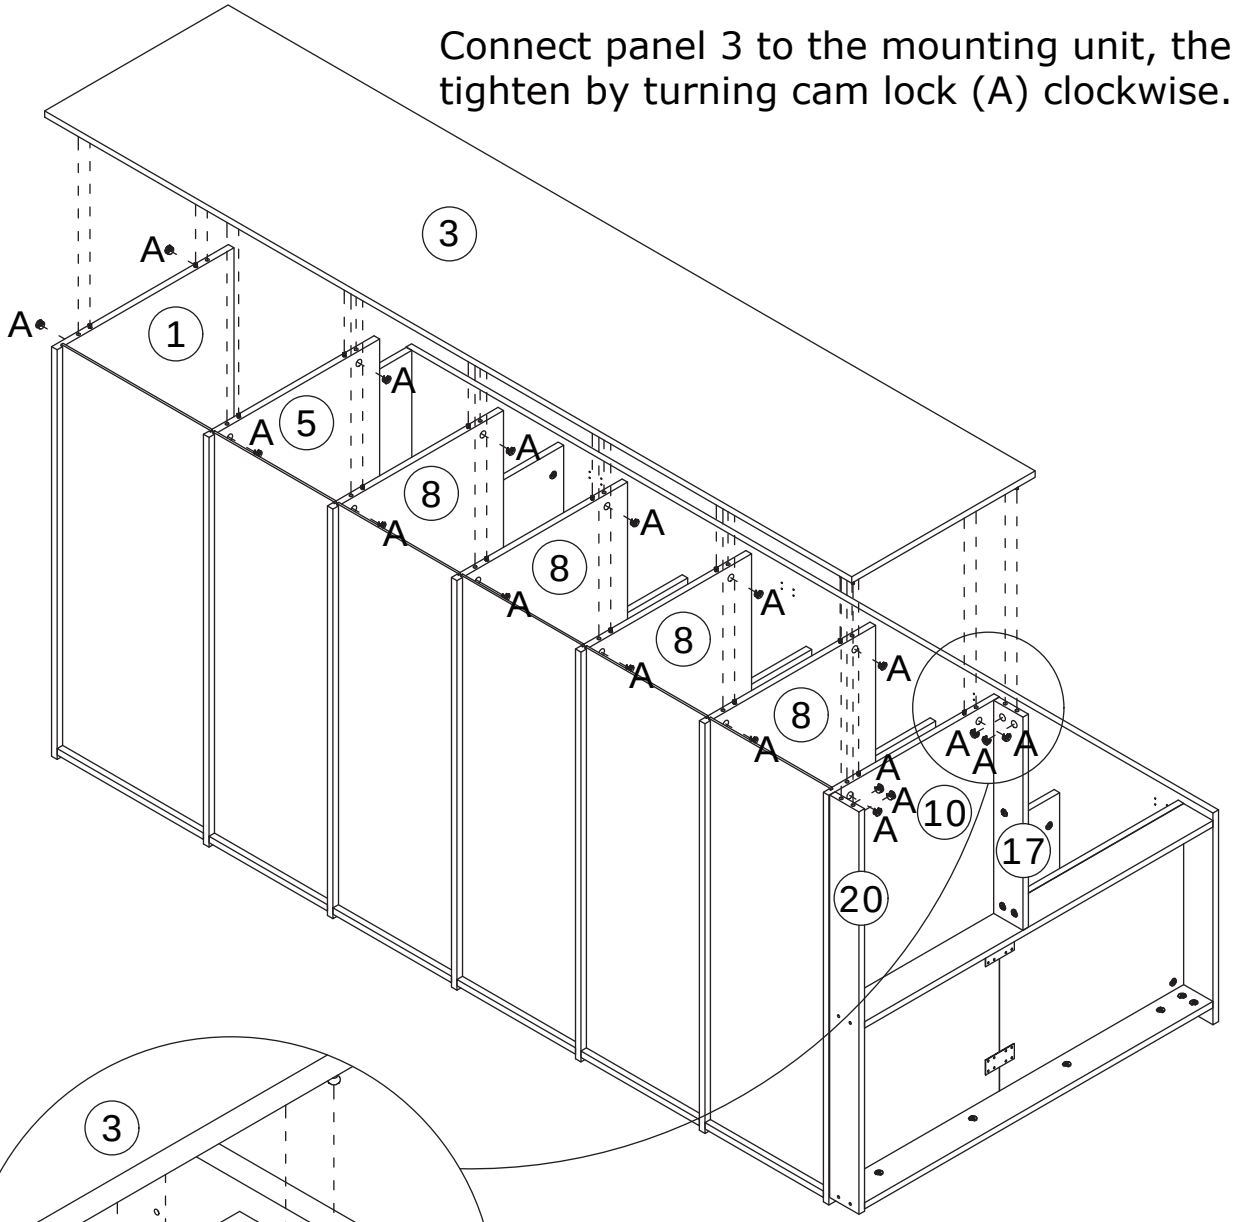

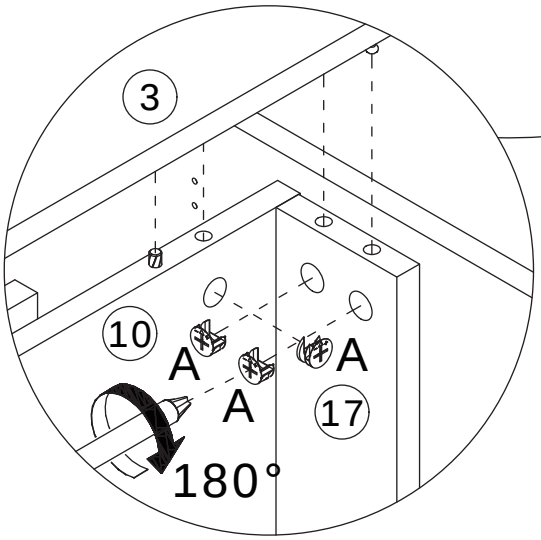

40

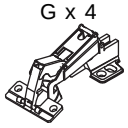
G x 4	L x 8	
 DGA861C	 CRD3514A	



L  CRD3514A

R  CRD0314A

Secure hinge (G) to panel 22 using screw (L).

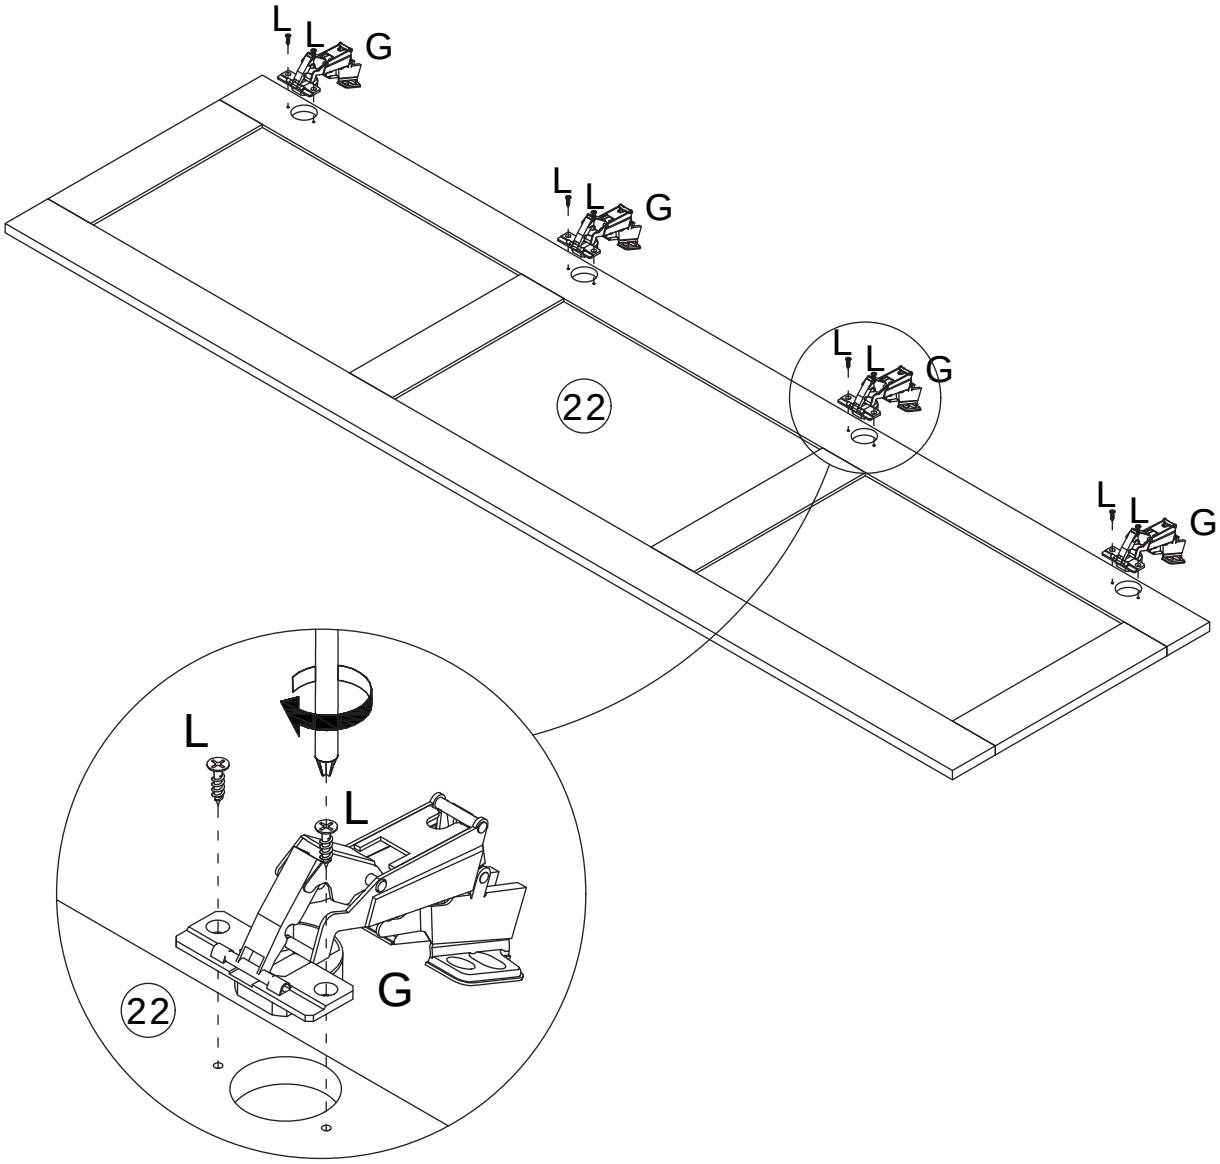


41

L x 16



CRD3514A





L




CRD3514A


R





CRD0314A

Attach panel 22 to panel 3 via hinges using screw (L).

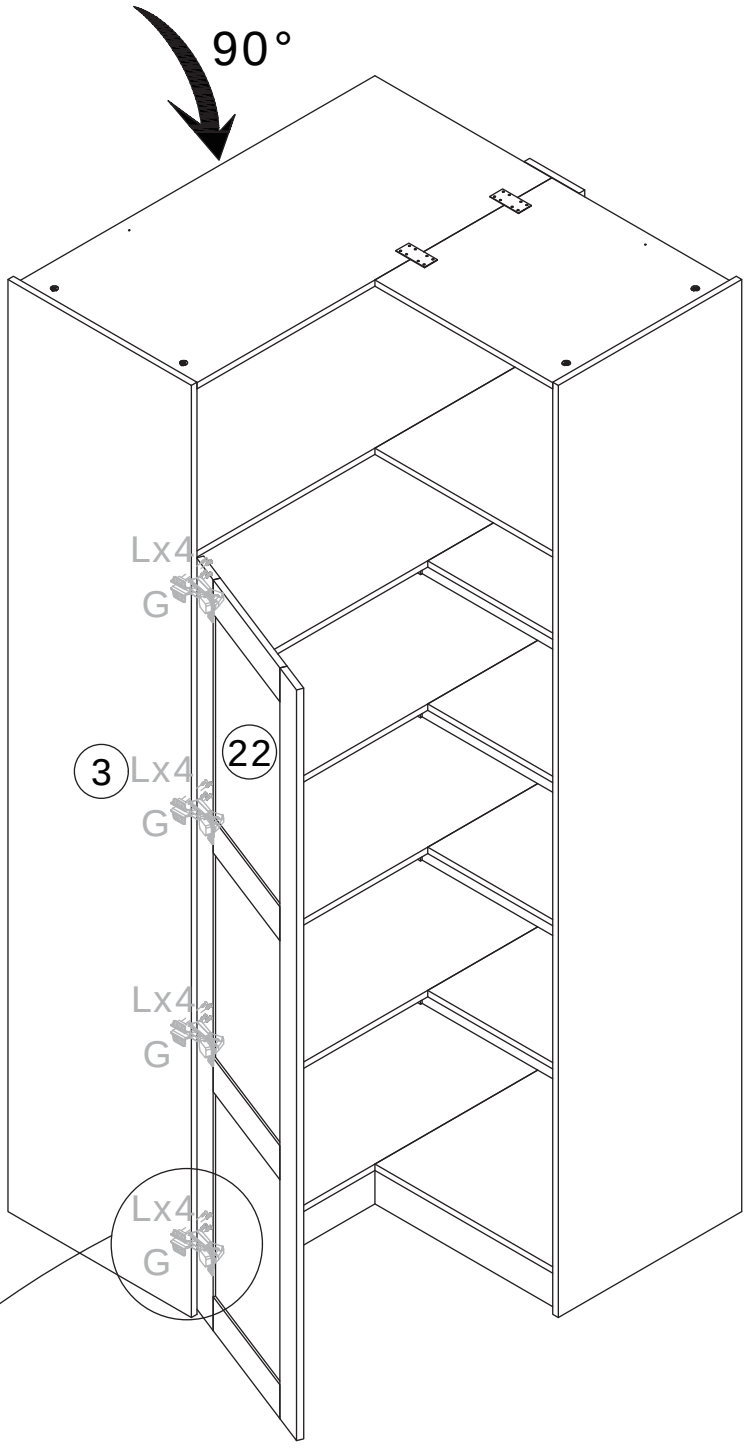

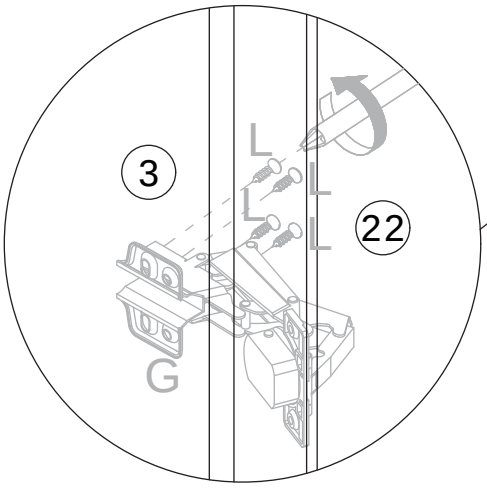

42

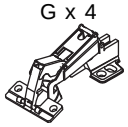
G x 4	L x 8	
 DGA861C	 CRD3514A	



L  CRD3514A

R  CRD0314A

Secure hinge (G) to panel 23 using screw (L).

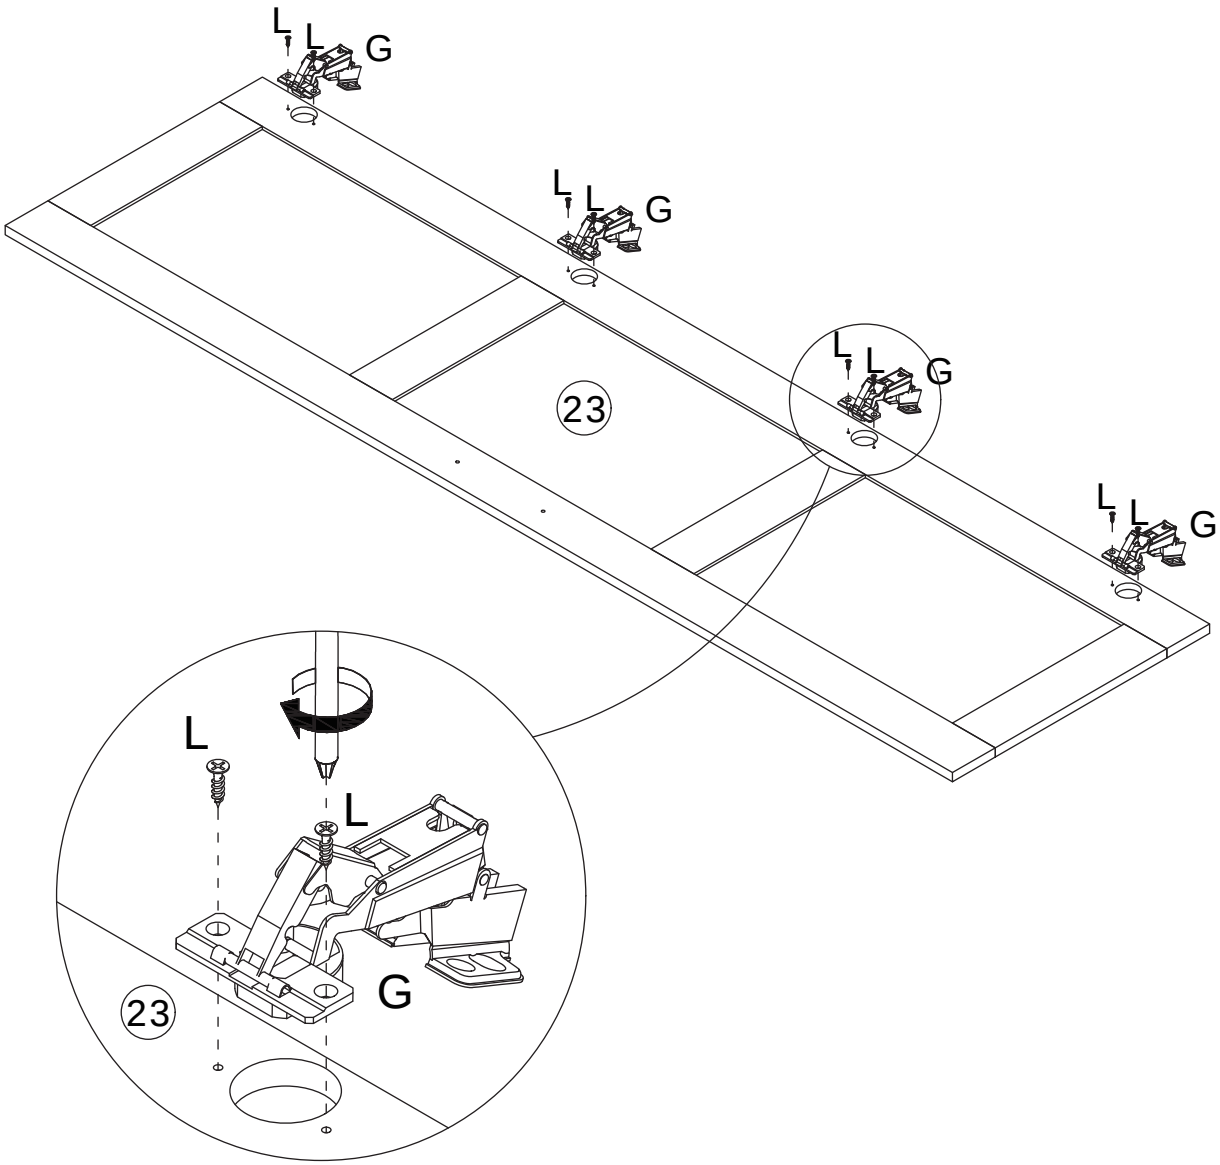


43

L x 16



CRD3514A





L




CRD3514A

R






CRD0314A


Attach panel 23 to panel 4 via hinges using screw (L).

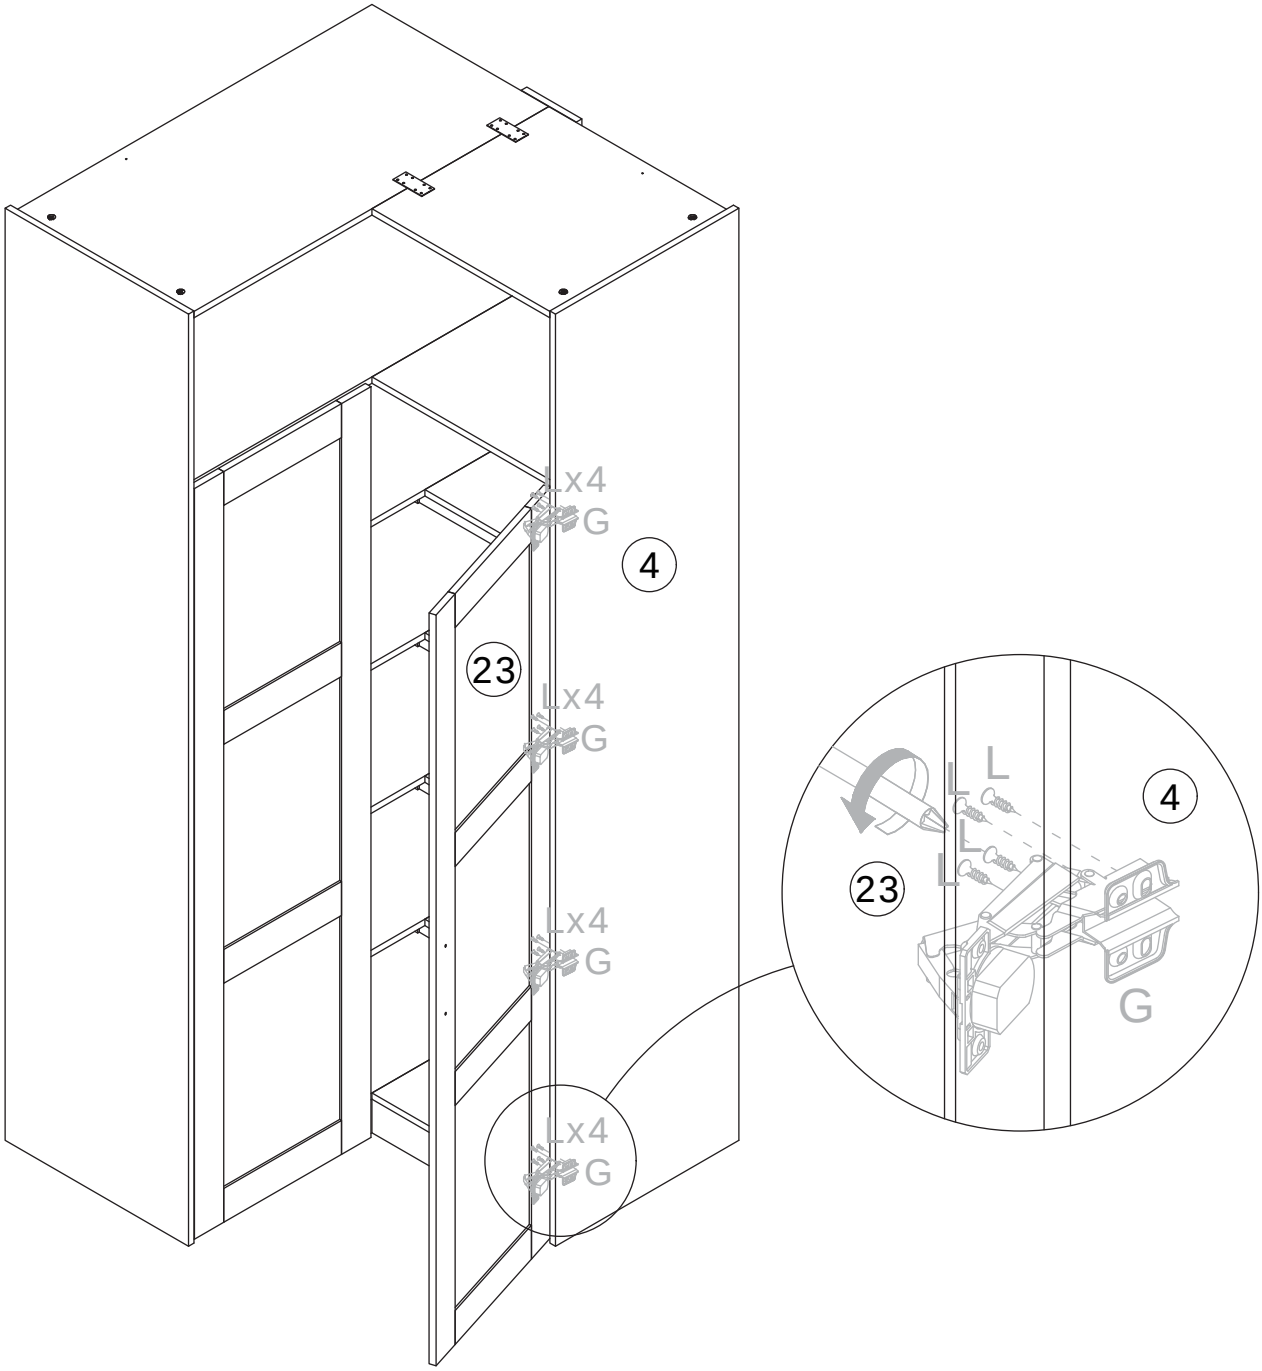



44

H x 1	J x 2	
	 CRE0418A	

Secure handle (H) to panels 22 and 23 using screw (J).

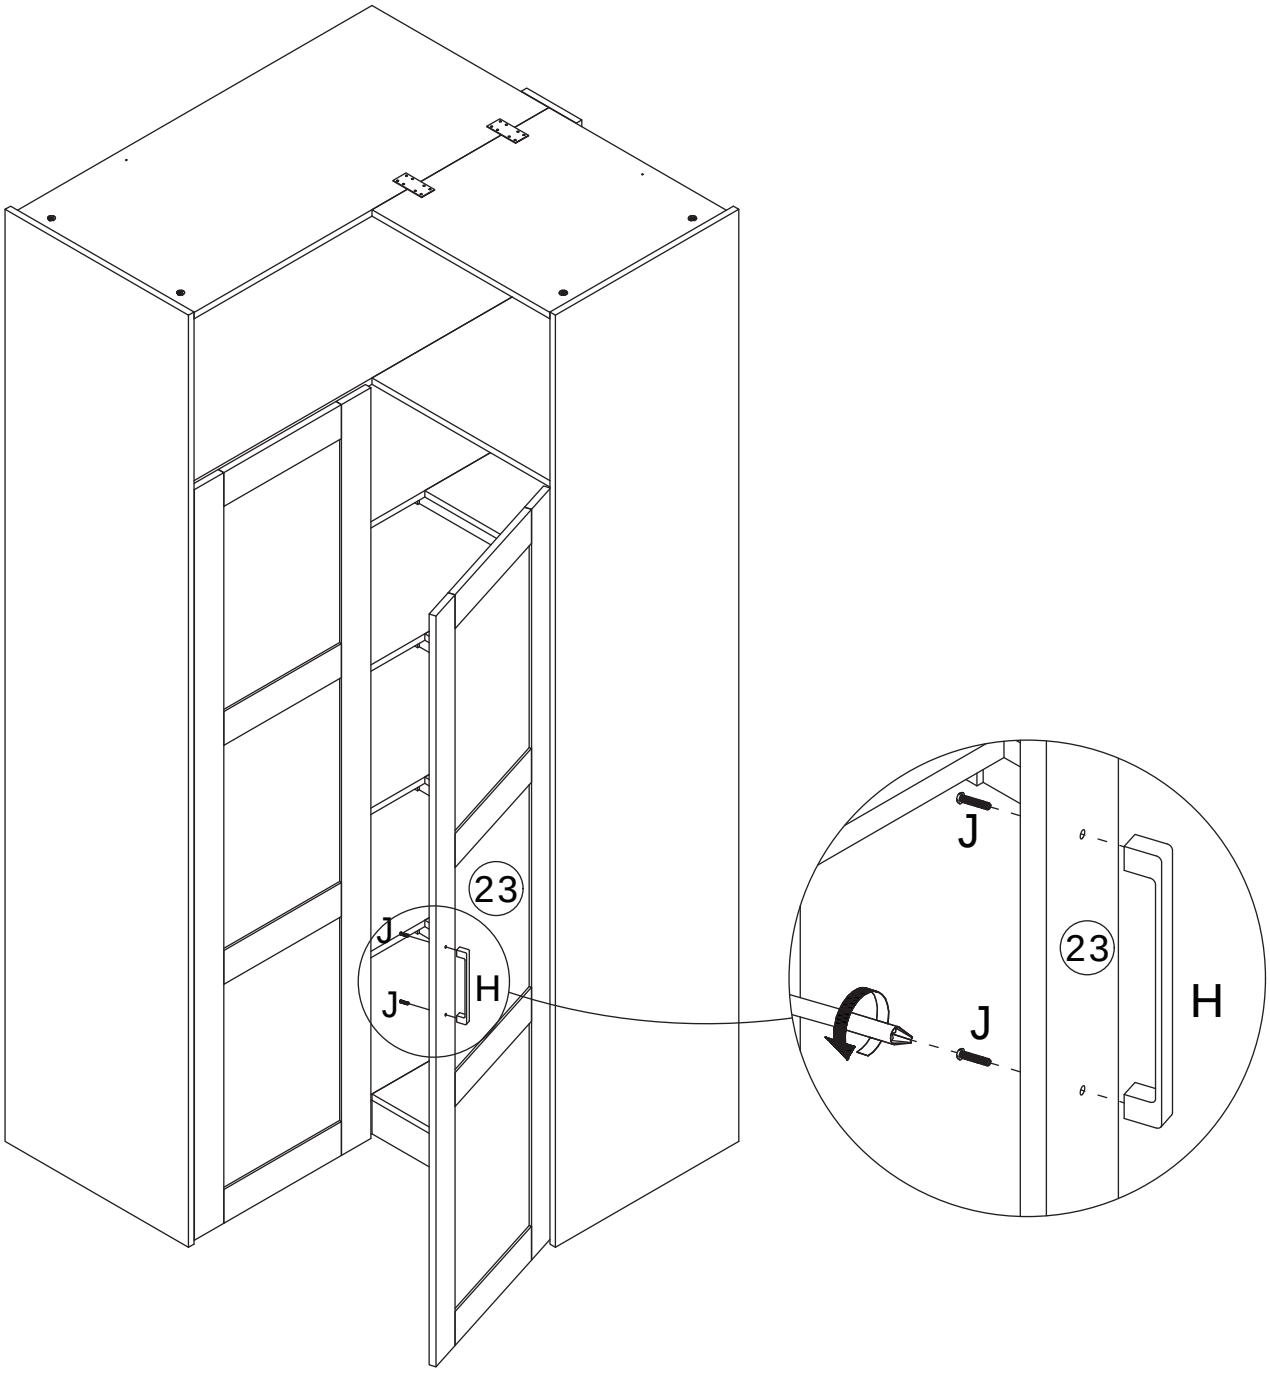

45


Q x 72	R x 72	
	 CRD0314A	




L  CRD3514A

R  CRD0314A

Insert clip (Q) into the available slots, then secure them with screw (R).

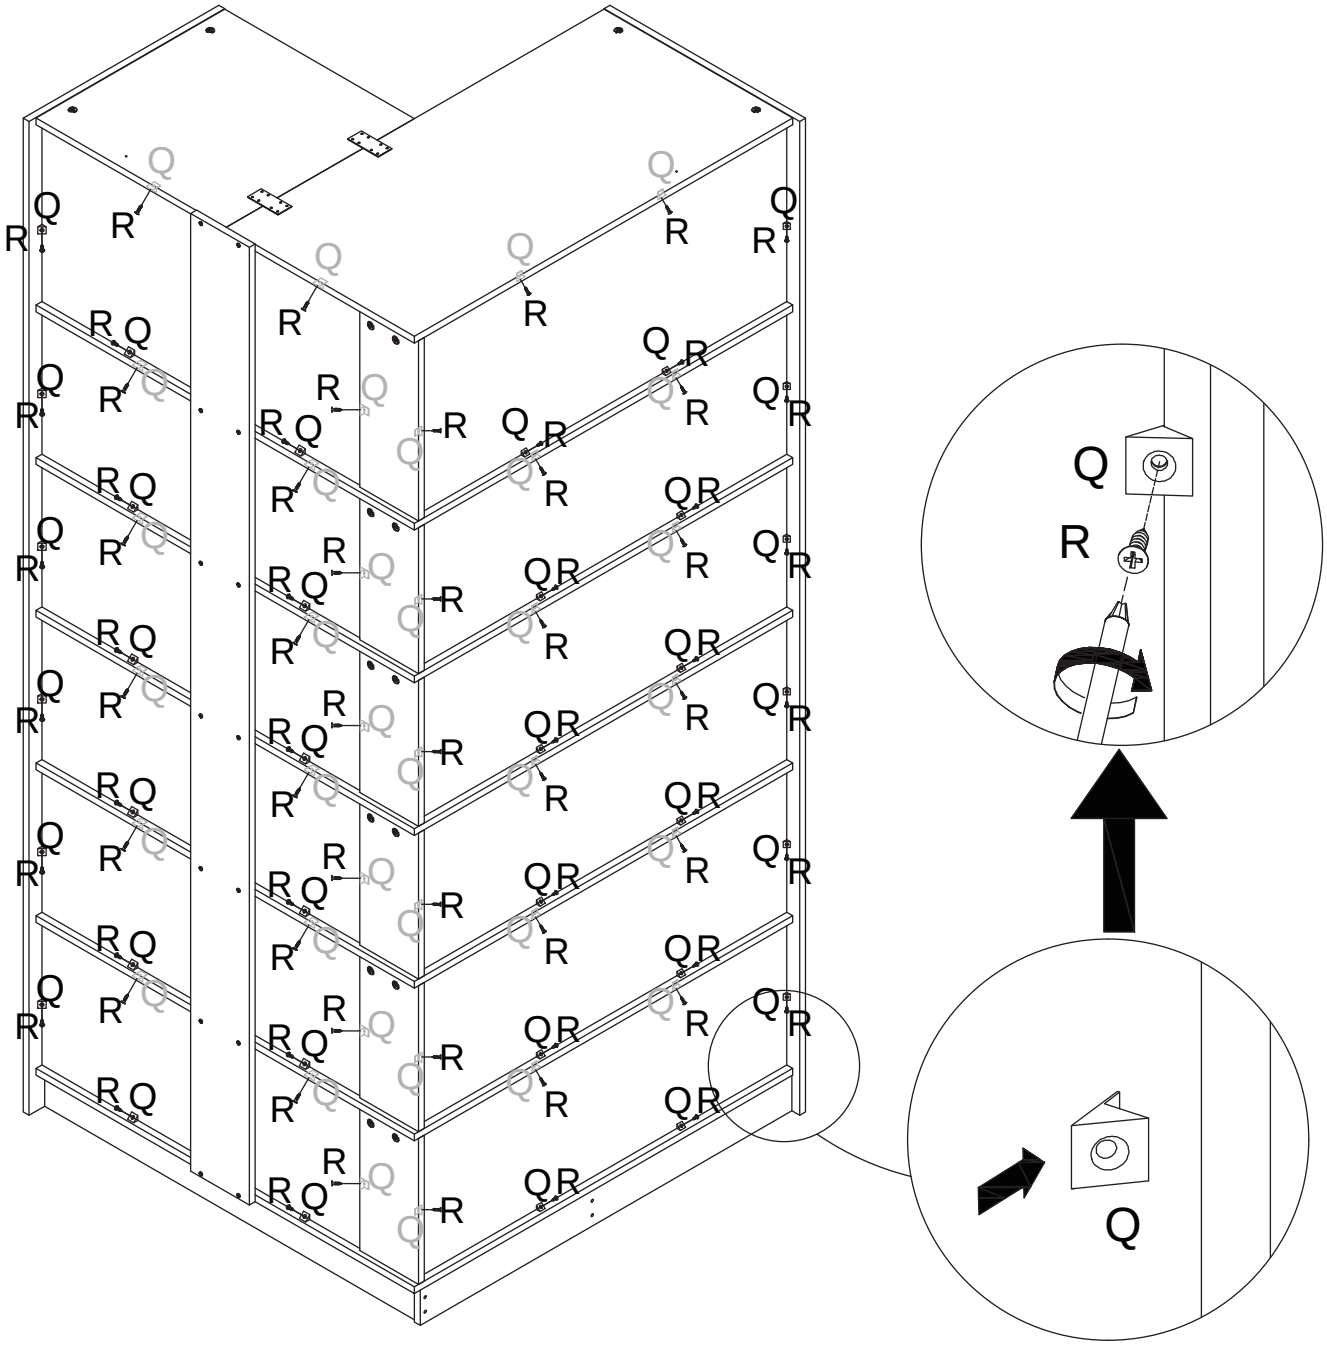


46




L x 2	M x 2	
 CRD3514A		

	L	R
	 CRD3514A	 CRD0314A


Secure bracket (M) to panels 1 and 2 using screw (L).

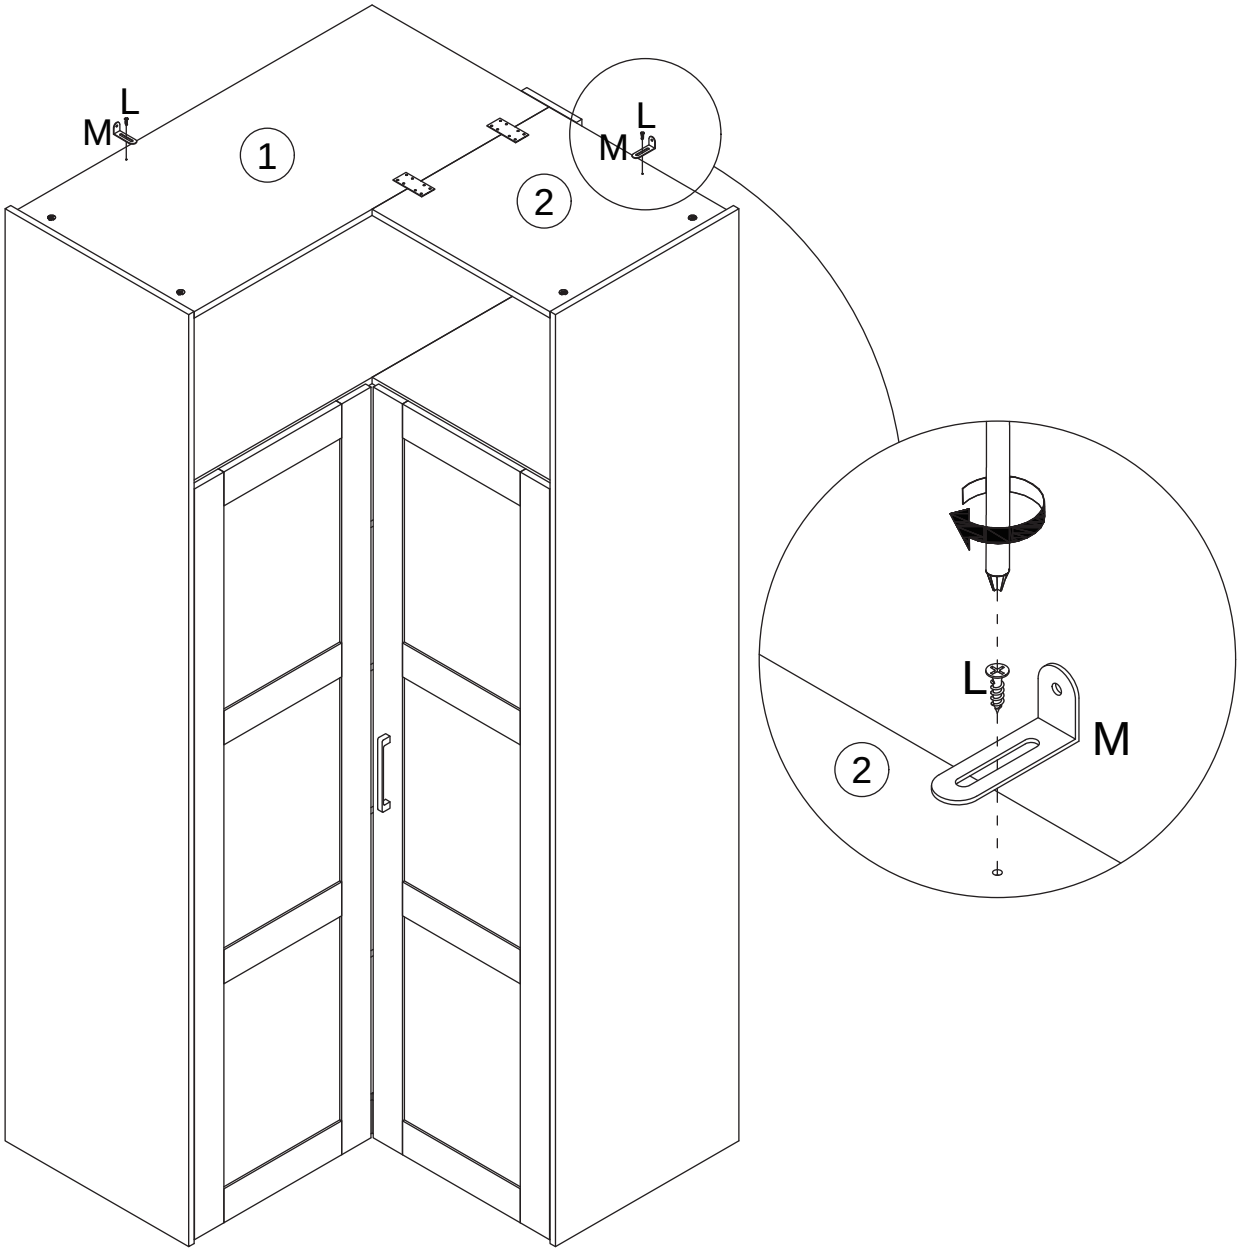



47

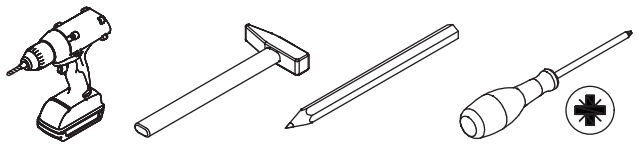N x 2	P x 2	
	 CRD3535A	

Install an anti-tip device.

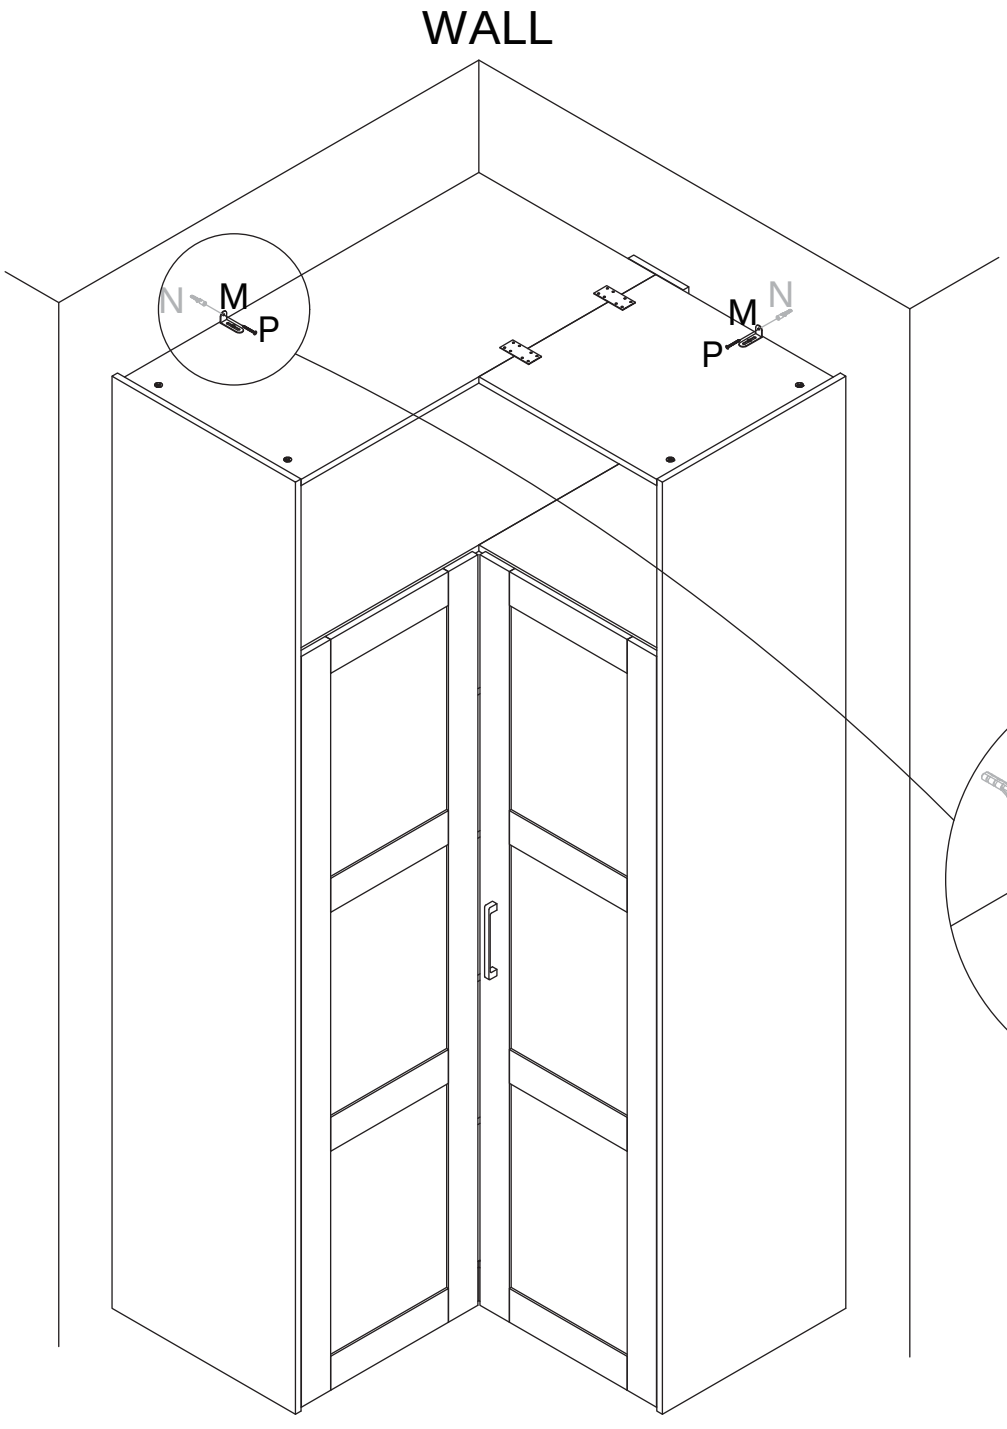

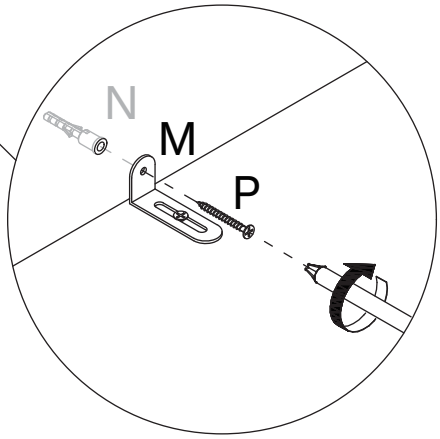

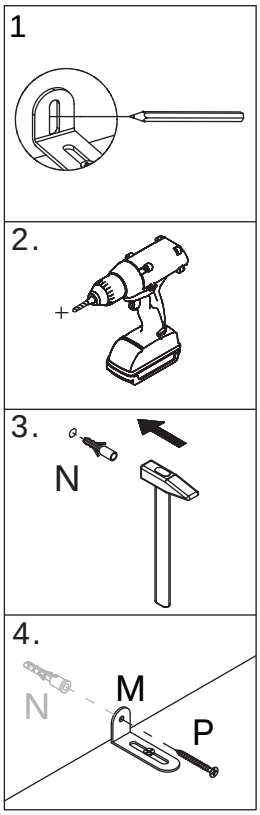

48



