




DESIGNED FOR LIFE

Assembly Instructions

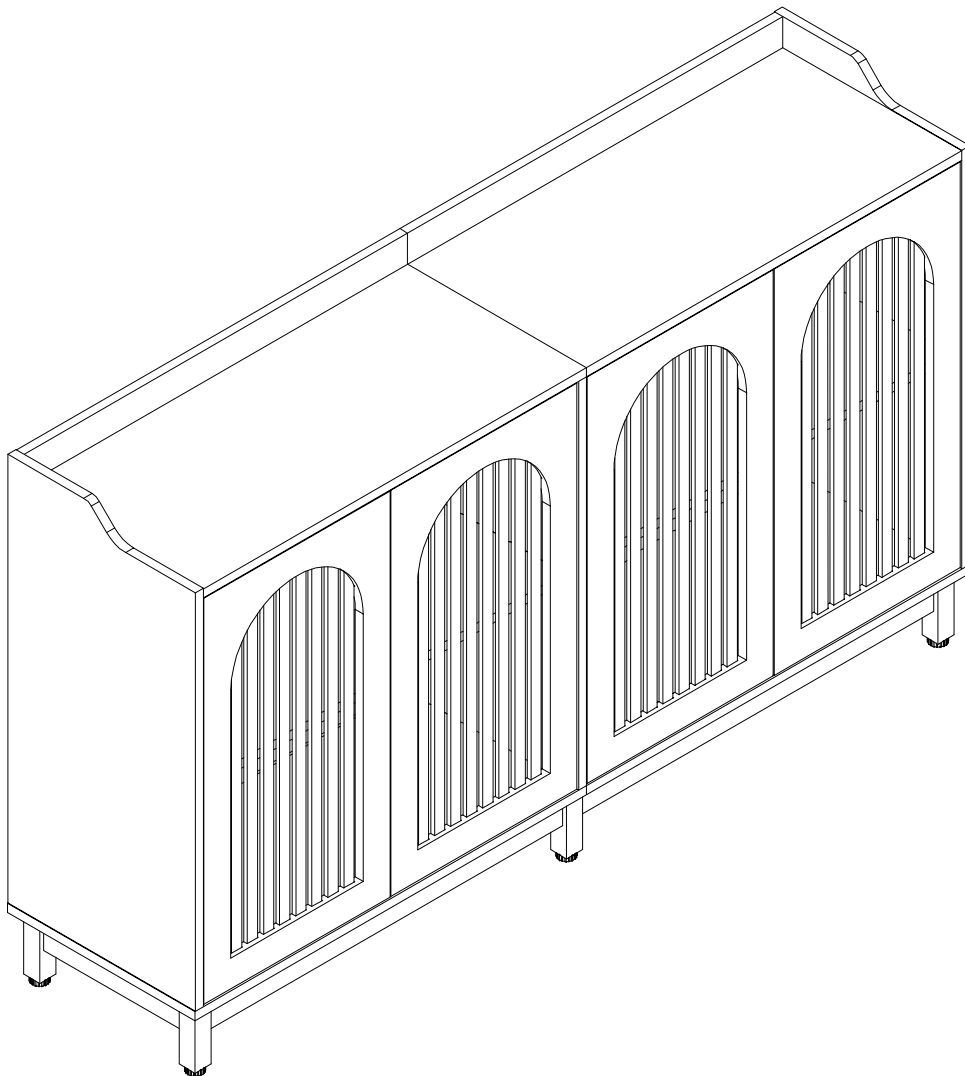

Sideboard

Model No.
HOGA-JW0983X/ JW1016



LITTLE TREE
Little Tree by Tribesigns

www.tribesigns.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.


How to Get the Assembly Video

Step 1 Scan the QR code.






Installation Video

Step2 Search with the Model No.
(on the bottom left corner of the title page)

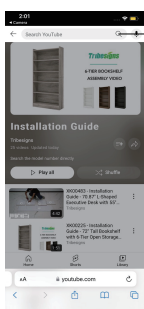


HOGA-JW0983X

Note: If you can't find the assembly video, please contact us.

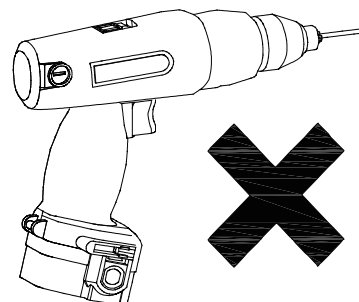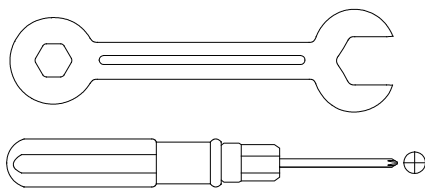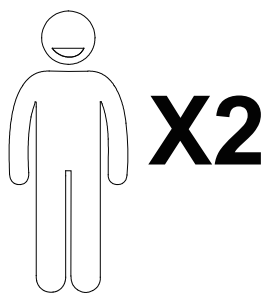



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

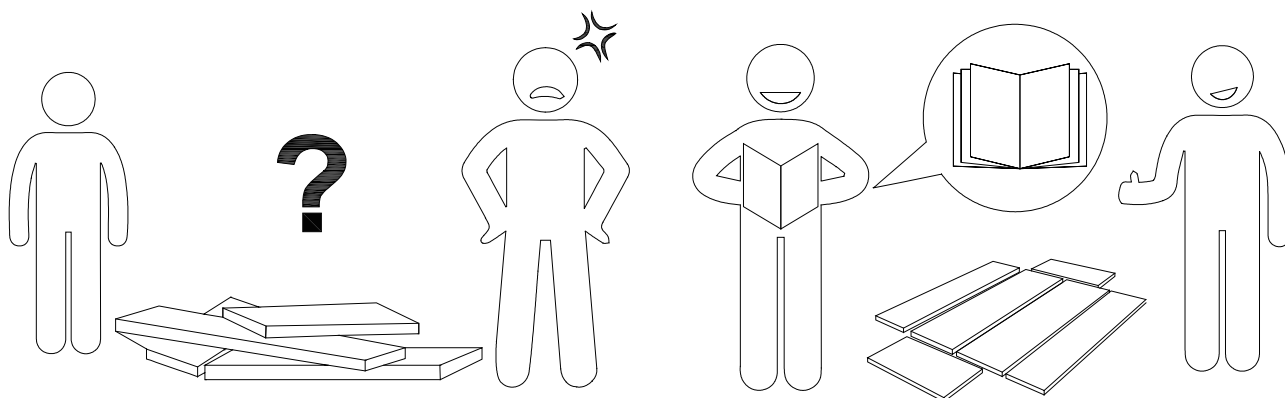

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

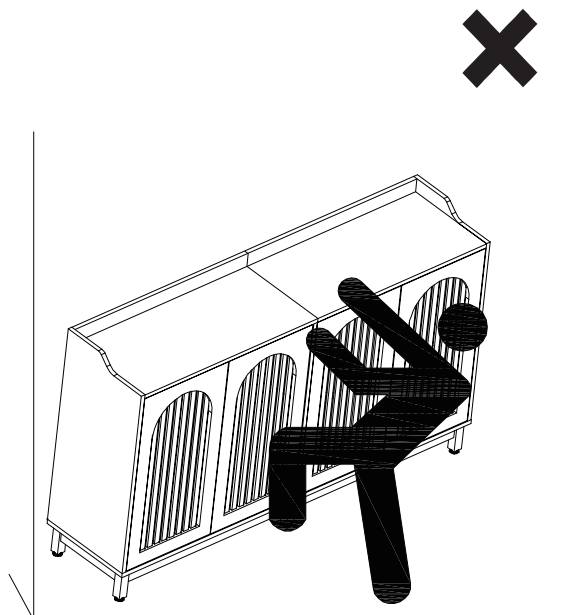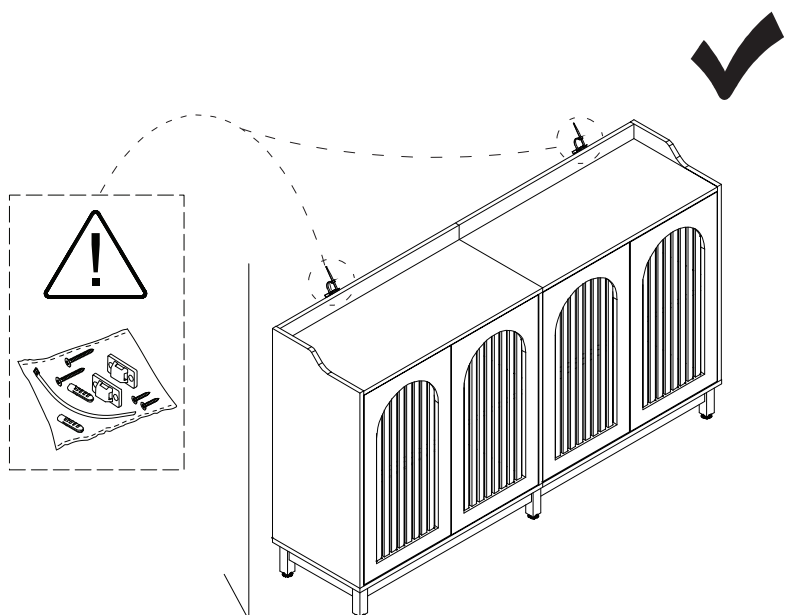

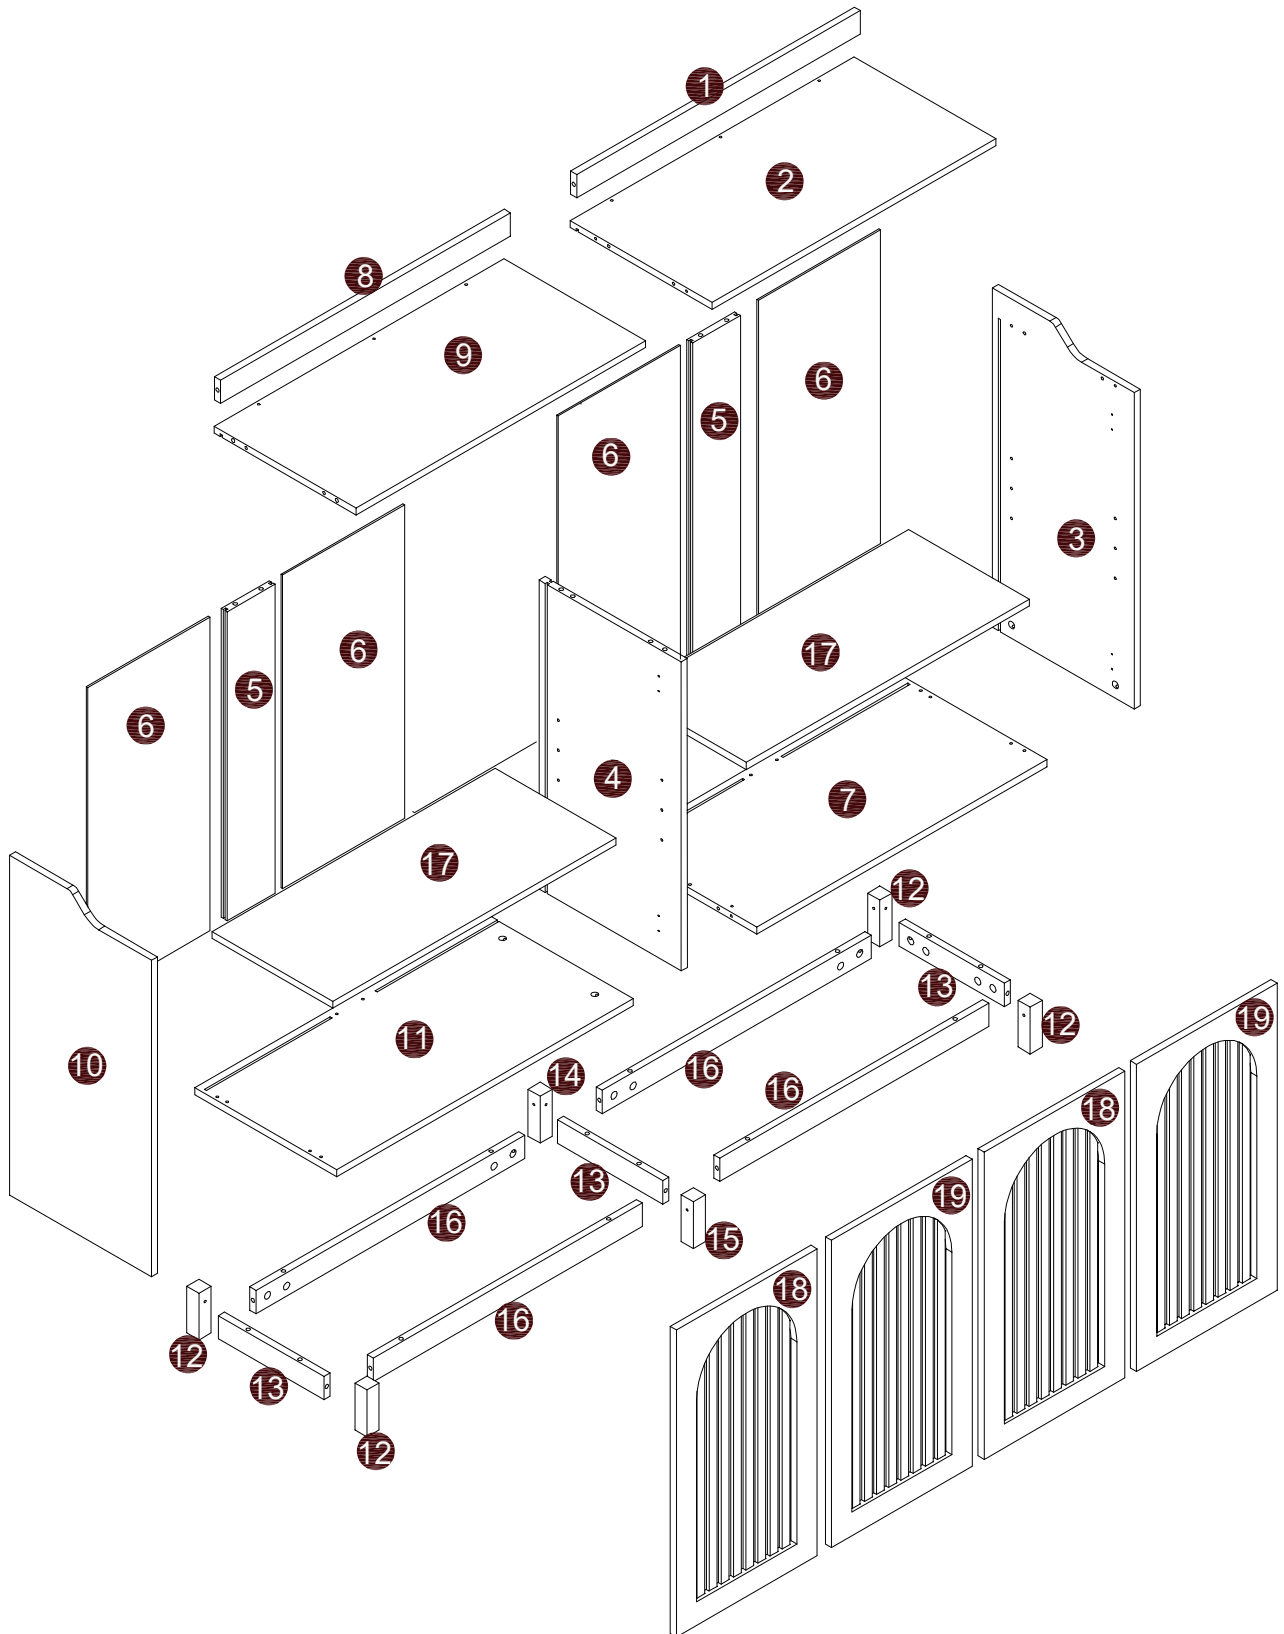

⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.












Parts List

1 1 pc	2 1 pc	3 1 pc	4 1 pc	5 2 pcs
6 4 pcs	7 1pc	8 1 pc	9 1 ps	10 1 pc
11 1pc	12 4 pcs	13 3pcs	14 1 pc	15 1pc
16 4 pcs	17 2 pcs	18 2pcs	19 2 pcs	



Hardware List

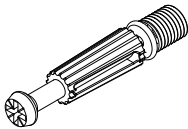

A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	Ø8x30mm		Ø3.5x14mm	
61 pcs	61 pcs	14 pcs	2 pcs	70 pcs	8 pcs

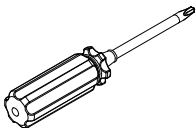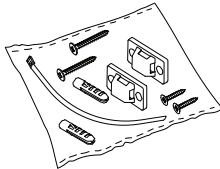G	H	I	J	K	L
					
Screwdriver					plastic screw insert
1 pc	8 pcs	16 pcs	6 pcs	2 pcs	5 pcs




Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

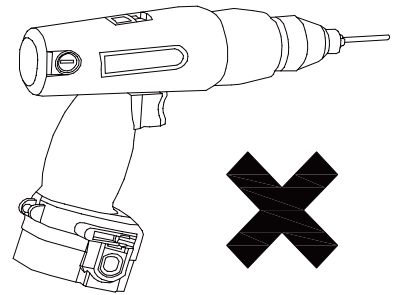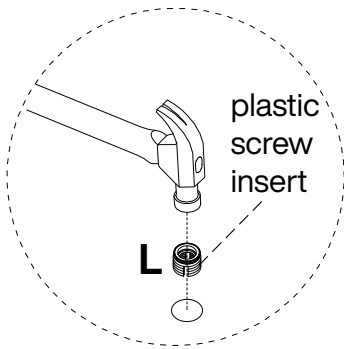

When installing screw #A and finding that there is no plastic screw insert in the mounting hole, gently tap #L into the hole to be installed.


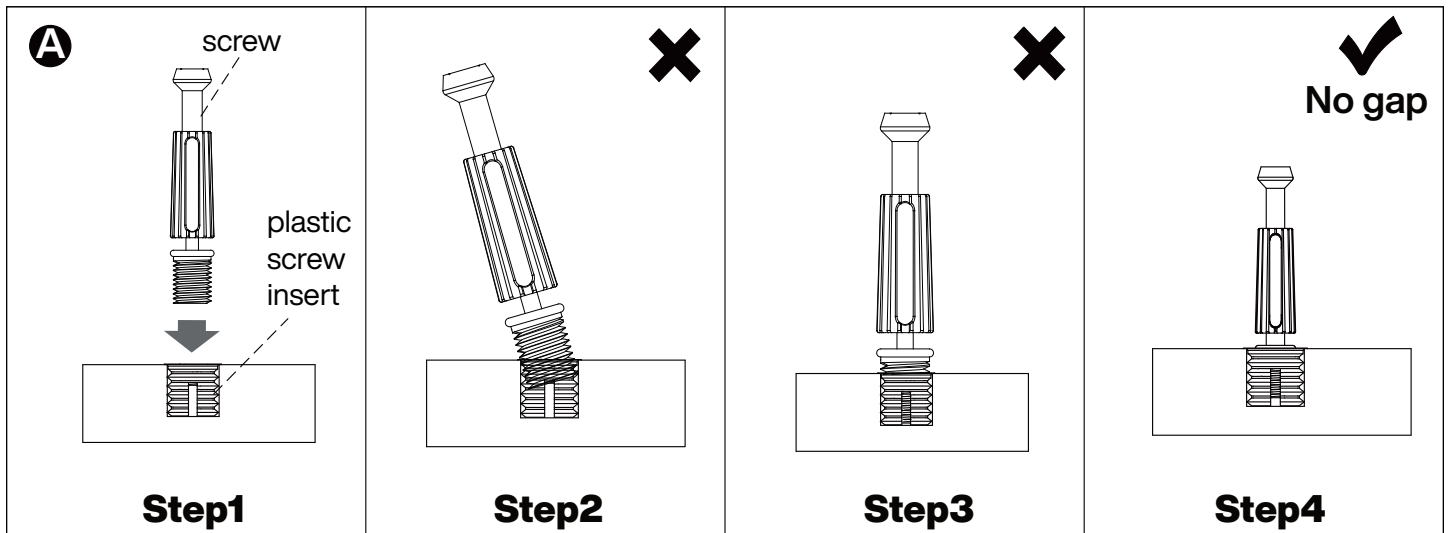



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

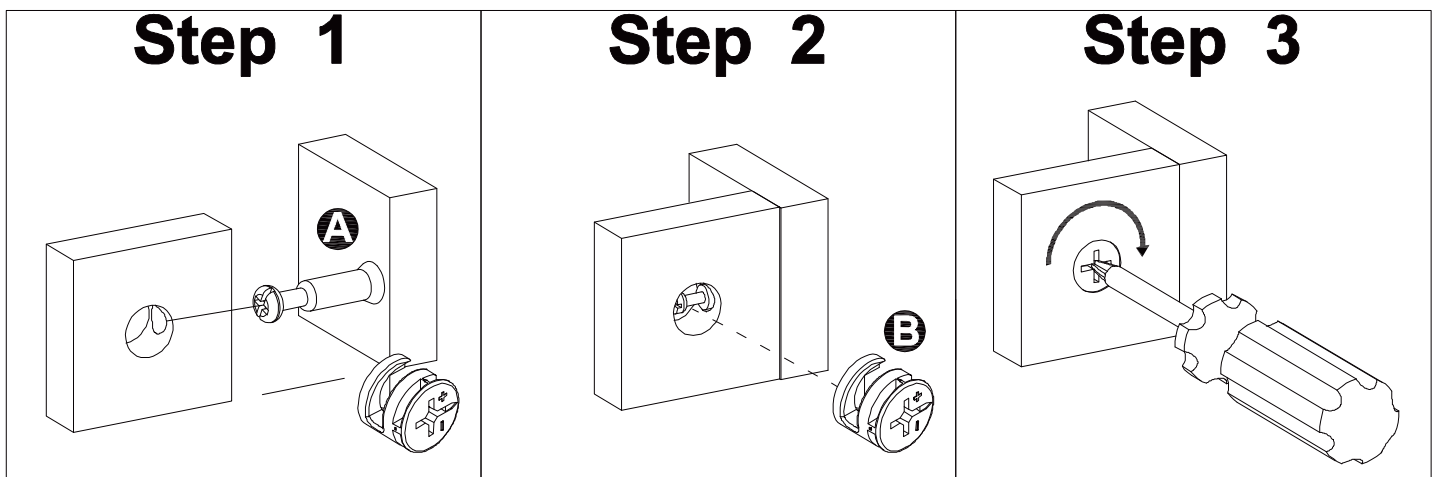





1

A	C
	
M6x35mm	Ø8x30mm
9 pcs	3 pcs

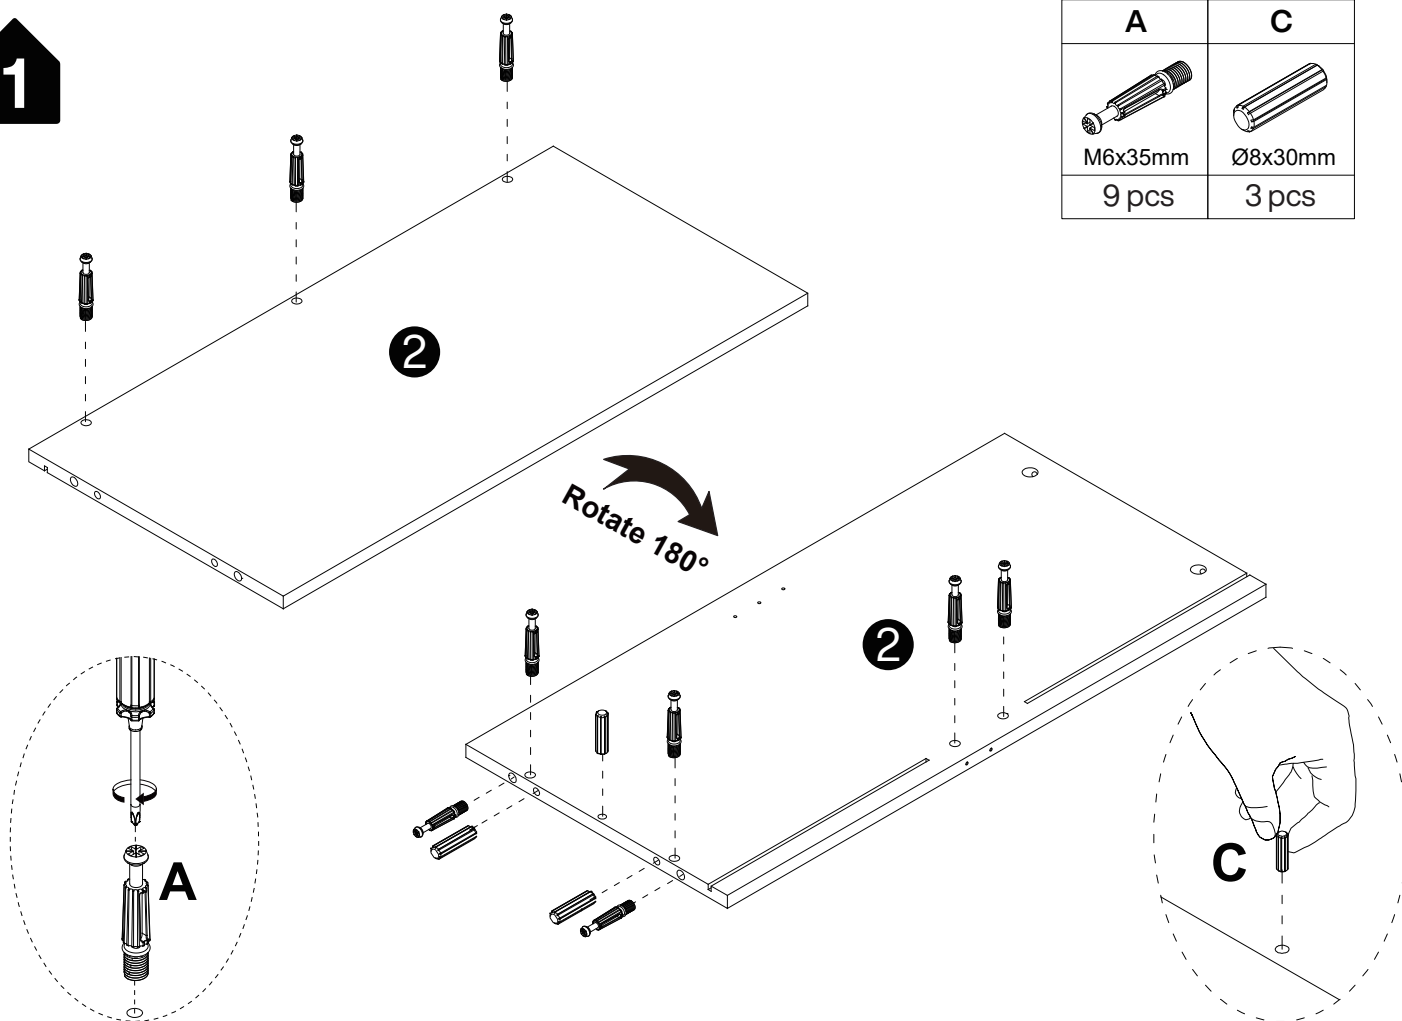


2

A

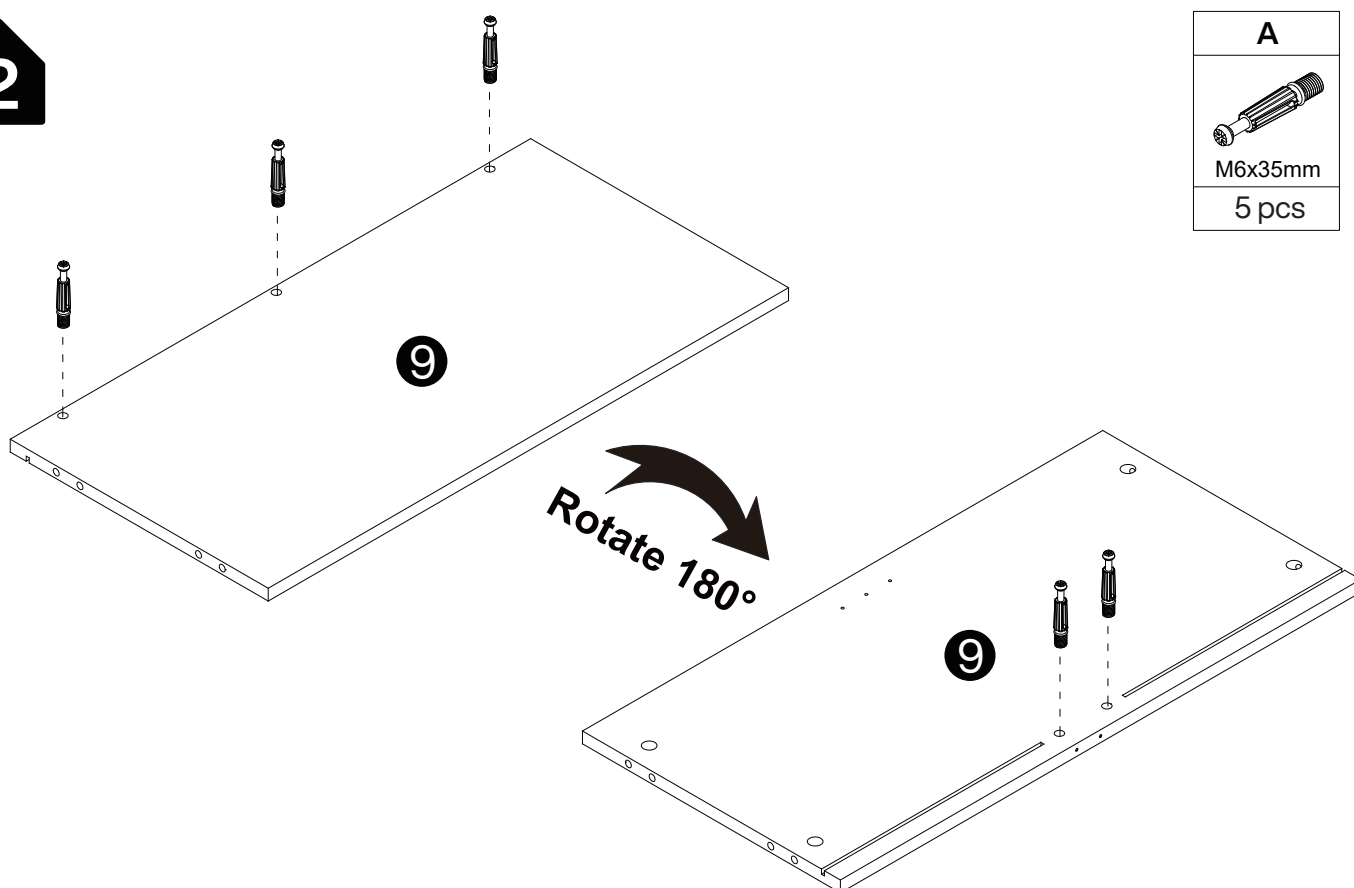M6x35mm
5 pcs




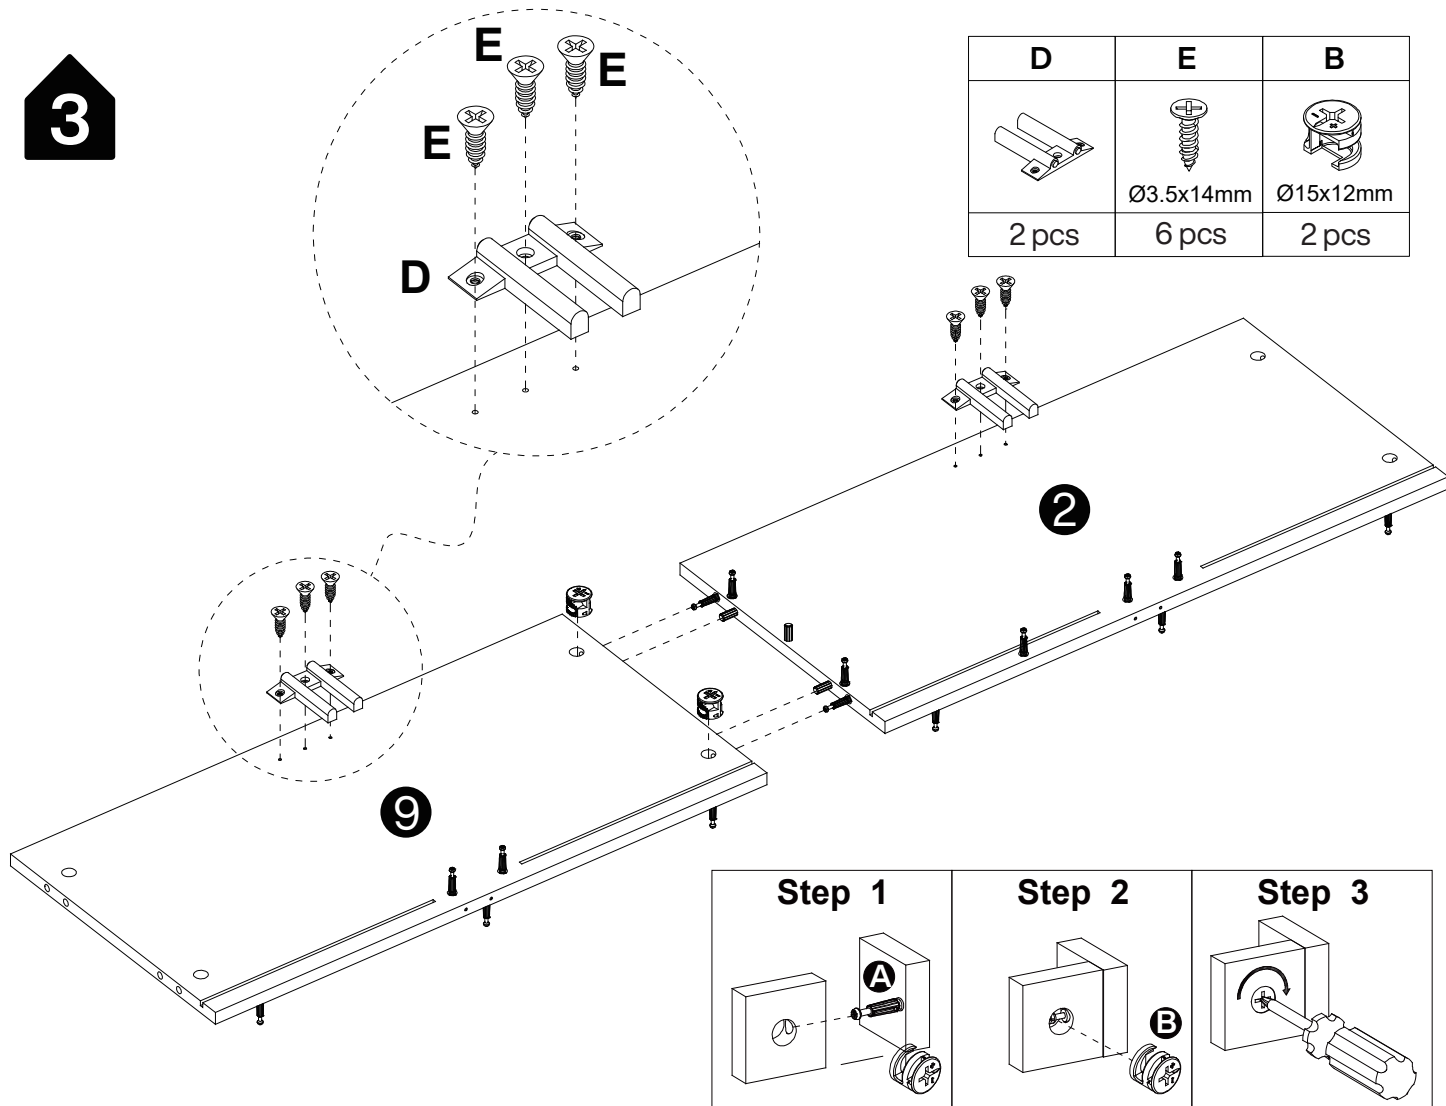

3




4

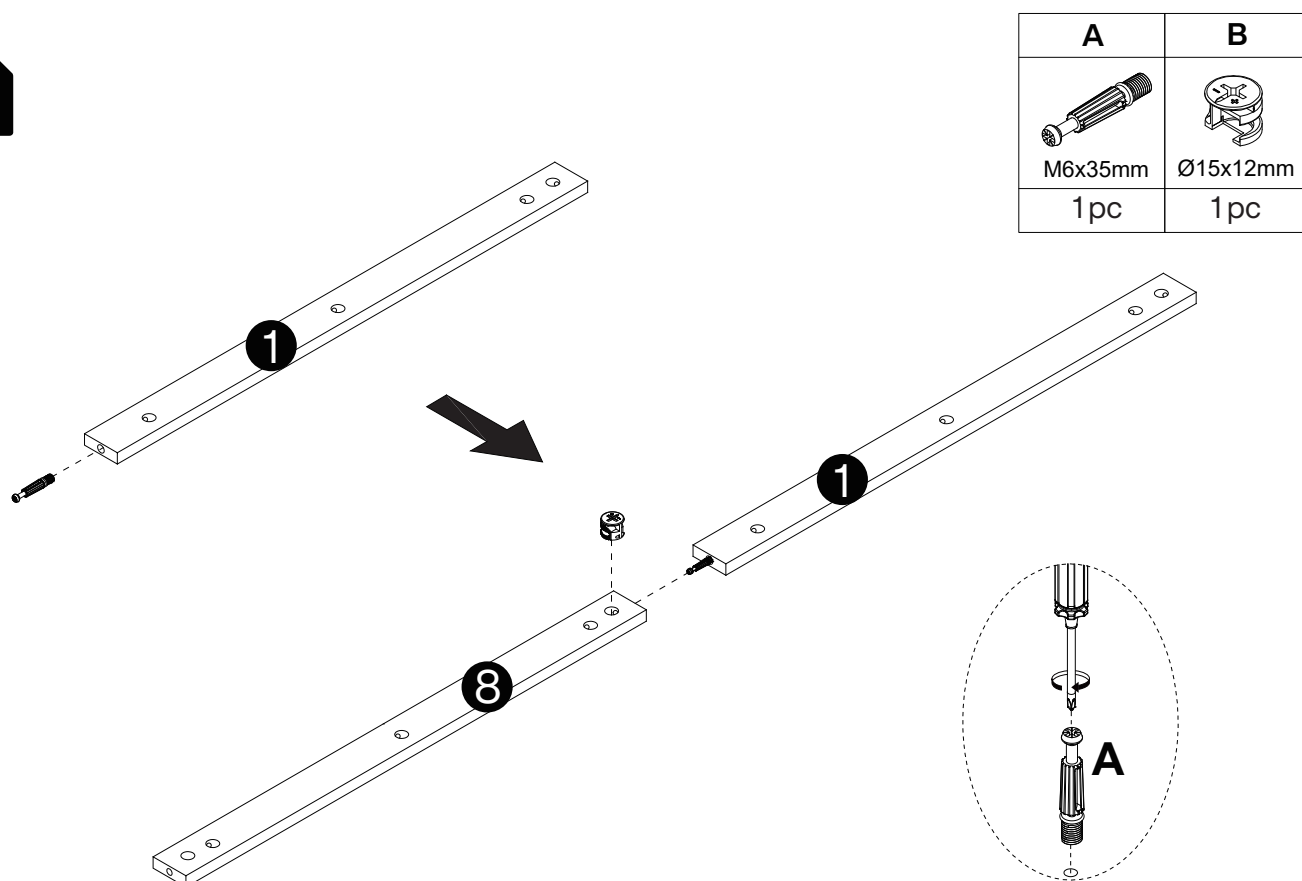




5

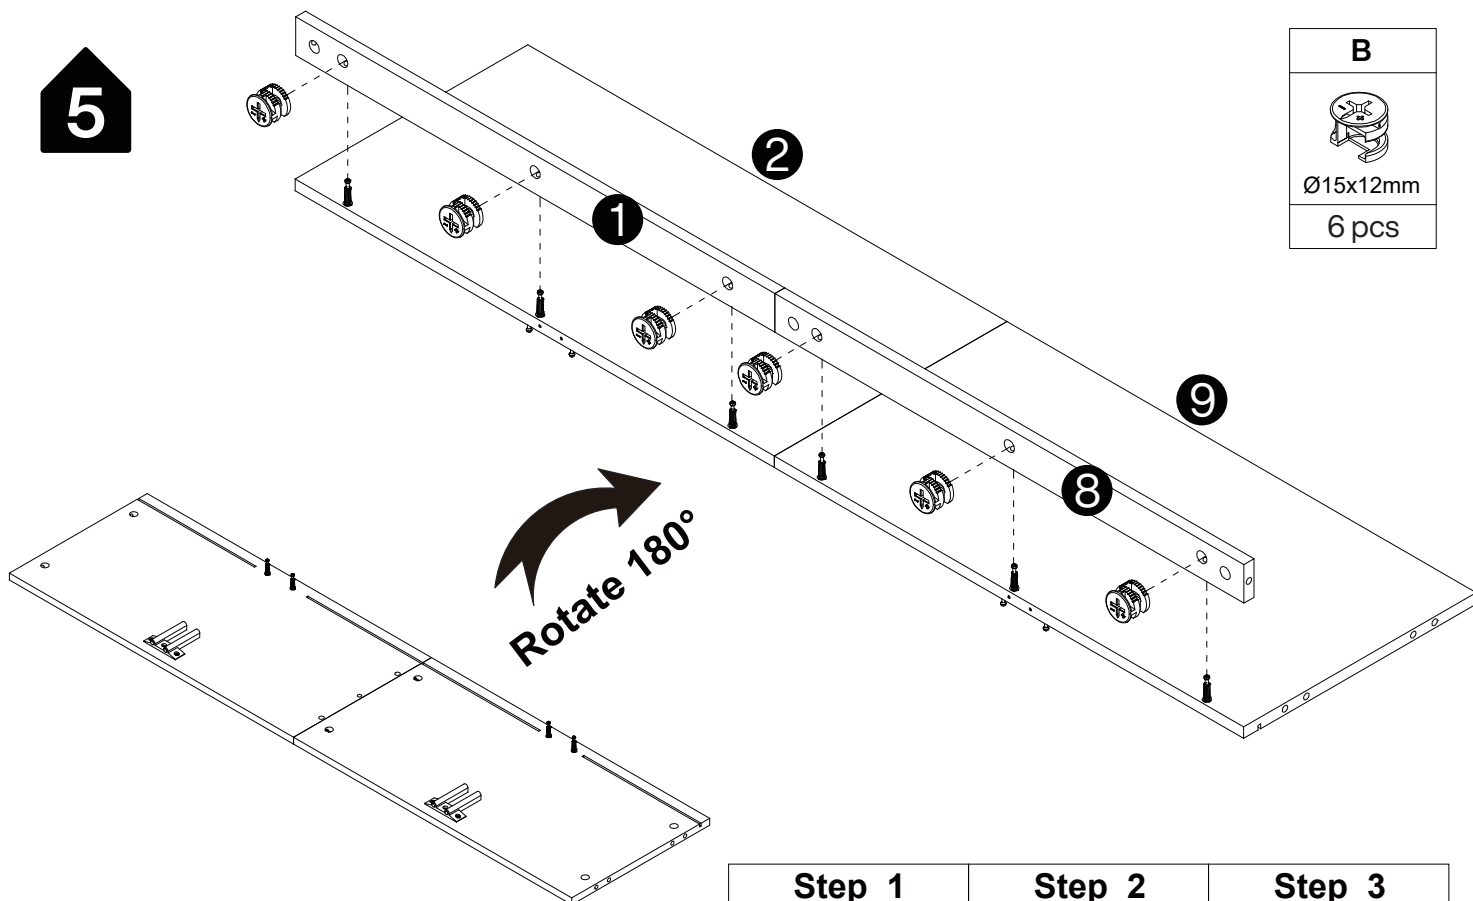


B

Ø15x12mm
6 pcs


Step 1

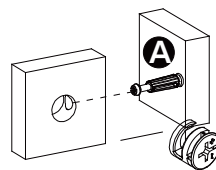


Step 2

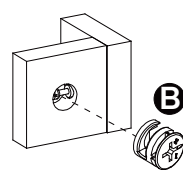

Step 3

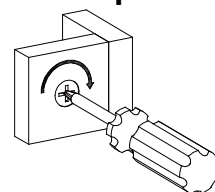

6

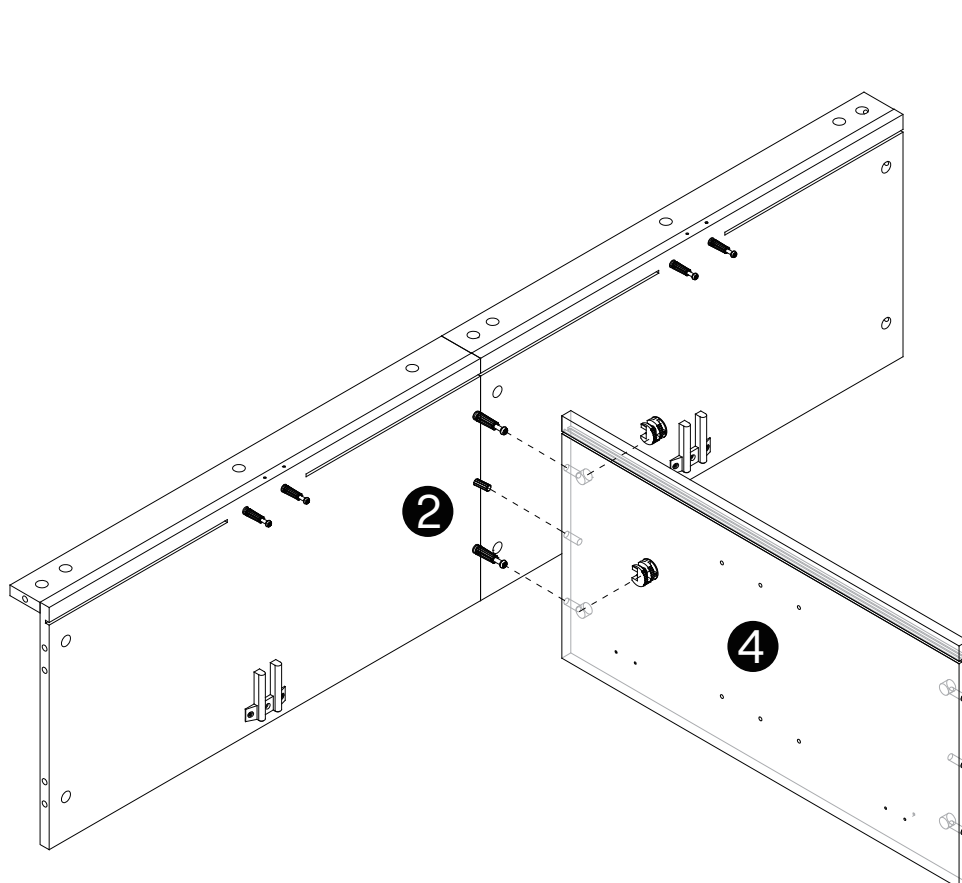


B


Ø15x12mm
2 pcs



7

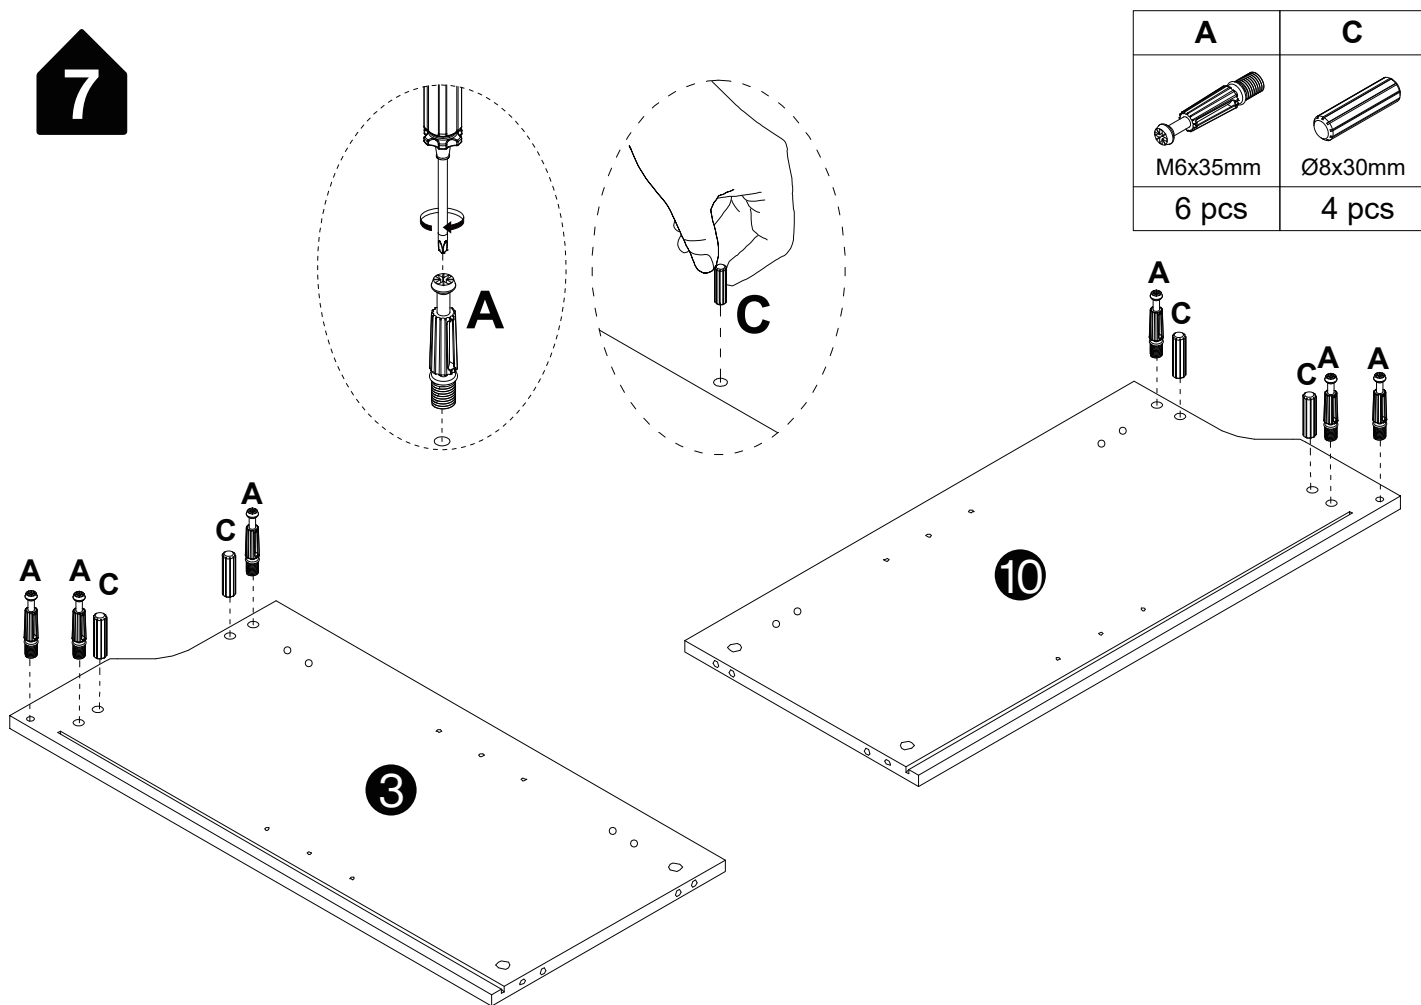



8

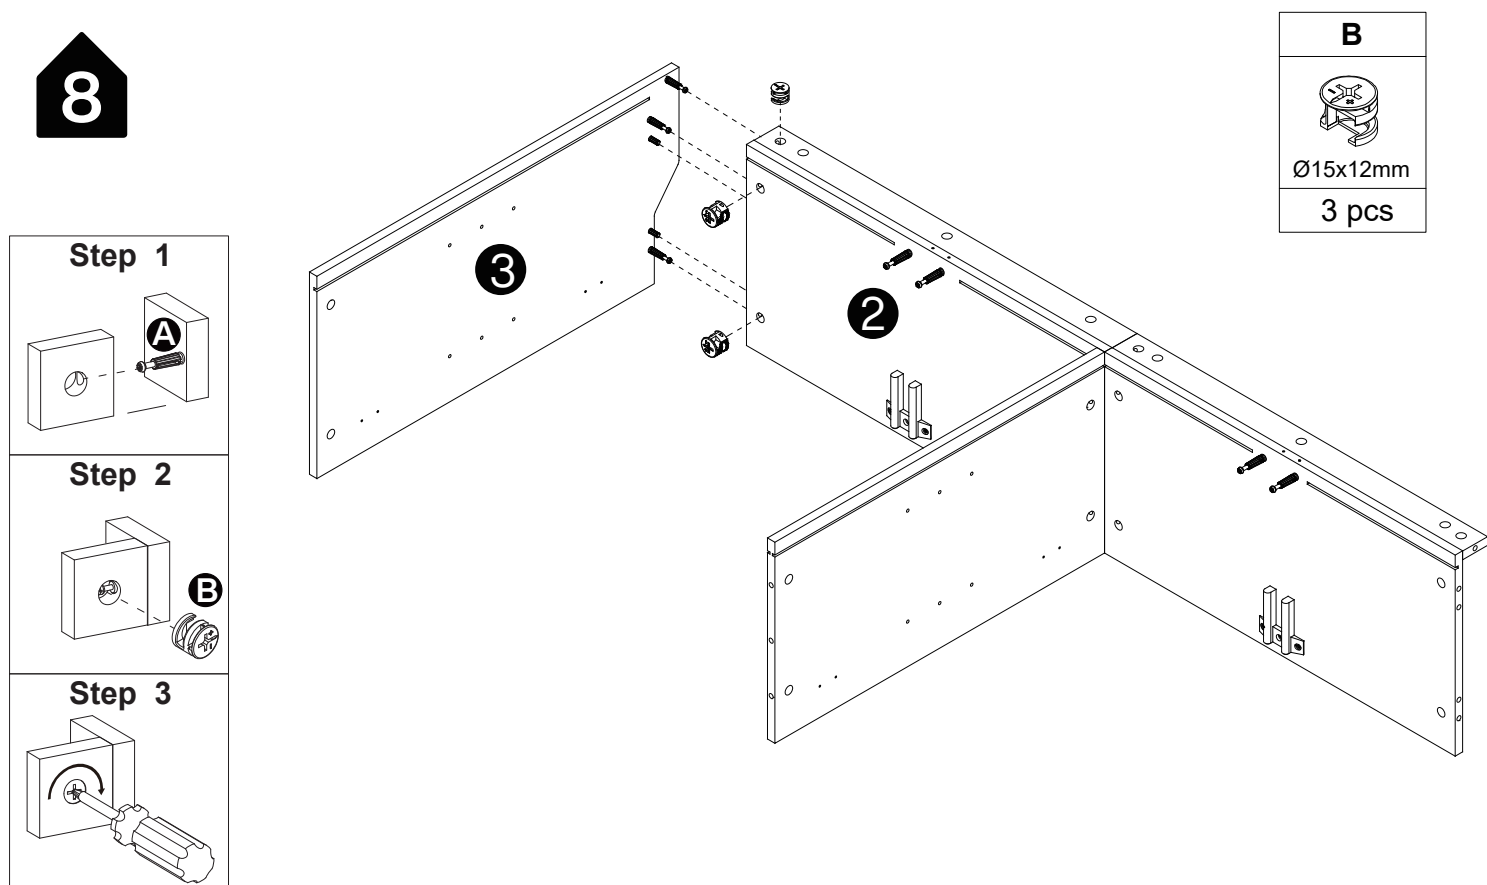

9


B

Ø15x12mm
3 pcs

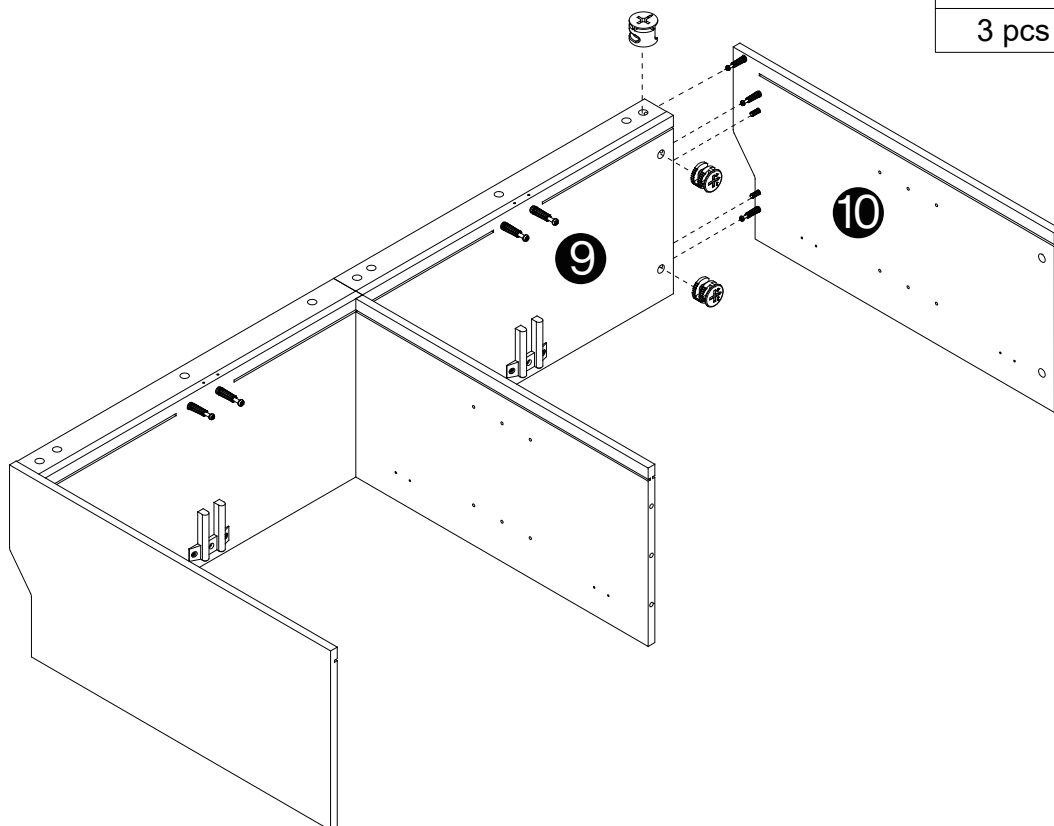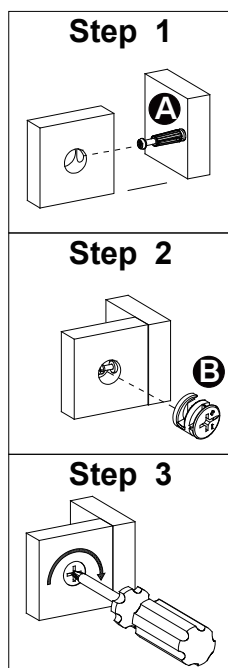
10


B

Ø15x12mm
4 pcs

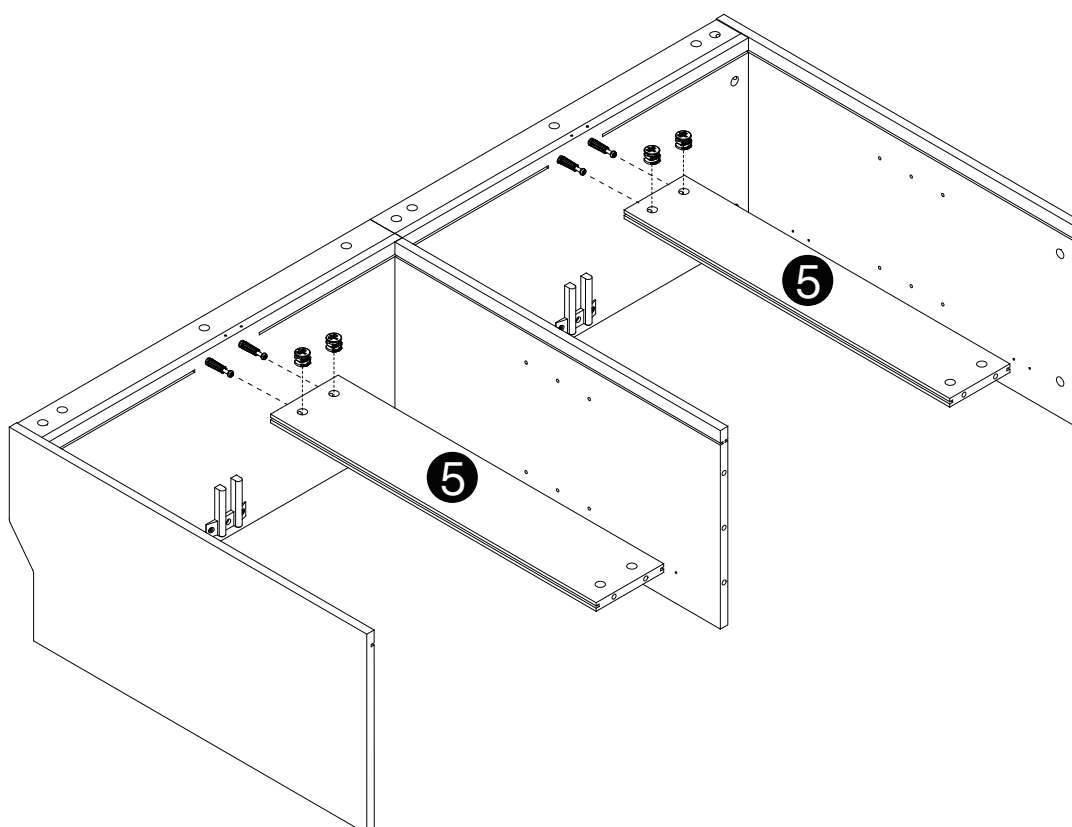






11

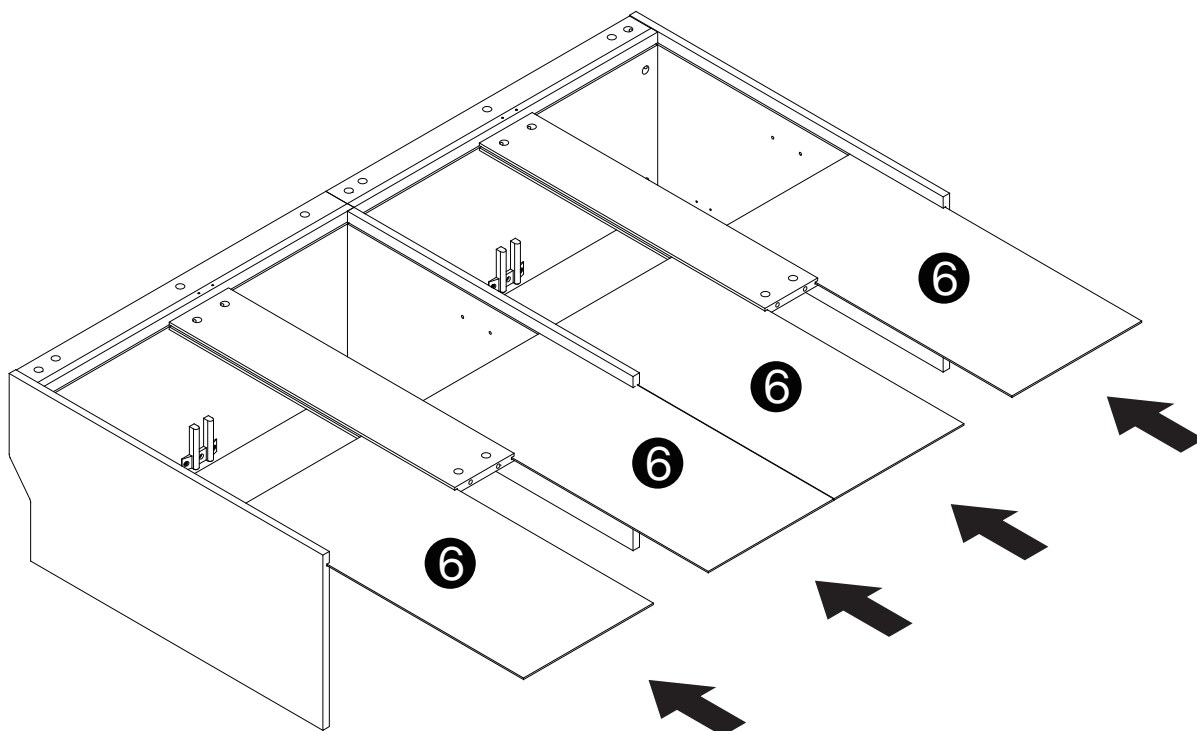

12

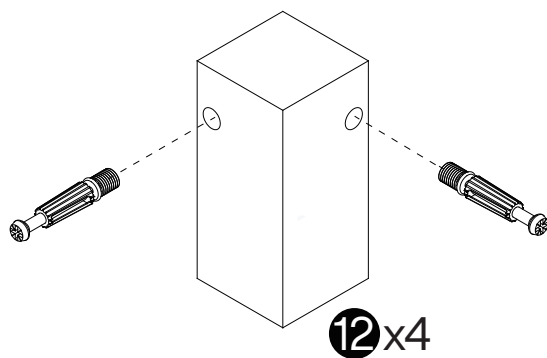


A

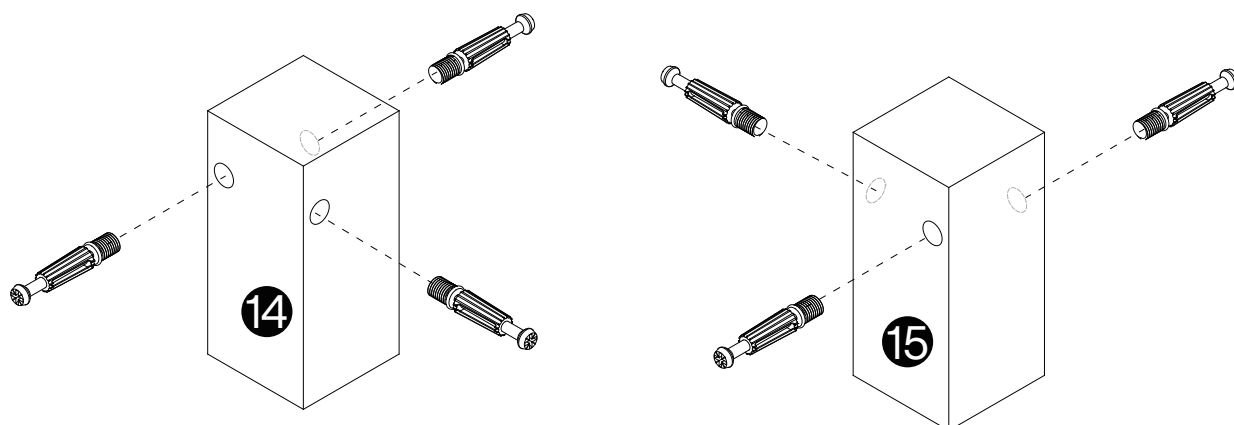M6x35mm
14 pcs



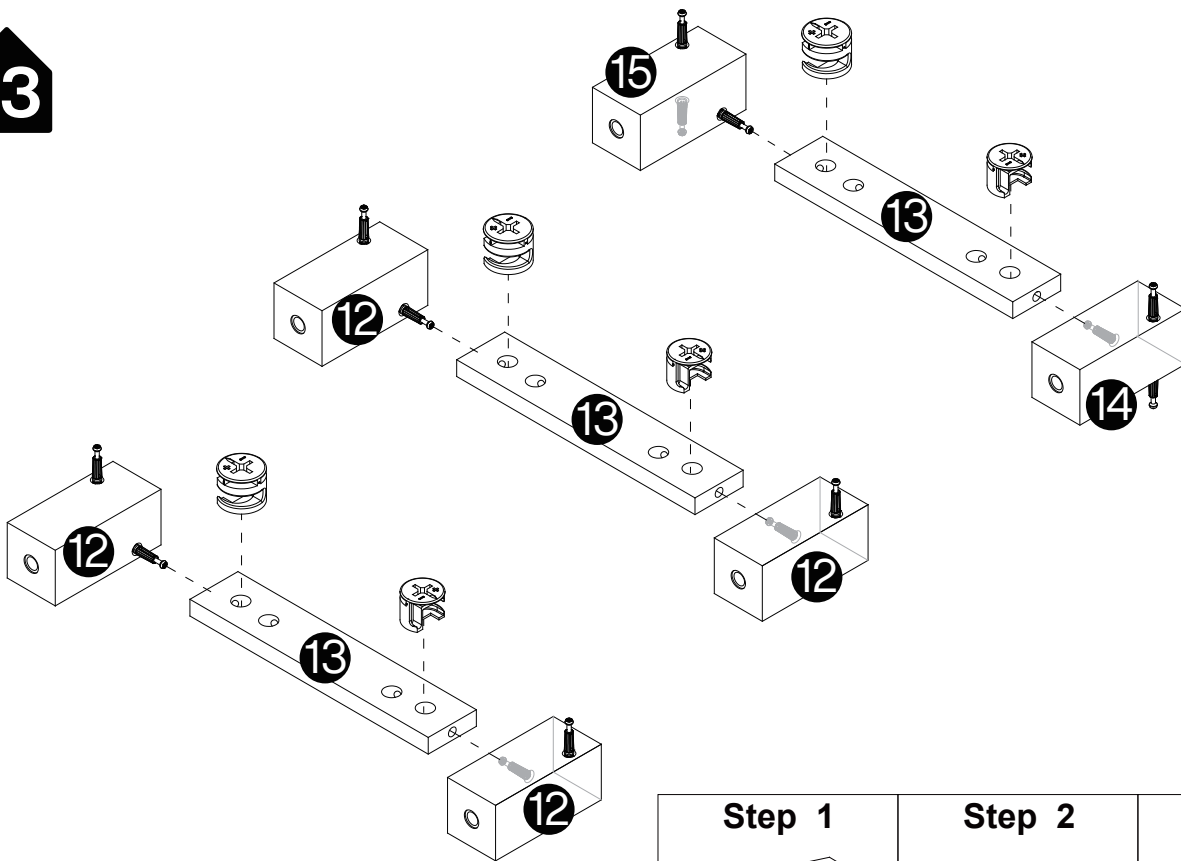


13




B

Ø15x12mm
6 pcs

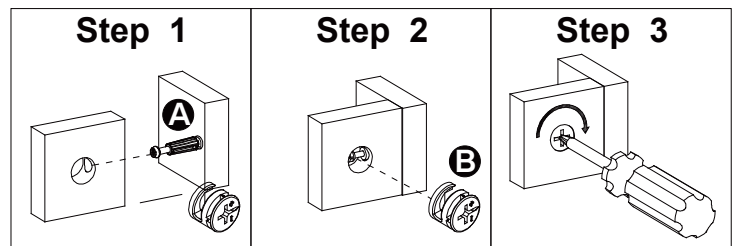


14

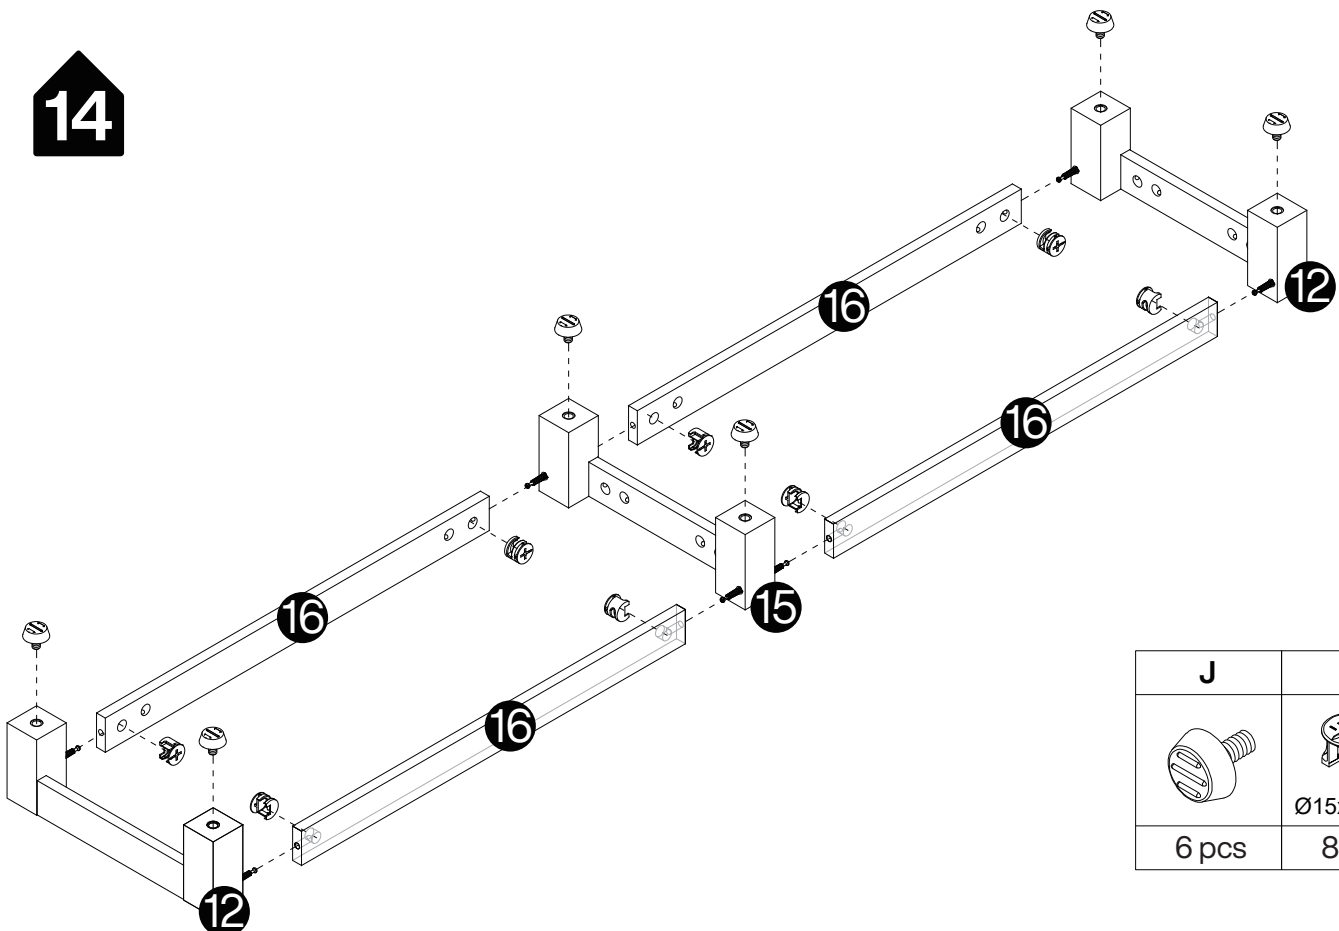


J	B
	
6 pcs	Ø15x12mm 8 pcs



15



A	C
	
M6x35mm	Ø8x30mm
16 pcs	2 pcs

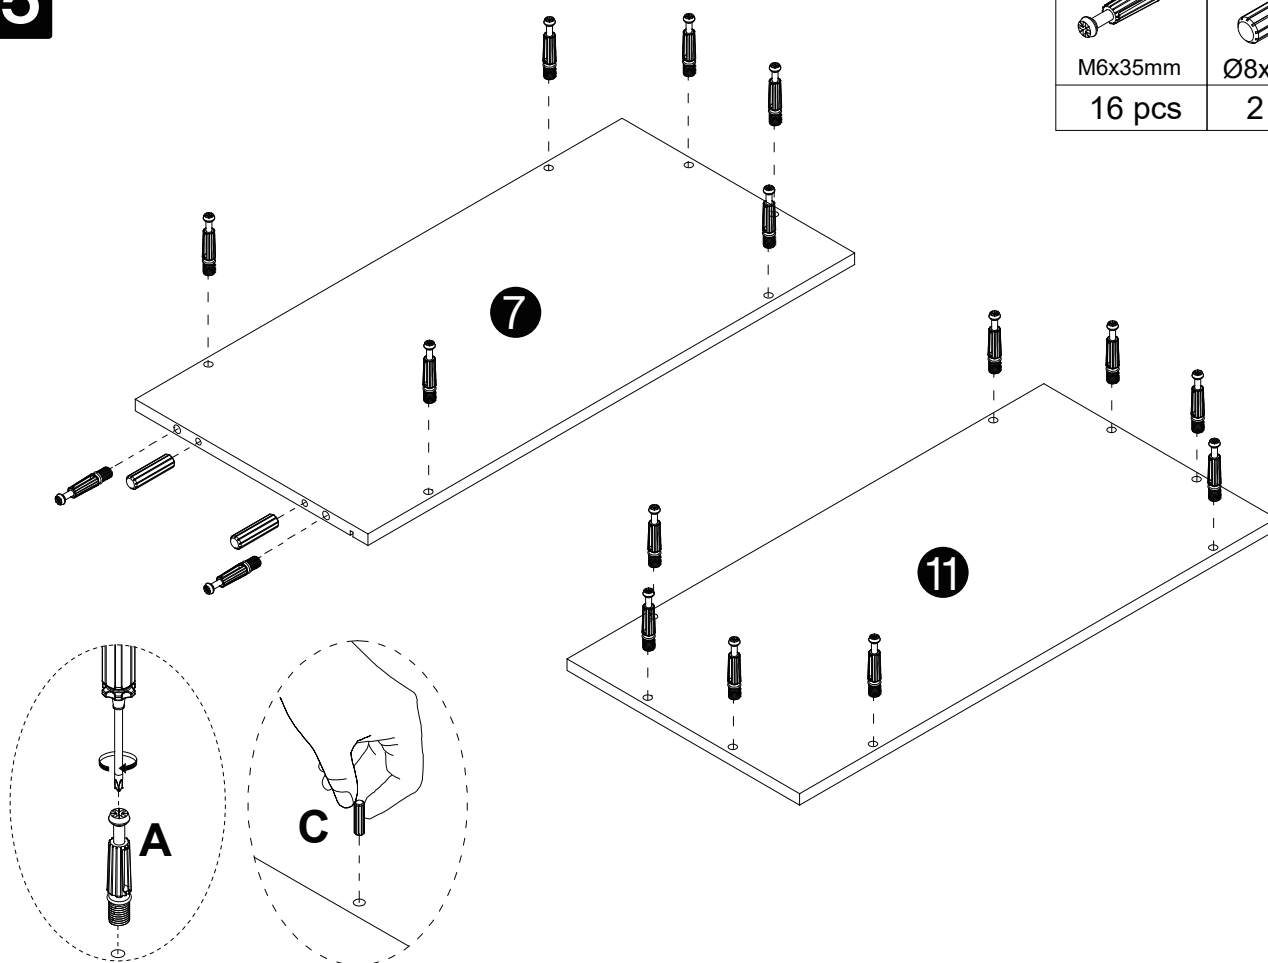

16


B

Ø15x12mm
2 pcs

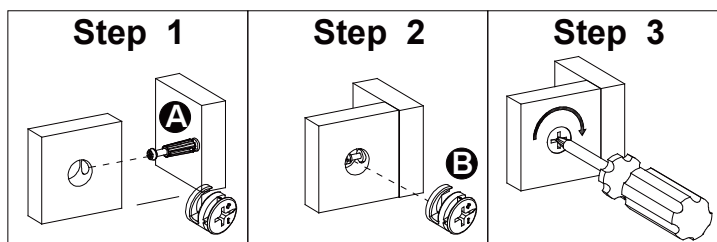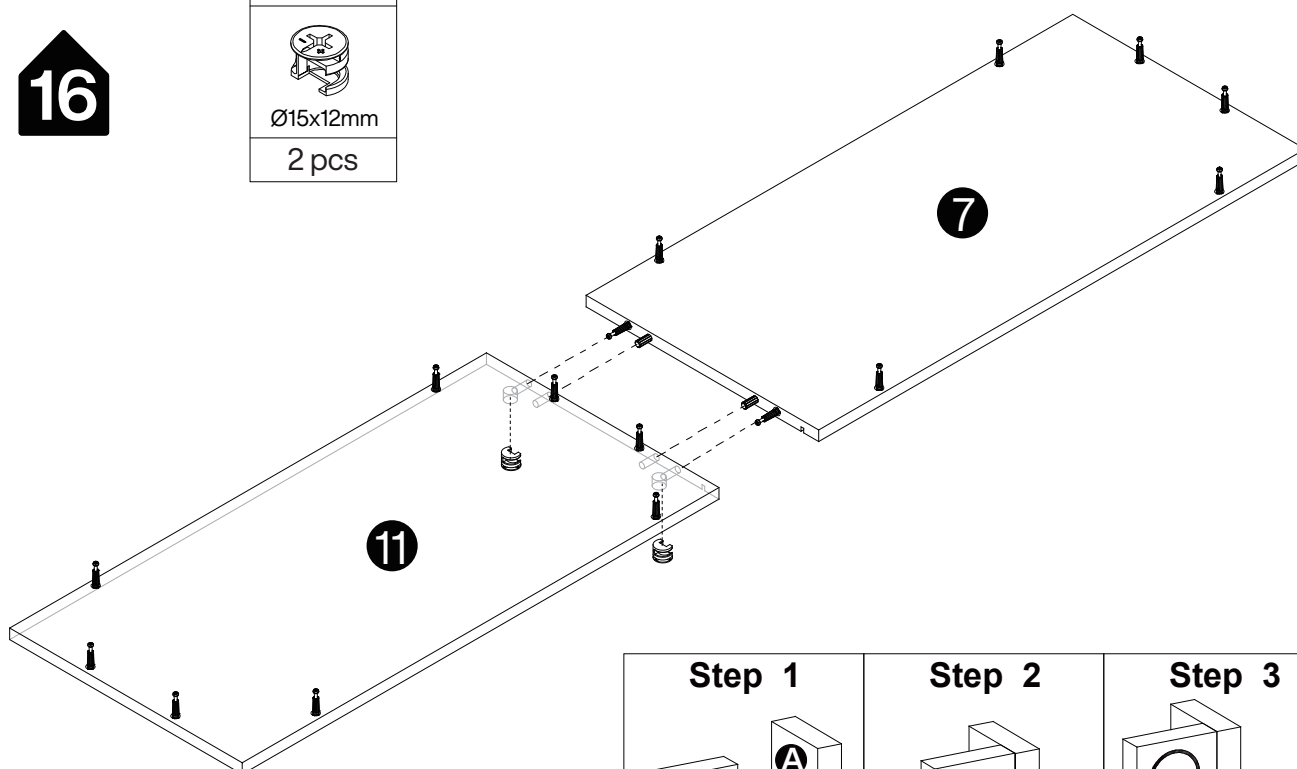






17

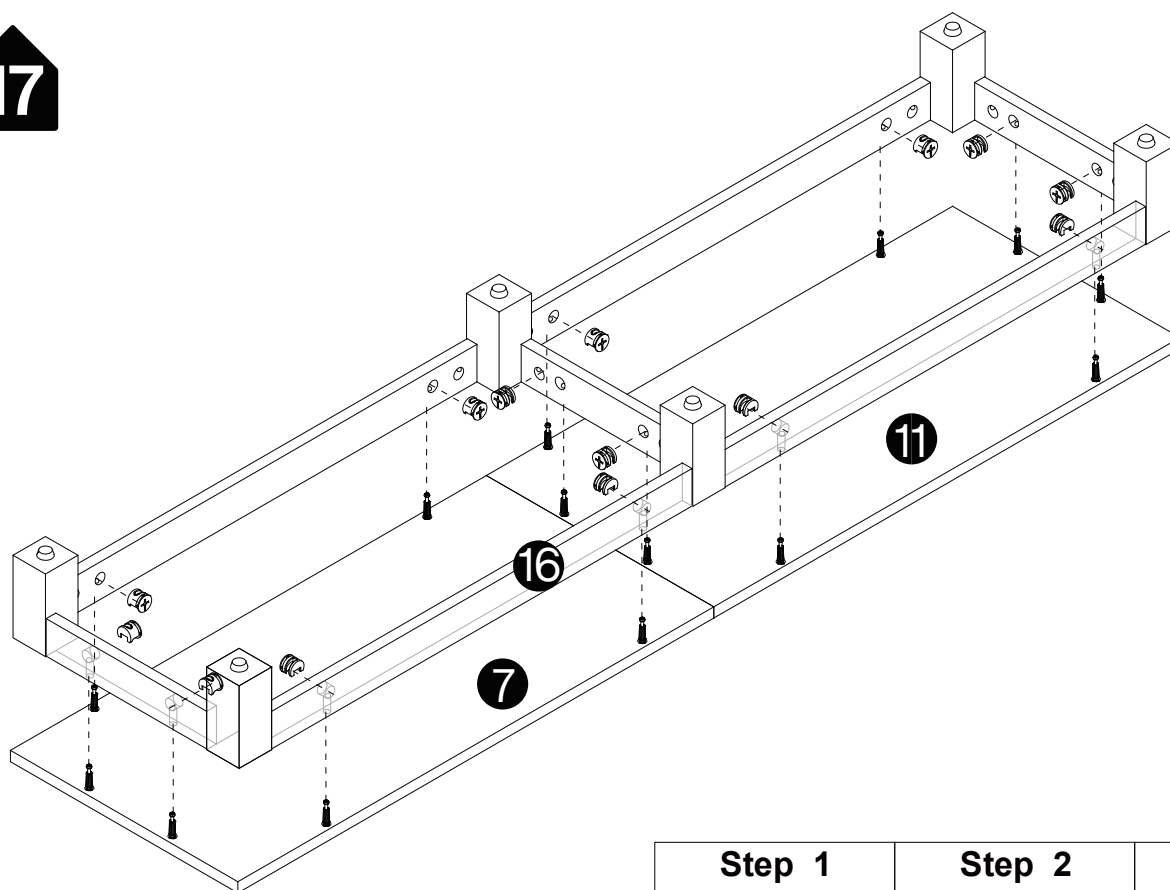
**B**

Ø15x12mm




14 pcs

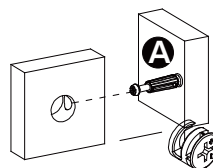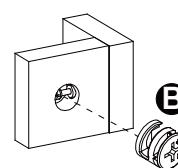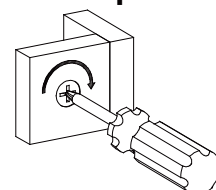Step 1**Step 2****Step 3**

18

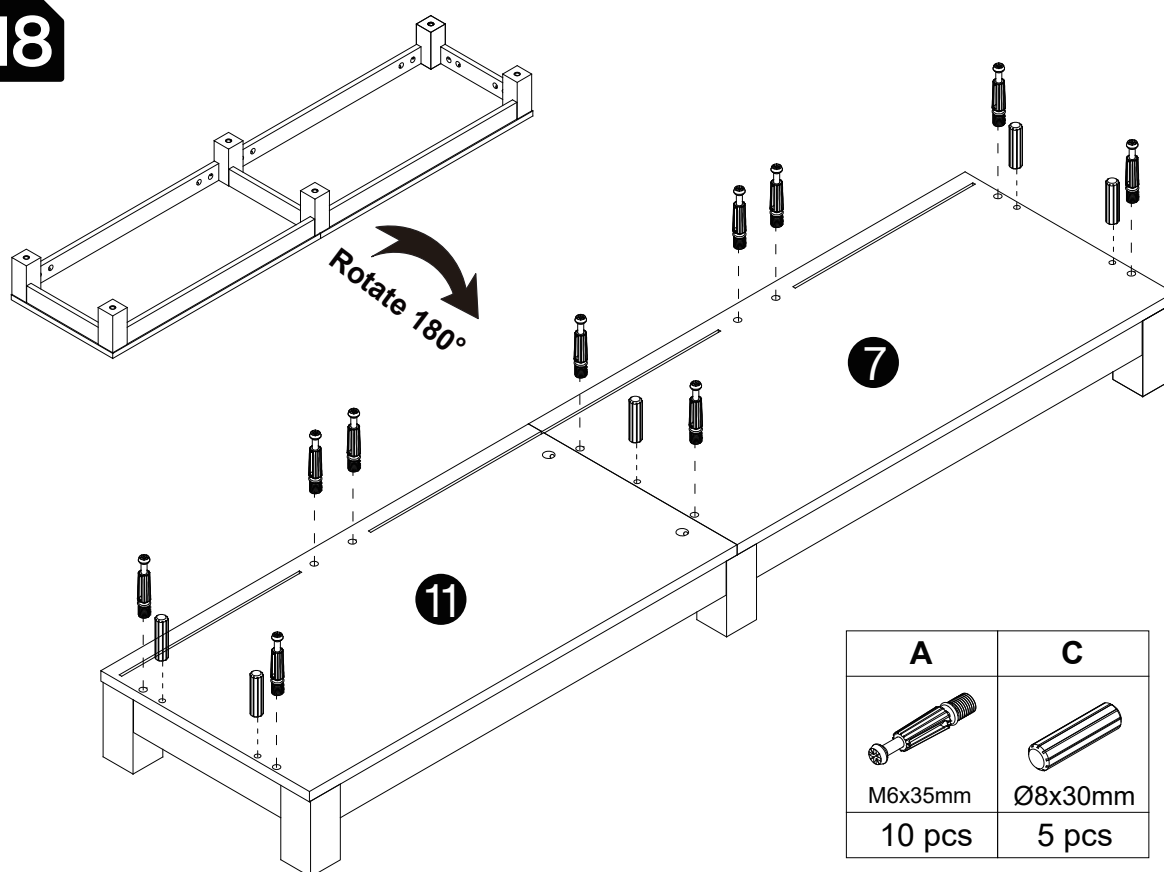


Rotate 180°

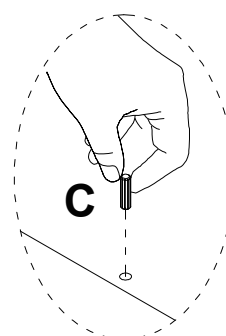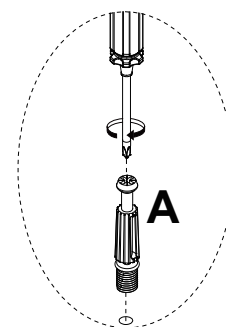**A**

M6x35mm

10 pcs


C

Ø8x30mm

5 pcs




19

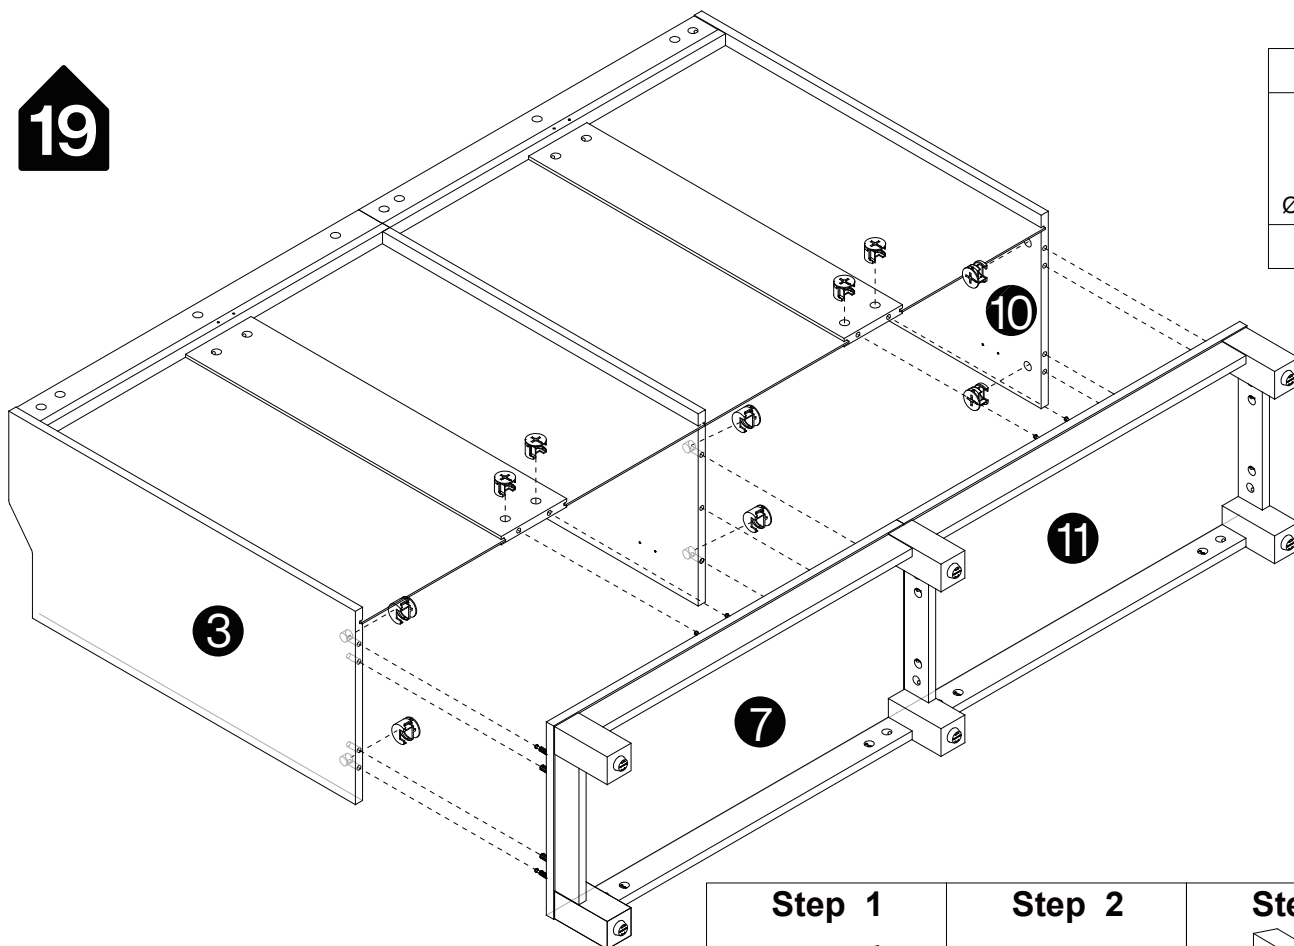



B


Ø15x12mm
10 pcs

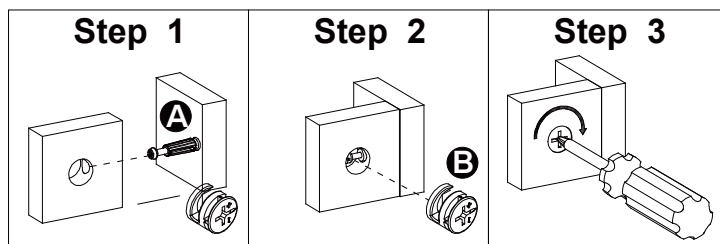

20

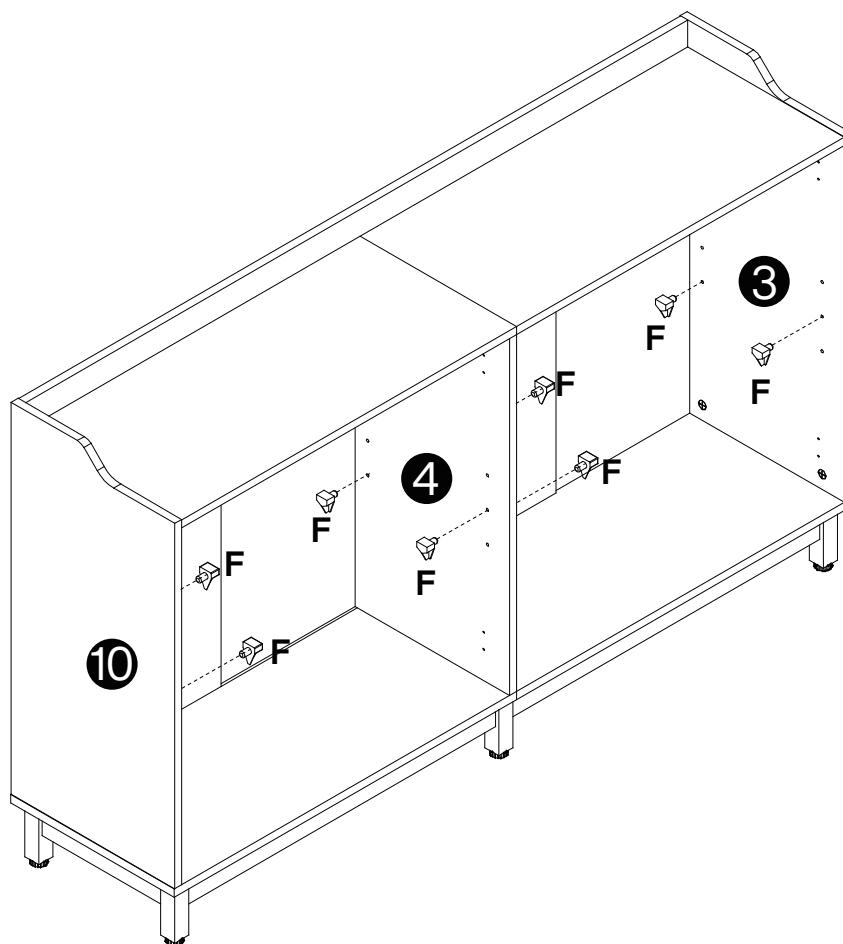


F

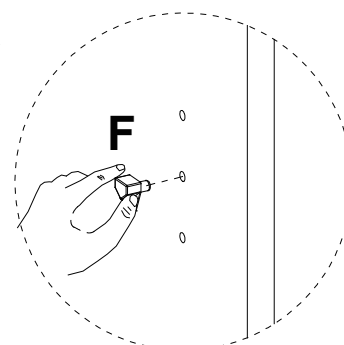8 pcs




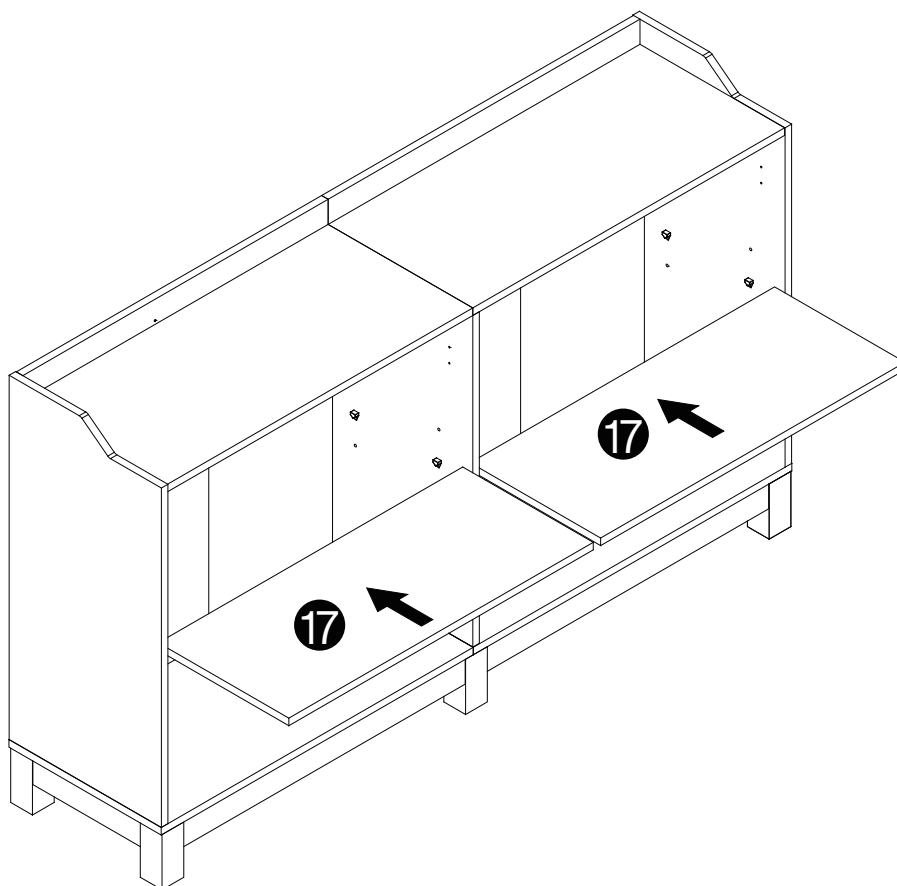


21



22

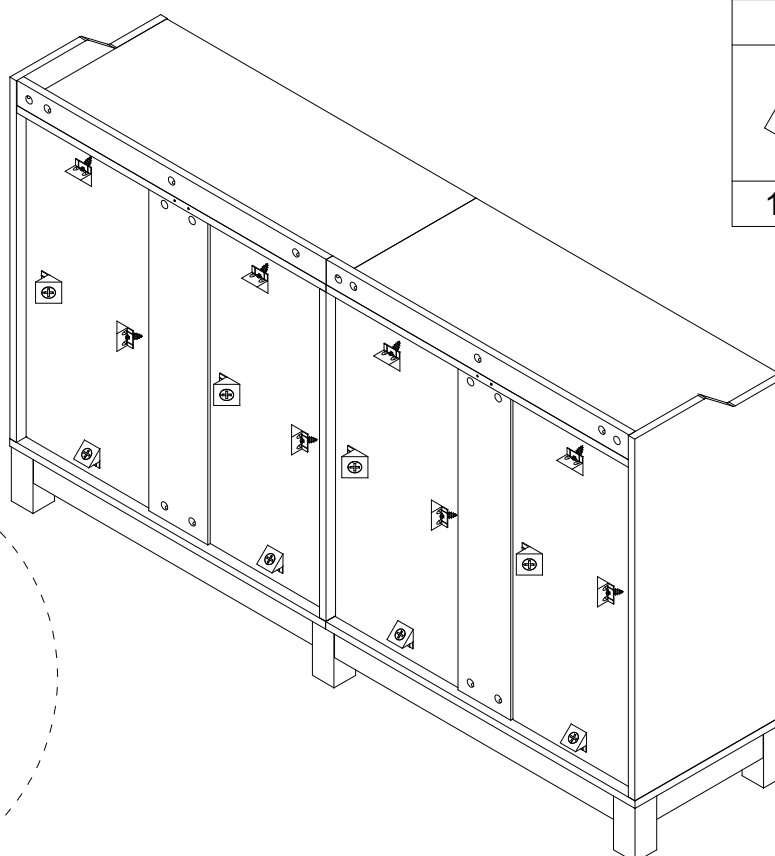



I	E
16 pcs	16 pcs

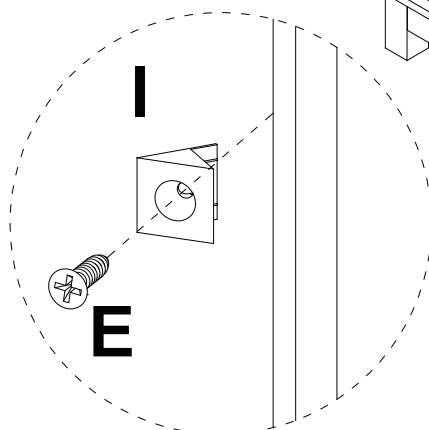




23

H	E
	 Ø3.5x14mm
8 pcs	16 pcs

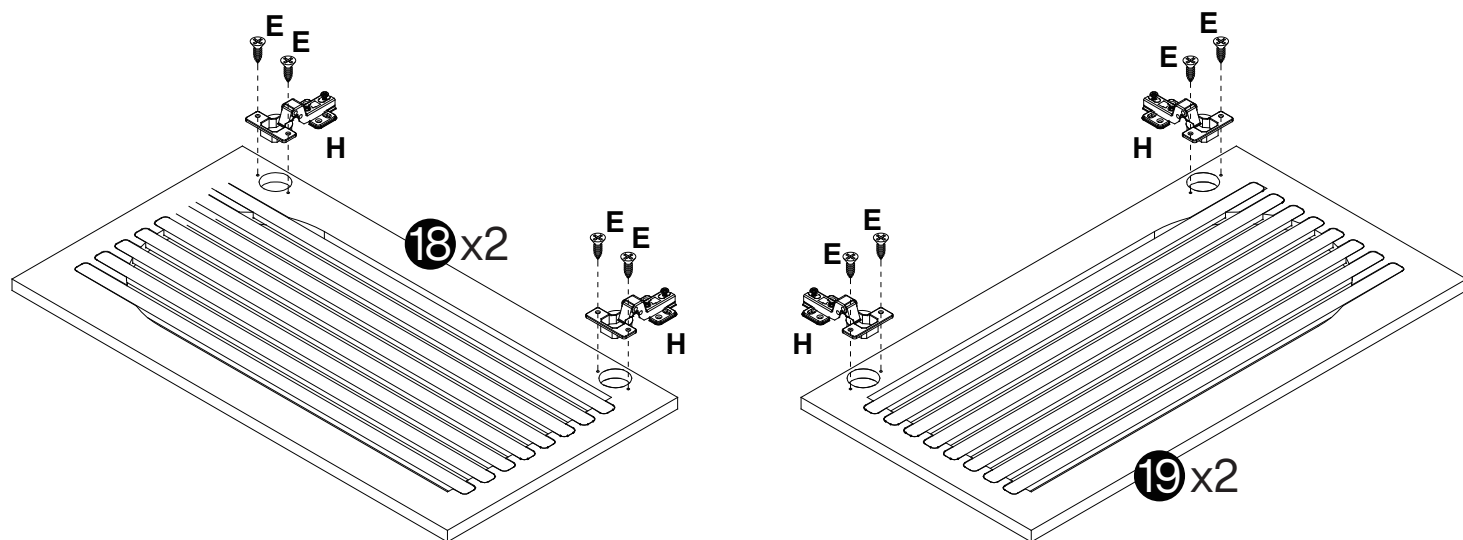

24

E
 Ø3.5x14mm
32 pcs

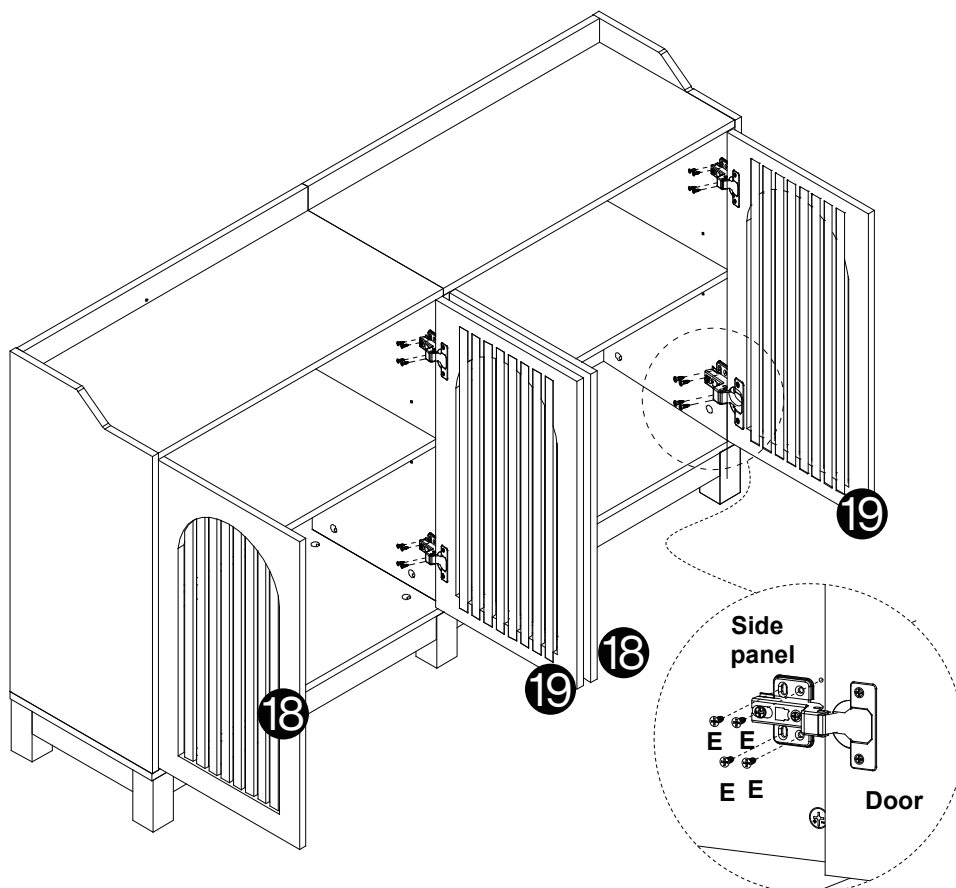


To prevent the door hinge from falling off,
please install 4 screws



Step 1


Open the door.

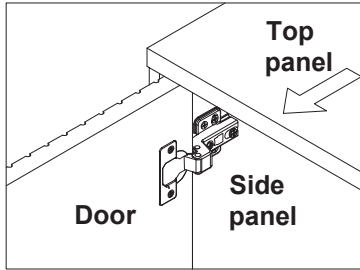

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

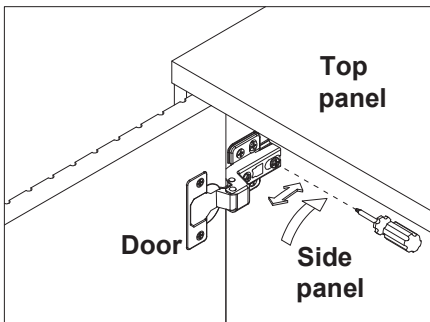



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

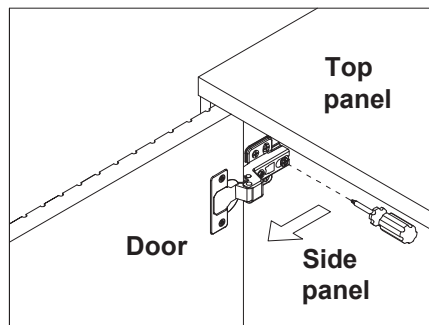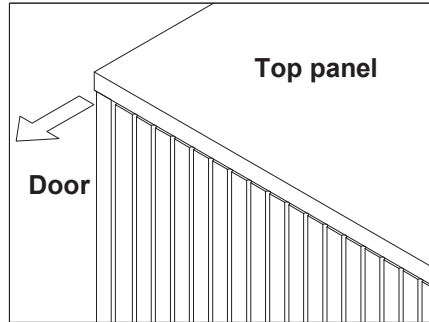

Pull the hinge forward a little.


Step 2b MOVE DOOR IN

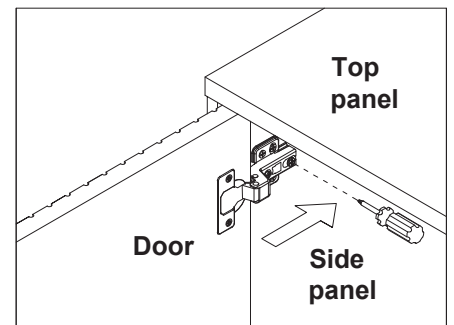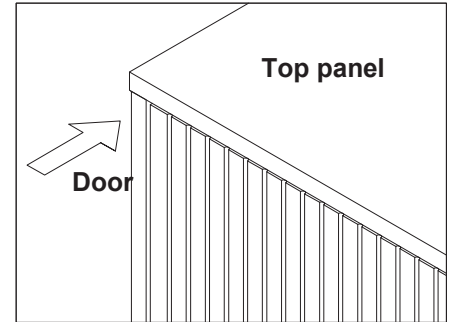

Push the hinge back a little.



Step 3

Adjust the gap between the door panel and the side panel.

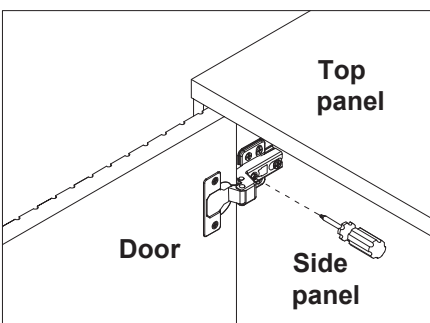



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

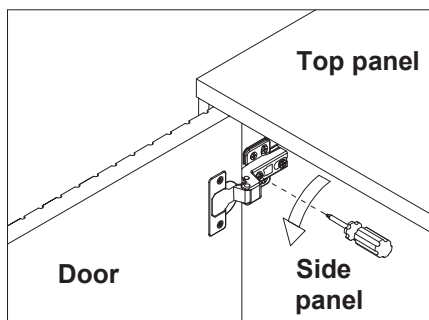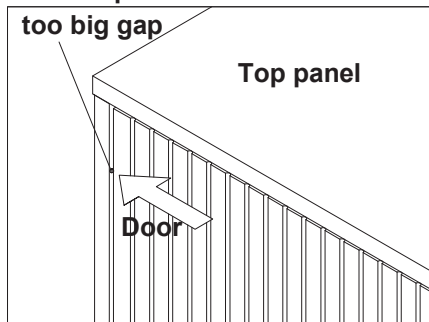

Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT

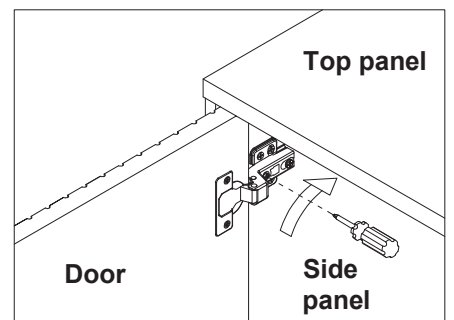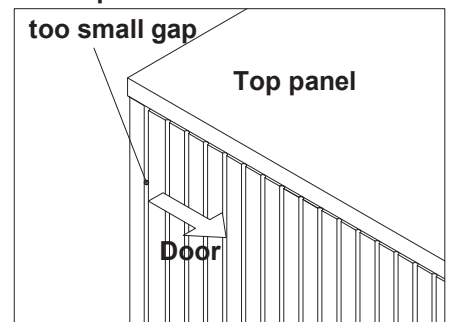


Turn the screw counterclockwise a little as shown to make the gap bigger



25


K




2 pcs

Wall



Step1



Step2

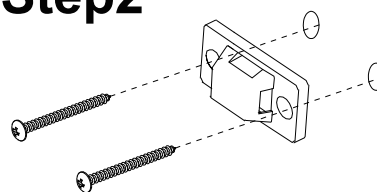


Step3

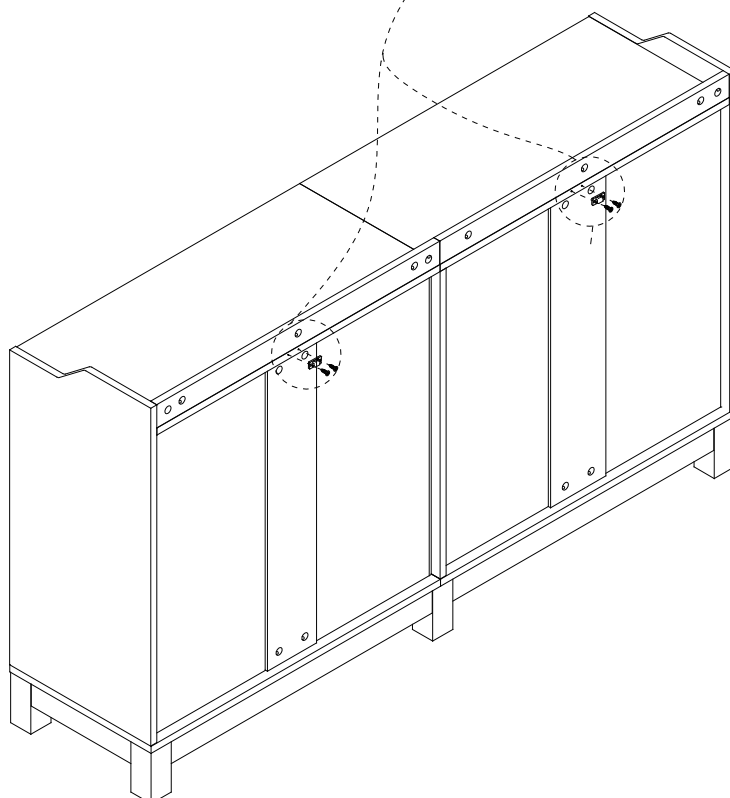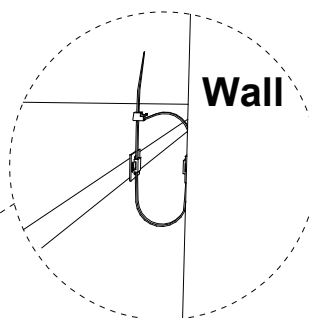



DESIGNED FOR LIFE

Thank you for your support!

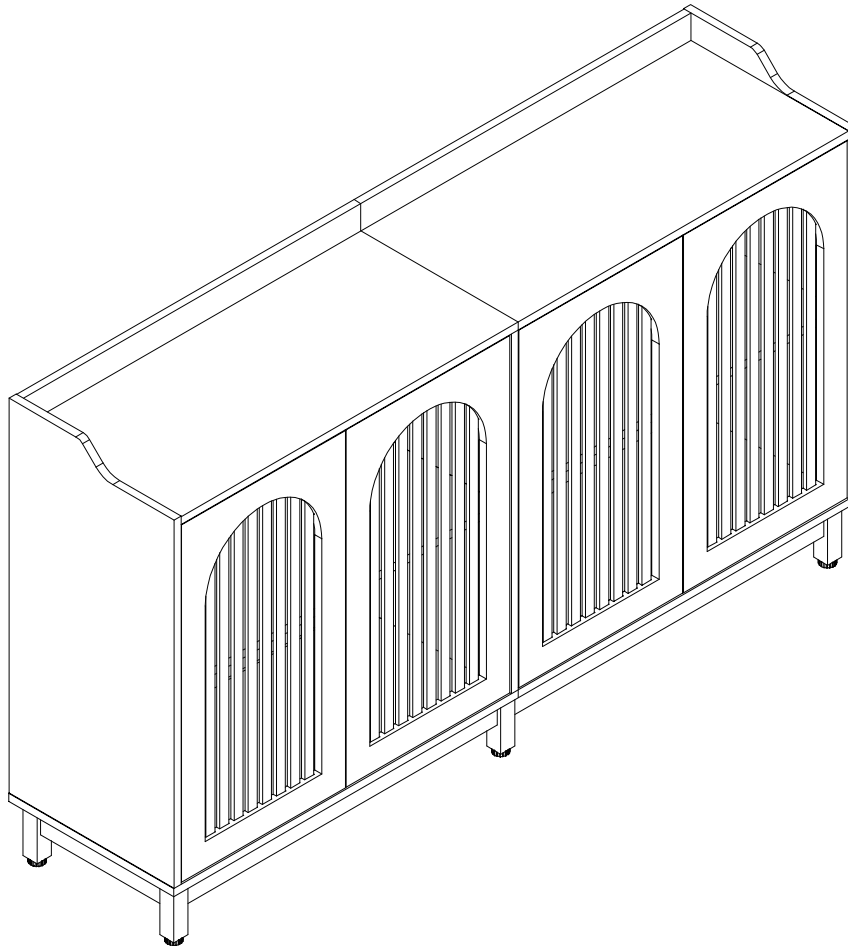

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp