

10 x 12FT

WQOT000MS

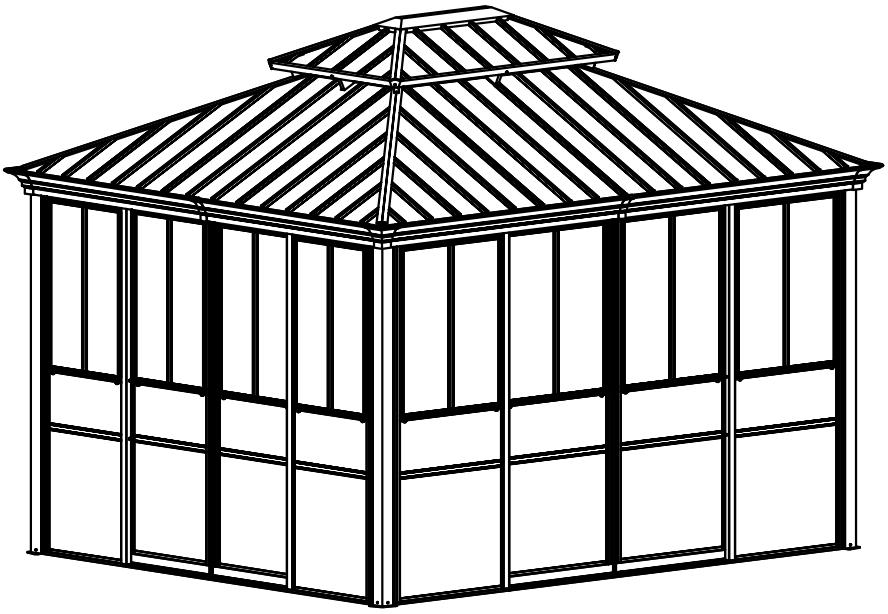

Note: The sunroom needs to be installed in cooperation with five people.


Assembly of this product requires the following tools, these tools are not included, please bring your own, if you have questions, please contact us.

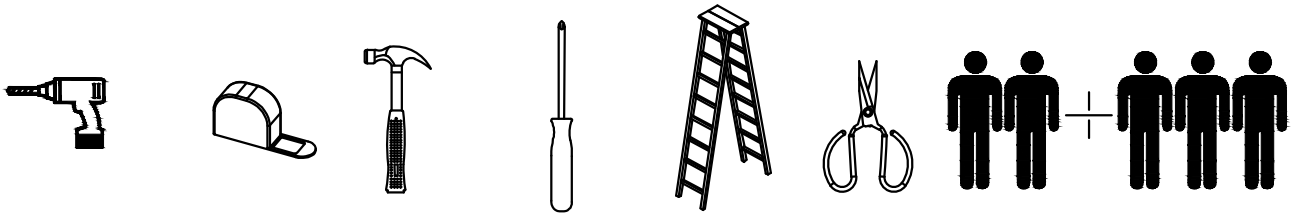



Pistol Drill Tape Measure Hammer Screwdriver Ladder scissor 5 people


ATTENTION:


1. Please check the manual carefully and make sure you have received all the parts.
2. If there is any missing, please let us know the letter of the parts you need.
3. If there is any damage, please send clear photos to us. We will check and offer you the best solution soon.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at **customer01service@hotmail.com.**

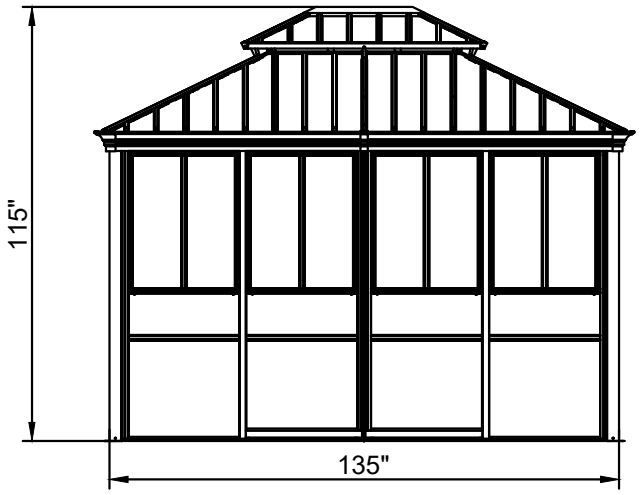
115"
135"

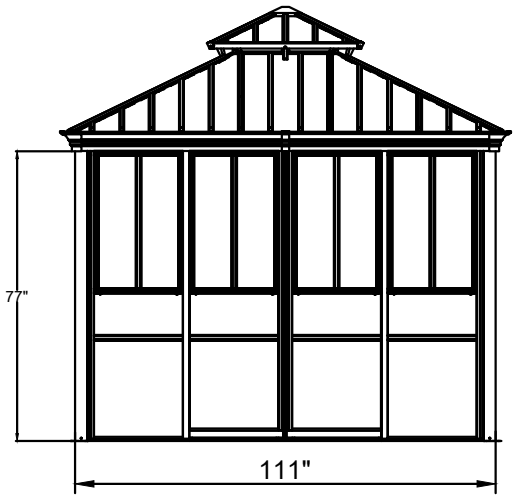
77"
111"

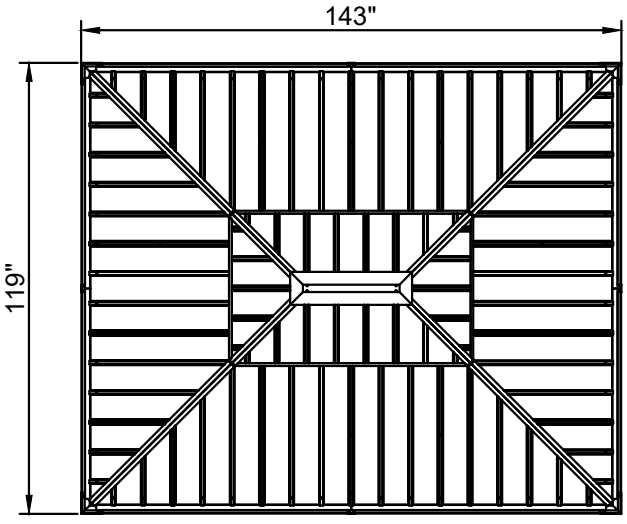
143"
119"

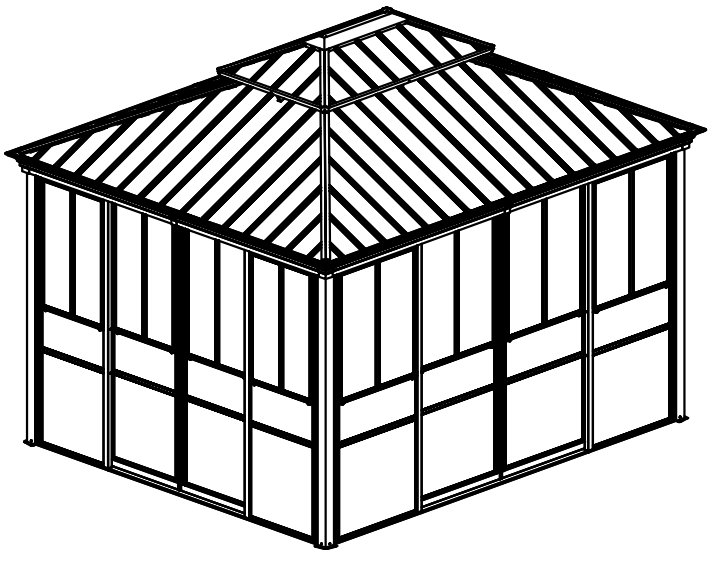



JA1 4x



AB1 2x



AB2 2x




AB3 2x




AB4 2x




E19 4x

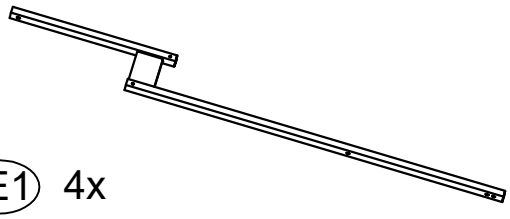


JE1 4x




D1 2x

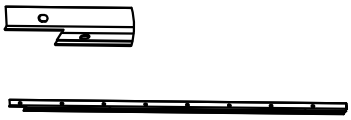

D2 2x

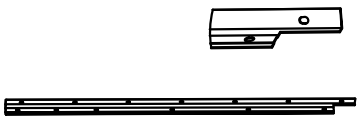


D9 2x

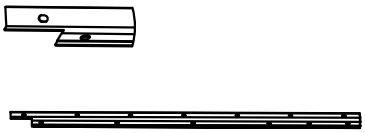

D10 2x



E5 4x



F7 4x




F9 4x




G1 2x

G9 2x

I9 2x




I1 2x




V1 2x



V6 2x

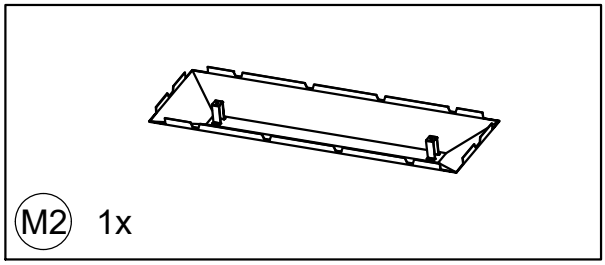


M2 1x

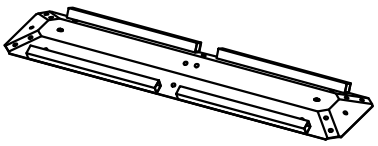

L6 1x




M2A 4x

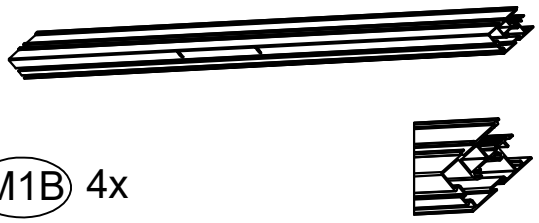

M1B 4x



M1A 4x

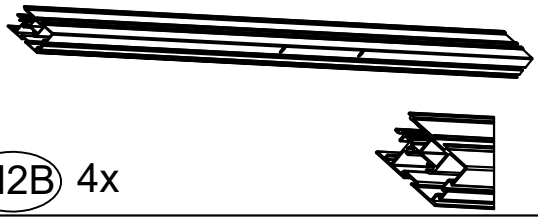

M2B 4x



M3B 4x




M4B 4x




M1D 4x



M2D 4x



M1C 4x




M2C 4x




M1F 4x




M4J 2x

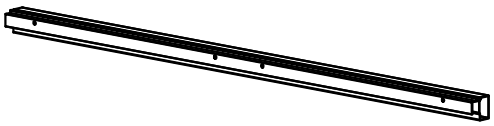


M5J 2x

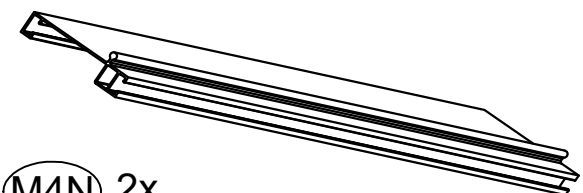

M4N 2x

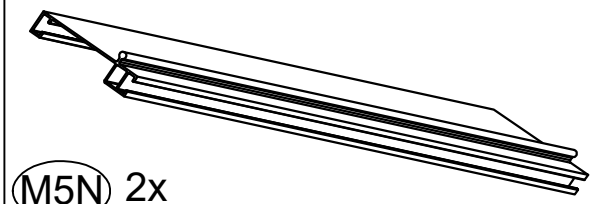

M5N 2x

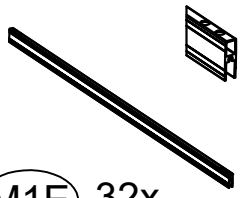


M1E 32x




M1G 16x




M5G 16x

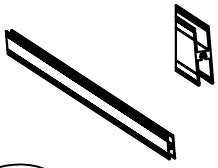


M6G 16x

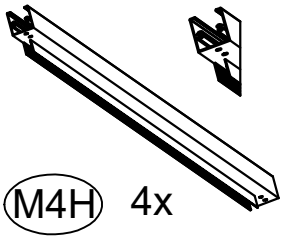


M4H 4x

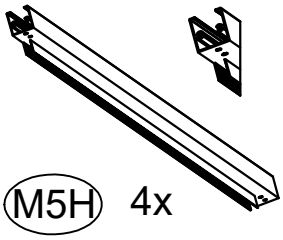


M5H 4x

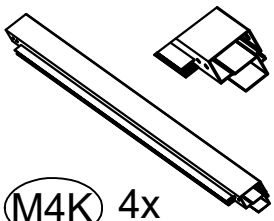


M4K 4x

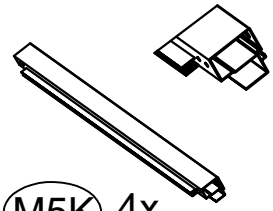


M5K 4x

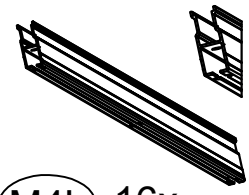


M4L 16x

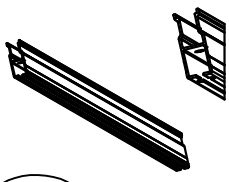


M5L 16x

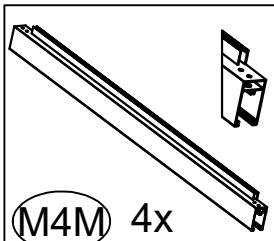


M4M 4x

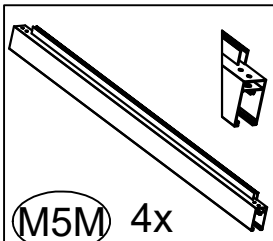


M5M 4x

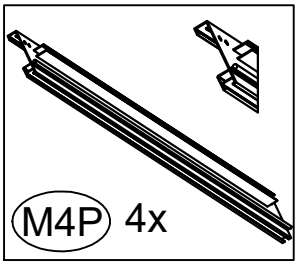

M4P 4x

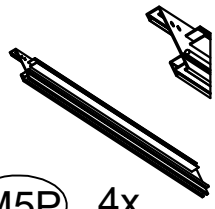


M5P 4x

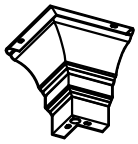

K 4x




K1 4x

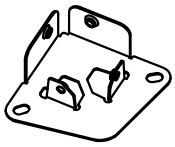


AJ1 4x



W 4x




W1 4x




P 4x




JZ1 4x




JZ2 4x

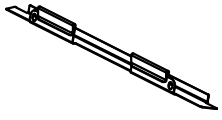


Z 48x

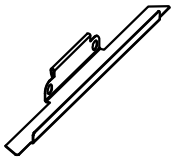

Z1 16x

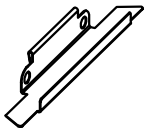

Z2 8x

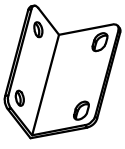


MQ2 32x




N 8x




Y 72x



MD1 64x




MD3 32x



MD4 16x




MD5 16x



6.2*11*15


3-1 16x

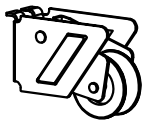


4-1 16x




5-1 2x

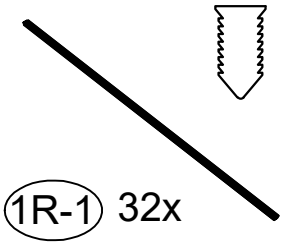


1R-1 32x

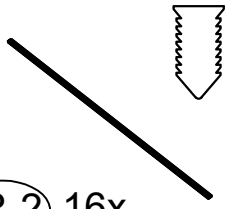


1R-2 16x

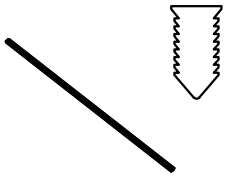


1R-3 16x




R1 4x




R2 4x




S1 4x




S2 4x




Q3 4x




Q4 4x




Q5 2x




Q6 2x




Q7 2x

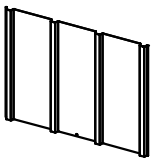


S3 2x




MS1 16x




MS2 8x

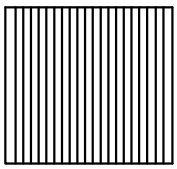


MS3 4x

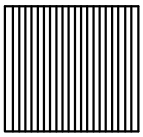


MS4 4x




MS5 16x




MS6 8x

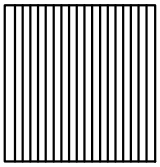


MS7 4x

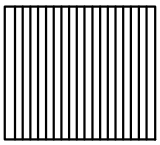


MS8 4x

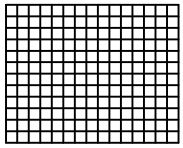

M1S 8x

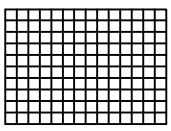


M2S 8x




U1 6x



U2 6x



U3 6x



U4 6x



MD2 128x



M6x15

1 292x




M6x25

2 64x



ST 4.8x12

3 40x



4 **2x**



M6x50

5 8x



6 8x




M6x10

7 8x



8 8x




9 1x




M6

10 76x




M6

11 16x




M4x20

12 160x




M4x35

13 112x



M4x50

14 64x



15 24x




M5x6

16 96x




M5

17 48x



M5x12

18 48x



M6

19 72x




4mm

20 2x



2.5mm


21 2x

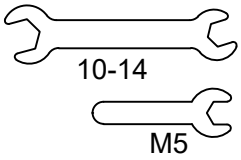

10-14


M5

22 1x



Rubber Gasket


23 72x

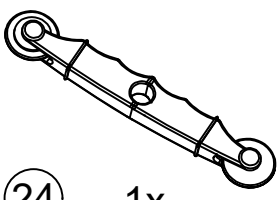

24 1x


10x12								
AB	AB	AD	AD	AF	AF	AG	AG
BA	BA	DA	DA	AF	AF	AG	AG
AC	AC	AE	AE	AF	AF	AG	AG
CA	CA	EA	EA	AF	AF	AG	AG

1x



M5x15

25 16x




M4x12

26 4x



JA1 4x

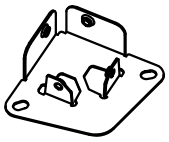


AJ1 4x




M6x15


1 8x

<1>

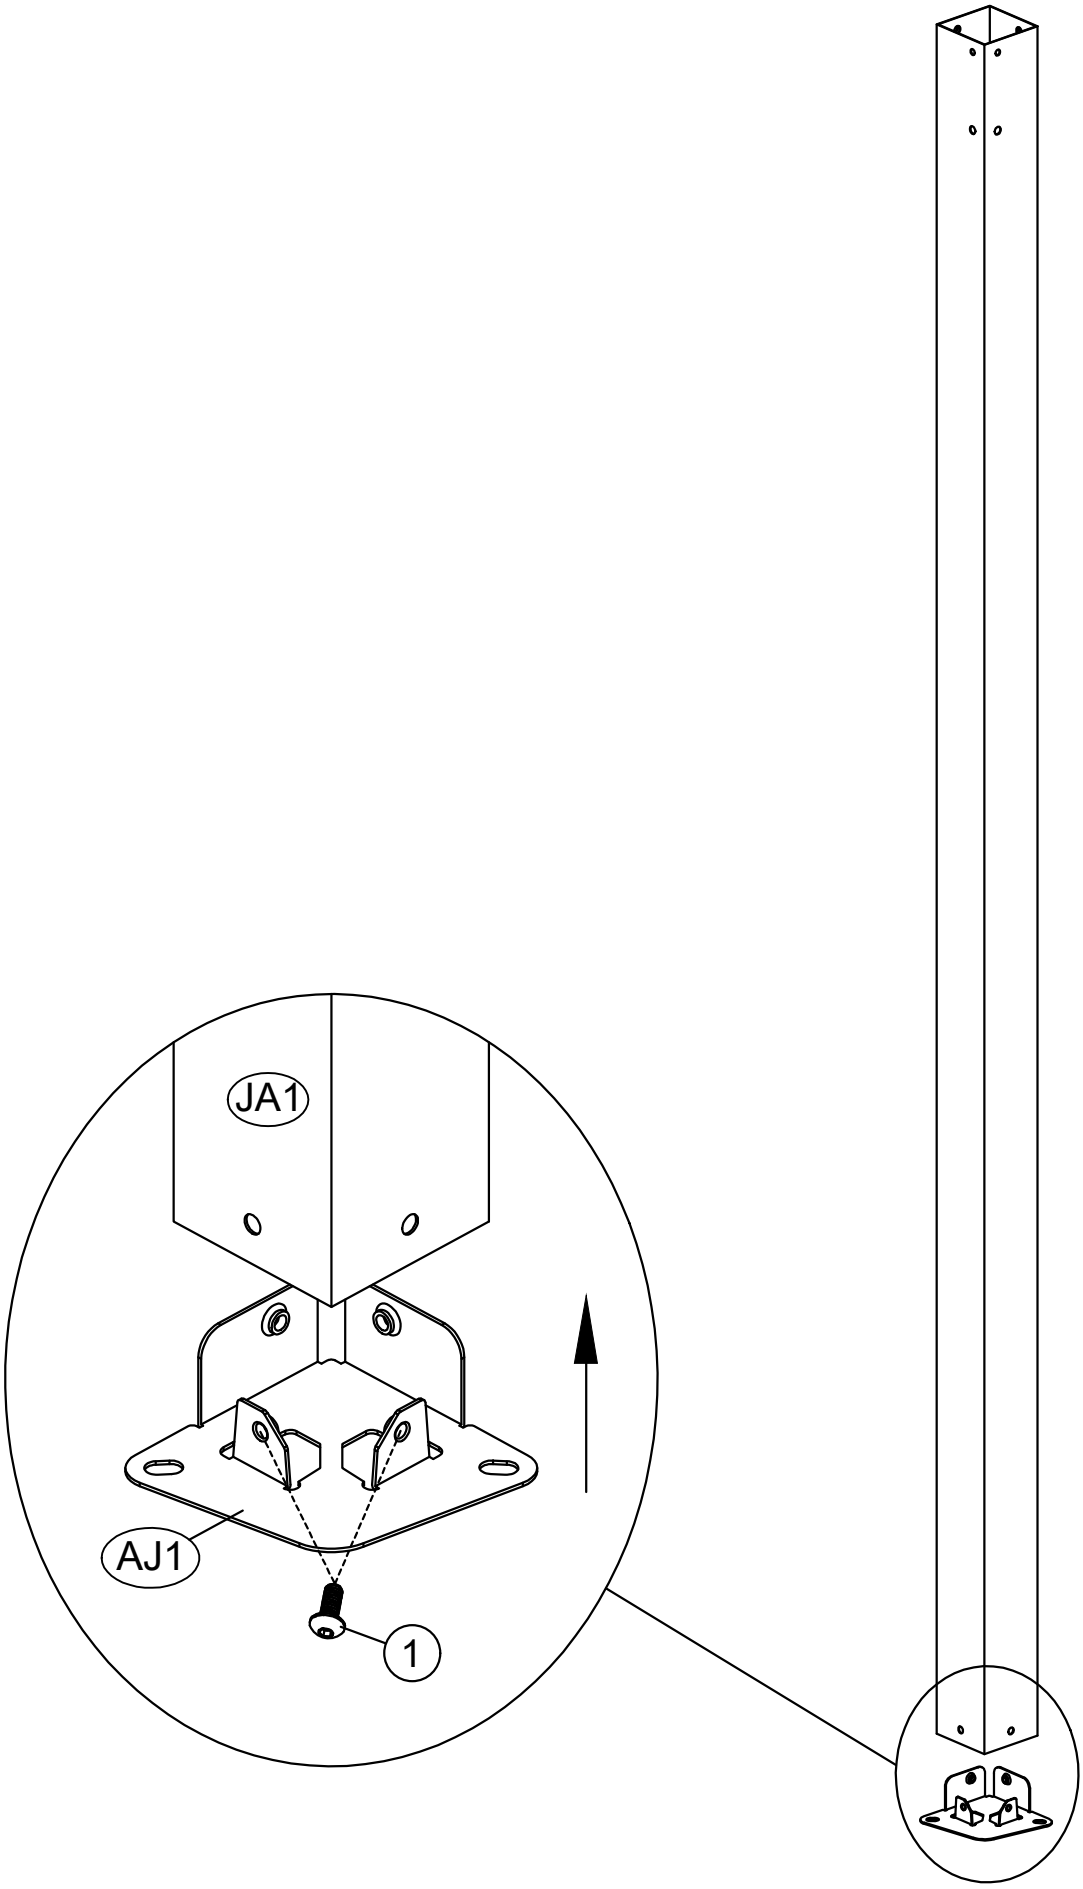


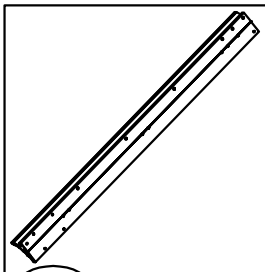


AB1 2x

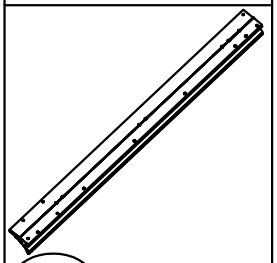


AB2 2x

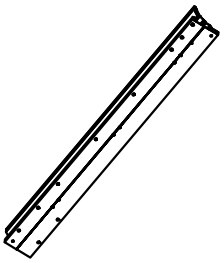

AB3 2x

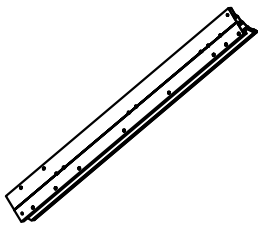

AB4 2x



P 4x




M6x15


1 64x



D1 2x

11

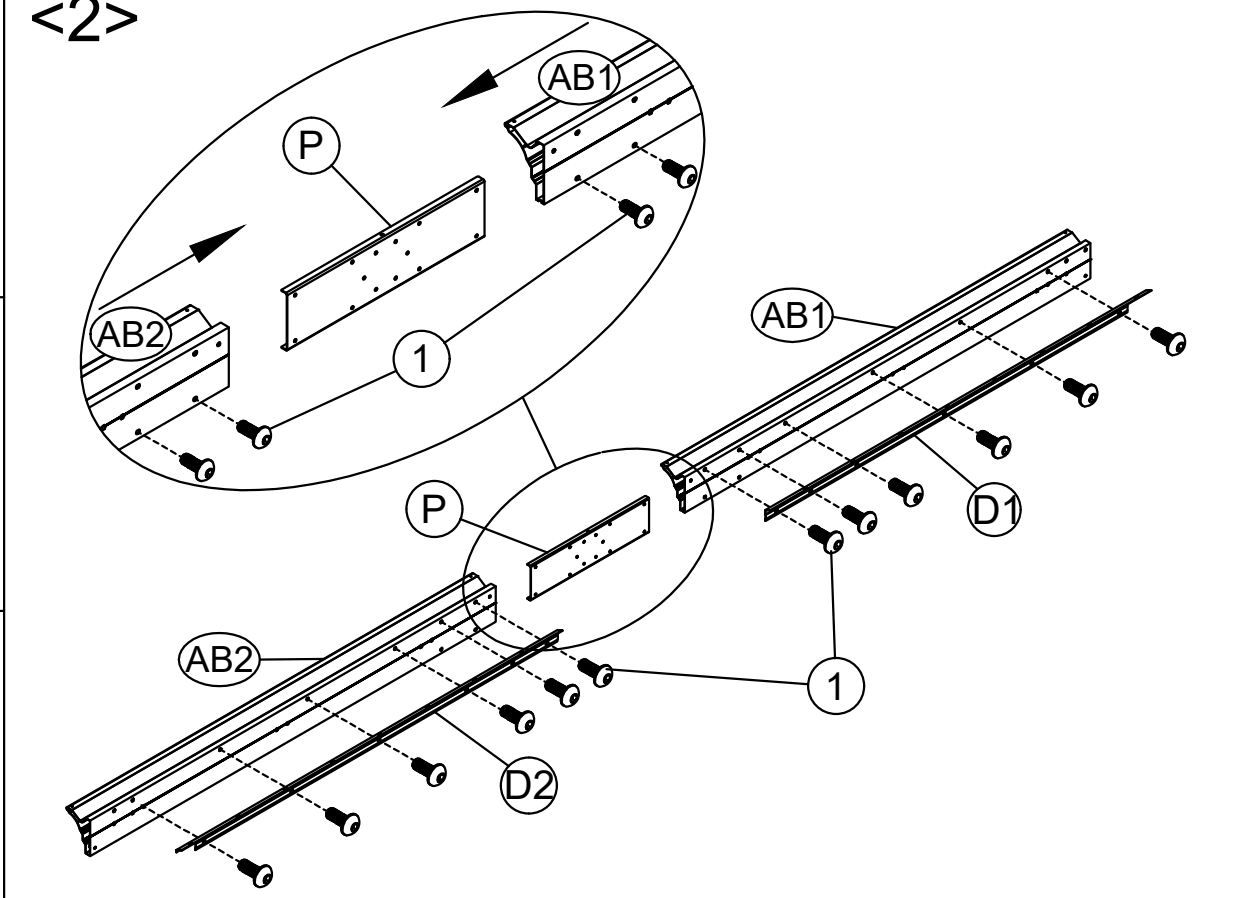

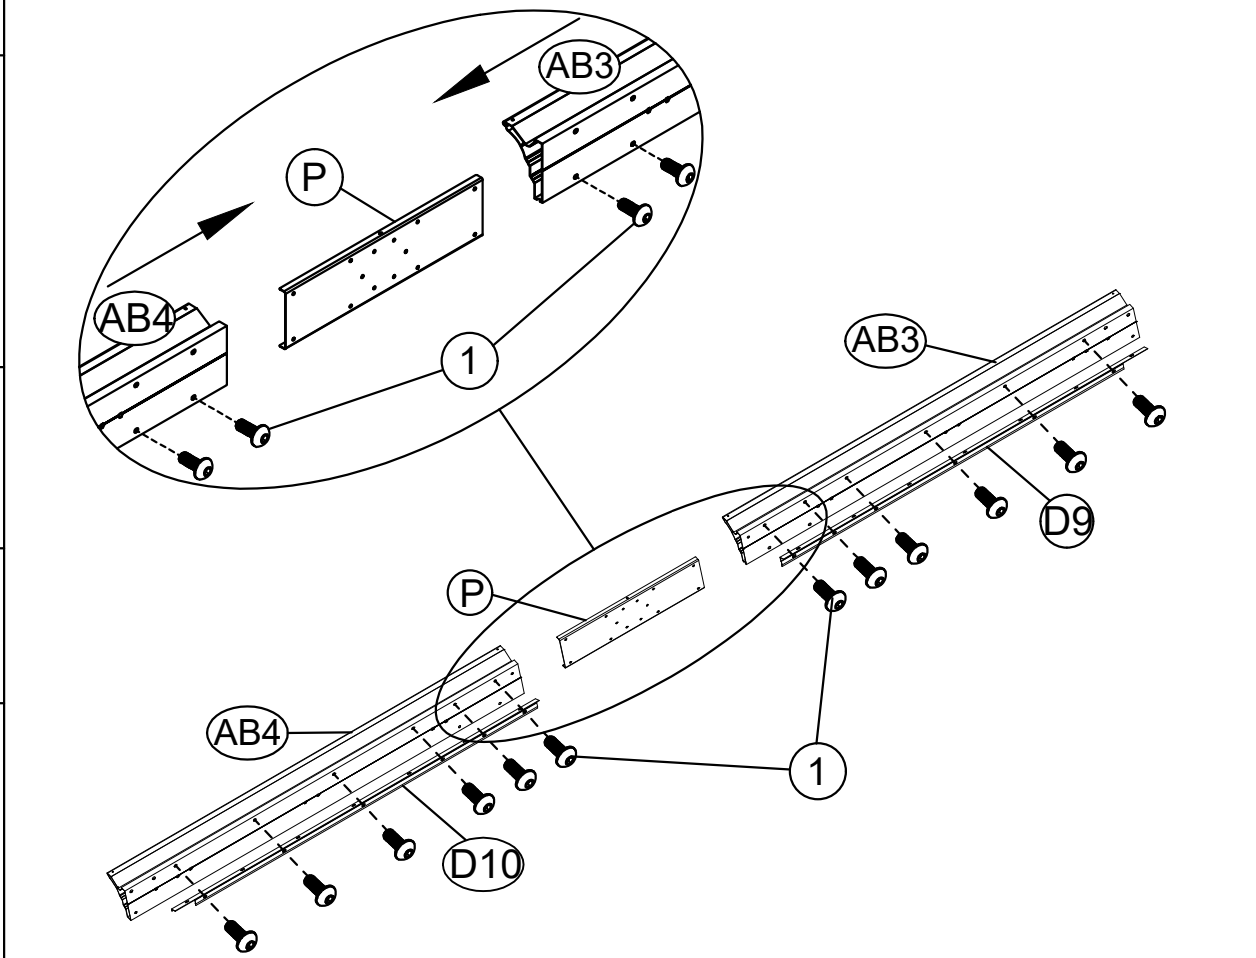




D2 2x

D9 2x


D10 2x

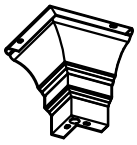

K 4x



K1 4x

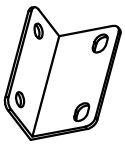

MQ2 8x



M6x15


1 36x




6 8x




3 24x

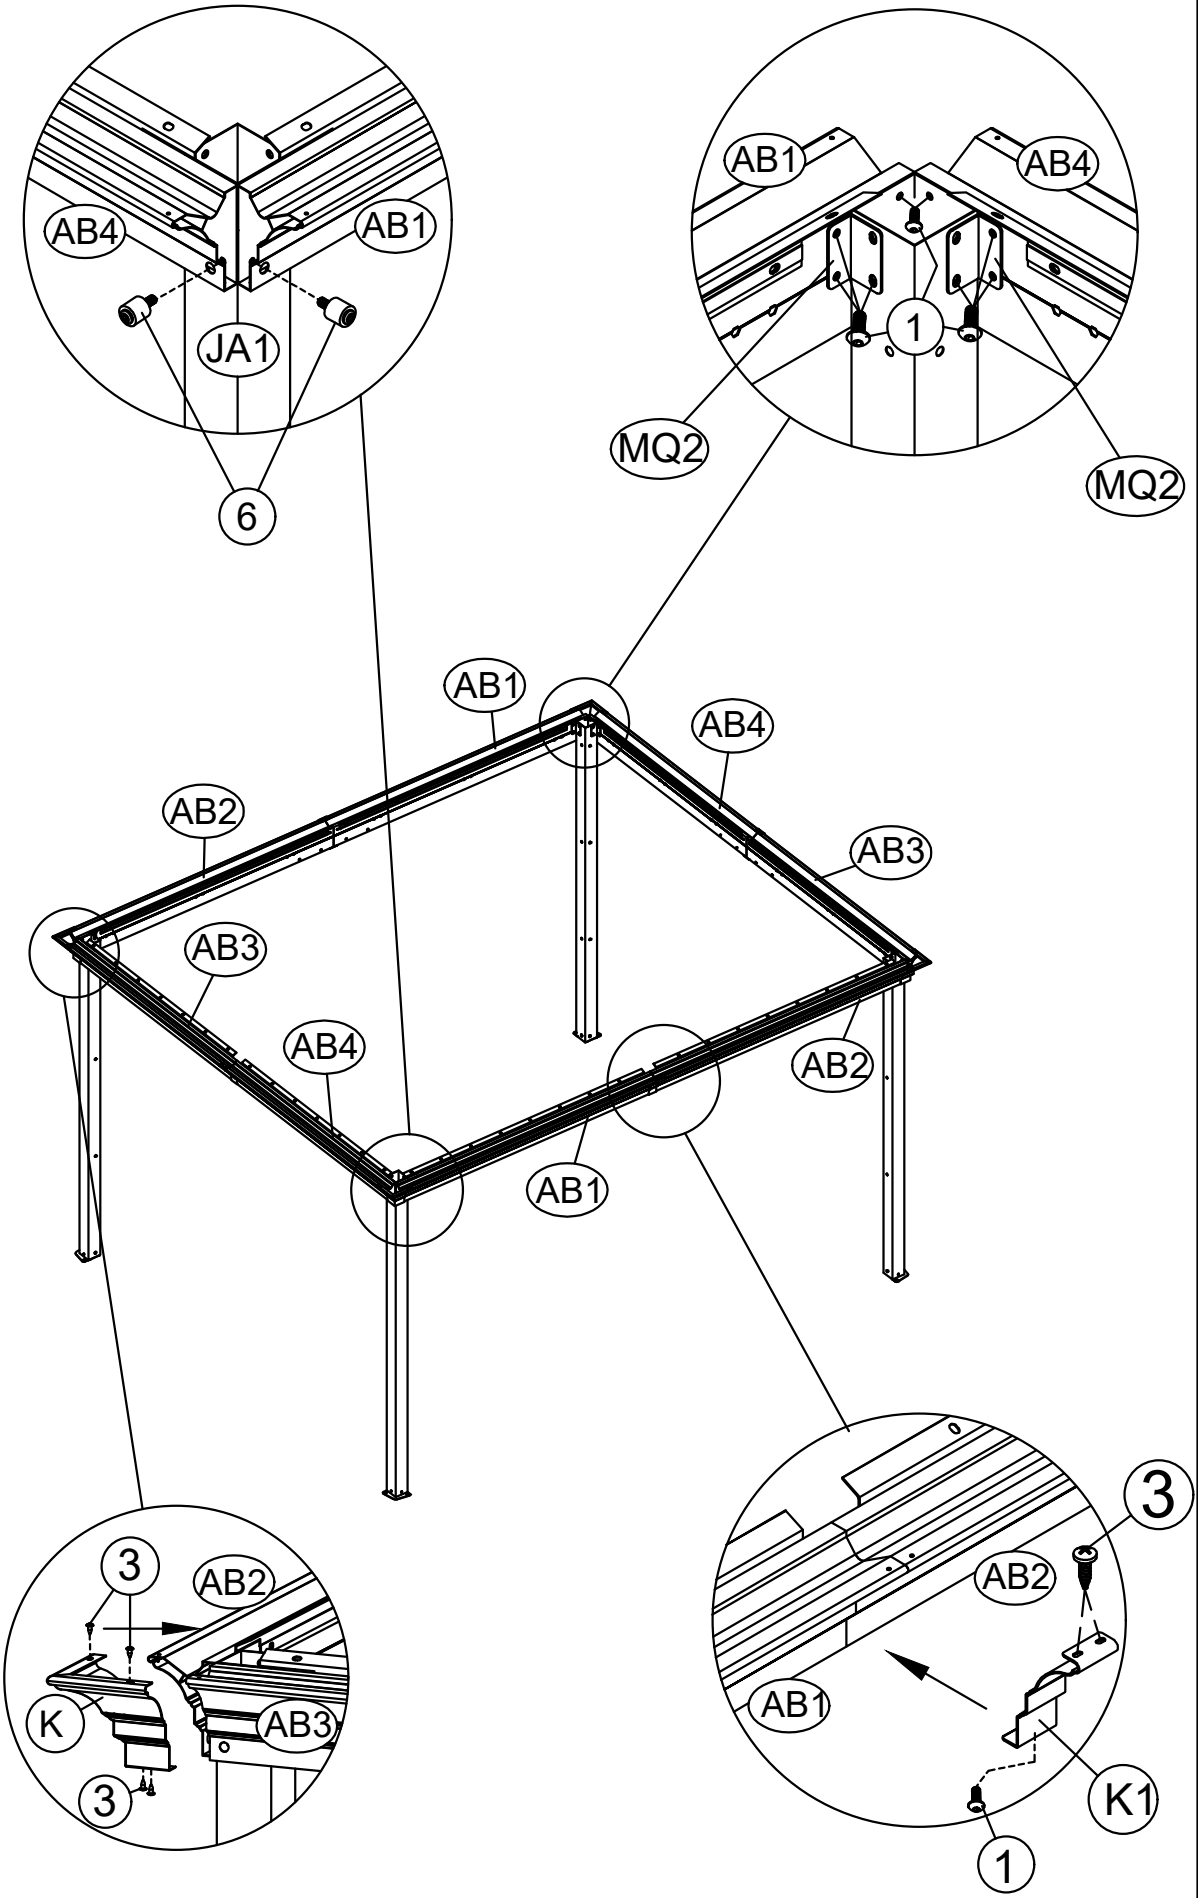

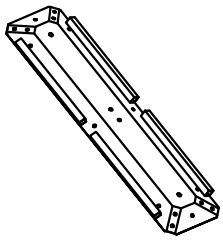


L6 1x

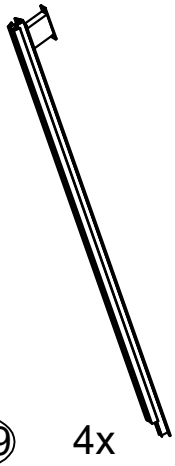

E19 4x



E5 4x




JZ2 4x



M6x15

1 20x

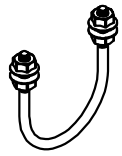


9 1x

13


M6x15

1 8x


<5>

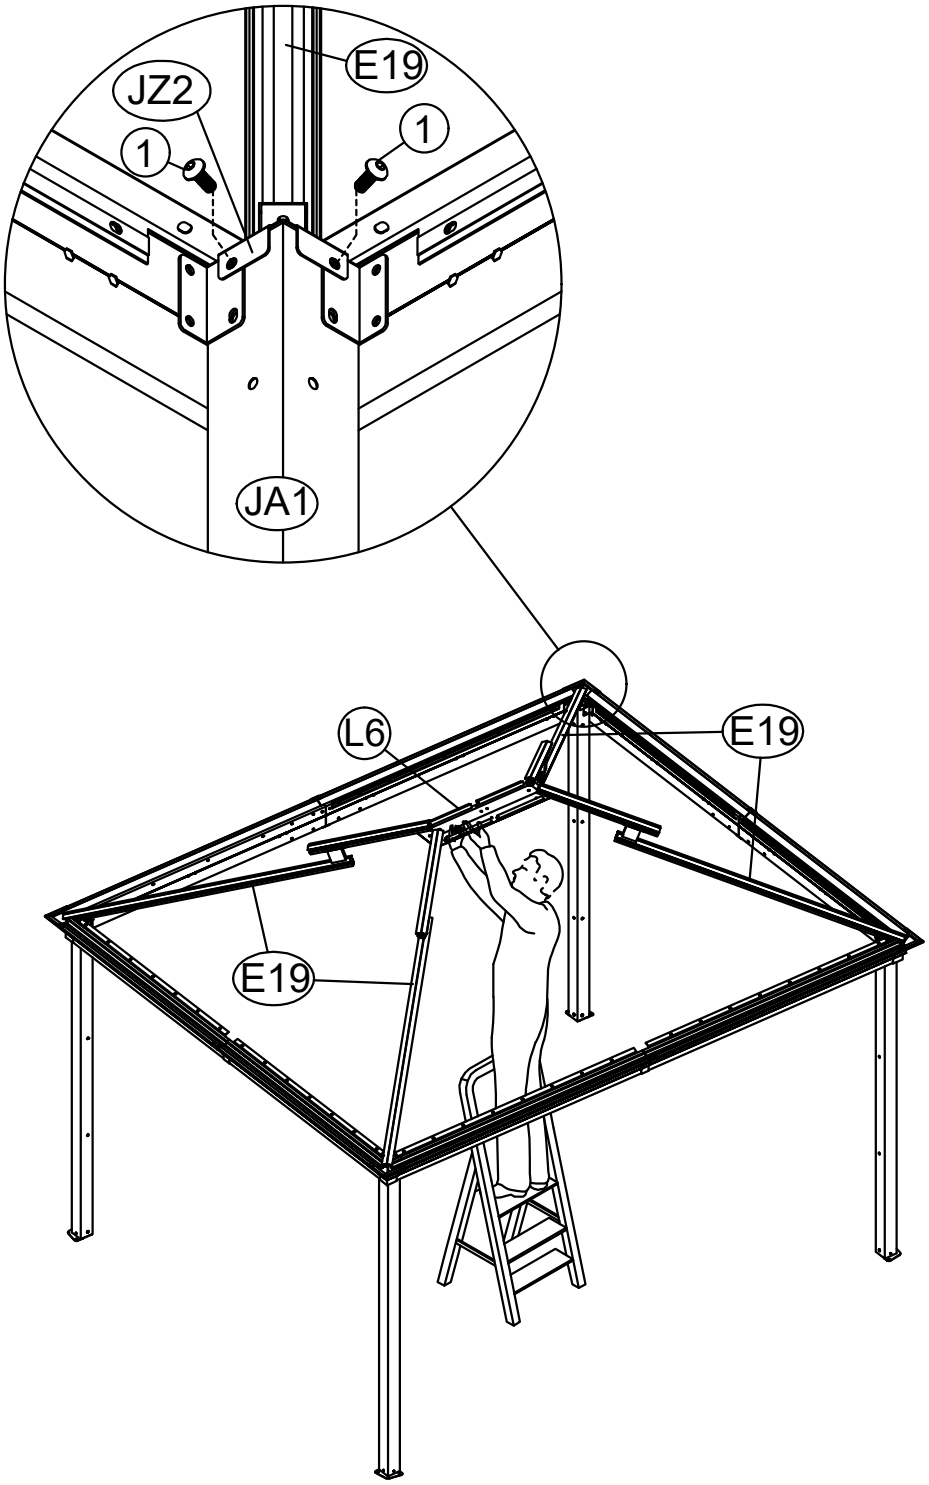

Note:
1. Let one person stand on the ladder to lift "L6" and hold and let others fasten the screws connecting both ends of" JZ2.
2. Please do not let go of holding "L6" until all the" JZ2 " screws are installed.

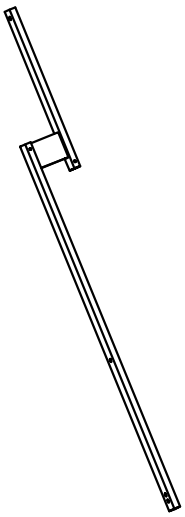

JE1 4x




JZ1 4x



M6x15

1 20x

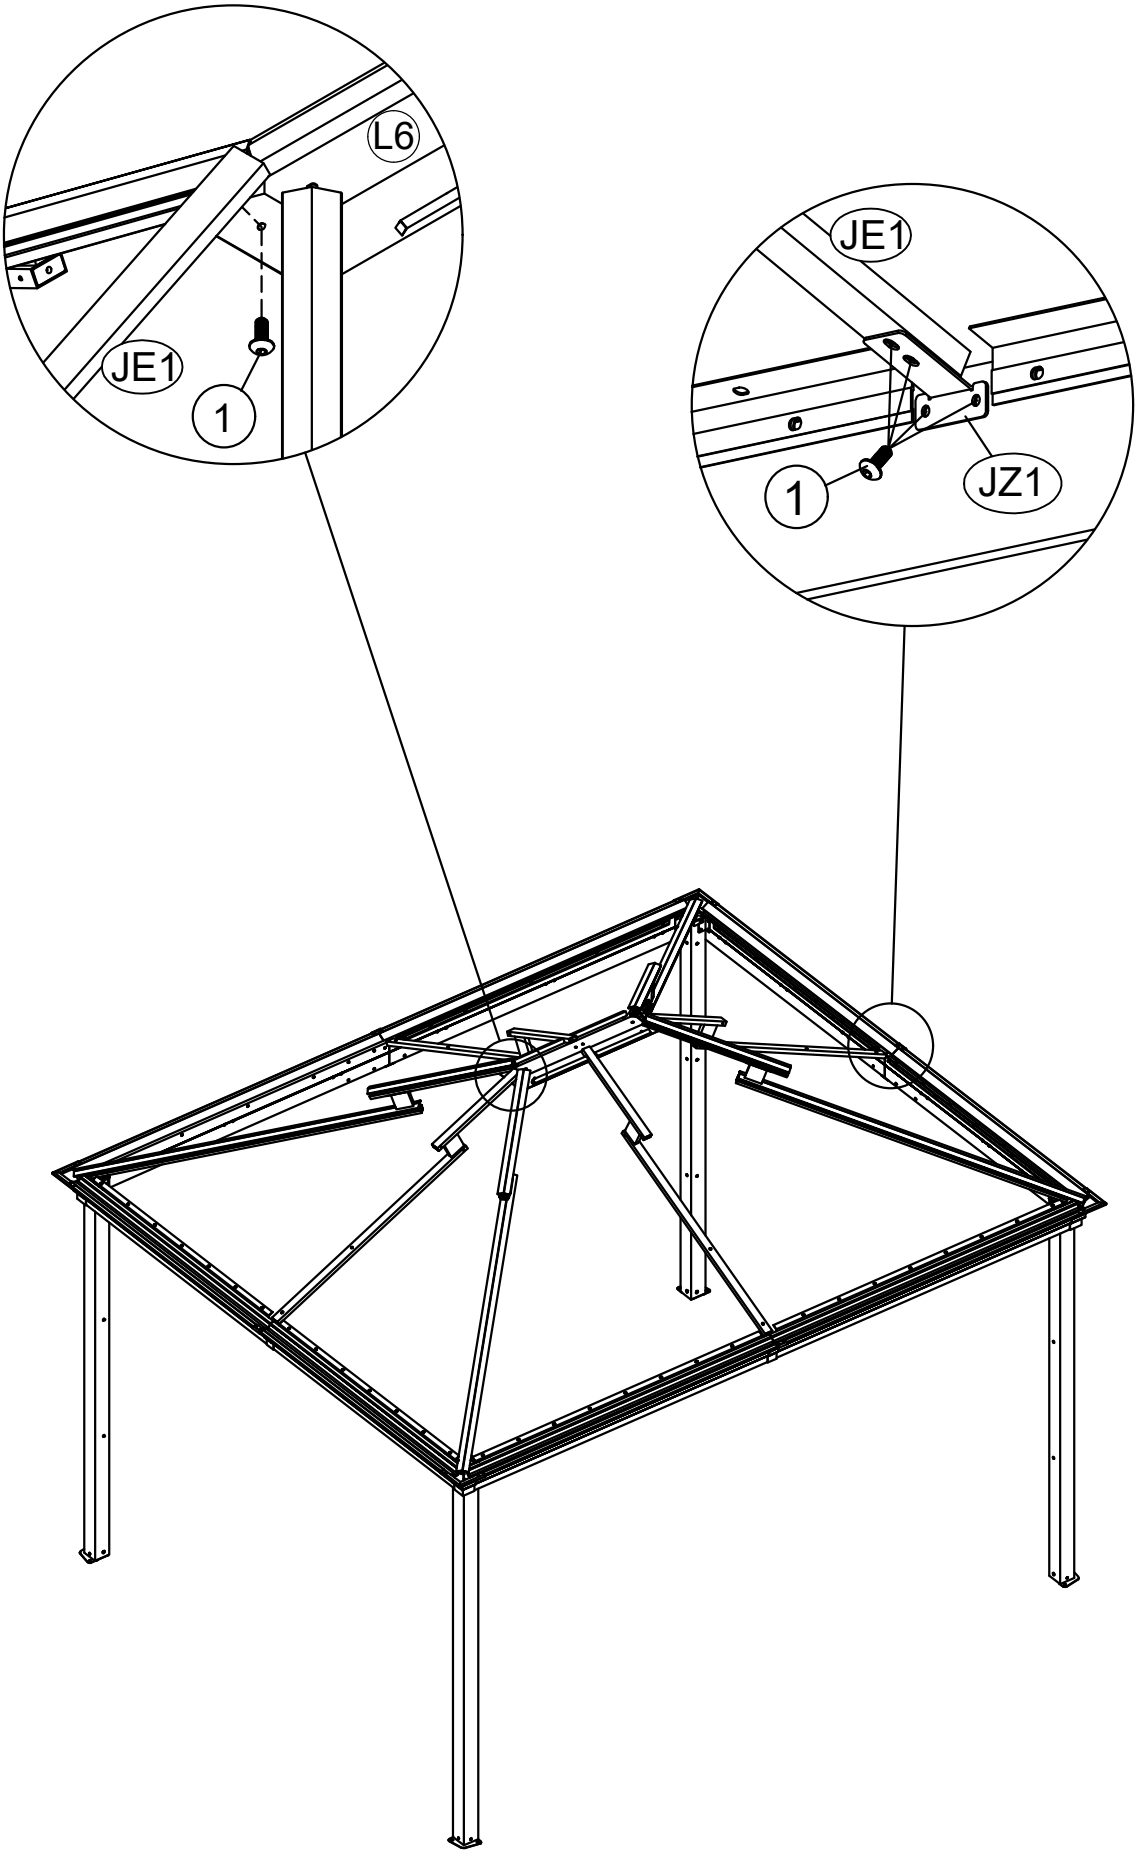



G1 2x



G9 2x




N 4x




M6x15

1 8x

<7>

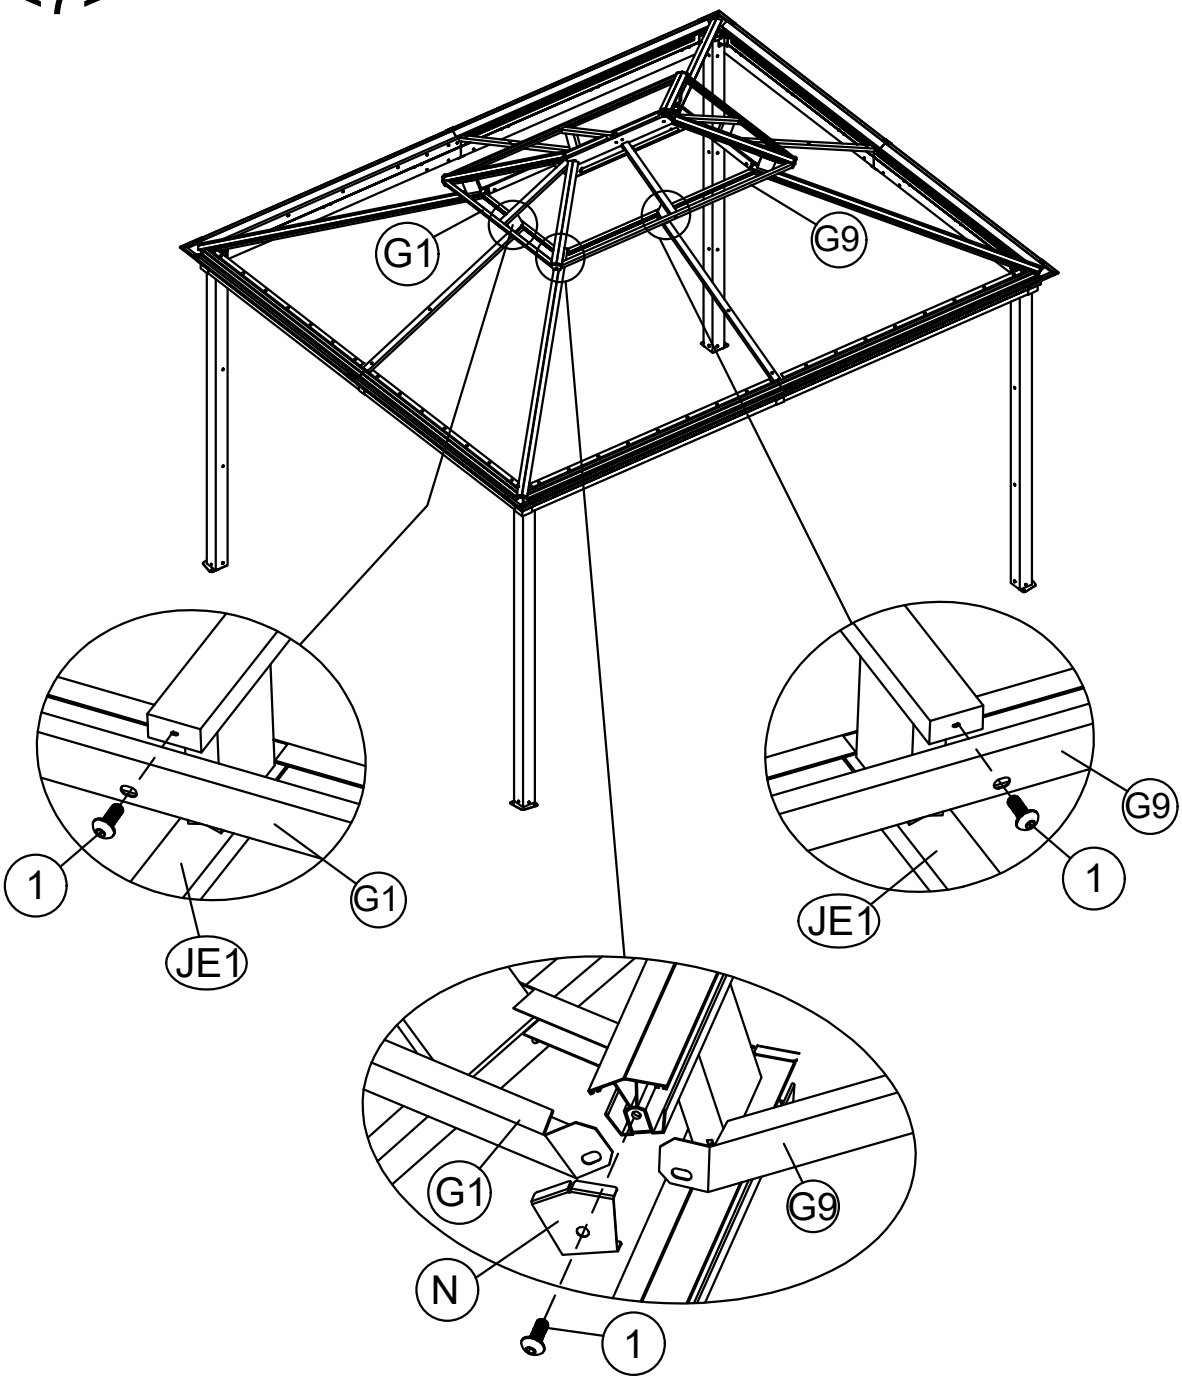

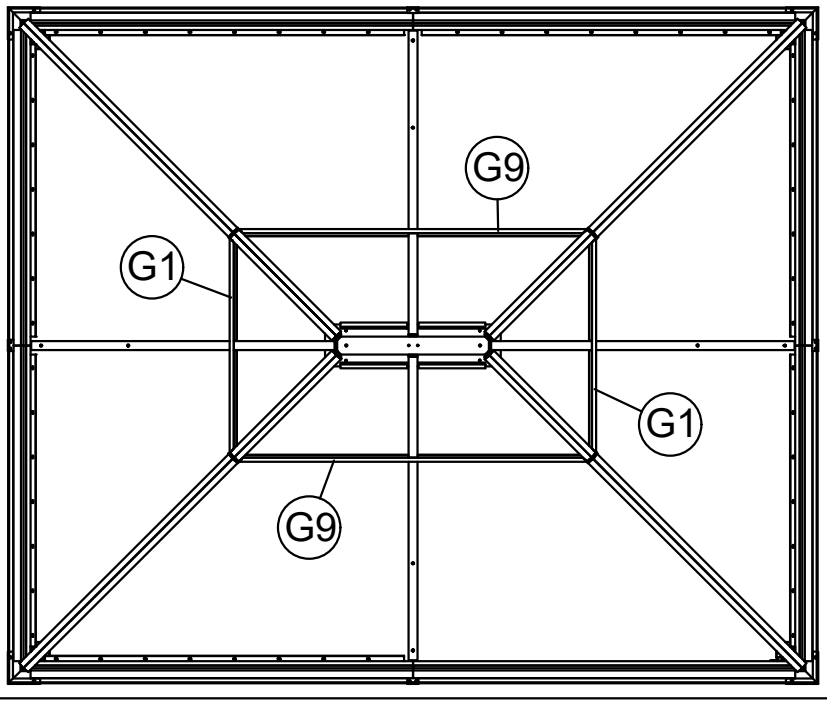




S1 2x


S2 2x



R1 2x



R2 2x

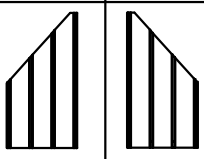

Q3 2x Q4 2x

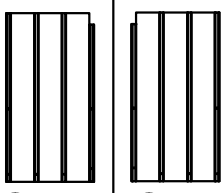
Q5 2x Q6 2x

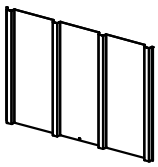

S3 2x



Z 24x

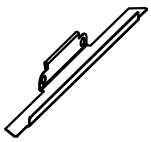

Z1 8x

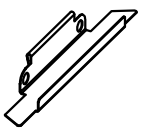
Z2 4x

17

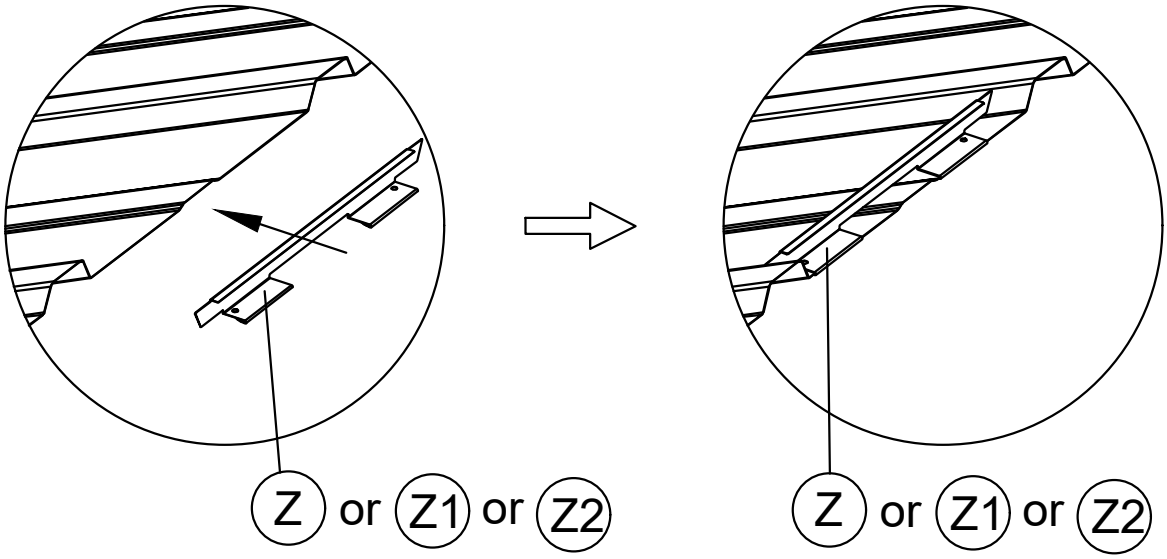

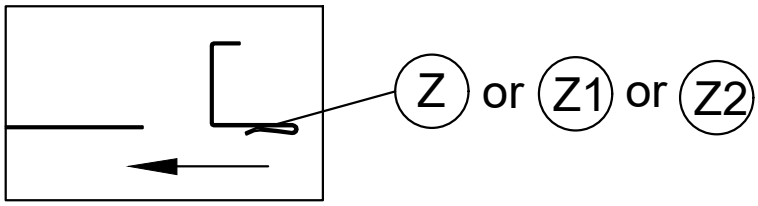

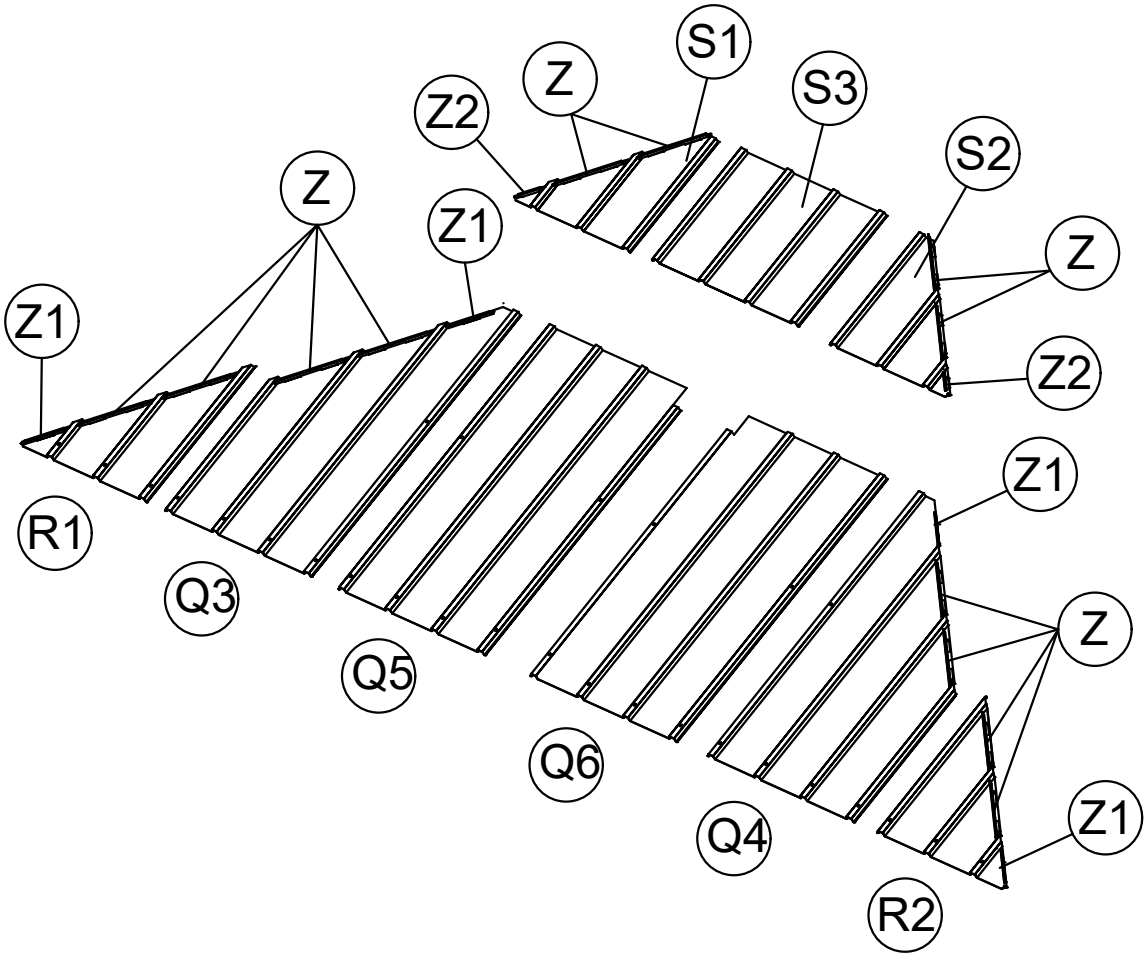

<9>

S1 2x

S2 2x

R1 2x

R2 2x

Q3 2x


Q4 2x


Q7 2x


Z 24x

Z1 8x


Z2 4x

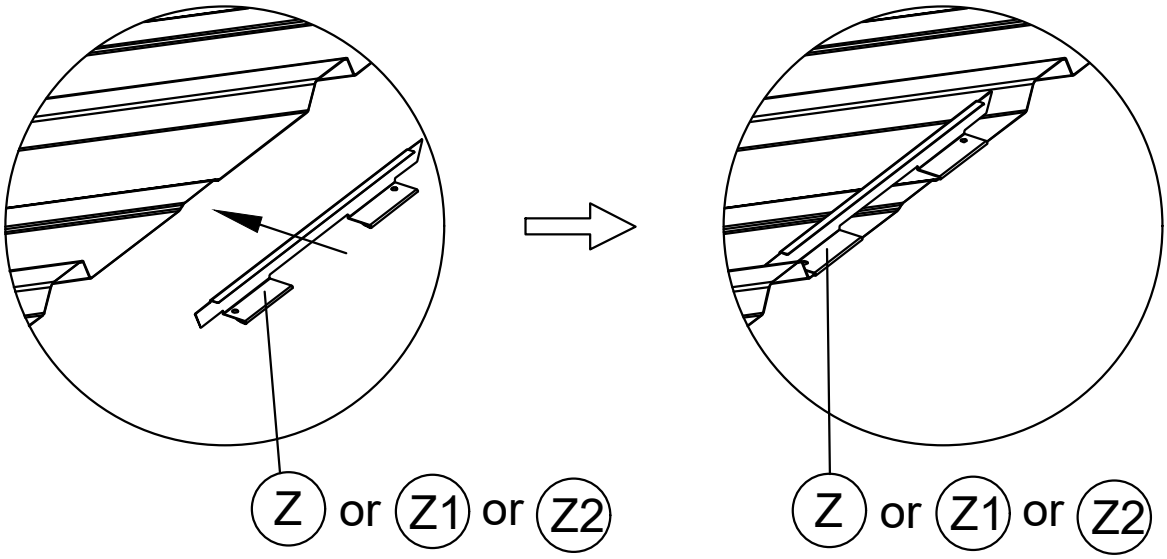

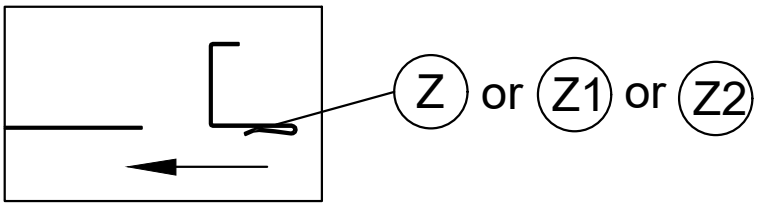


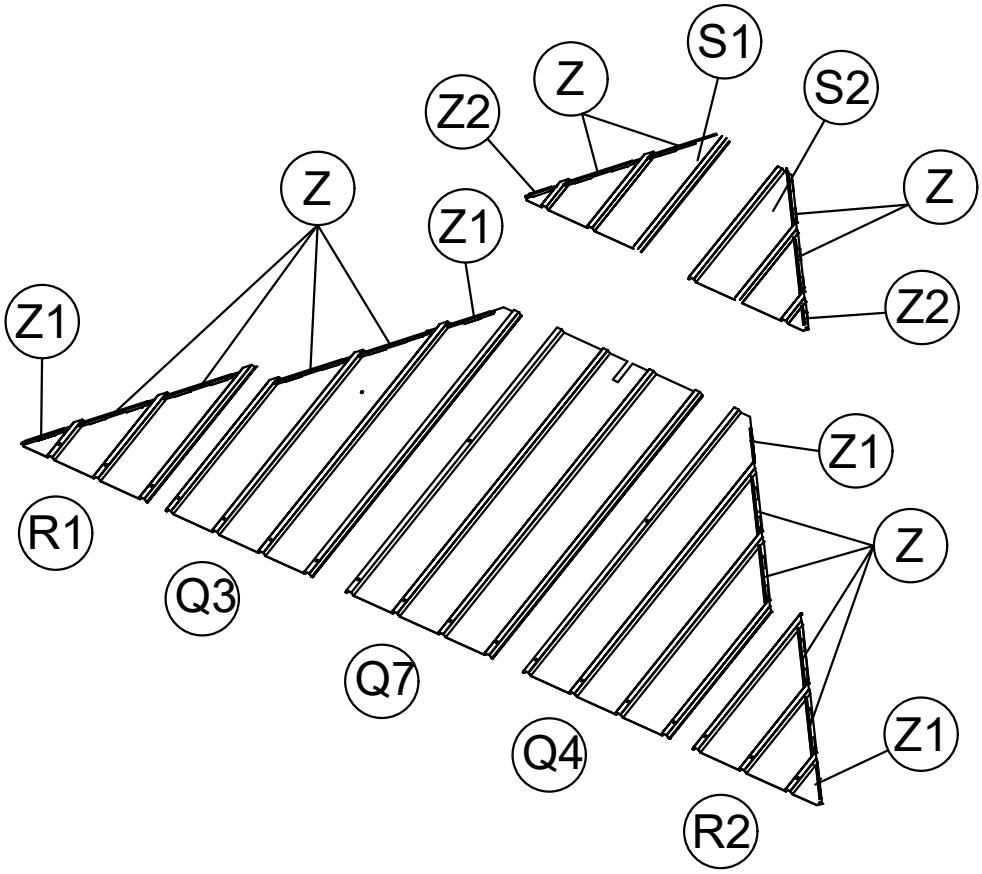



<10>

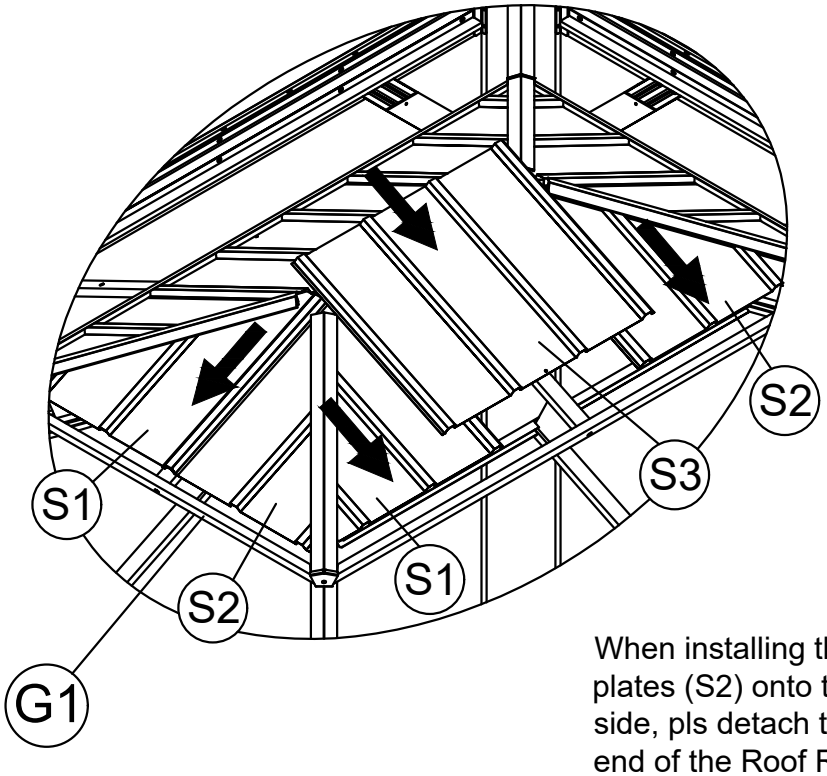

When installing the Roof plates (S2) onto the short side, pls detach the right end of the Roof Rib(G1) first. And then install the right end of Roof Rib (G1) again after S2 is installed.

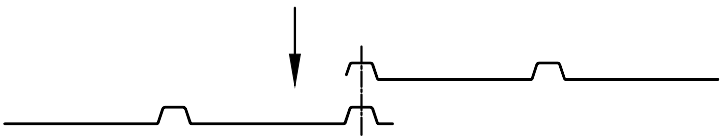

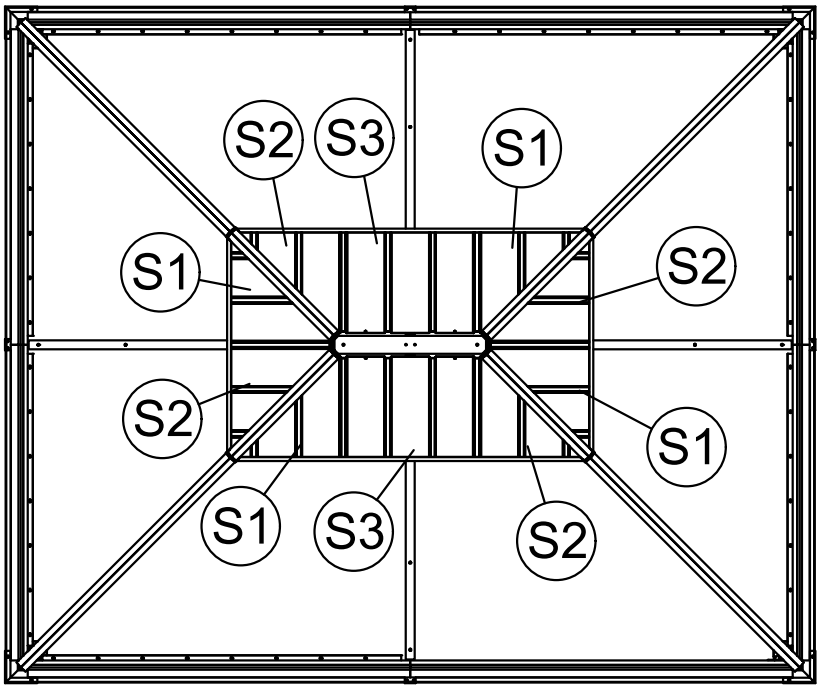

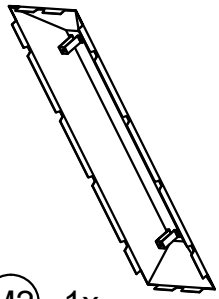



M2 1x




4 **2x**

<11>

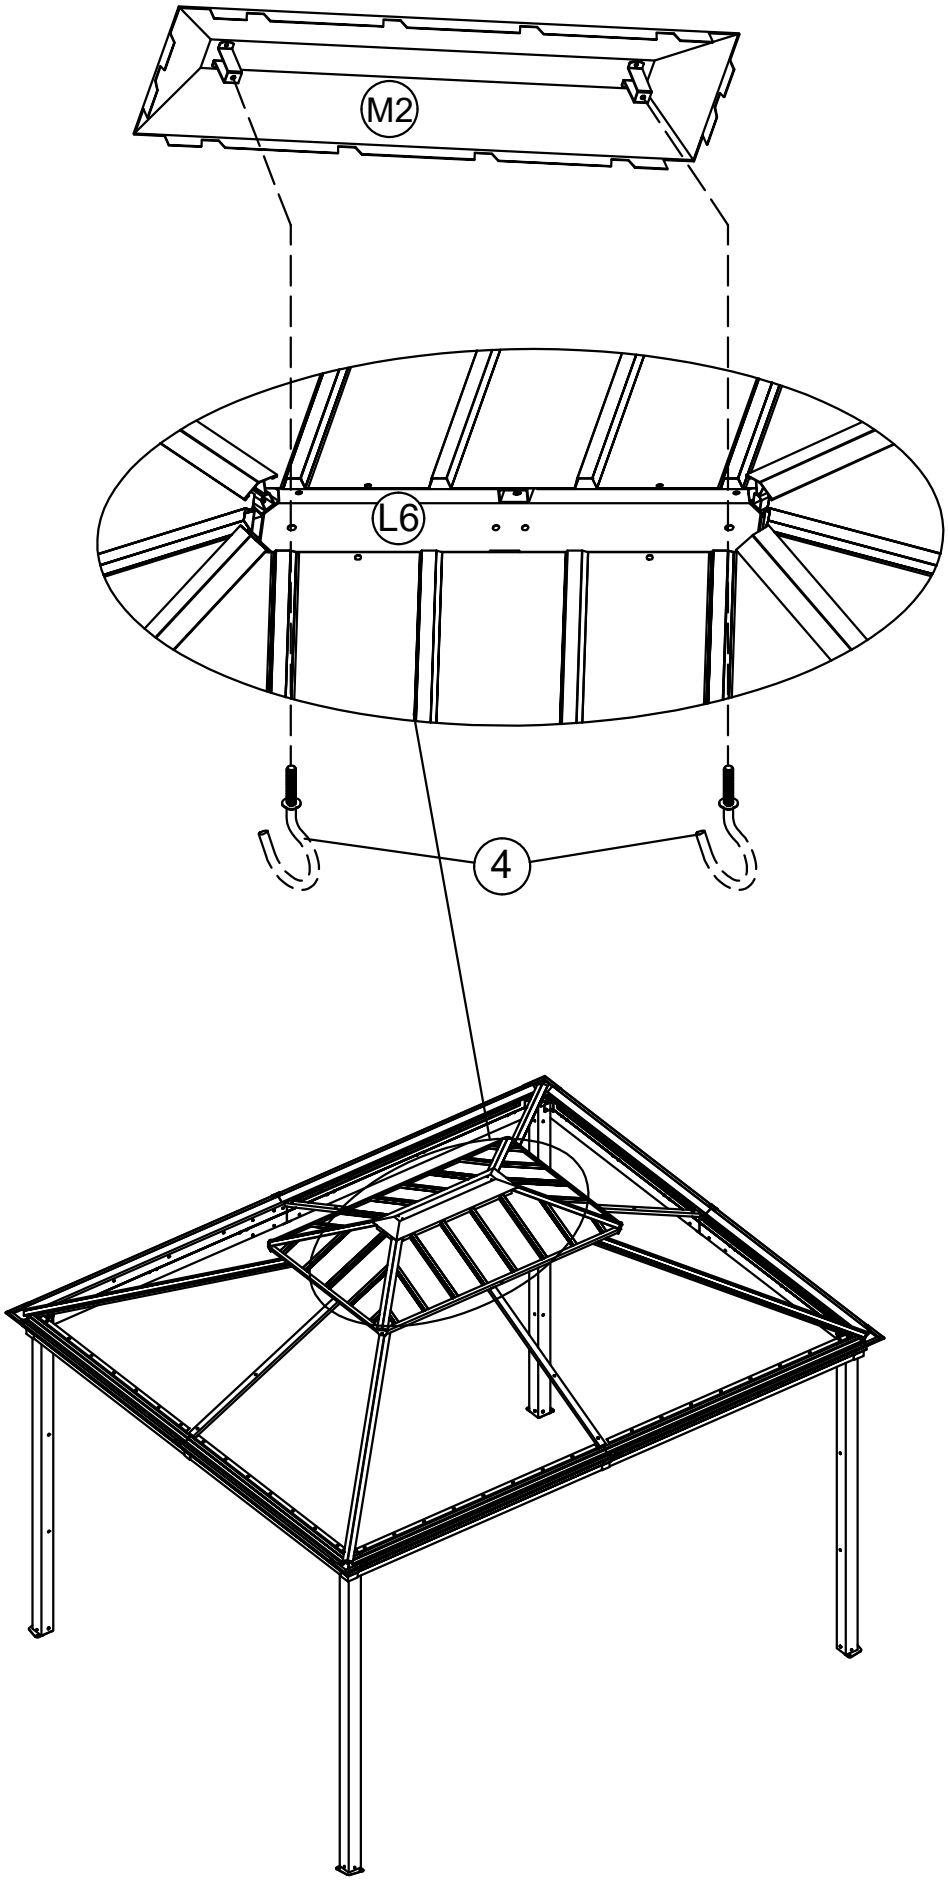

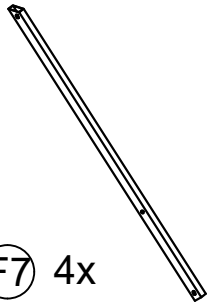


F7 4x

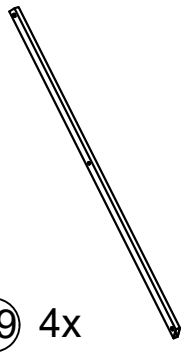

F9 4x




W 4x




W1 4x


M6x15


1 24x

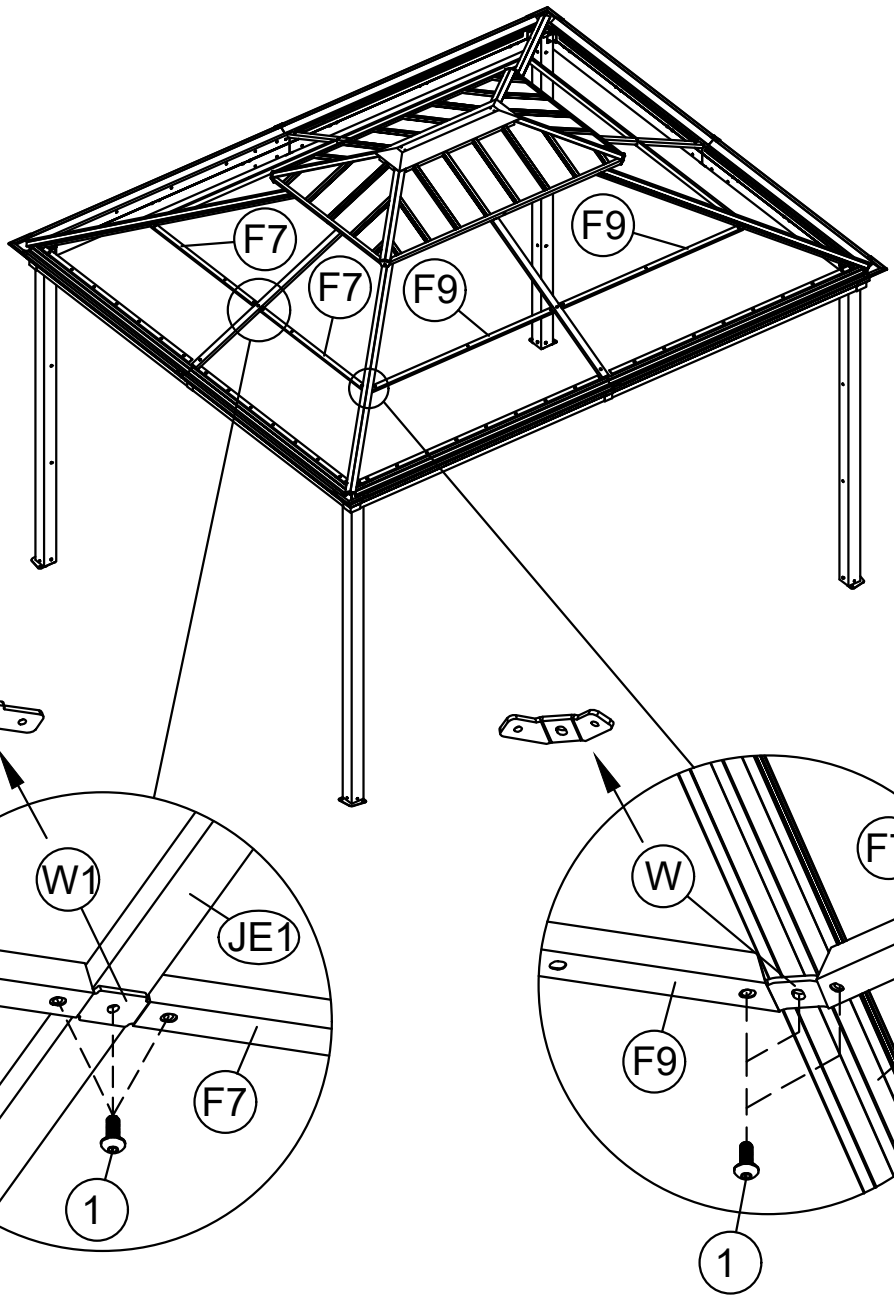


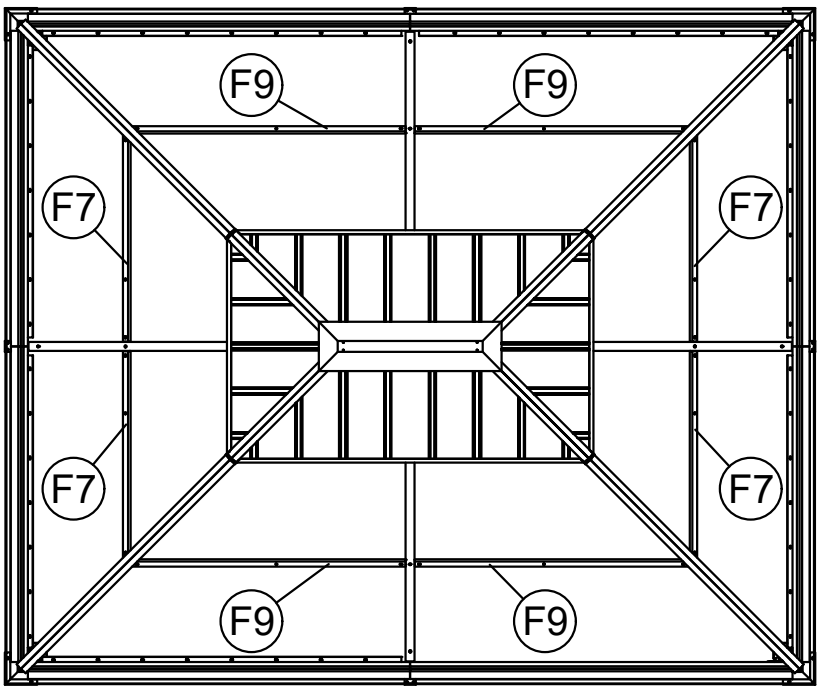


<13>

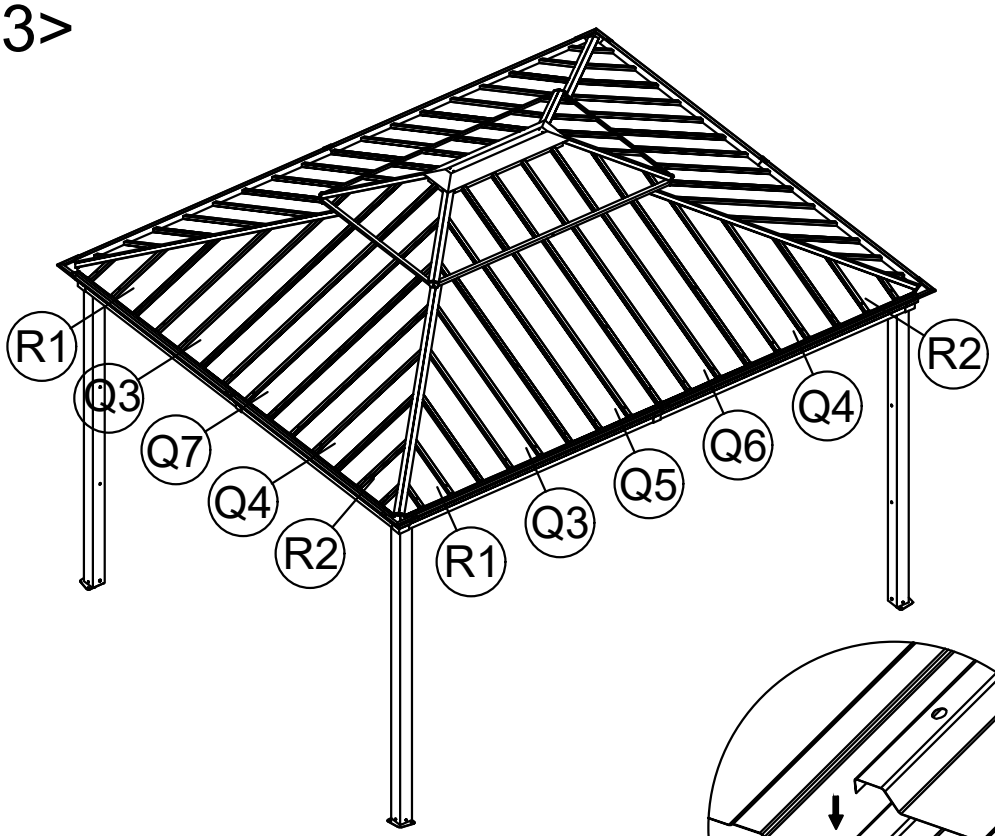

R1
Q3
Q7
Q4
R2
R1
Q3
Q5
Q6
Q4
R2

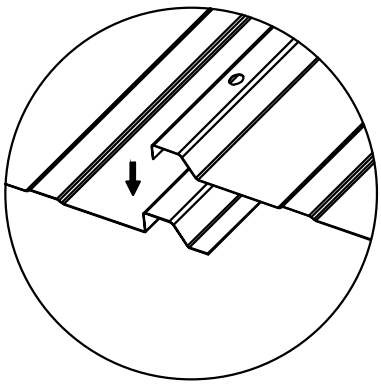


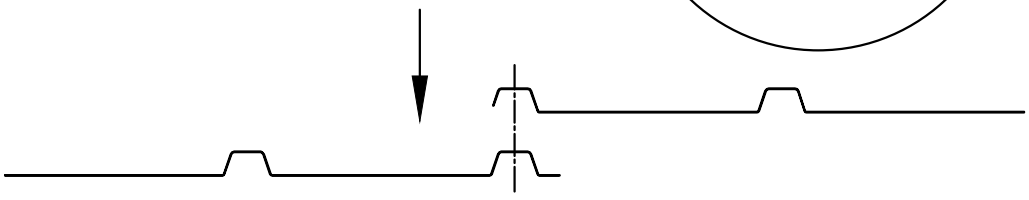

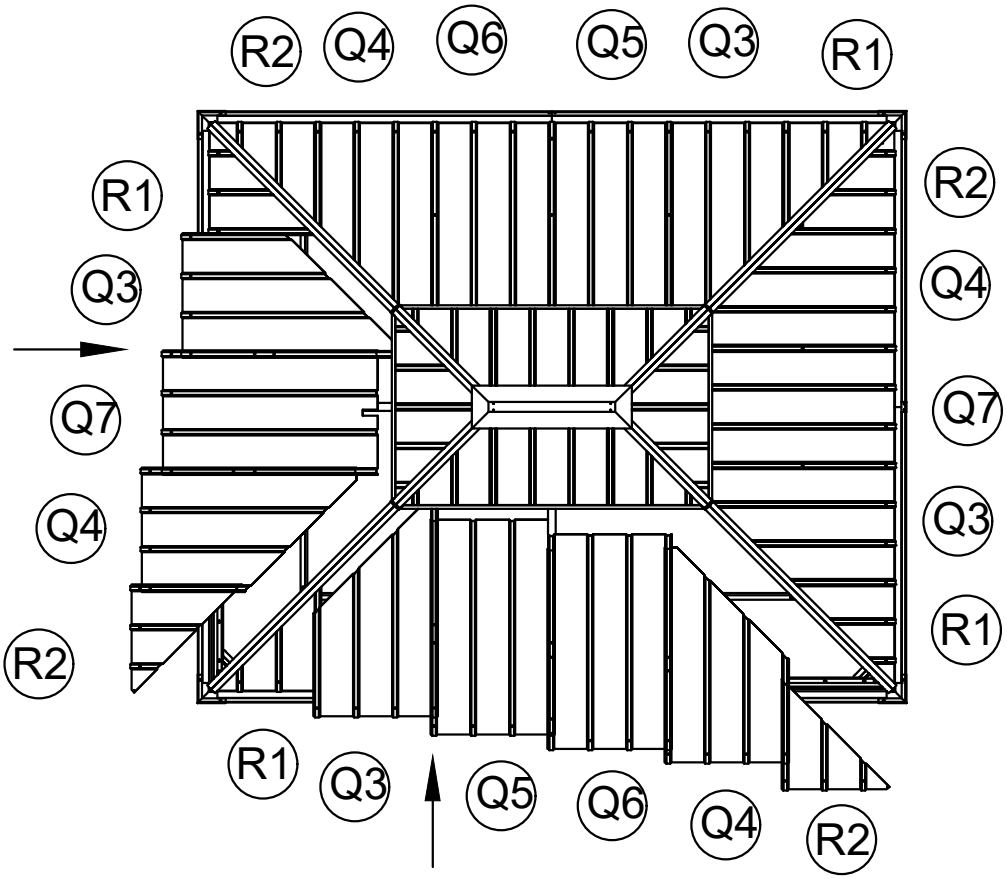

R2
Q4
Q6
Q5
Q3
R1
R1
Q3
Q7
Q4
R2
R2
Q4
Q7
Q3
R1
R1
Q3
Q5
Q6
Q4
R2

<14>

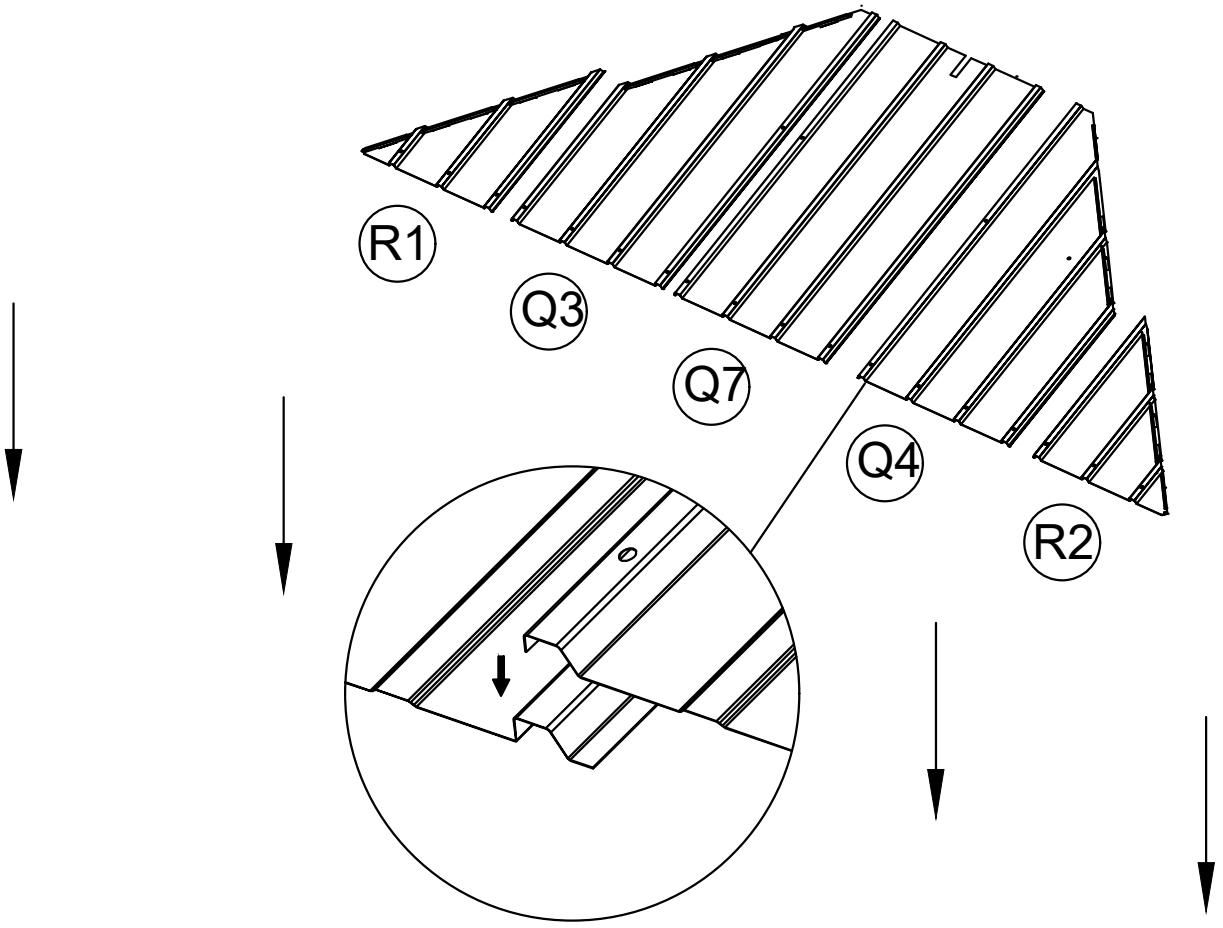

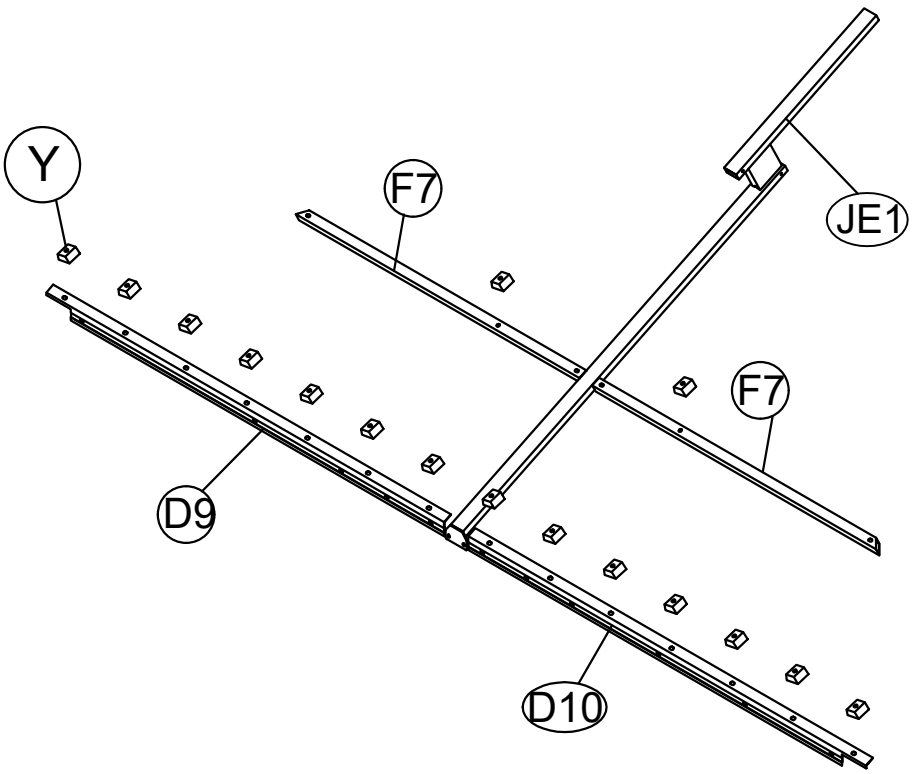

<15>

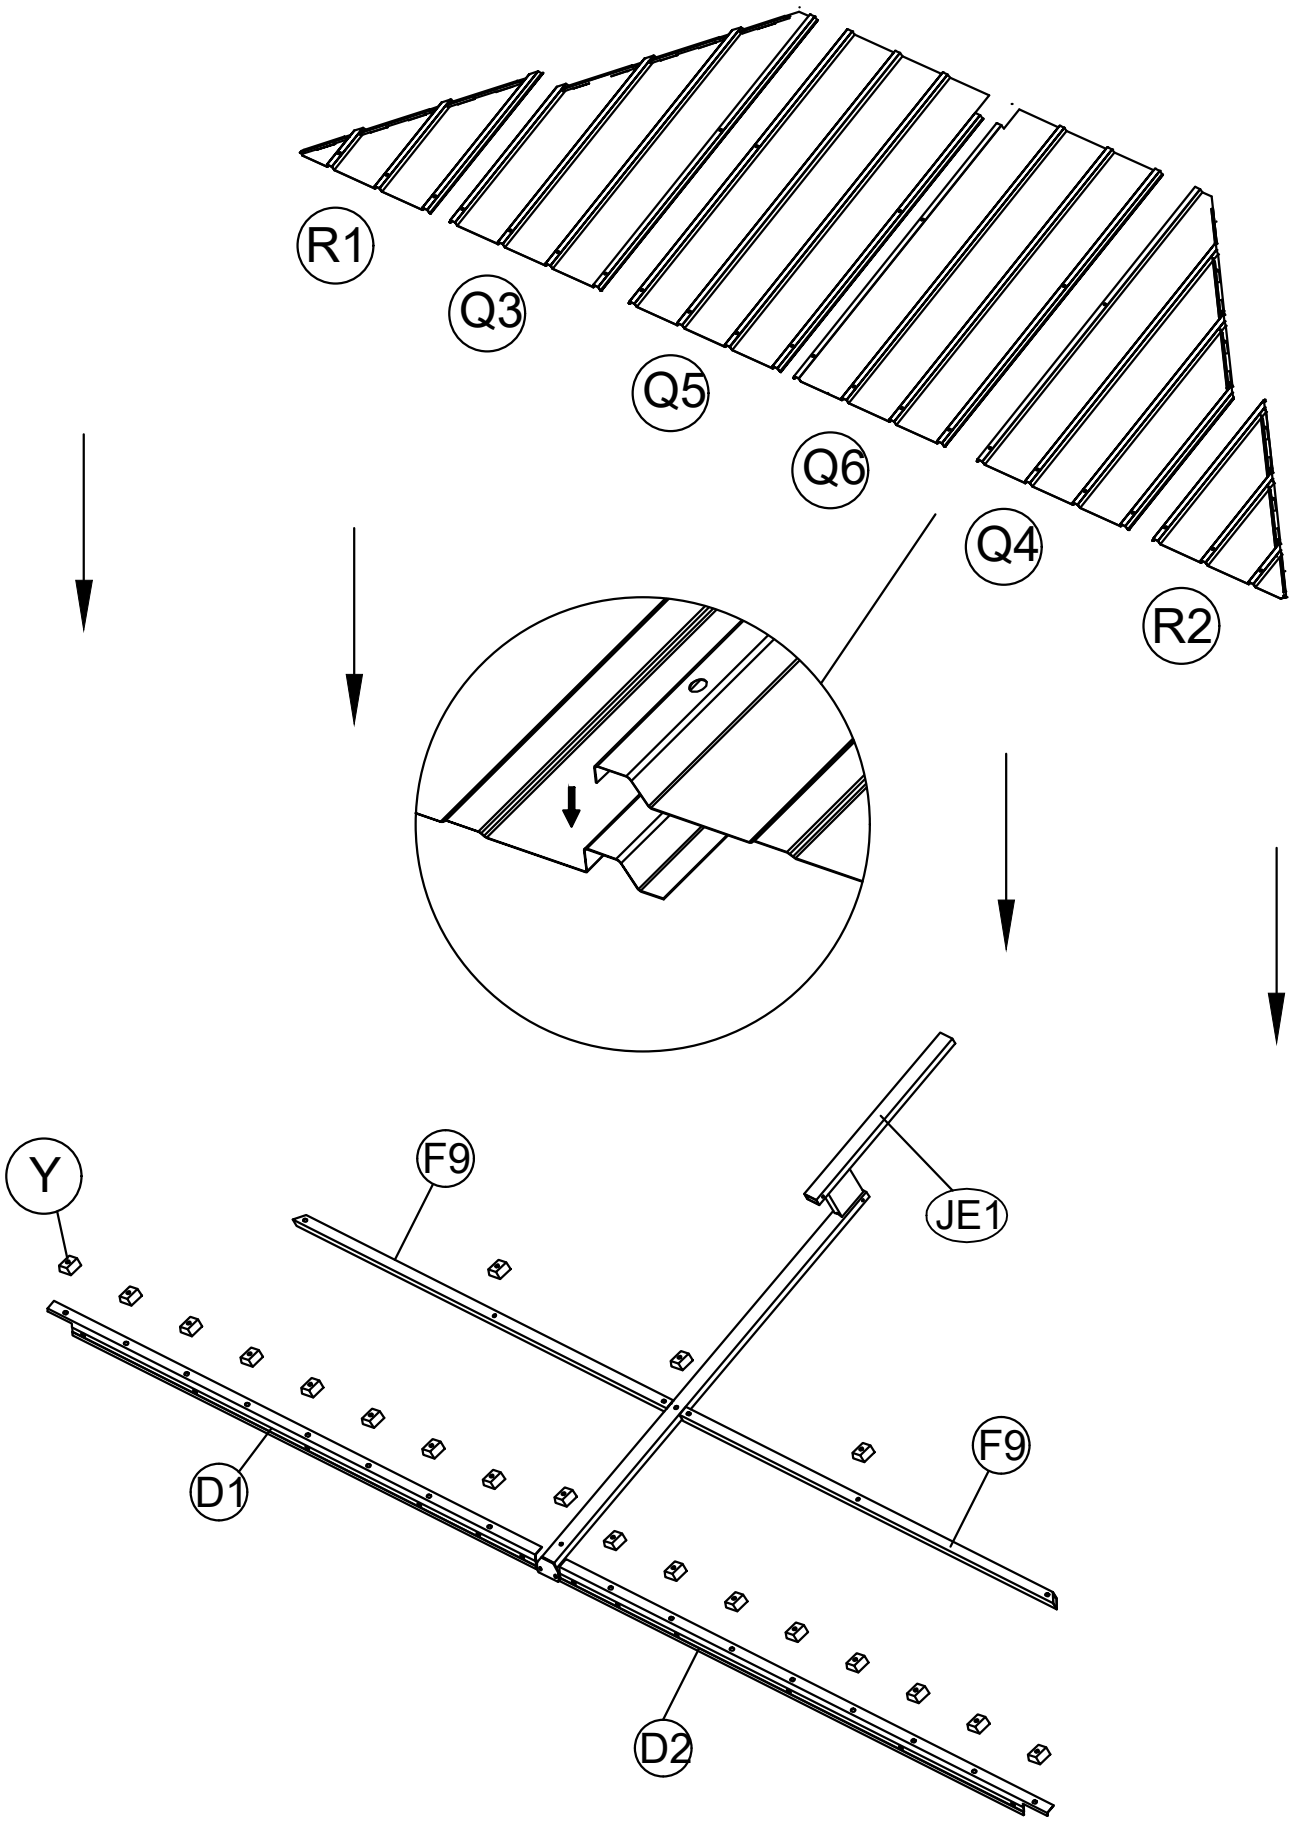

M6x25

2 64x

M6x50

5 8x

M6

10 68x


M6

19 72x


Rubber Gasket

23 72x


Y 72x

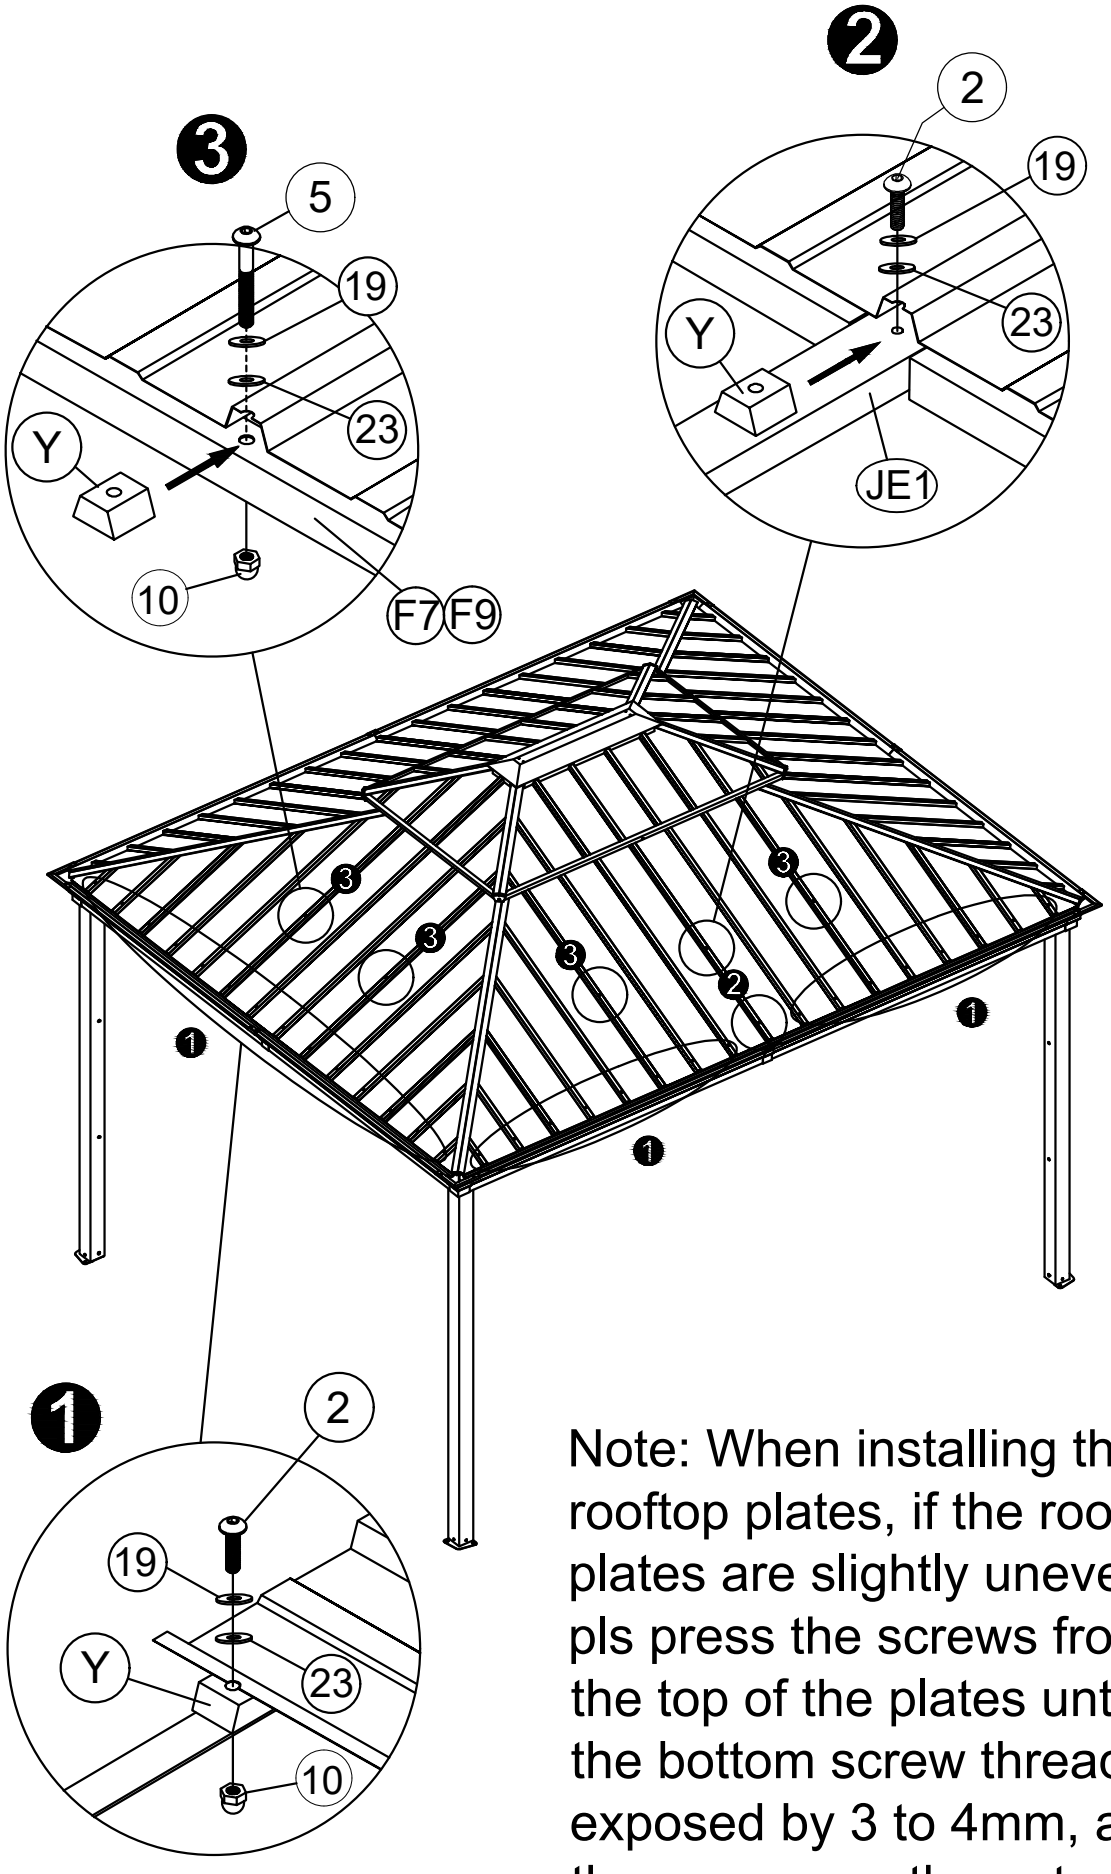

Note: When installing the rooftop plates, if the roof plates are slightly uneven, pls press the screws from the top of the plates until the bottom screw thread is exposed by 3 to 4mm, and then screw on the nut.

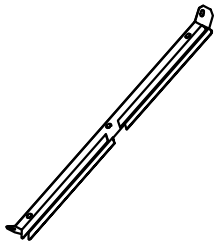


I1 2x

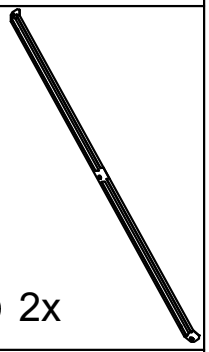


I9 2x



N 4x



V1 2x

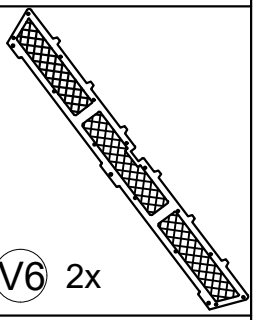

V6 2x



M6x15

1 8x



M6x10


7 8x





M6

10 8x

26

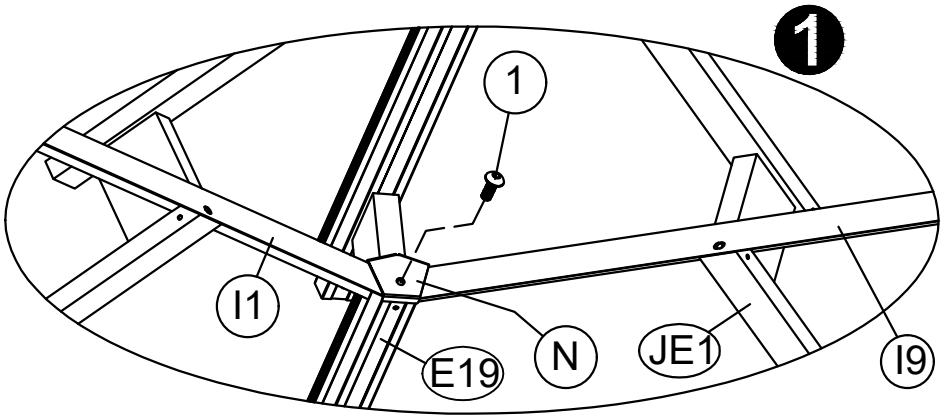

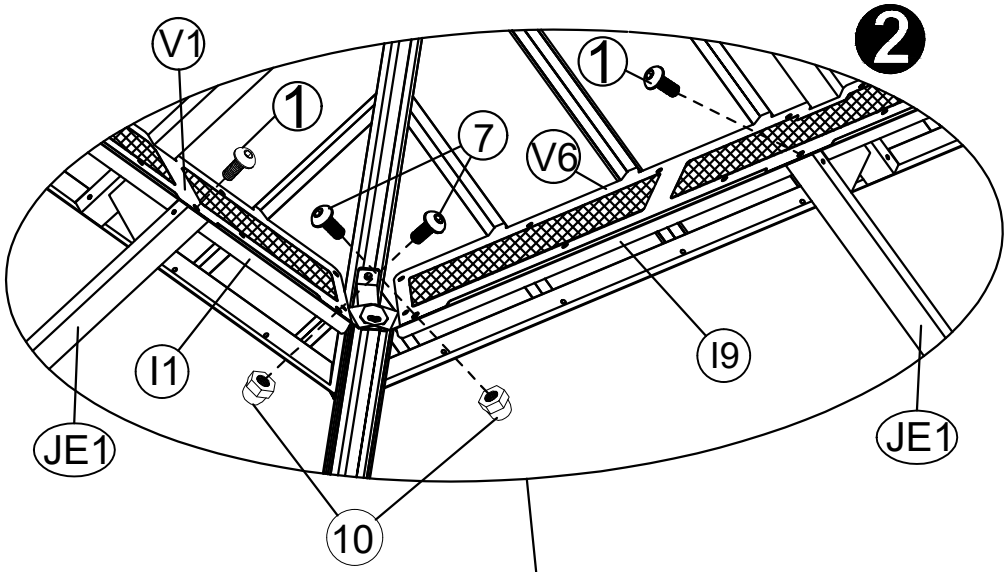


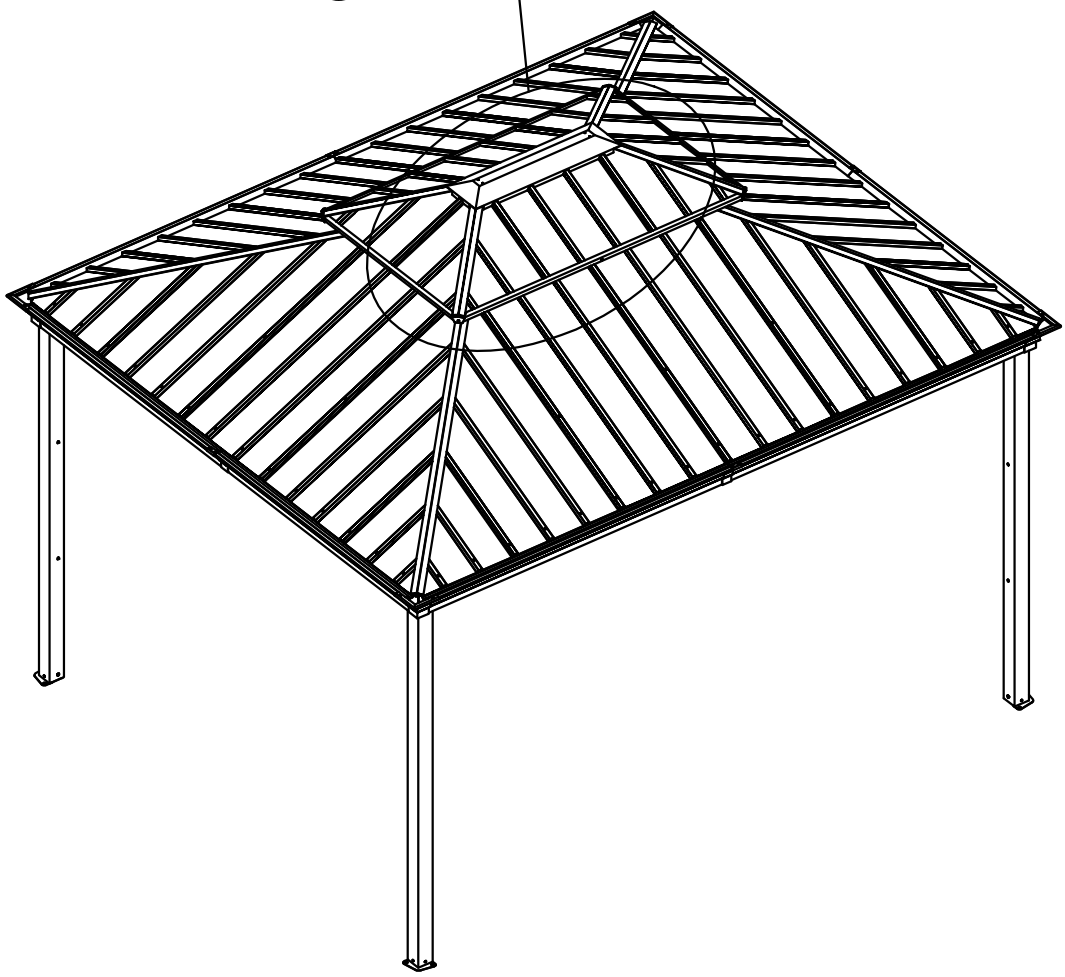



<18>


AB 2x

For component AB, repeat two times.

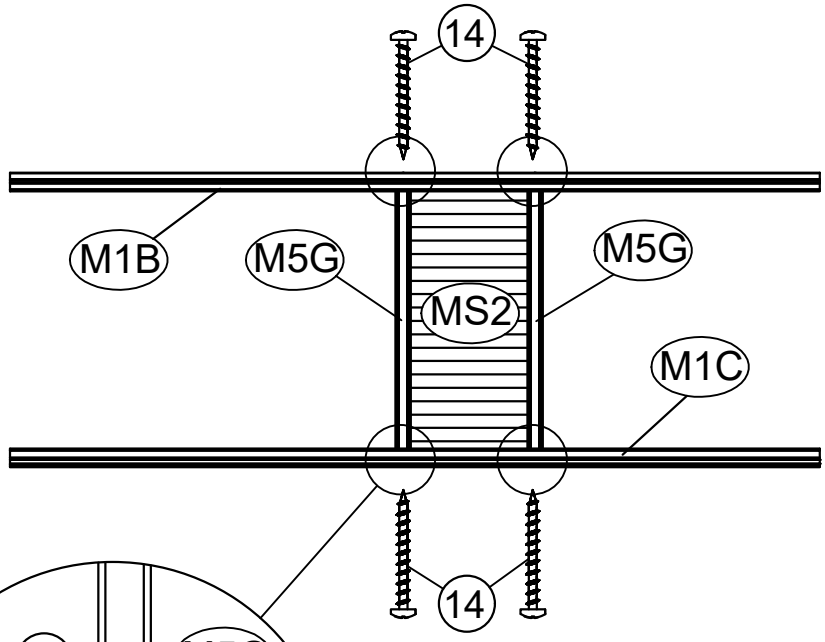

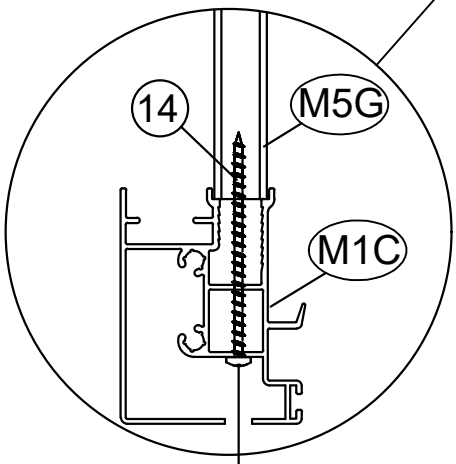

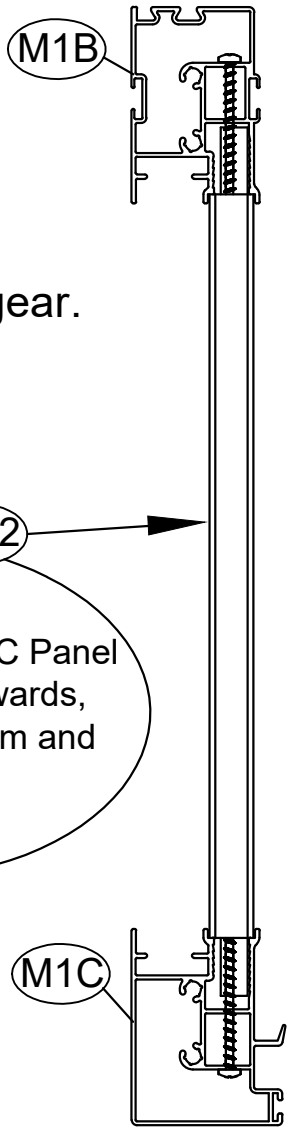


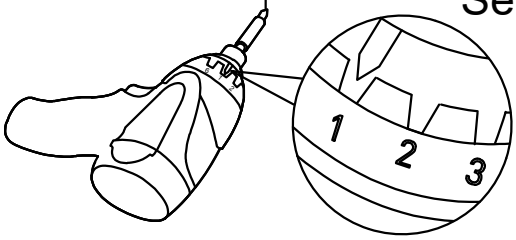


Select the low gear.

With the side of the PC Panel with text facing outwards, tear the protective film and installing.


The door frame installation template on pages 27 to 33 is displayed. All subsequent door frames follow this template.

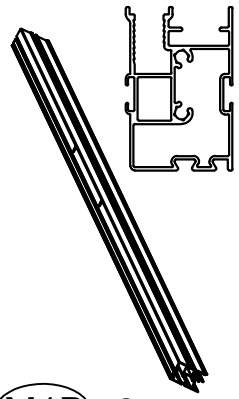


M1B 2x

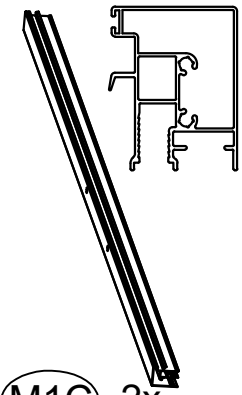


M1C 2x

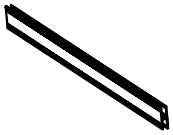

M5G 4x




MS2 2x

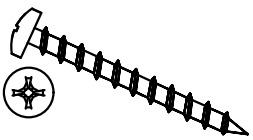


M4x50


14 8x

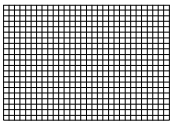

M1S 2x

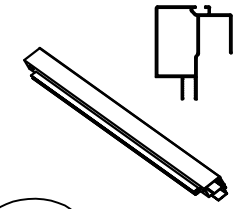

M4K 2x





M4x20

12 8x

<19>


For component AB, repeat two times. AB 2x

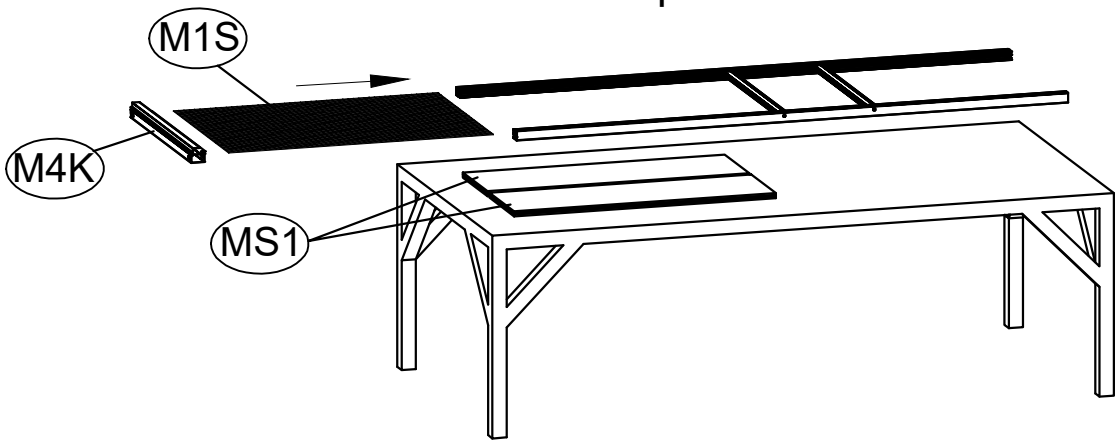

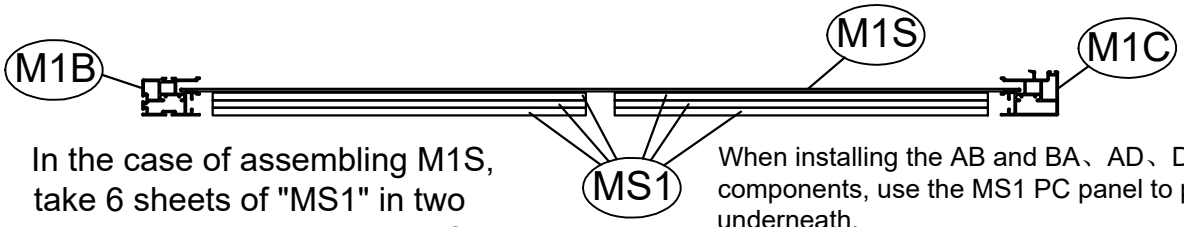

In the case of assembling M1S, take 6 sheets of "MS1" in two piles and drain the bottom, lift the "M1S".

When installing the AB and BA、AD、DA components, use the MS1 PC panel to pad underneath.
When installing the AC and CA 、AE、EA components, use the MS5 PC panel to pad underneath.

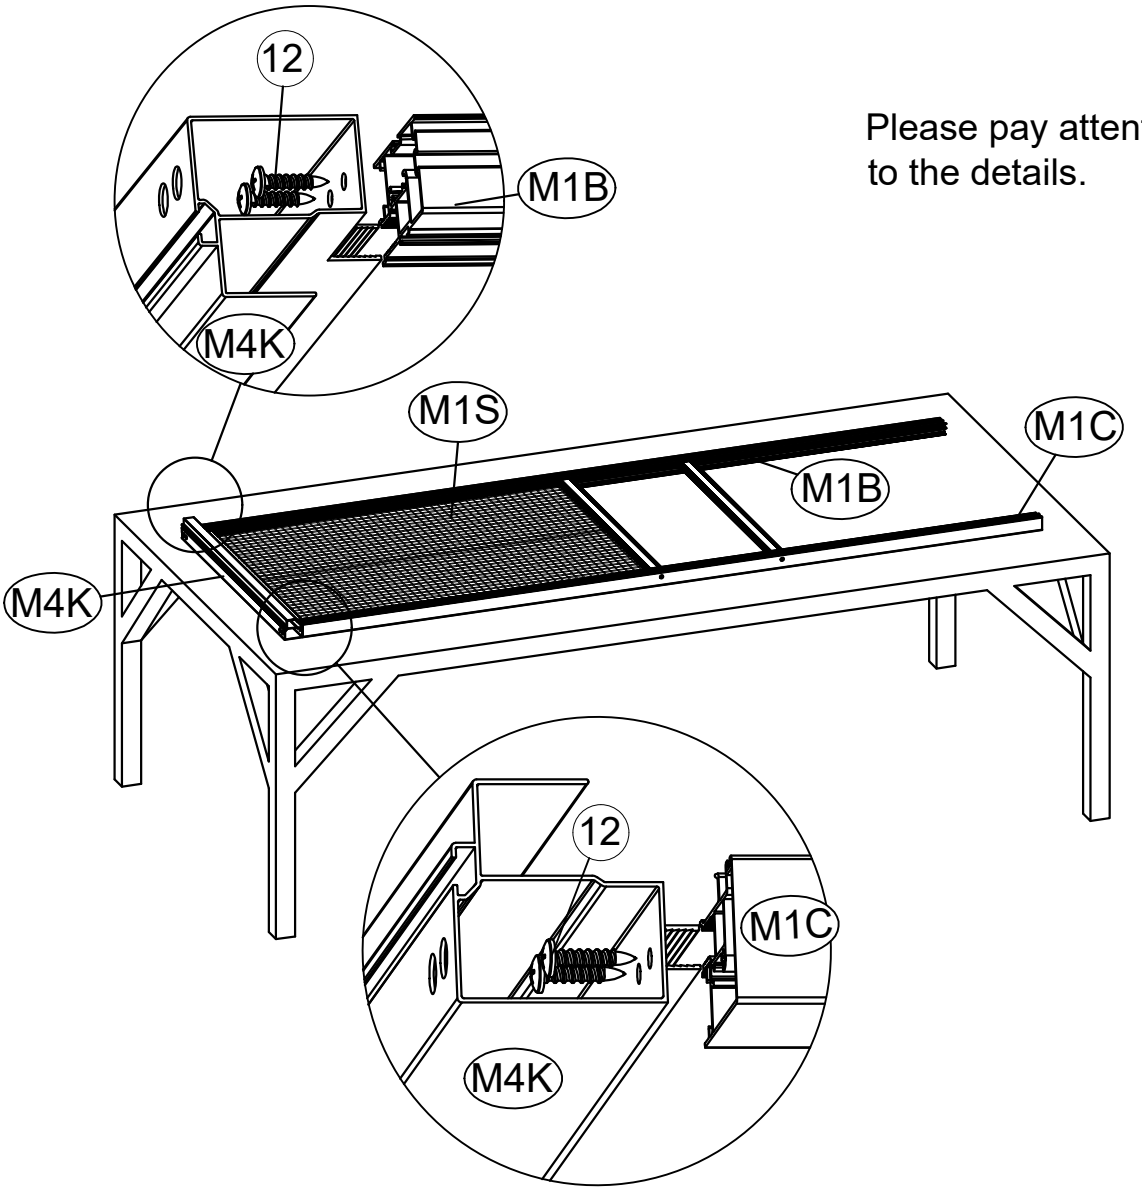


Please pay attention to the details.


<20>

AB 2x

For component AB, repeat two times.

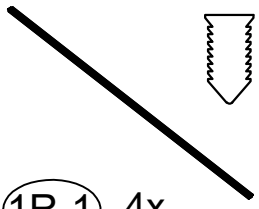



1R-1 4x

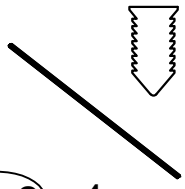



1R-2 4x


Before installing the parts (1R-1 and 1R-2), move the gauze by hand to ensure makes enough space around the gauze.

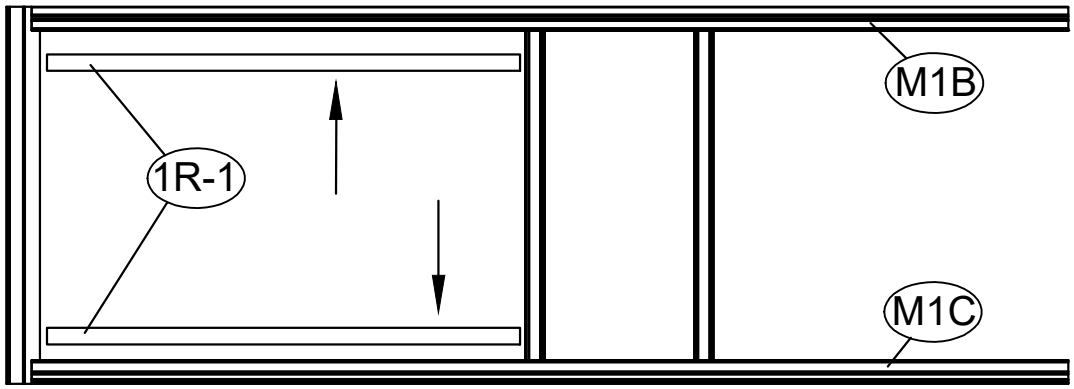

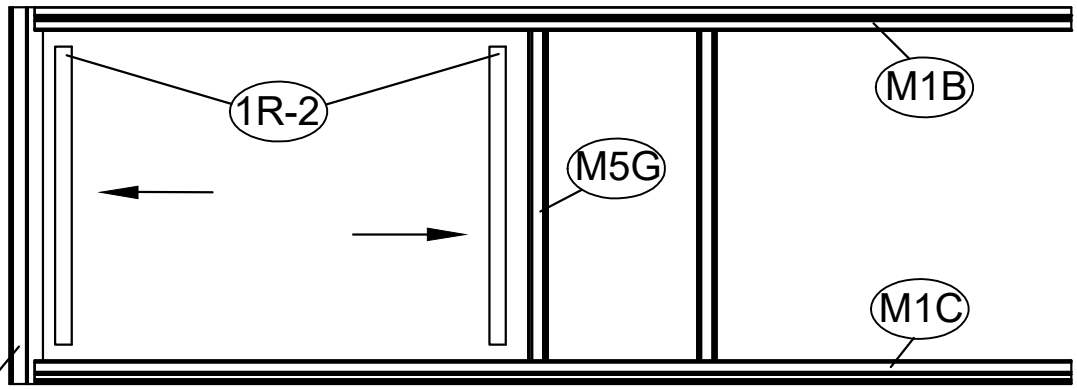

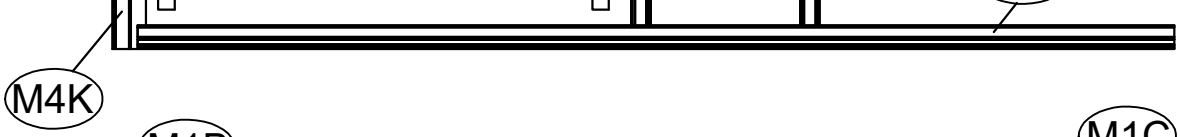


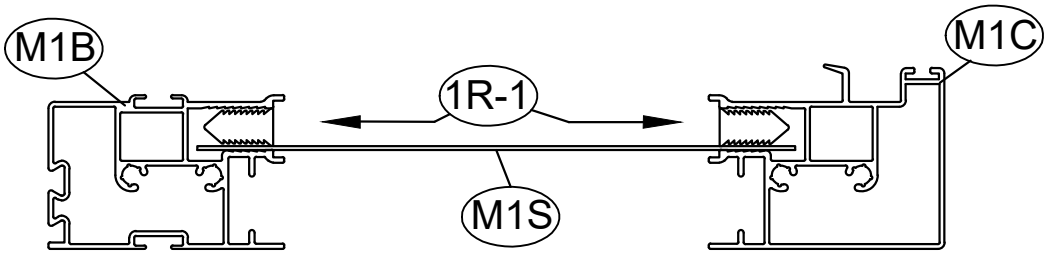

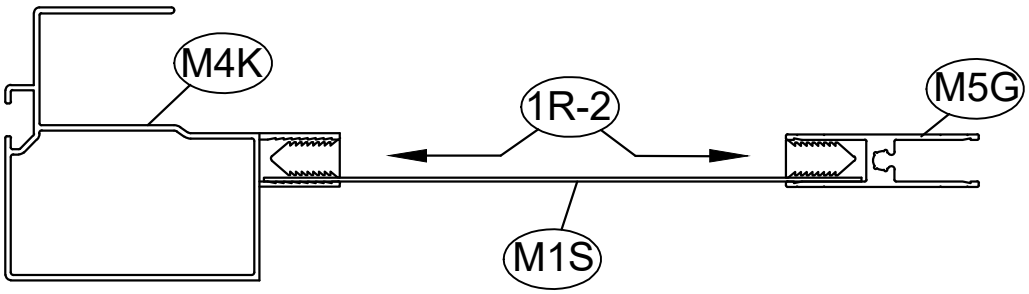


<21>

This picture is for subsequent reference

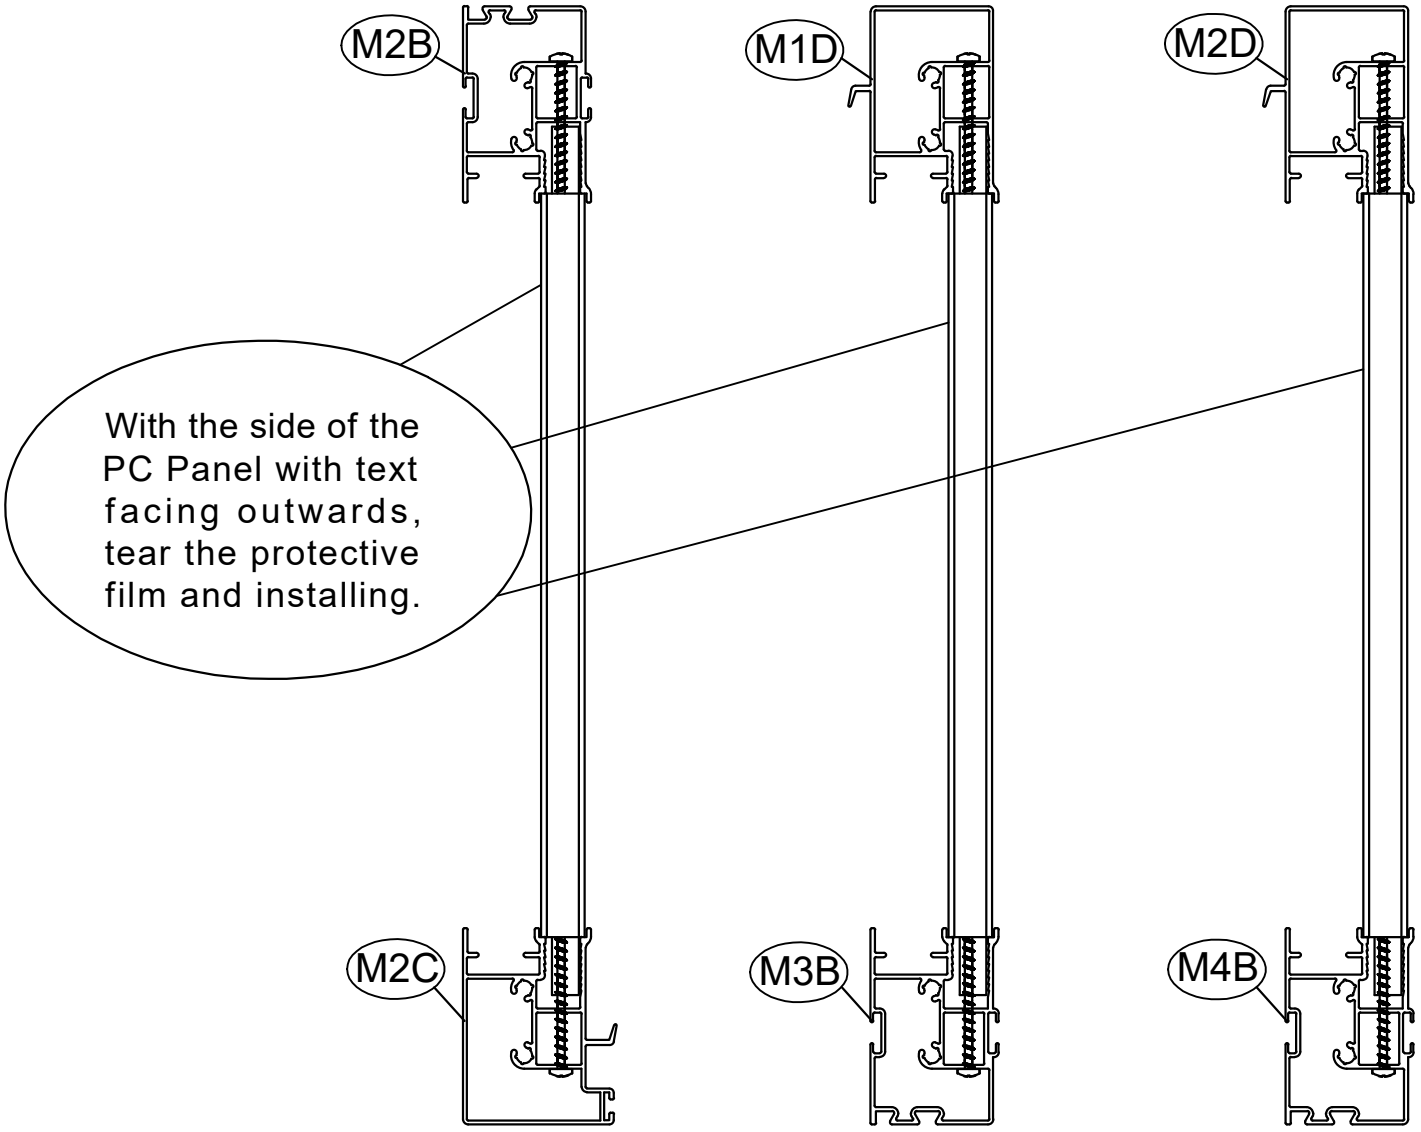


<22>

This picture is for subsequent reference.

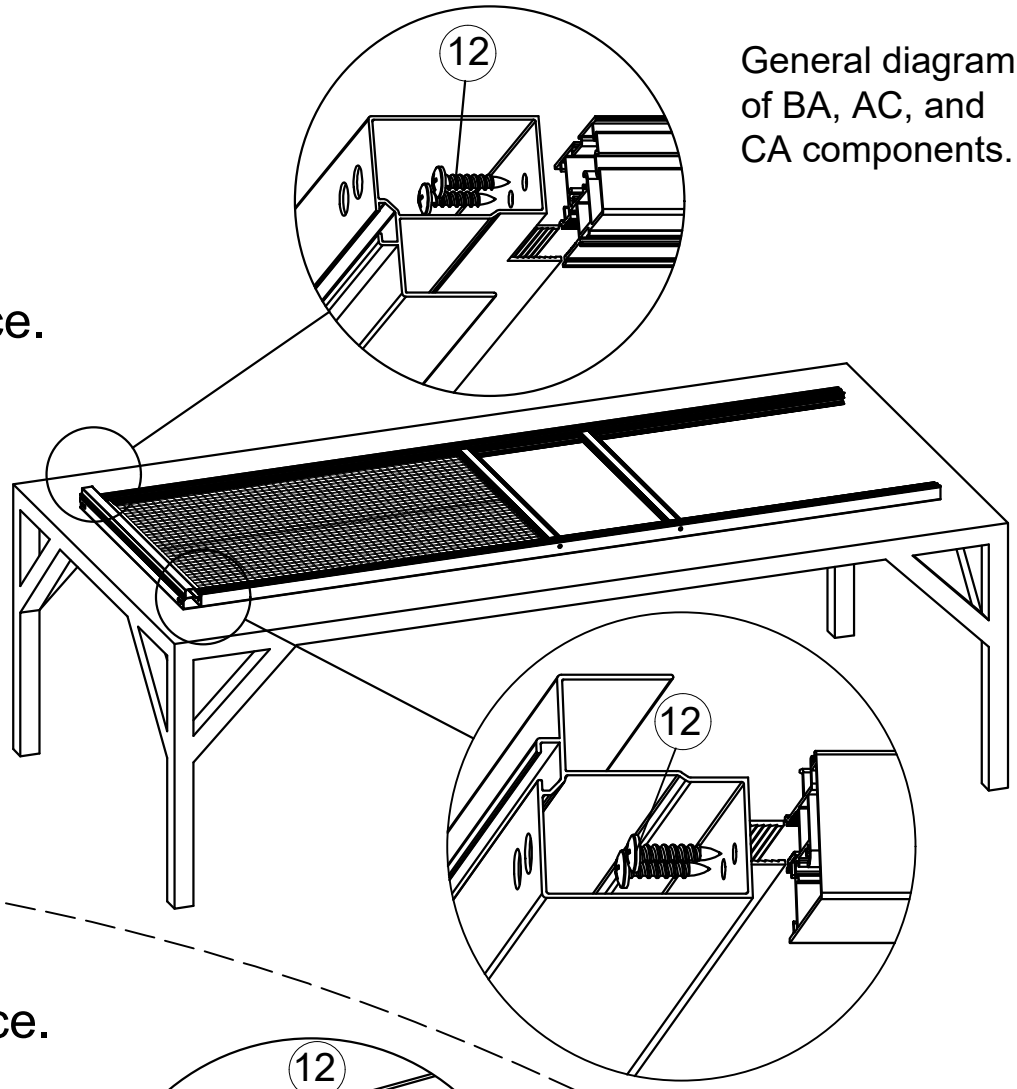

General diagram of BA, AC, and CA components.

This picture is for subsequent reference.

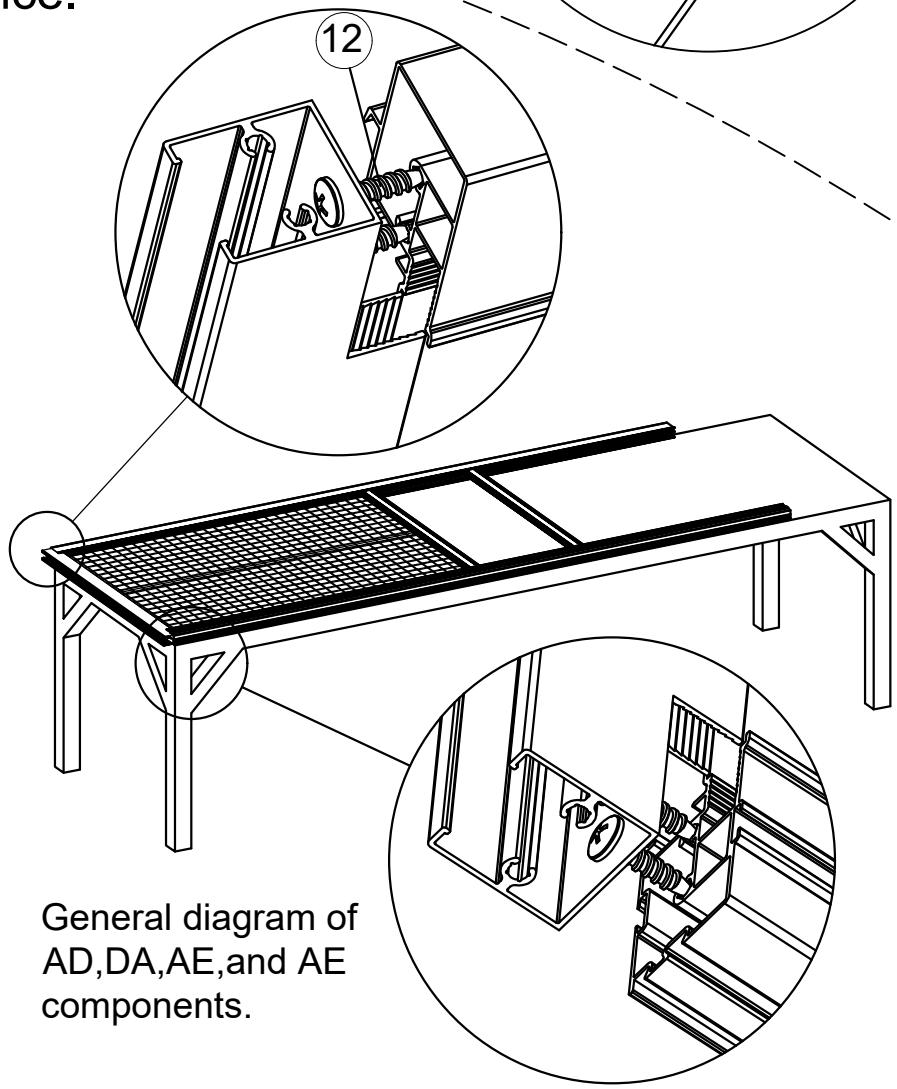


General diagram of AD,DA,AE,and AE components.

<23>

Door frame BA, AC, CA, AD, DA, AE, and EA installation follow pages 27 to 33


M4K	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M2B	2x
M2C	2x
14	8x
12	8x

For component BA, repeat two times. BA 2x

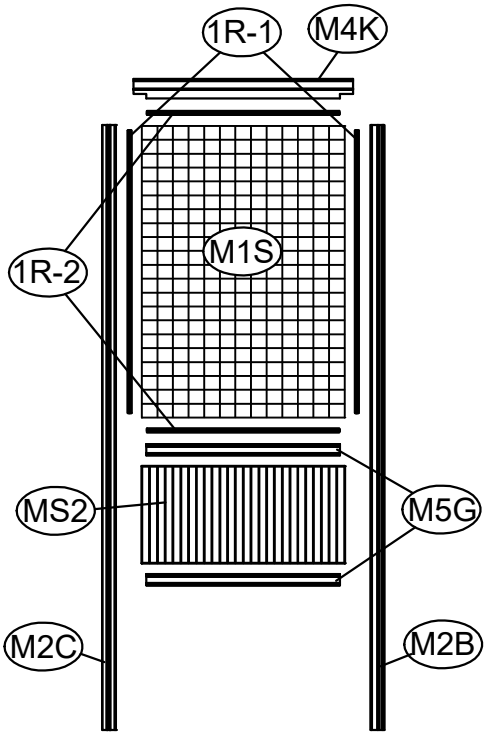


M5K	2x
1R-1	4x
1R-3	4x
M6G	4x
M2S	2x
MS6	2x
M1B	2x
M1C	2x
14	8x
12	8x

For component AC, repeat two times. AC 2x

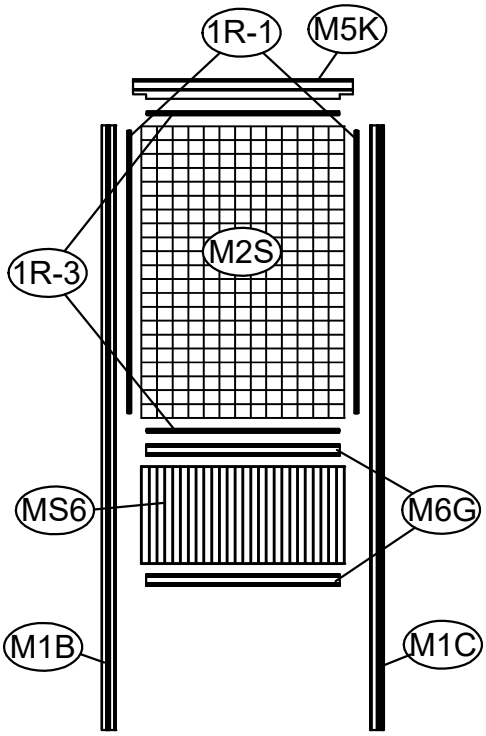

M5K	2x
1R-1	4x
1R-3	4x
M6G	4x
M2S	2x
MS6	2x
M2B	2x
M2C	2x
14	8x
12	8x

For component CA, repeat two times. CA 2x

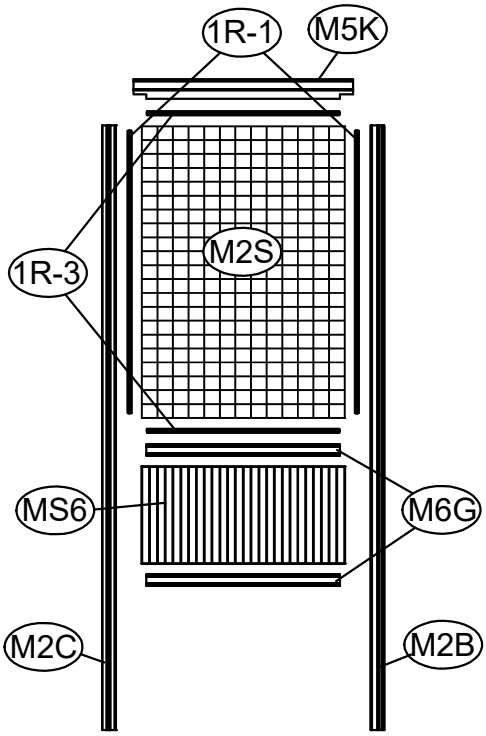


Component AB is symmetric
BA, and AC is symmetric CA.

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M3B	2x
M1D	2x
14	8x
12	8x

<24>

AD 2x


For component AD, repeat two times.

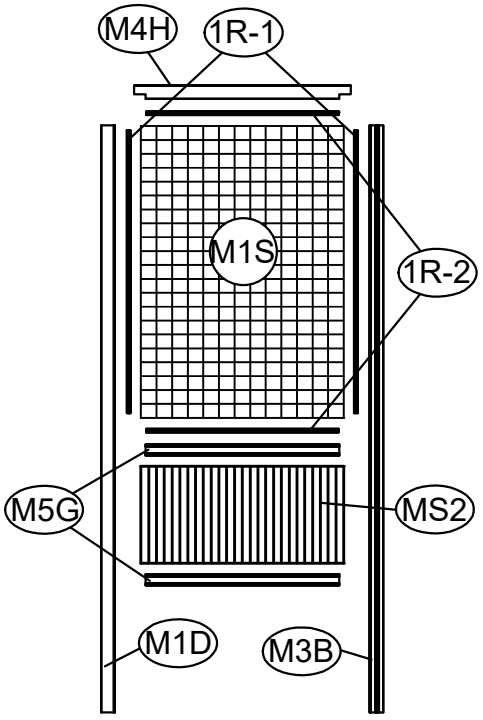

M4H	2x
1R-1	4x
1R-2	4x
M5G	4x
M1S	2x
MS2	2x
M4B	2x
M2D	2x
14	8x
12	8x

For component DA, repeat two times.


DA 2x

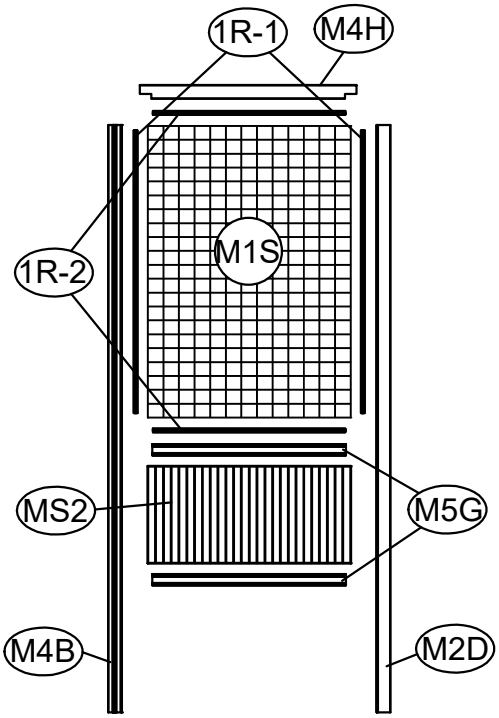

M5H	2x
1R-1	4x
1R-3	4x
M6G	4x
M2S	2x
MS6	2x
M3B	2x
M1D	2x
14	8x
12	8x

For component AE, repeat two times.


AE 2x

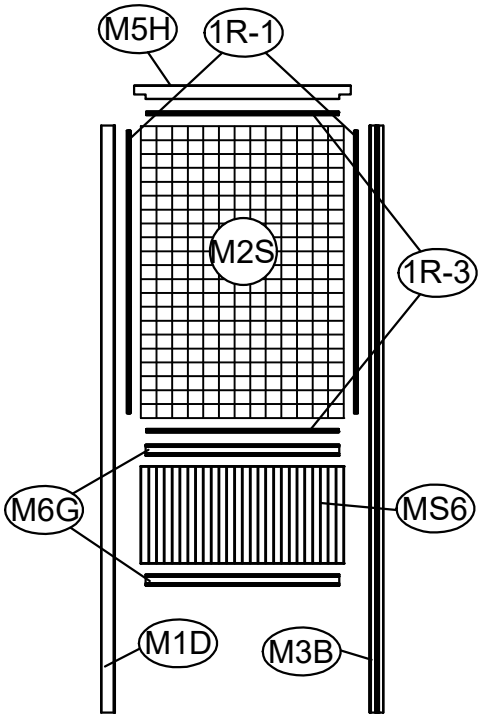


M5H	2x
1R-1	4x
1R-3	4x
M6G	4x
M2S	2x
MS6	2x
M4B	2x
M2D	2x
14	8x
12	8x

For component EA, repeat two times.


EA 2x

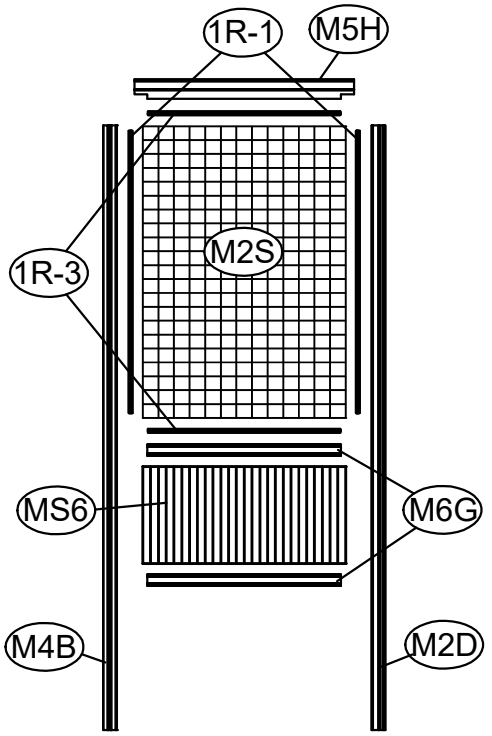


Component AD is symmetric DA, and AE is symmetric EA.

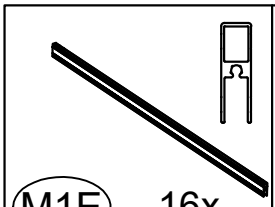


M1E 16x

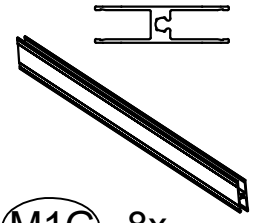


M1G 8x

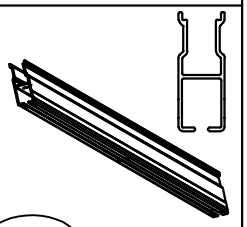

M4L 16x



MS1 16x




M4x35


13 48x

For component AF, repeat eight times.

AF 8x

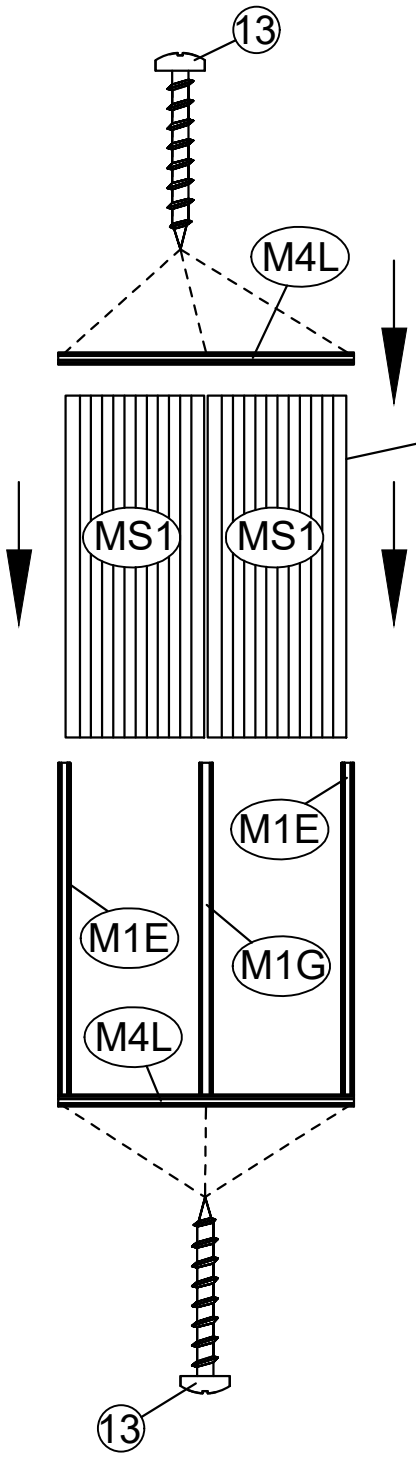

With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

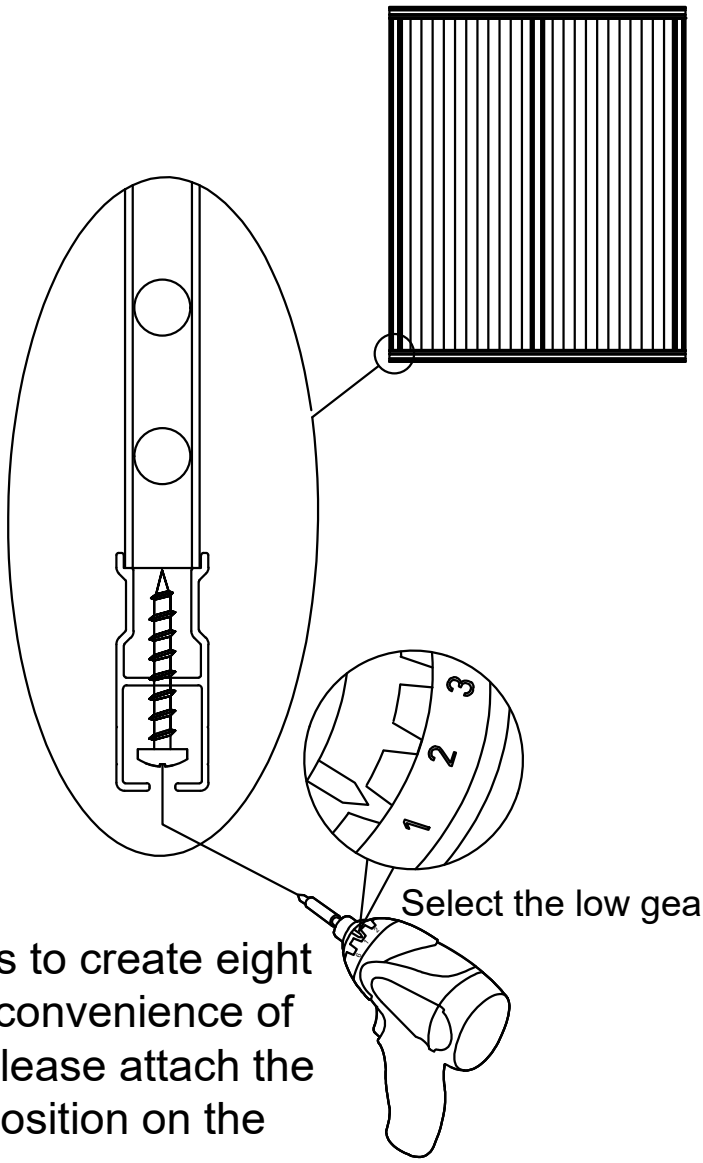

Select the low gear.

Repeat the previous steps to create eight AF components. For the convenience of the following assembly, please attach the letter AF in a prominent position on the front.

M1E 16x

M1G 8x

M5L 16x


MS5 16x

M4x35


13 48x

For component AG, repeat eight times.

AG 8x

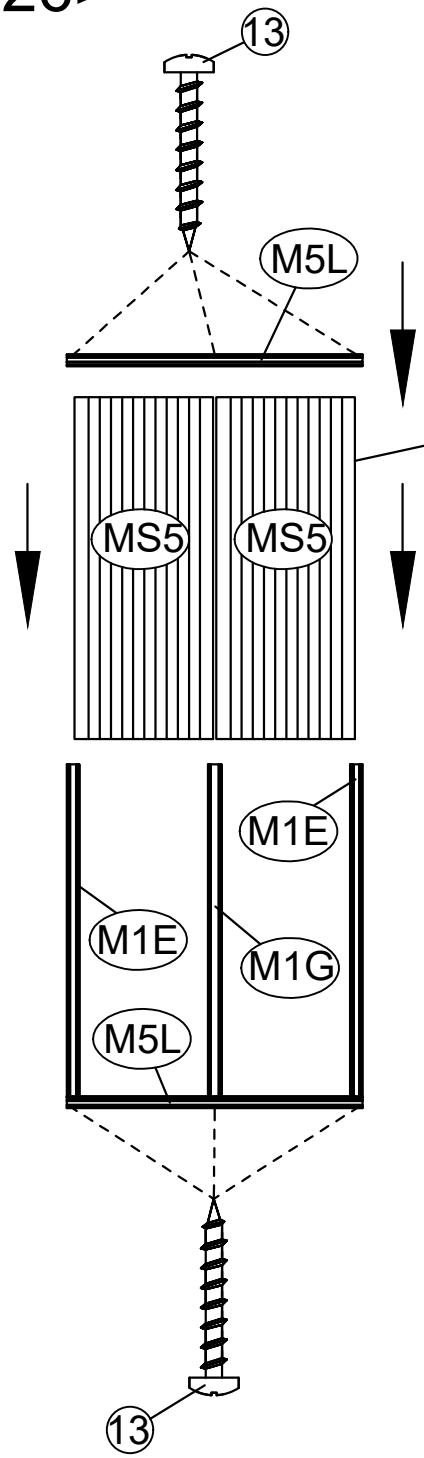


With the side of the PC panel with the text facing outward, tear off the protective film and installing. After installation, be sure to leave the front side unchanged for the next step.

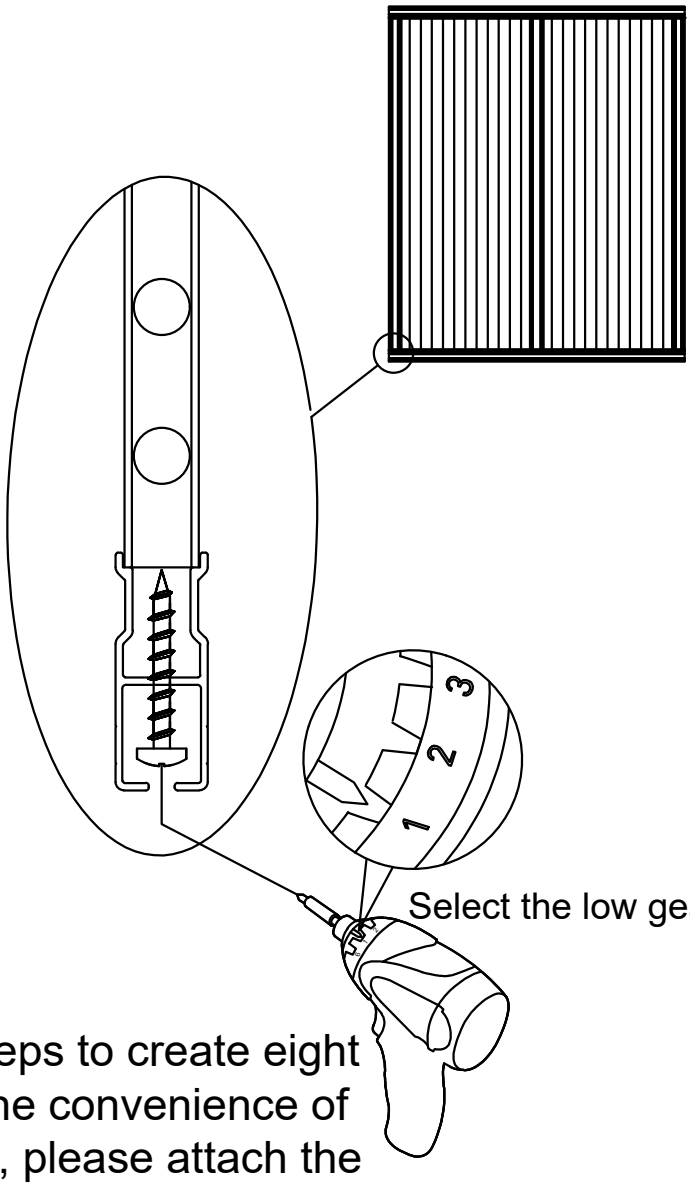

Select the low gear.


Repeat the previous steps to create eight AG components. For the convenience of the following assembly, please attach the letter AG in a prominent position on the front.



MD1 64x



MD2 128x




MD3 32x


<27>

AF 8x

AG 8x

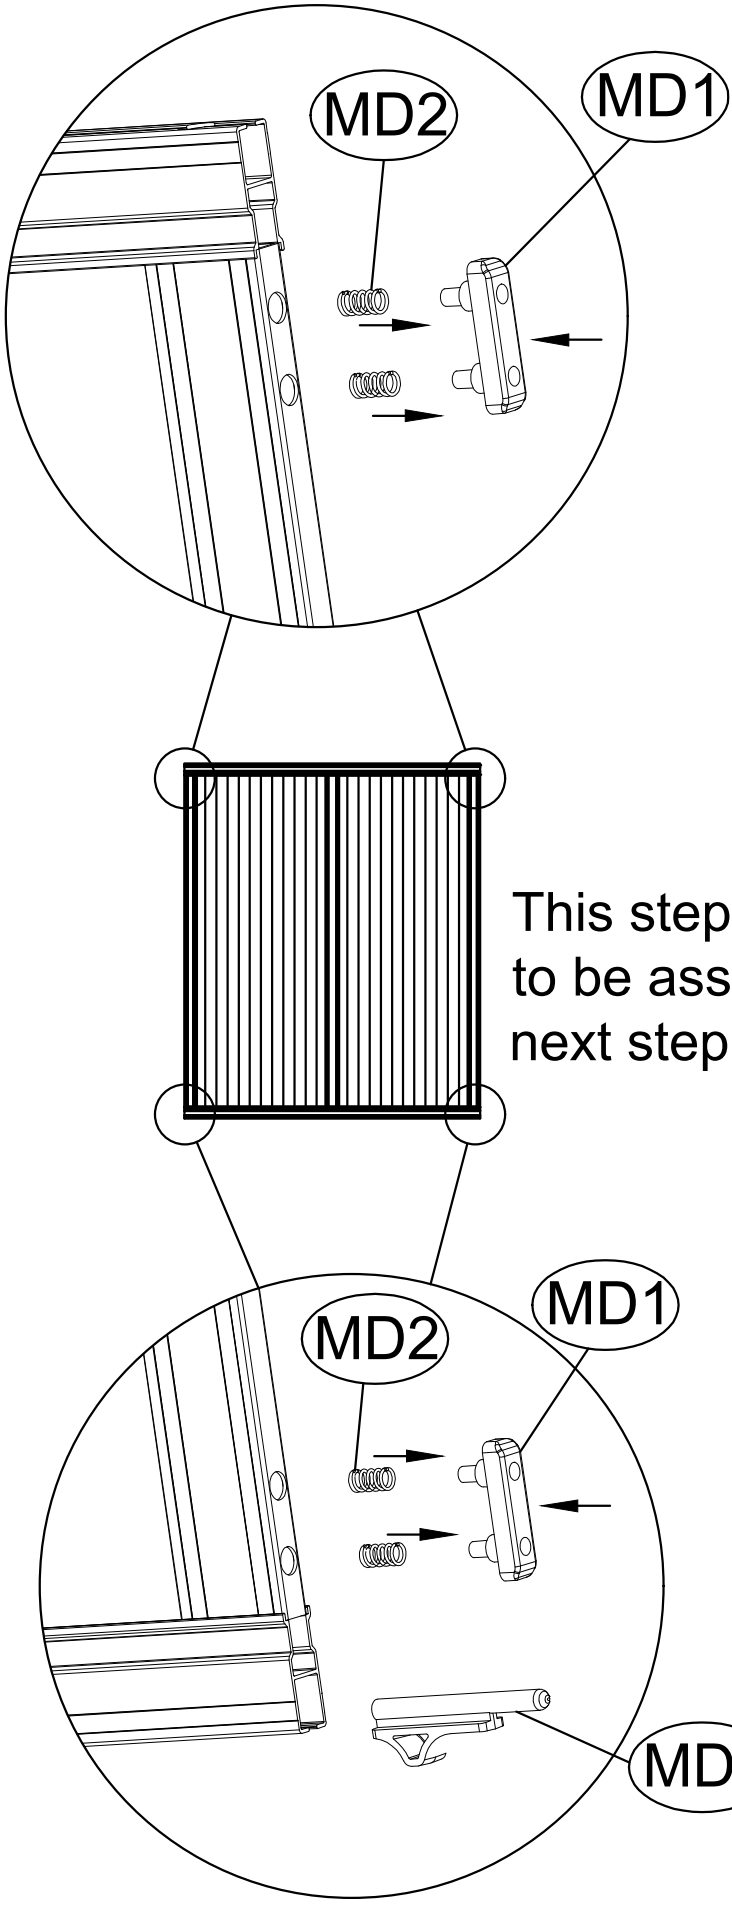


This step is recommended to be assembled with the next step together.

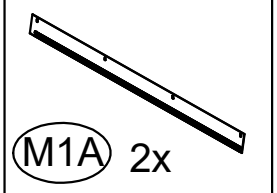


M1A 2x




M2A 2x

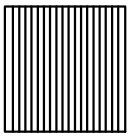

MS3 4x

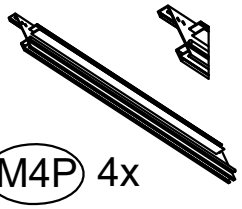


M4P 4x





M4x20


12 16x


AB 2x BA 2X

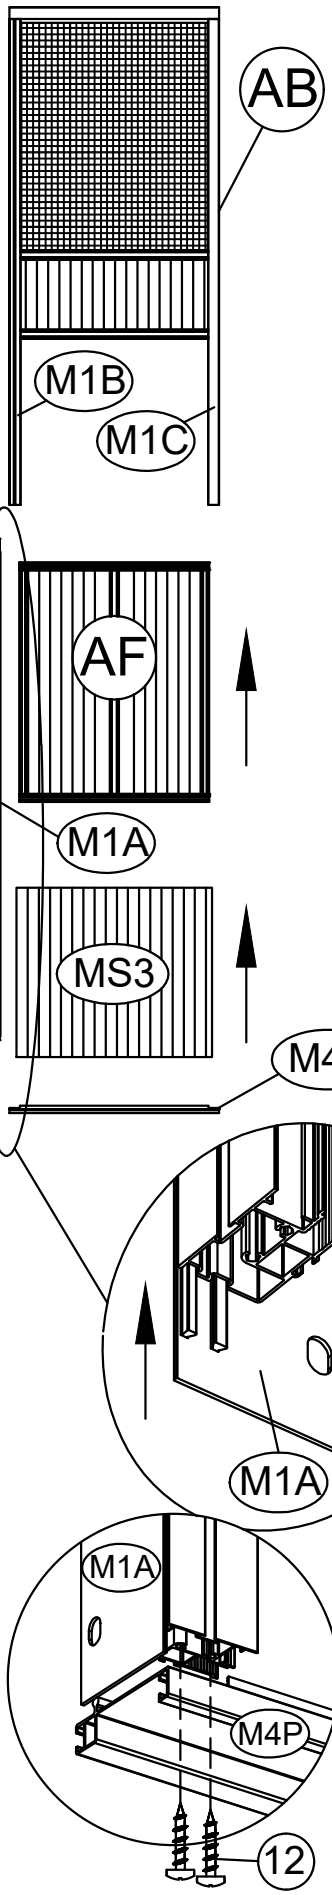

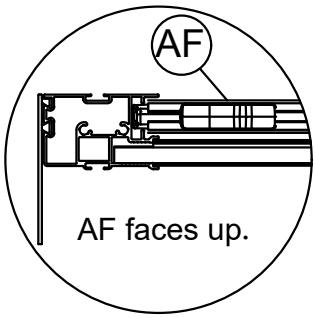


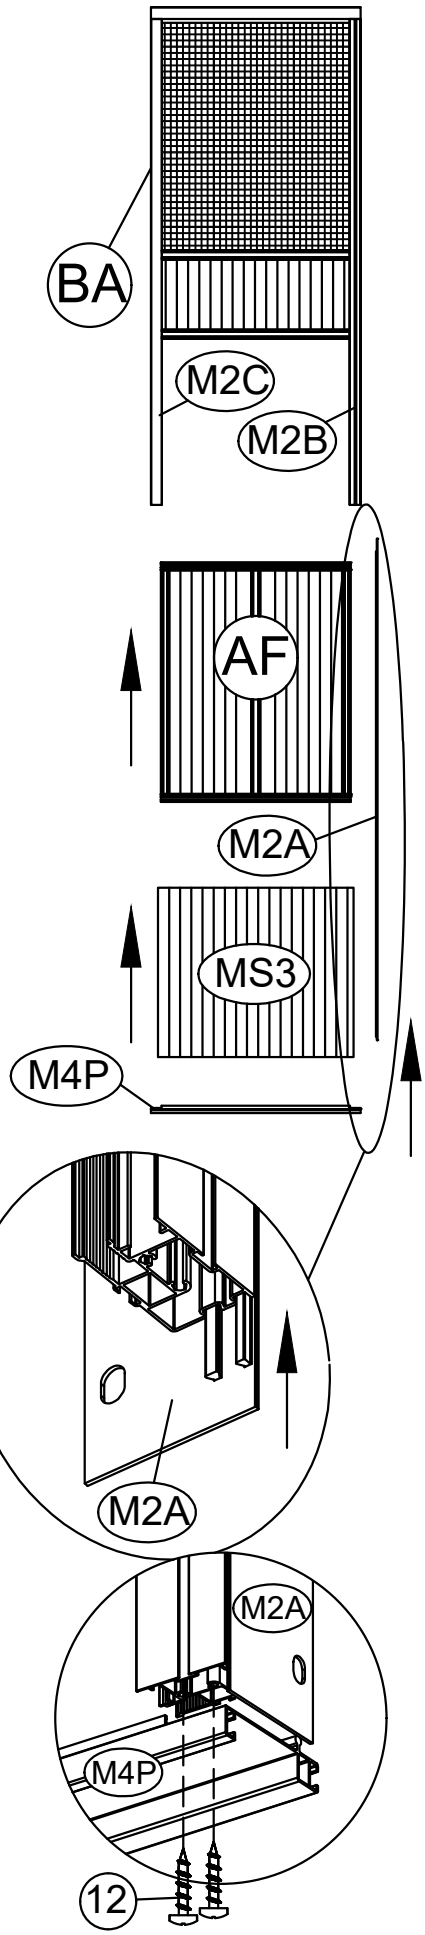

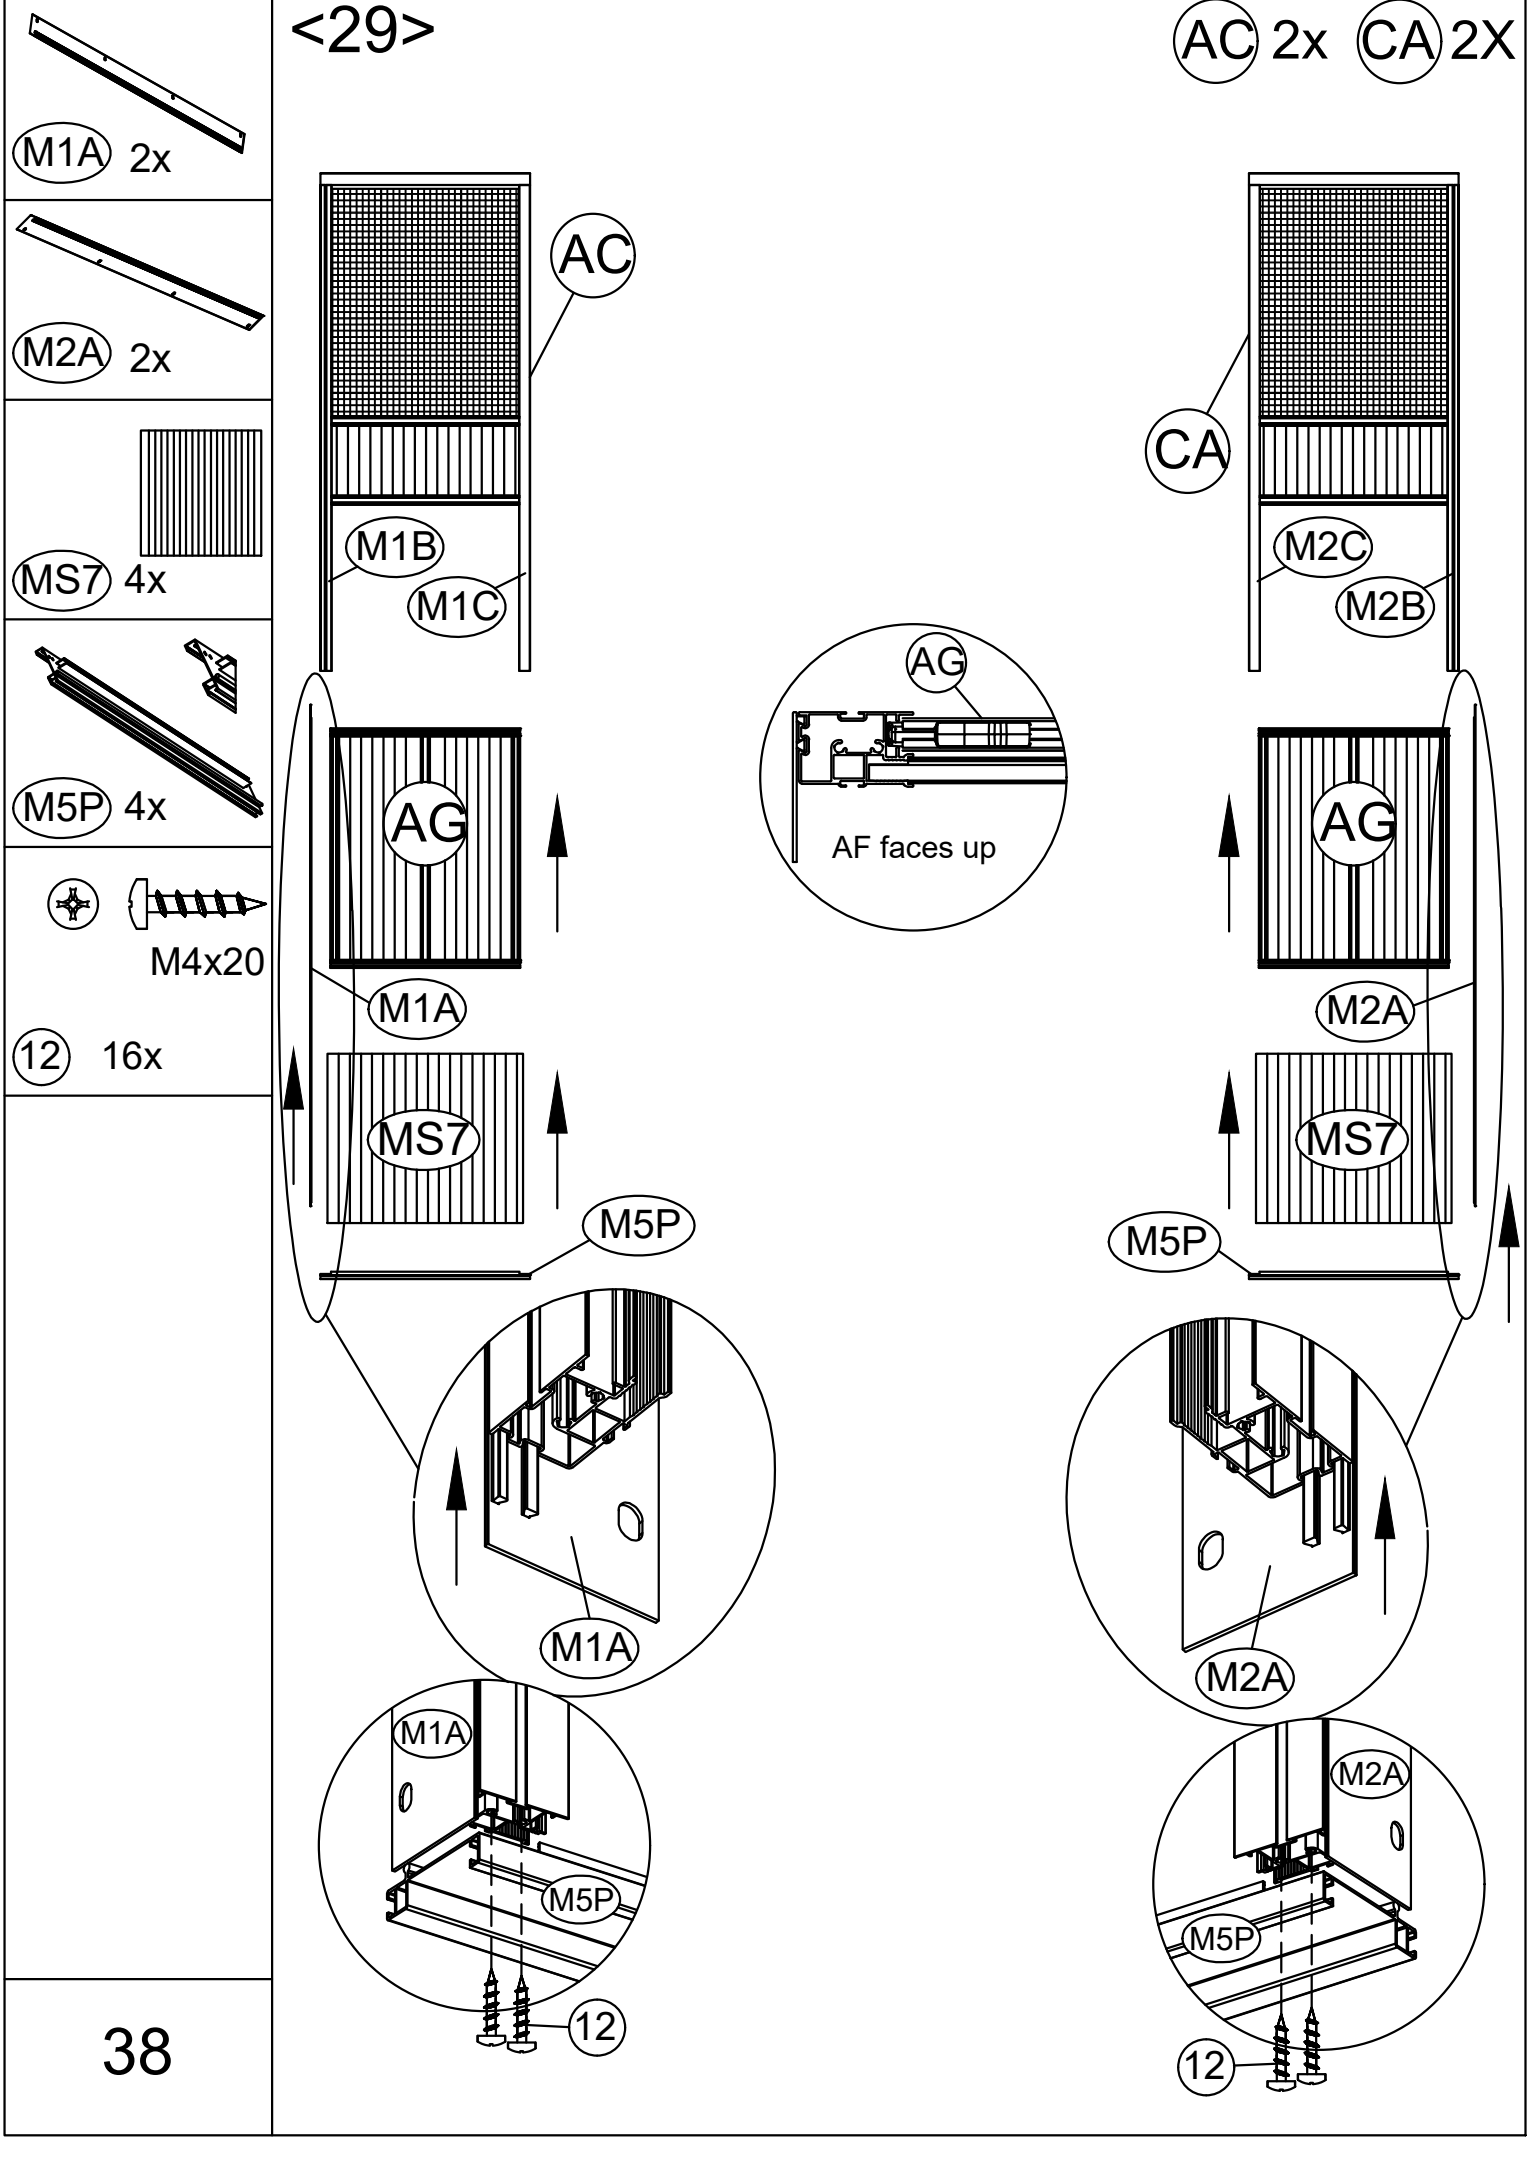

<29>
AC 2x
CA 2X
M1A 2x
M2A 2x
MS7 4x
M5P 4x
M4x20
12 16x
AC
CA
M1B
M1C
M2C
M2B
AG
AF faces up
M1A
M2A
MS7
M5P
12

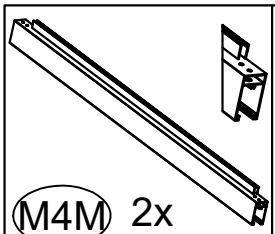

M4M 2x

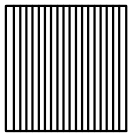

MS4 2x




M4x20

12 16x




MD5 4x



MD4 4x





4-1 4x





M4x35


13 4x

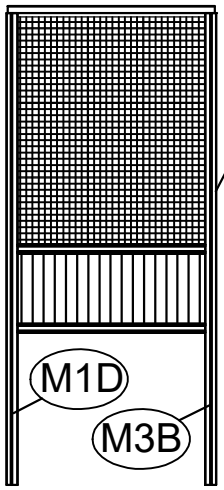

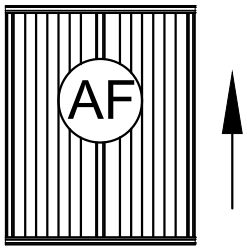


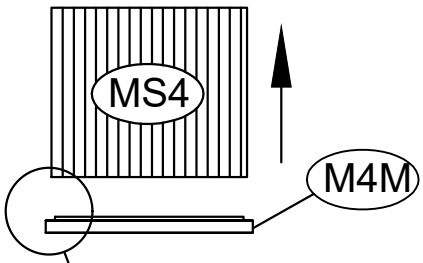

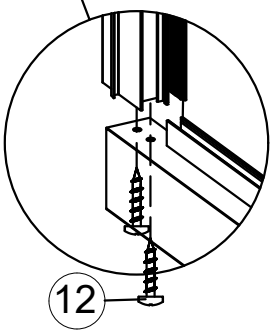

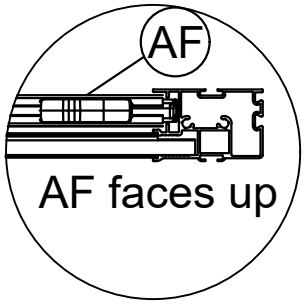

AD 2X

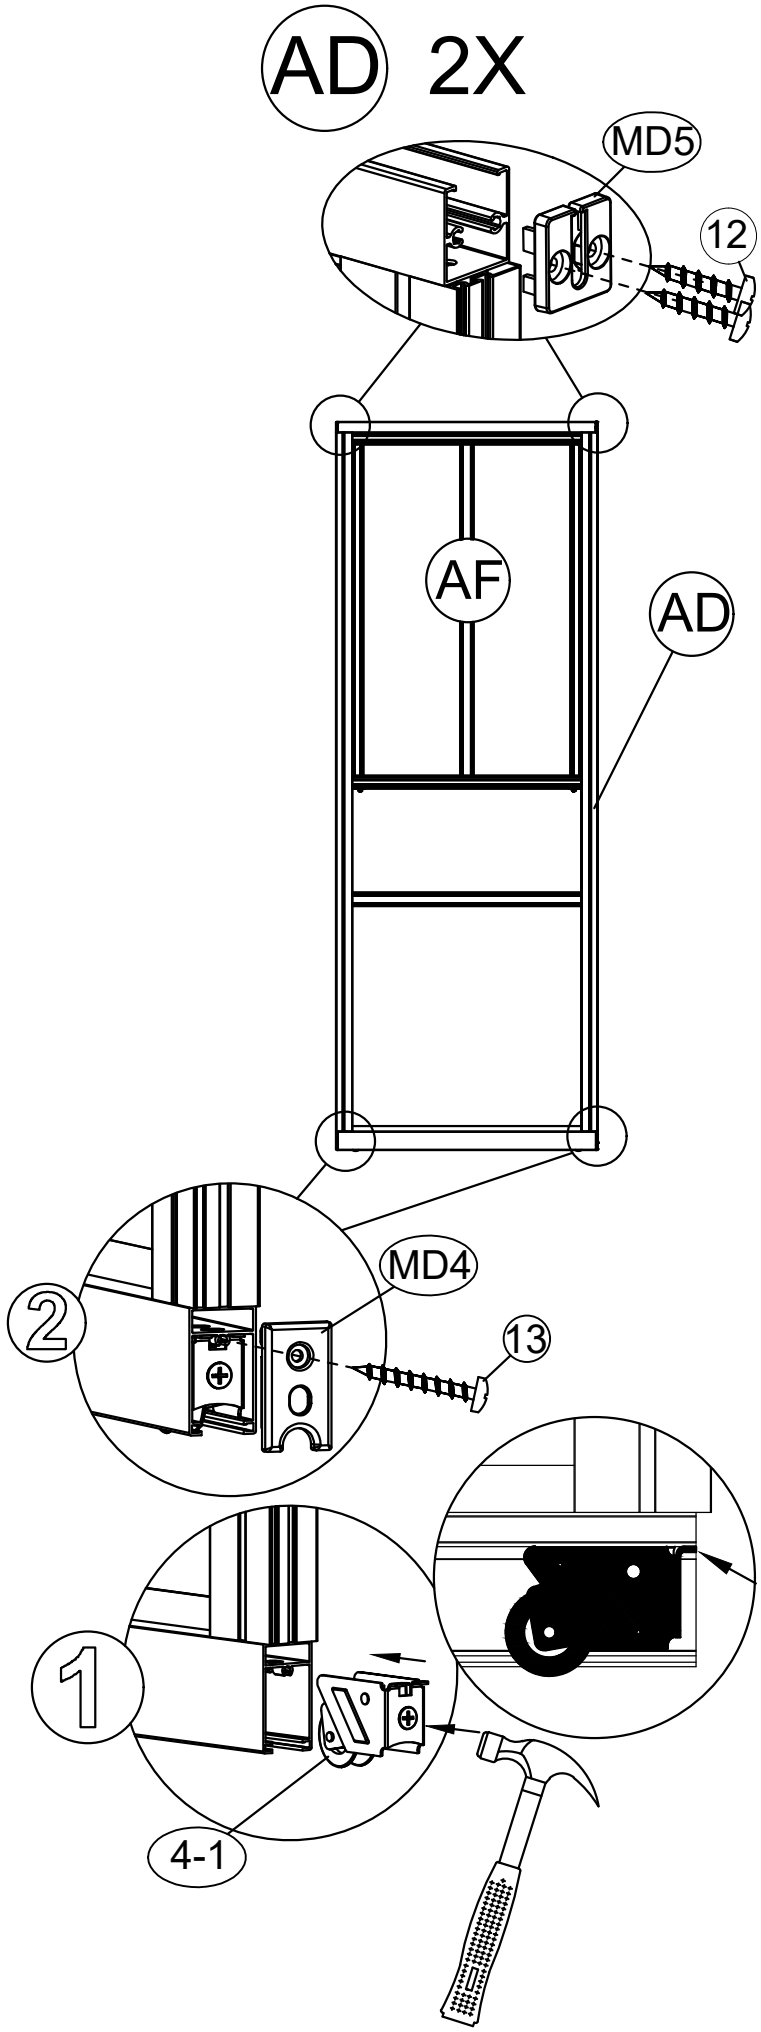


Tap gently so that the pulley is flush with the profile.


<31>

Door frame DA, AE, and EA installation follow pages 39 to 40.


M4M	2x
MS4	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

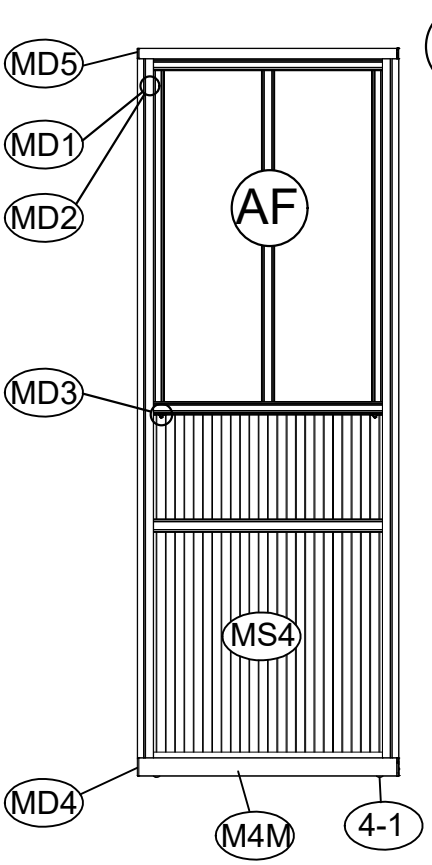

M5M	2x
MS8	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

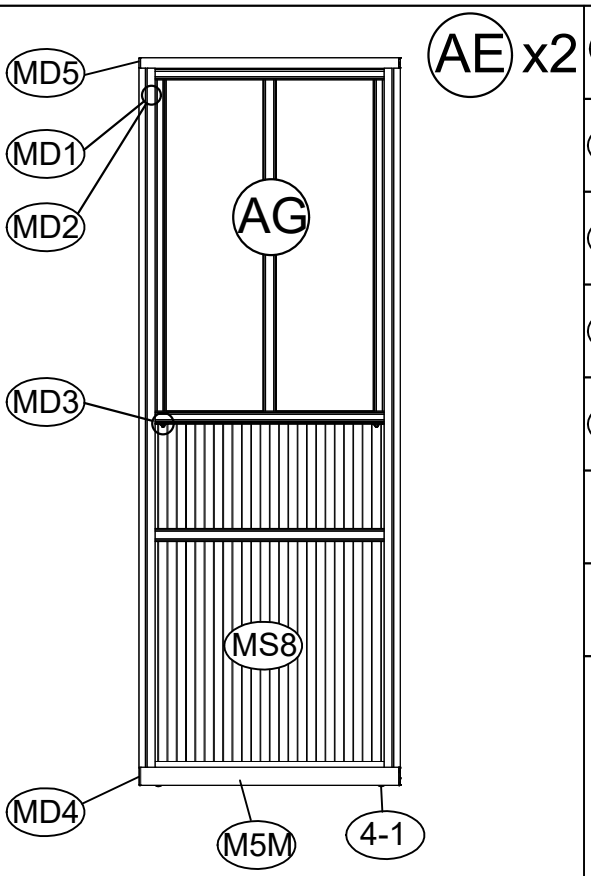


M5M	2x
MS8	2x
MD4	4x
MD5	4x
4-1	4x
12	16x
13	4x

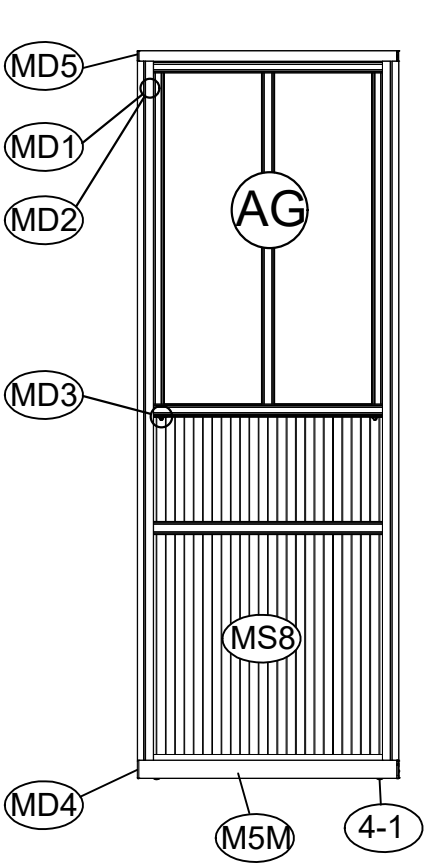

Component AD is symmetric DA, AE is symmetric EA.




5-1 2x

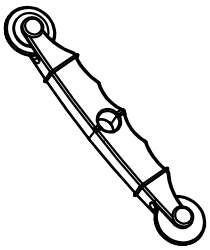


24 1x


<32> Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

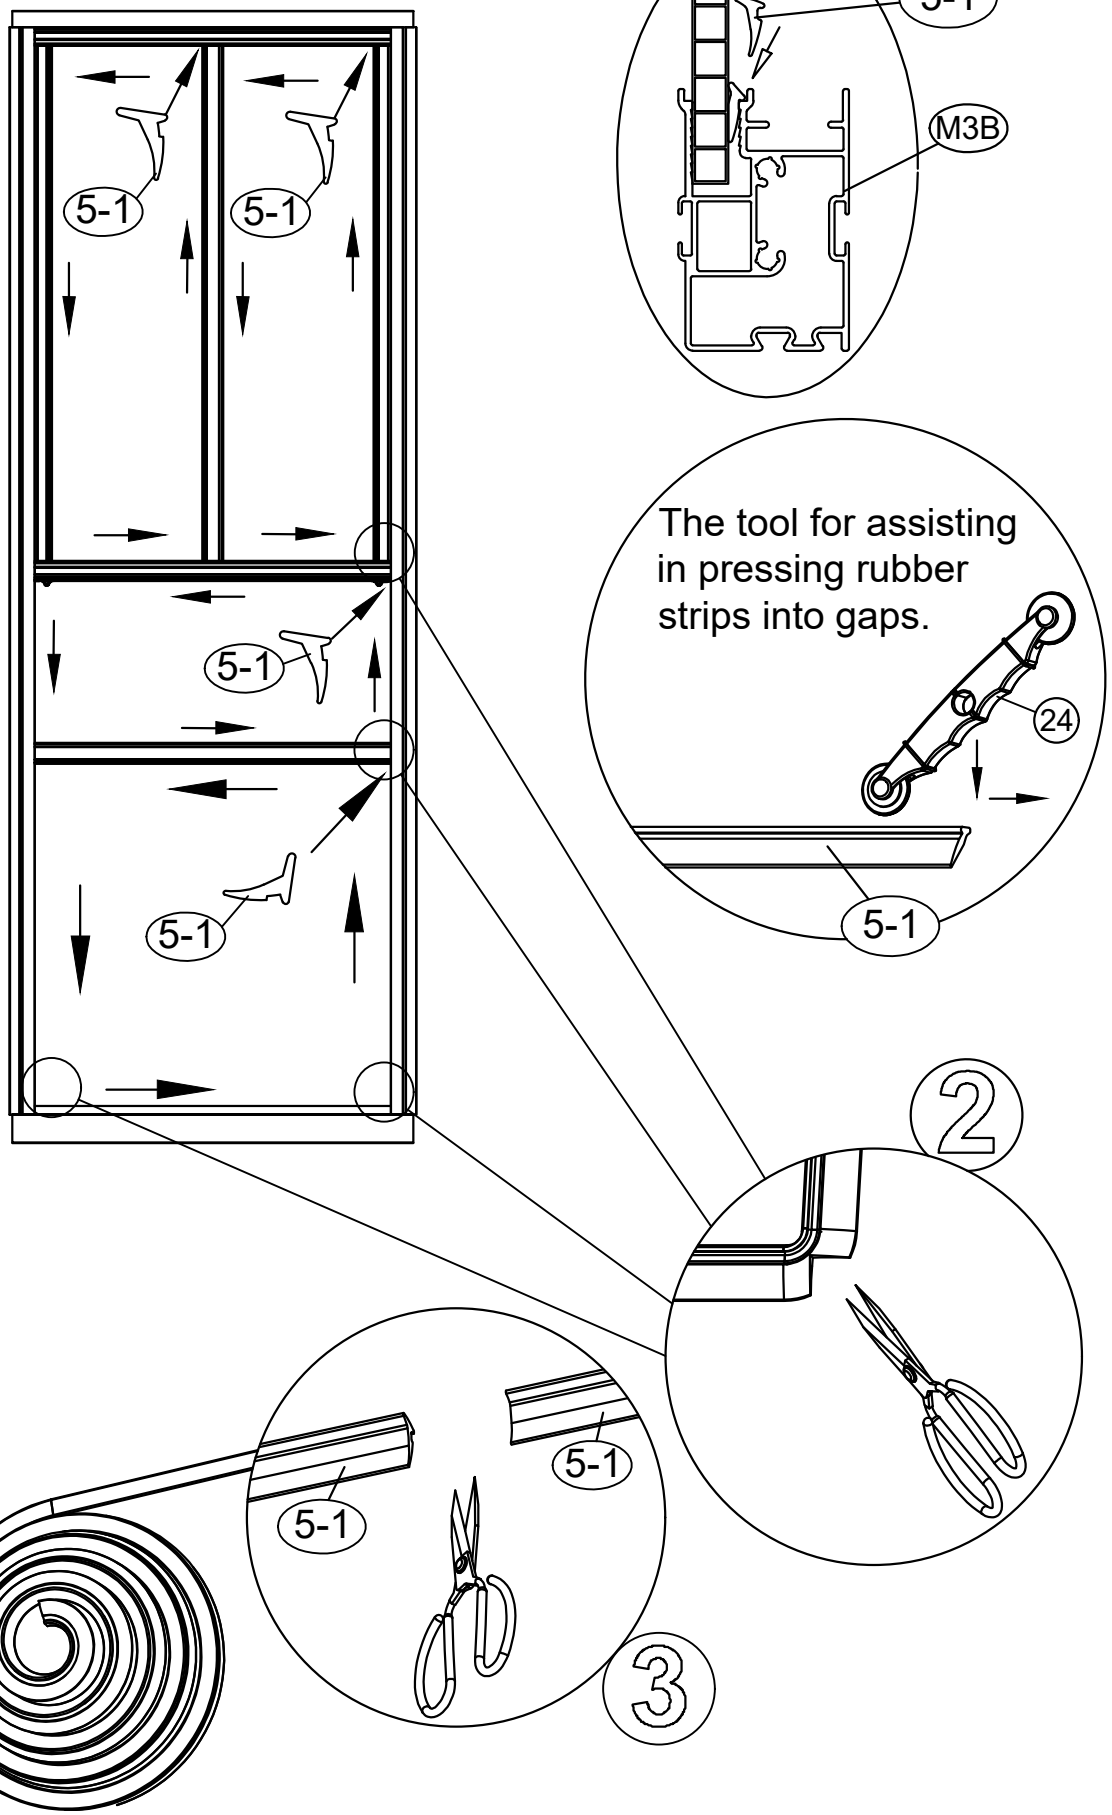


All door frames, AB, BA, AC, CA, AD, DA, AE, EA, follow this method.

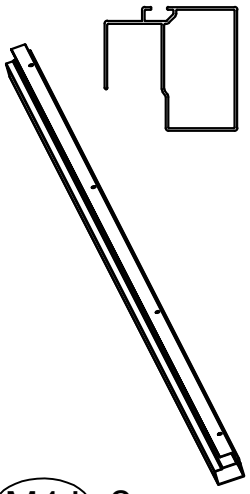

M4J 2x

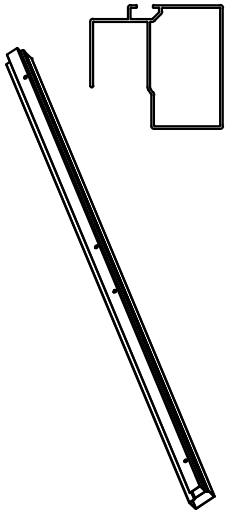


M5J 2x



6.2*11*15

3-1 16x



M6


11 16x




M6x15


1 16x

42

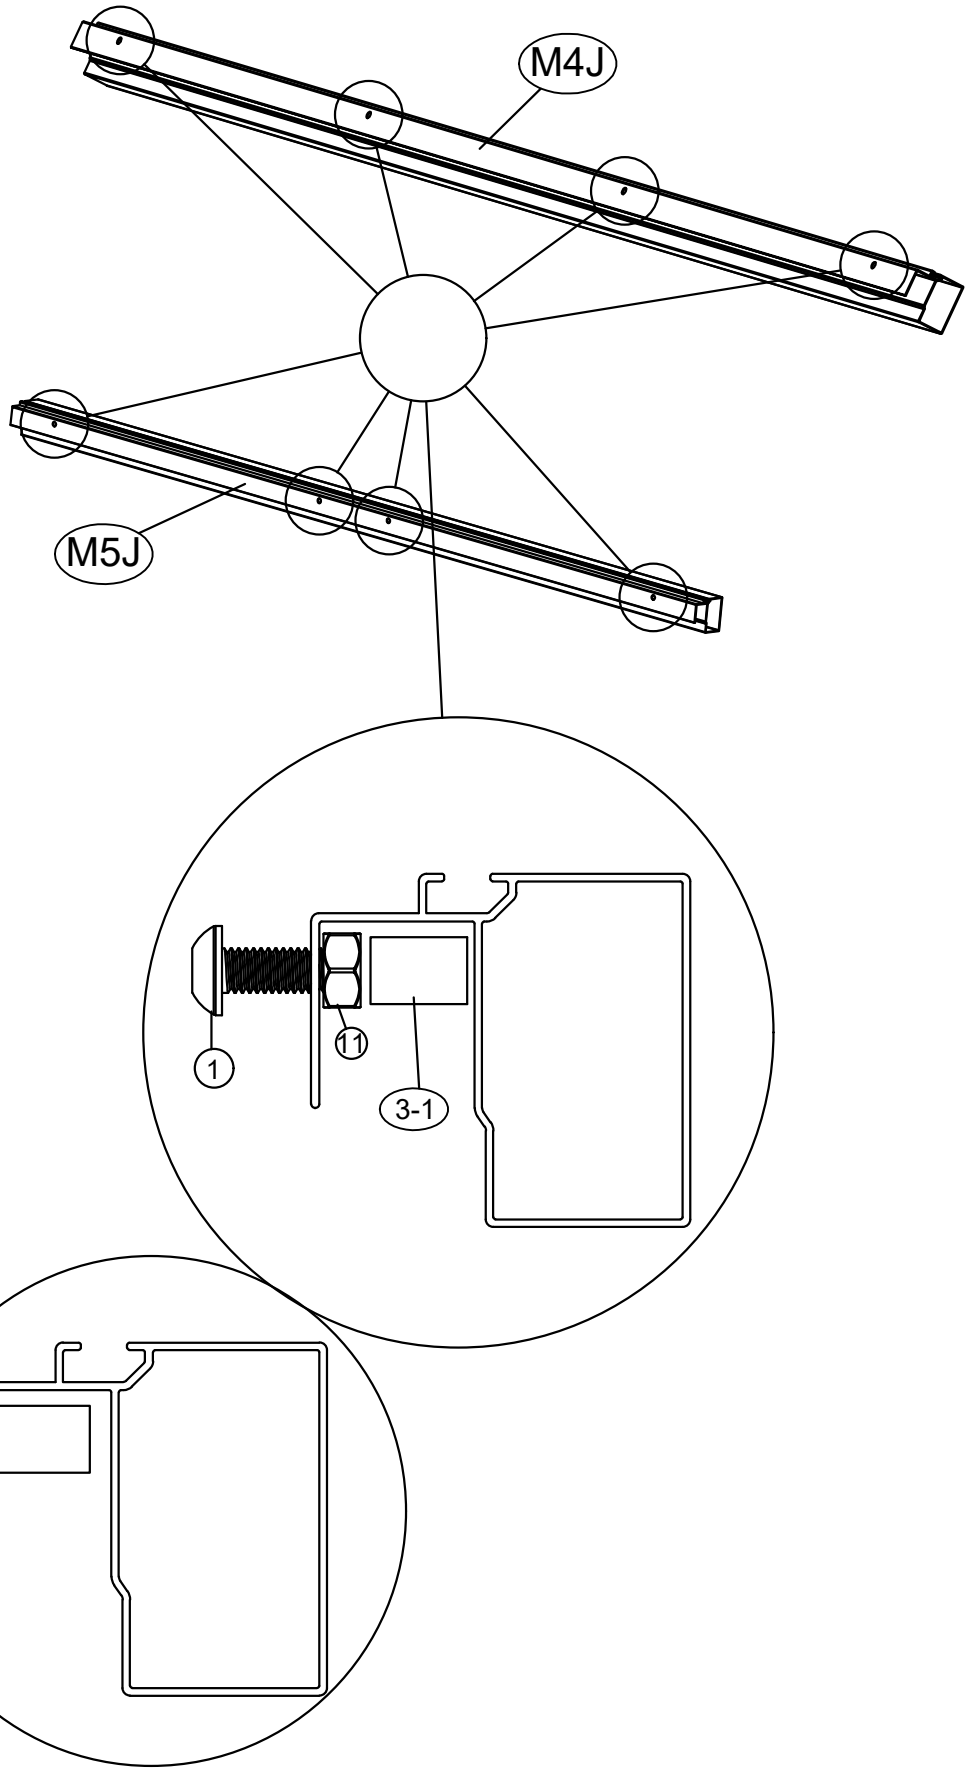

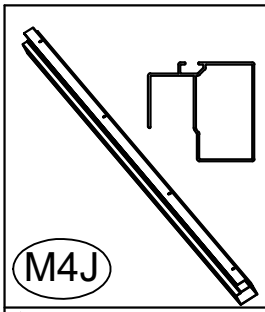

M4J

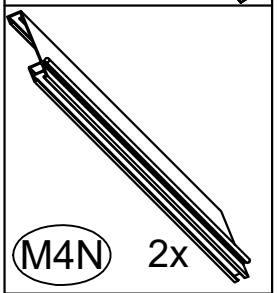

M4N 2x




15 12x




M5*6


16 48x

<34>

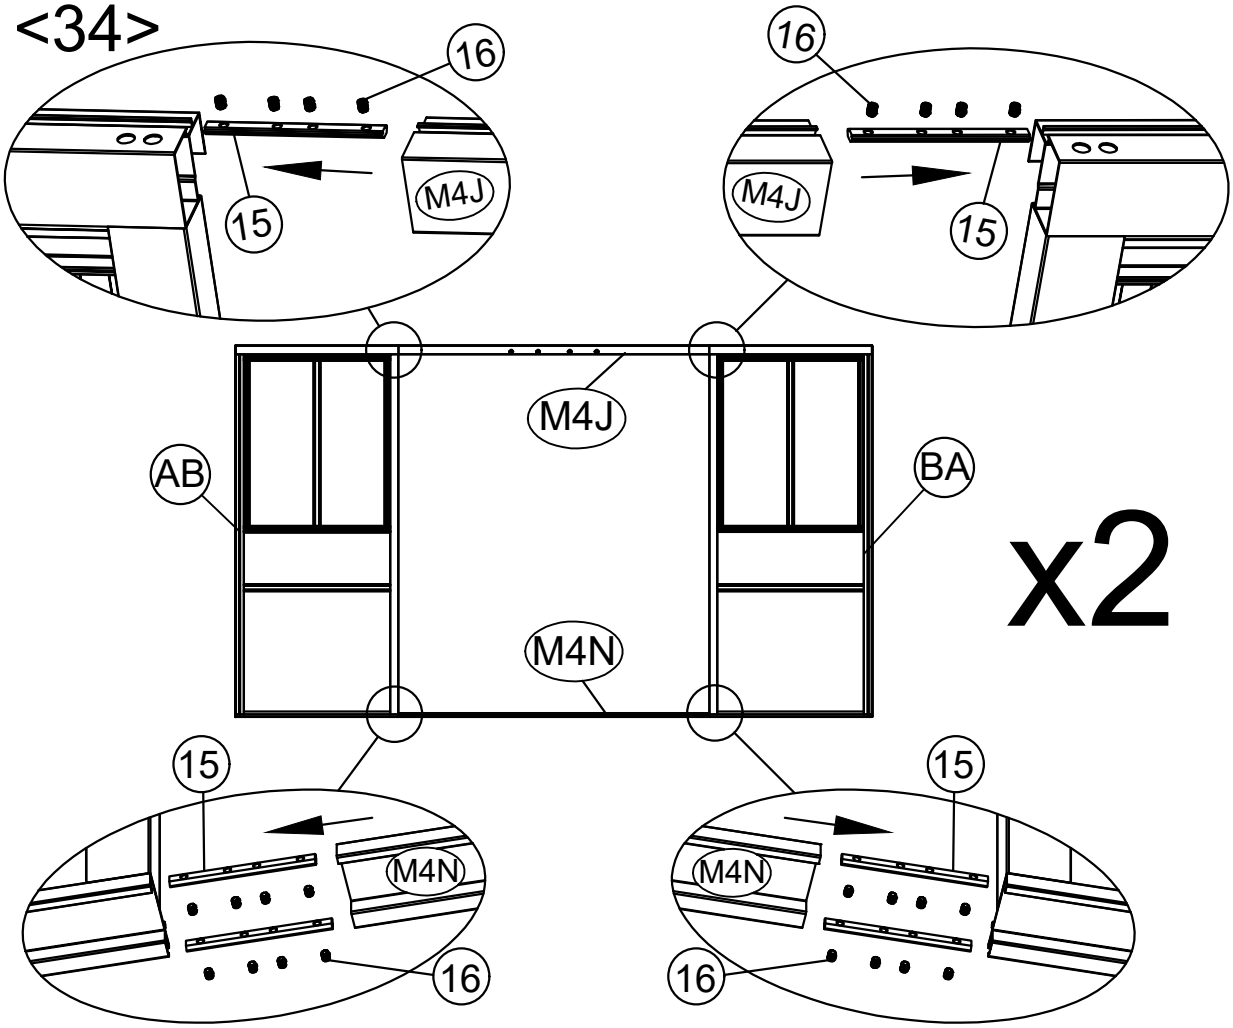

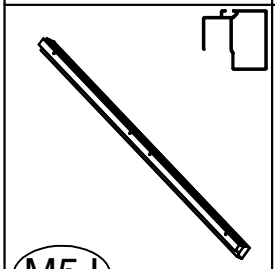

M5J

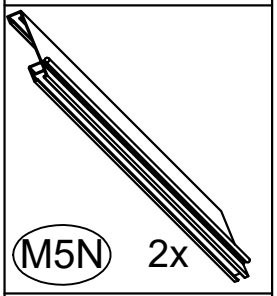

M5N 2x




15 12x





M5*6

16 48x

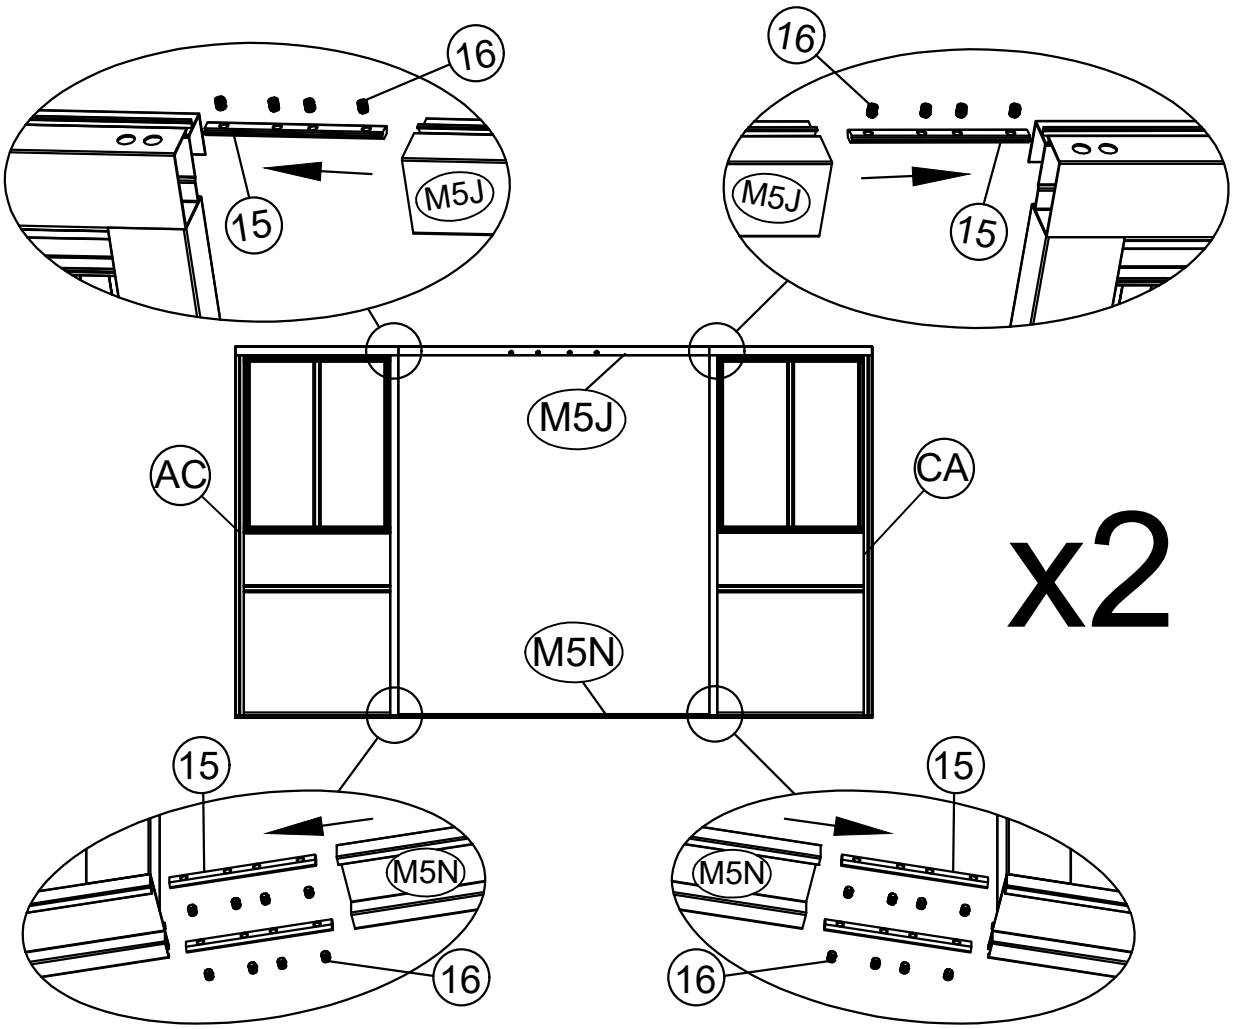

<35>

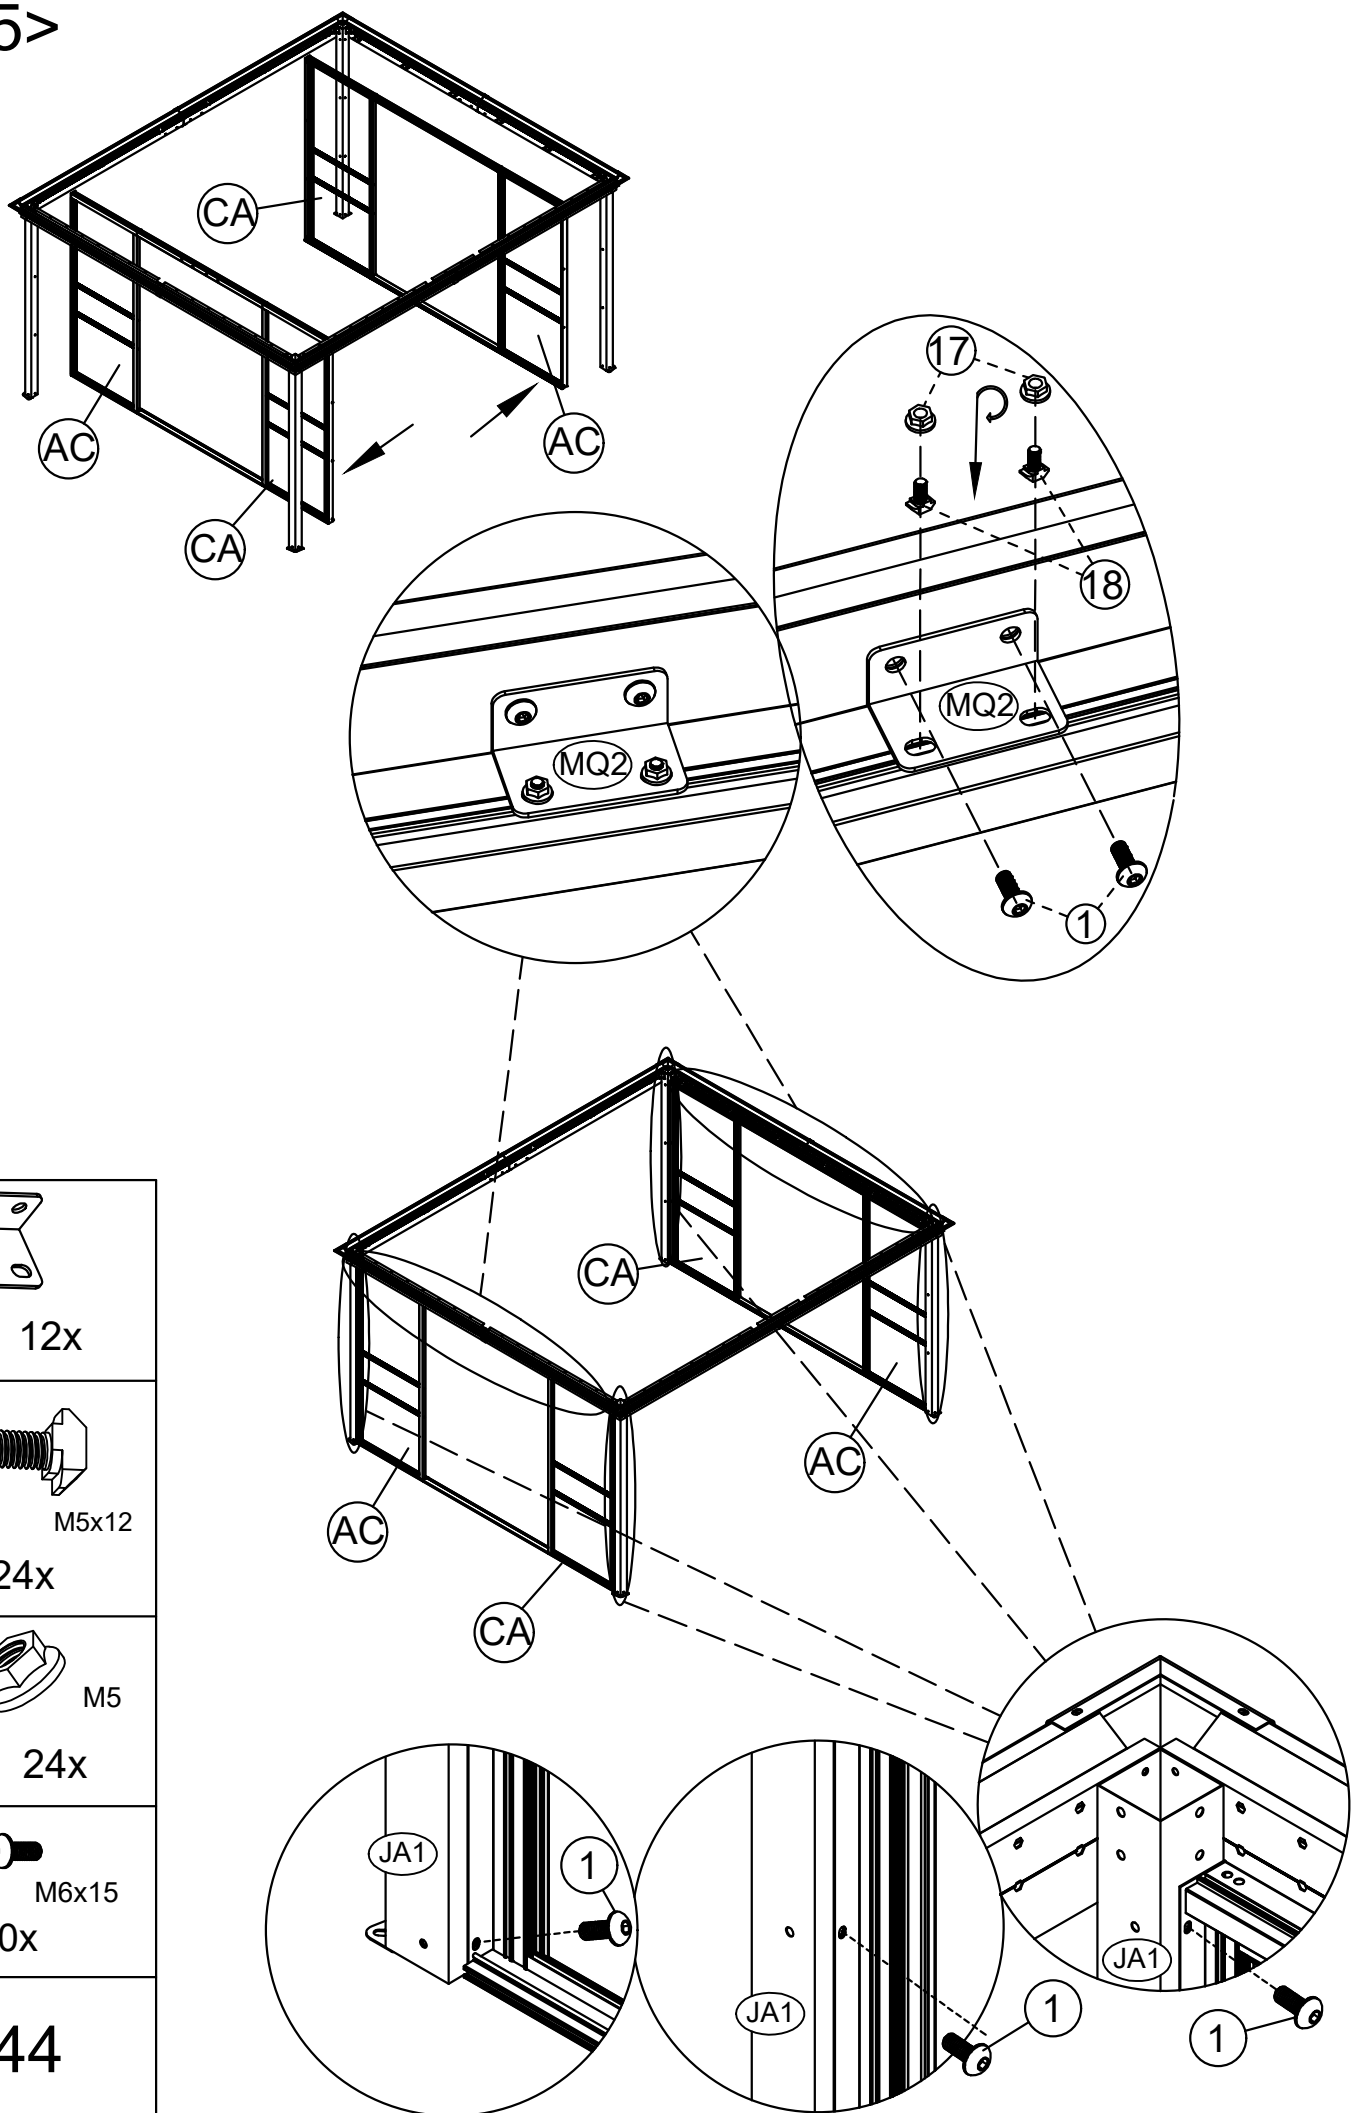



MQ2 12x

M5x12


18 24x


M5


17 24x


M6x15


1 40x

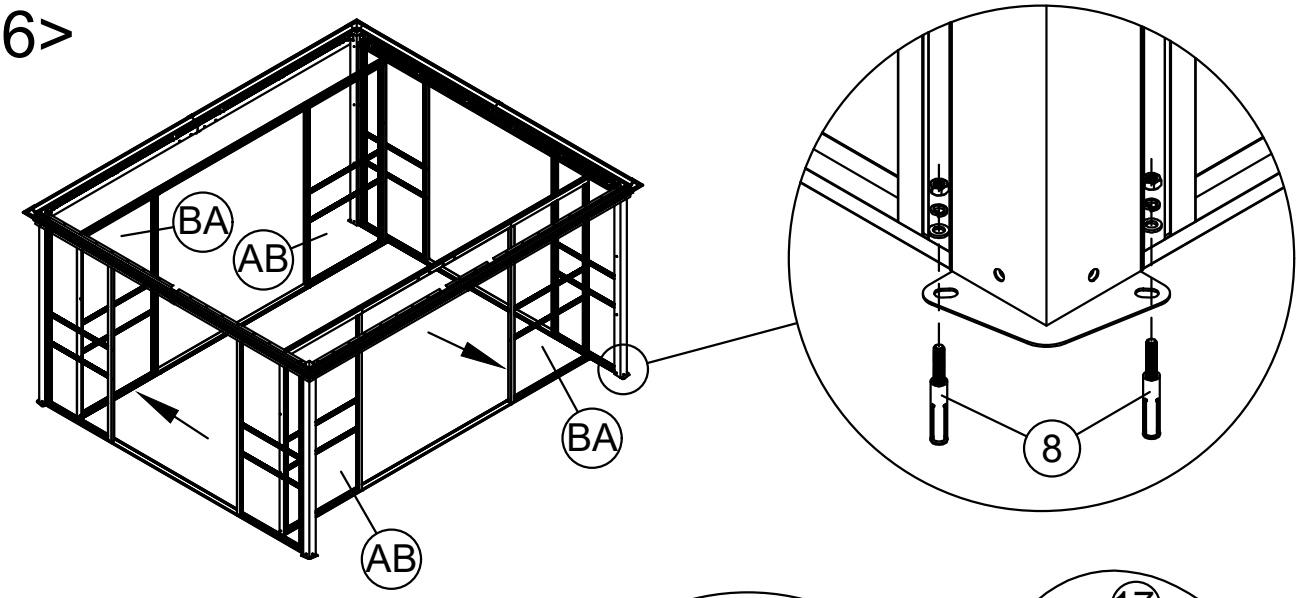

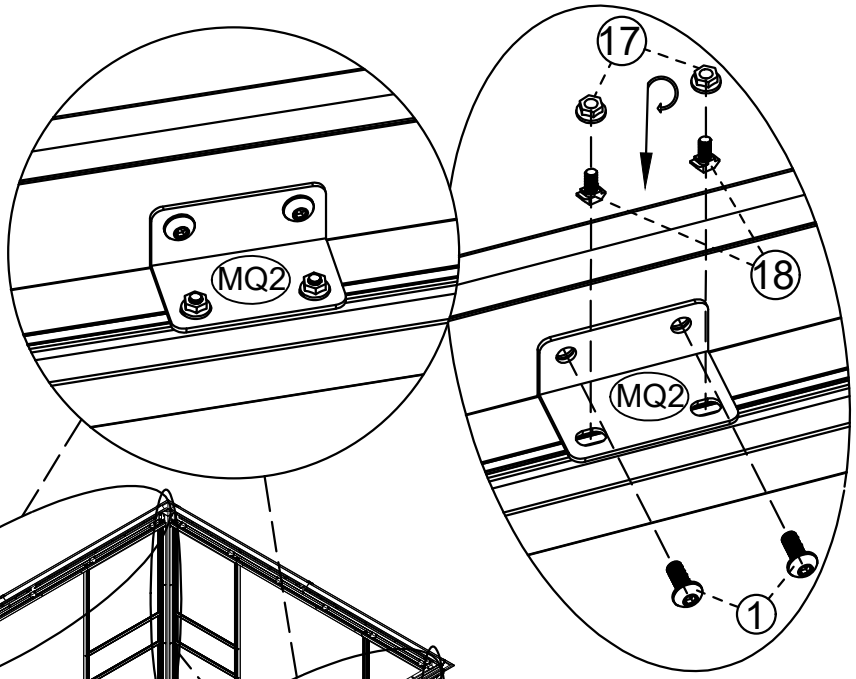


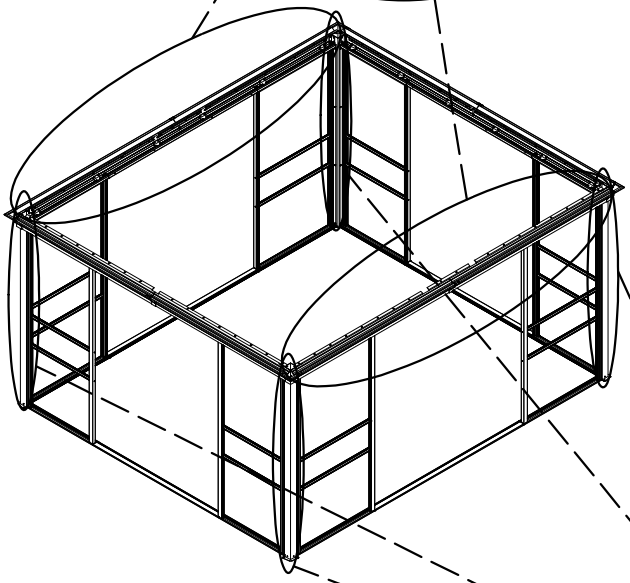

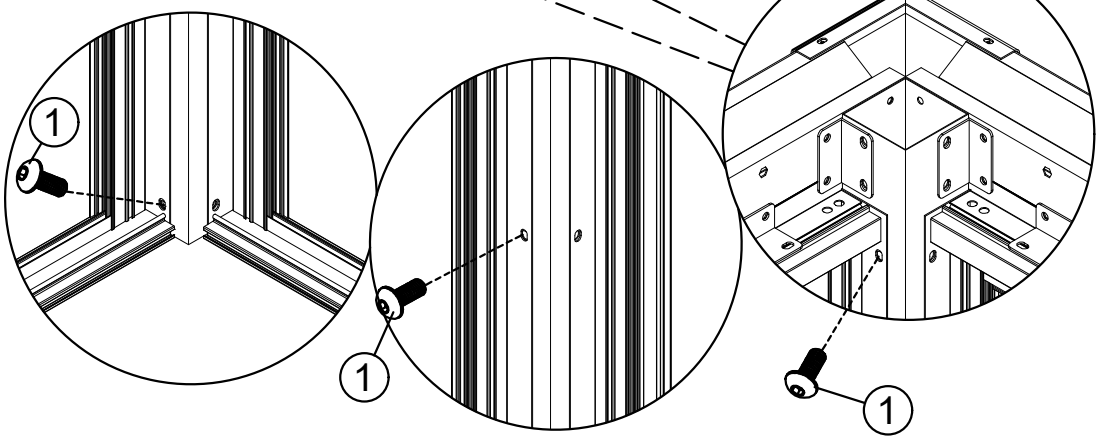


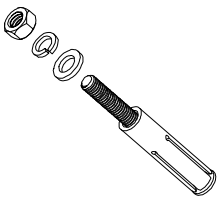

8 8x



MQ2 12x



M5x12

18 24x



M5


17 24x



M6x15

1 40x

45

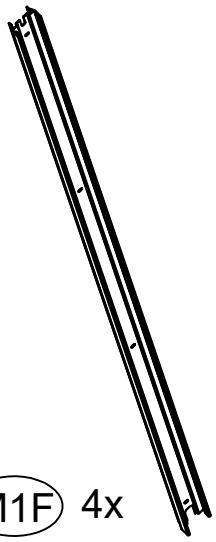

M1F 4x


ST 4.8x12


③ 16x

<37>

DA 2x EA 2x

Pay attention to the installation direction of the left and right sides of the door.

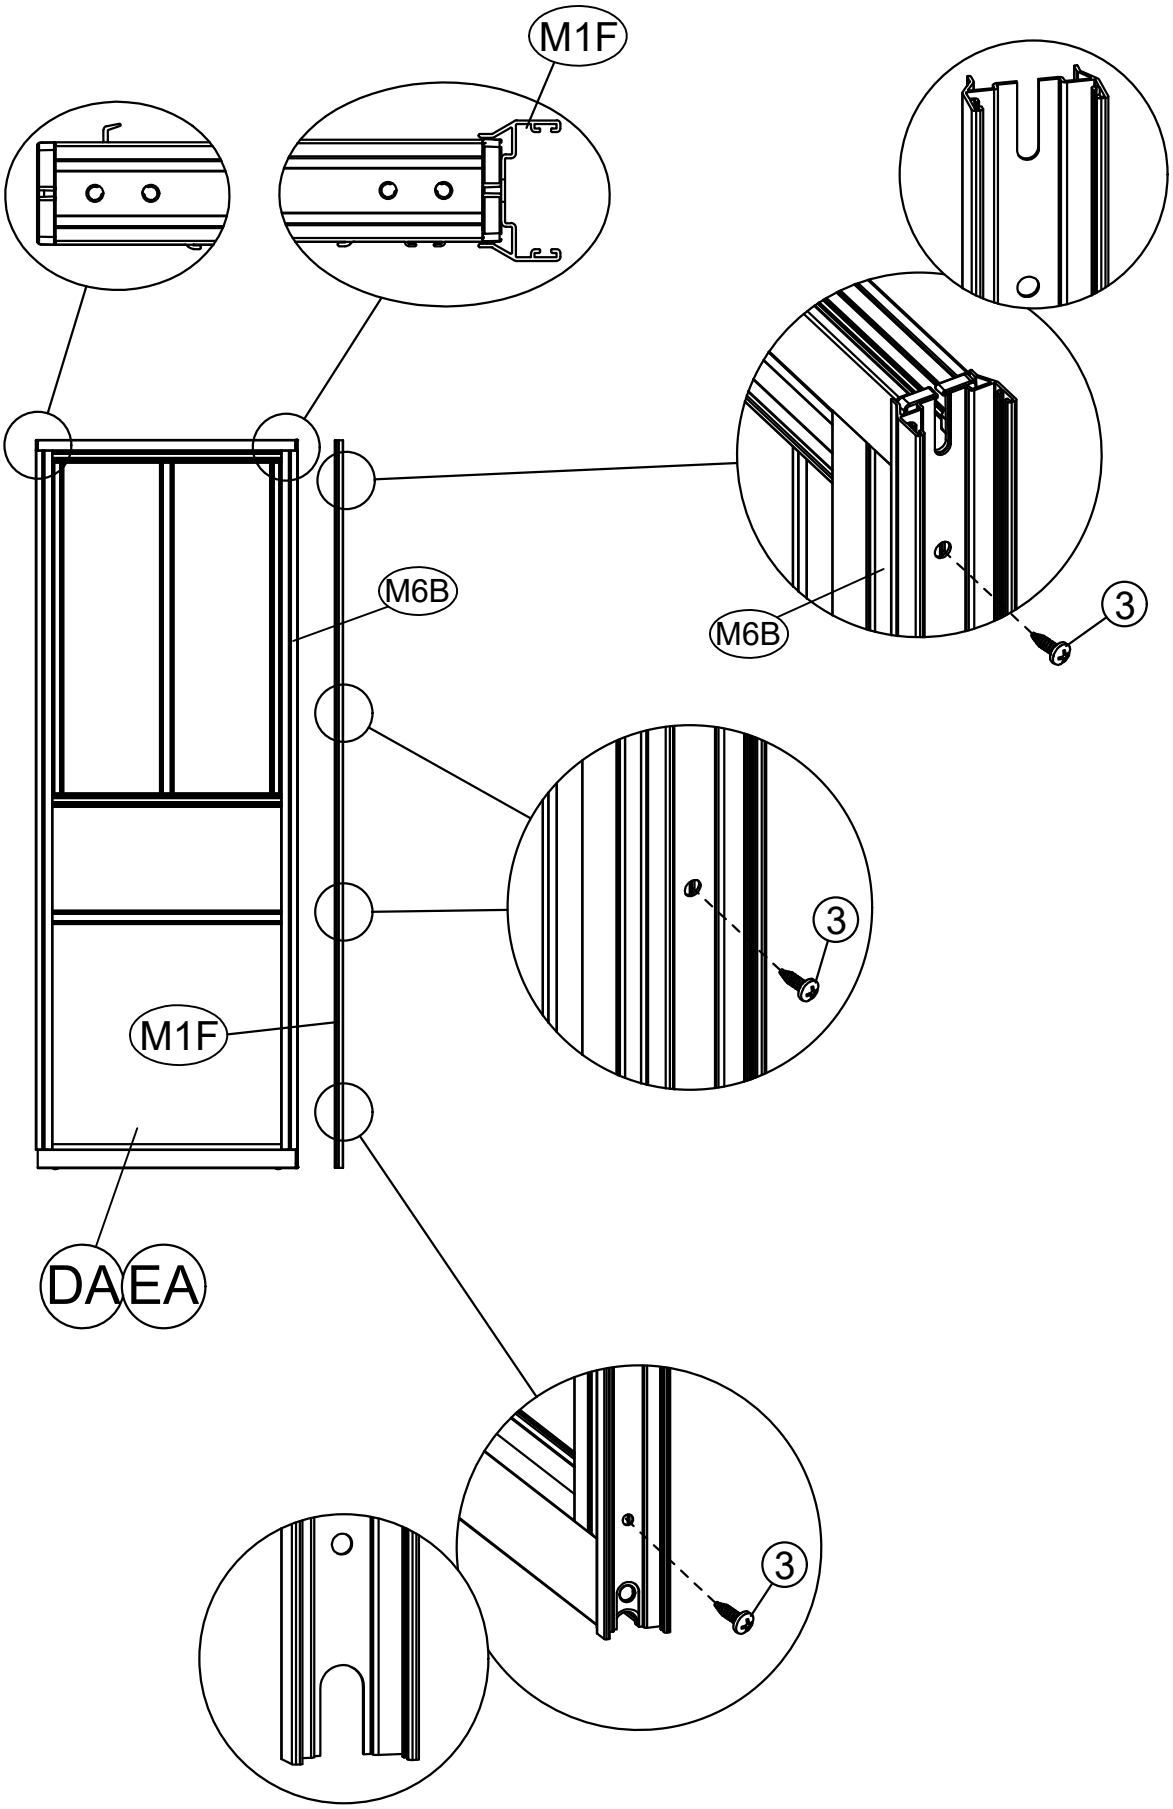




U1 4x



U2 4x




U3 4x



M4x12

26 4x



U4 4x




M5x15


25 16x

47


DA 2x EA 2x

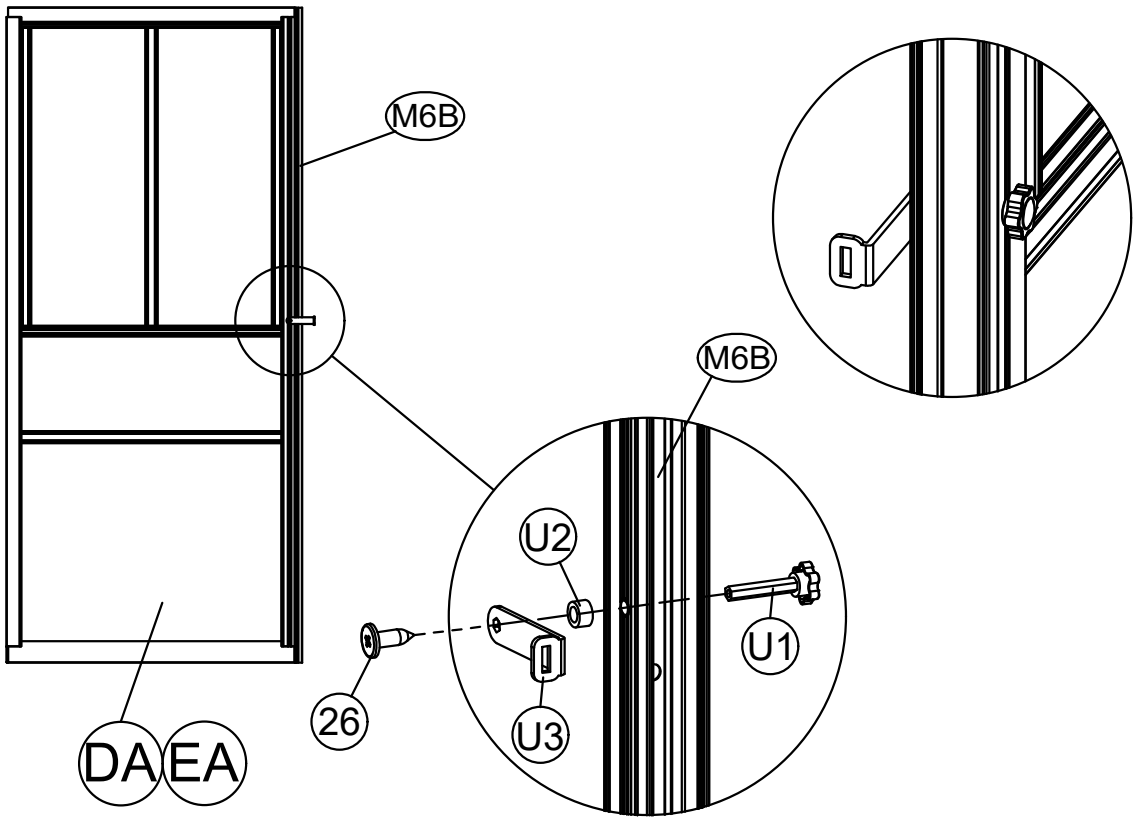


AD 2x AE 2x

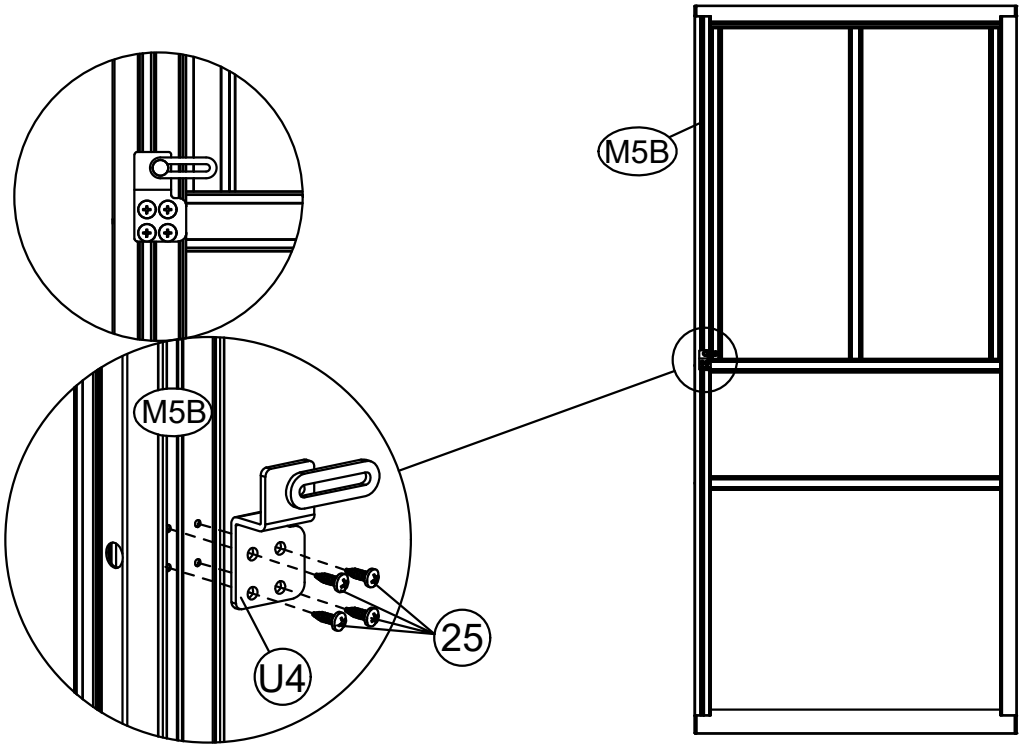

<39>

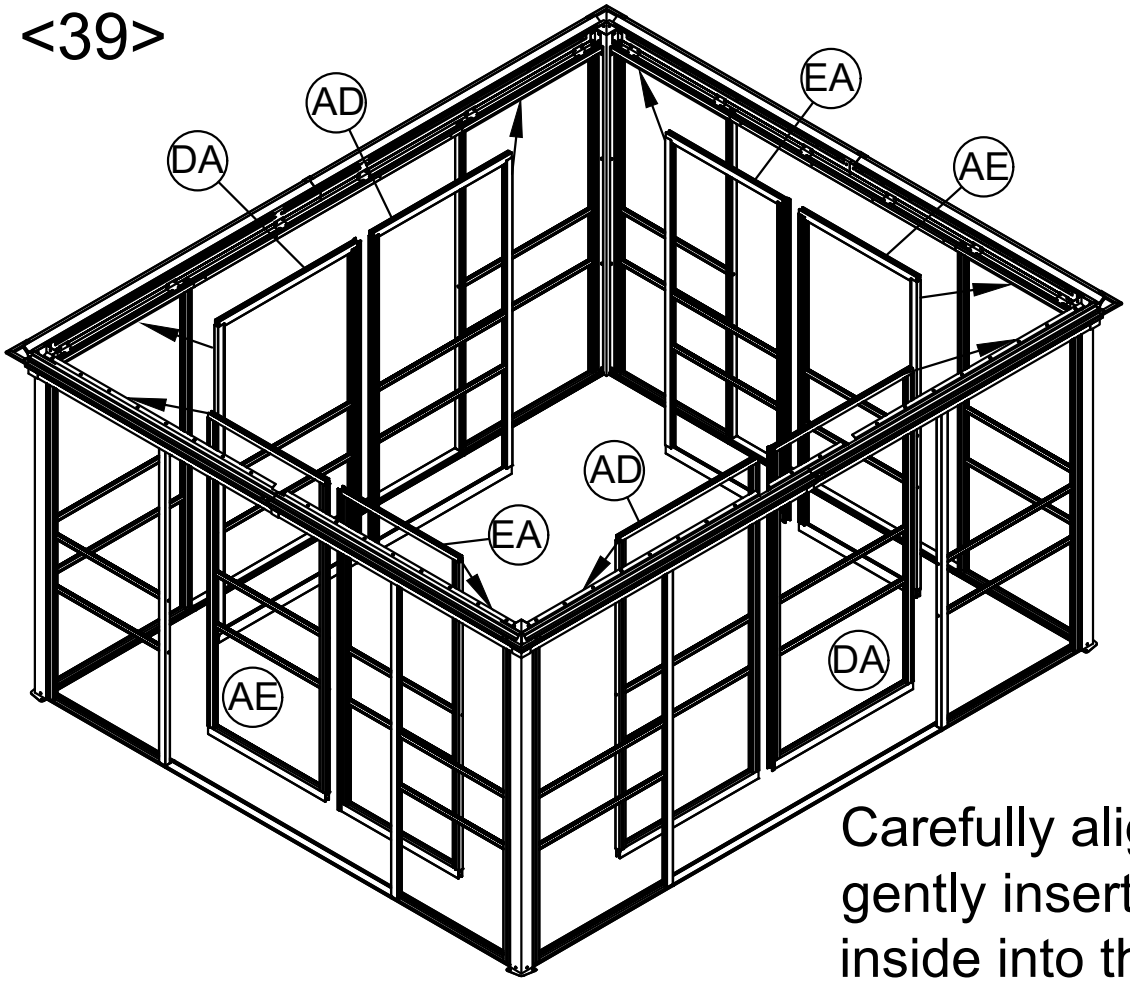



Carefully align the door and gently insert it from the inside into the upper slot.

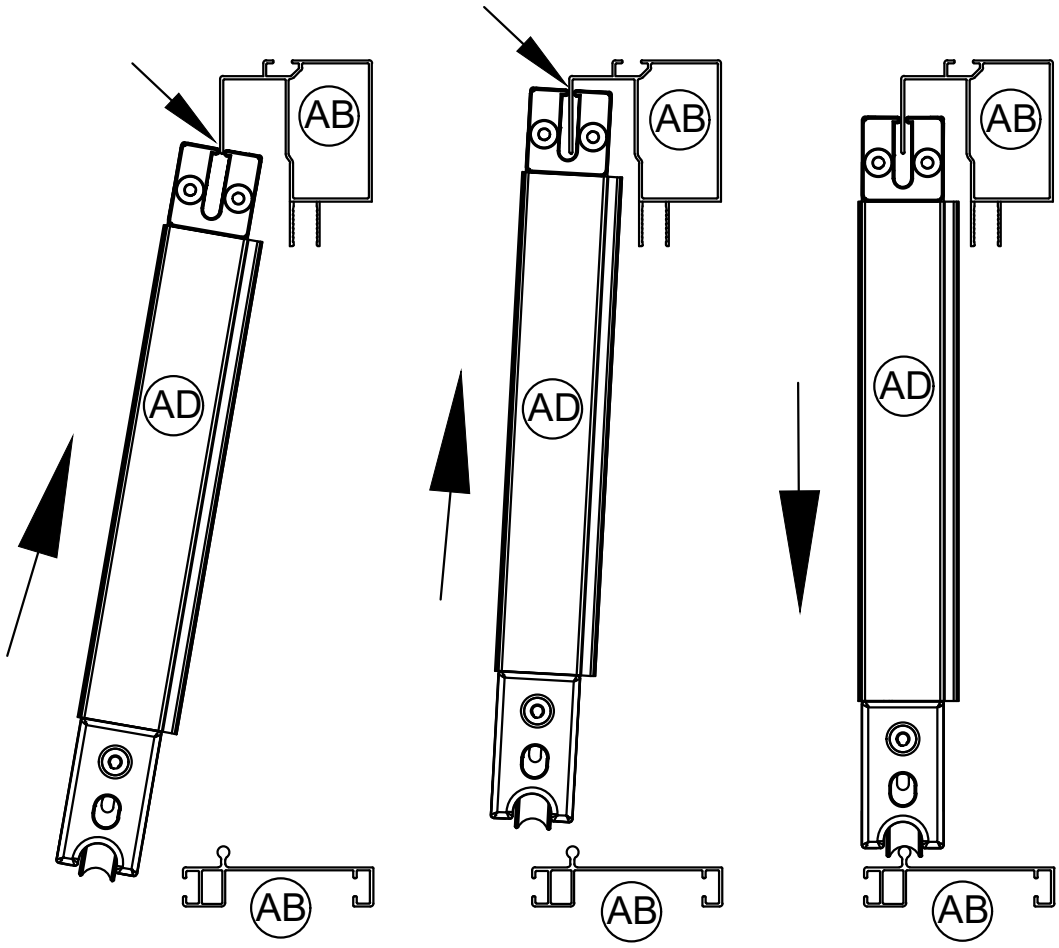

Repeat the previous steps for other components.

<40>

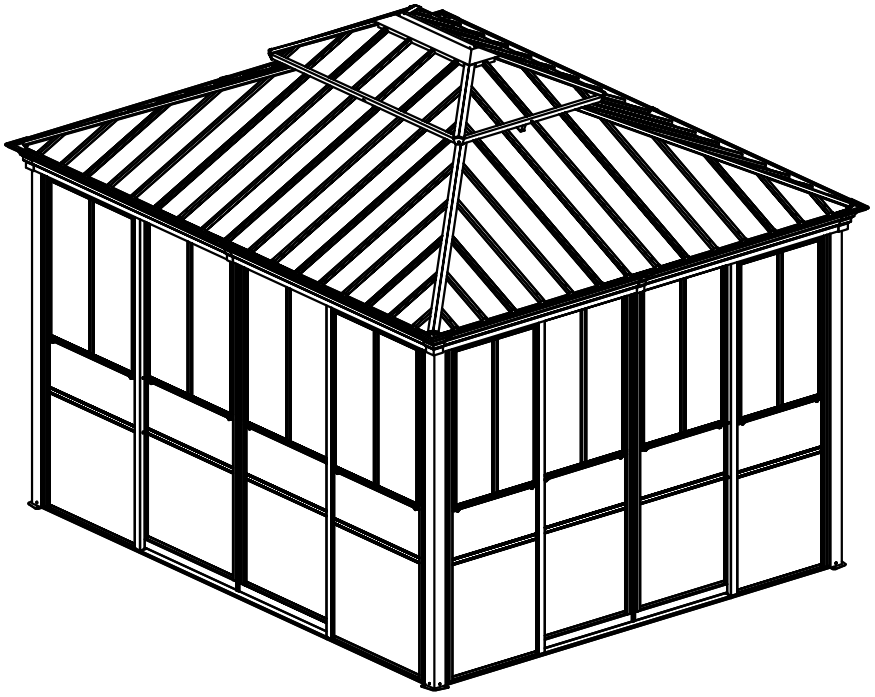

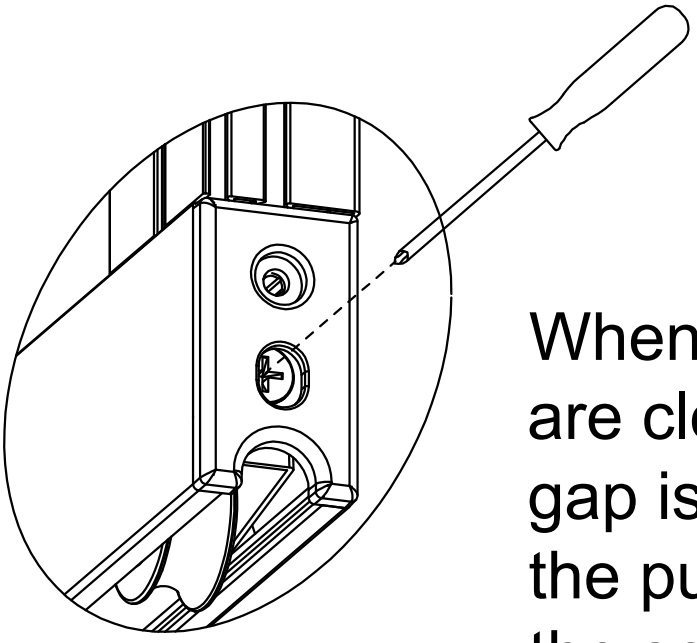

When the two sliding doors are closed and an obvious gap is found, the height of the pulley can be adjusted by the screw on the pulley.

<41>

