

Floating Bathroom Vanity

Wall-Mounted Installation & Assembly Instructions

Installation Guide

TOOLS REQUIRED



Wrench
Adjustable



Power Drill
Cordless



Tape Measure
25 ft



Screwdriver
Phillips



Hammer
Claw


1 Position the Vanity Cabinet

Determine the desired mounting location on the wall. Hold the main cabinet flush against the wall at the chosen height. Mark the mounting hole positions on the wall through the rear of the cabinet. Remove the cabinet, drill pilot holes, and secure it to wall studs (or approved anchors) with the provided screws. Confirm the unit is level before tightening.



2 Install the Countertop & Sink

If not pre-assembled, install the faucet and drain assembly onto the sink first per the faucet manufacturer's instructions. Carefully lower the countertop/sink onto the cabinet. Apply a bead of clear silicone adhesive around the edges where the countertop meets the cabinet and smooth for a watertight seal. Connect water supply lines and P-trap; check for leaks before use.

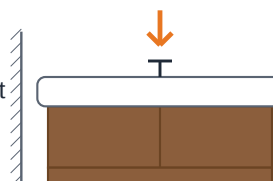


3 Mark & Drill Mirror Holes

Measure the overall height of the mirror and the distance between its rear mounting holes. Determine the desired mirror height above the vanity. Transfer the hole positions onto the wall using a level. Drill pilot holes and insert wall anchors if required for your wall type.



4 Hang the Mirror

Lift the mirror and align its rear mounting holes with the wall fasteners. Carefully lower the mirror into place. Give it a gentle tug to confirm it is secure and cannot slide off. Tighten the screws evenly until the mirror sits flush against the wall. Wipe the surface with a clean, lint-free cloth.

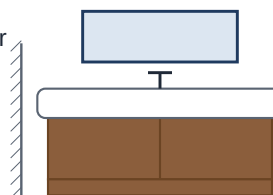

IMPORTANT

- Two adults recommended. Always confirm wall type and use proper anchors before drilling.
- Turn off the water supply before connecting plumbing. Wear safety glasses when drilling.