



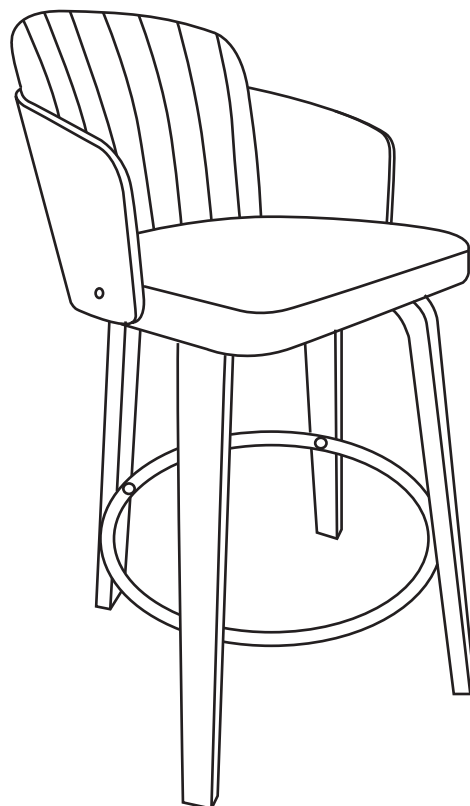

A×1




B×4

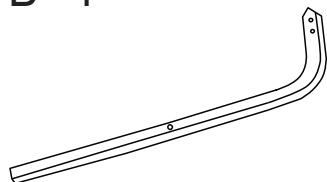


C×1




D×1



E×1

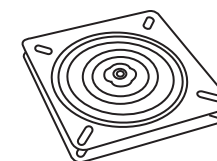

F×4+1Ext




M6×30mm

G×10+1Ext



M6×20mm

H×2+1Ext



M6×25mm

I×2




PLASTIC WASHER

J×1




M6

K×1




SPARE FOOTNAIL

1

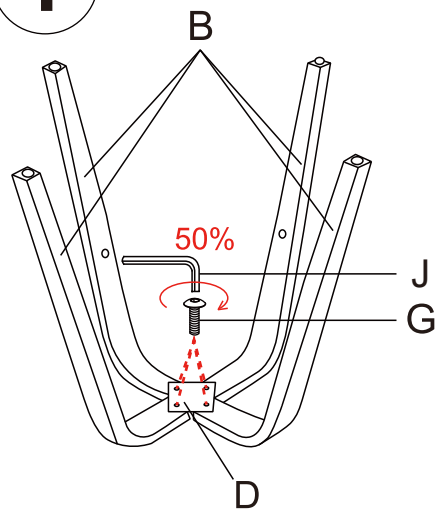


Note:DO NOT tighten the screws(G) in step 1

2

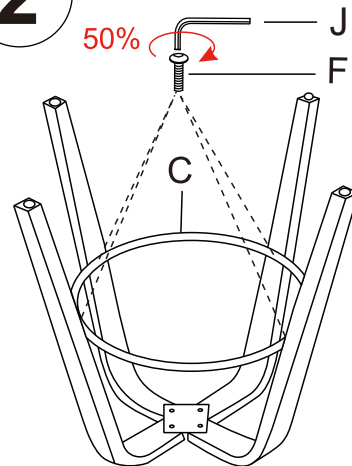


Note:DO NOT tighten the screws(F) in step 2

3

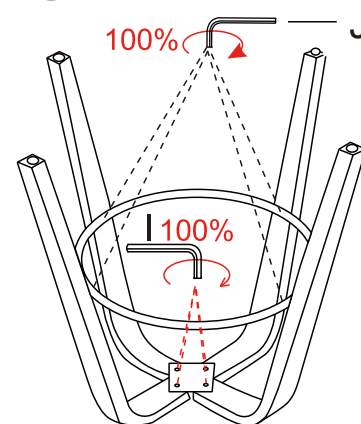


Note:Tighten the screws(G) and screws (F) in step 3


4

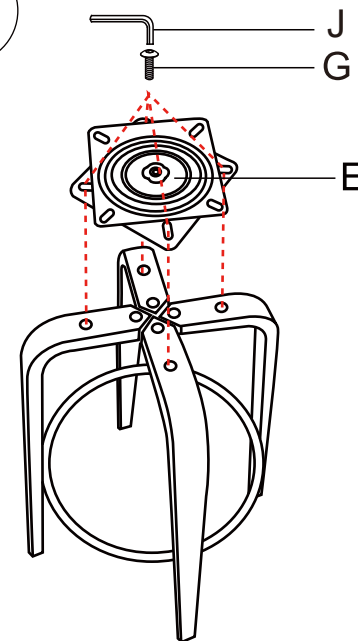

5

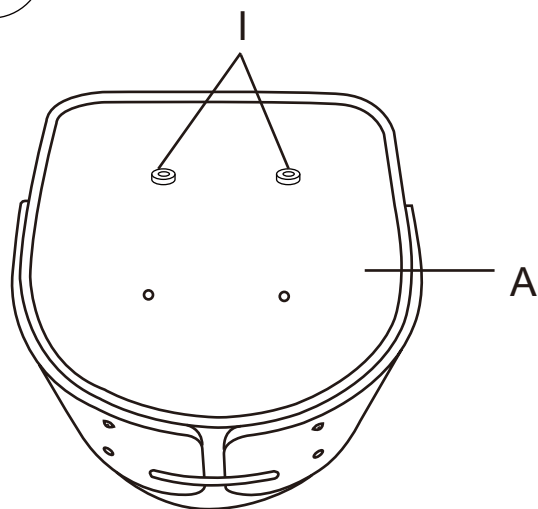

6

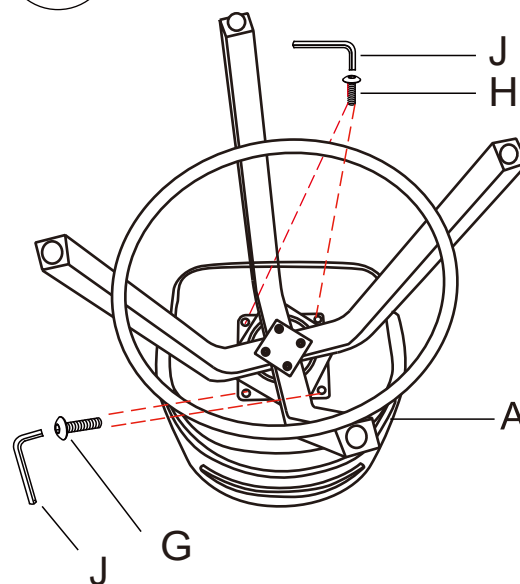

7

