
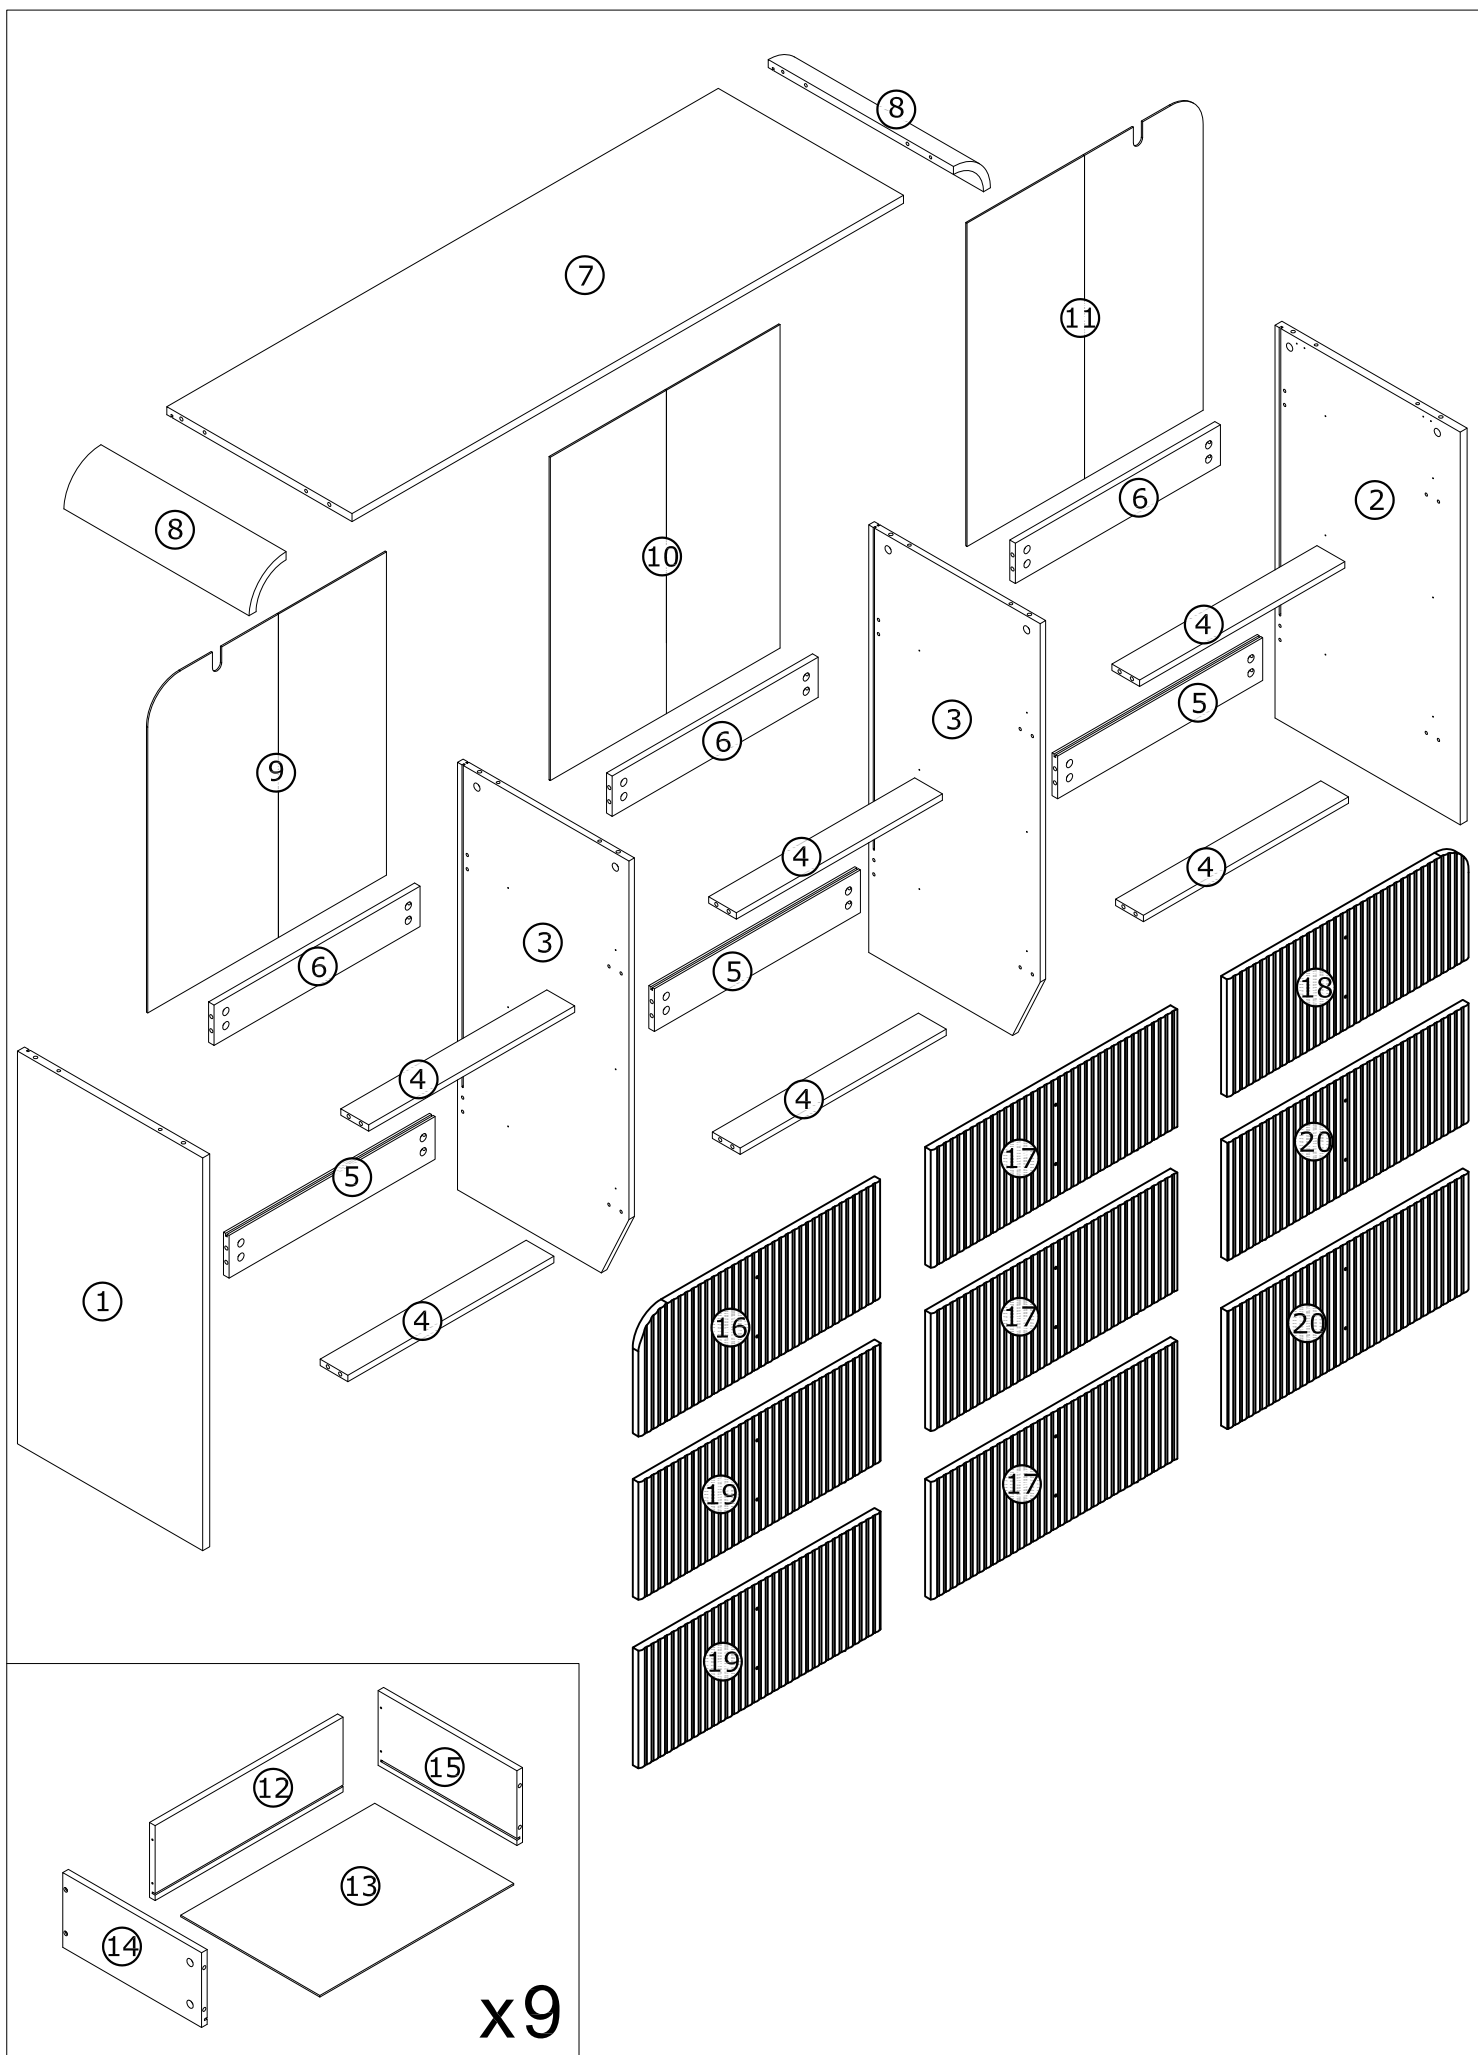
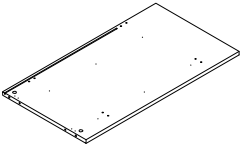
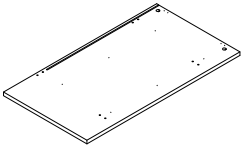
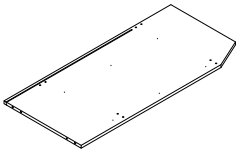
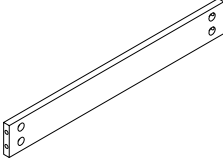
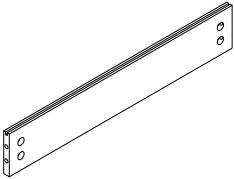
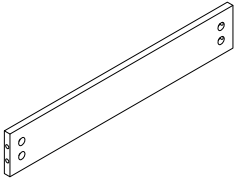
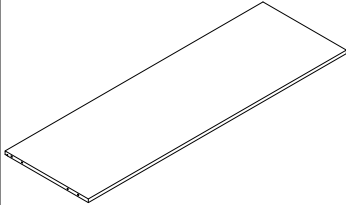
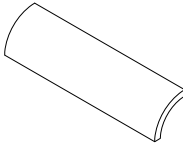
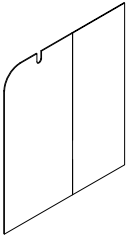
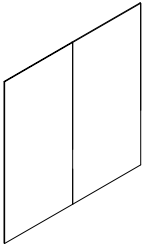

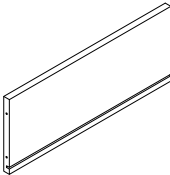
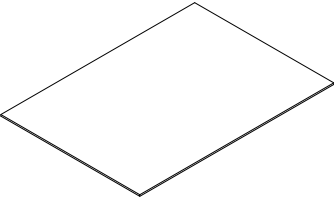
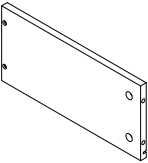
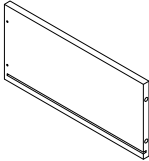
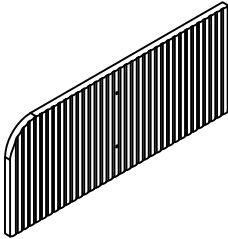
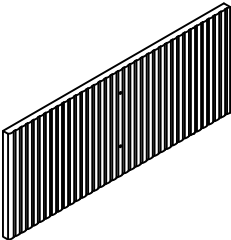
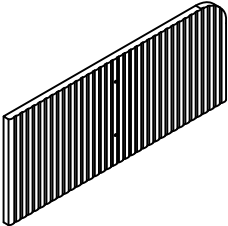
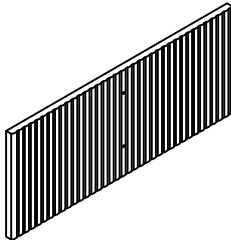












Installation instruction

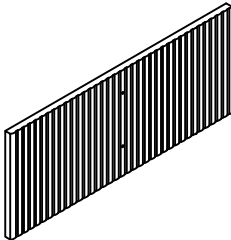

Parts and Operation Elements

			
① 1pc	② 1pc	③ 2pcs	④ 6pcs
			
⑤ 3pcs	⑥ 3pcs	⑦ 1pc	⑧ 2pcs
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 9pcs
			
⑬ 9pcs	⑭ 9pcs	⑮ 9pcs	⑯ 1pc
			
⑰ 3pcs	⑱ 1pc	⑲ 2pcs	⑳ 2pcs





Hardware

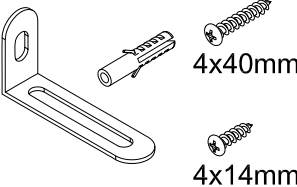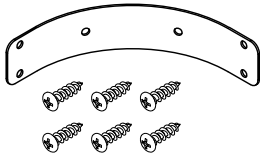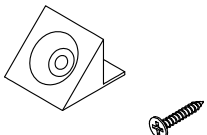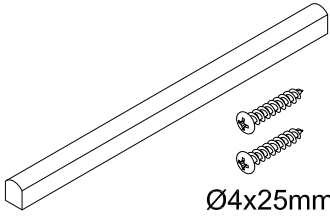 Cam bolt		 Cam lock		 6 x 30mm Wood dowel		 Ø4 x 30mm	
A	96+2pcs	B	96+2pcs	C	12+1pcs	D	36+1pcs
 Ø3x12mm		 4x40mm 4x14mm		 Ø4x14mm		 Ø3x16mm Screw	
E	72+2pcs	F	2pcs	G	4sets	H	12sets
 Ø4x25mm		 300mm		 300mm		 300mm	
I	9sets	CL	9pcs	CR	9pcs	DL	9pcs
 300mm							
DR	9pcs						












SPARE BAG





THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

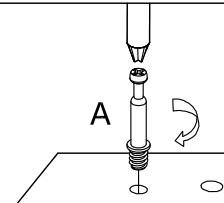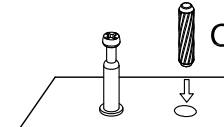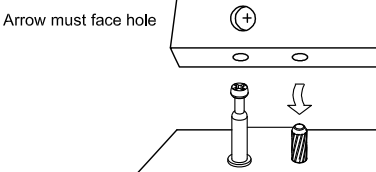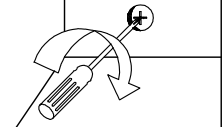 A		 C		 Arrow must face hole			
Gently screw cam bolt into the threaded anchor		Insert the wood dowel halfway into hole				Screw the camlock firmly into locked position.	


1

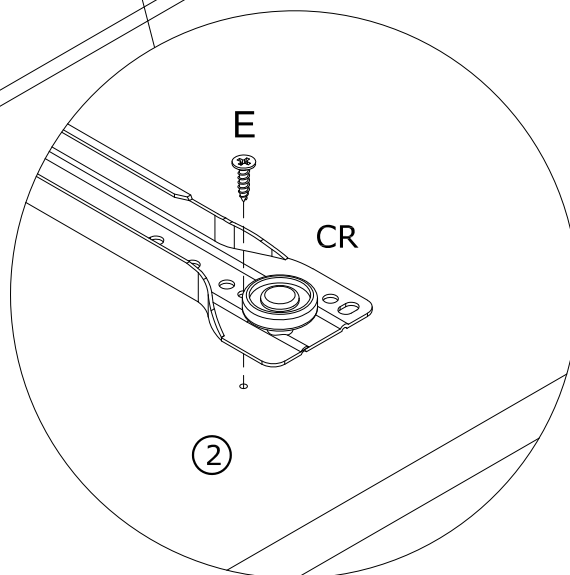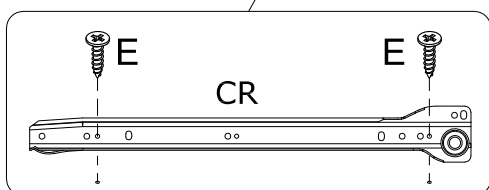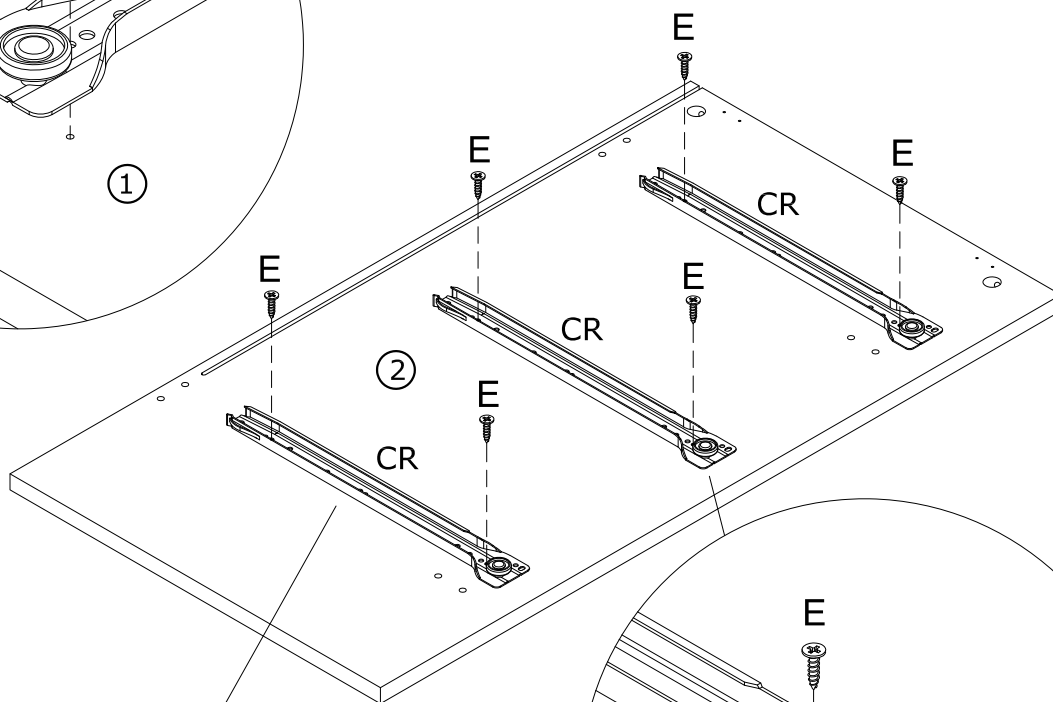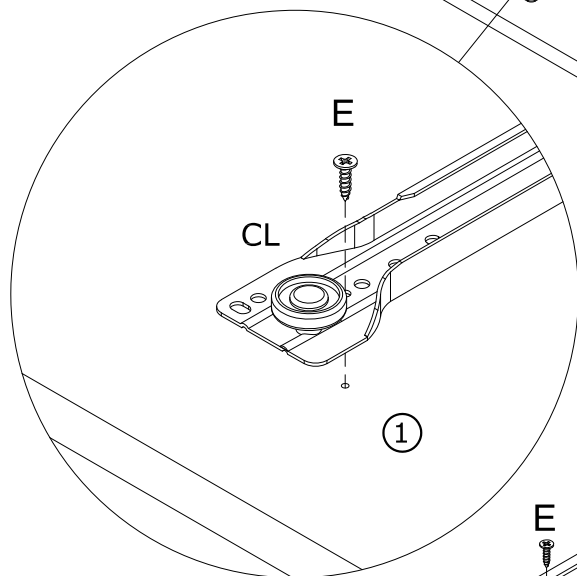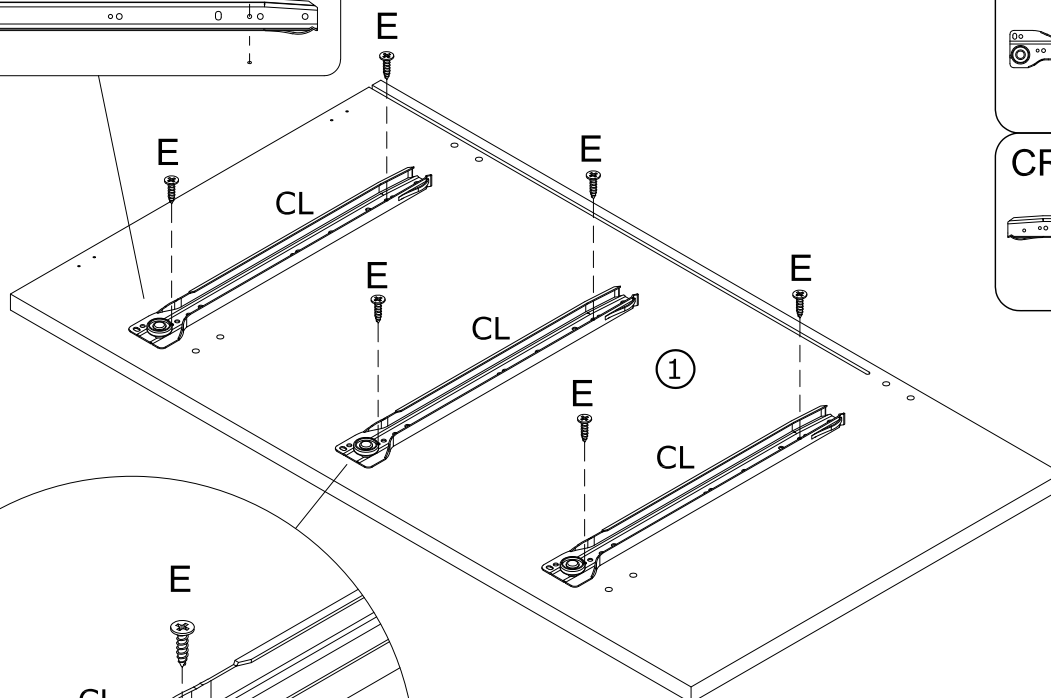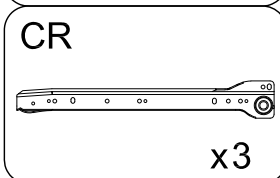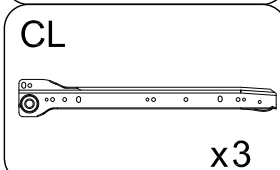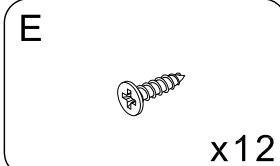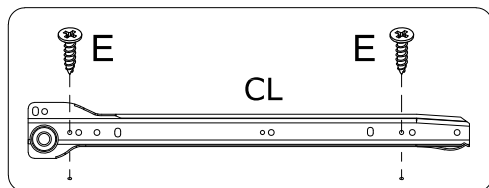

2

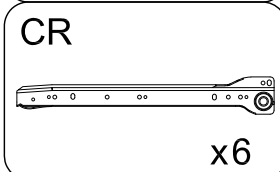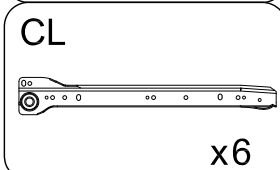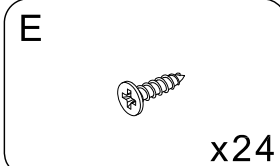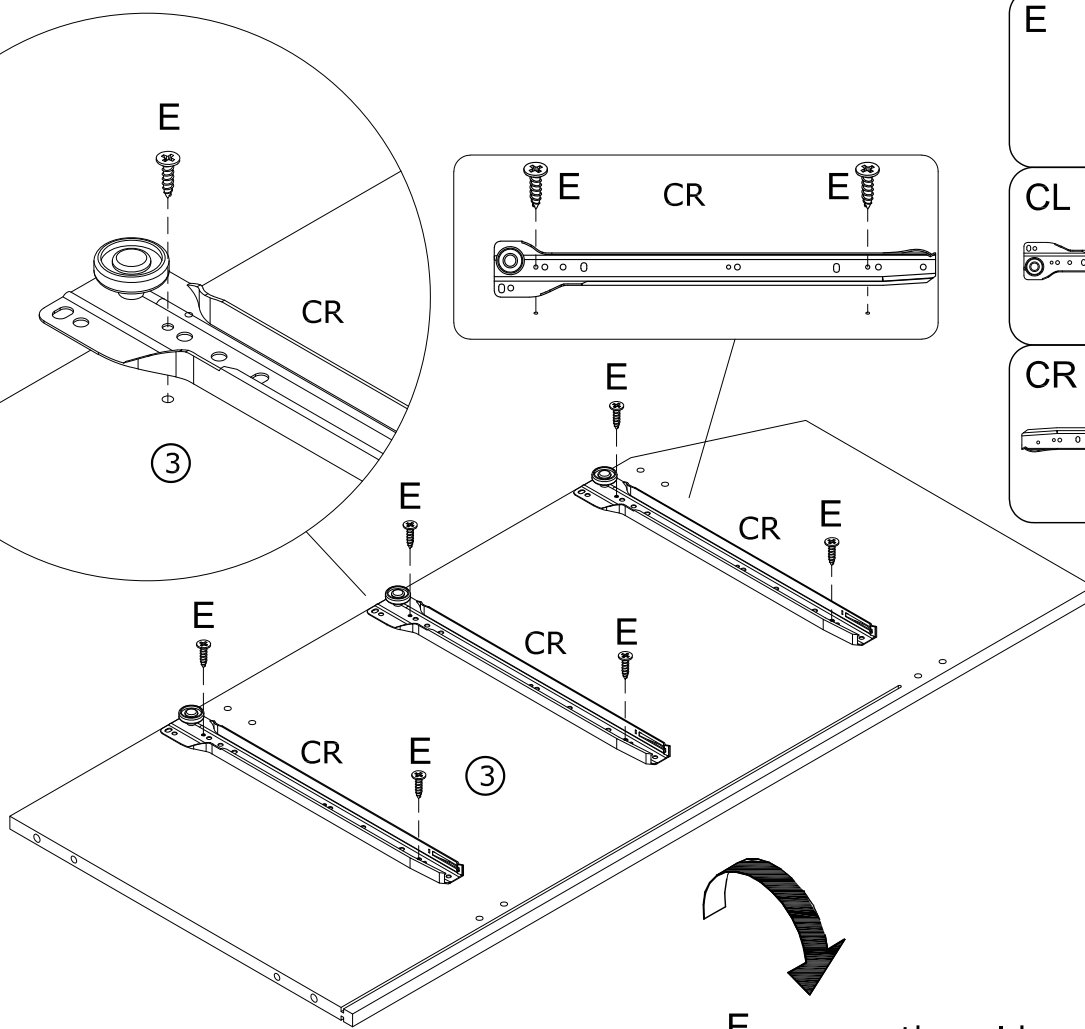


X2

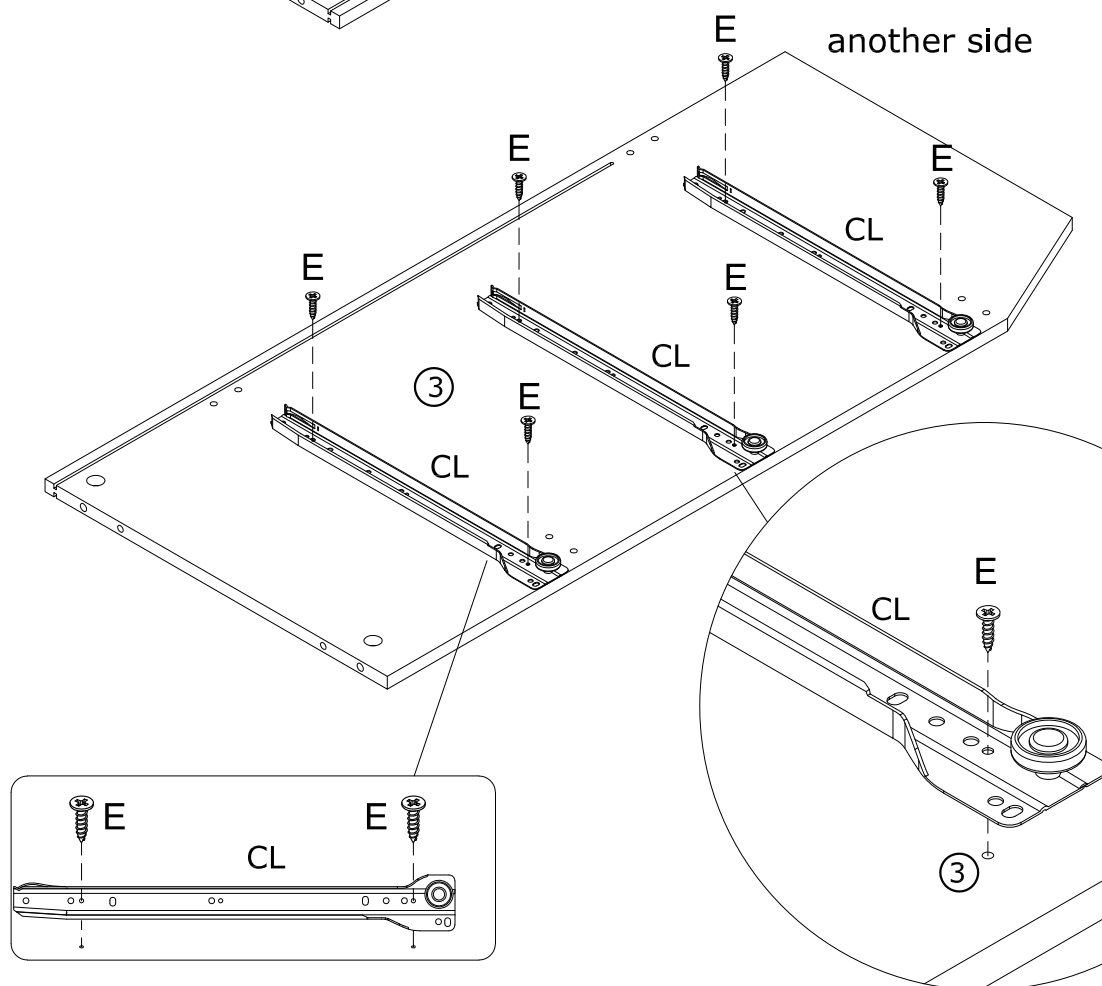


3

A




x16

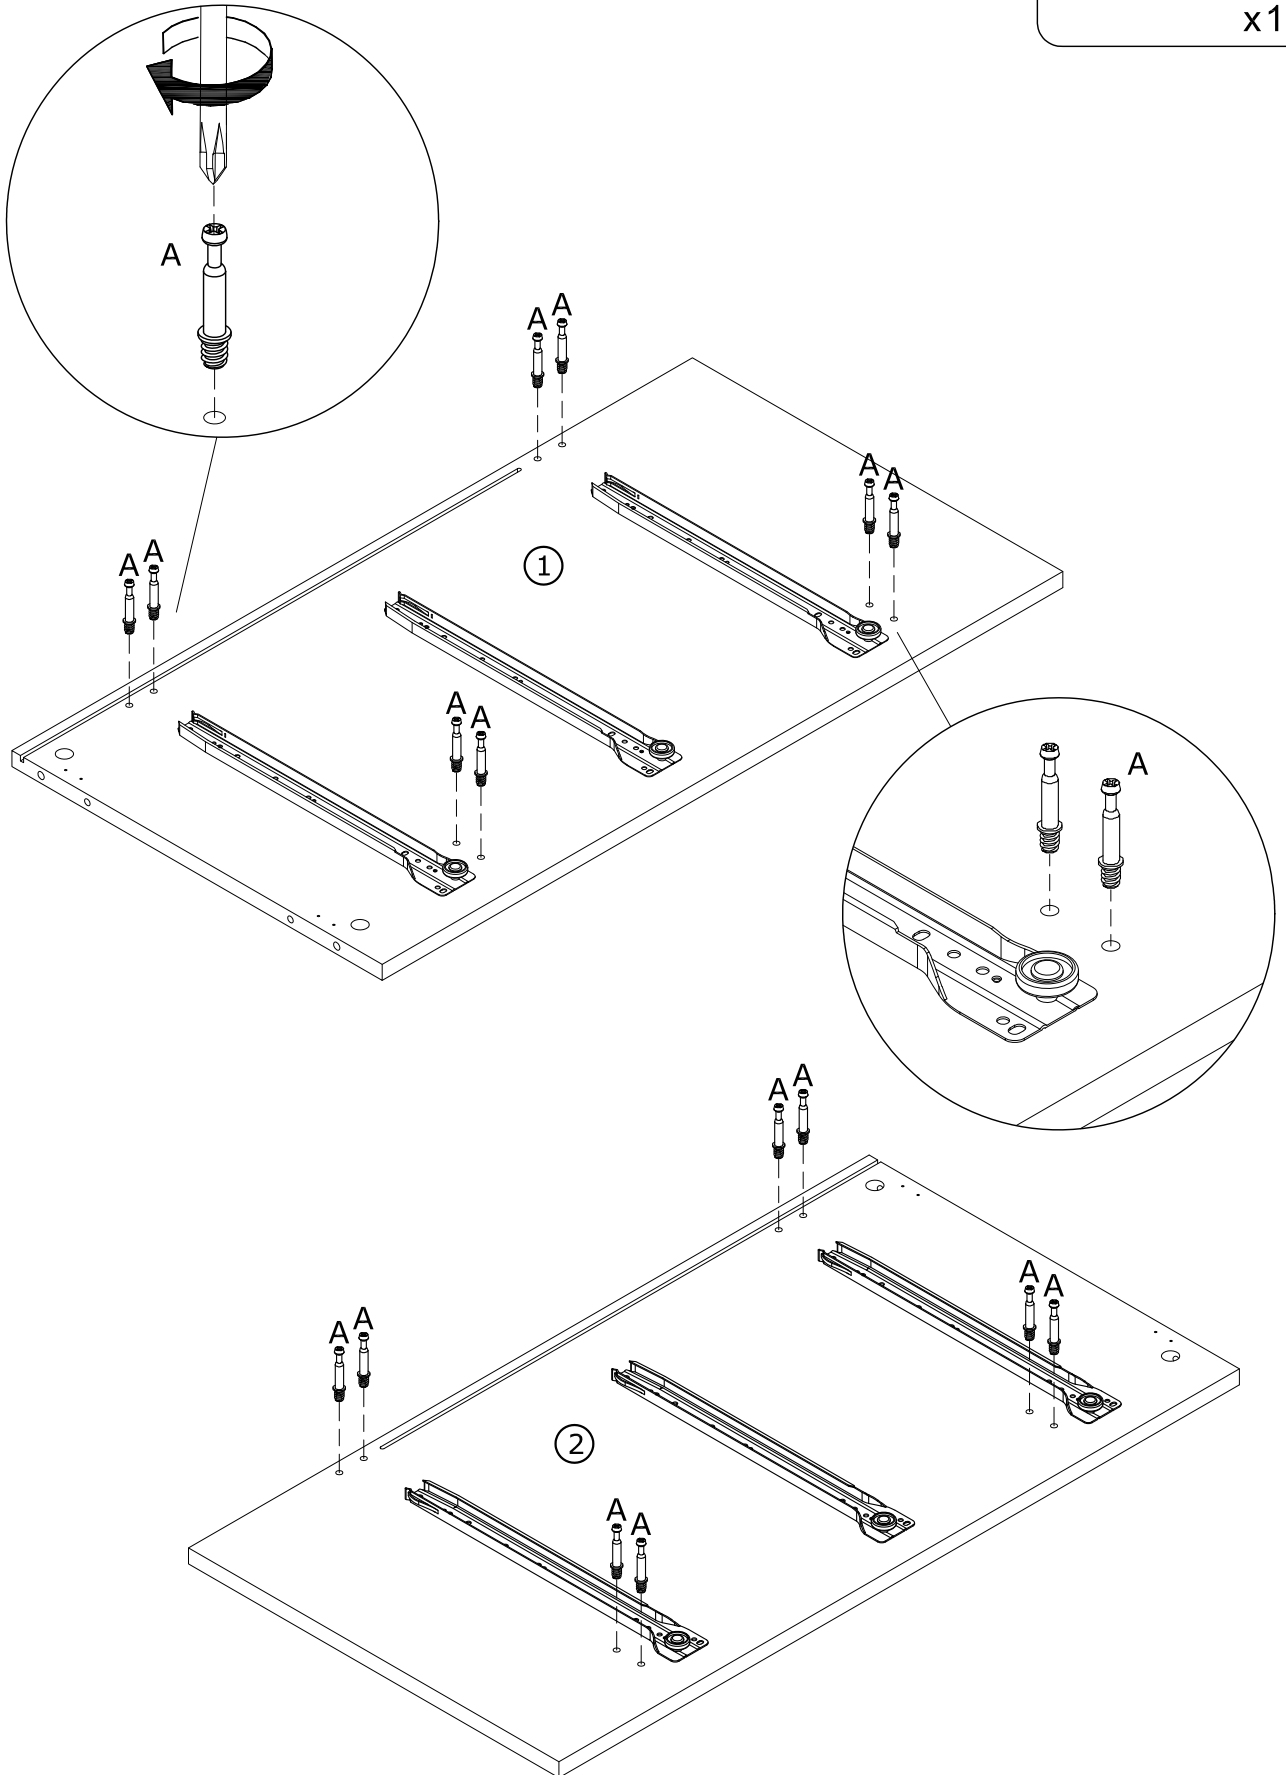


4


A



x32

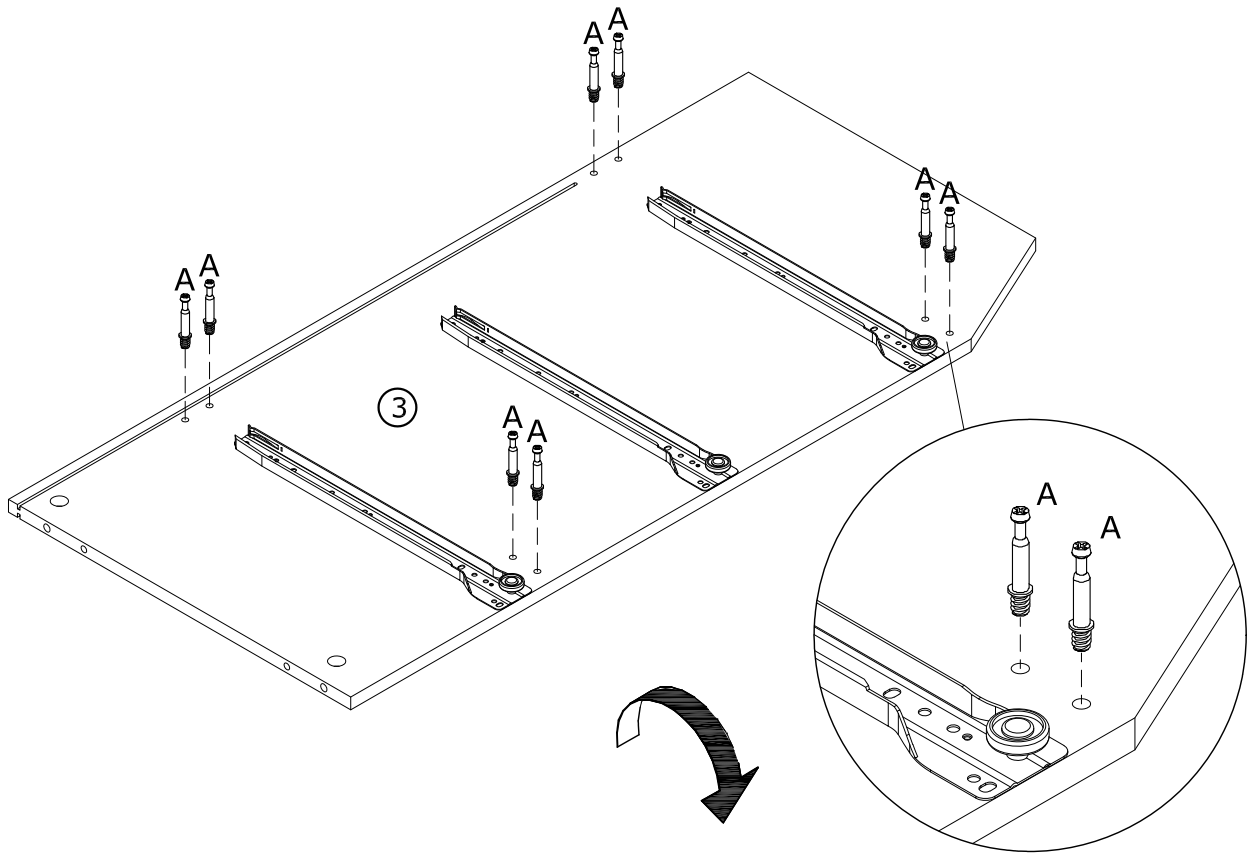

another side

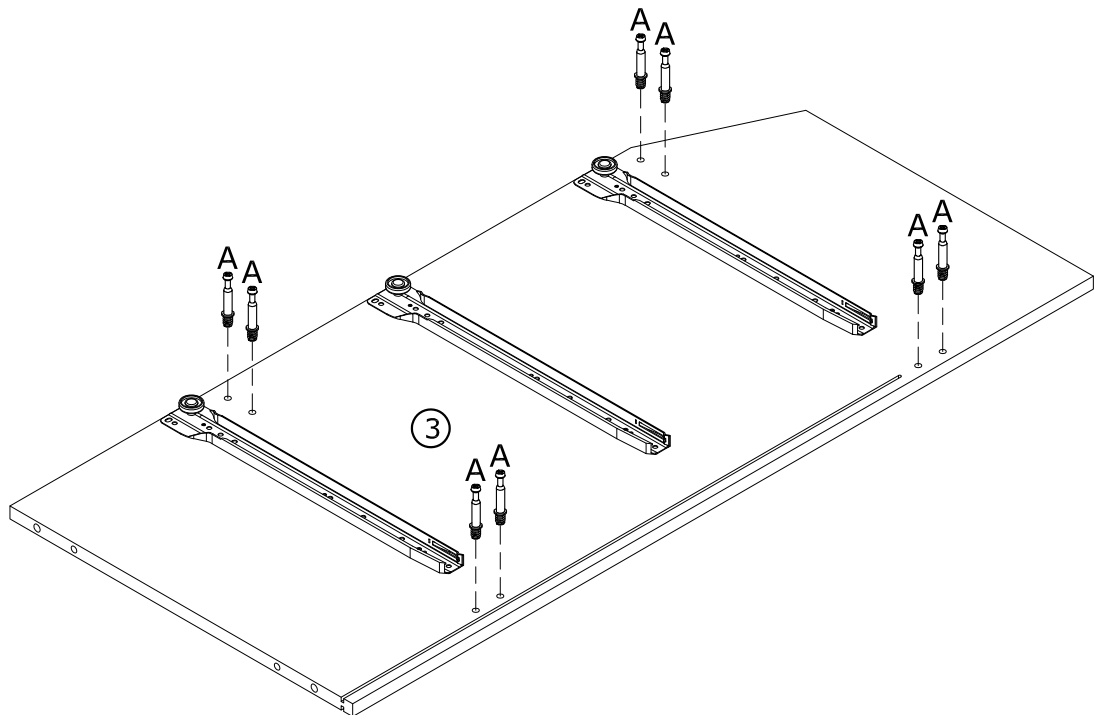




X2

5

B



x8

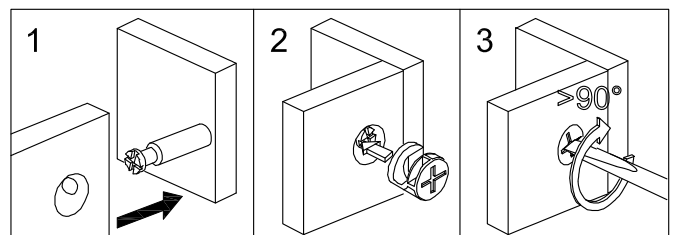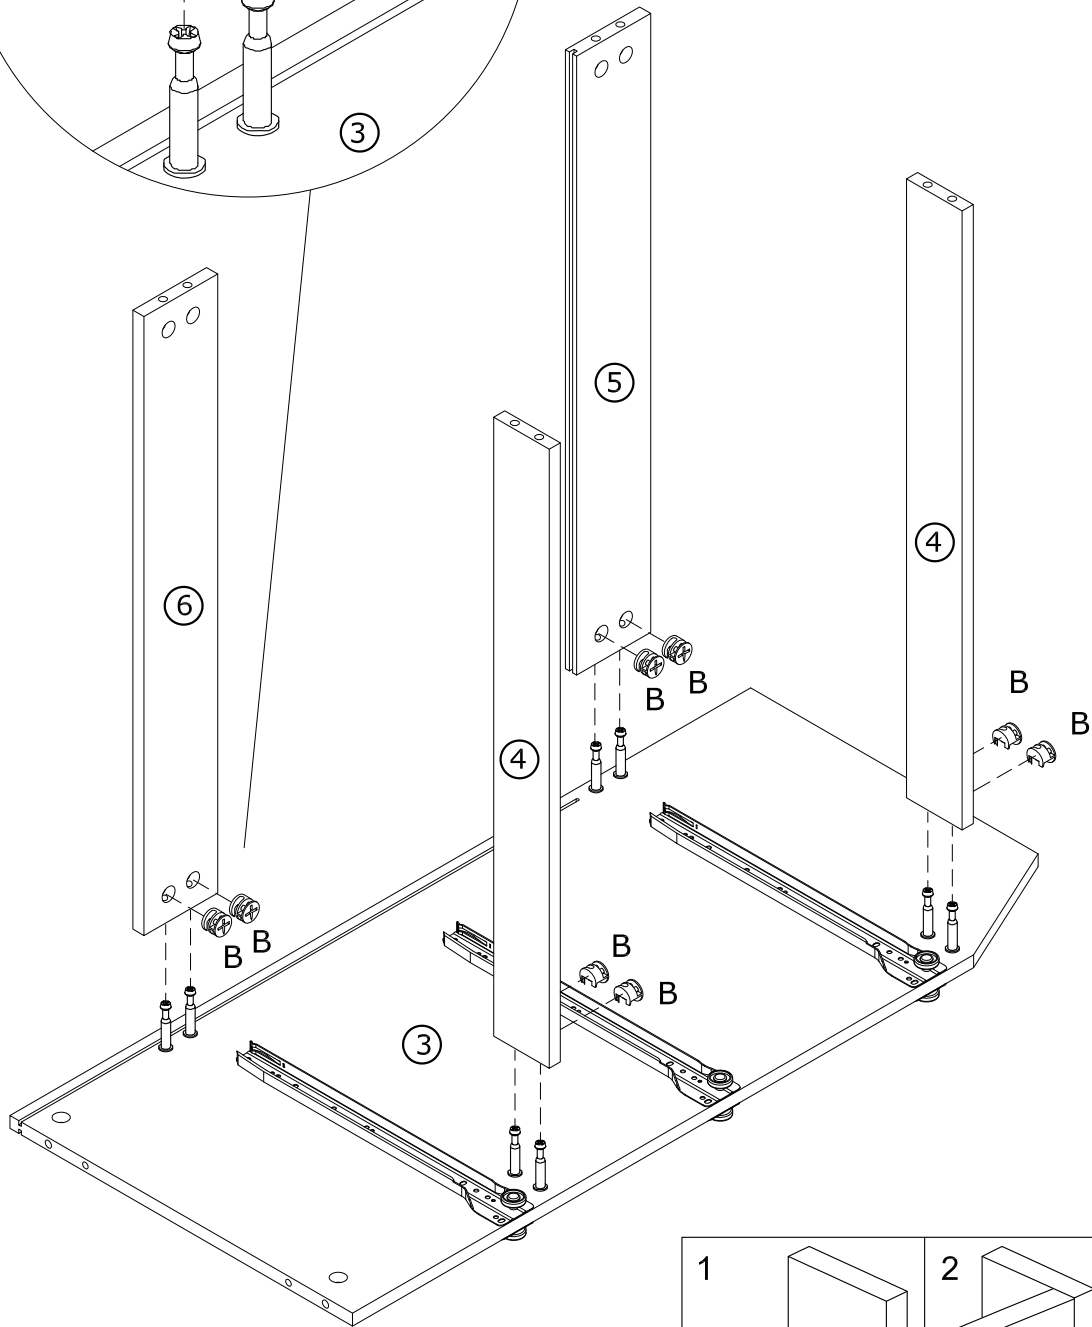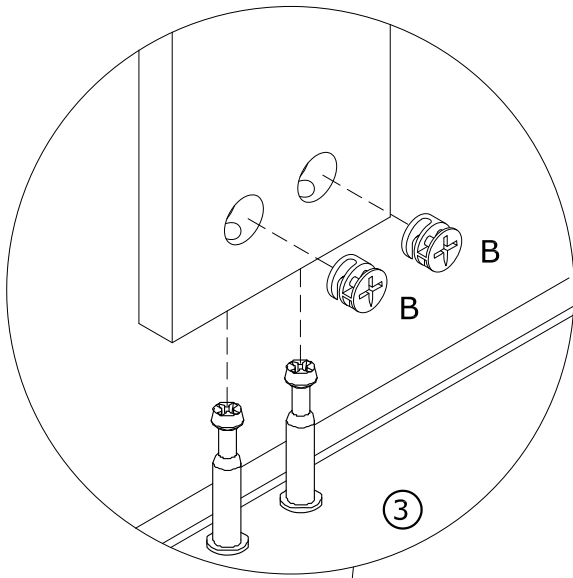


6

B



x8

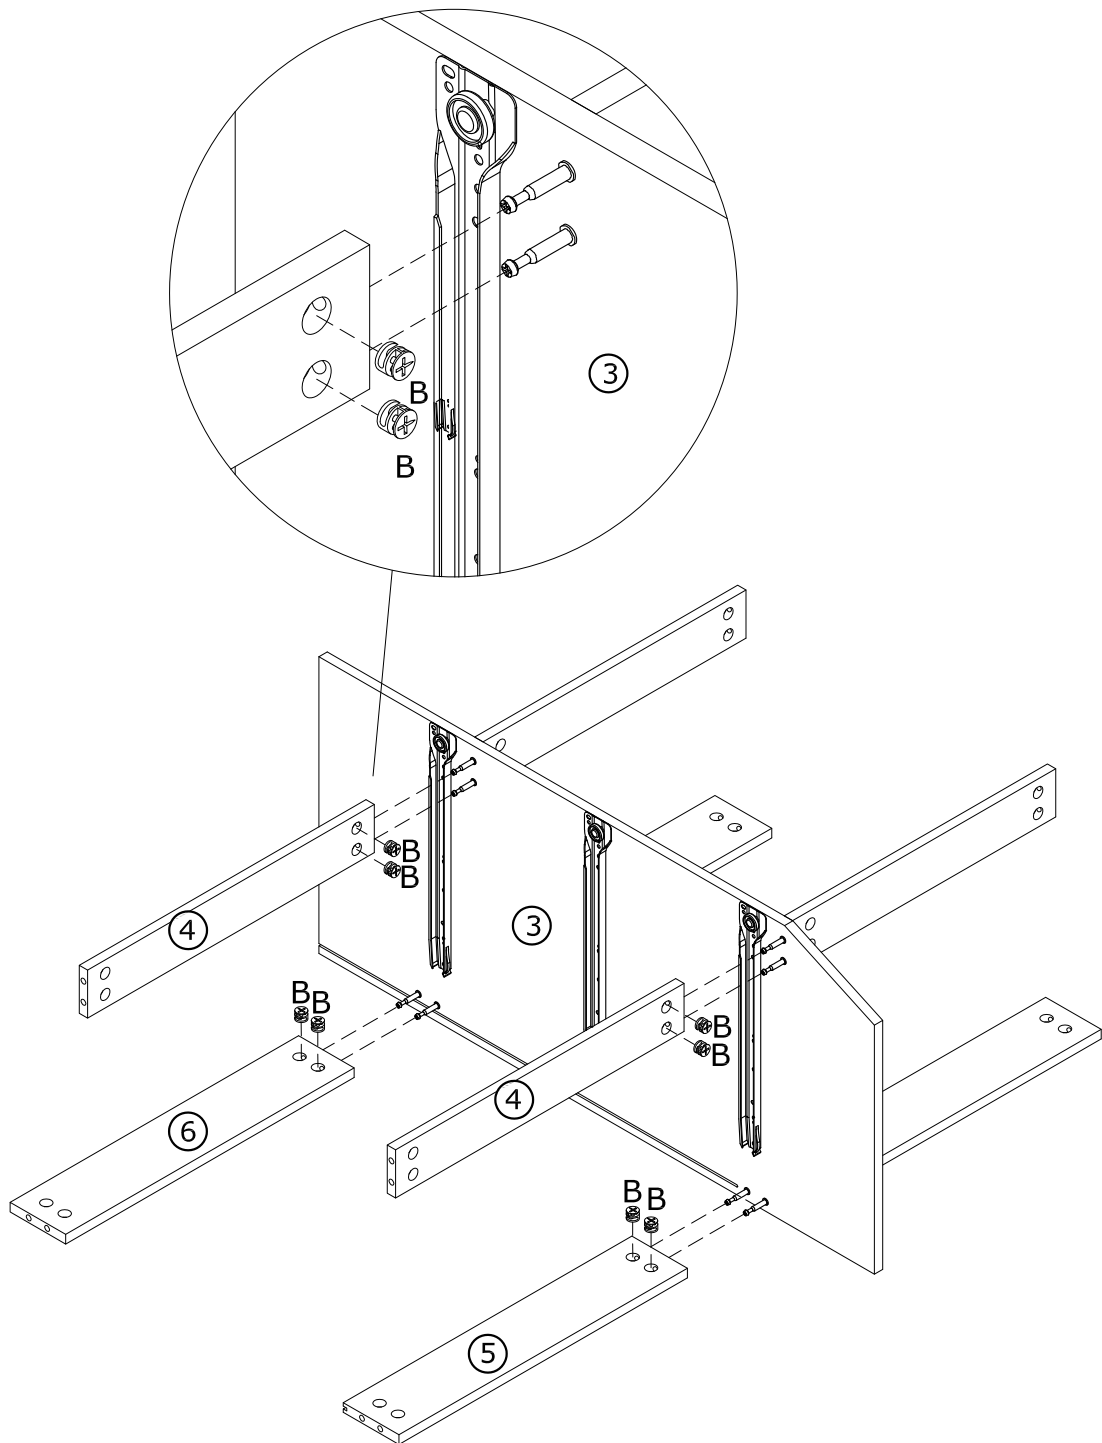


7

B



x8

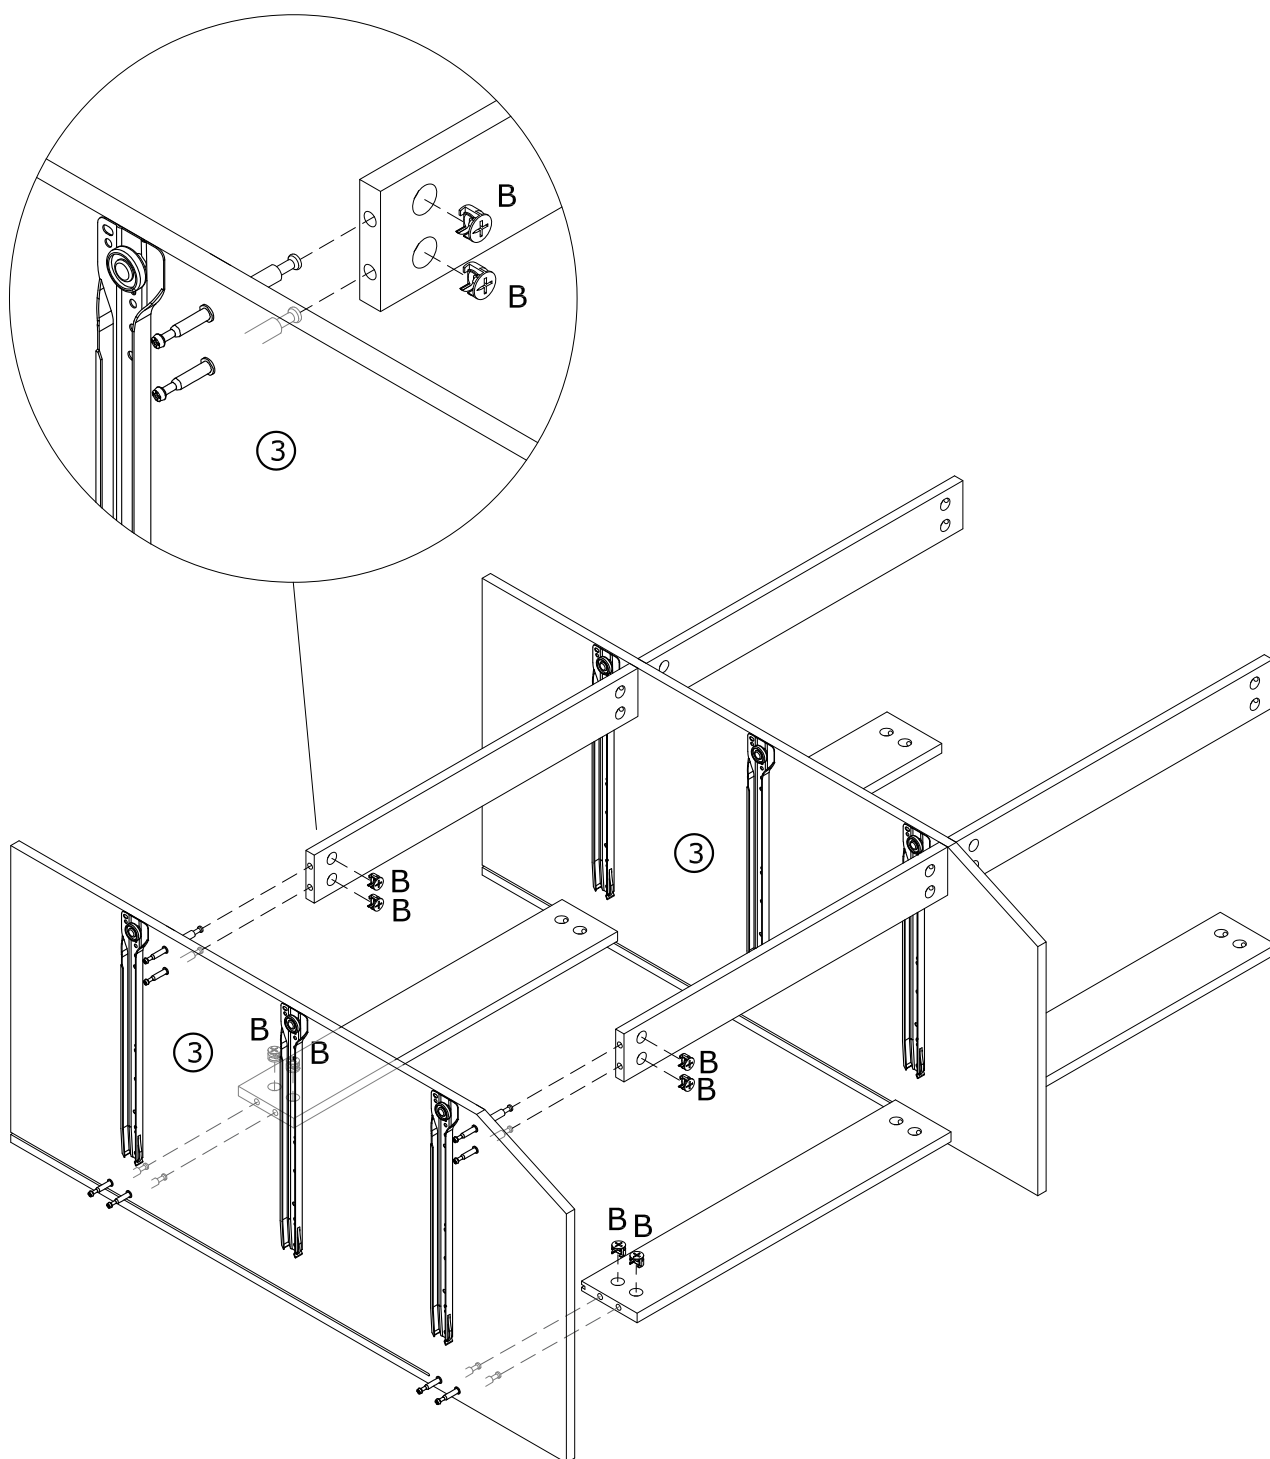


8

B



x8

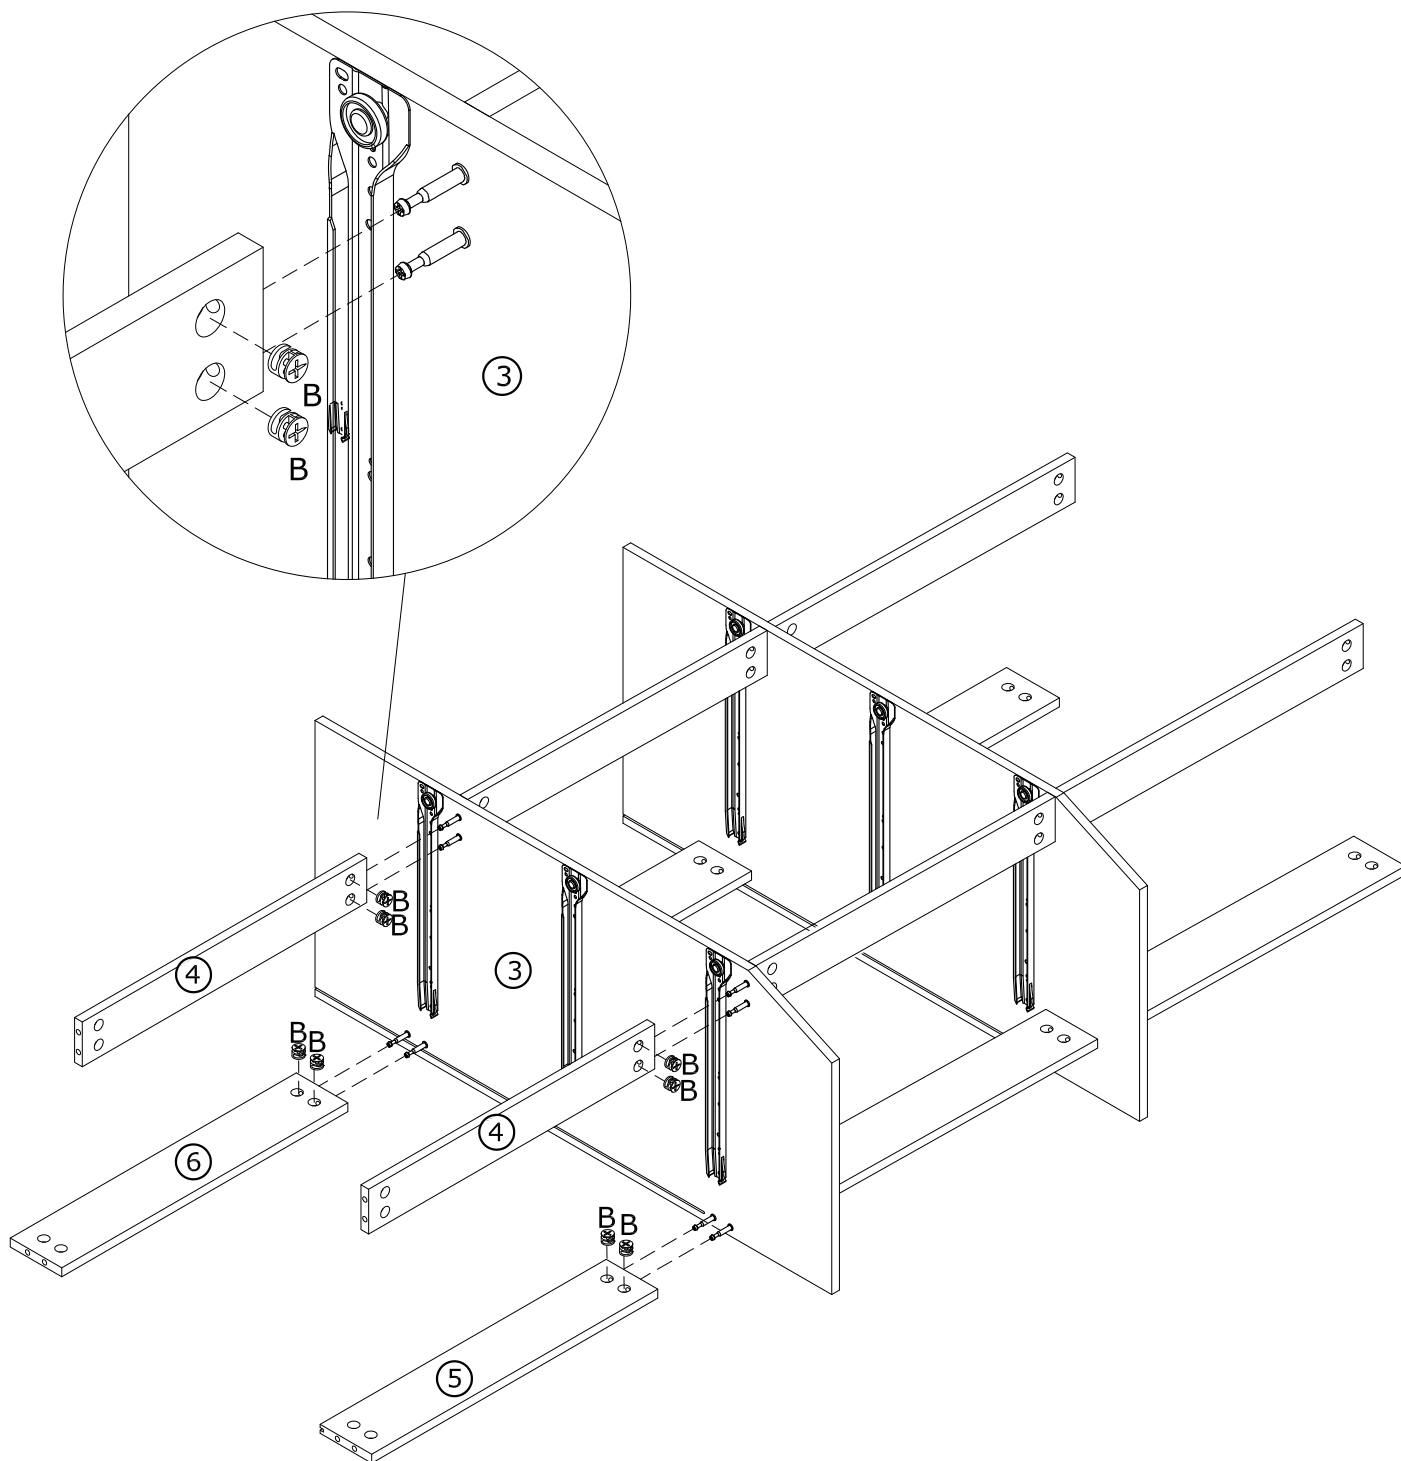


9

B



x8

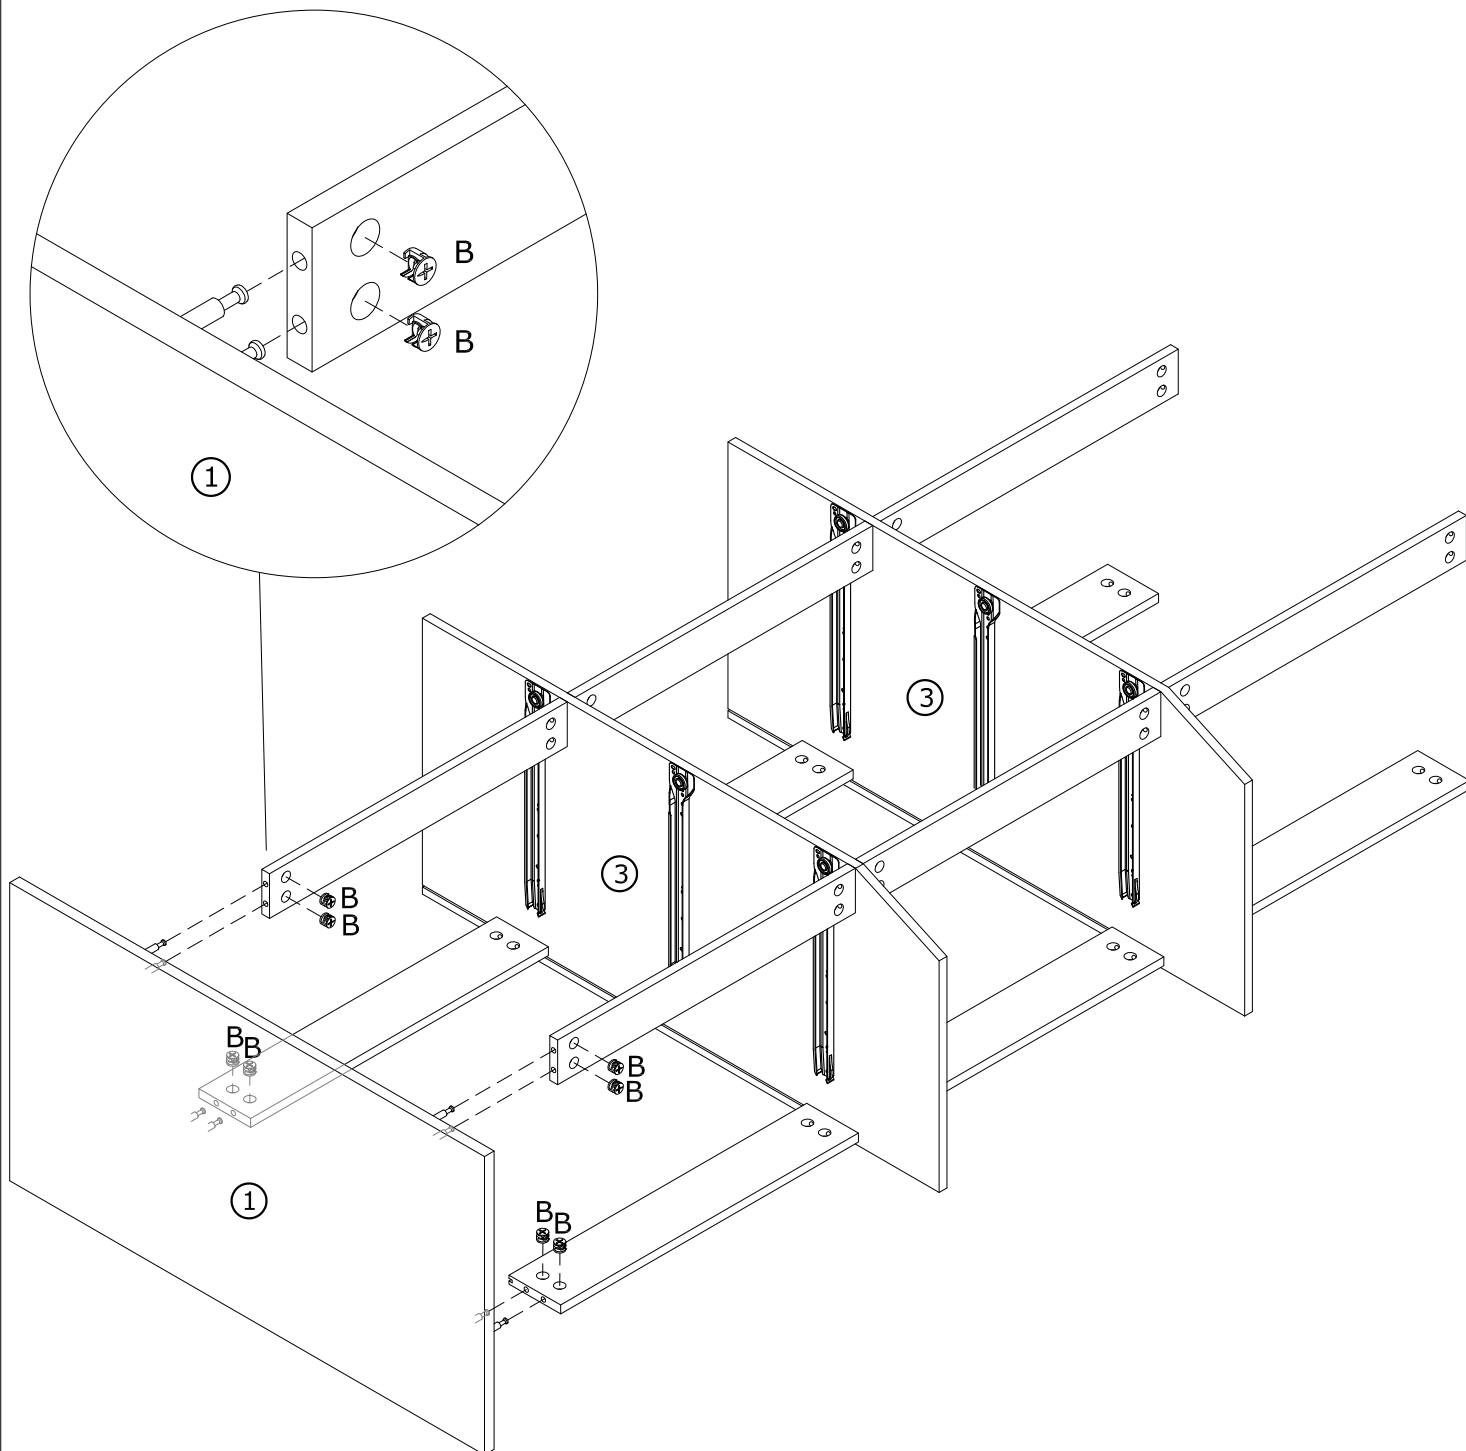


10


B




x8

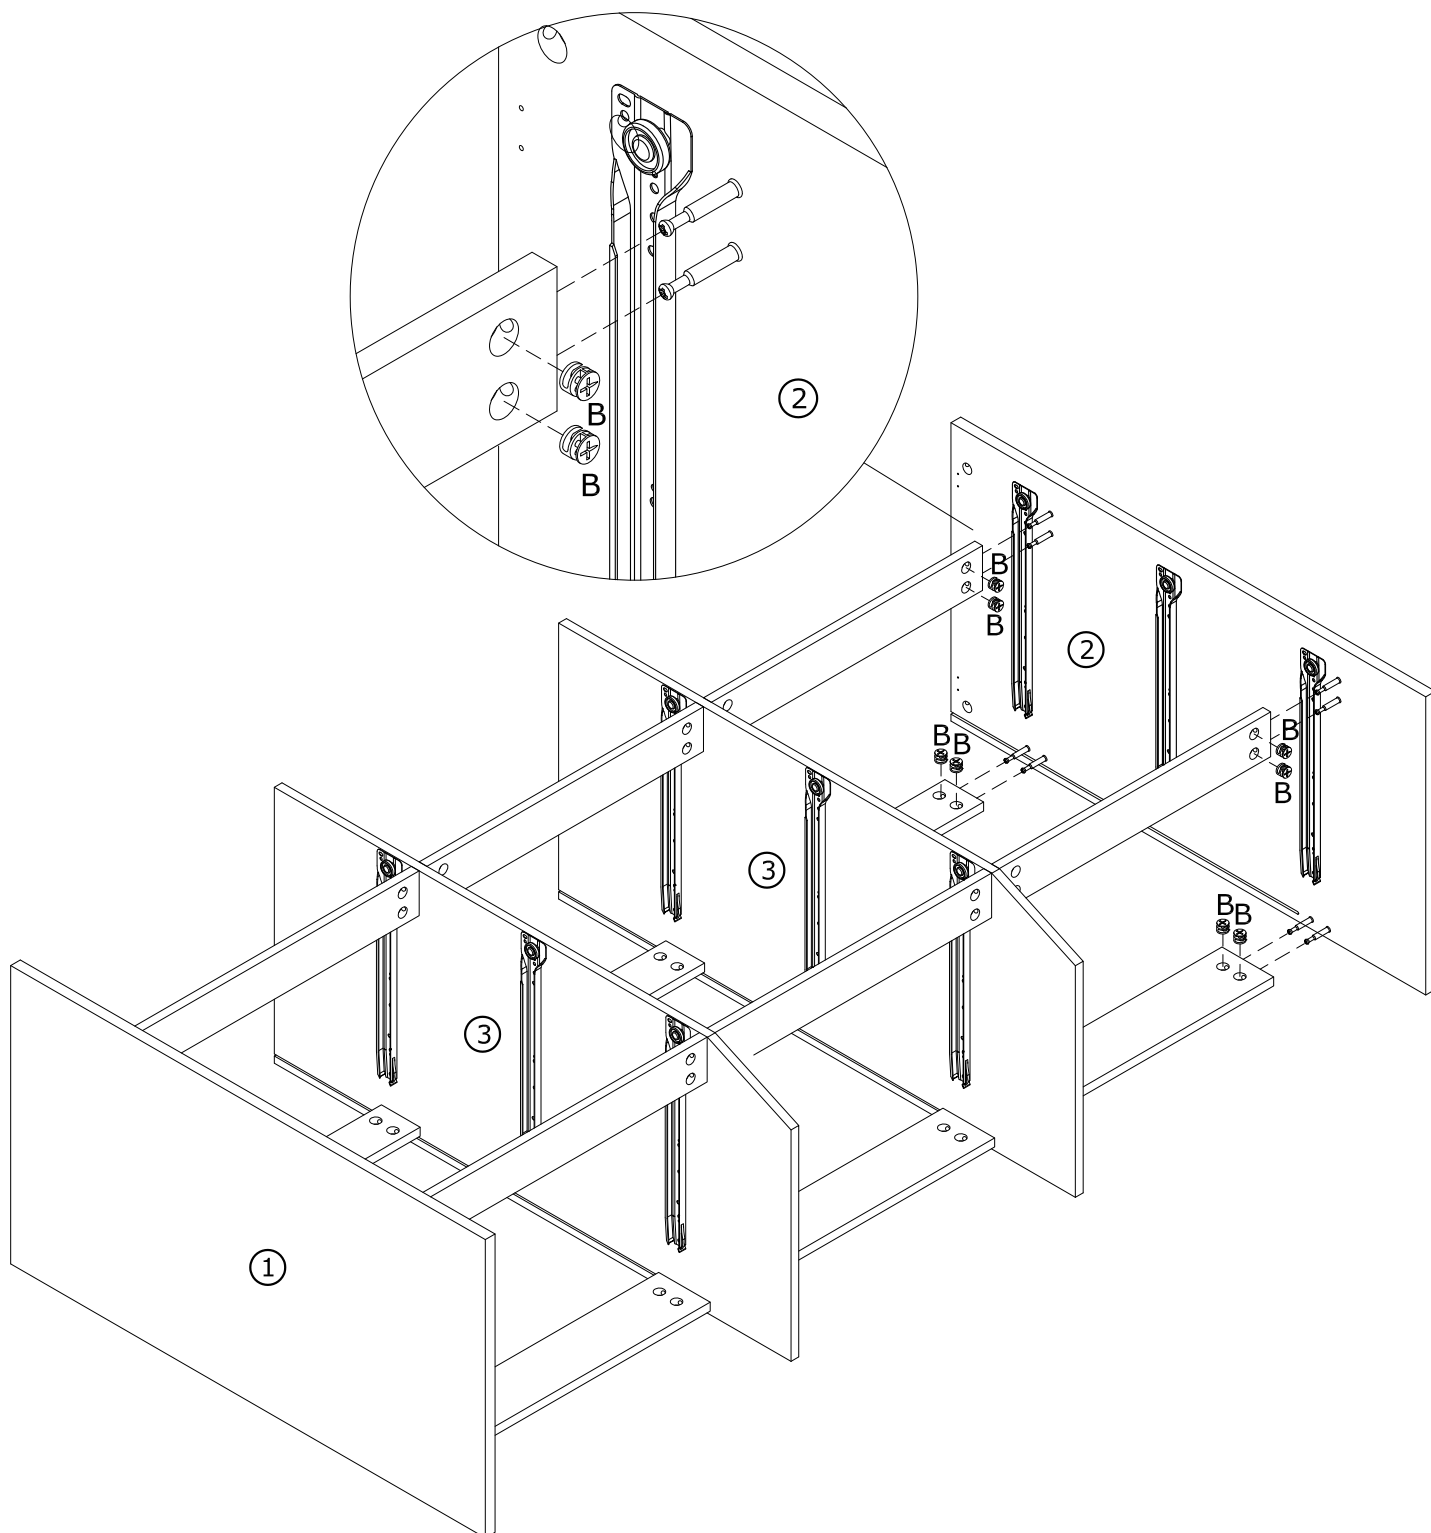



11

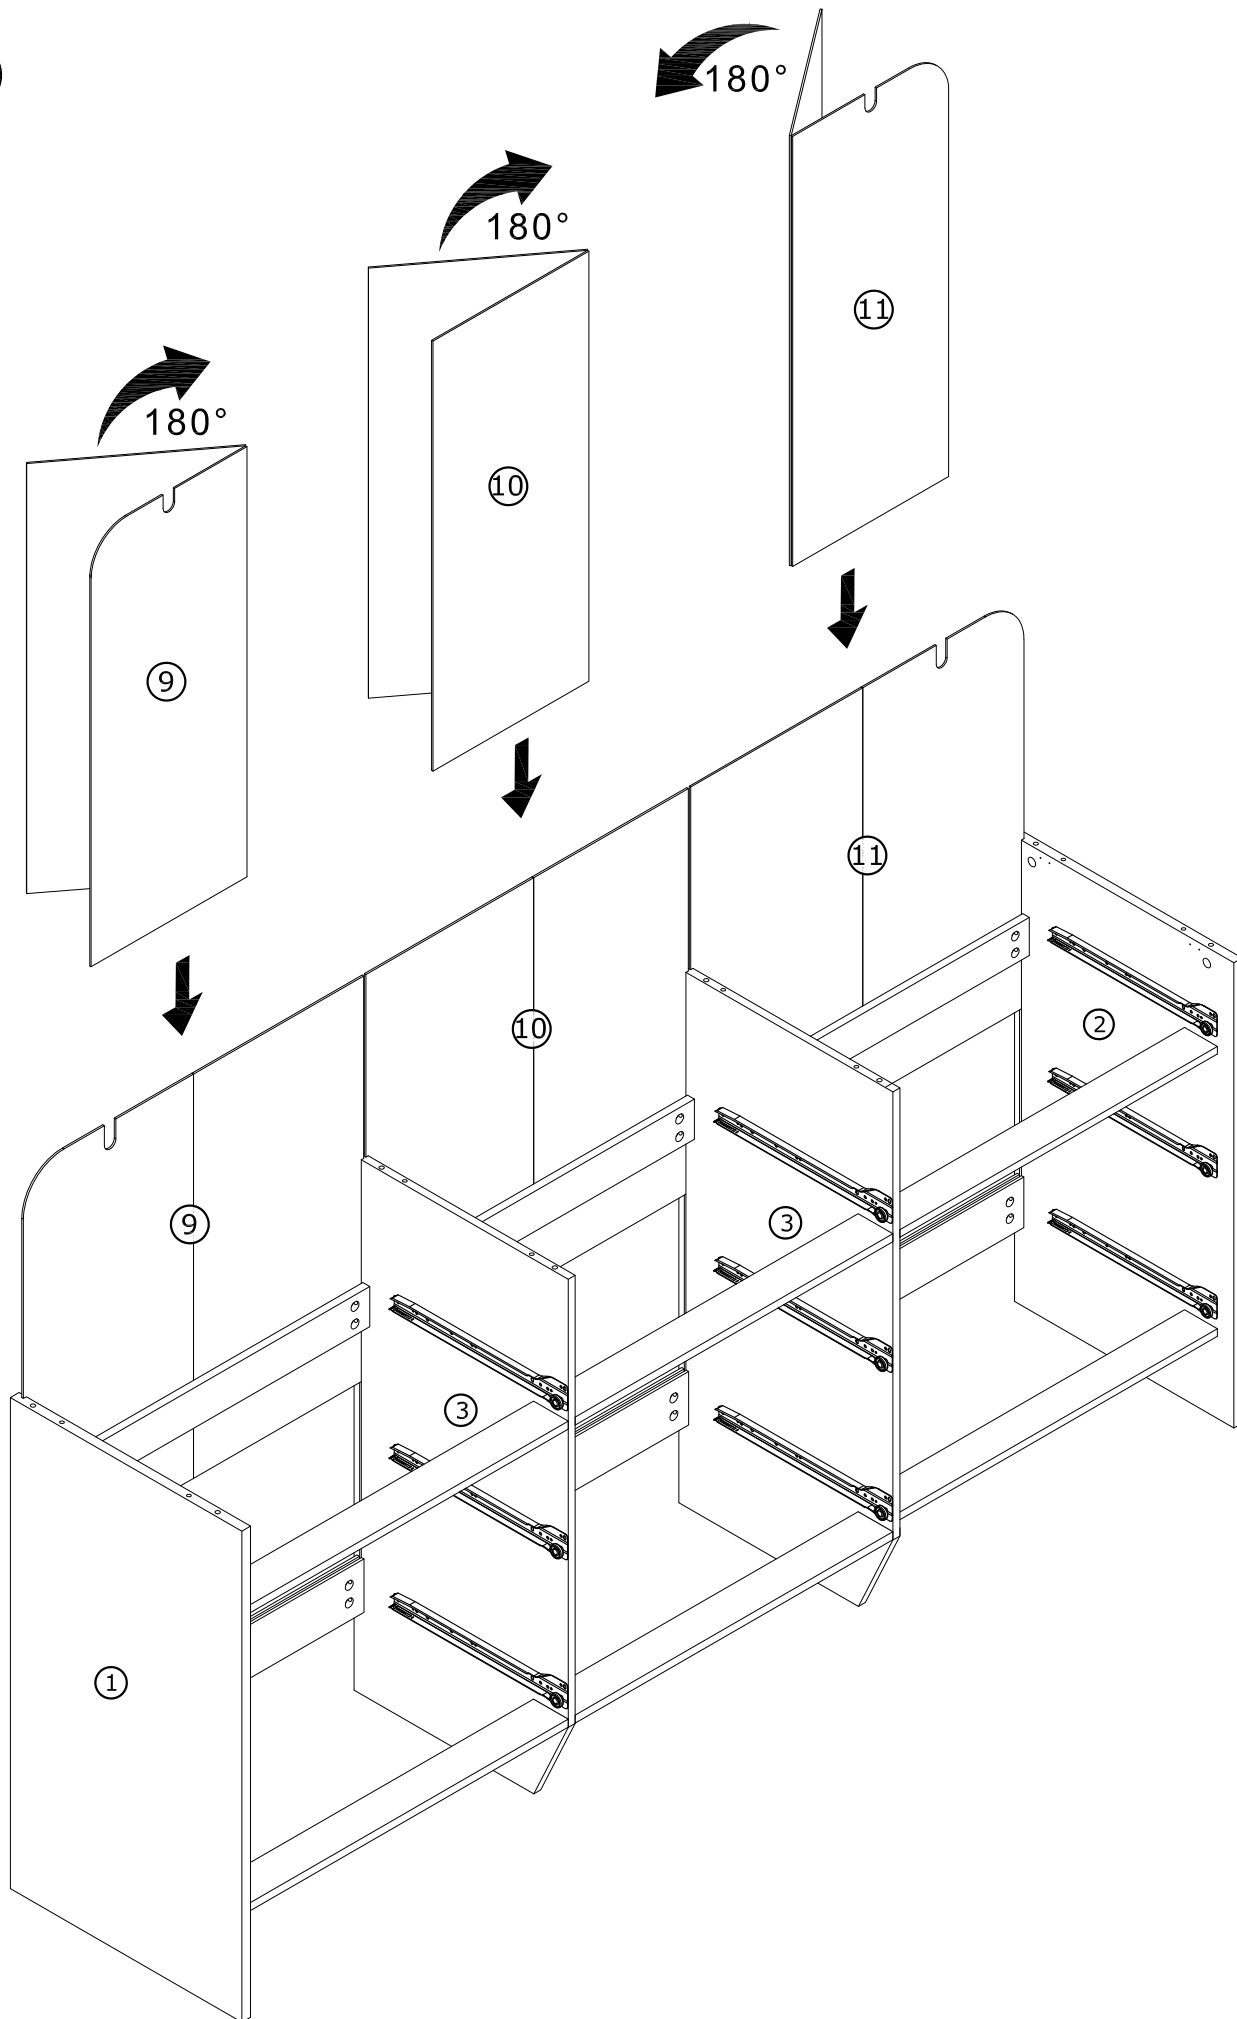


12

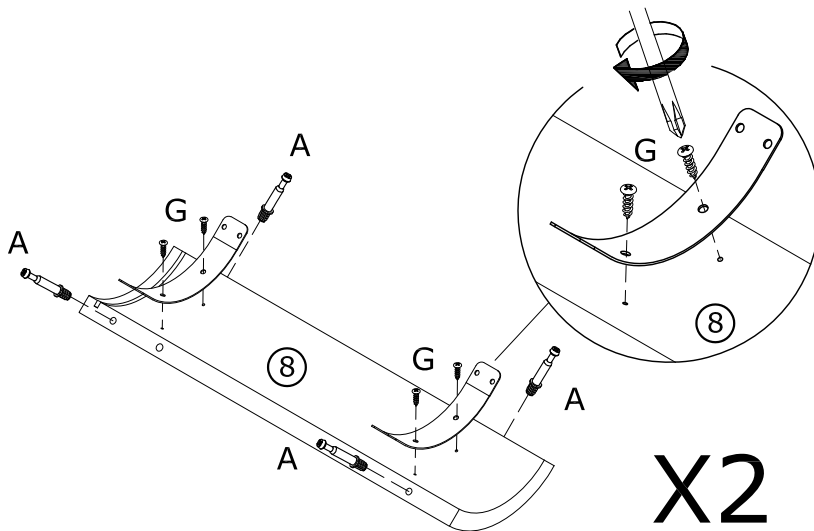






X2

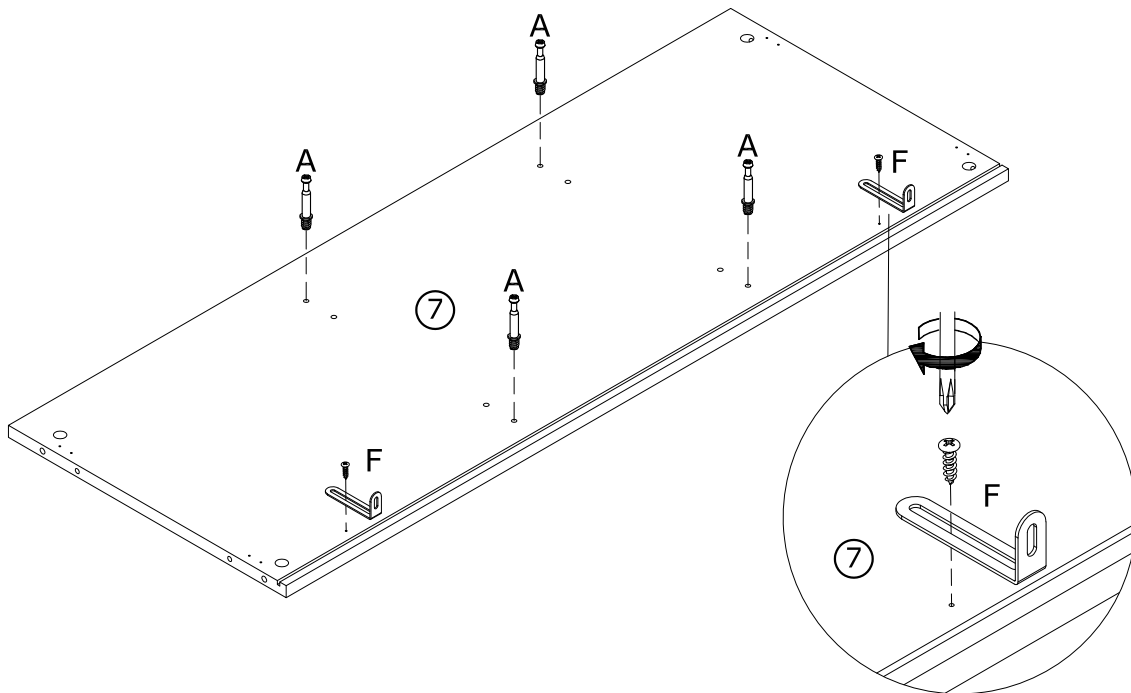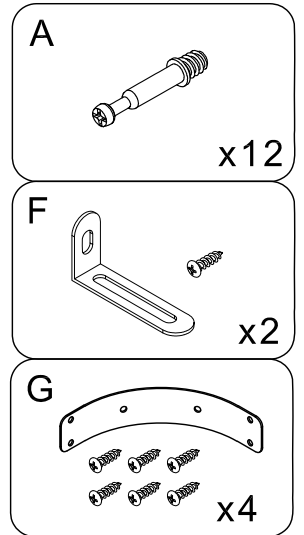




13

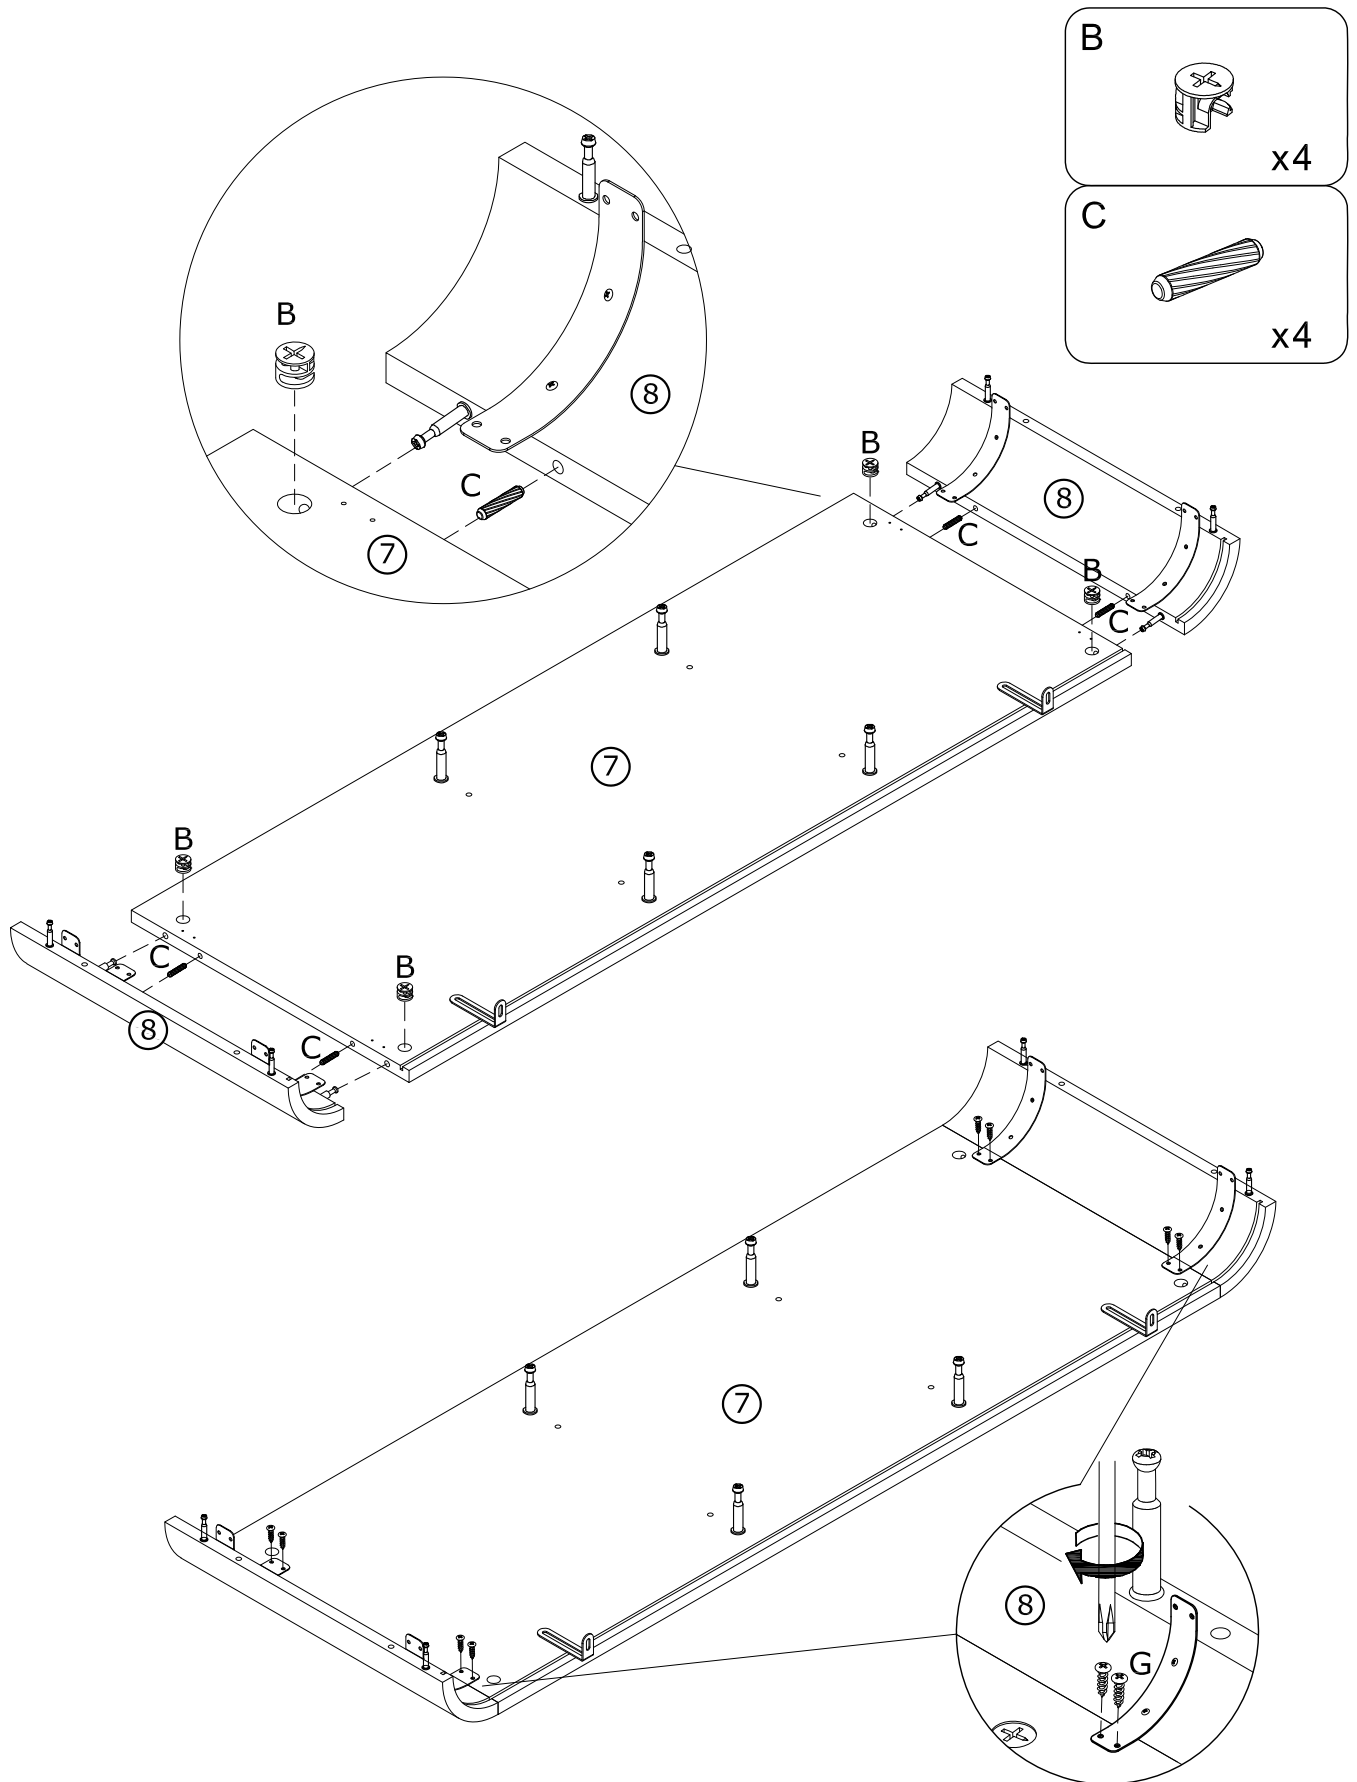





14

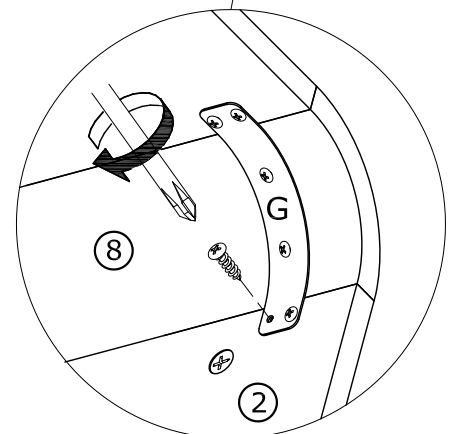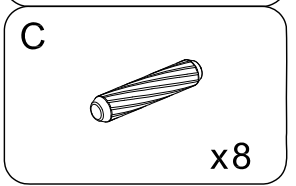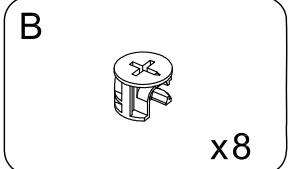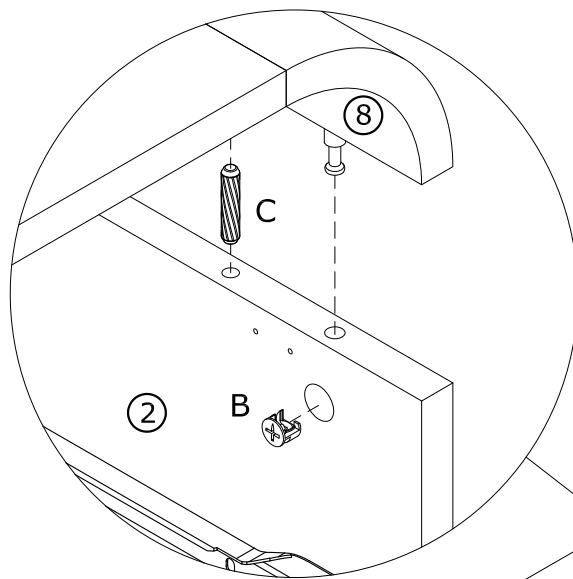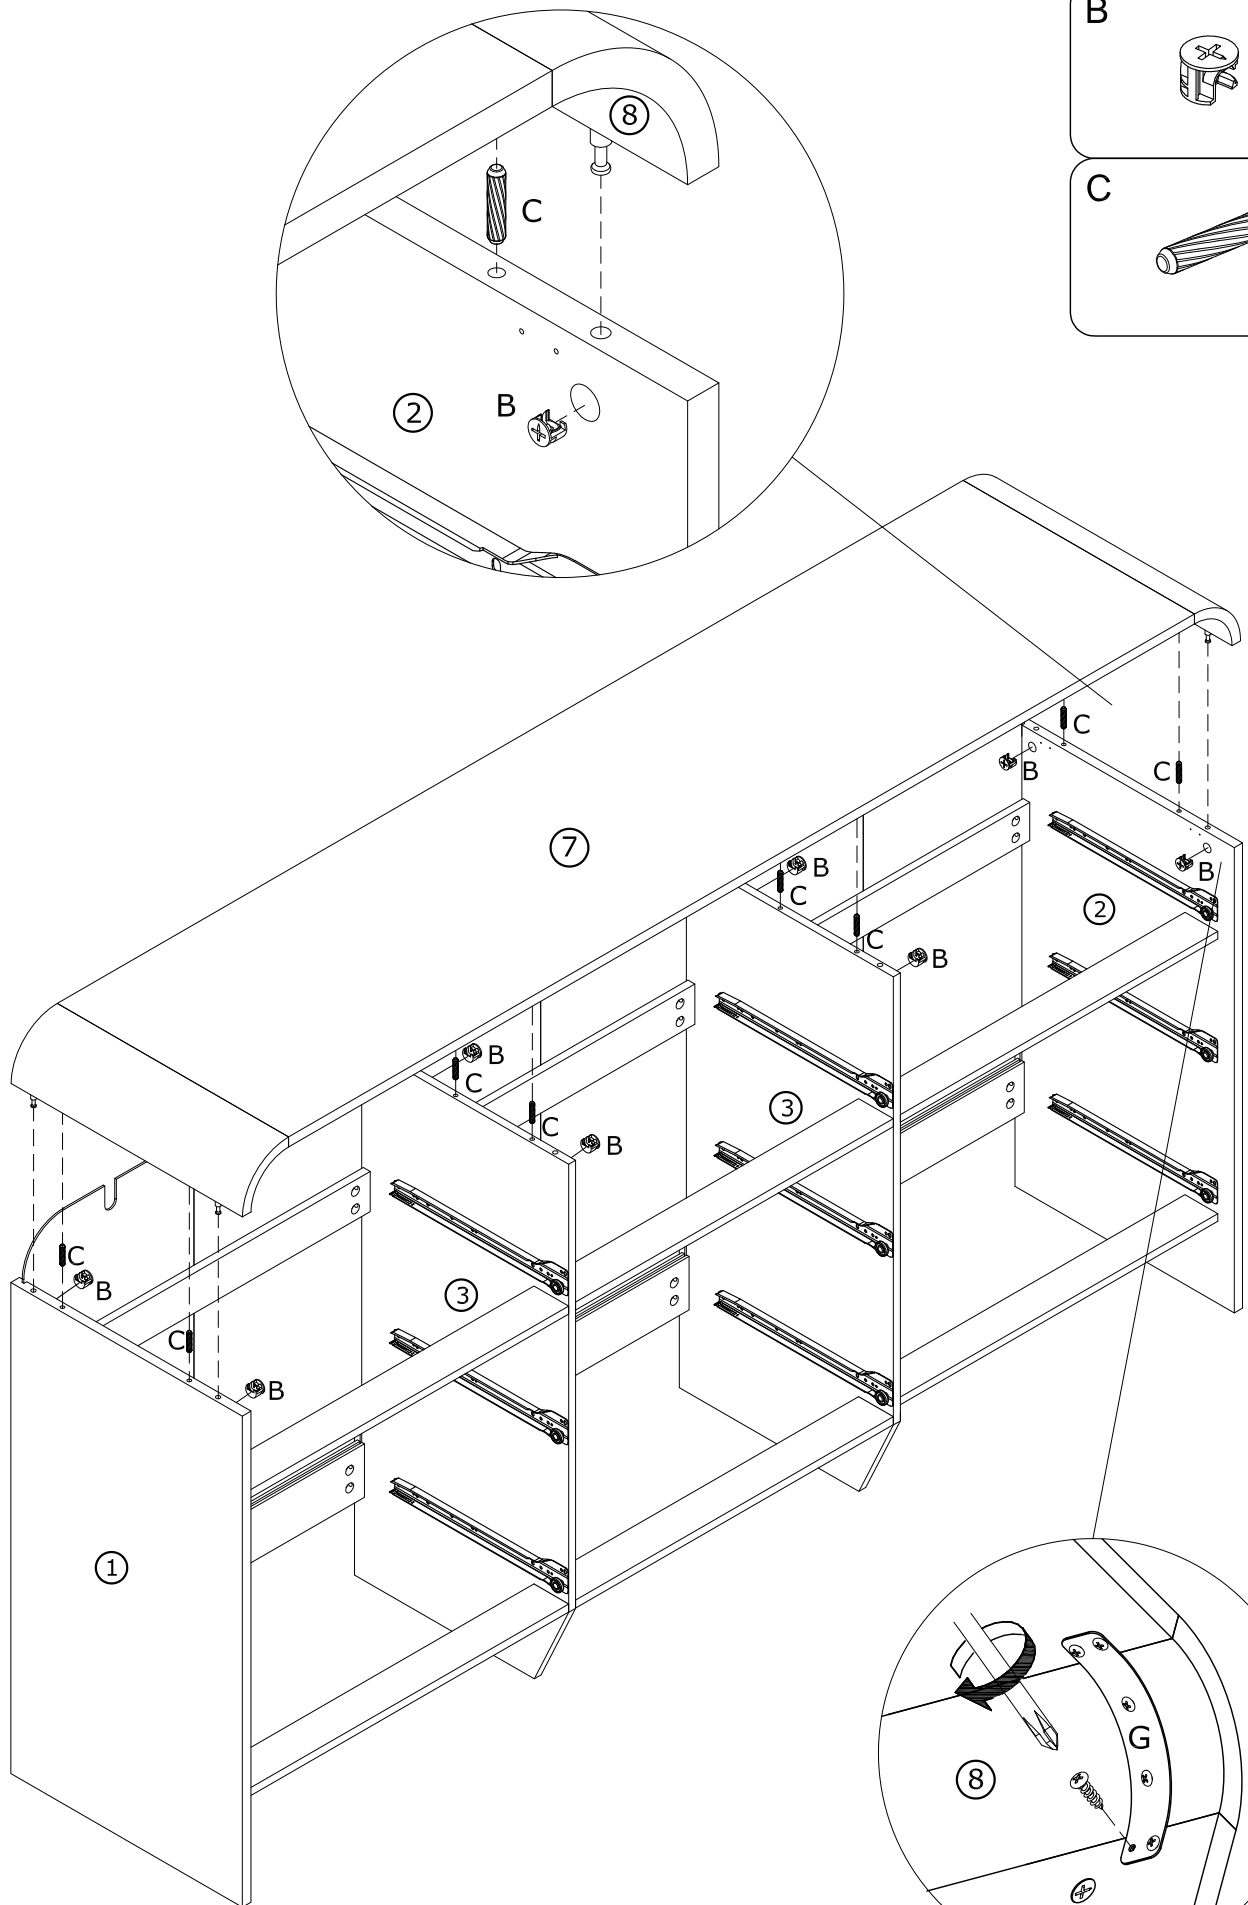




15

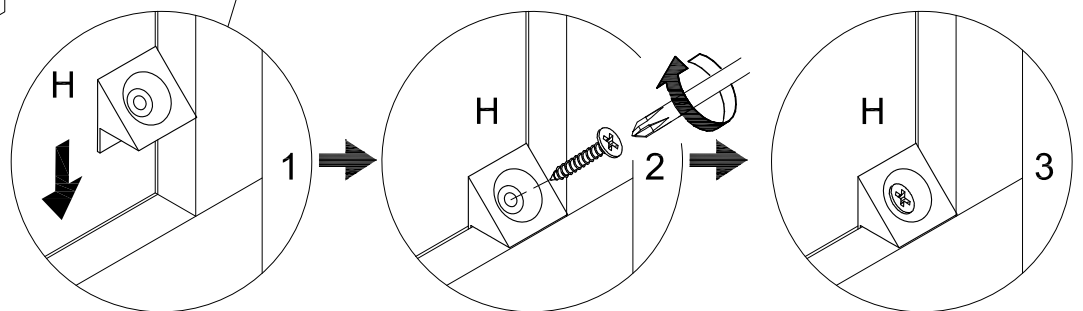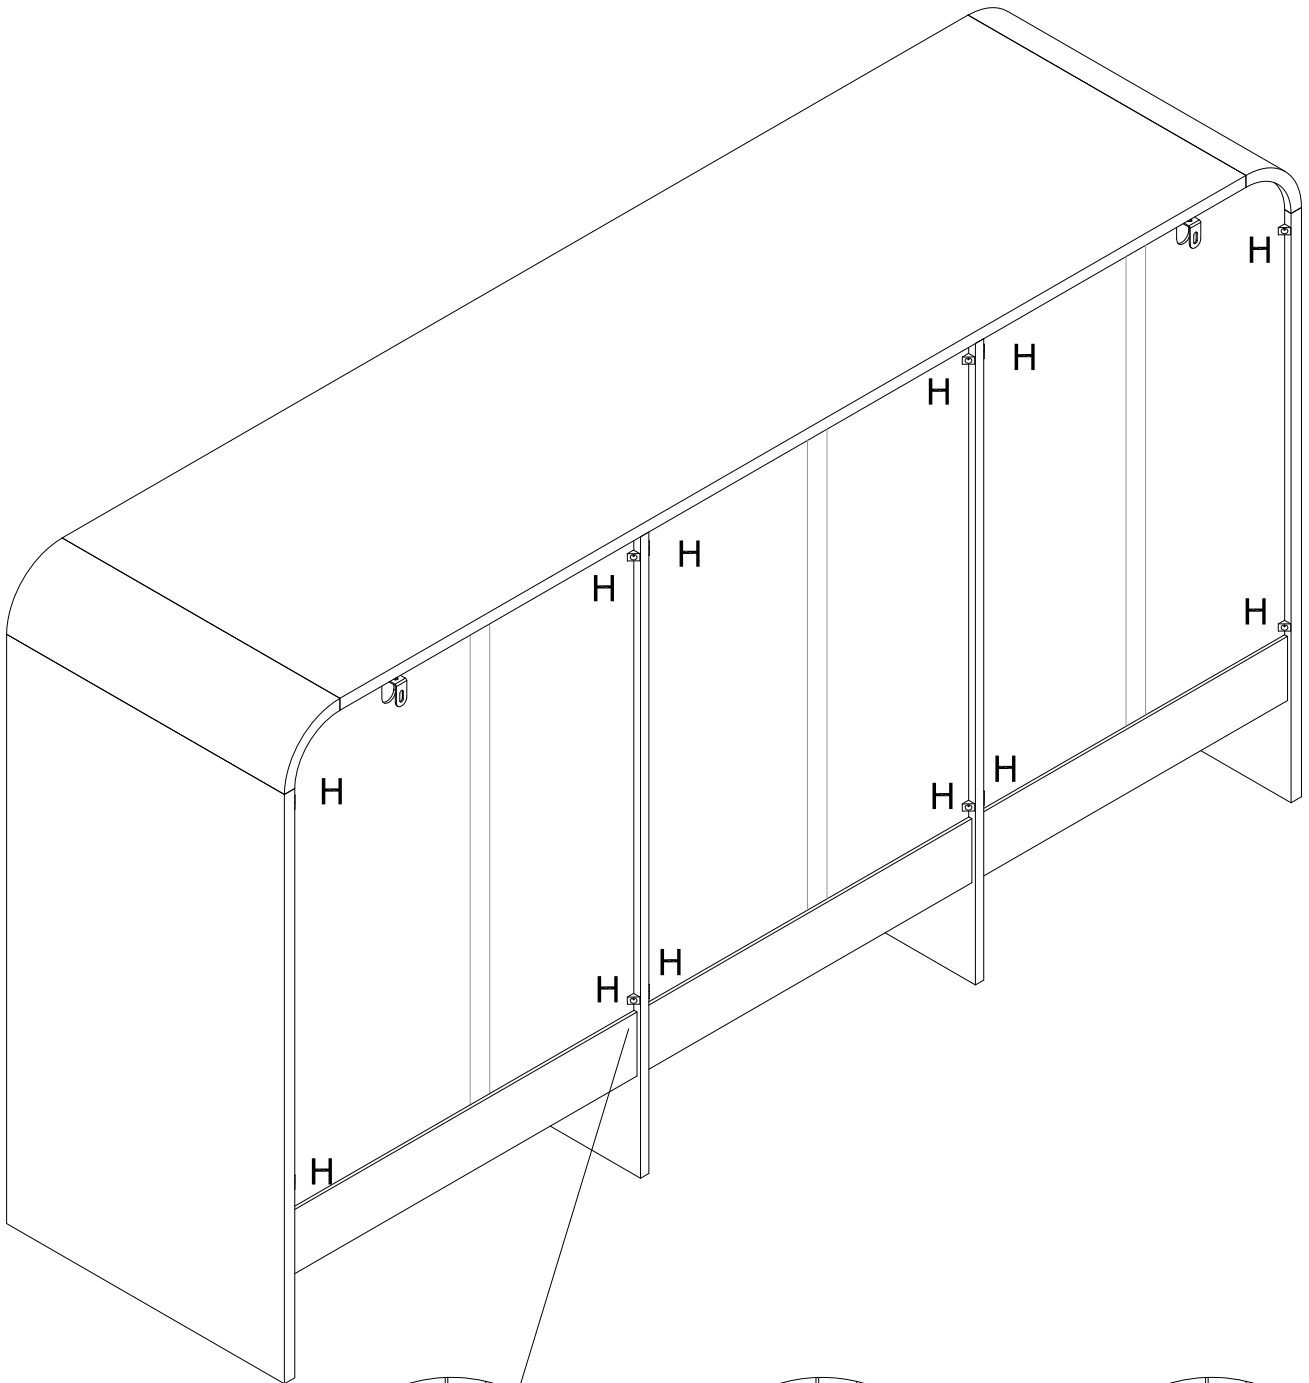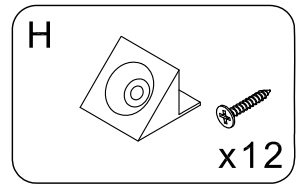


16

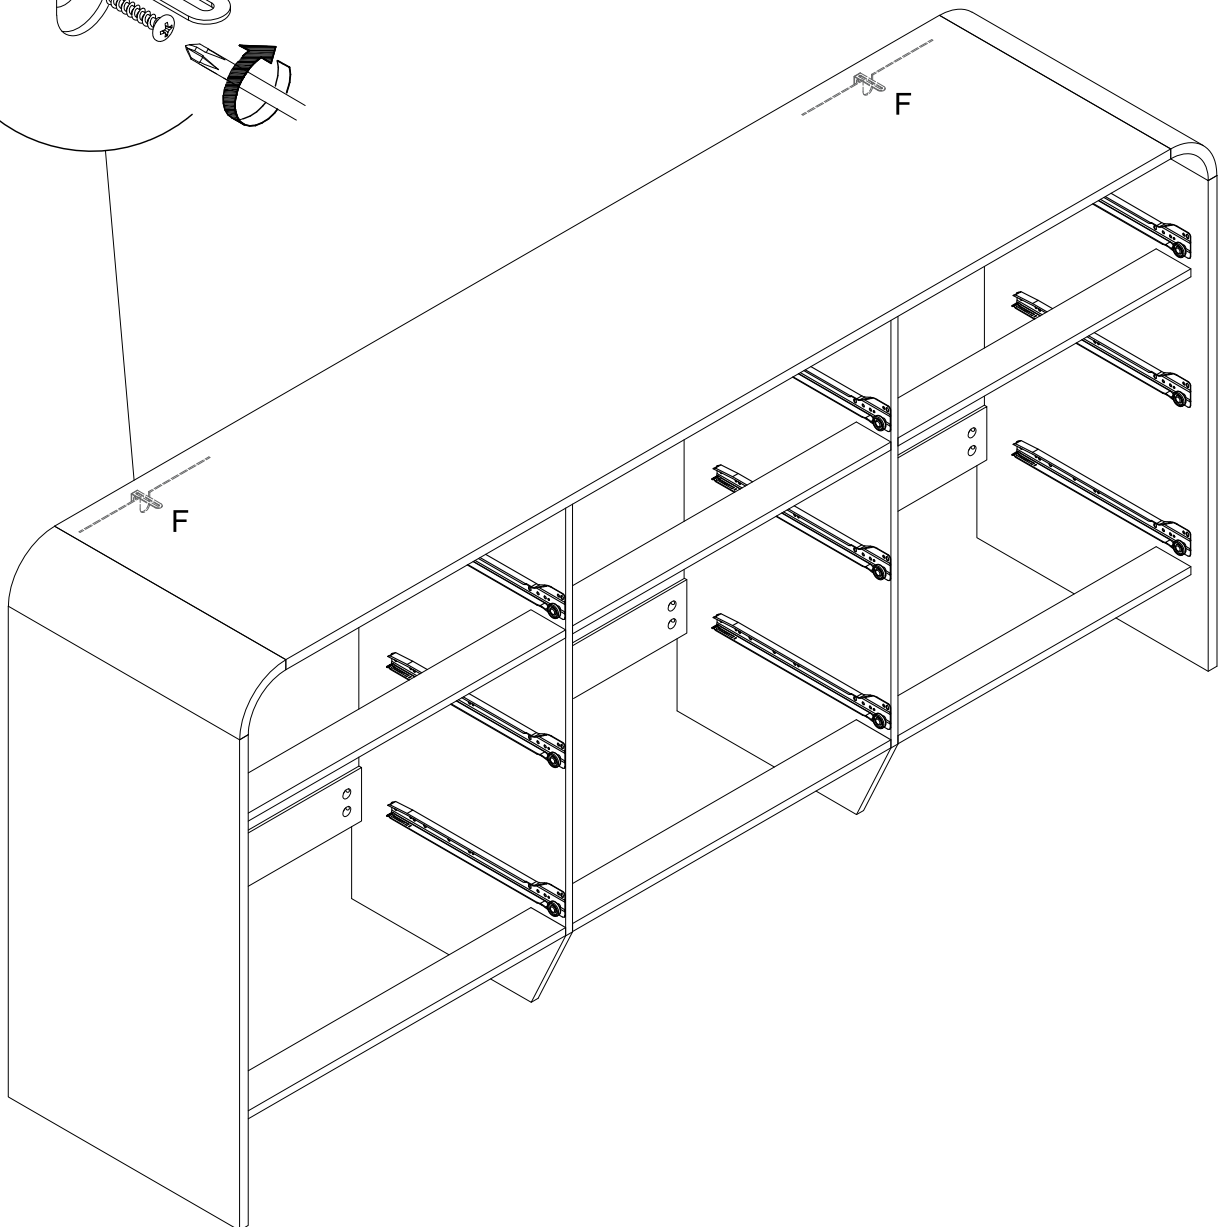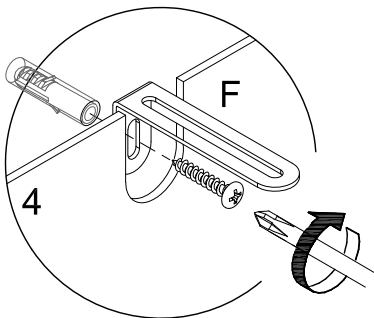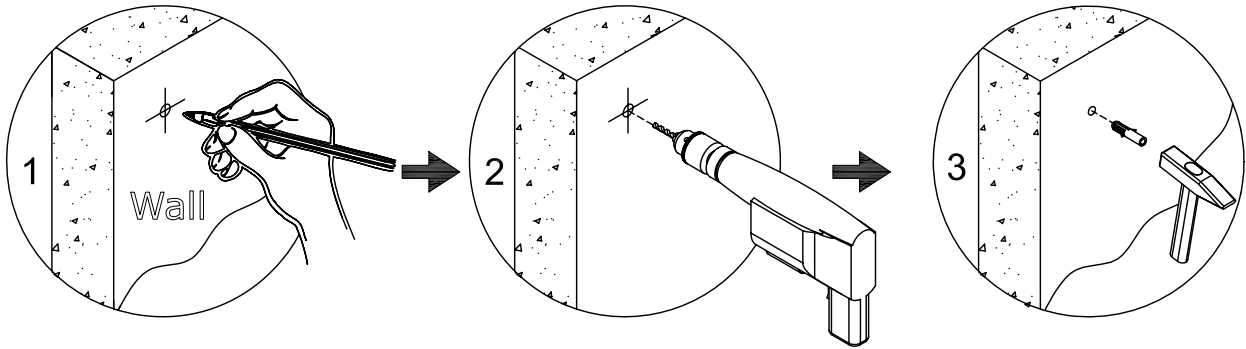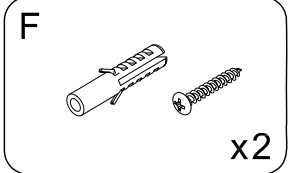



17

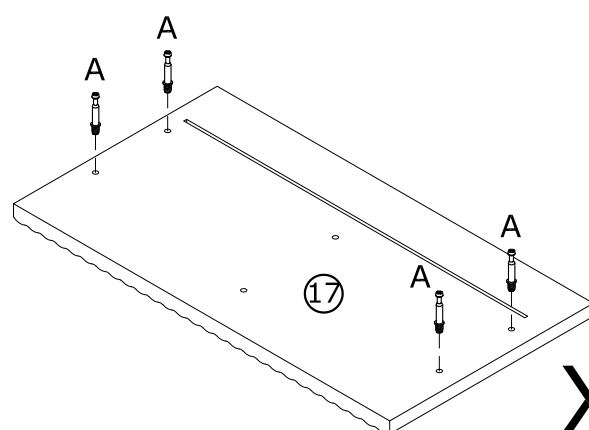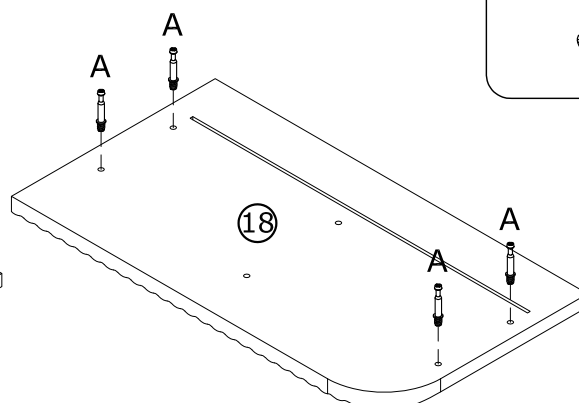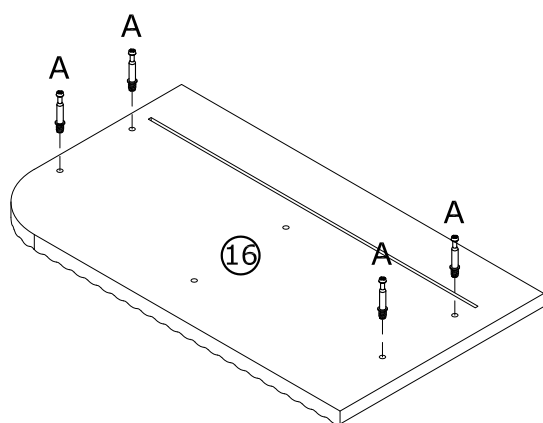



X3

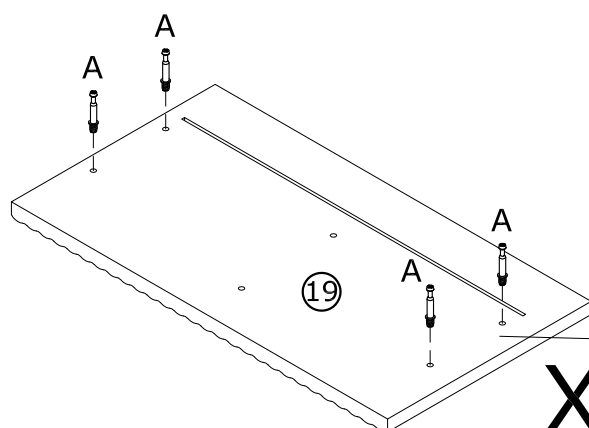

X2

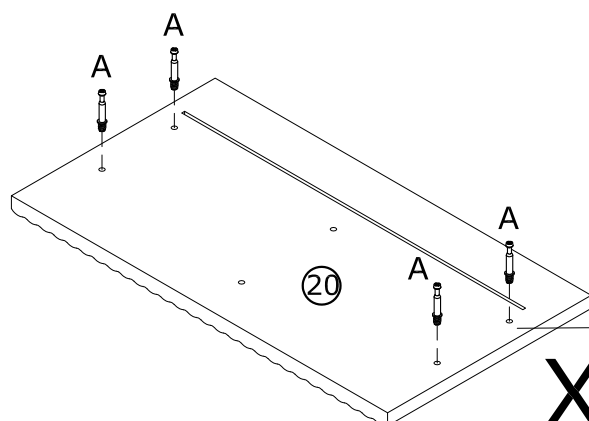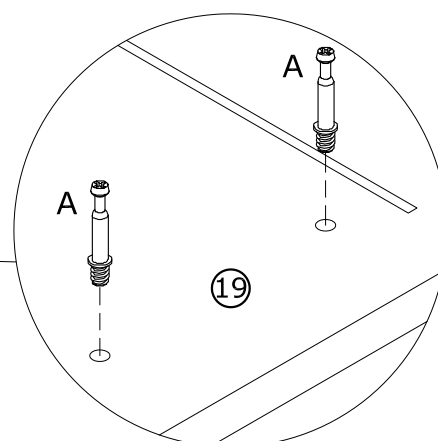

X2

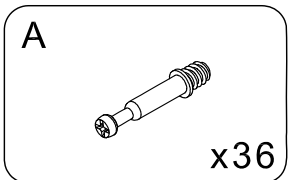
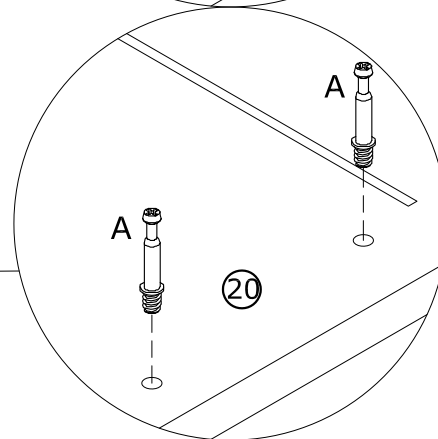


18

D






x36

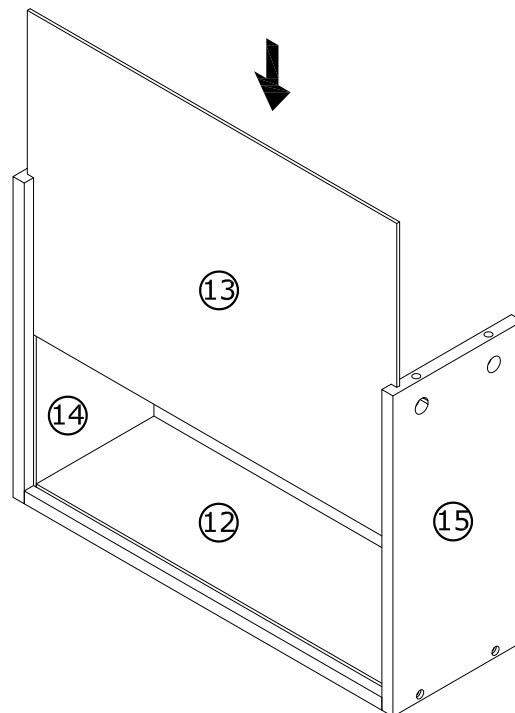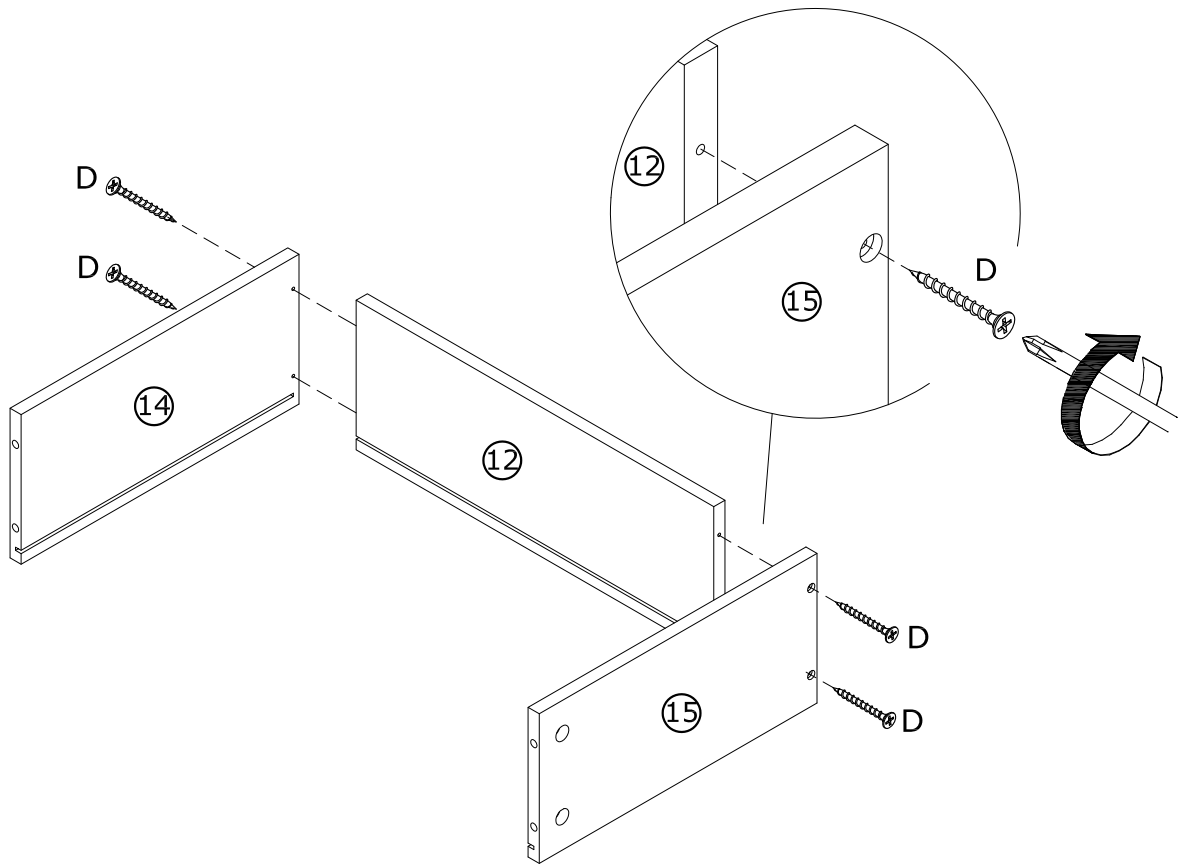


X9


19

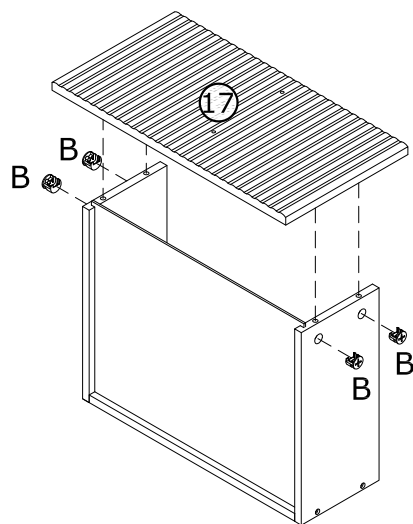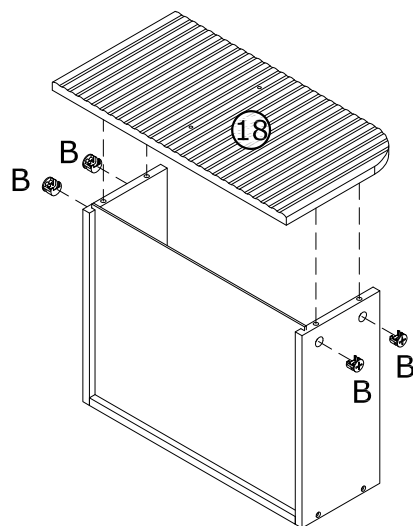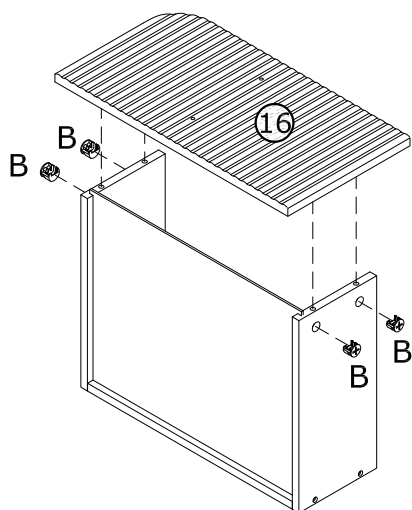

X3

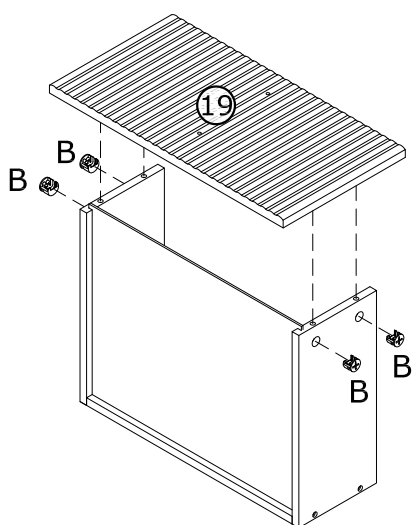

X2




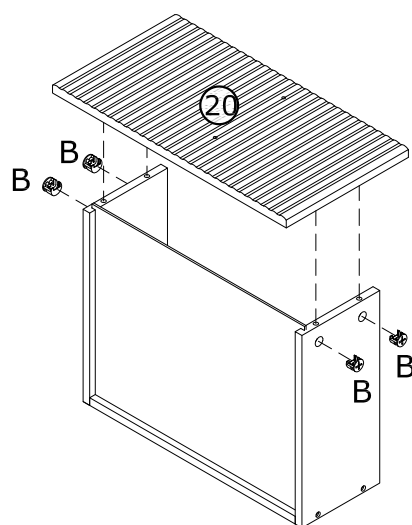


X2


B




x36

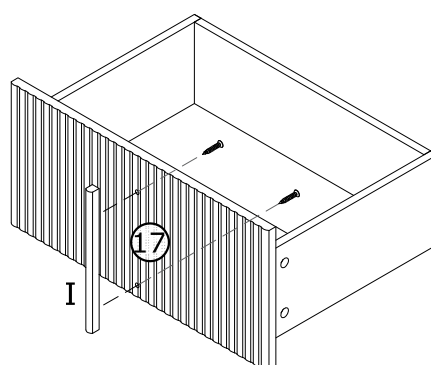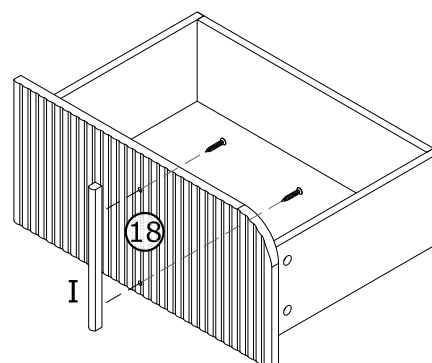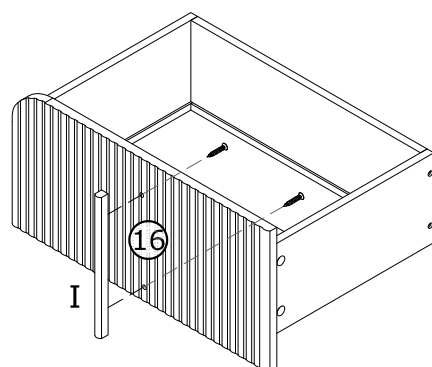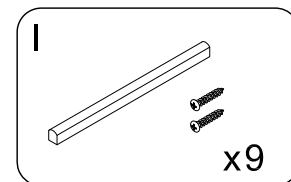

X3

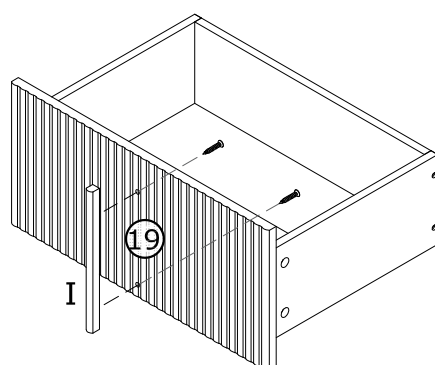

X2

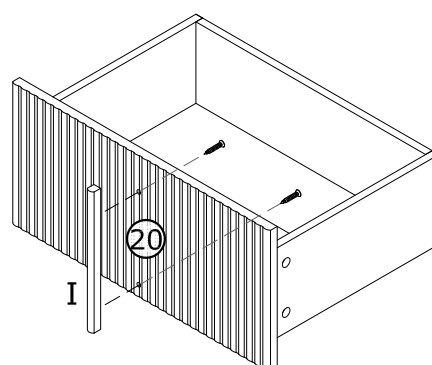

X2


21

E



x36

DL






x9

DR



x9

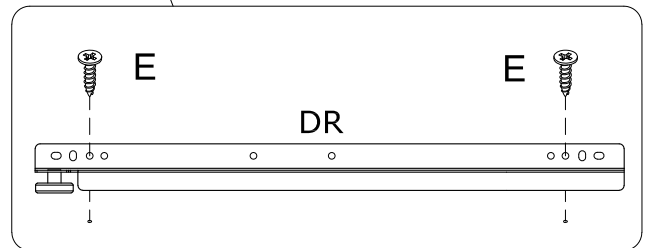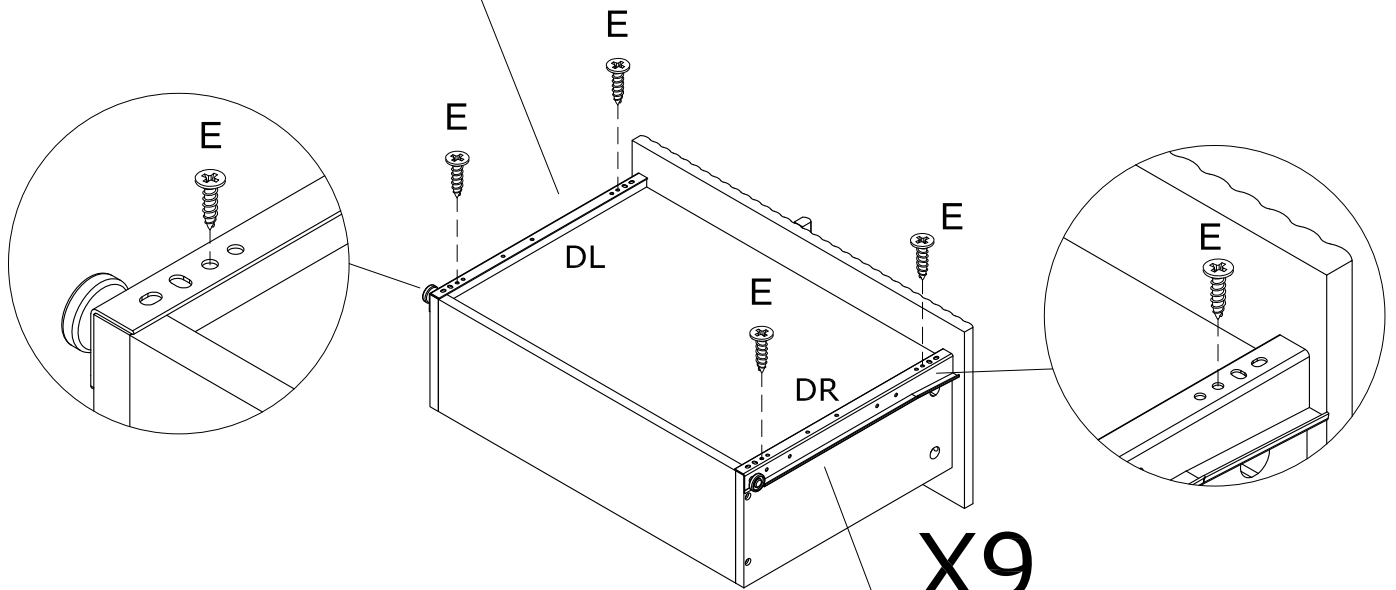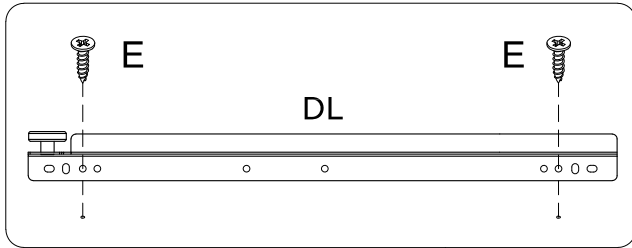

22



Pay attention to the drawer number; do not place items incorrectly

