


ASSEMBLY INSTRUCTIONS

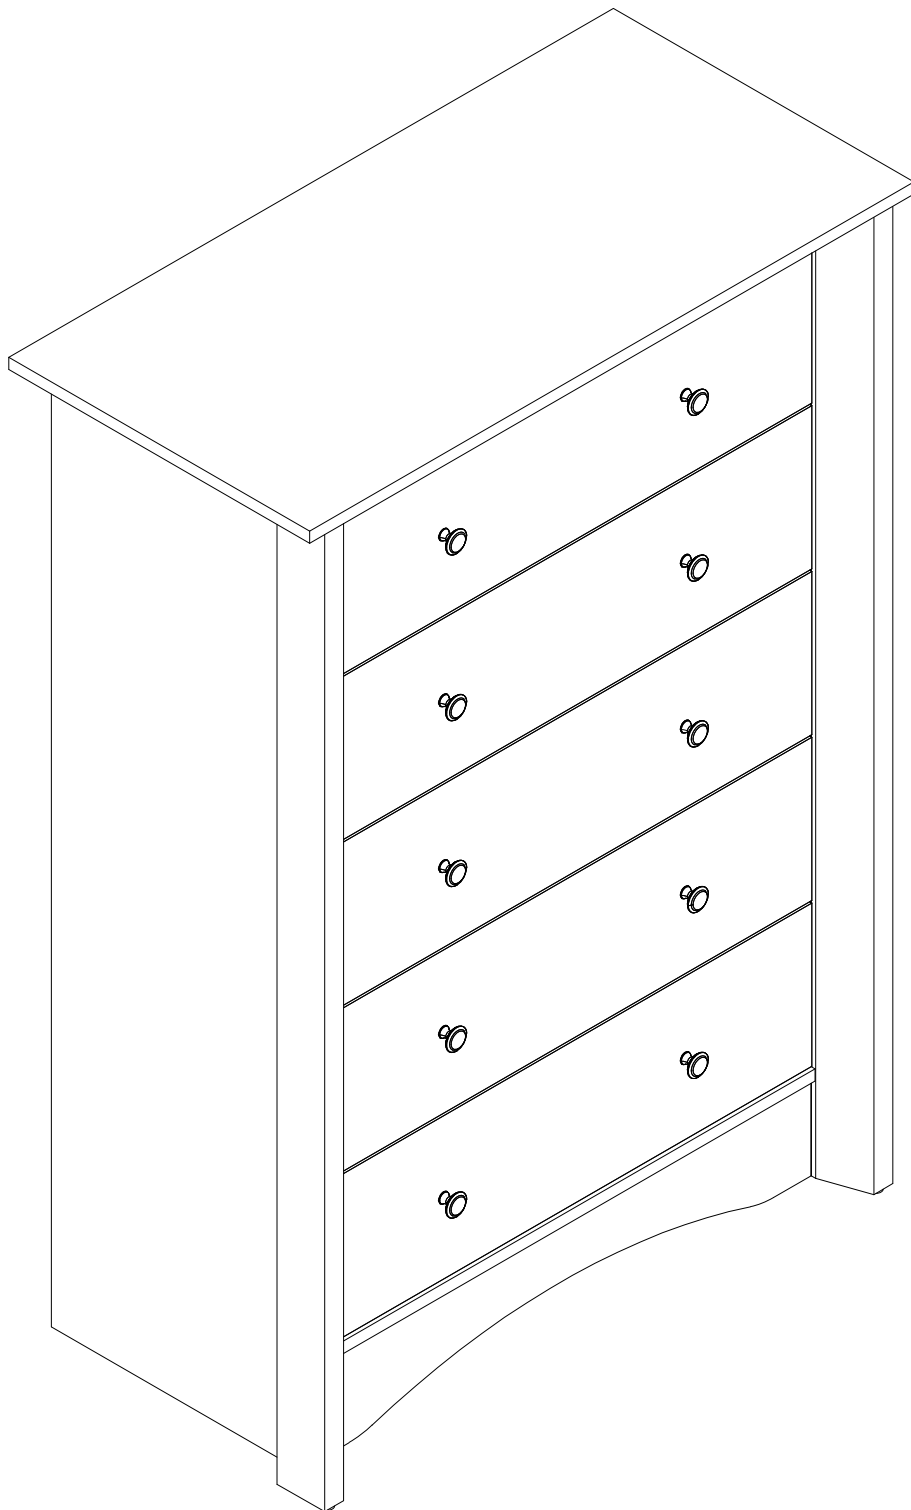

WARNING !


MAXIMUM LOAD
220 lb/ 100kg




Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

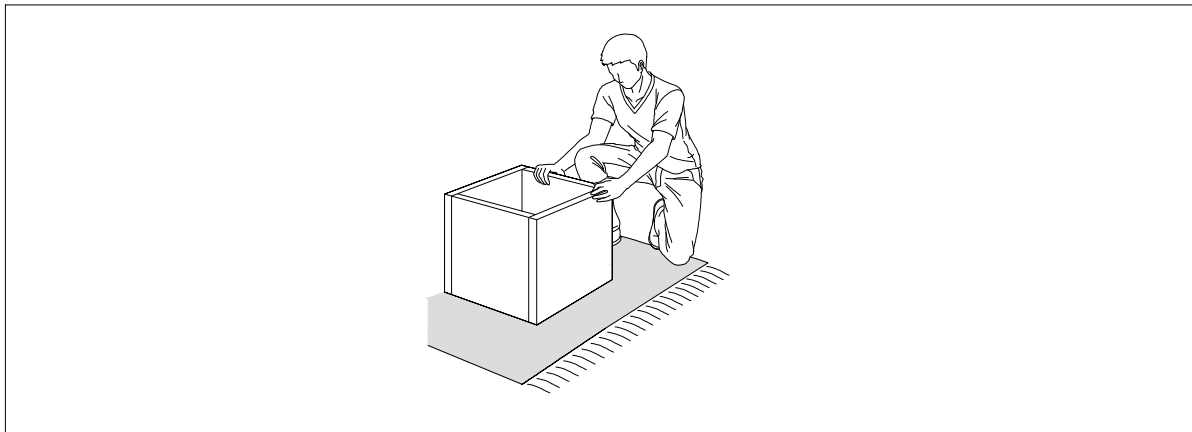

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

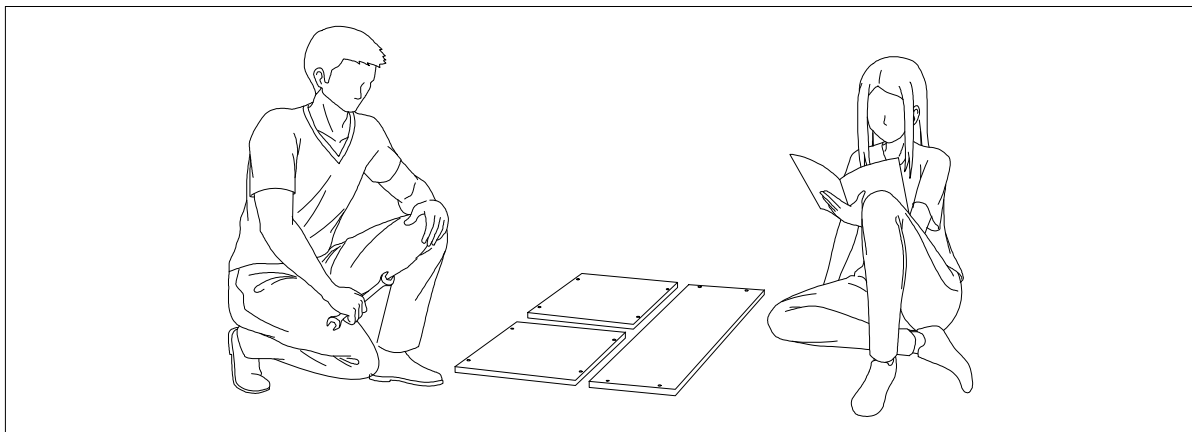


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

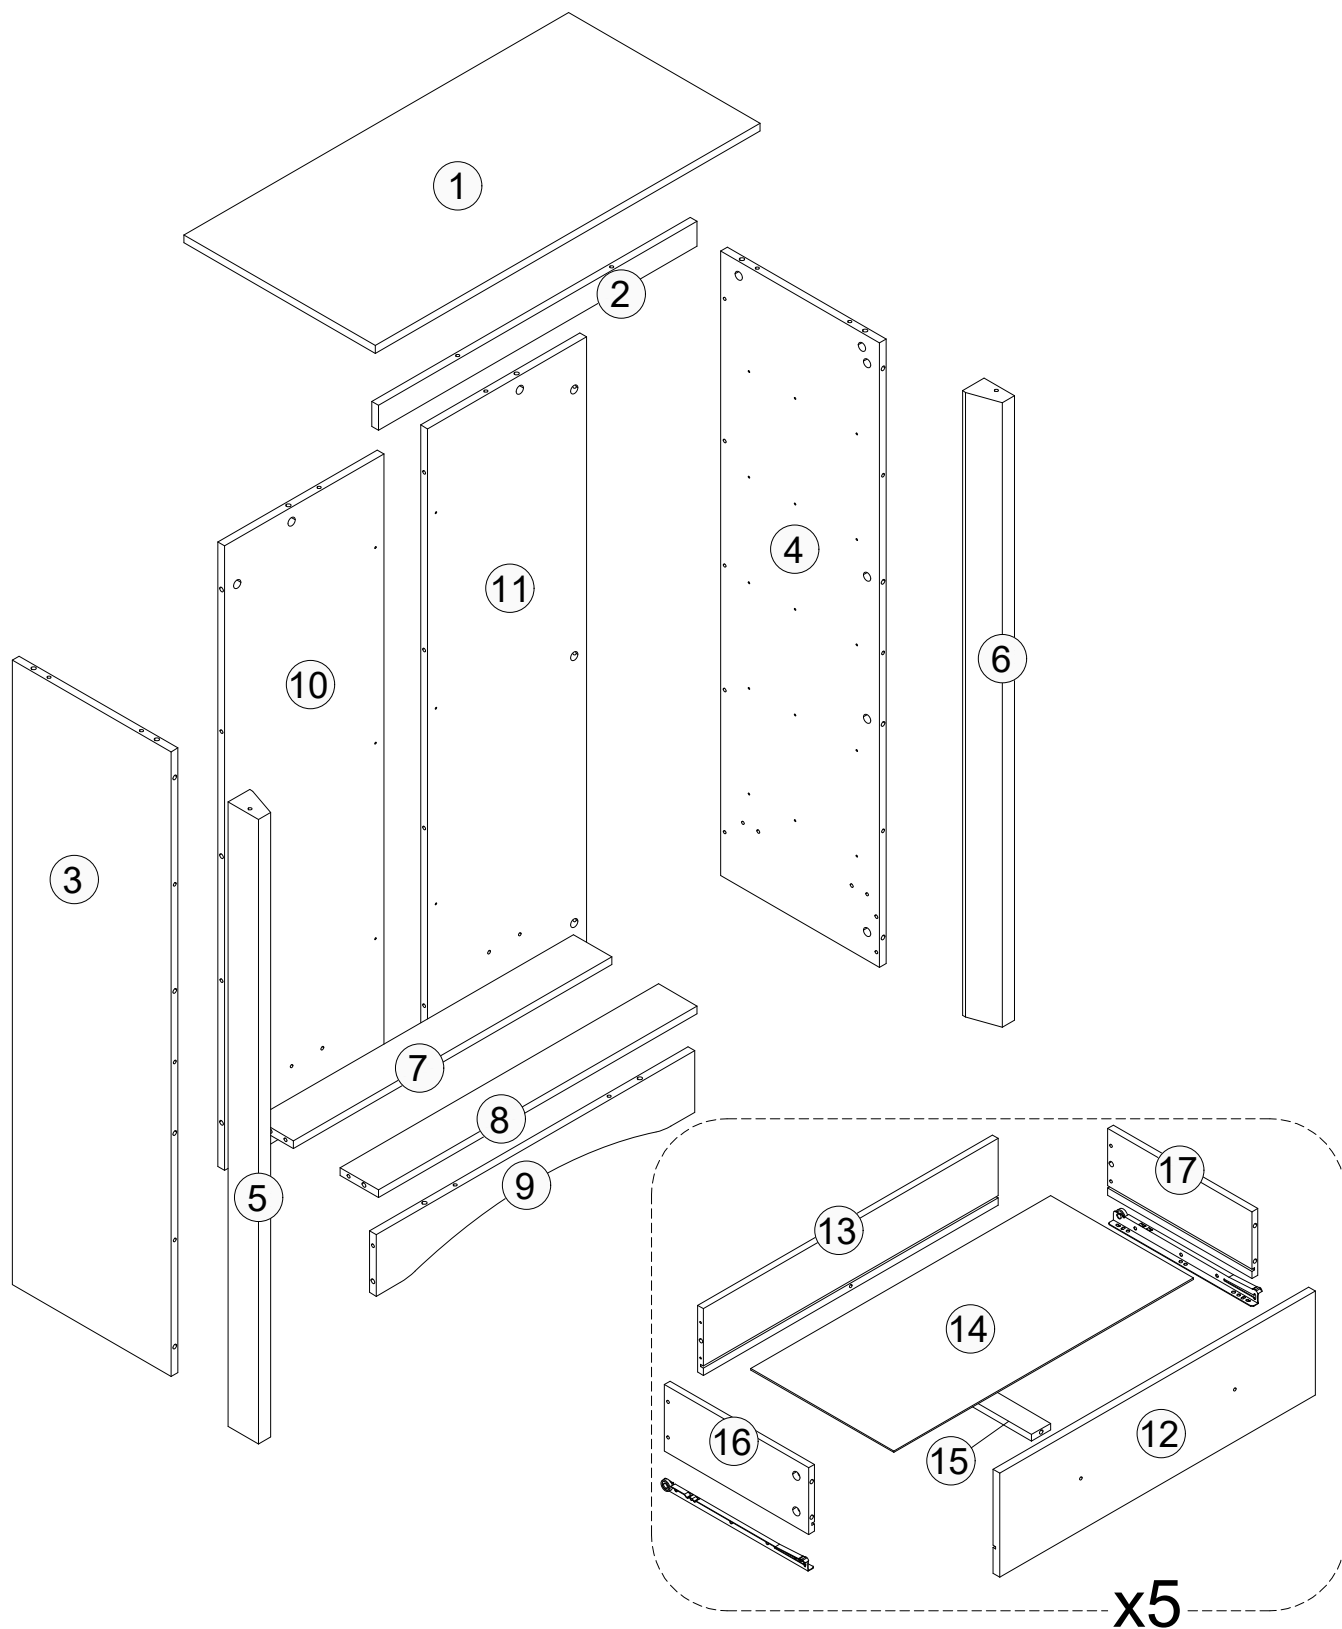


BOARD IDENTIFICATION


Not actual size

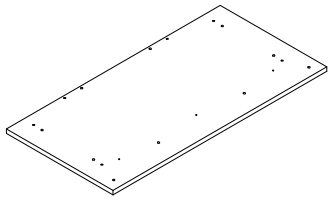


① x1

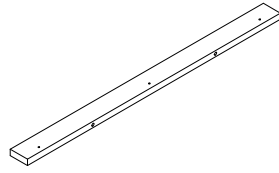


② x1

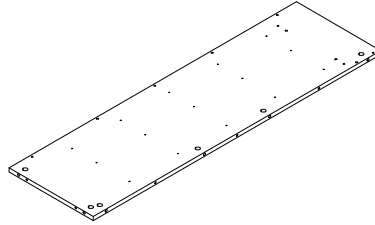


③ x1

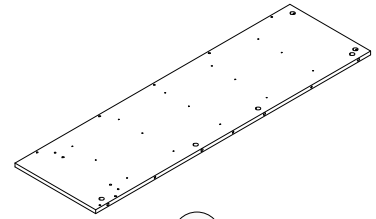


④ x1

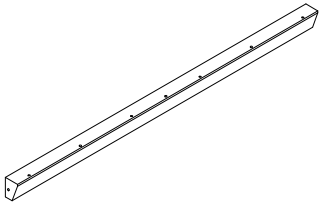


⑤ x1

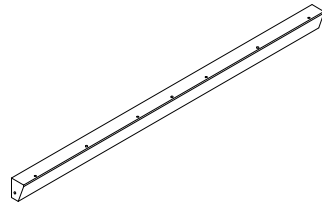


⑥ x1

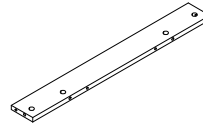


⑦ x1

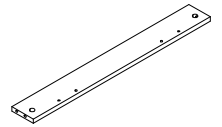


⑧ x1

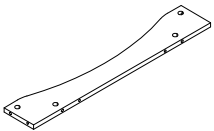


⑨ x1

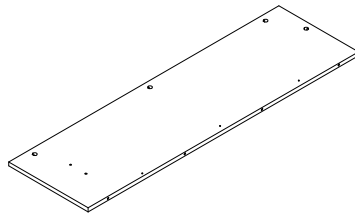


⑩ x1

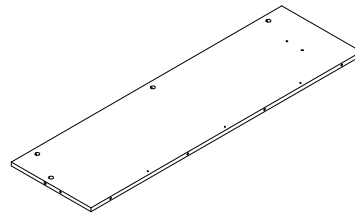


⑪ x1

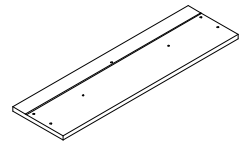


⑫ x5

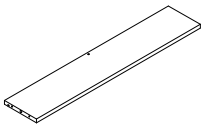


⑬ x5

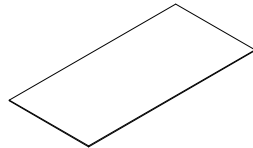


⑭ x5



⑮ x5

















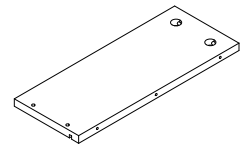


⑯ x5

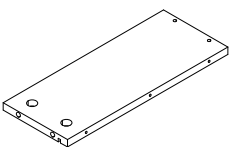





⑰ x5

HARDWARE LIST

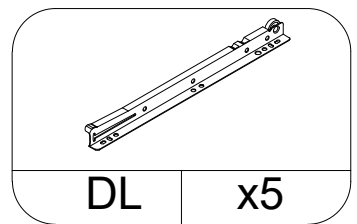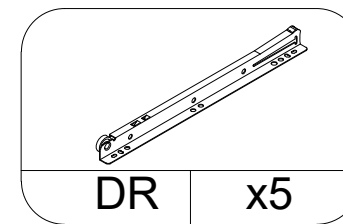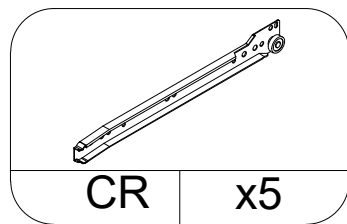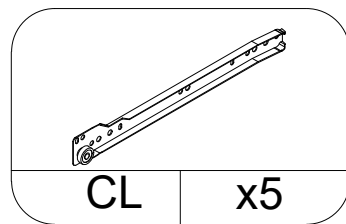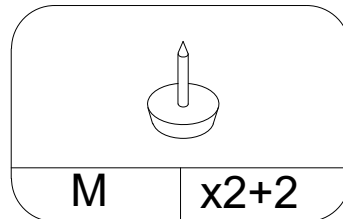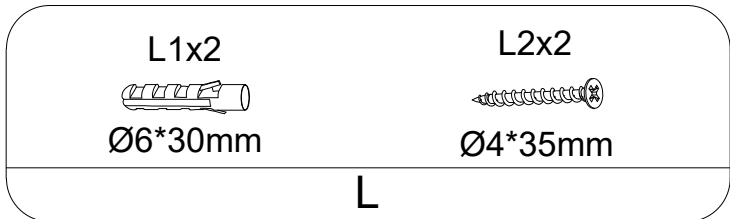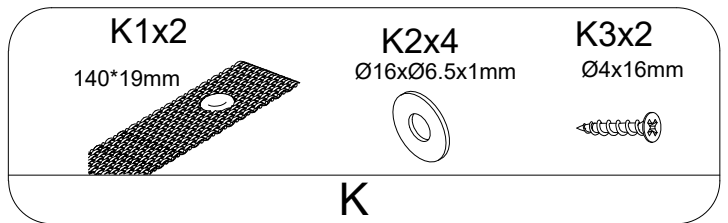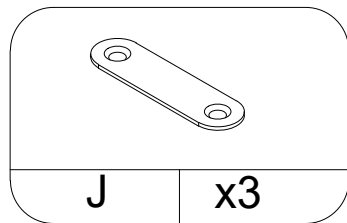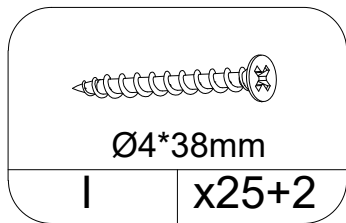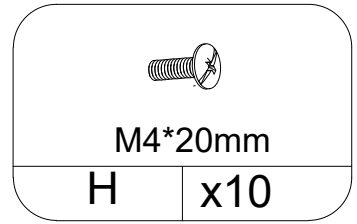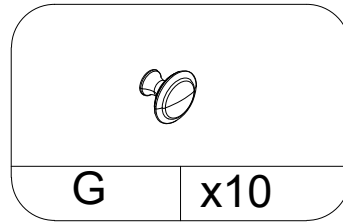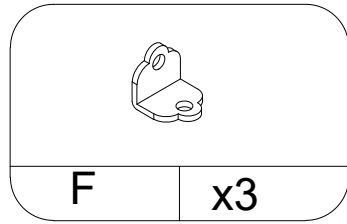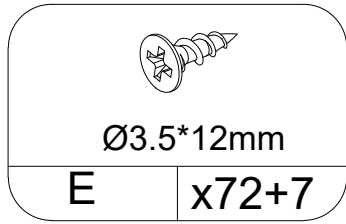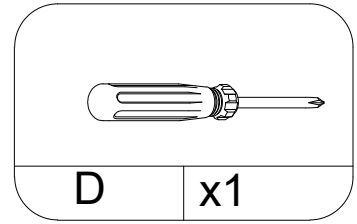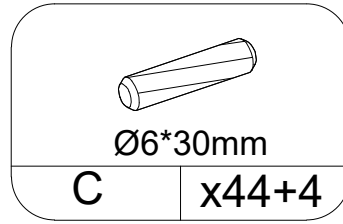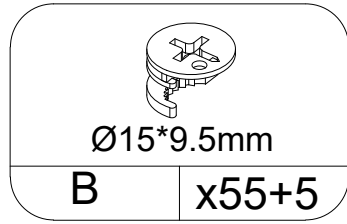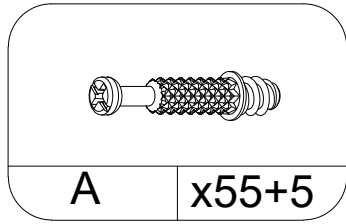


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

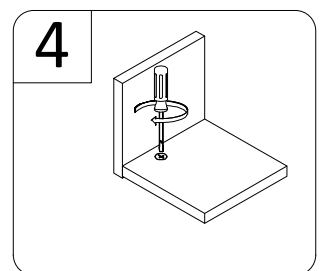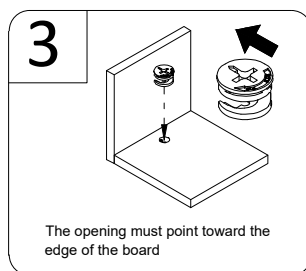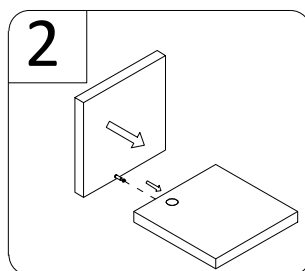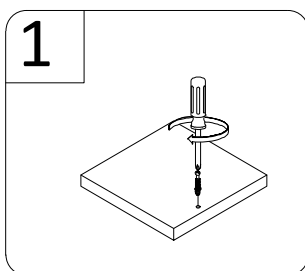





STEP 1

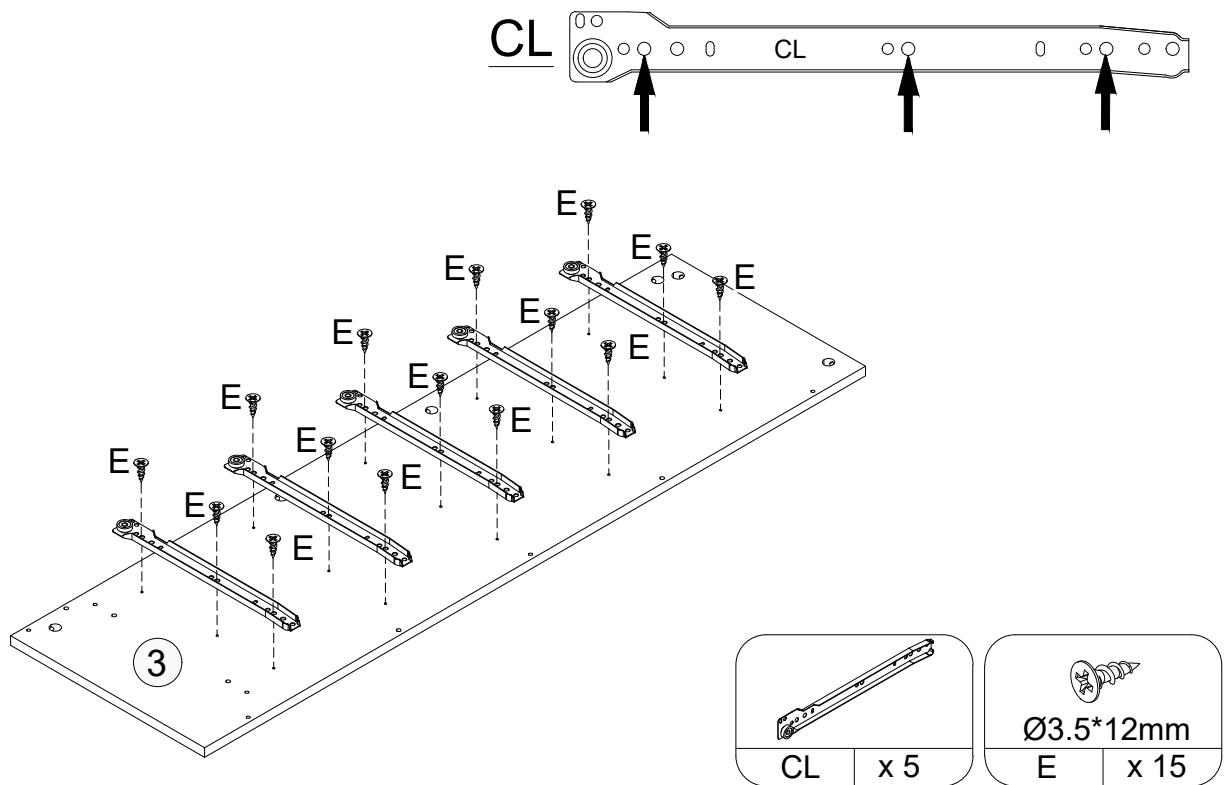





STEP 2

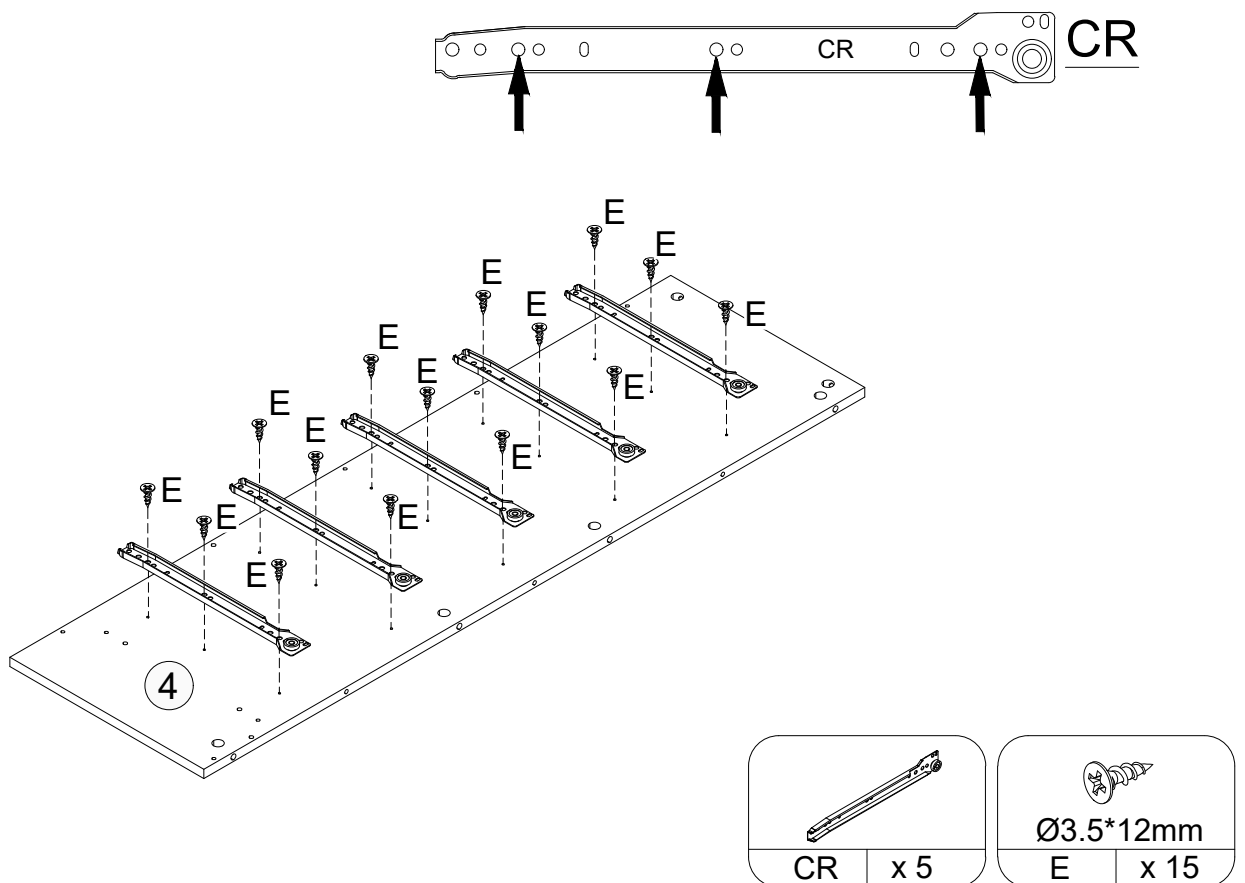


STEP 3

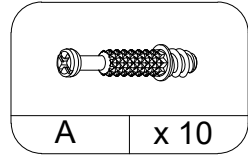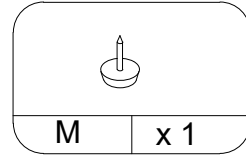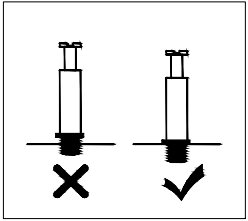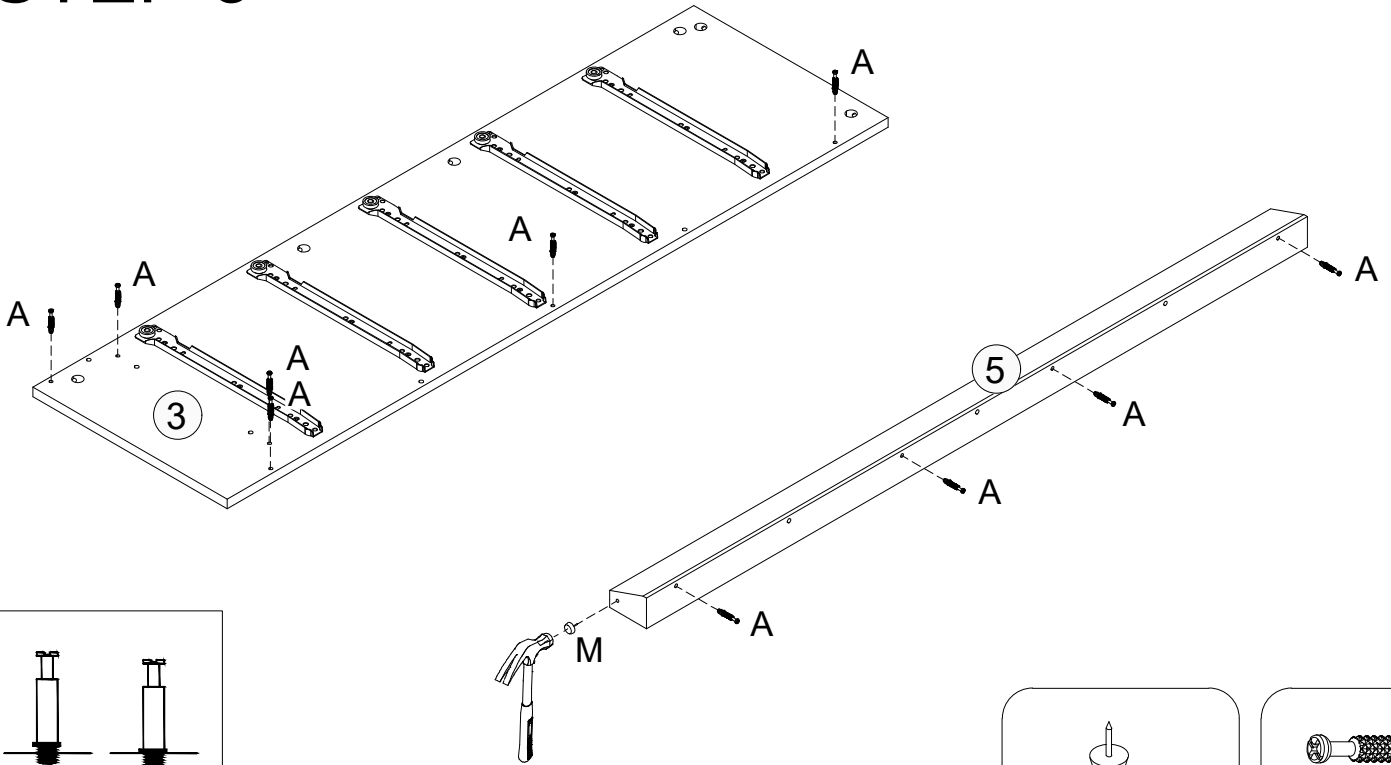




STEP 4

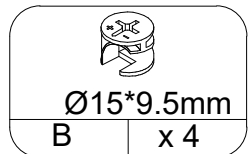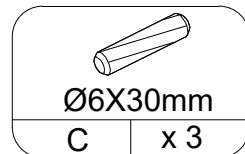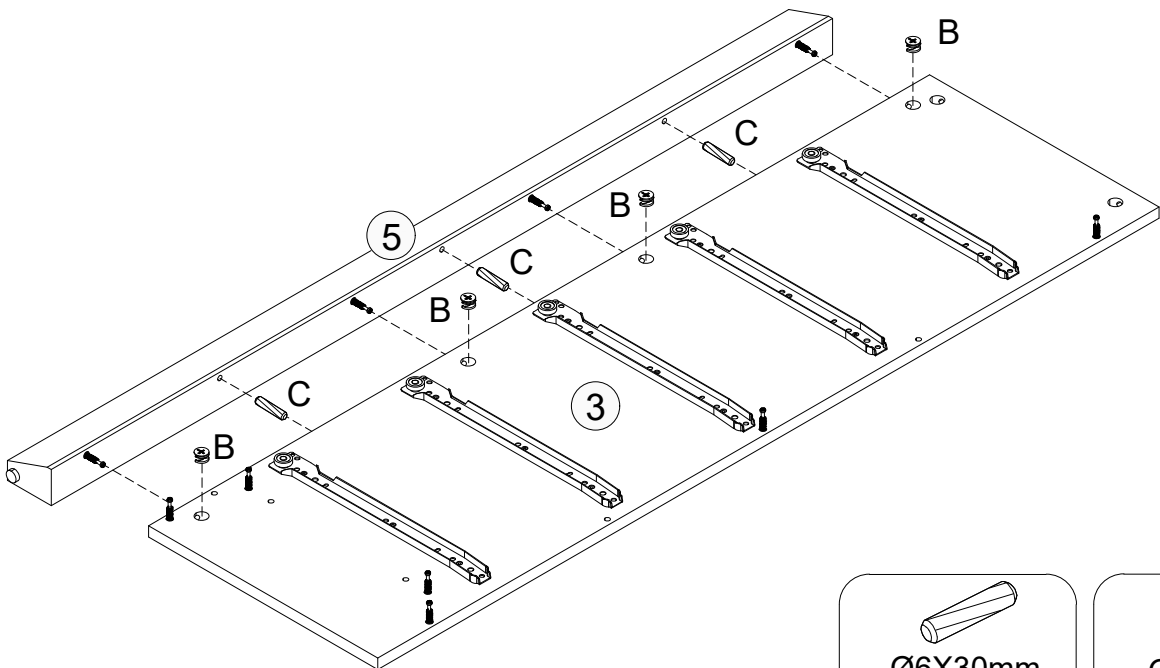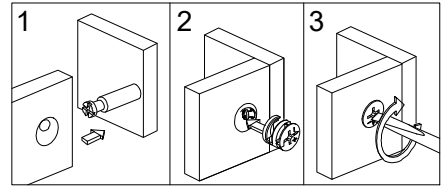




STEP 5

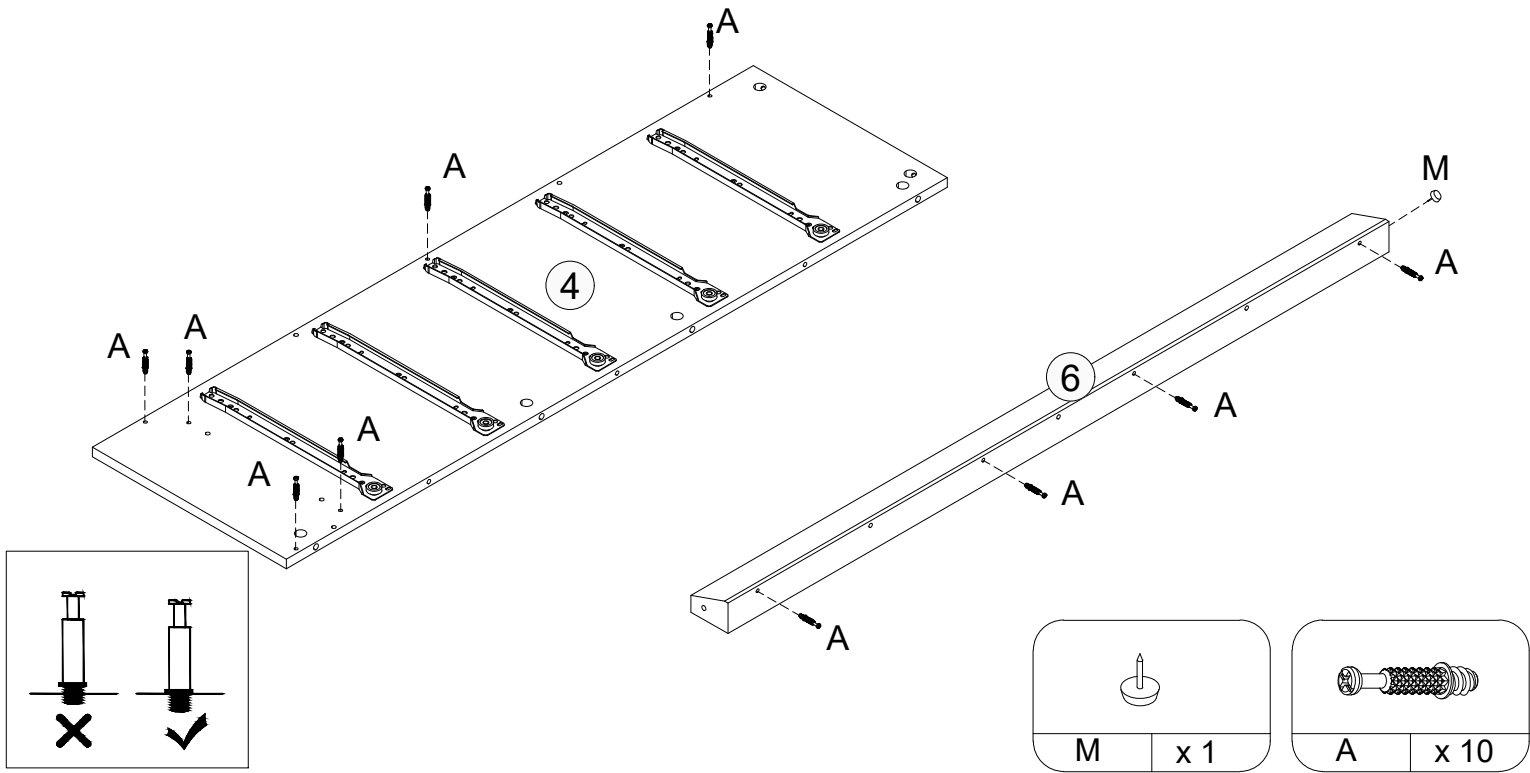




STEP 6

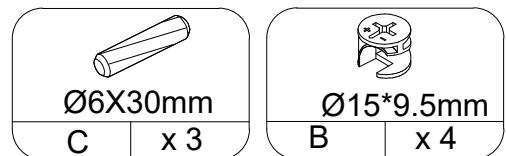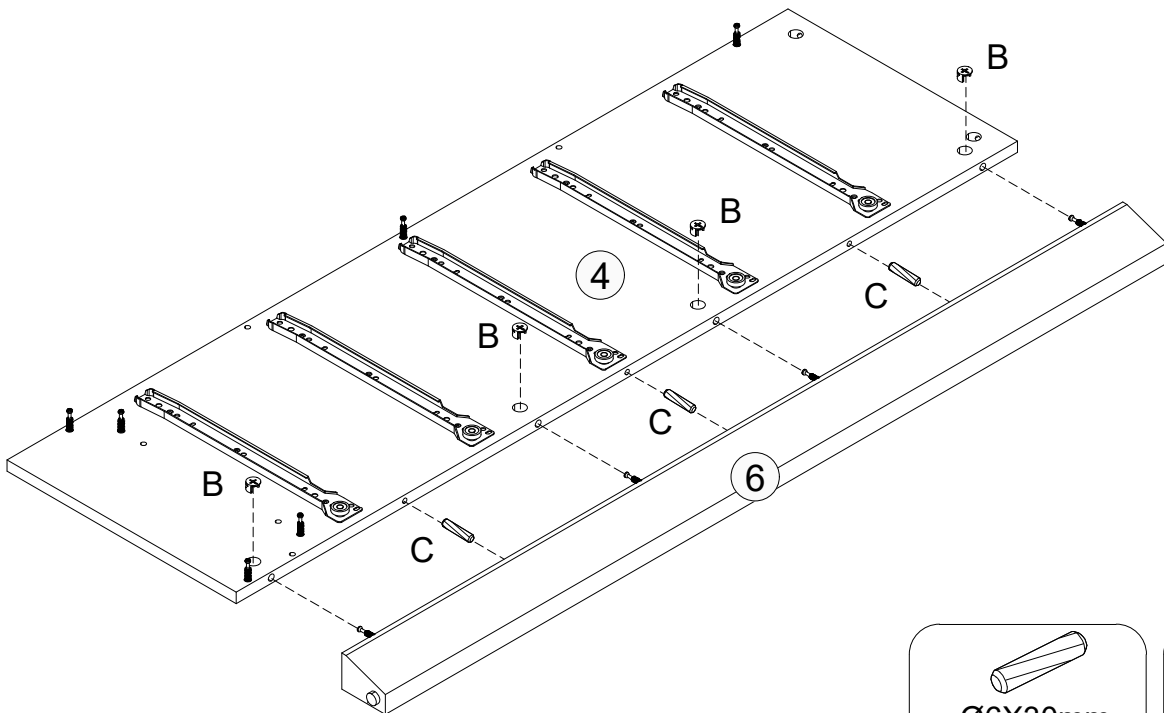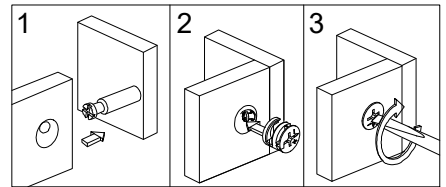



STEP 7

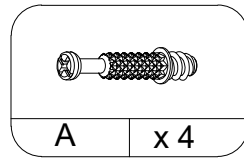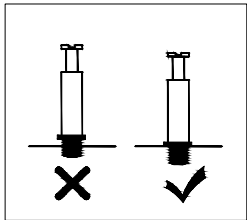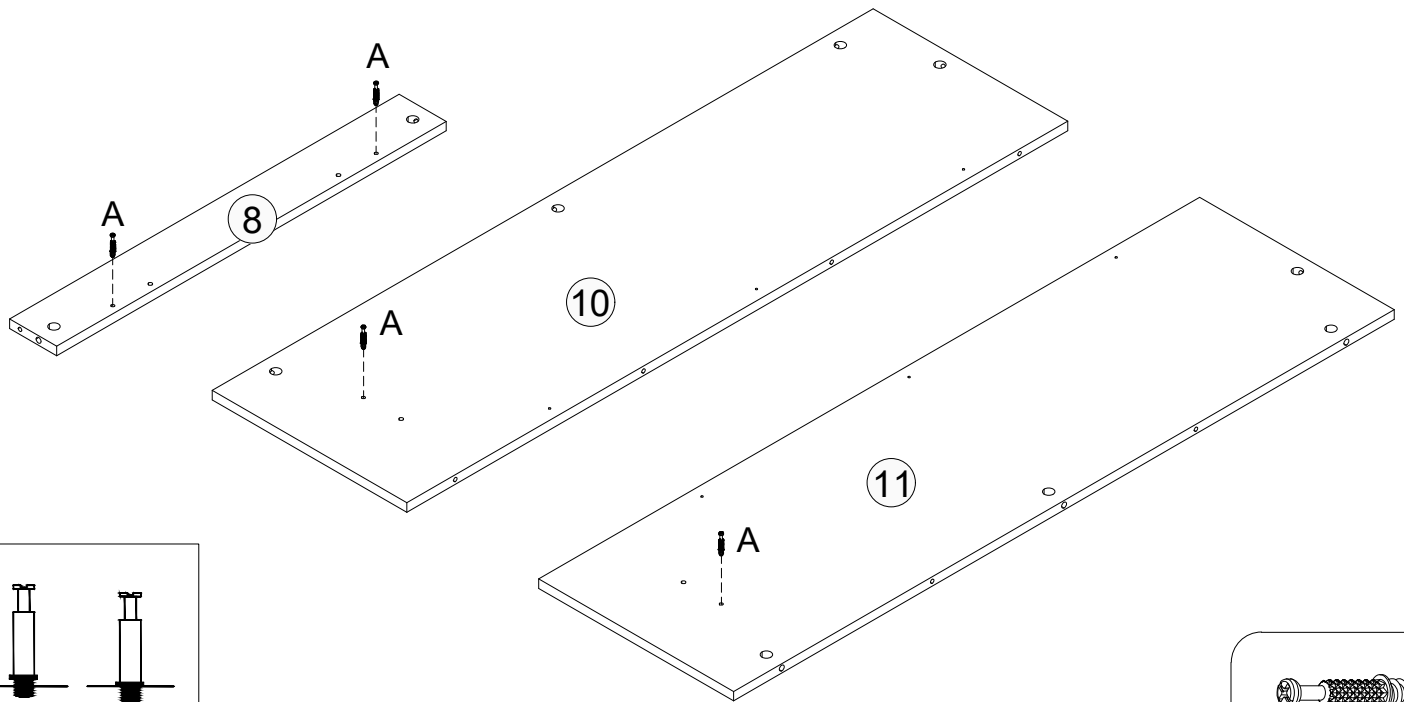





STEP 8

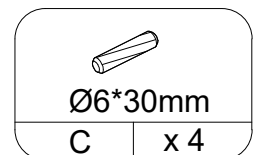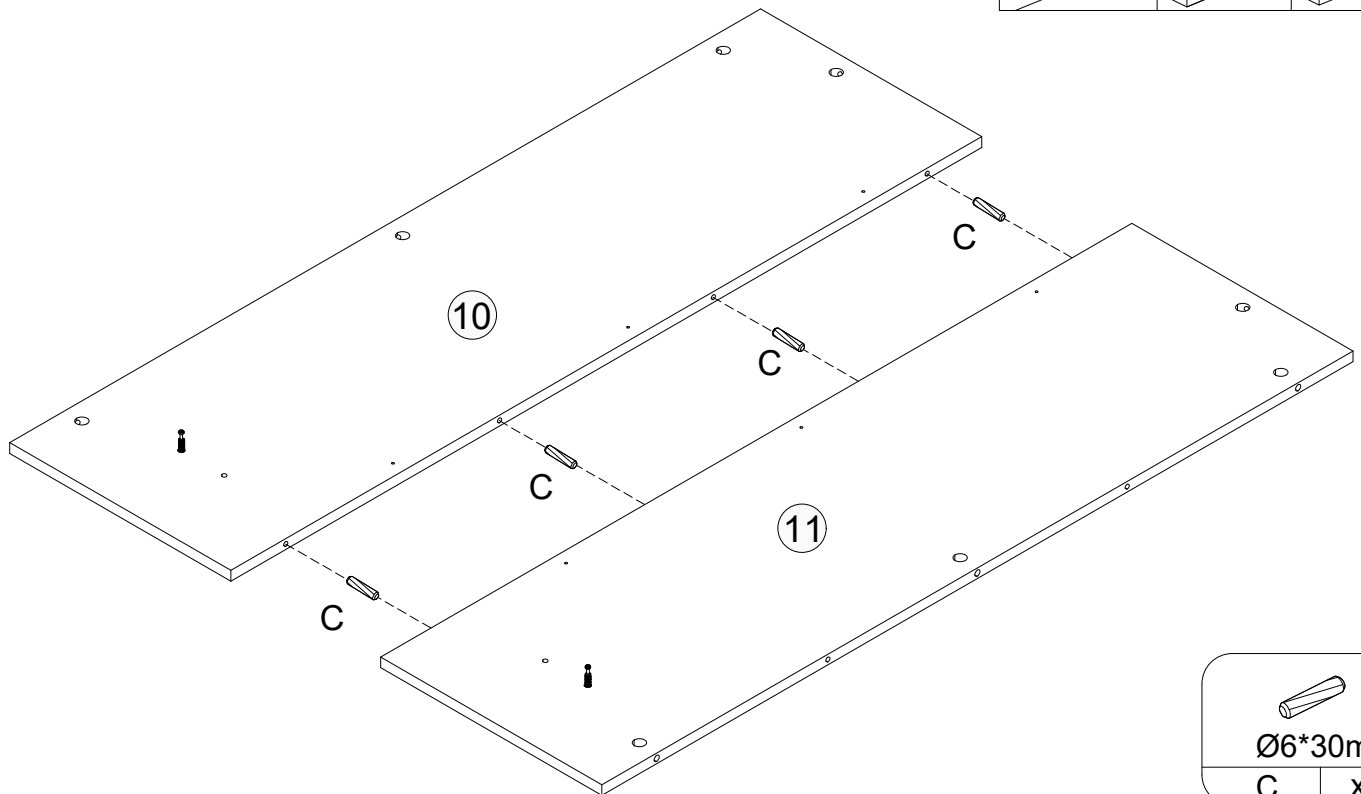
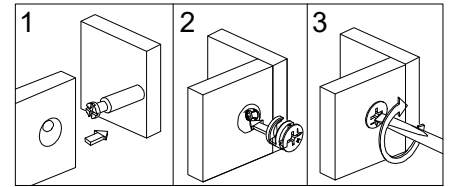


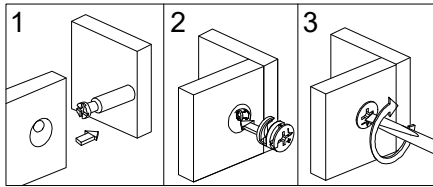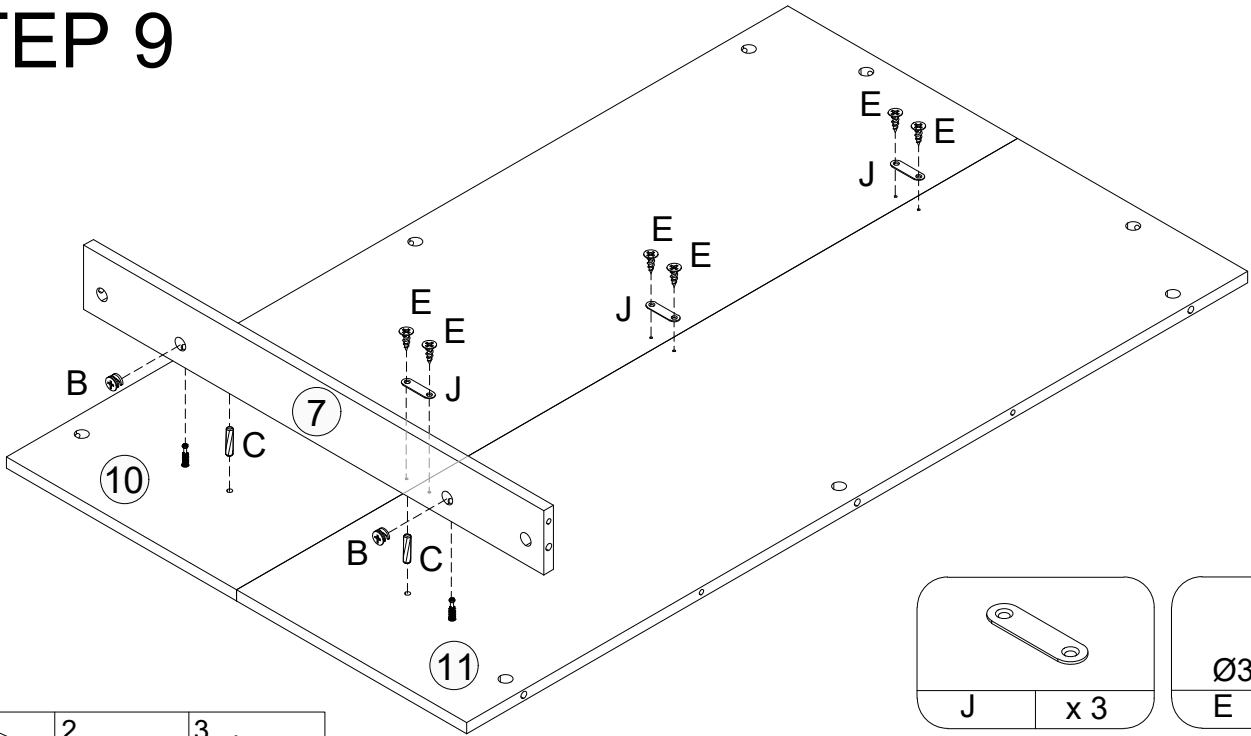

STEP 9




	
J	x 3
Ø3.5*12mm	
E	
x 6	
	
C	x 2
Ø6*30mm	
Ø15*9.5mm	
B	
x 2	

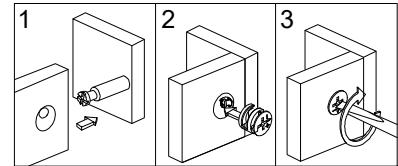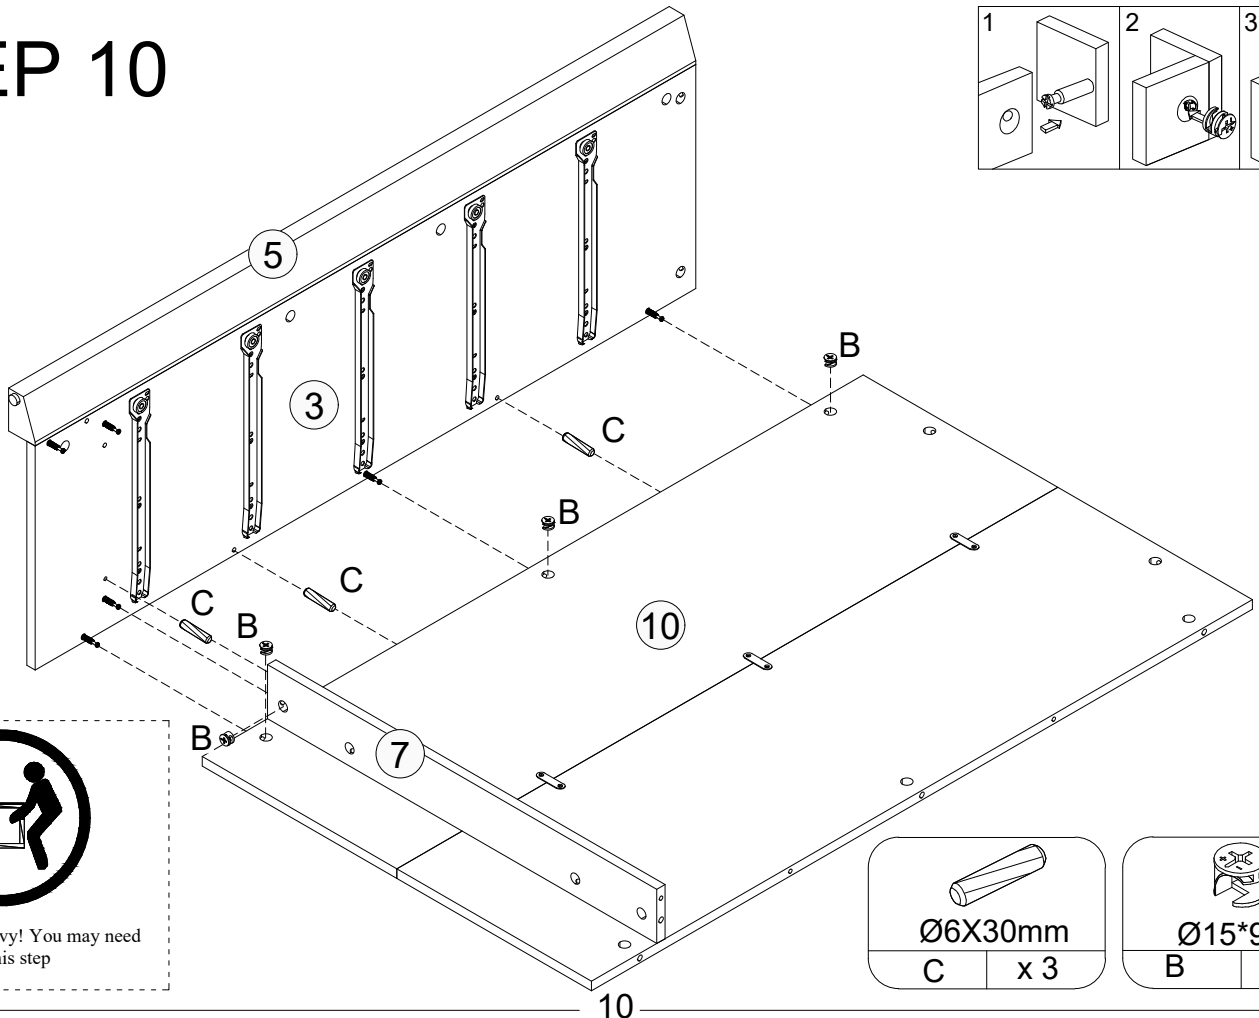STEP 10







	
C	x 3
Ø6X30mm	
Ø15*9.5mm	
B	
x 4	




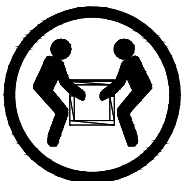


CAUTION: Heavy! You may need assistance with this step


STEP 11

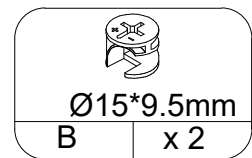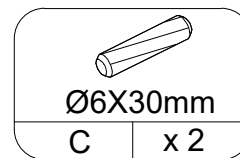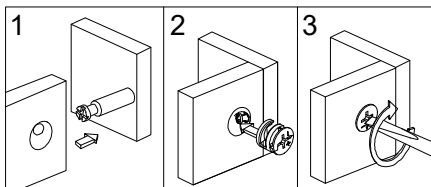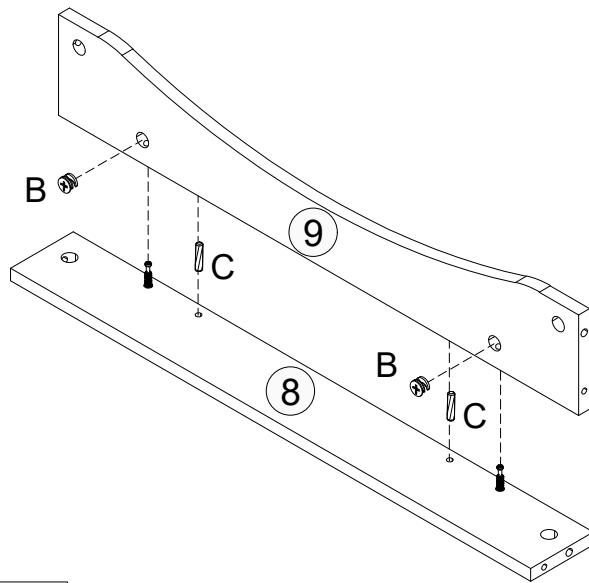





STEP 12

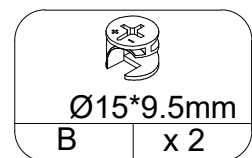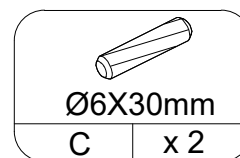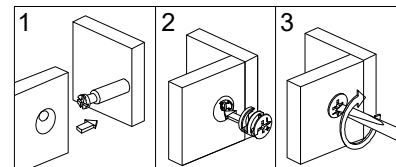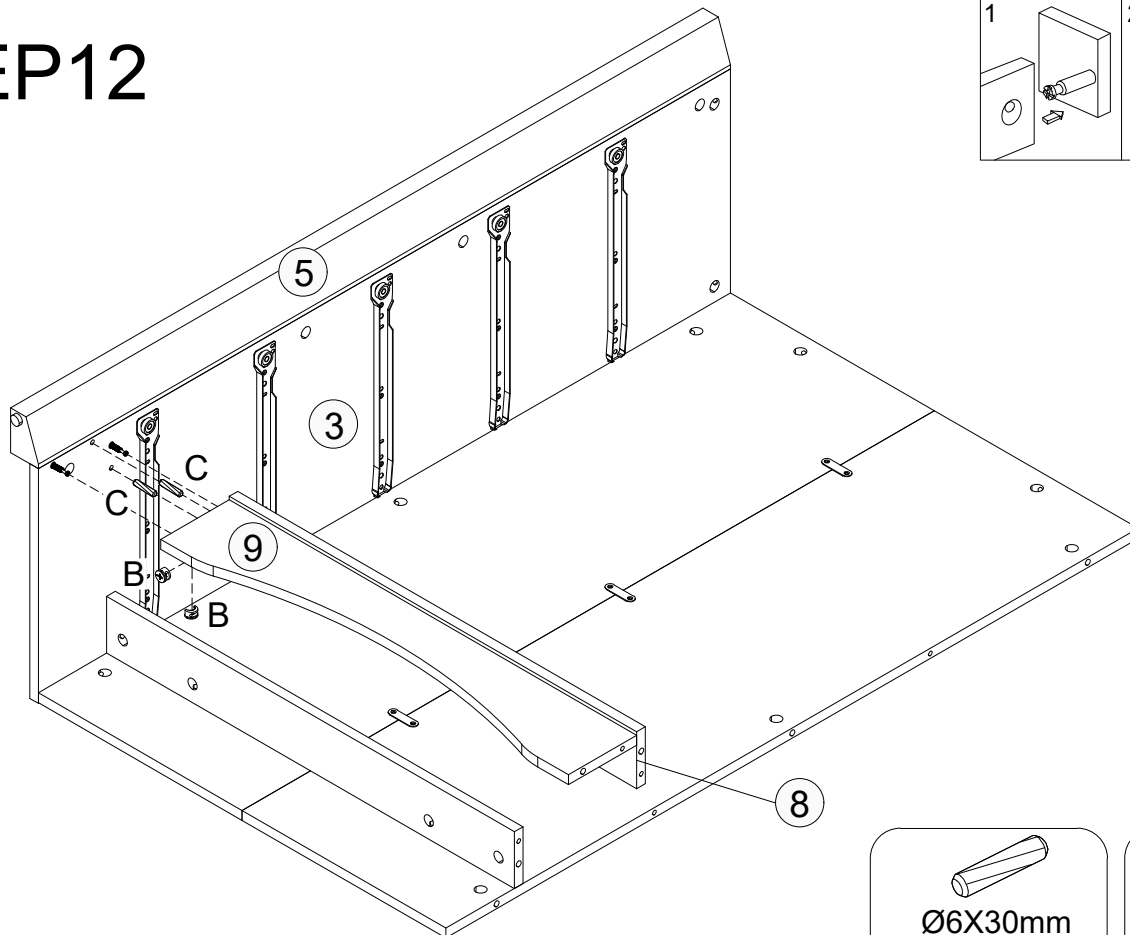




STEP 13

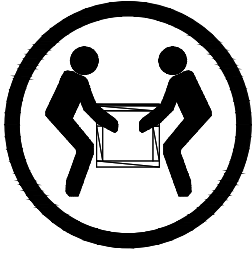




CAUTION: Heavy! You may need assistance with this step

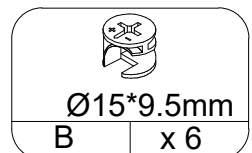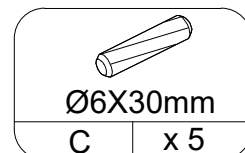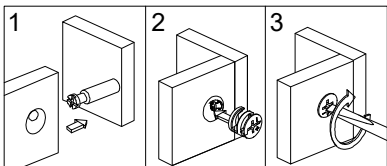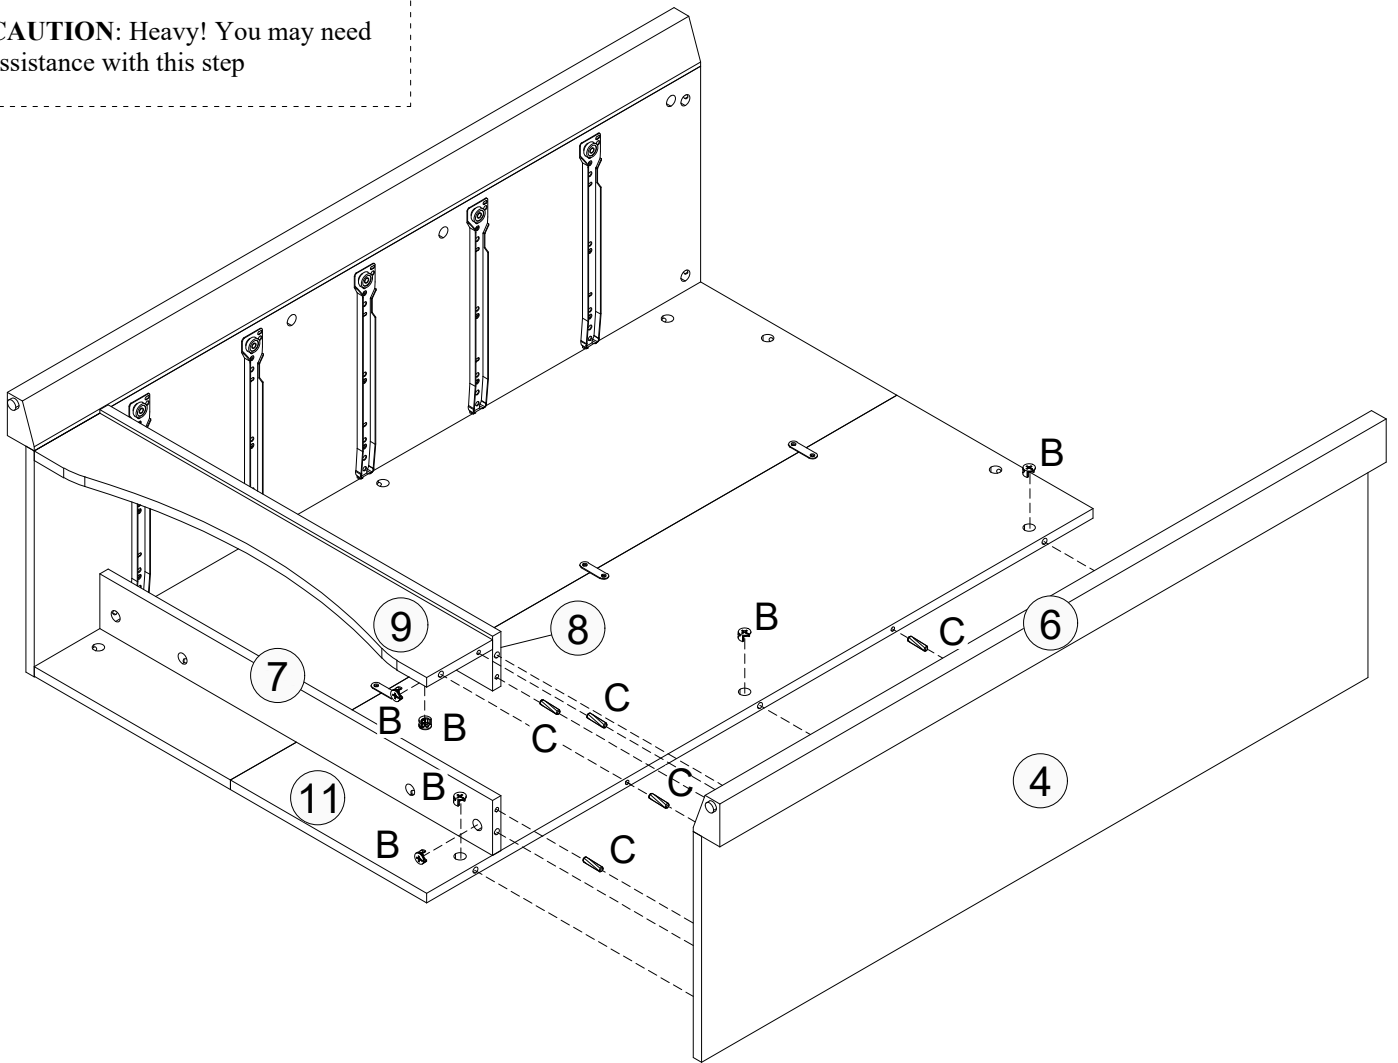


STEP 14

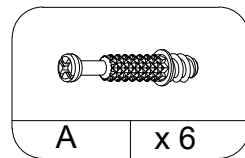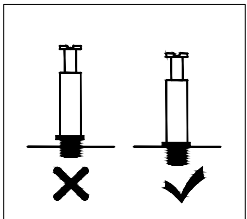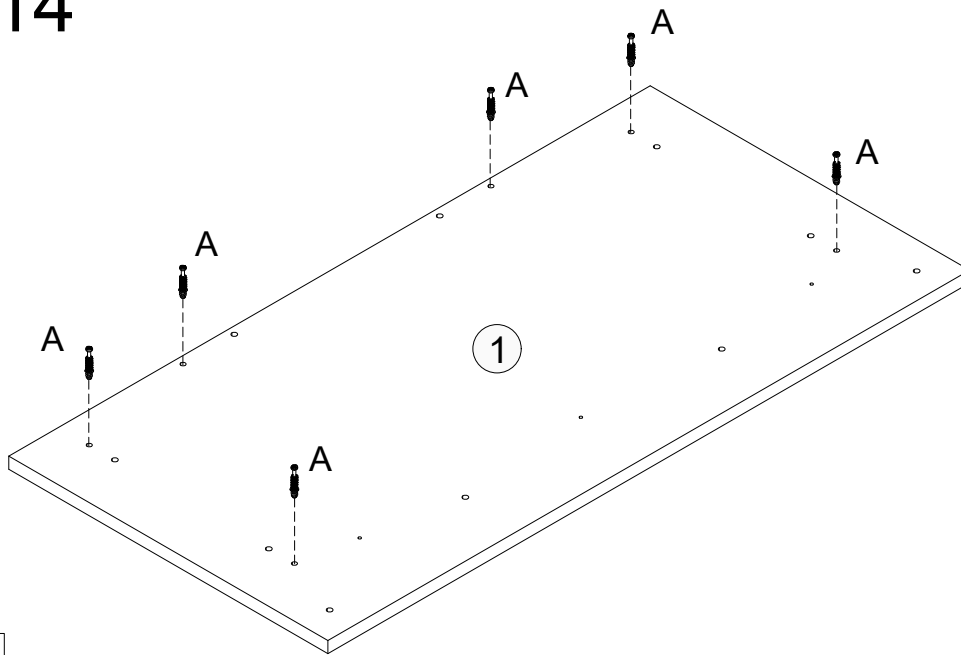



STEP 15

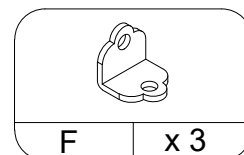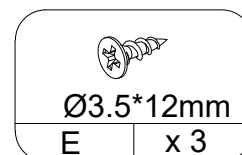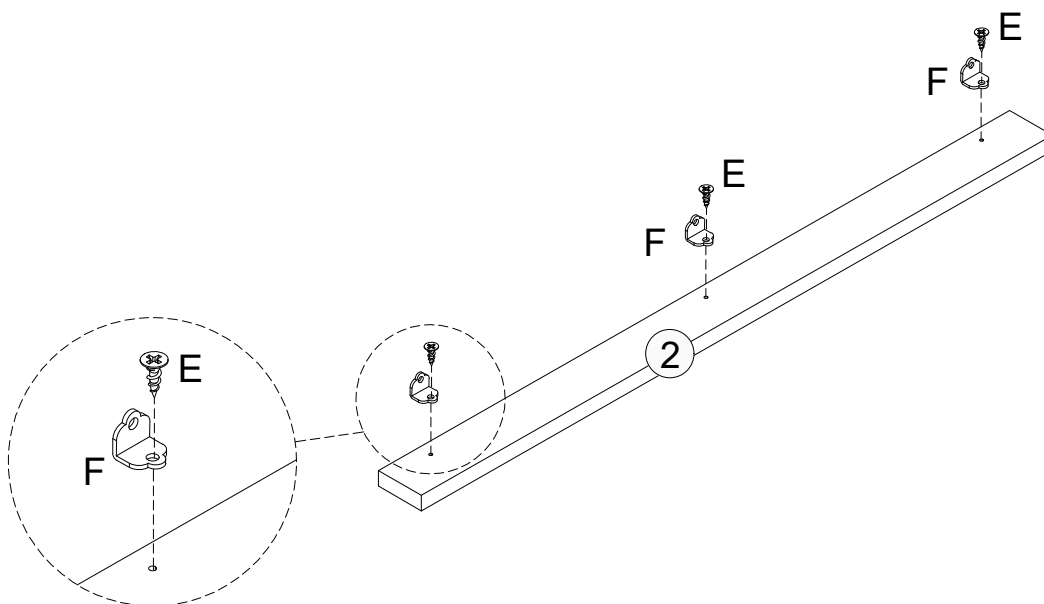



STEP 16

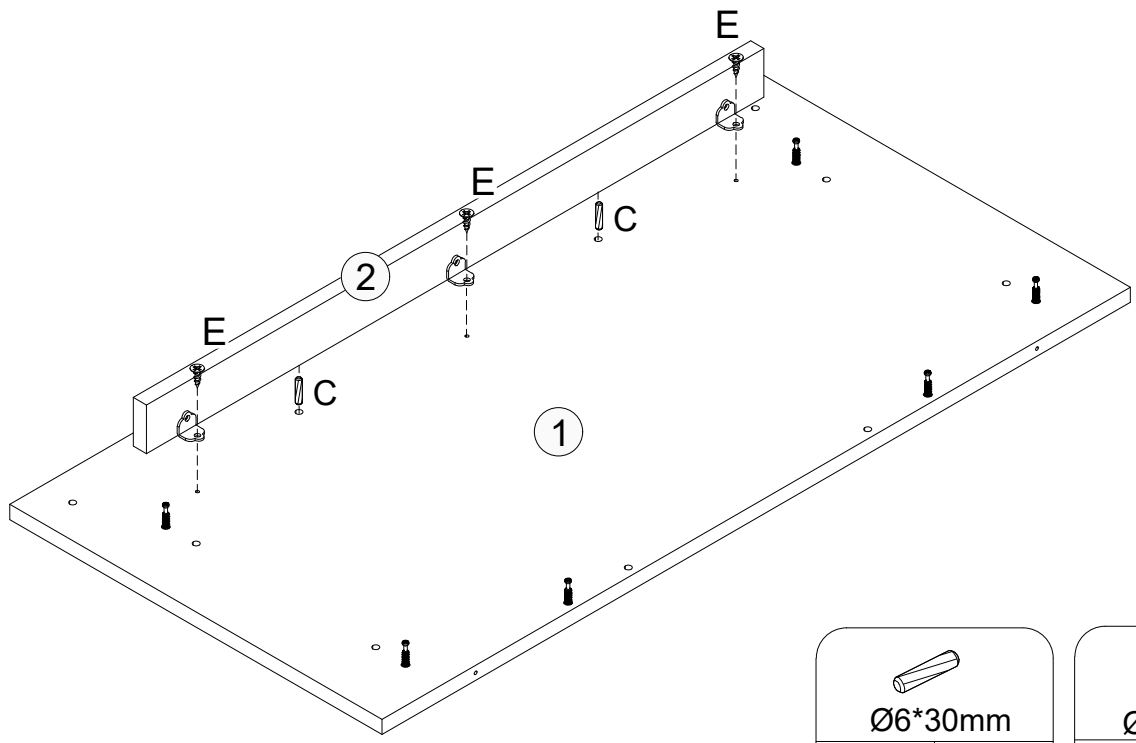



	
Ø6*30mm	
C	x 2

	
Ø3.5*12mm	
E	x 3


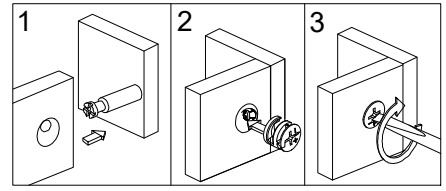
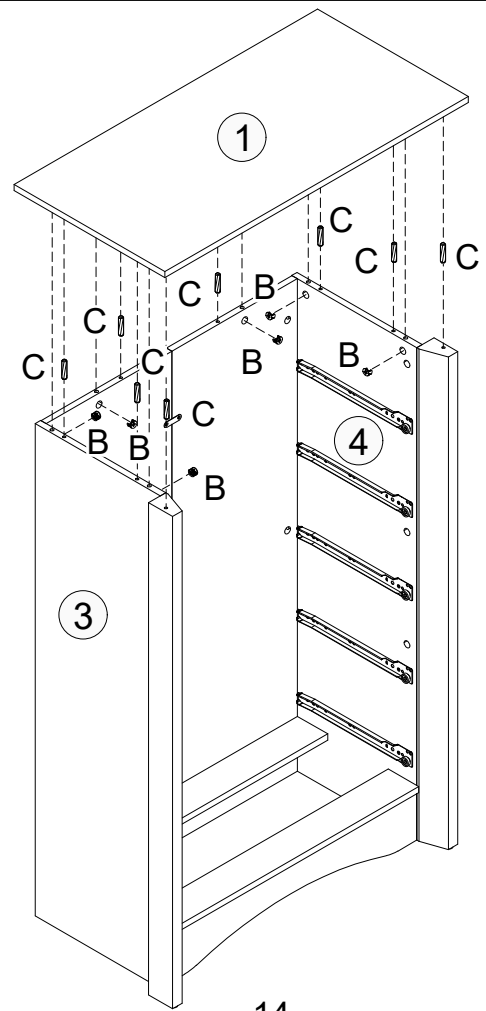
STEP 17







	
Ø6X30mm	
C	x 8

	
Ø15*9.5mm	
B	x 6



STEP 18

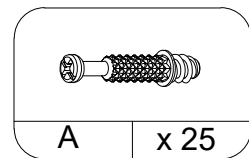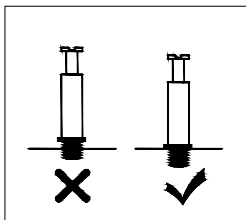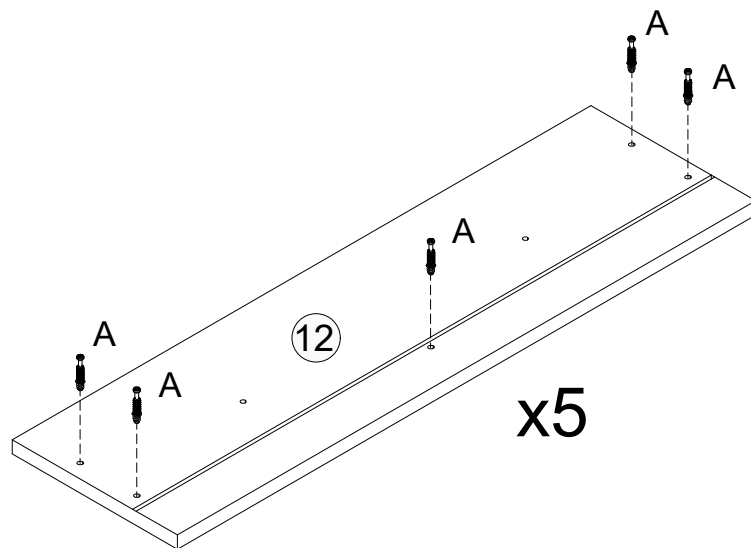

STEP 19

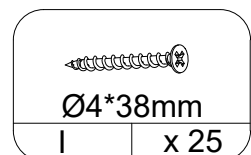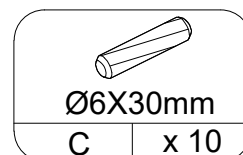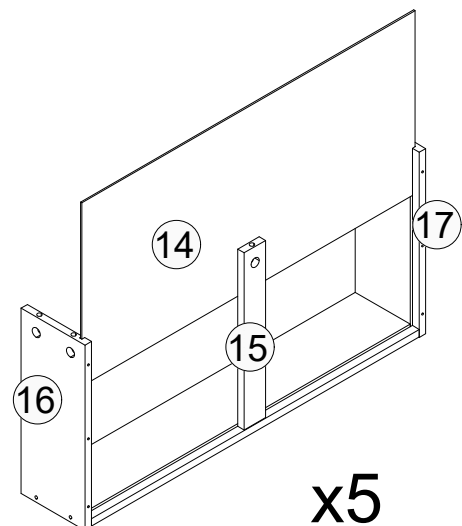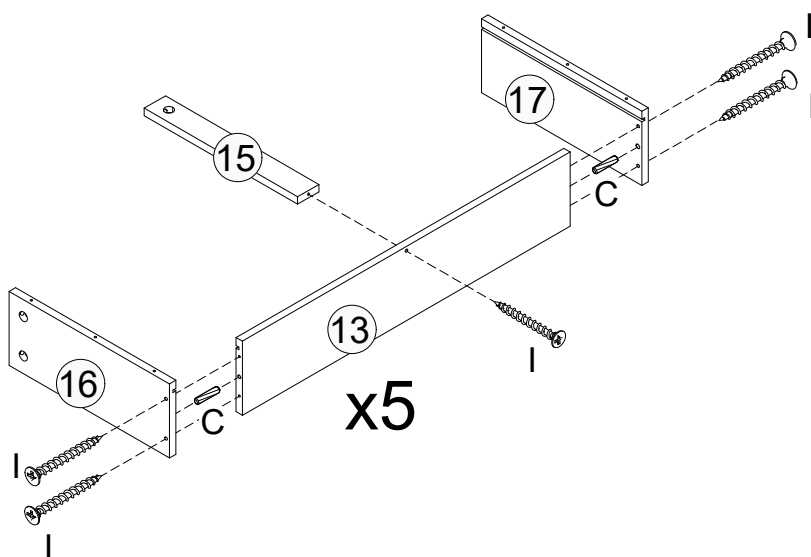


STEP 20

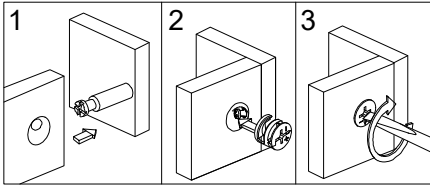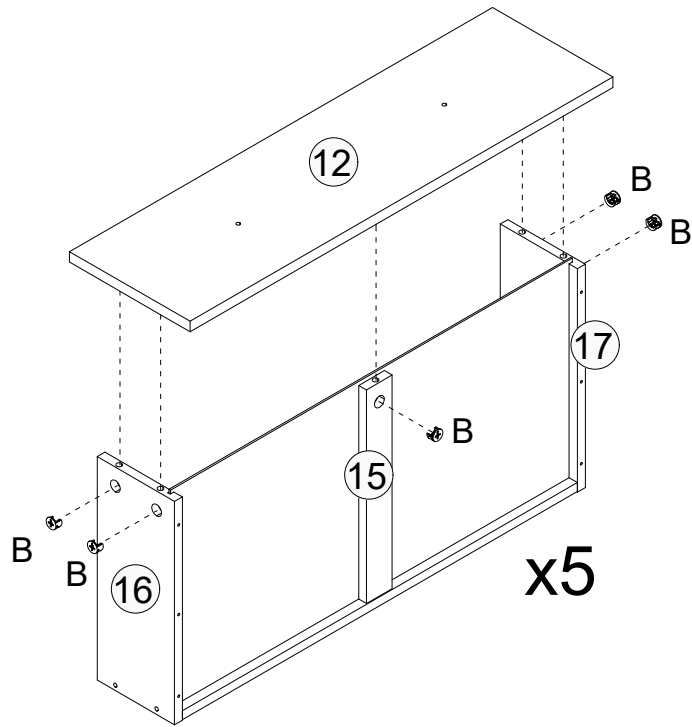

Ø15*9.5mm	
B	x 25

STEP 21



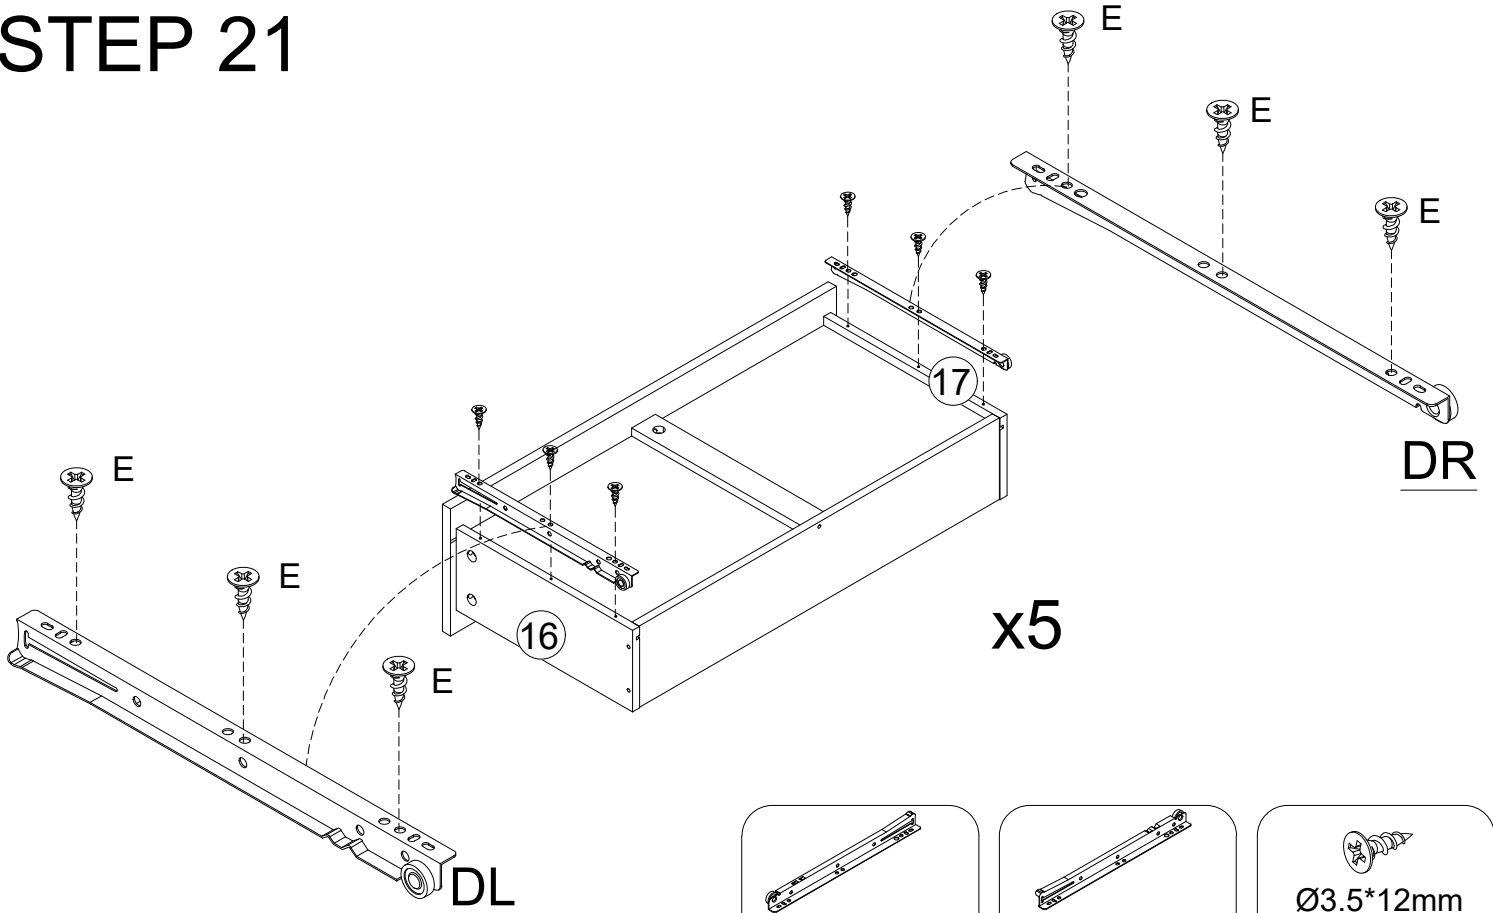


DR	x 5


DL	x 5

Ø3.5*12mm	
E	x 30


STEP 22

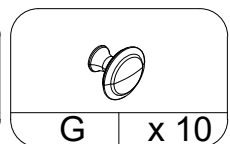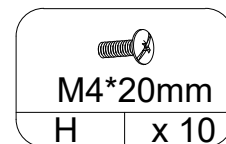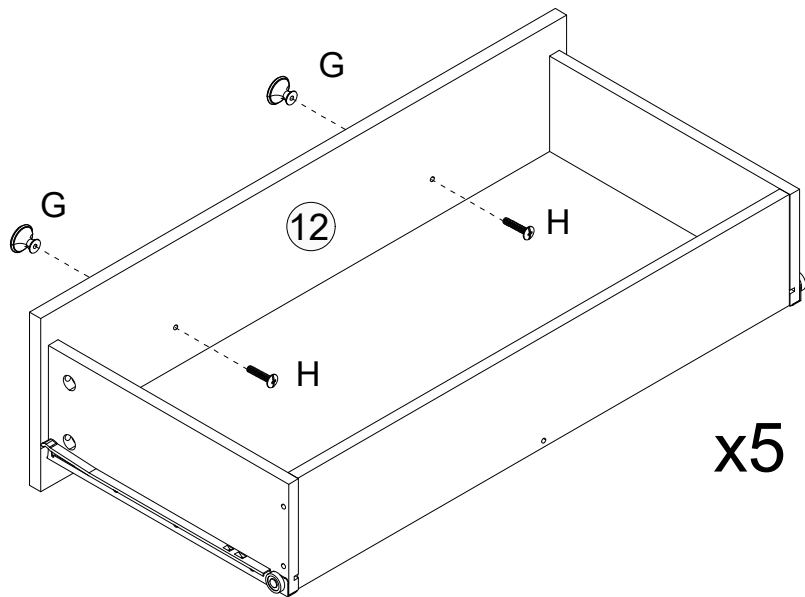

STEP 23

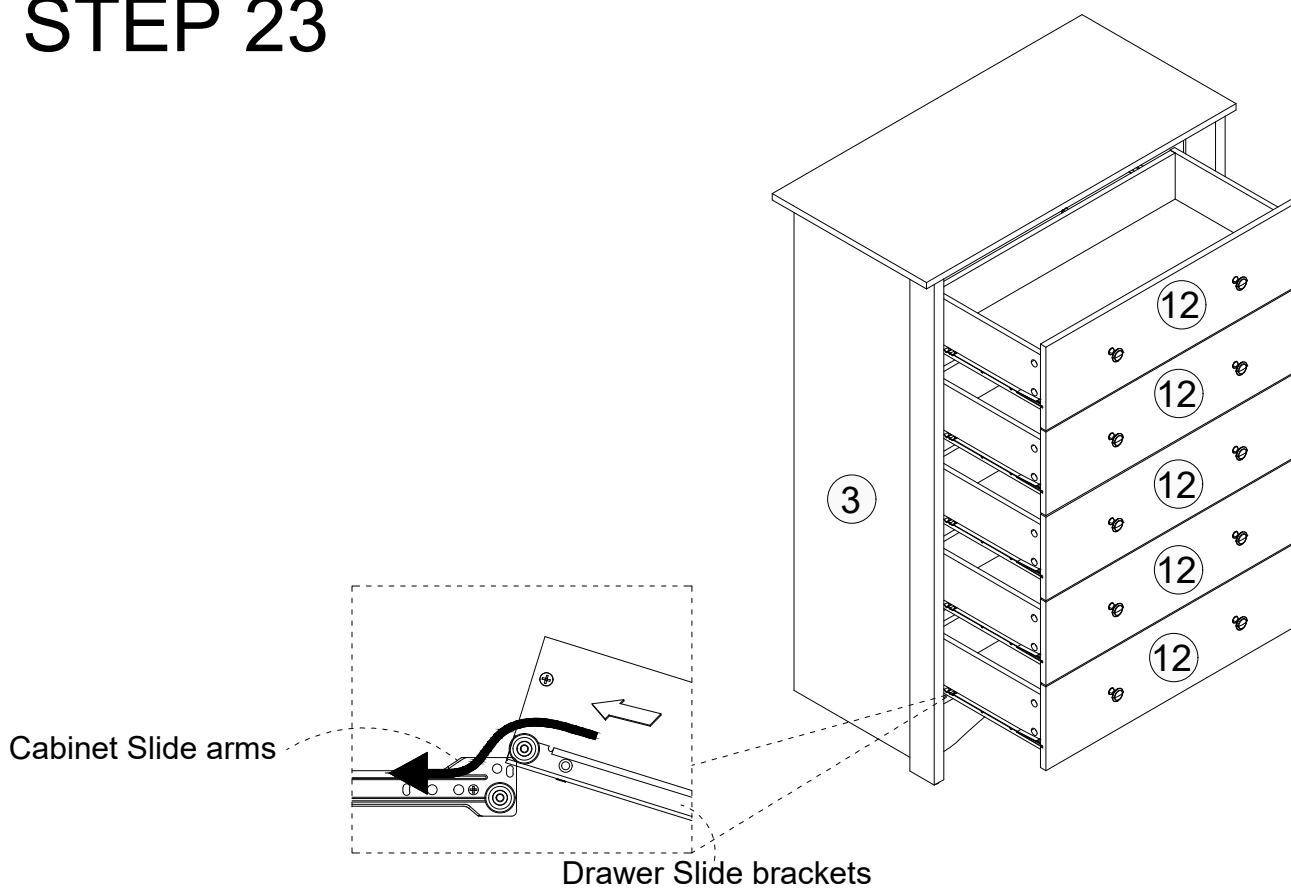

STEP 24

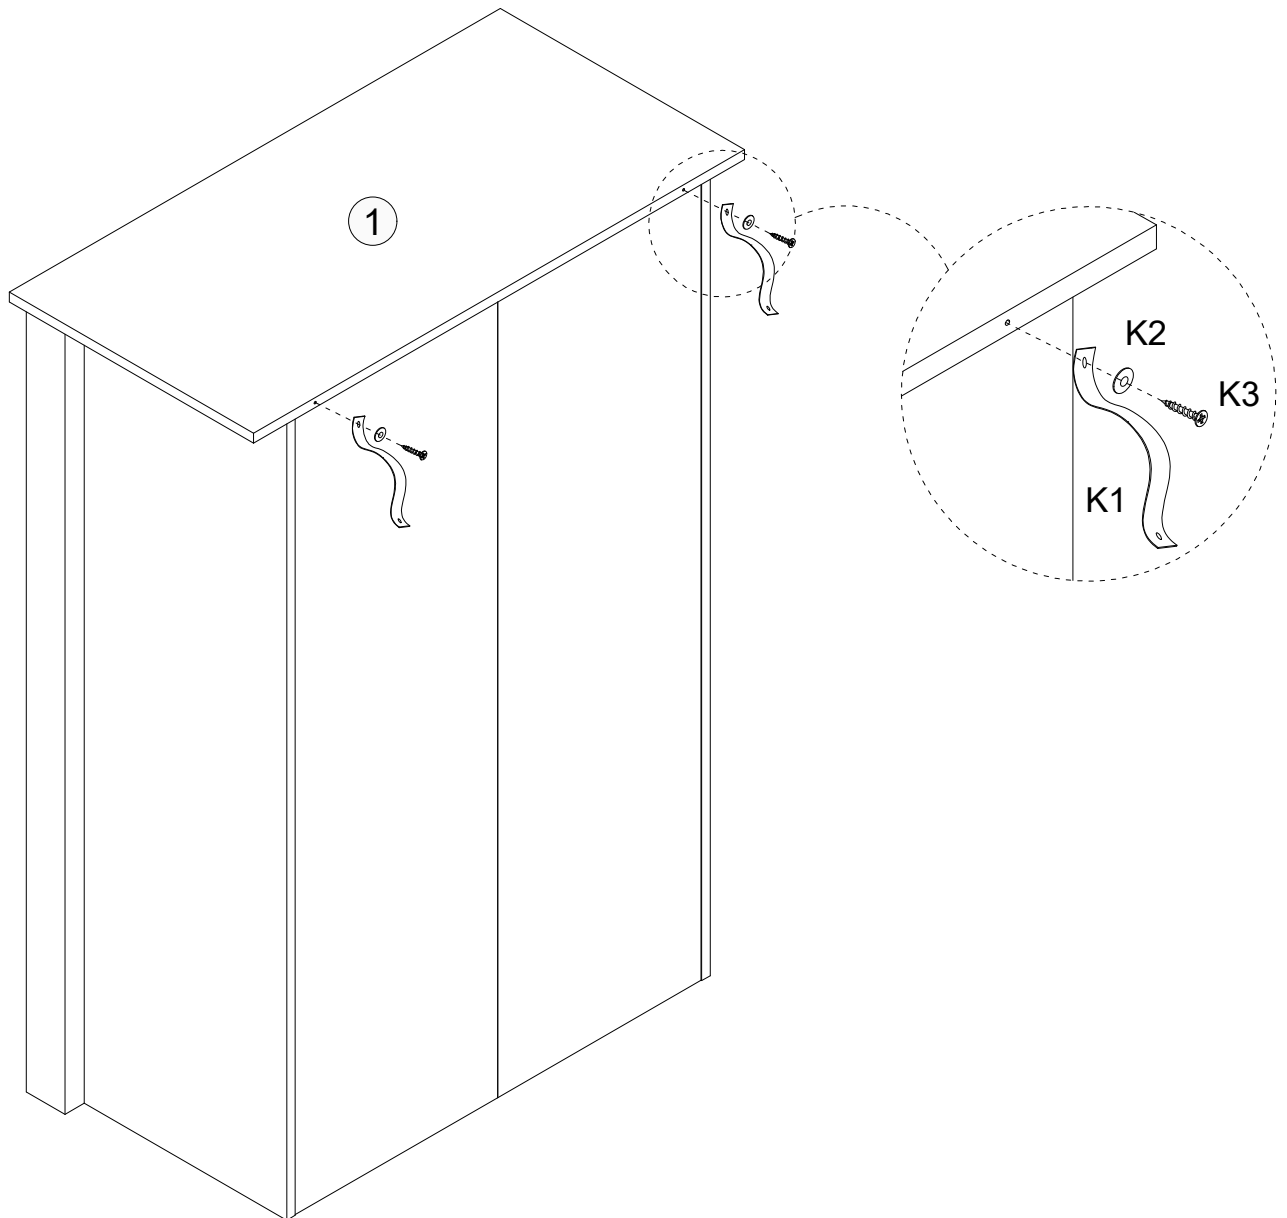



Use screw (K3) and washer (K2) to fix the strap (K1)
follow position of holes on the peice 1.

K1 x 2

K2 x 2

K3 x 2

STEP 25

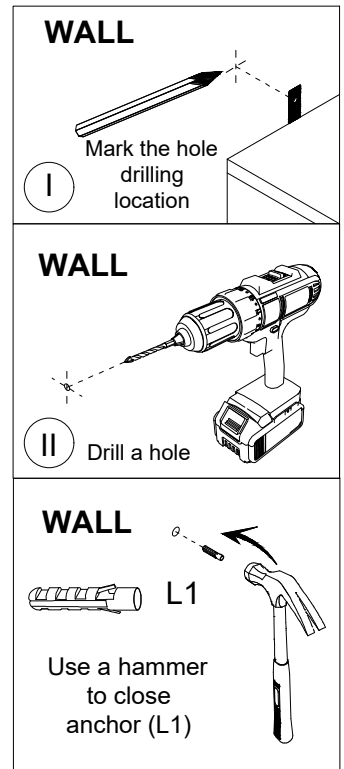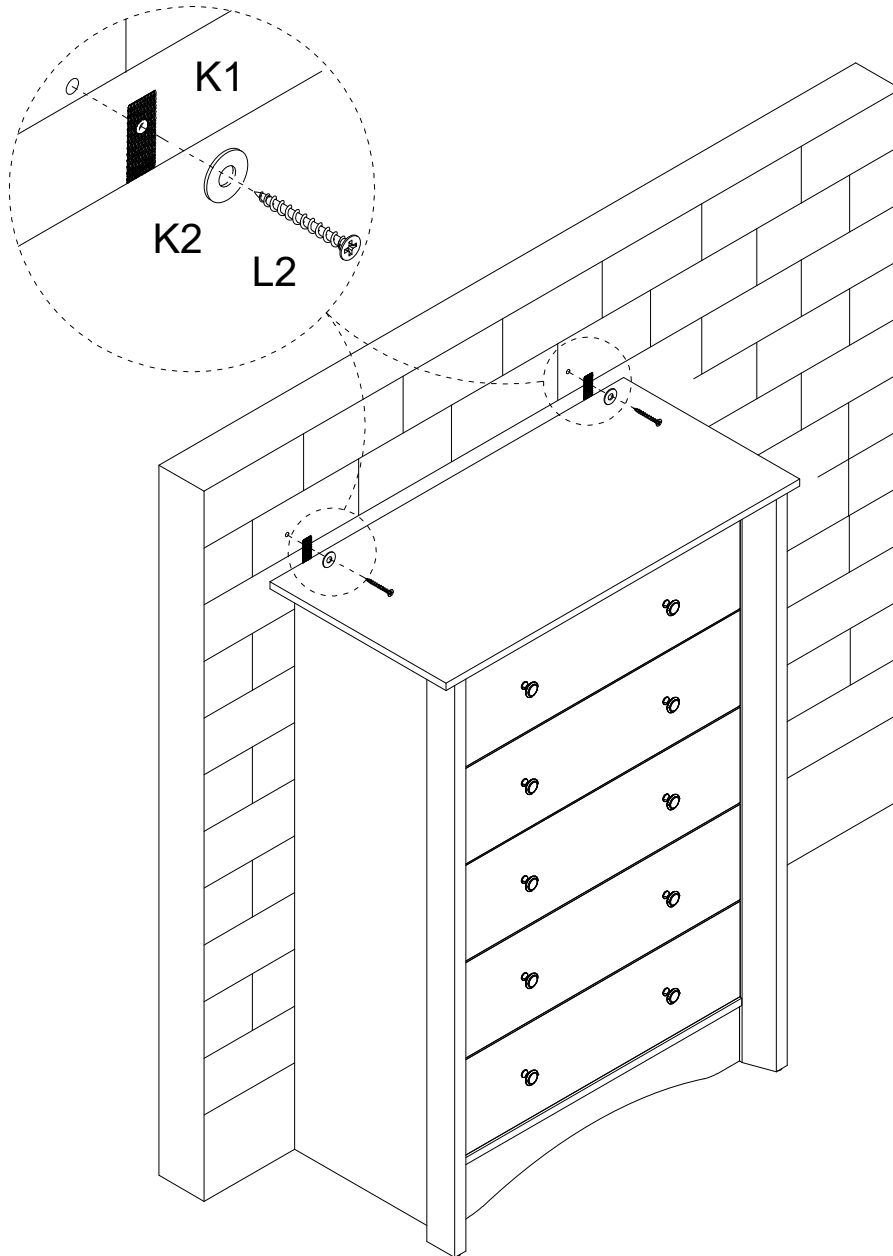

Step 1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (L1) on the wall.

Step 3: use screw (L2) to fix the strap (K1), (K2) on the wall .

L1 x2
L2 x2
K2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning