


Assembly Instruction

BED129

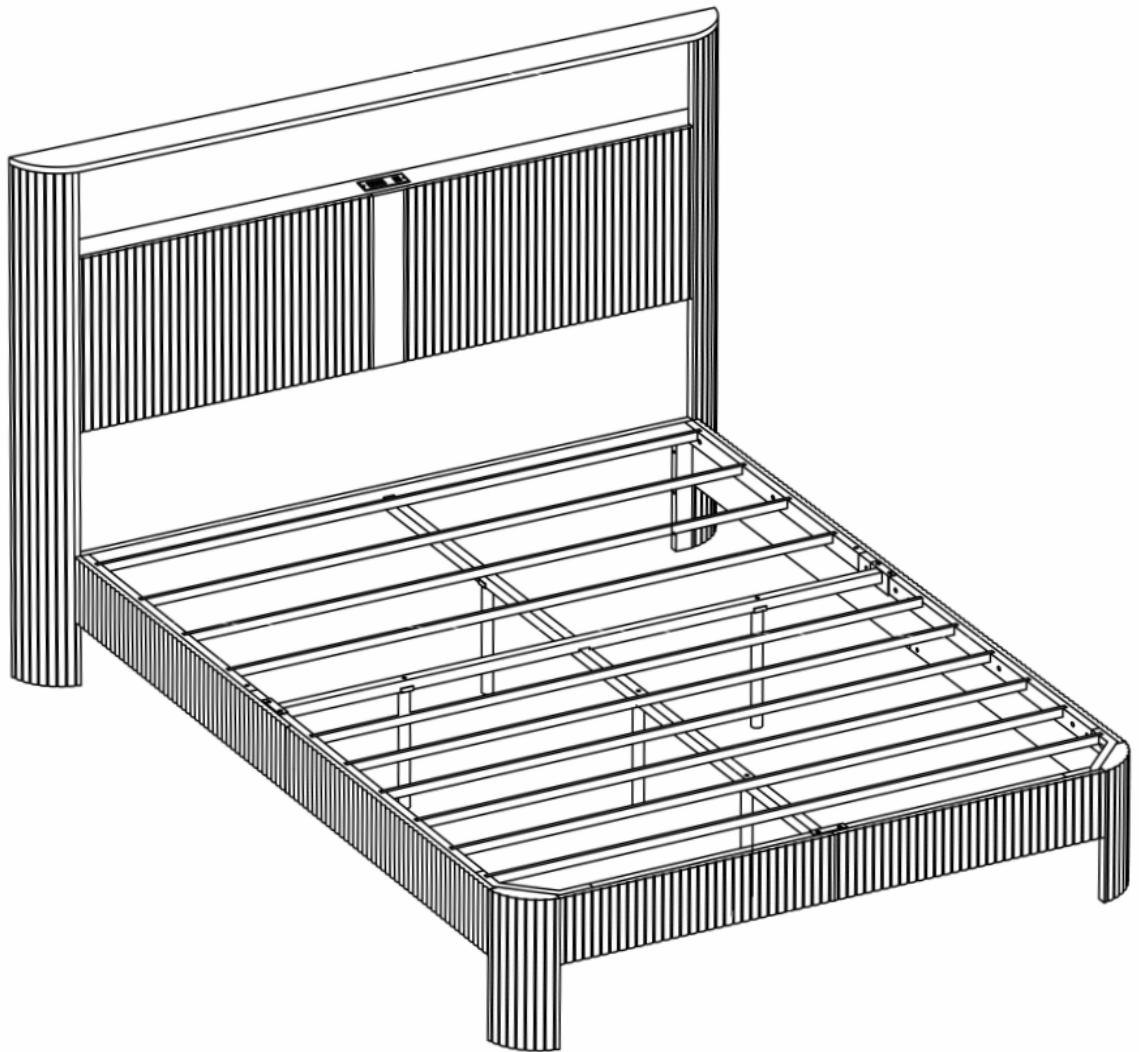

General Guidelines


- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

Notes





- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.

Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.




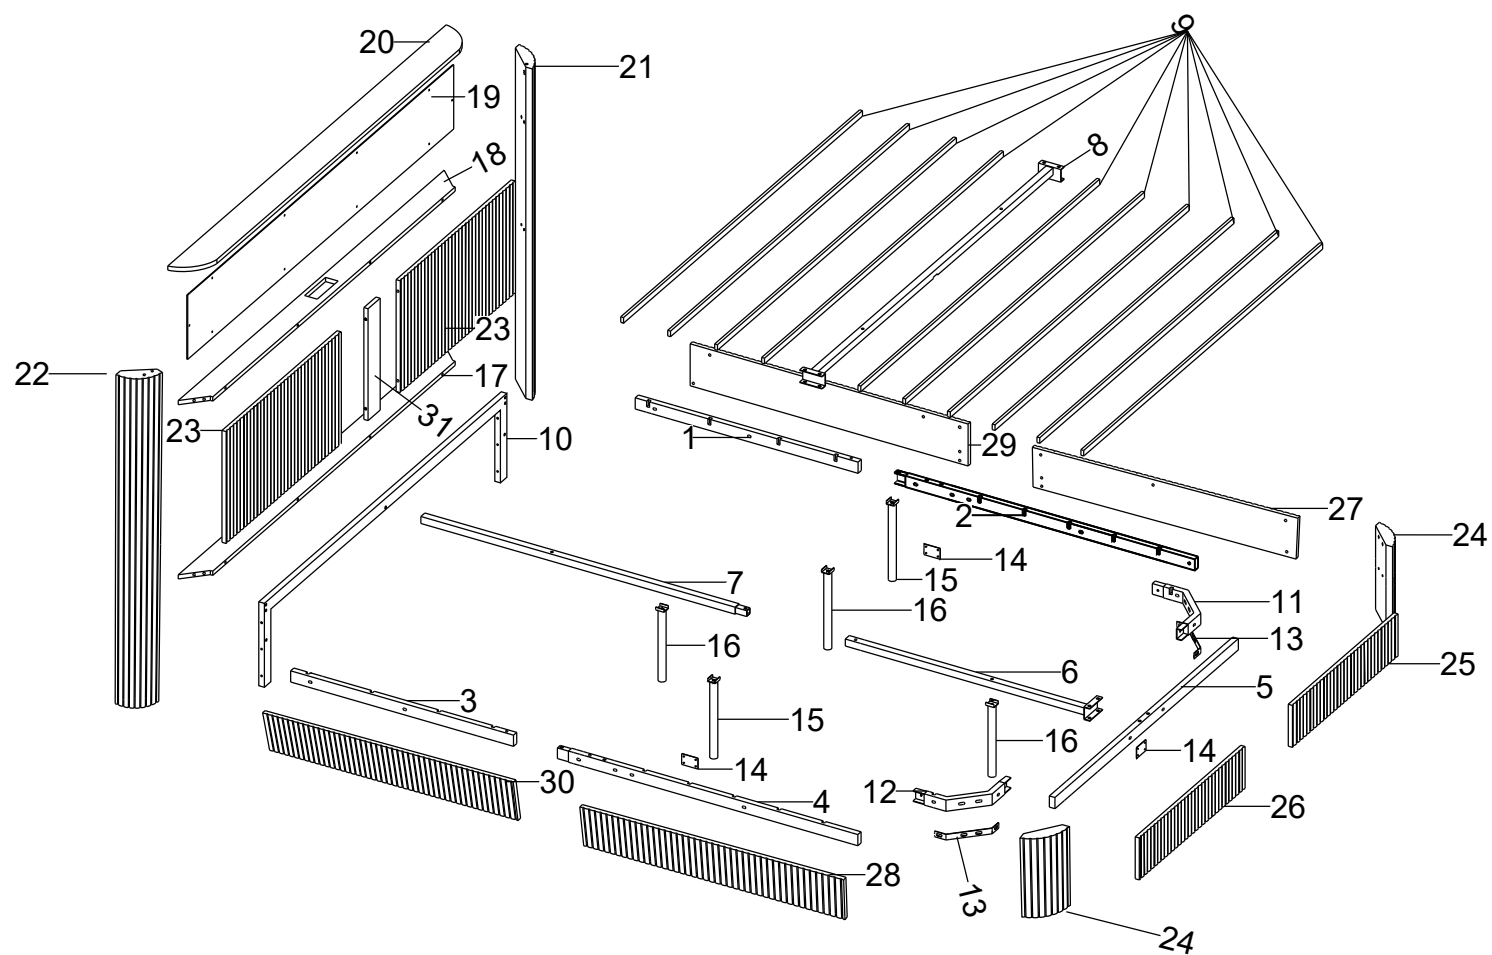


Parts List (EN)

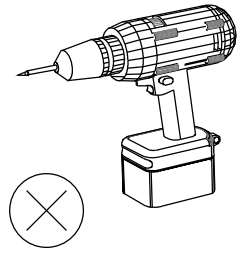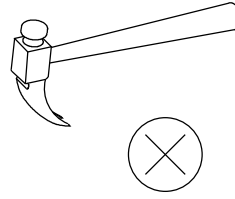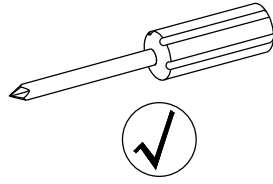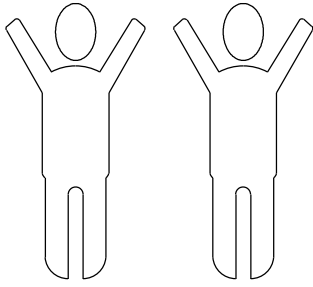





① 1PCS	② 1PCS	③ 1PCS	④ 1PCS
⑤ 1PCS	⑥ 1PCS	⑦ 1 PCS	⑧ 1PCS
⑨ 10 PCS	⑩ 1PCS	⑪ 1PCS	⑫ 1PCS
⑬ 2 PCS	⑭ 3PCS	⑮ 2 PCS	⑯ 3PCS
⑰ 1PCS	⑱ 1PCS	⑲ 1PCS	⑳ 1PCS

















Parts List (EN)

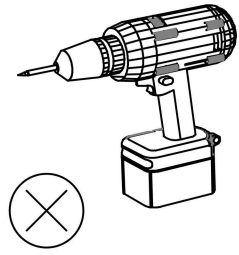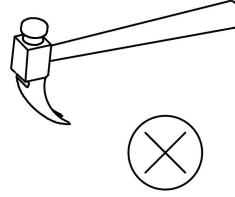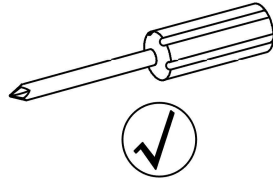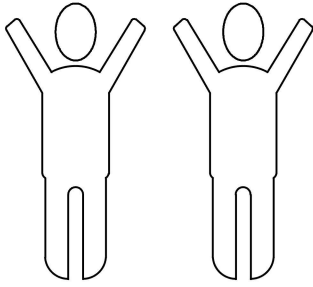


21 1PCS	22 1PCS	23 2 PCS	24 2PCS
25 1PCS	26 1PCS	27 1PCS	28 1 PCS
29 1PCS	30 1PCS	31 PCS	

Parts List (EN)

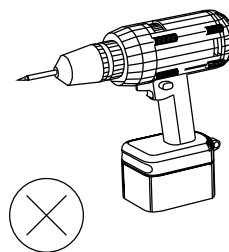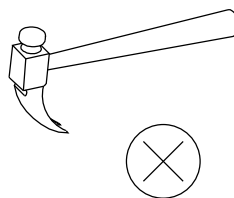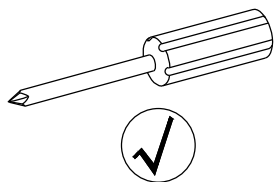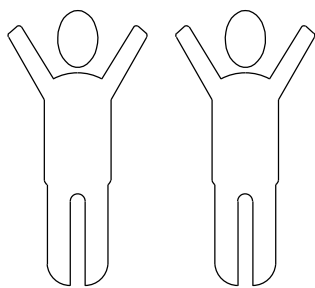


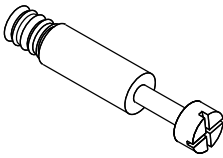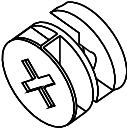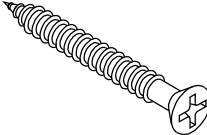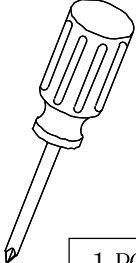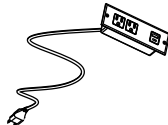A  M4 2 PCS	B  8+1 PCS	C  ø6*36mm 22+2PCS	D  M6*28 30+2 PCS
E  M6*10 28+2PCS	H  22+2PCS	G  4*55 6+1PCS	Q  3.5*15 20+2 PCS
I  short 1 PCS	X  long 1 PCS	N  M8*50 5+1 PCS	K  ø8*30 6+2 PCS
S  1 PCS	L  2 PCS	V  2 PCS	P  1 PCS
Y  M3.5*10 2+1PCS	R  M6*30 5+1 PCS		

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

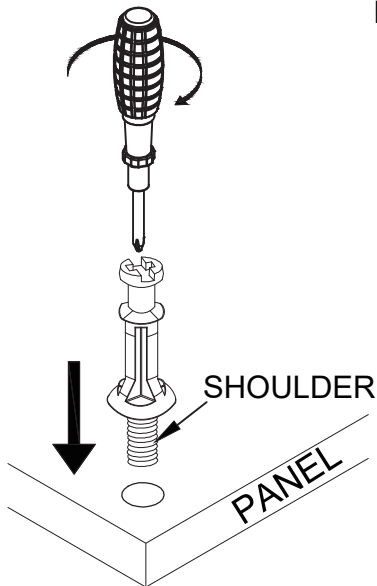

Place Cam-bolt on pre-drilled hole and screw in vertically

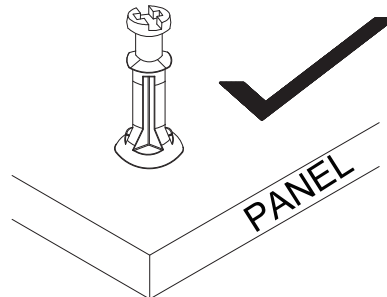


Shoulder is flushed (on the same level) with the panel.

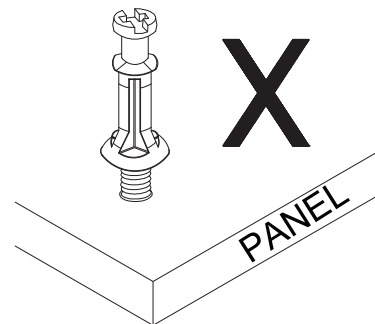

Shoulder is above the panel.


Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

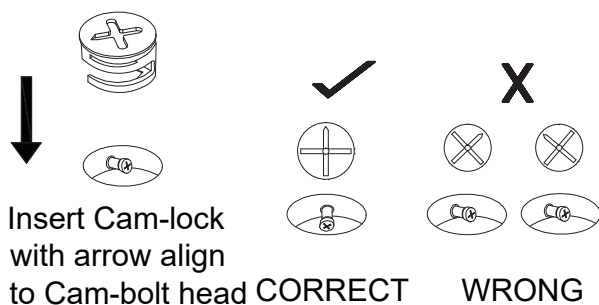



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

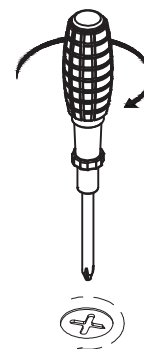


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


STEP1

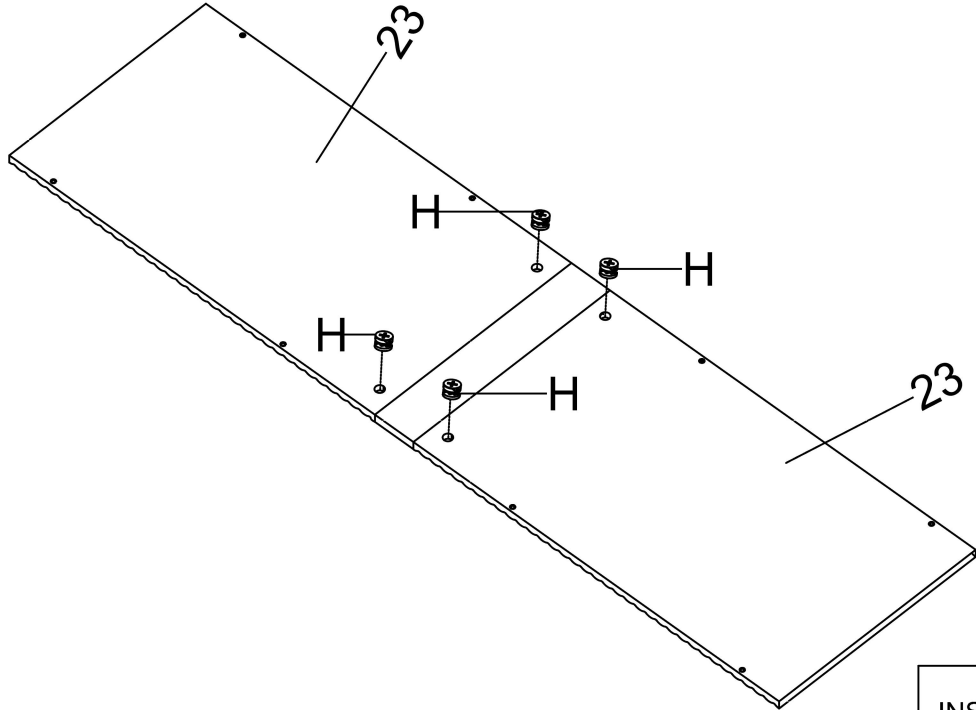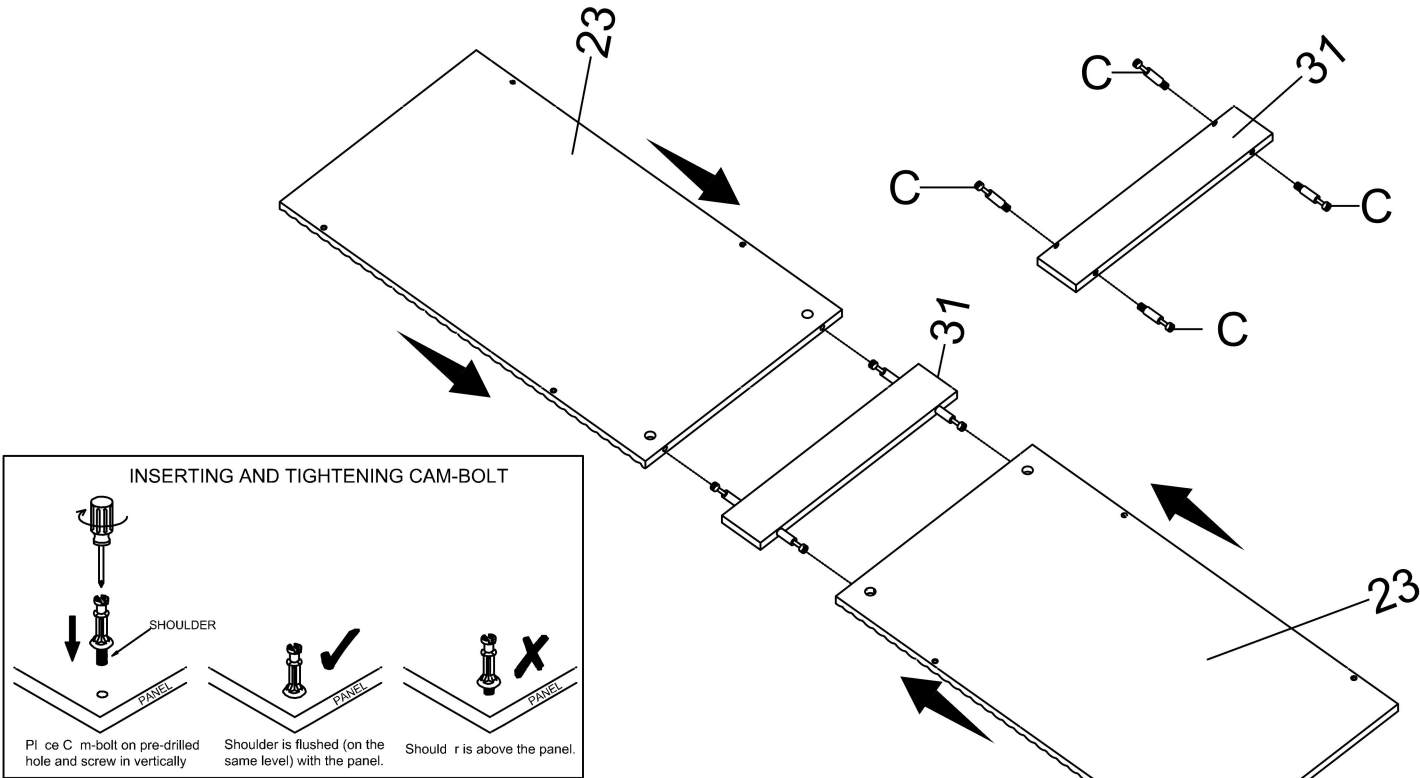




 Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


Please Assemble on a Carpet or Clean, Flat Surface to Prevent Scratches

	Cx4pcs
	Hx4pcs

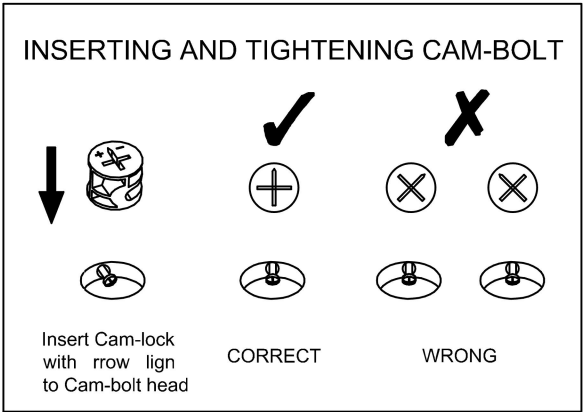




STEP2

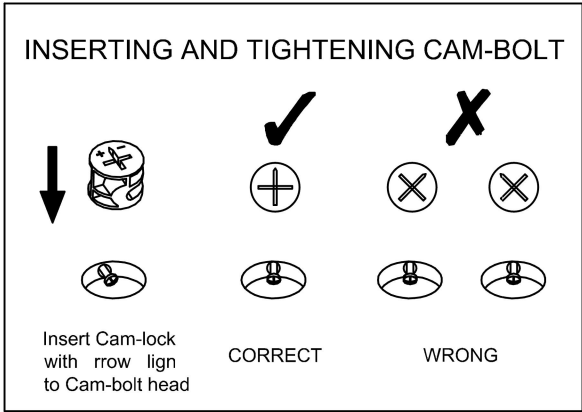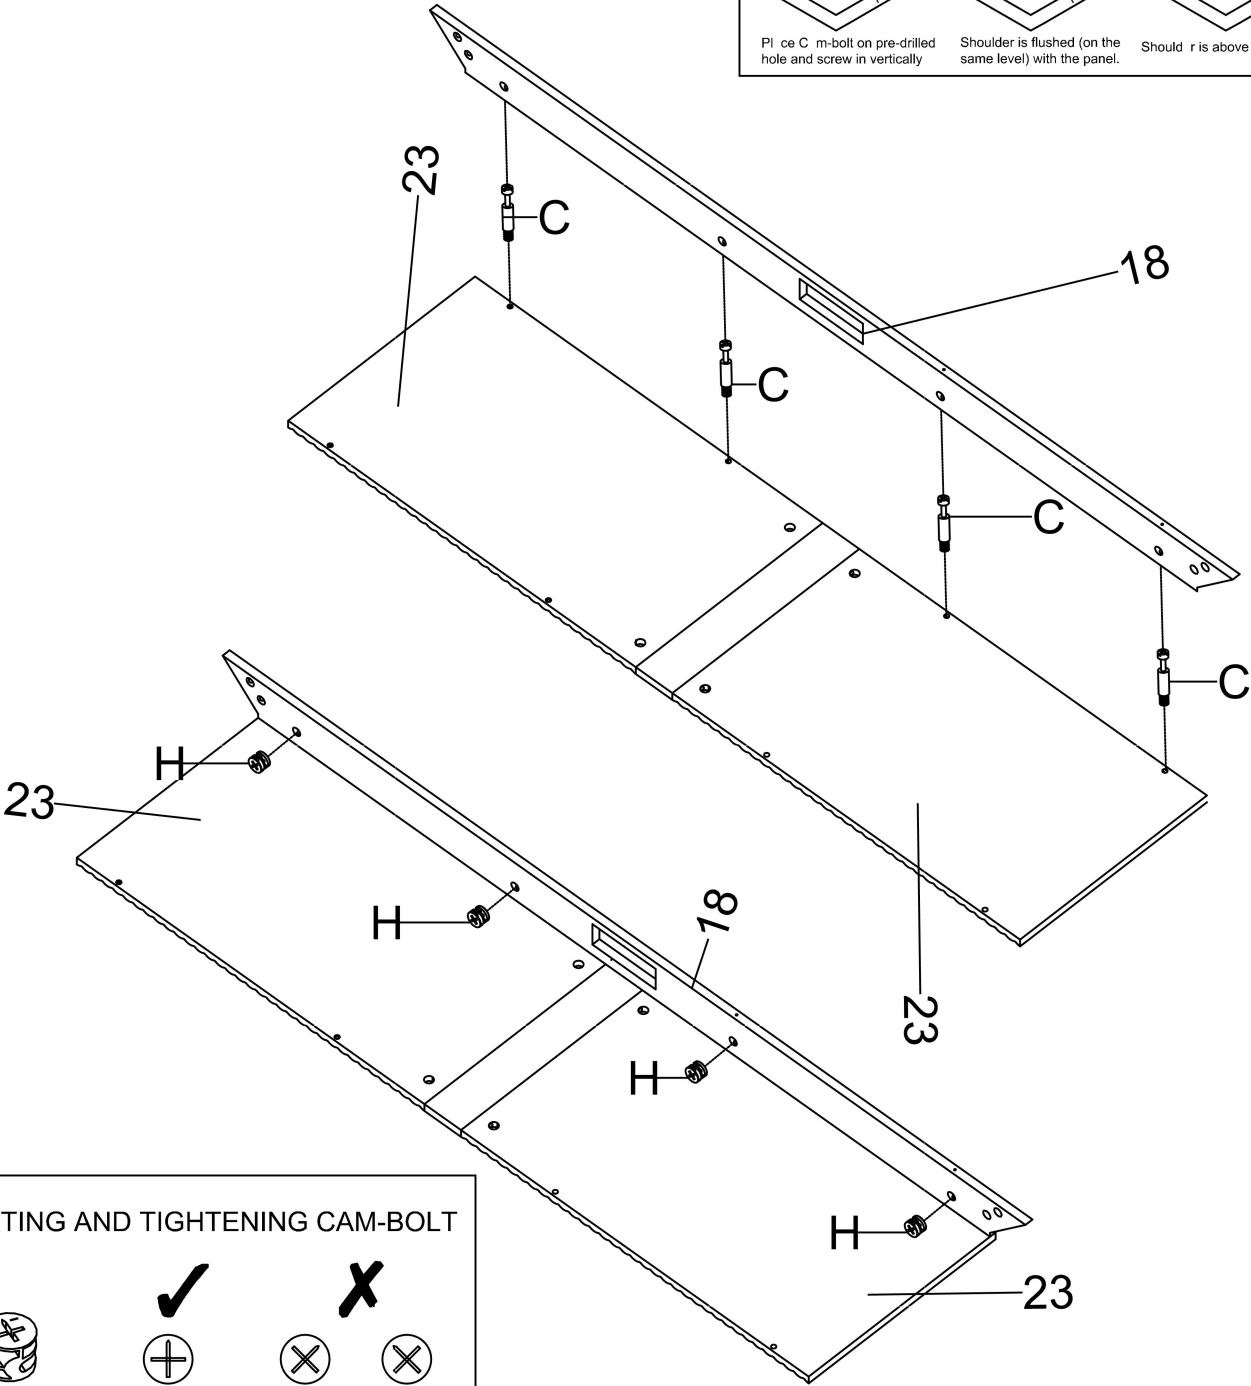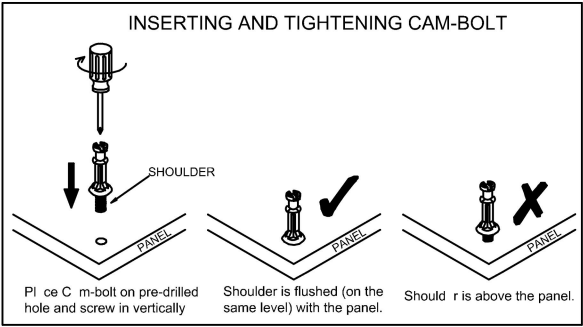


	Cx4pcs
	Hx4pcs

Please Assemble on a Carpet
or Clean, Flat Surface to Prevent Scratches




STEP3

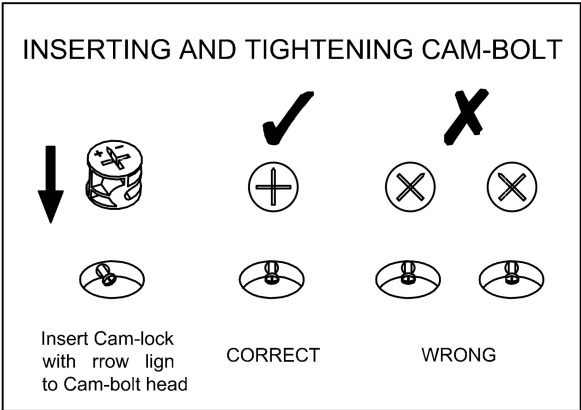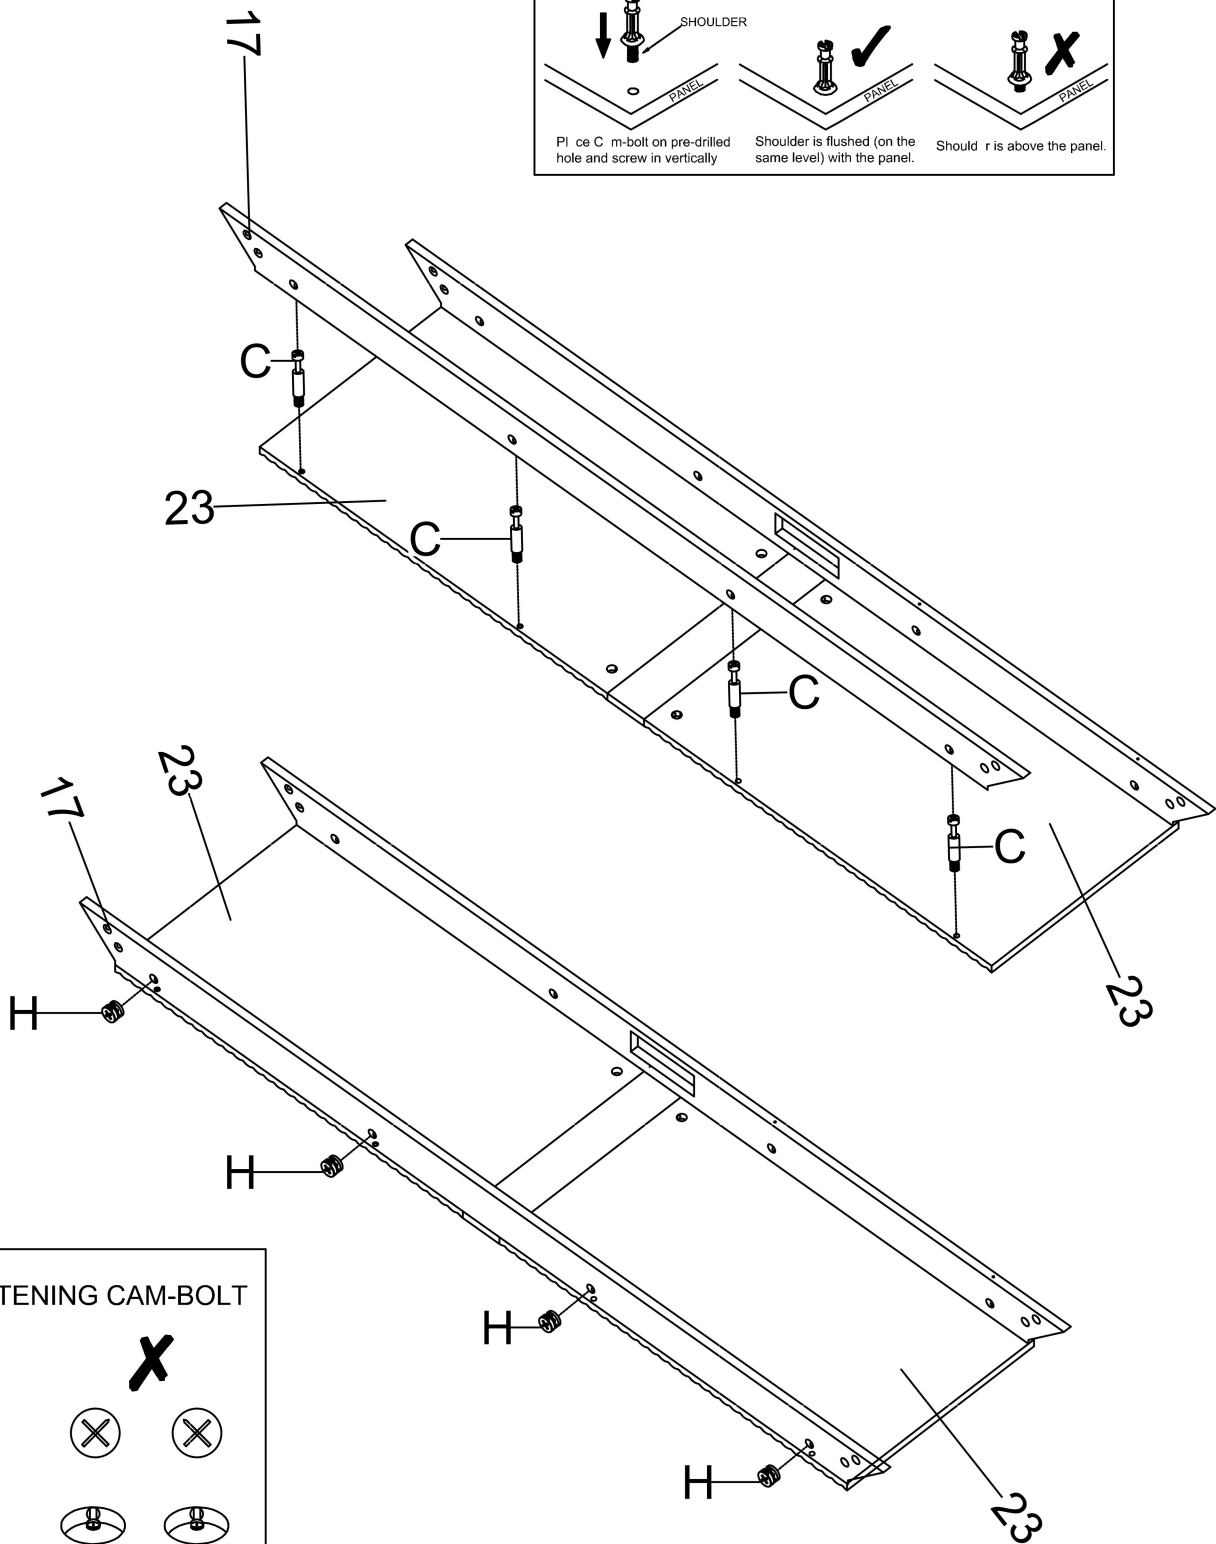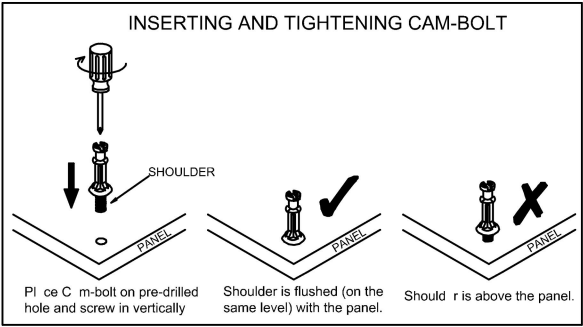


	Cx4pcs
	Hx4pcs

Please Assemble on a Carpet
or Clean, Flat Surface to Prevent Scratches





STEP4

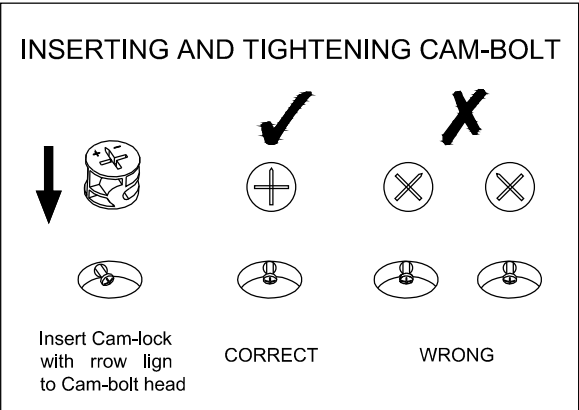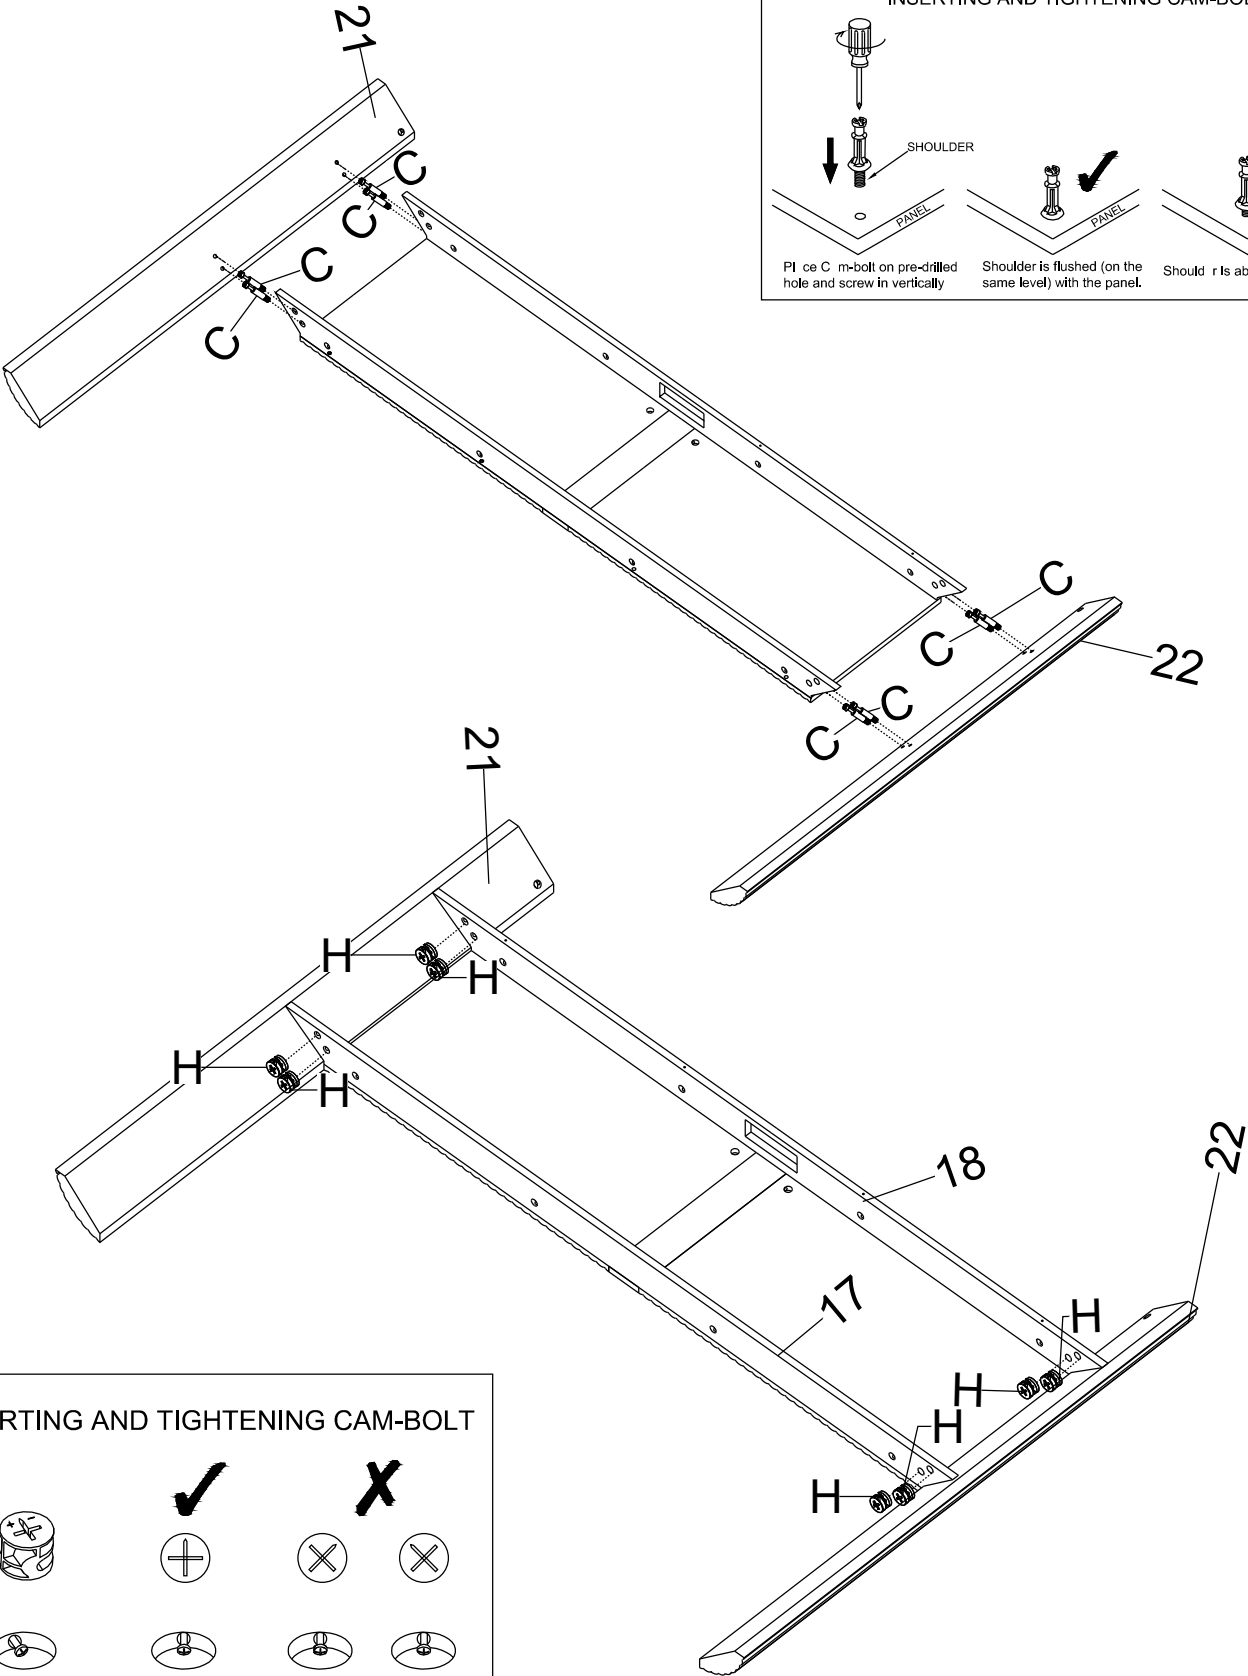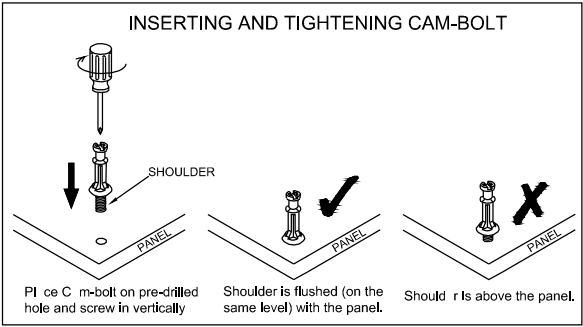


	Cx8pcs
	Hx8pcs

Please Assemble on a Carpet or Clean, Flat Surface to Prevent Scratches


STEP5

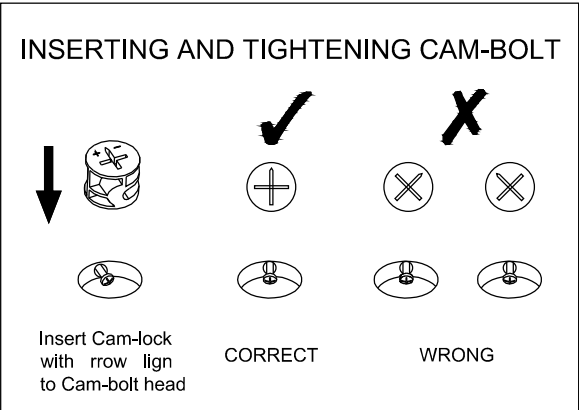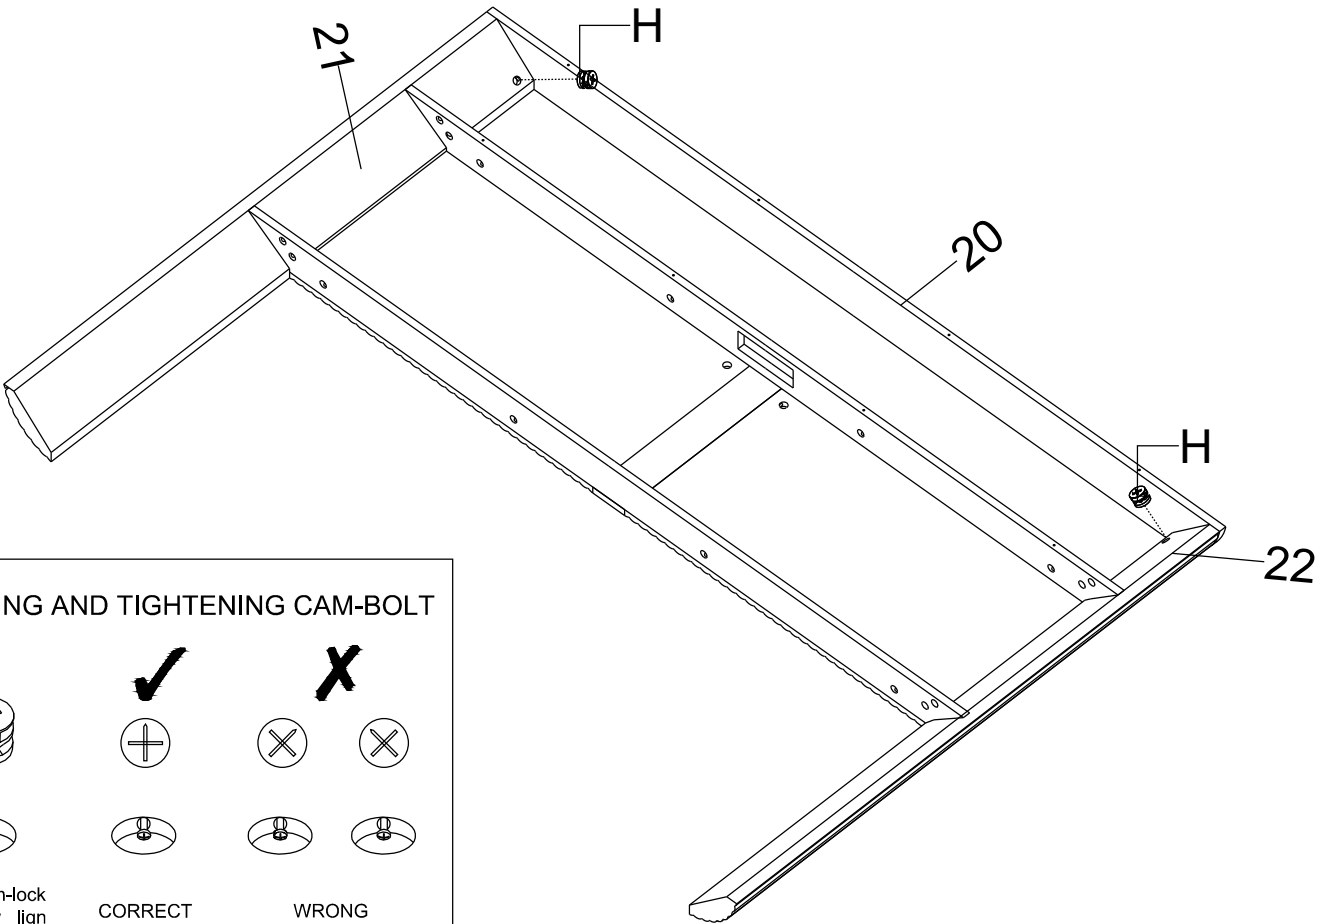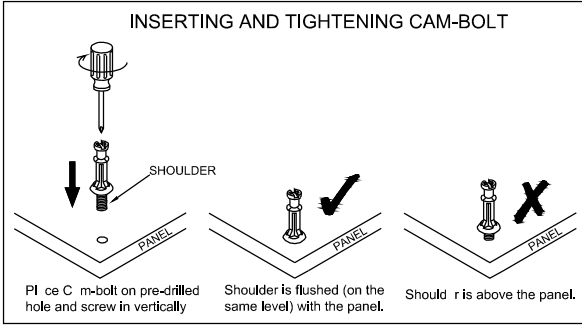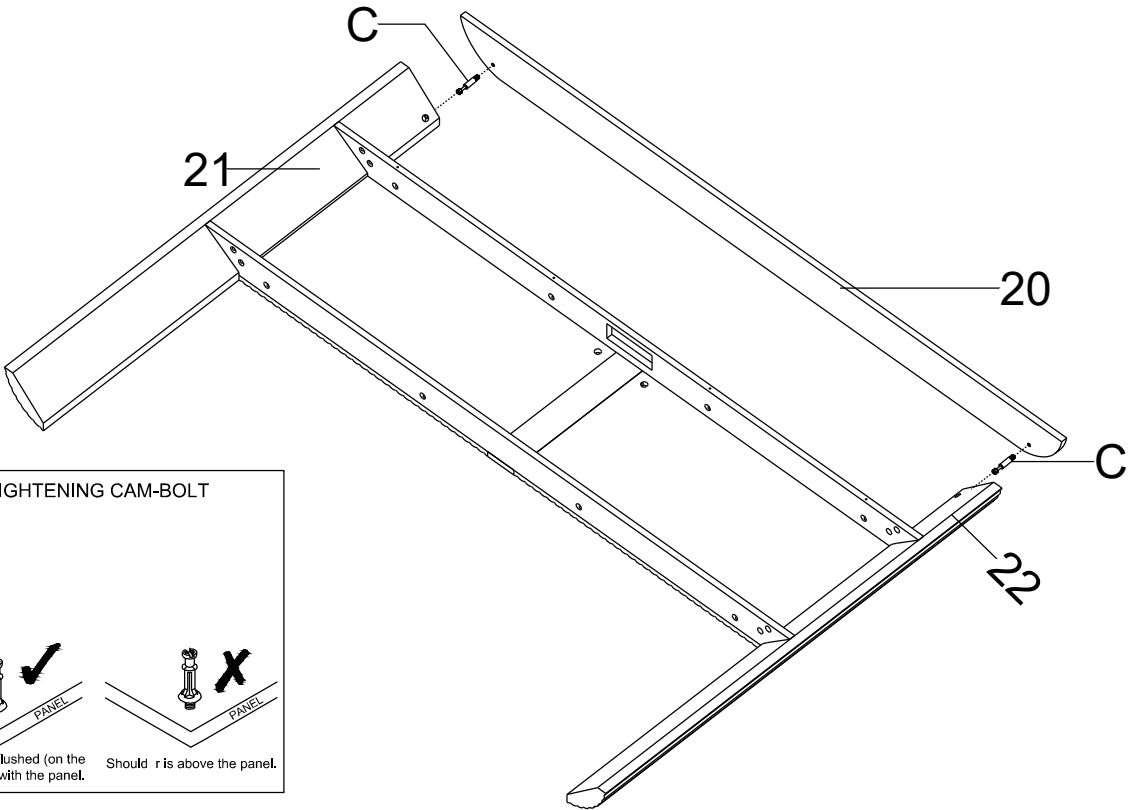

	Cx2pcs
	Hx2pcs

Please Assemble on a Carpet
or Clean, Flat Surface to Prevent Scratches


STEP6

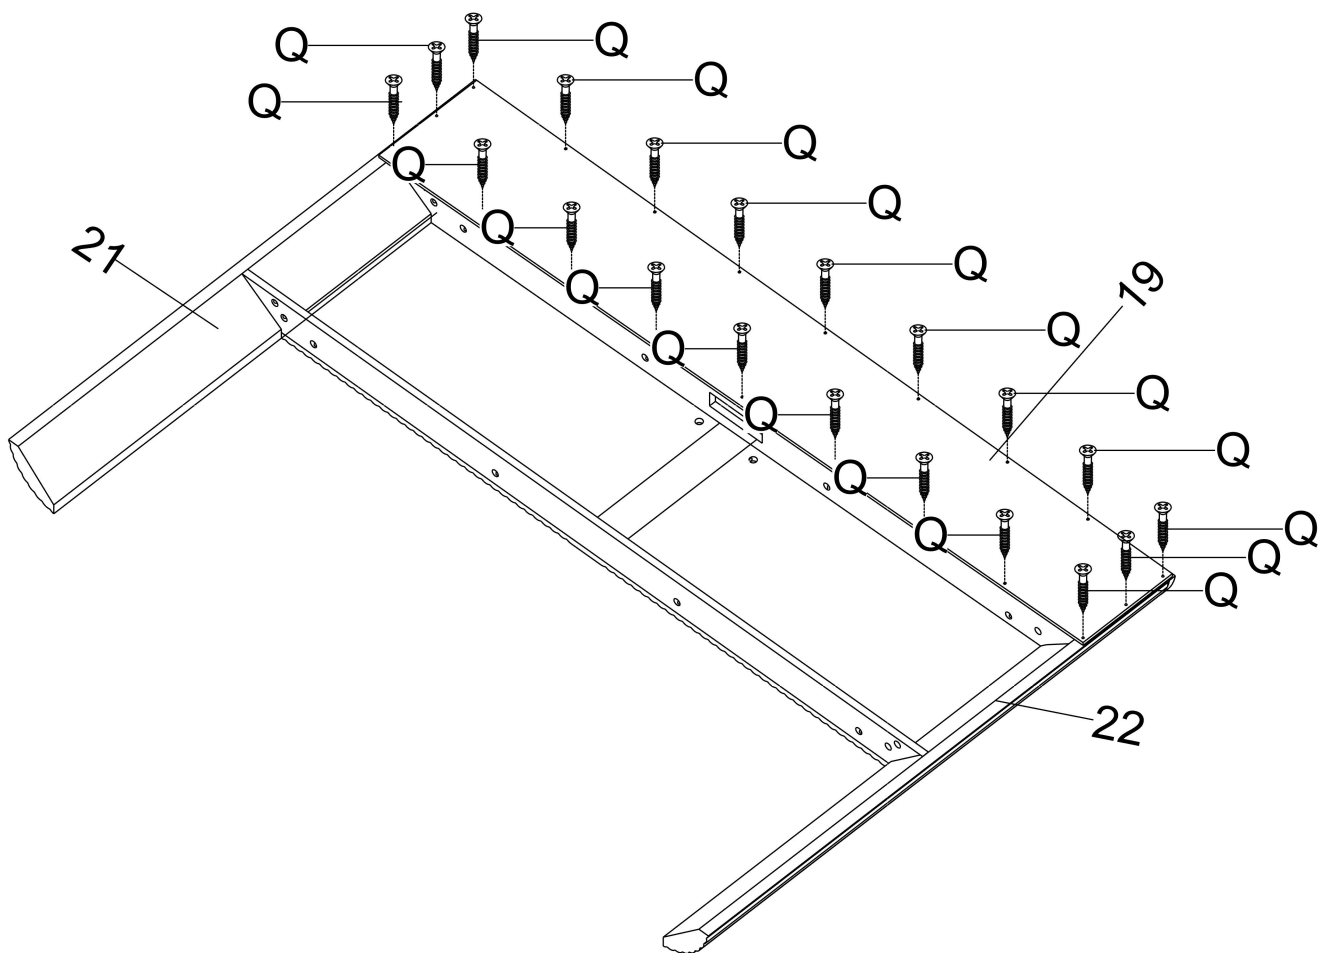


	Qx20pcs
--	---------

Please Assemble on a Carpet
or Clean, Flat Surface to Prevent Scratches


STEP7

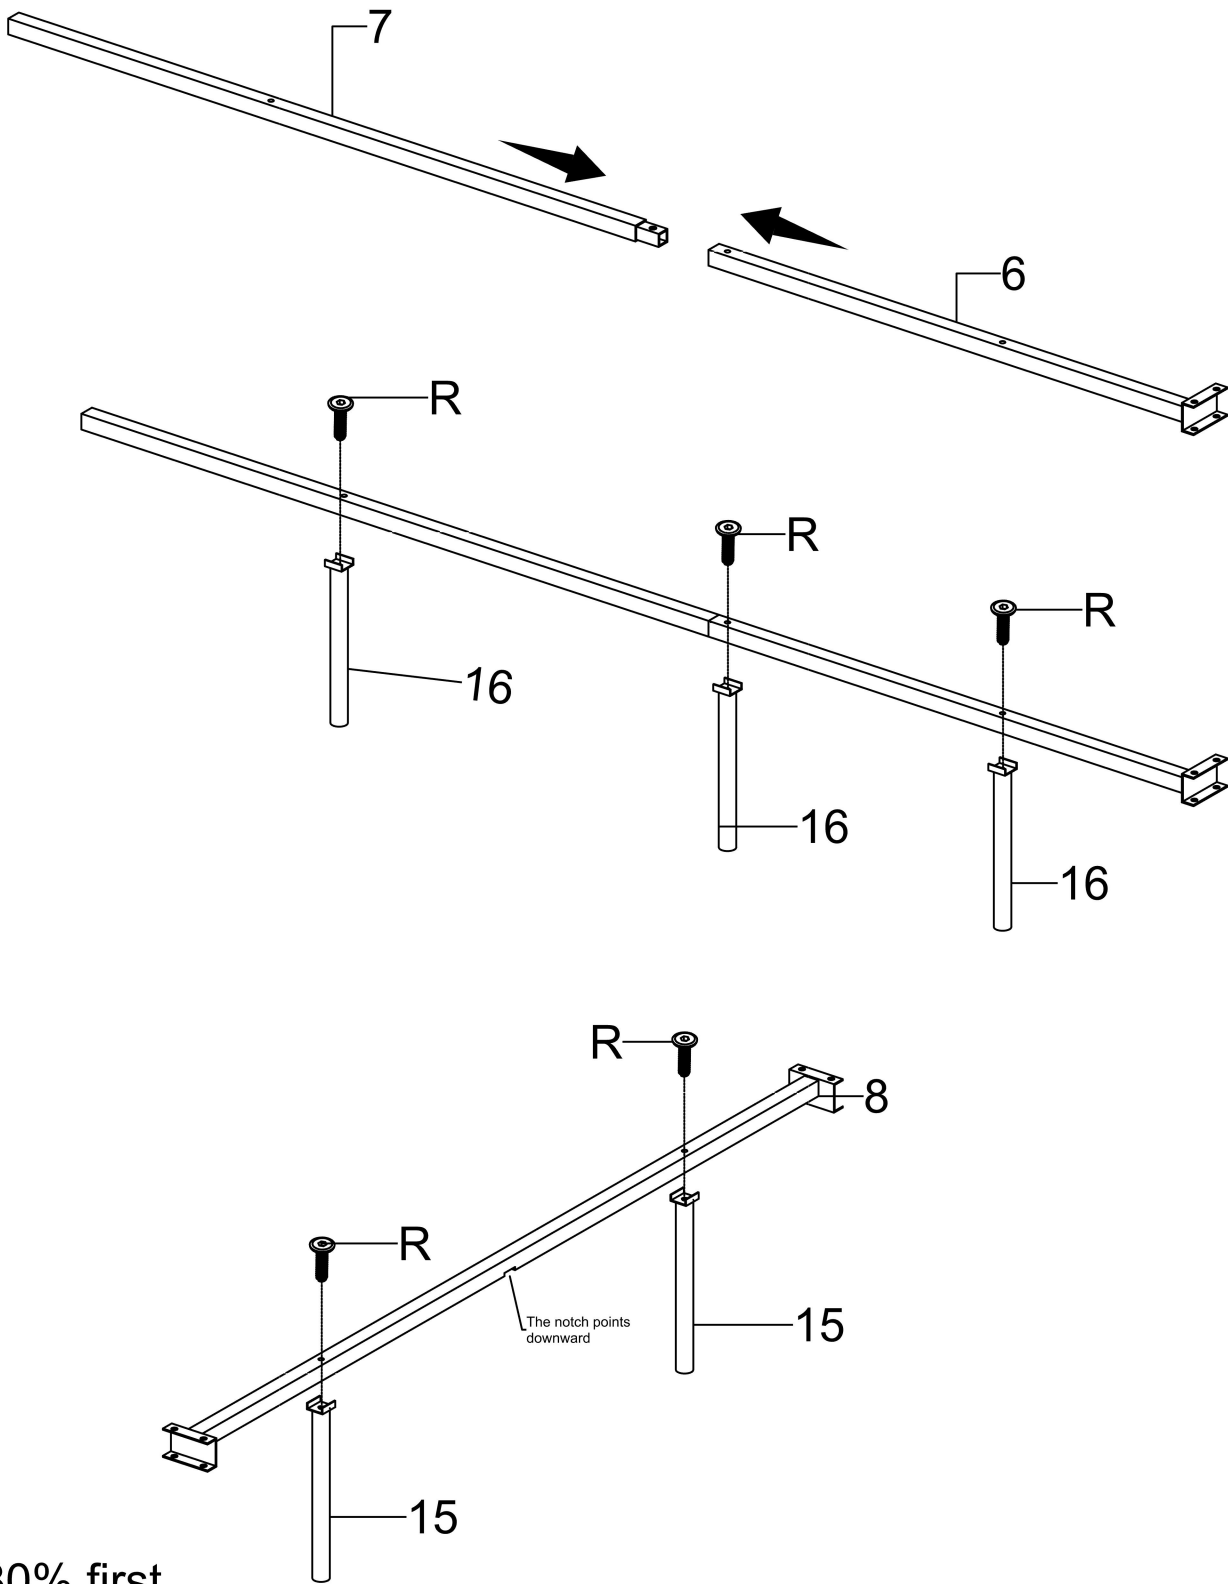


Lock 80% first

	Rx5pcs
---	--------

STEP8

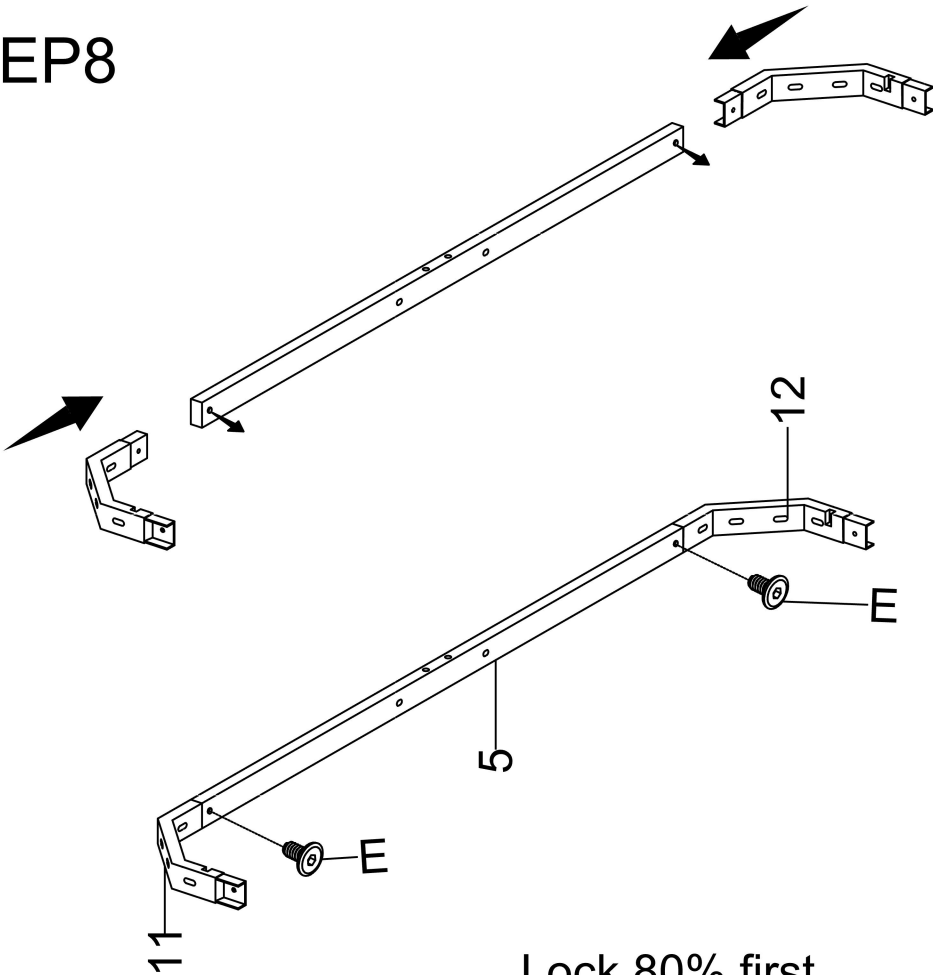




Lock 80% first



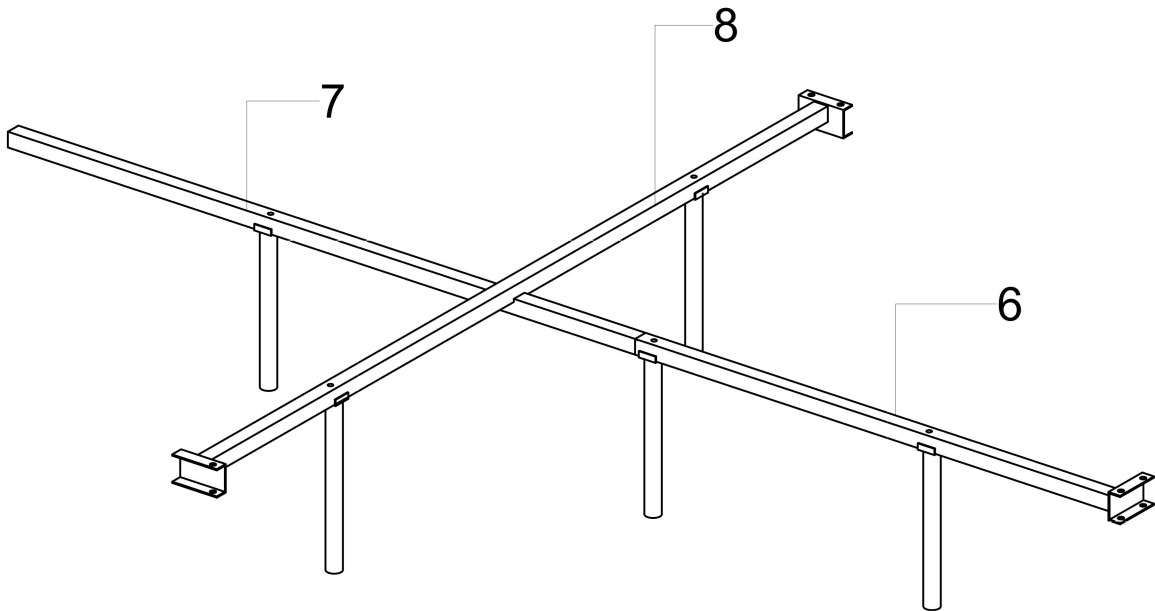


Lock 80% first



	Ex2pcs
---	--------

STEP9

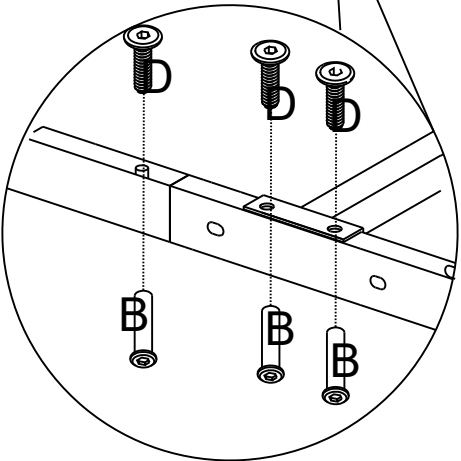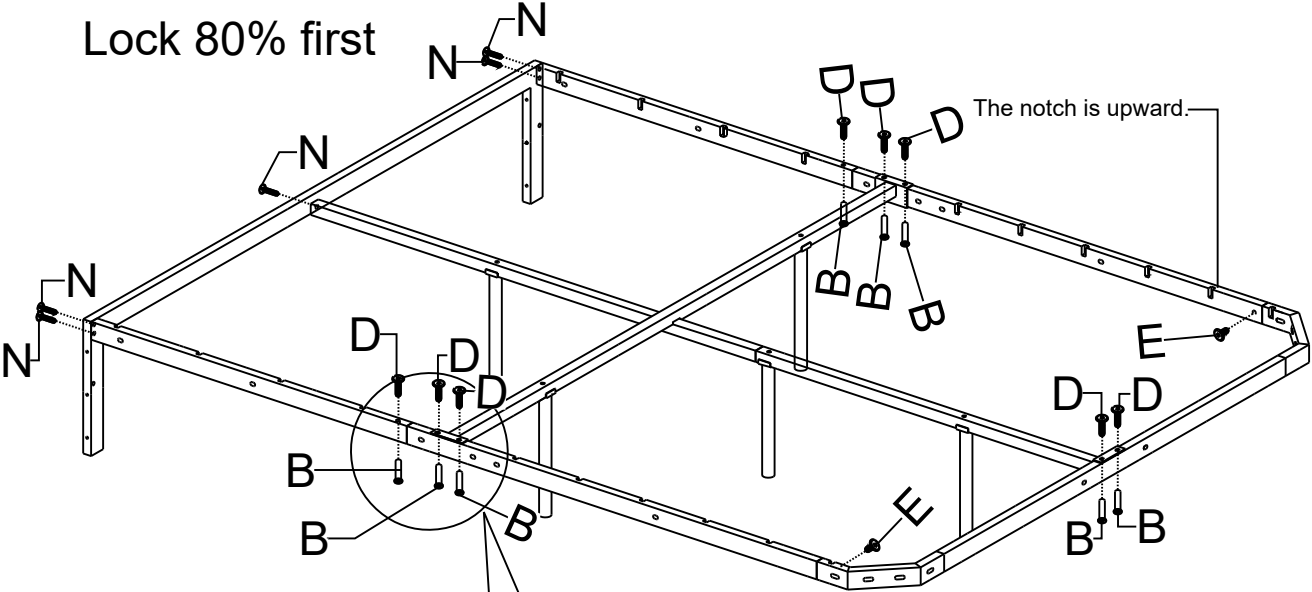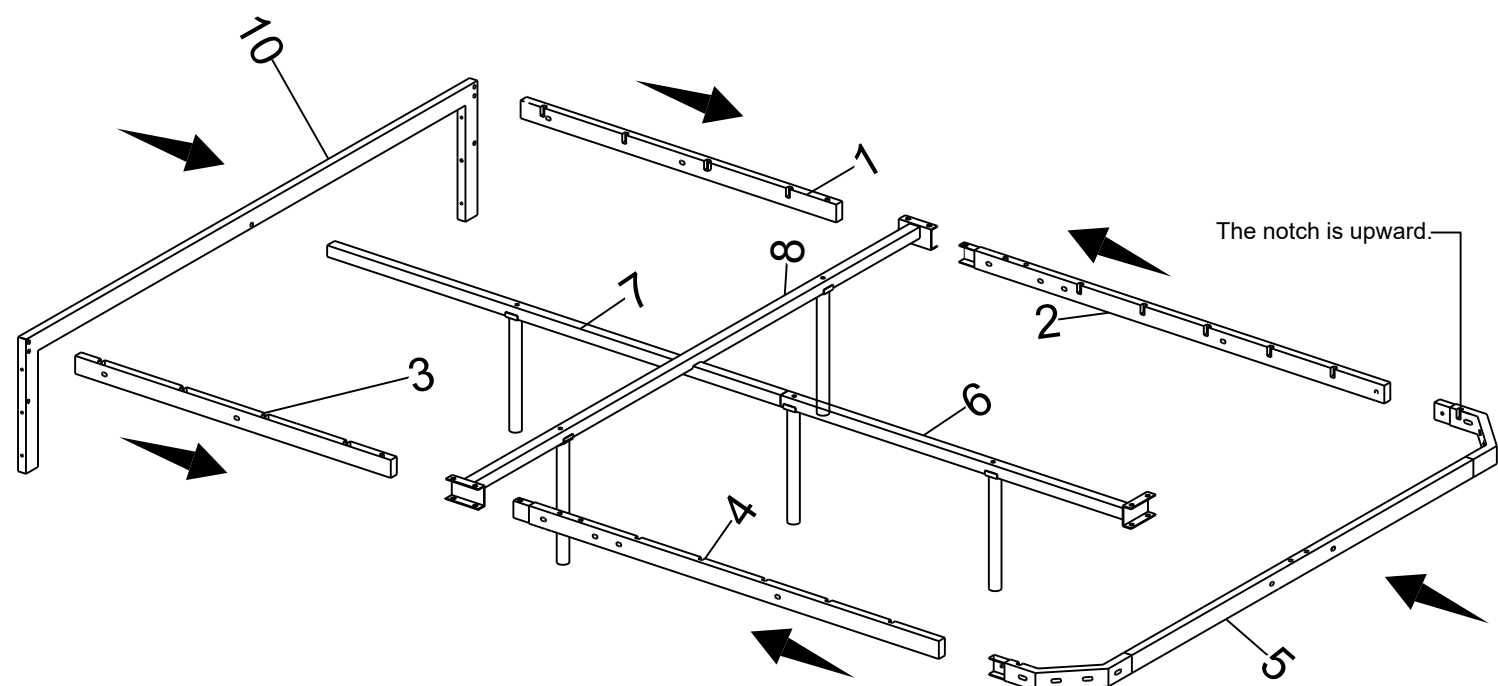


	Nx5pcs
	Ex2pcs
	Dx8pcs
	Bx8pcs


STEP10

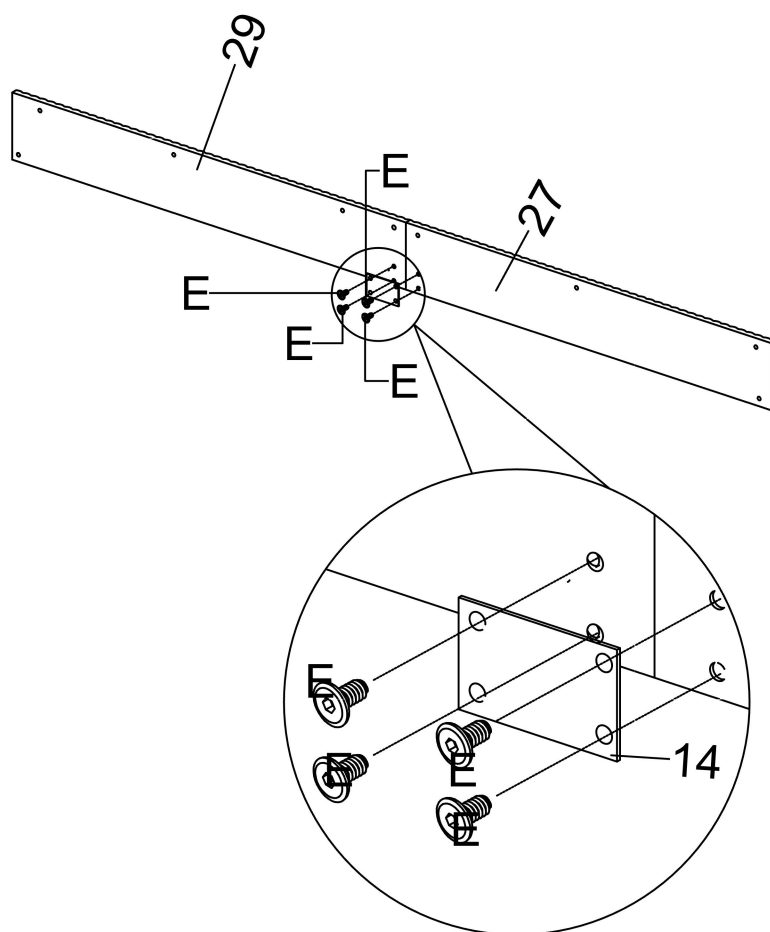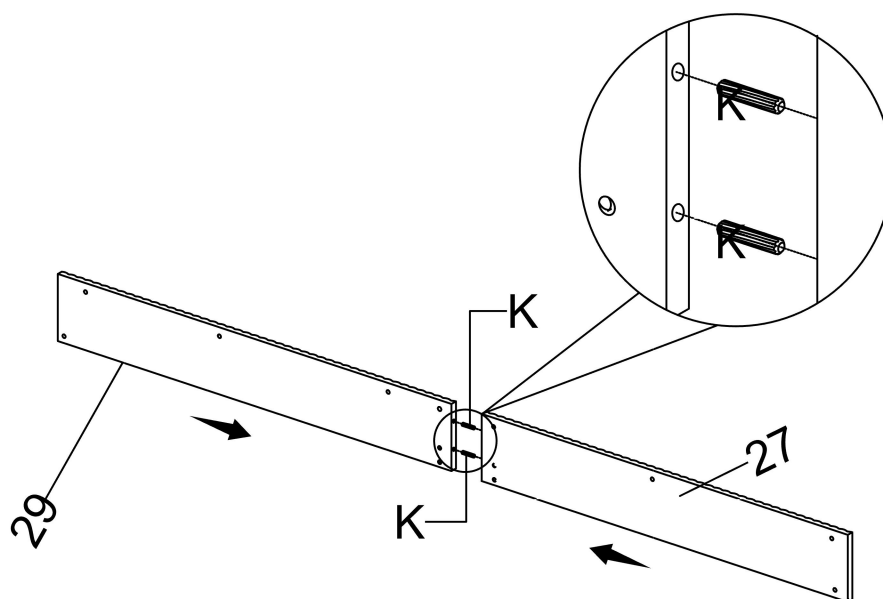


	Kx2pcs
	Ex4pcs

STEP11

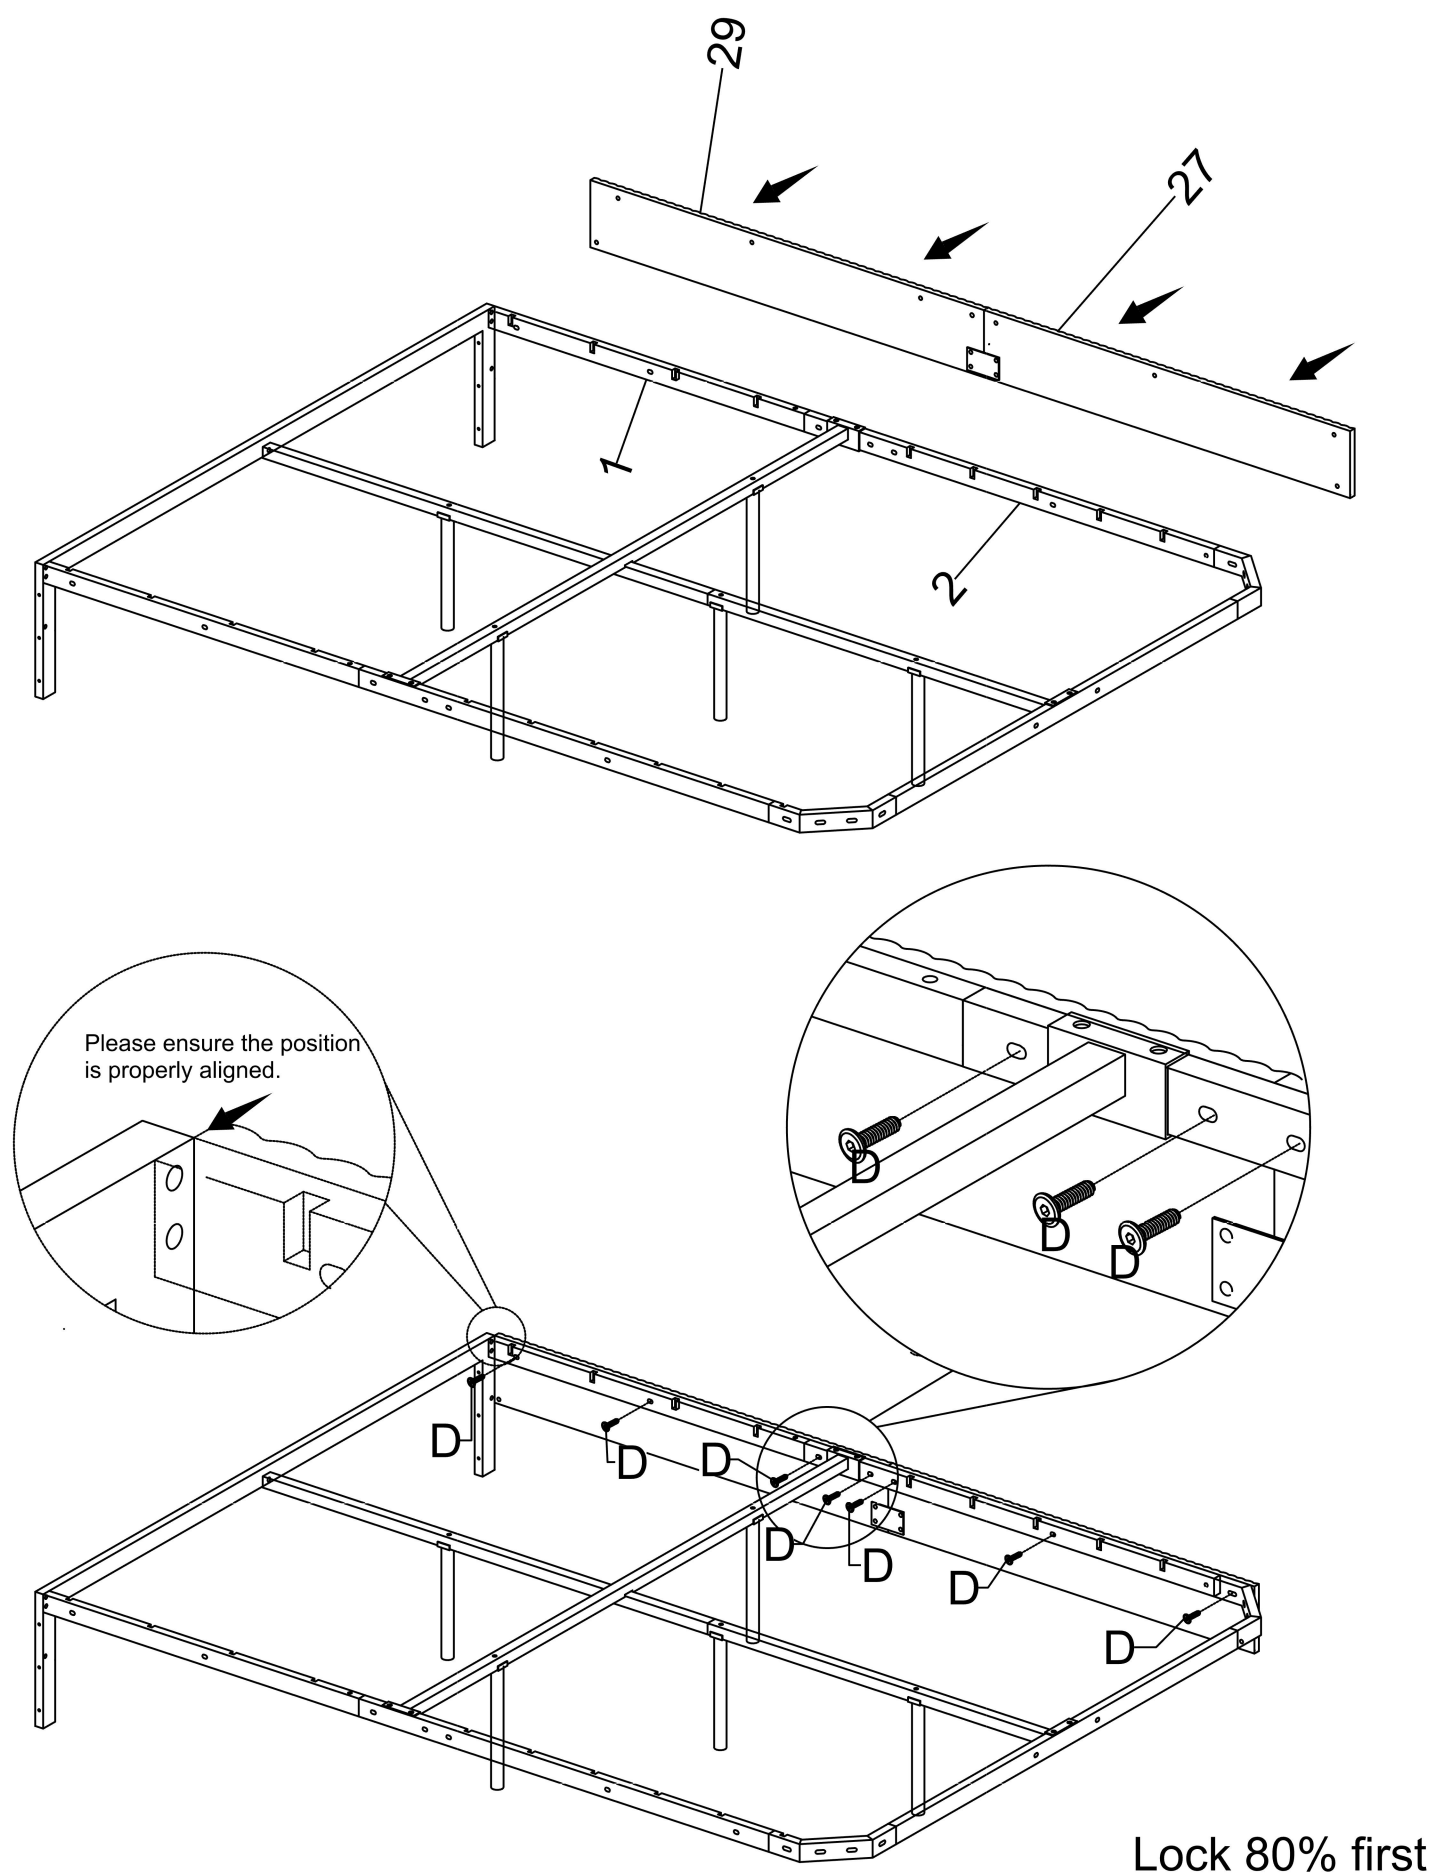



	Dx7pcs
--	--------

STEP12


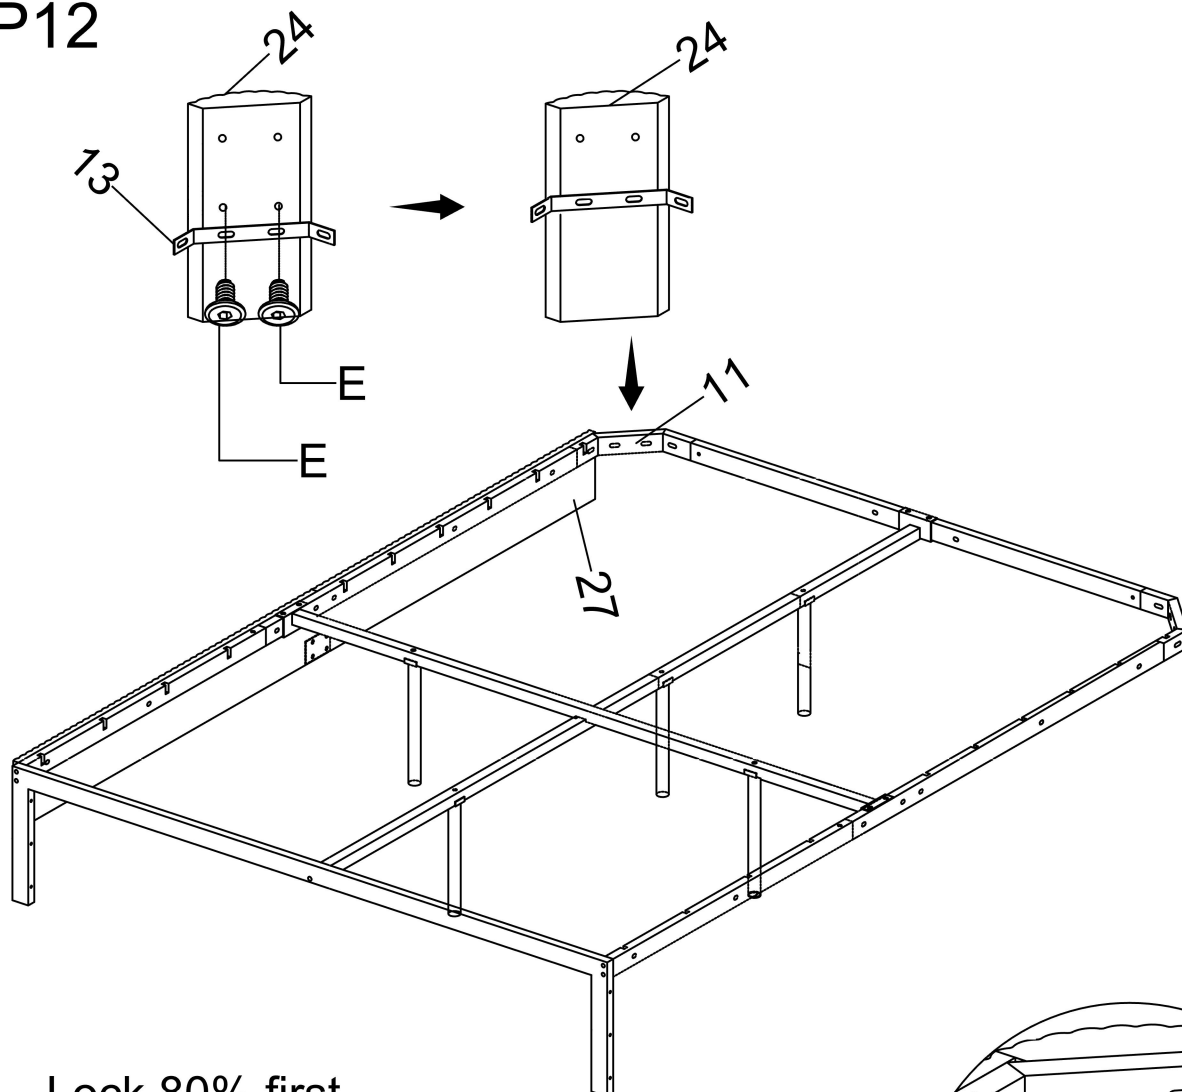


Lock 80% first

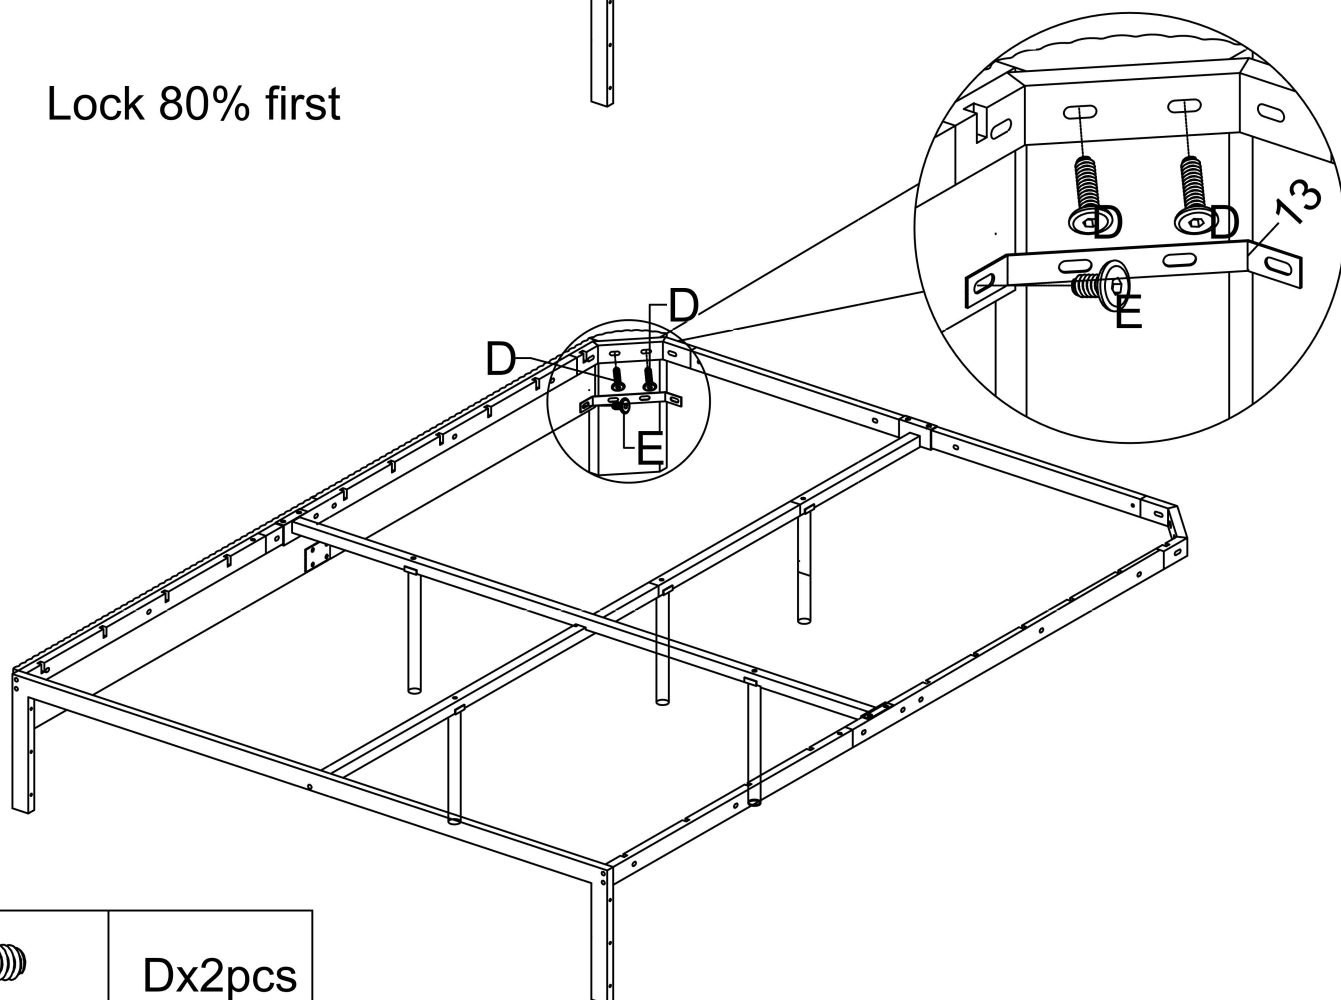


	Dx2pcs
	Ex3pcs

STEP13

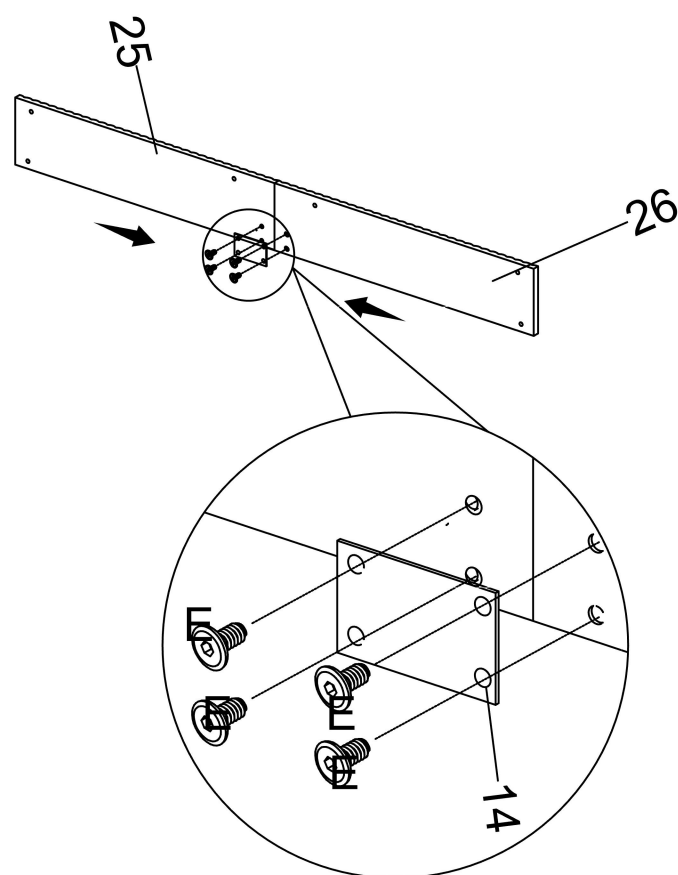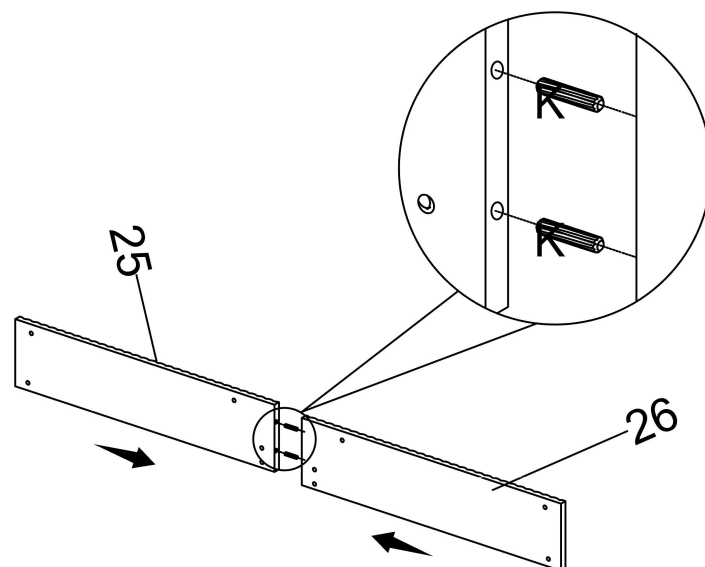


	Kx2pcs
	Ex4pcs

STEP14

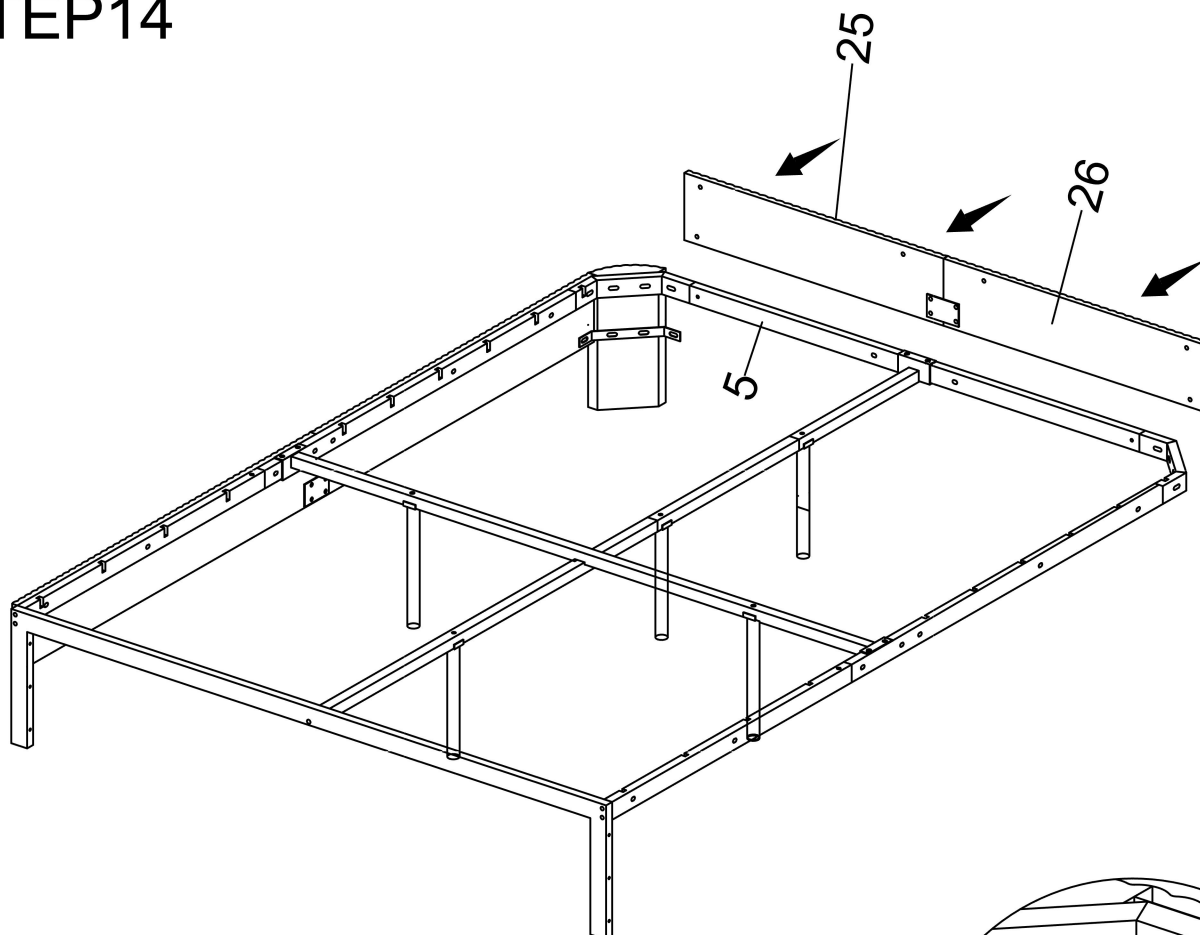


Lock 80% first

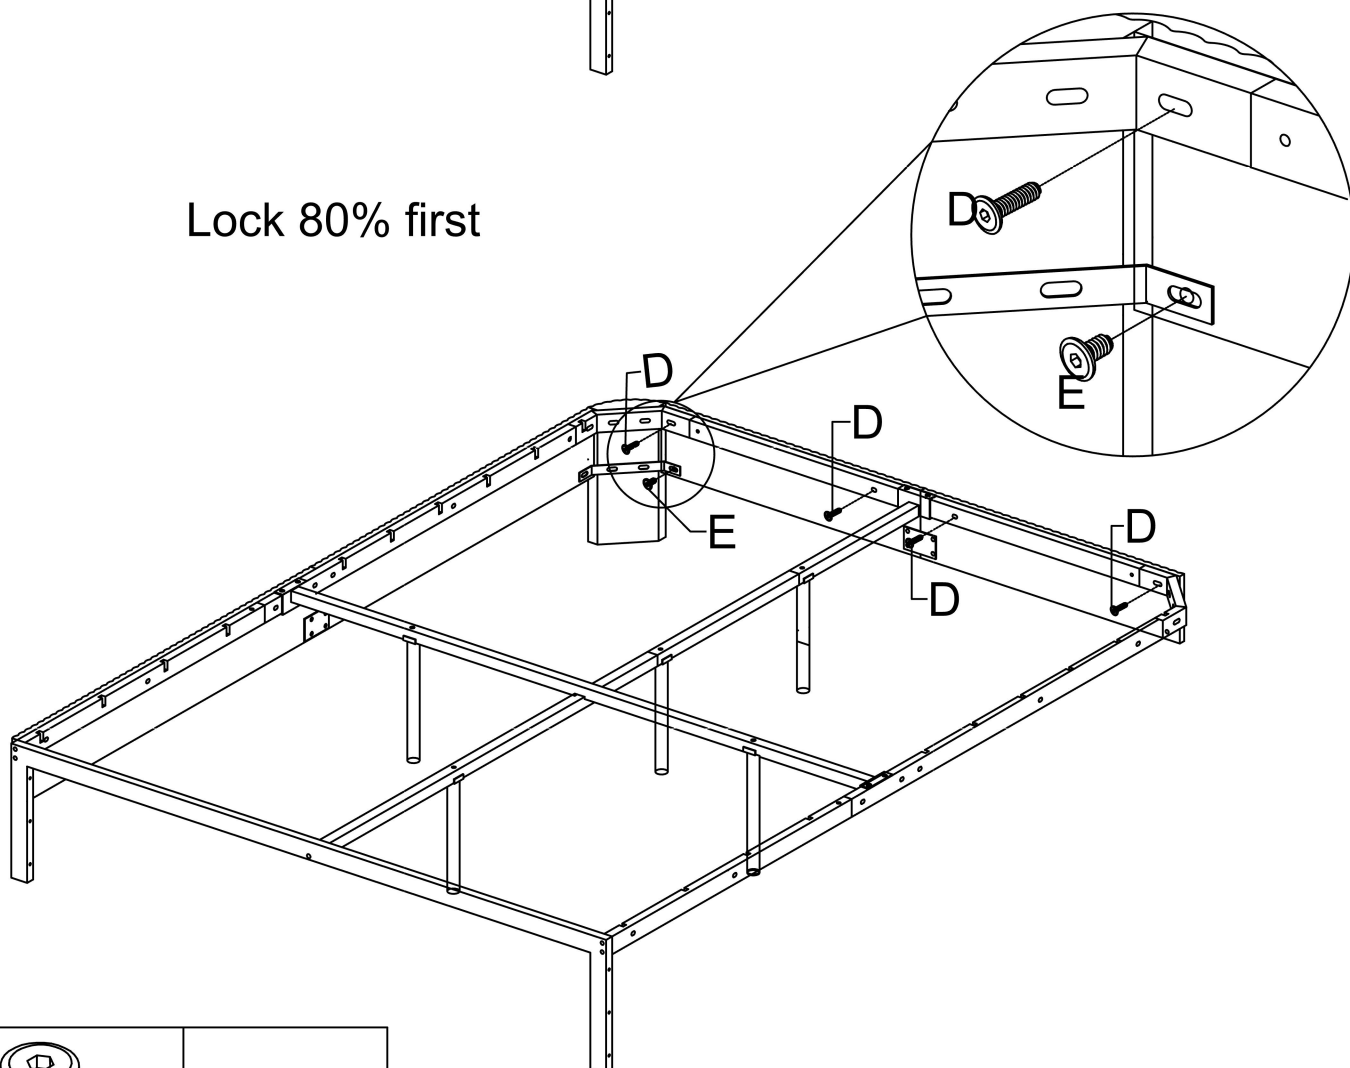


	Ex1pcs
	Dx4pcs


STEP15

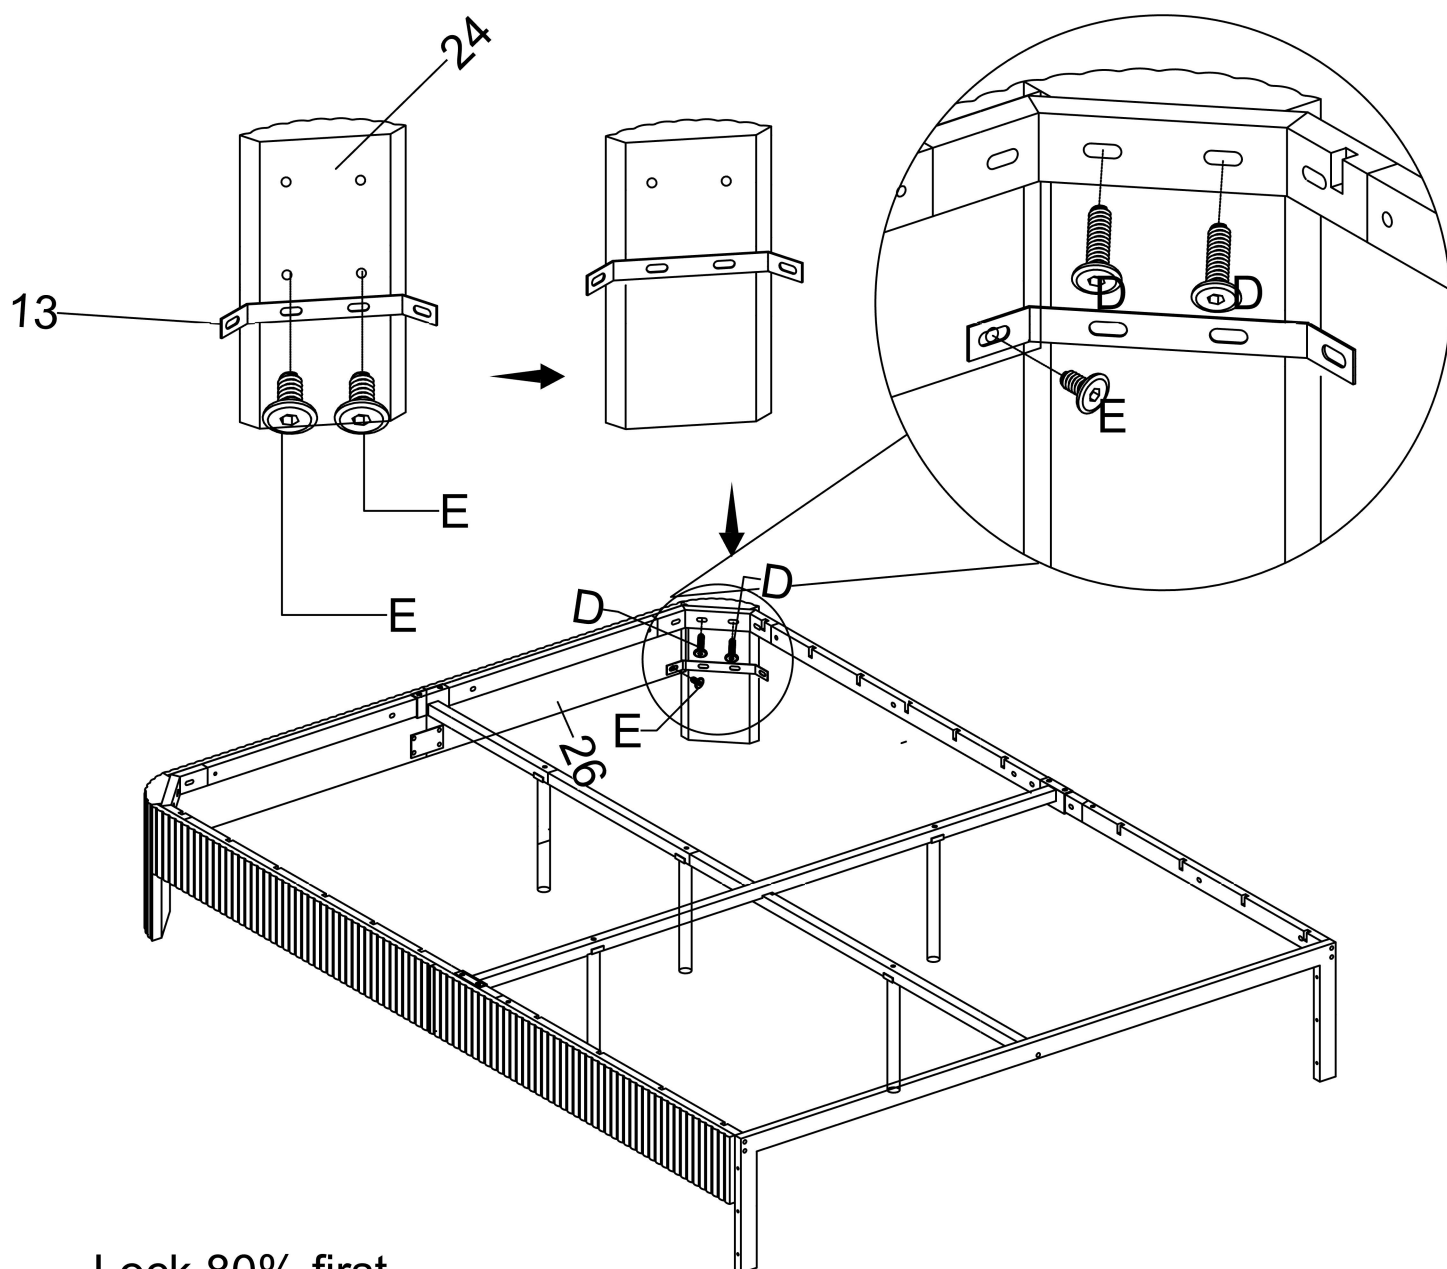

Lock 80% first


	Dx2pcs
	Ex3pcs

STEP16

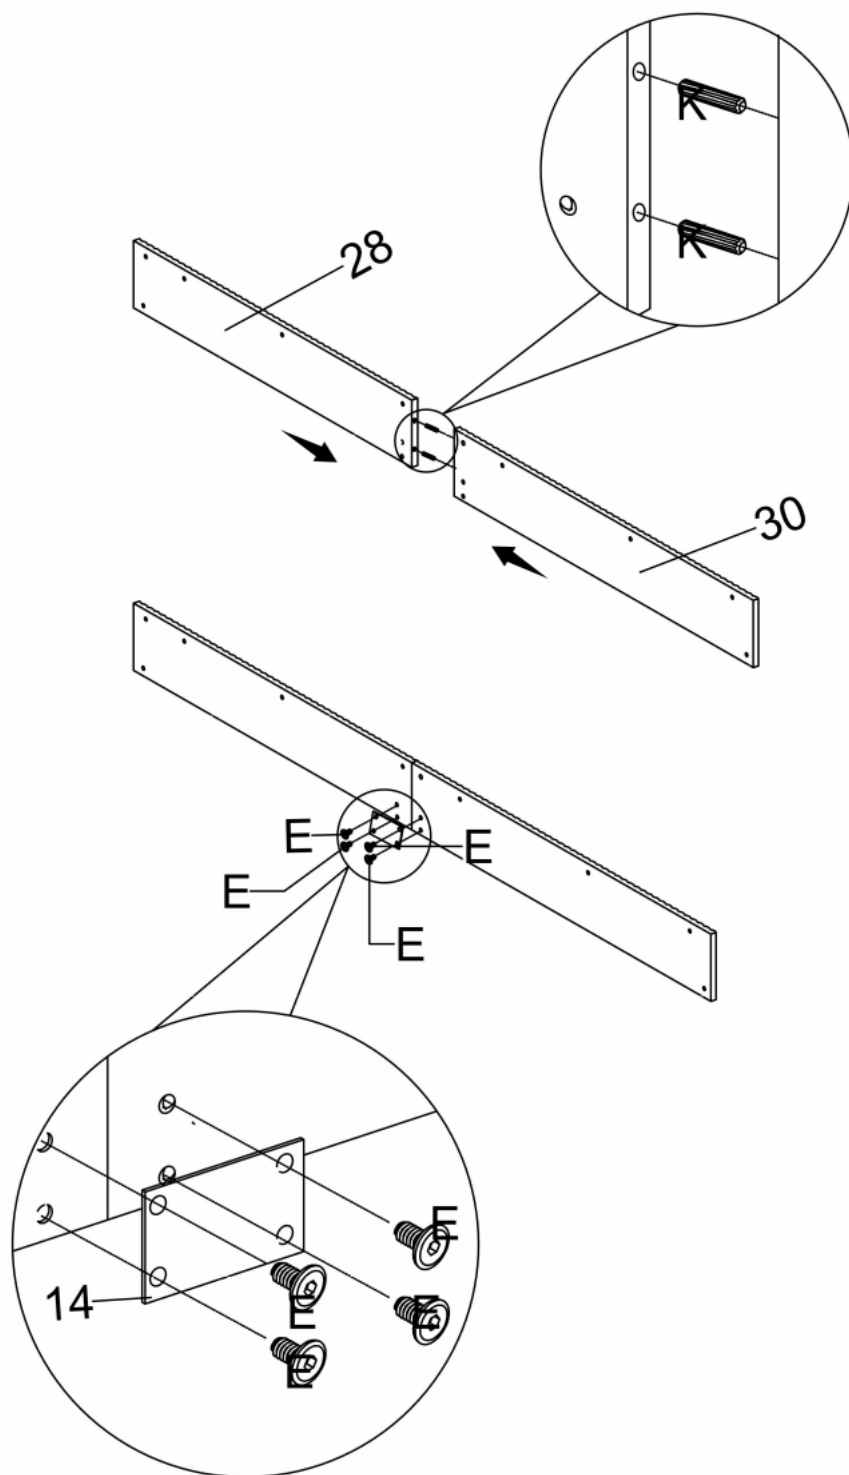



	Kx2pcs
	Ex4pcs

STEP17

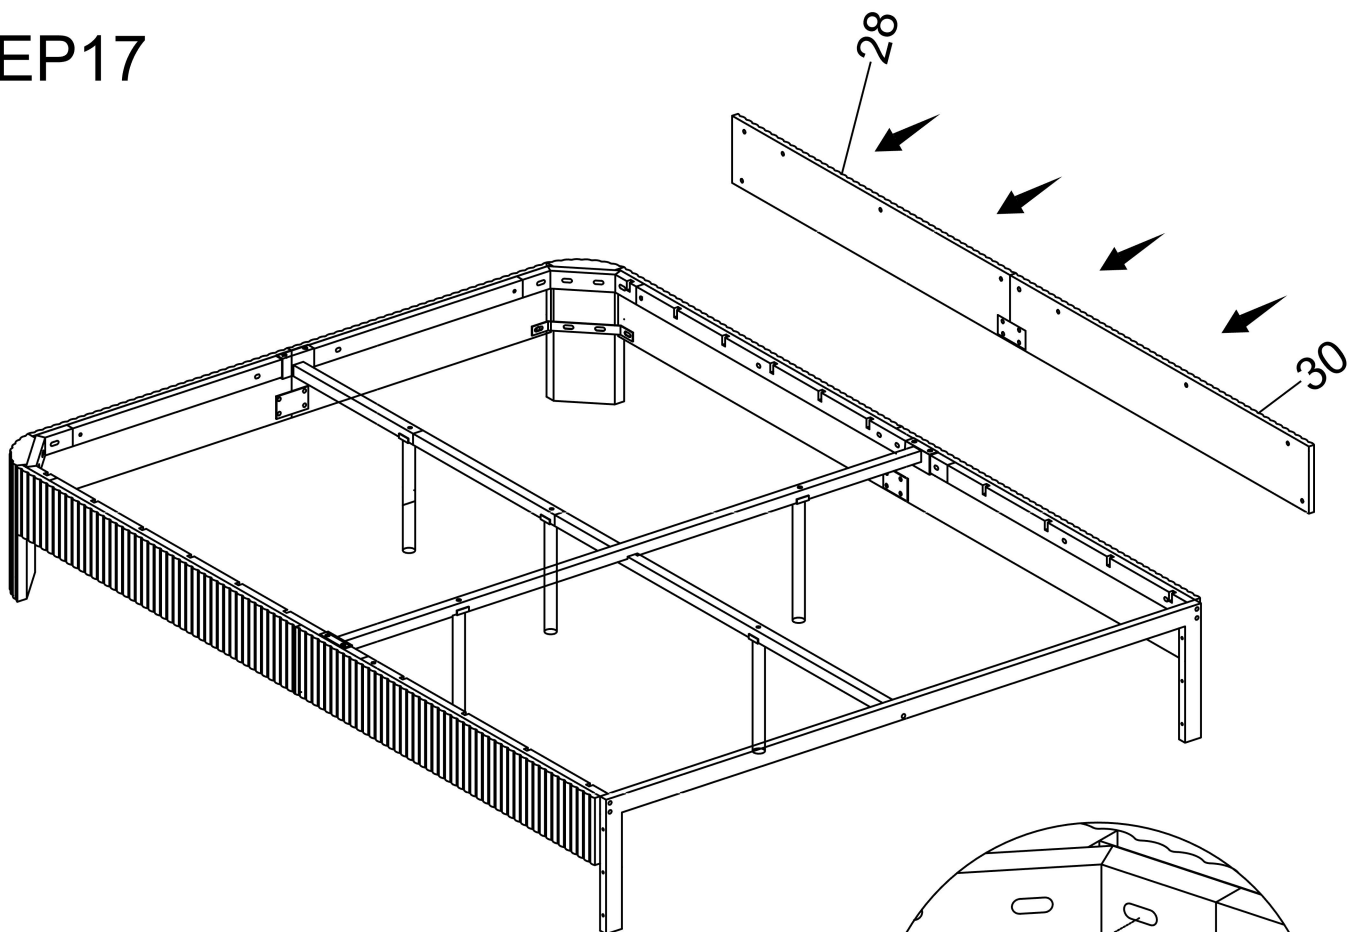


Lock 80% first


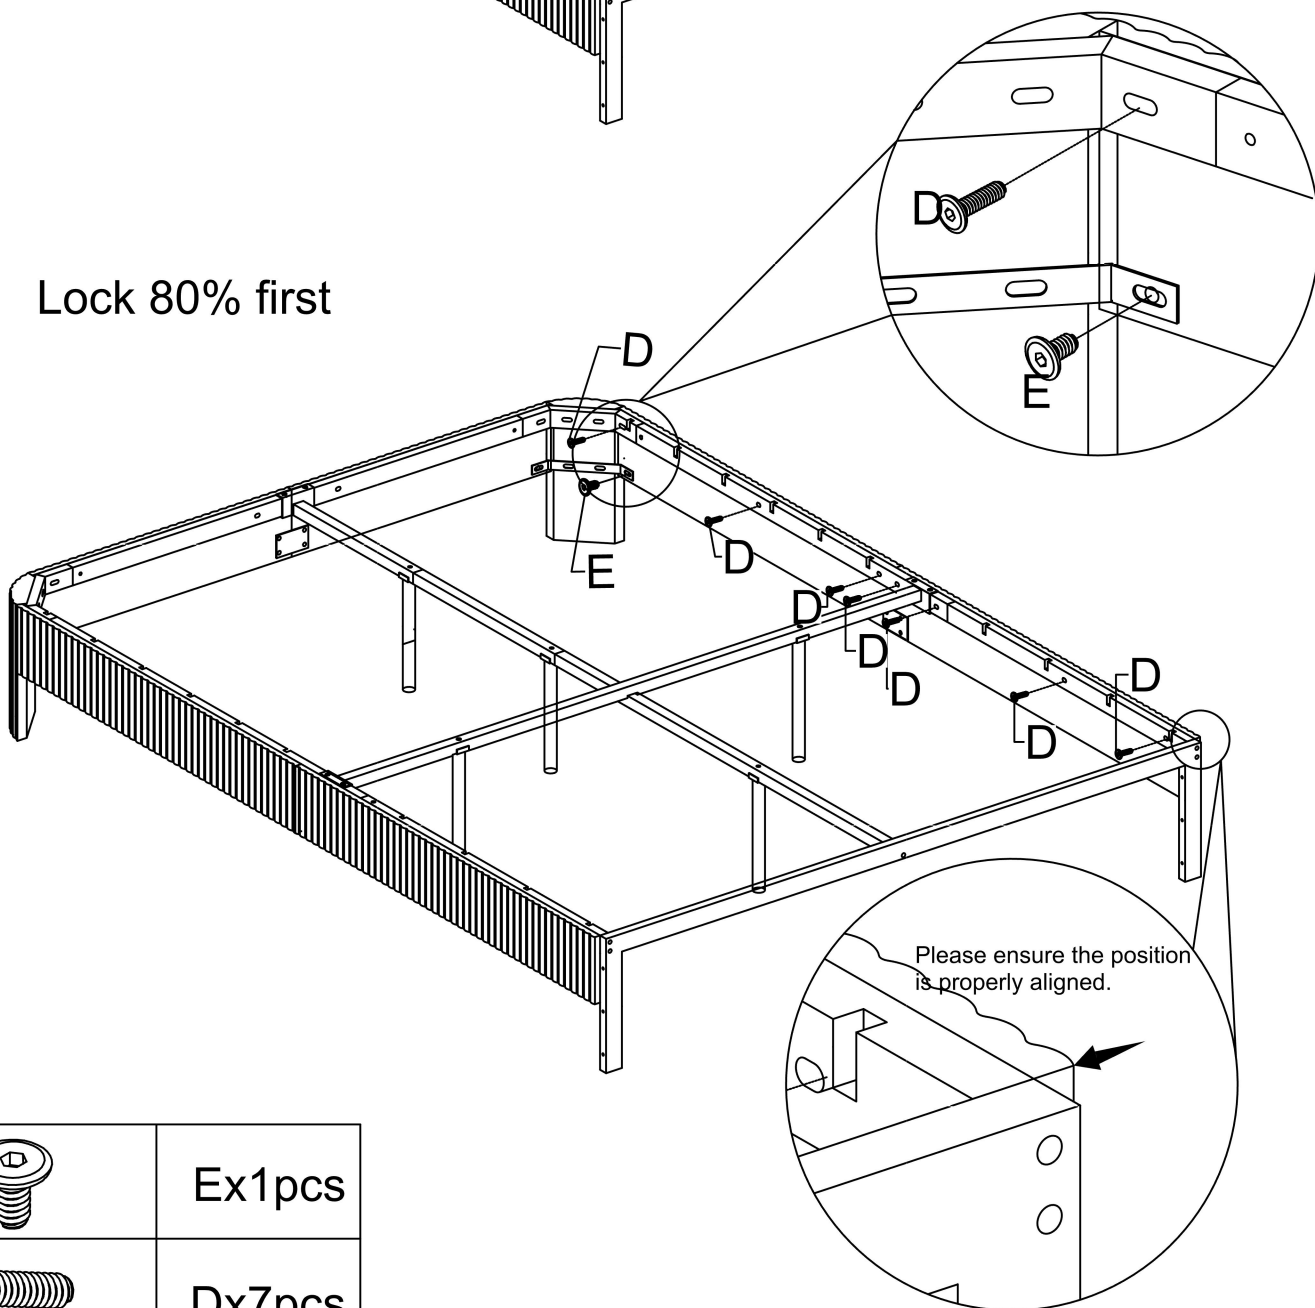


	Ex1pcs
	Dx7pcs

STEP18


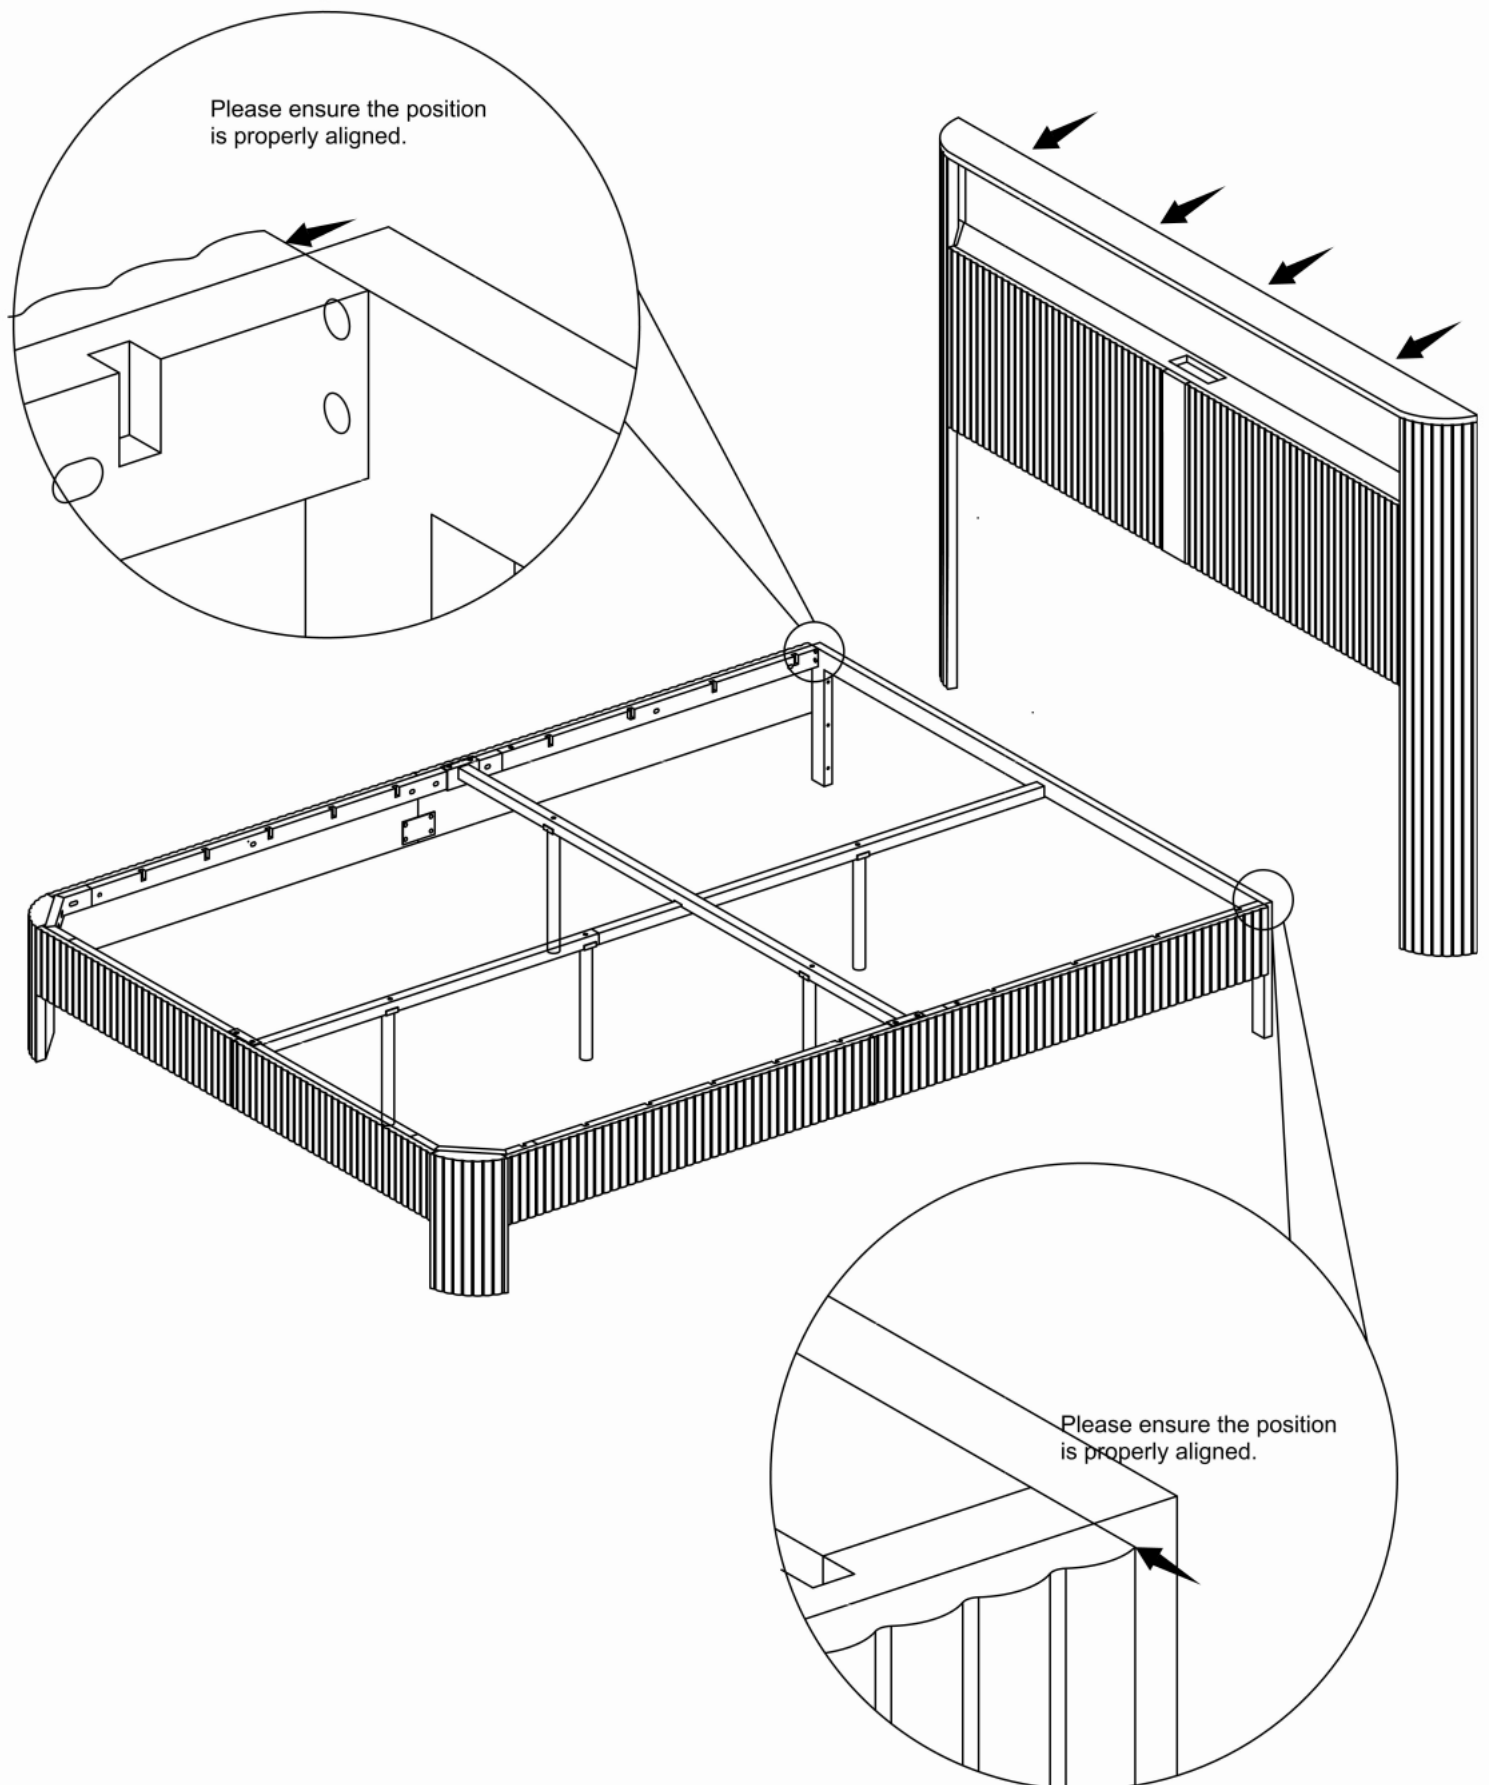


STEP19

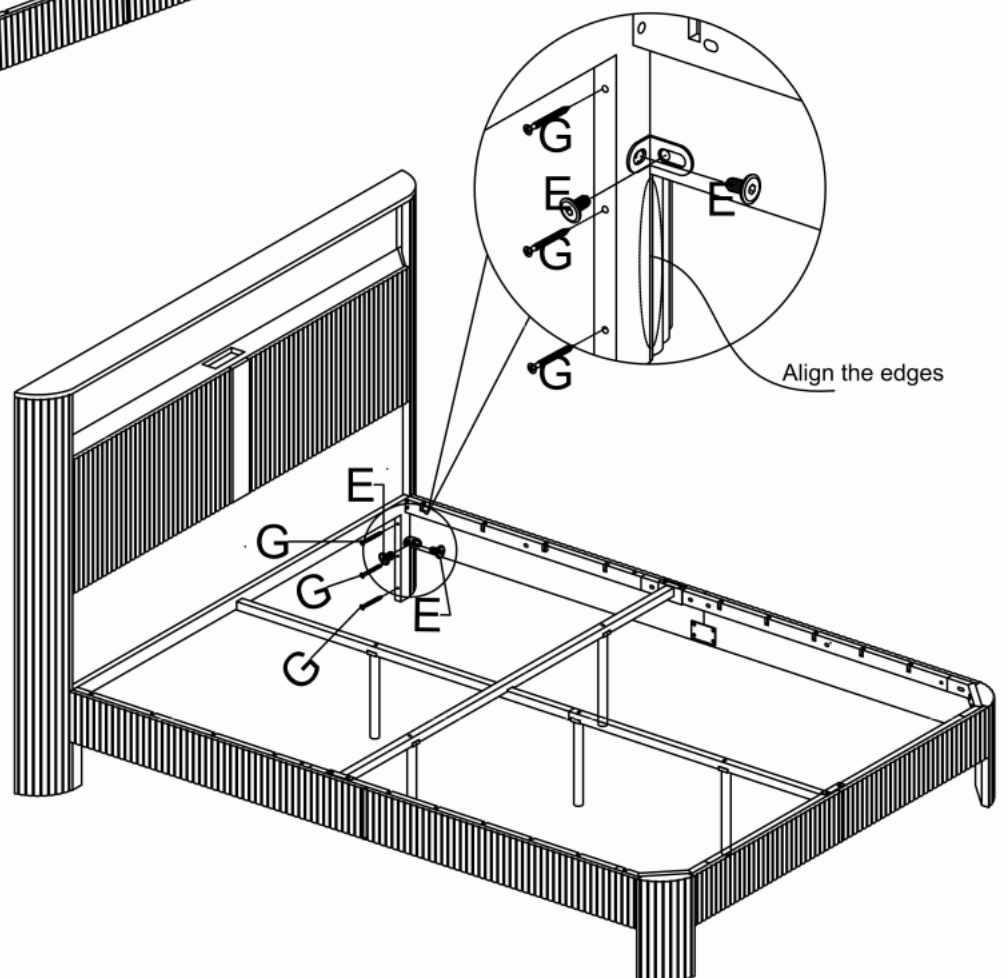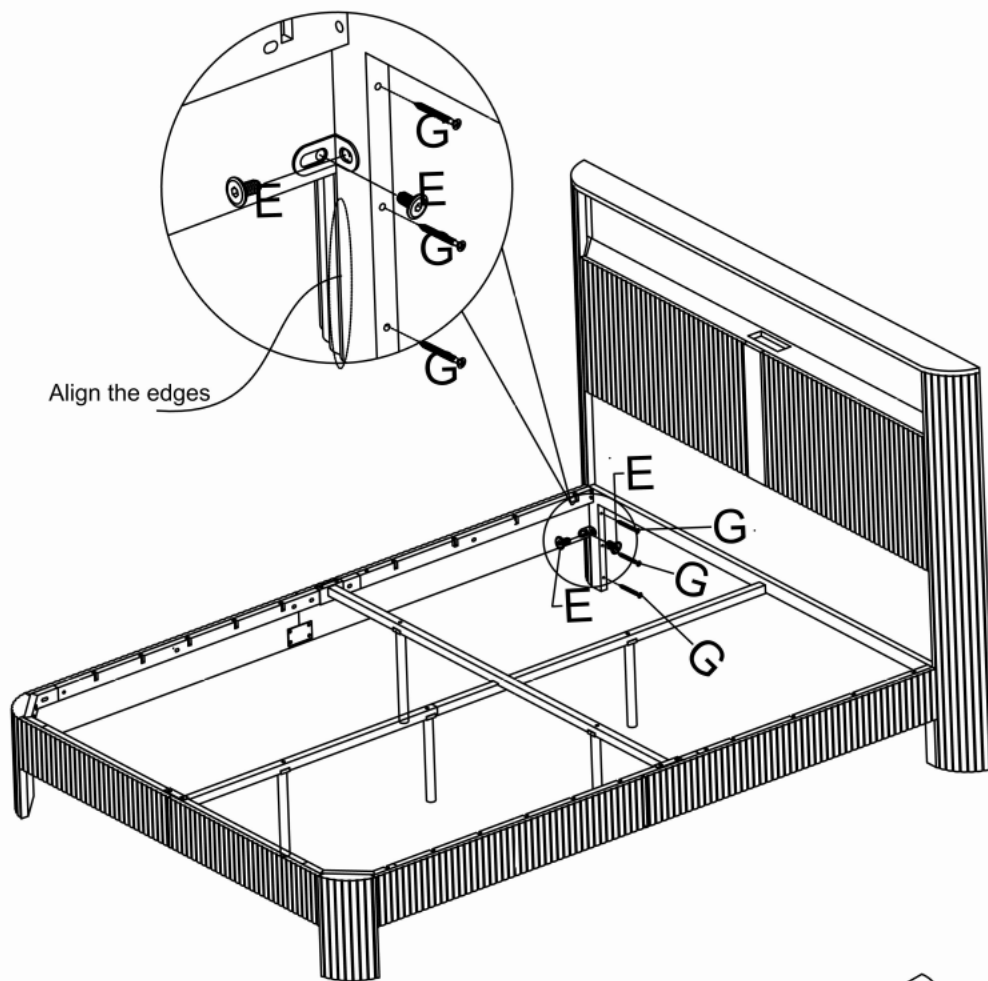


	Ex4pcs
	Gx6pcs
	Vx2pcs

STEP20

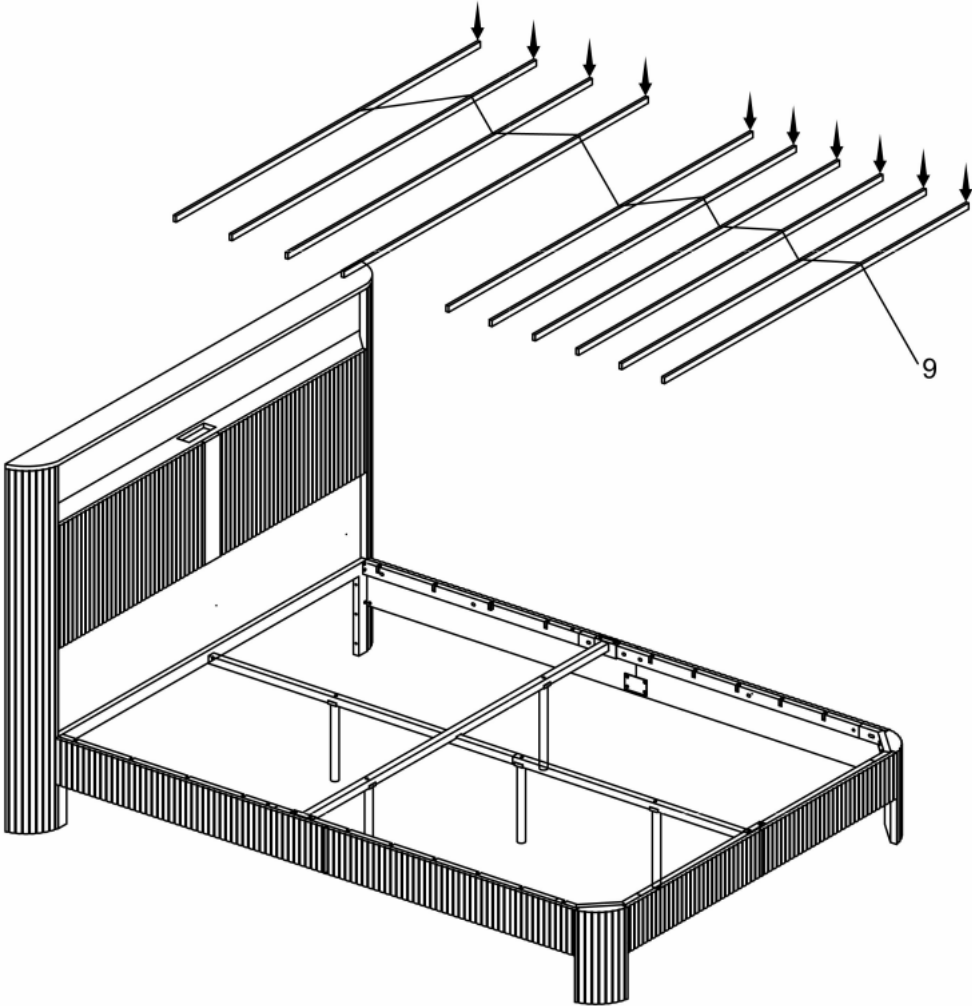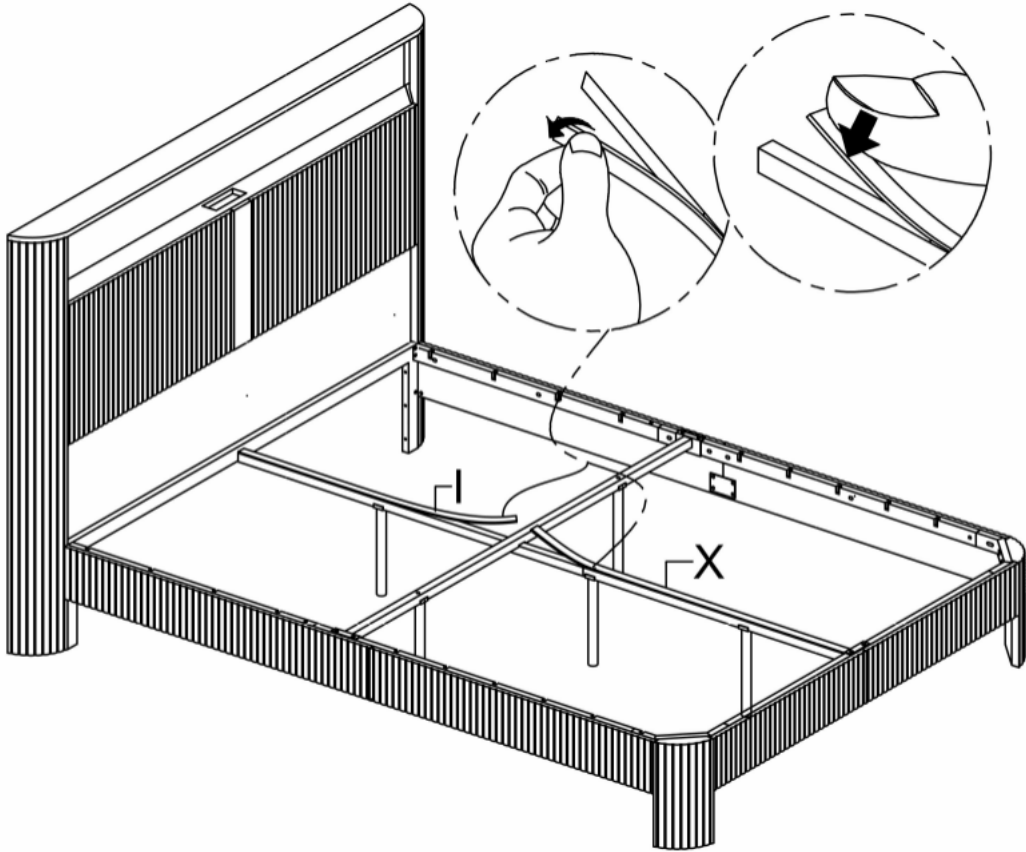


 long	Xx1pcs
 short	lx1pcs

STEP21

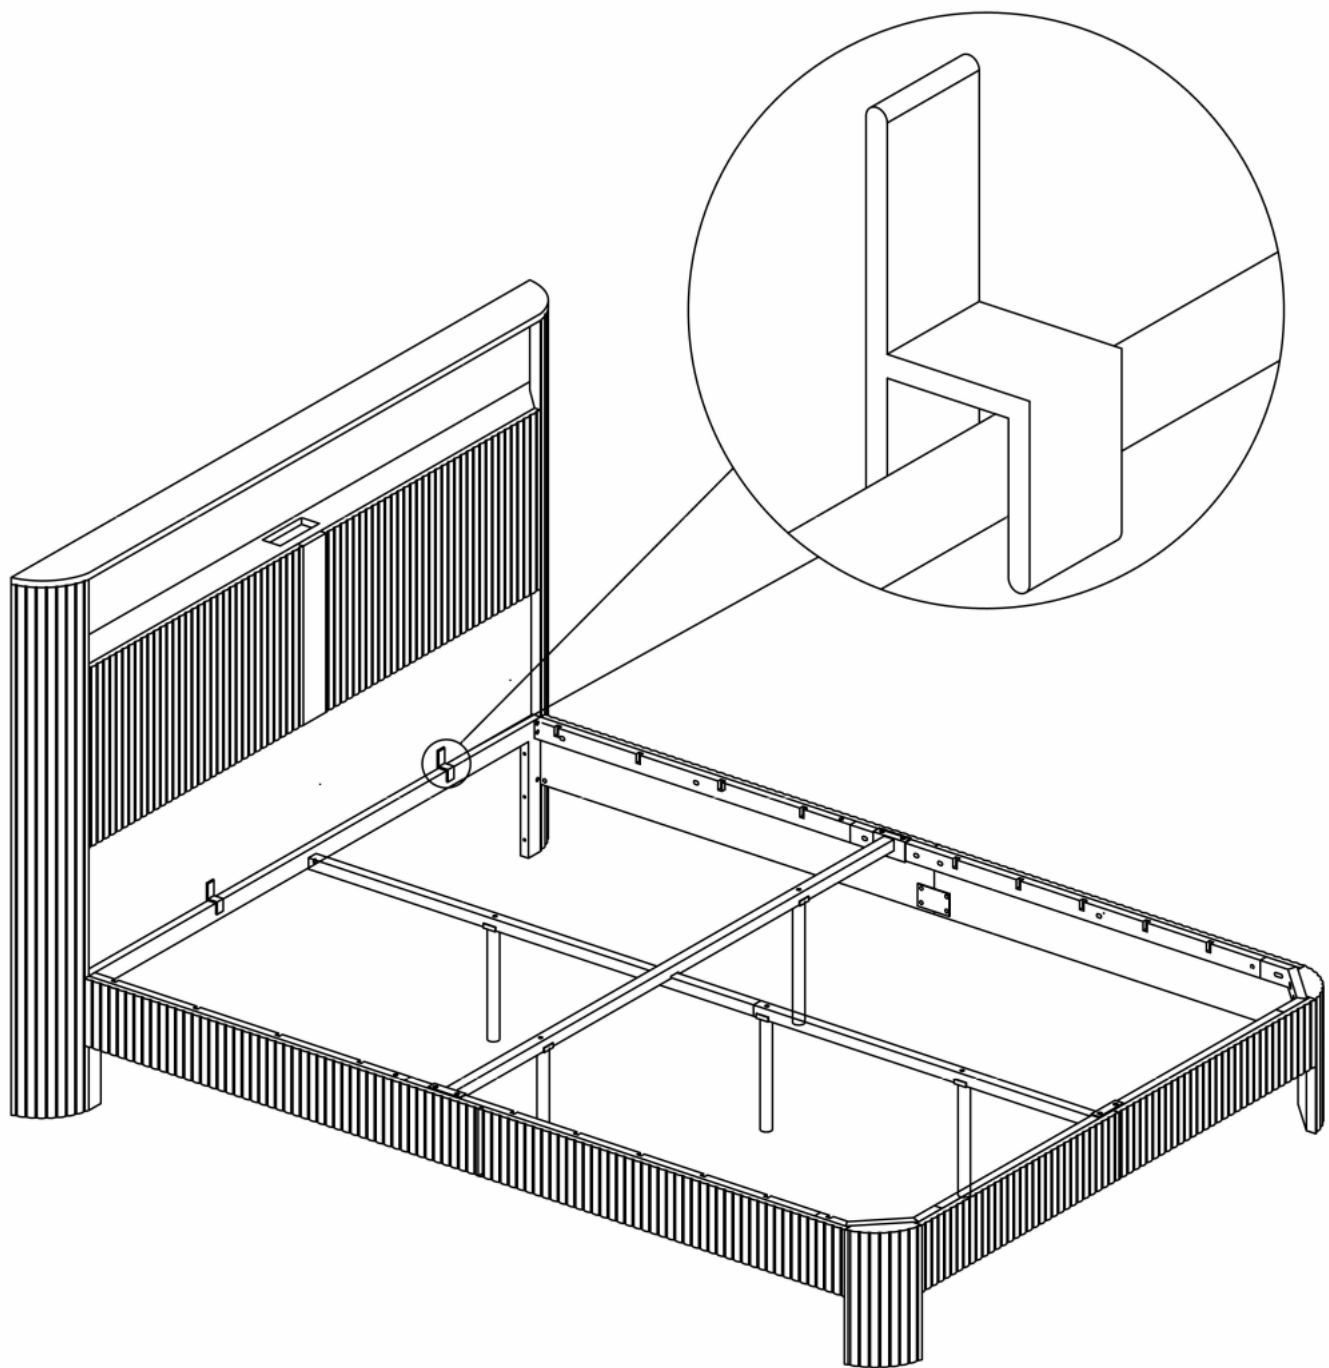

Lx2pcs

STEP22

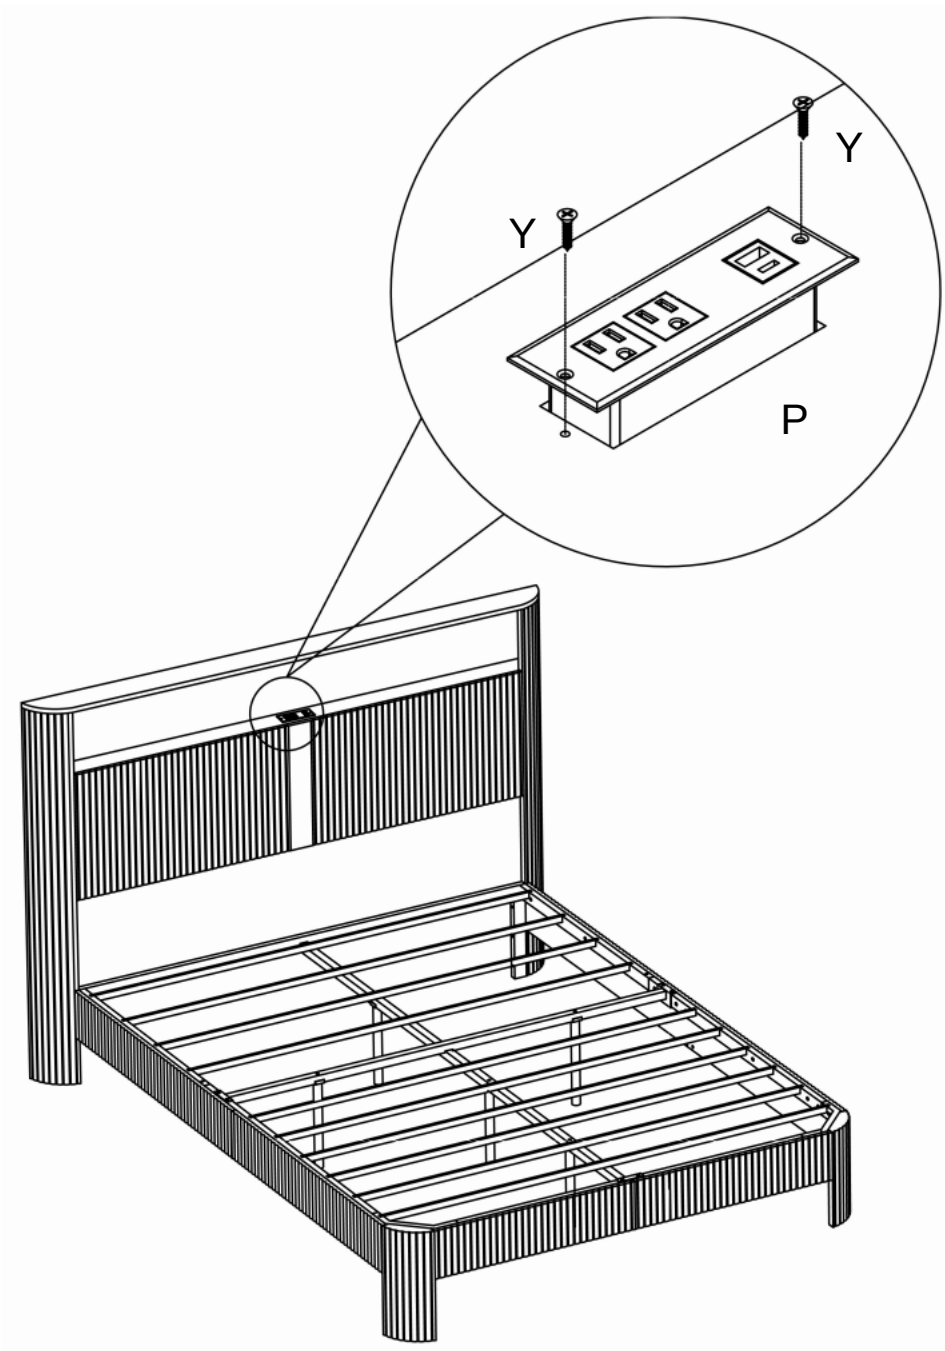

Attention
After completing all installation steps.
Ensure each screw is fully tightened.
If any screw is loose. Tighten it completely

	Yx2pcs
	Px1pcs