
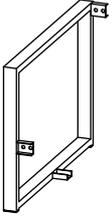
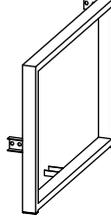
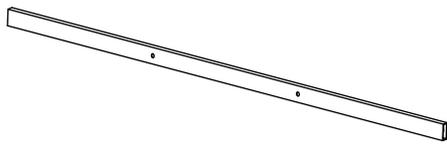
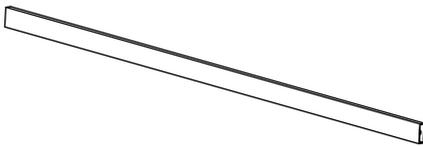
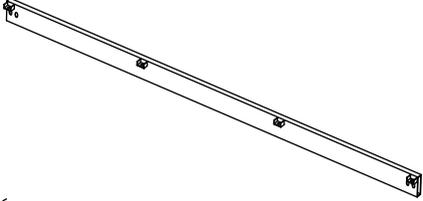
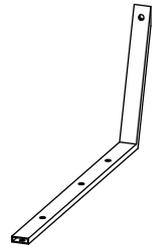
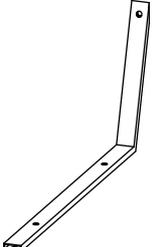
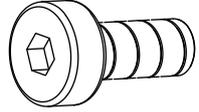
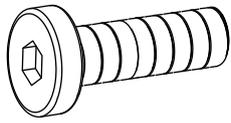
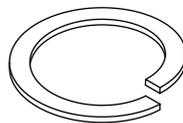
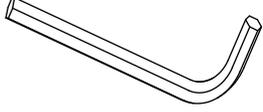


ASSEMBLY INSTRUCTION

CHROME FINISH METAL SOFA SEAT & BACK FRAME

A Metal Arm - Left (In other carton)  1pc	B Metal Arm - Right (In other carton)  1pc	C Bottom Stretcher  1pc
D Back Stretcher  1pc	E Front Stretcher  1pc	F Seat Stretcher (4 holes)  2pcs
G Seat Stretcher (3 holes)  2pcs	H Support  2pcs	I Bolt 1/4"X1/2"  18pcs
J Bolt 1/4"X1-3/4"  4pcs	K Lock Washer 1/4"  22pcs	L Allen Wrench 1/4"  1pc

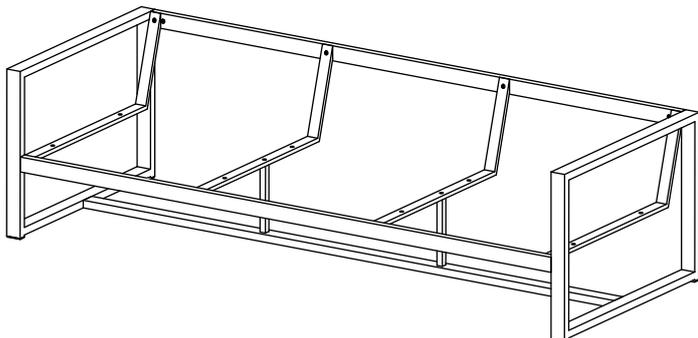


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**


1

Attach bottom stretcher (C) and back stretcher (D) and front stretcher (E) to metal arm – left (A) and metal arm – right (B) by using lock washer (K), bolt (I) and allen wrench (L) as shown.

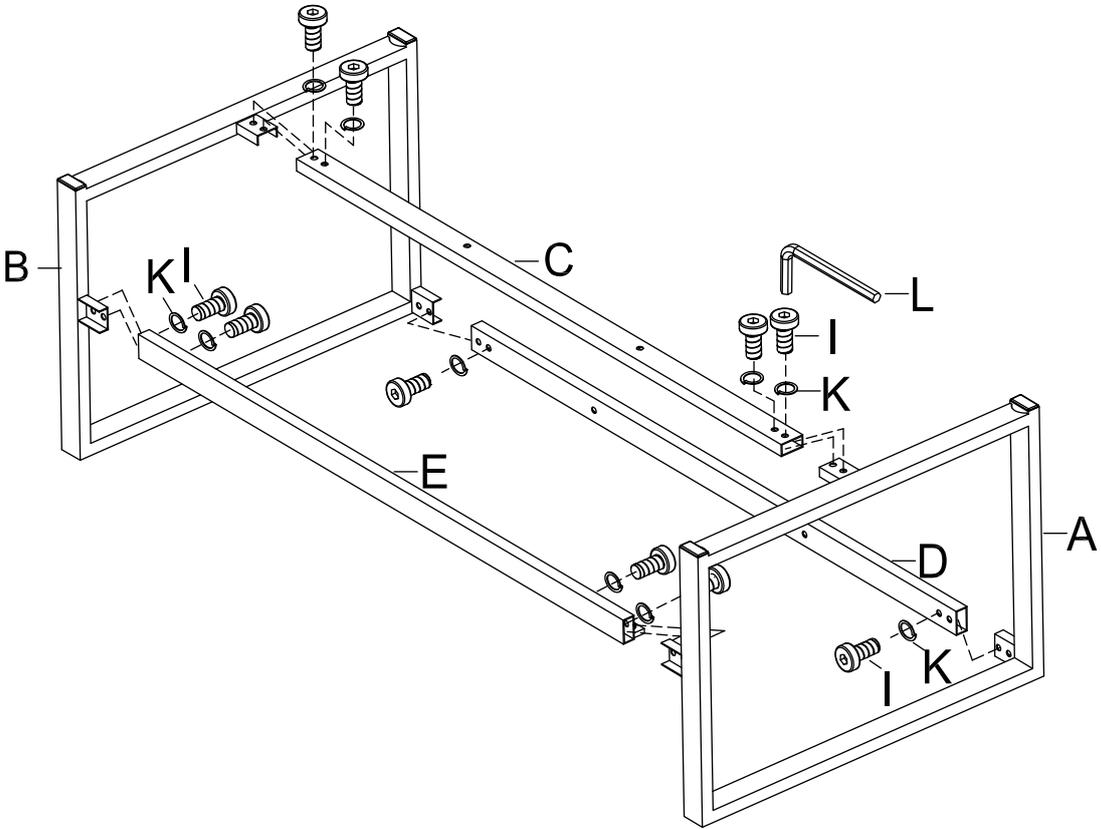


2

Attach support (H) to bottom stretcher (C) by using lock washer (K), bolt (J), and allen wrench (L). Then, attach seat stretcher (4 holes) (F) and seat stretcher (3 holes) (G) to front stretcher (E) by using lock washer (K), bolt (I) and allen wrench (L) as shown.

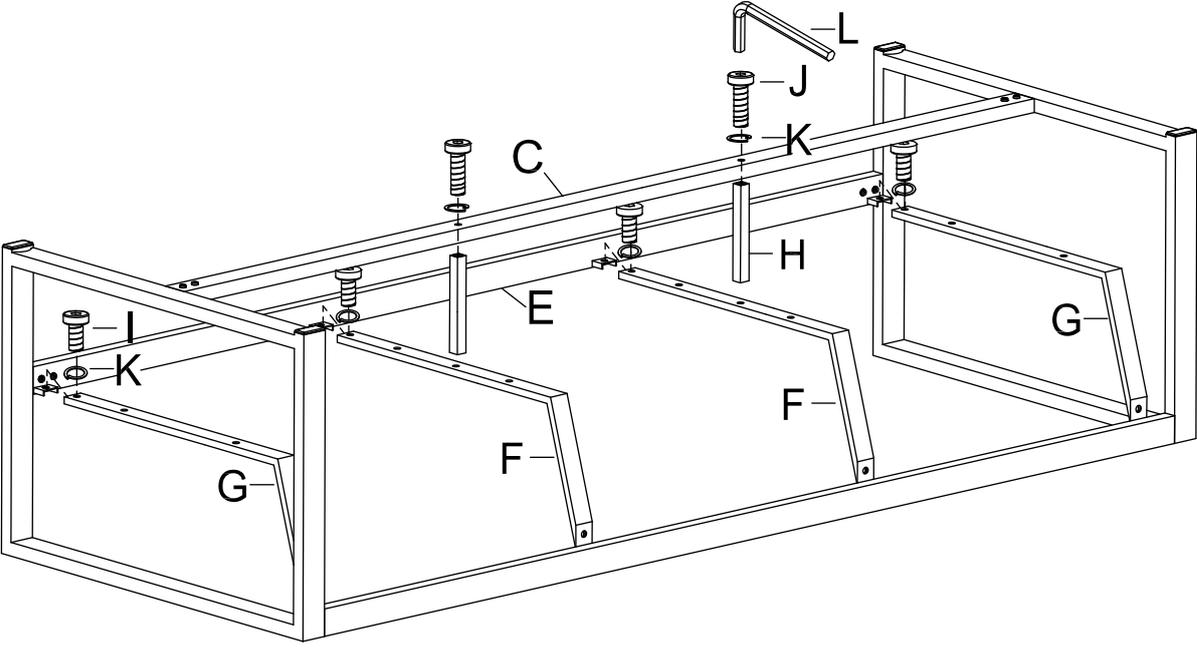

3

Turn the assembled metal base upside down. Attach support (H) to seat stretcher (4holes) (F) by using lock washer (K), bolt (J) and allen wrench (L). Then, attach seat stretcher (4 holes) (F) and seat stretcher (3 holes) (G) to back stretcher (D) by using lock washer (K), bolt (I) and allen wrench (L) as shown.

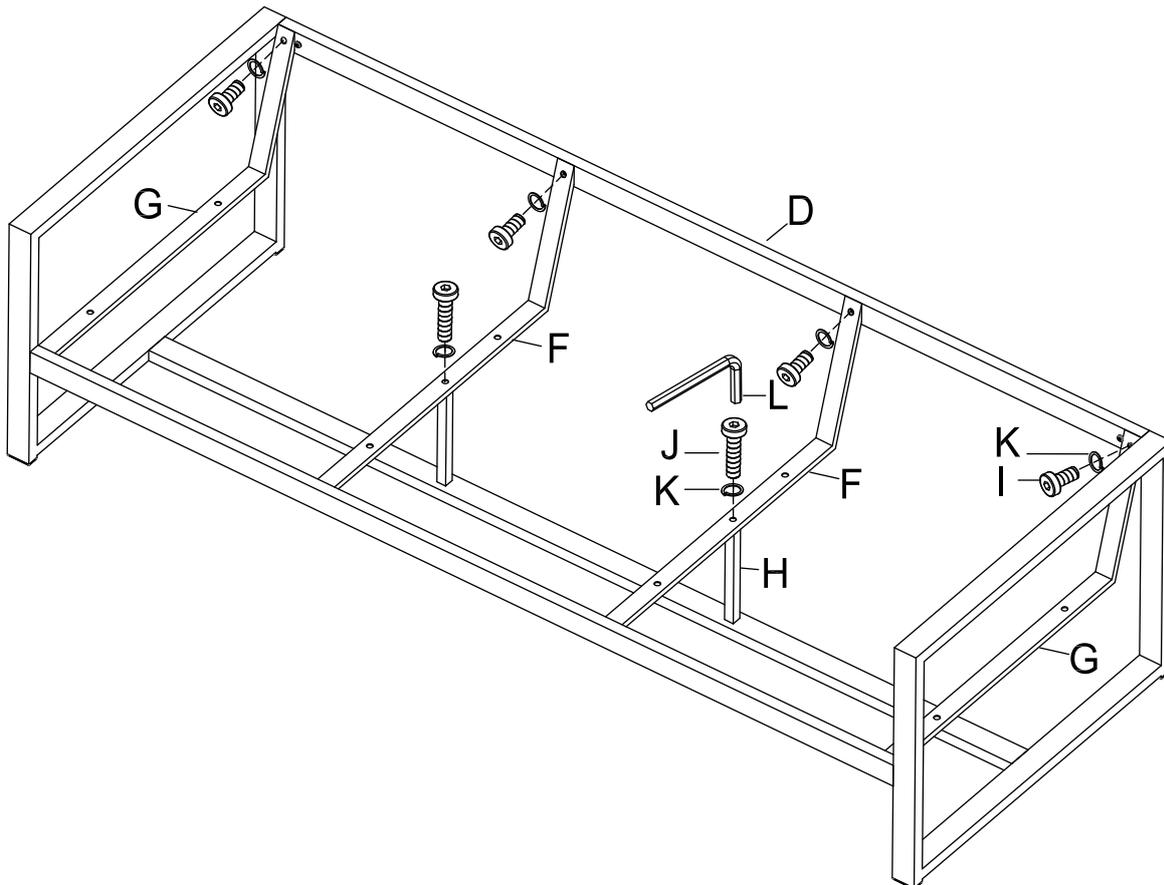

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.