

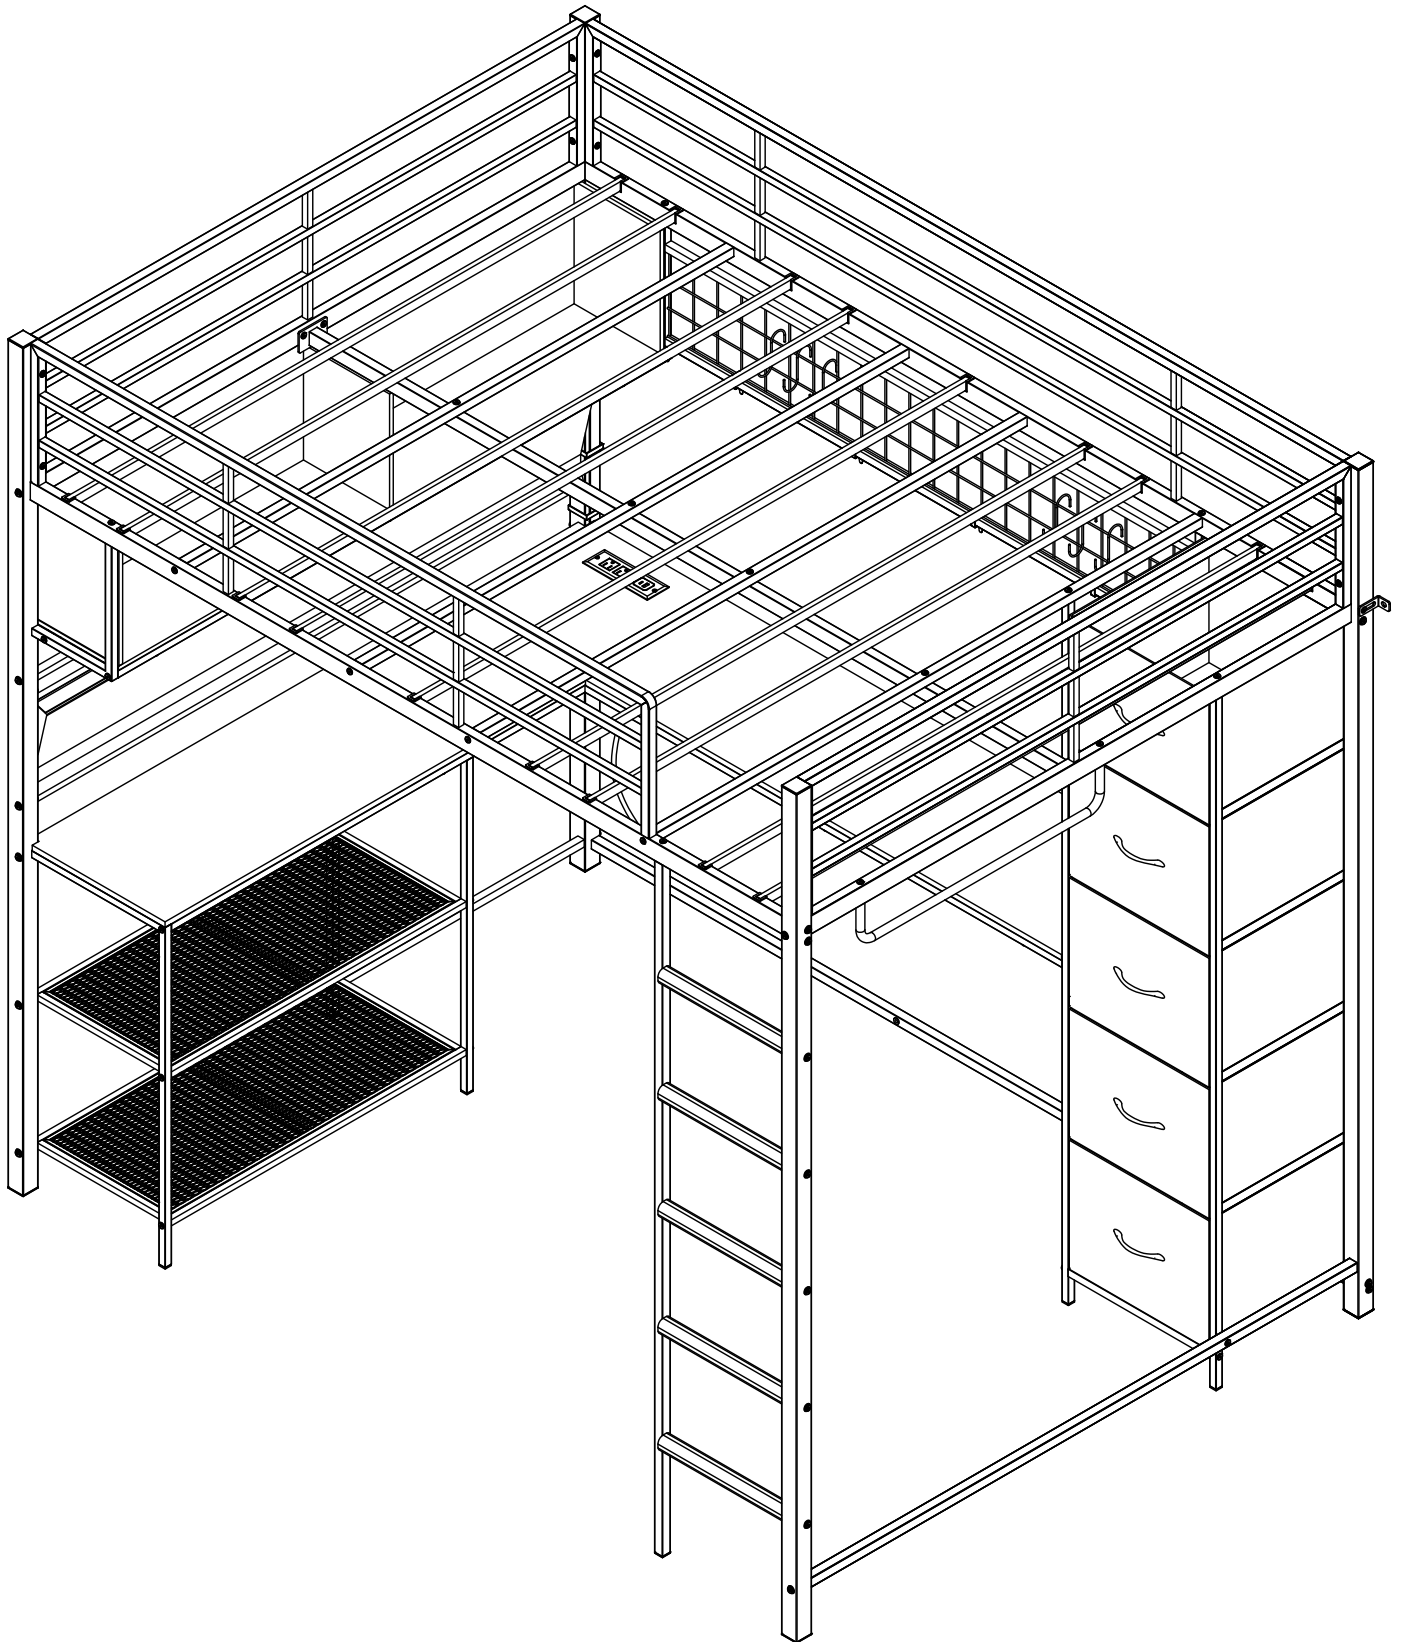


Loft Bed

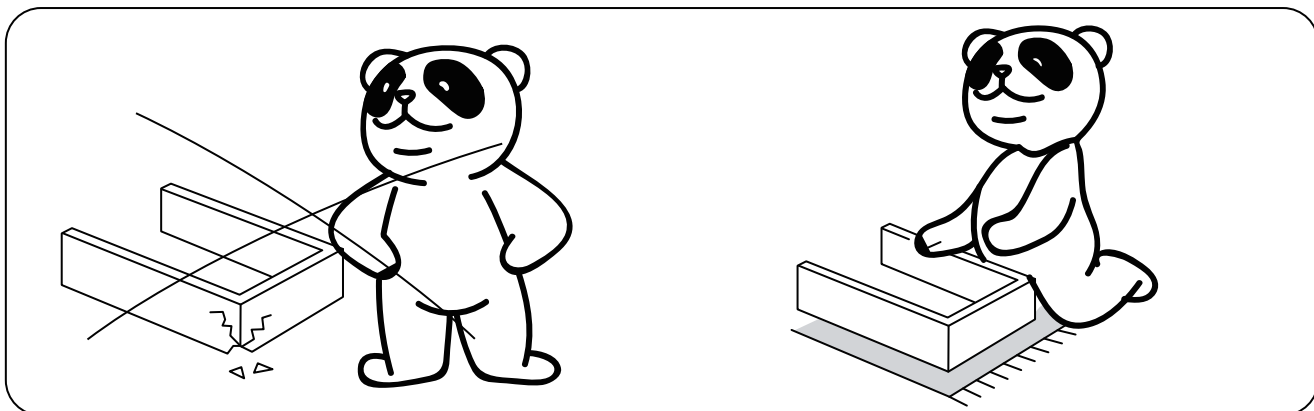


DJ505344


Version 1.0

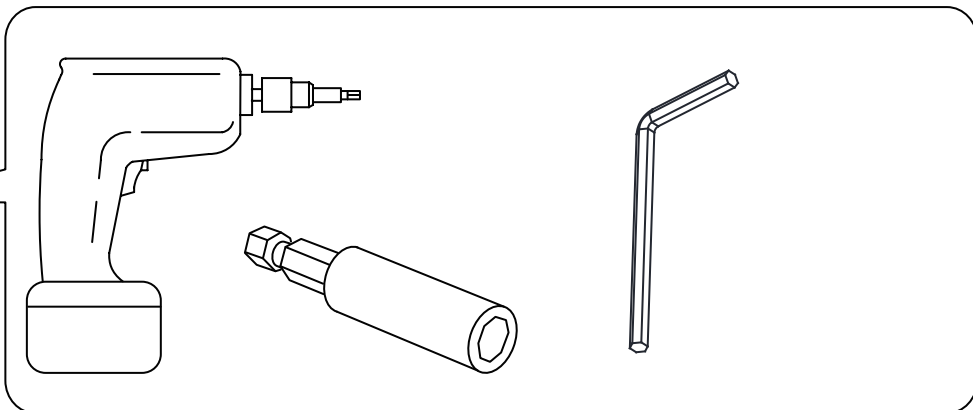

Violent installation is prohibited

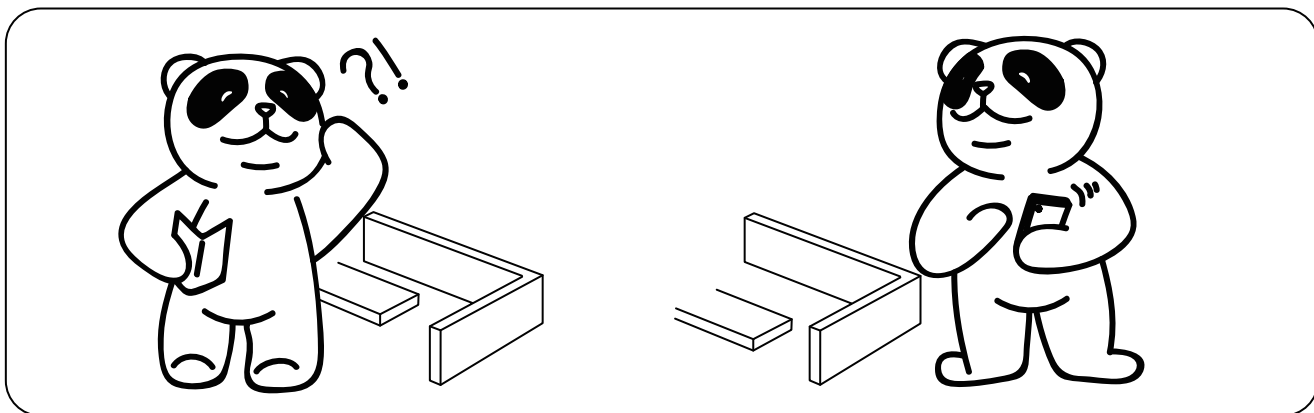

Please call if you need help

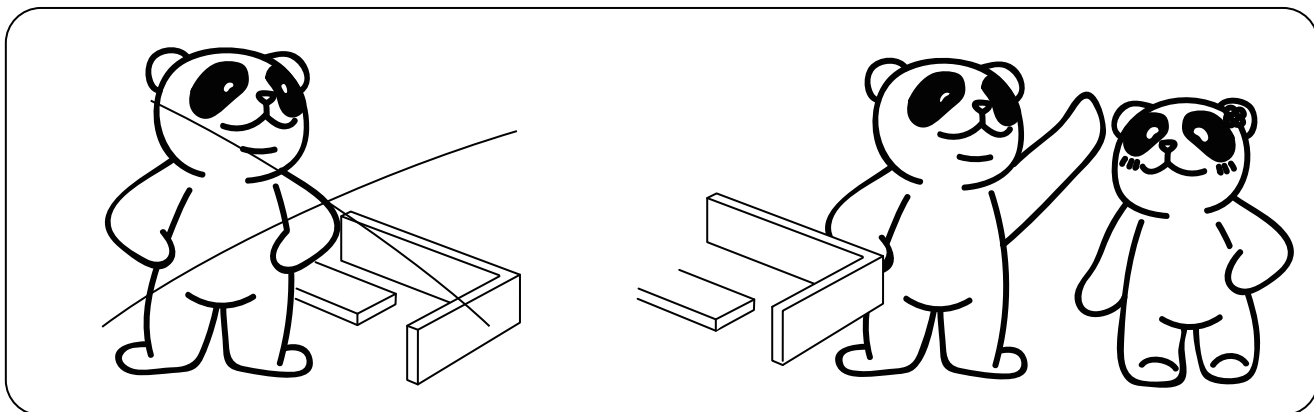

Multi-person cooperation is recommended

Install parts

PARTS LIST

BOX : A

PACKING DETAILS: TOTAL 2 BOXES



1
x1




2
x1




3
x1




4
x1




5
x1



6
x1



7
x1



8
x1



9
x1




11
x2



12
x2



13
x1



14
x1



15
x9



16
x3



17
x1



18
x1



19
x1




20
x1

Install parts

PARTS LIST

BOX : A

PACKING DETAILS:TOTAL 2 BOXES



22
x1



23
x1




24
x1



26
x1



27
x1



33
x1




37
x1



38
x1




40
x1



42
x1

partial enlarged view

partial enlarged view

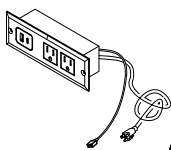

47
x1




49
x5

Install parts

PARTS LIST

BOX : B

PACKING DETAILS: TOTAL 2 BOXES

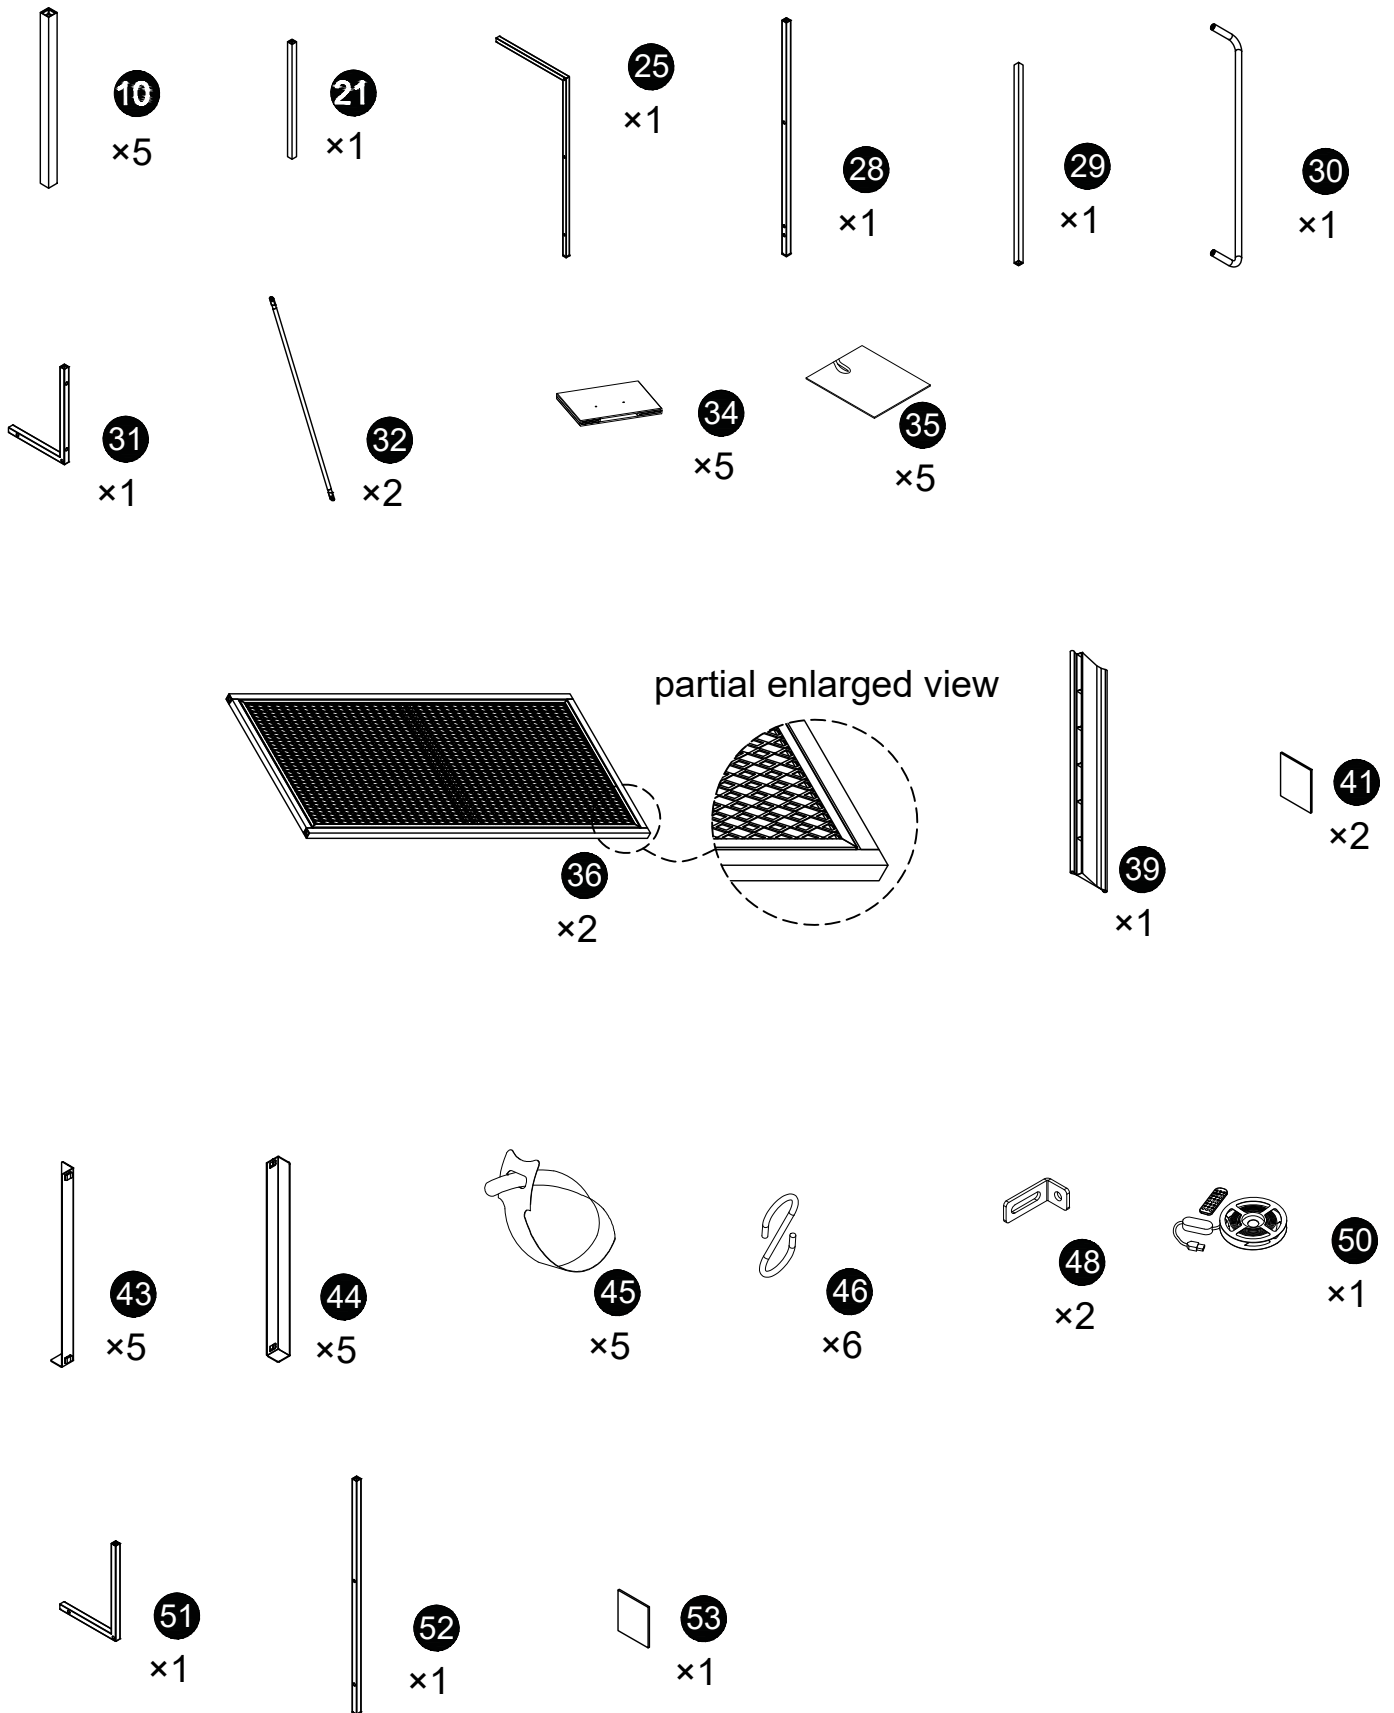

HARDWARE LIST

BOX : B

PACKING DETAILS:TOTAL 2 BOXES



A

M4*12
x2+1



B

M5*35
x6+1



C

M5*25
x8+1



D

M6*20
x11+1



E

M6*24
x12+1




F

M6*35
x42+4



G

M6*40
x17+1



H

M6*60
x34+3



I

M6
x25+2



J

M6
x2



K

4#
x1



L

4#
x1



M

x1



N

Ø14
x1



O

M4*12
x10+1



P

x5



Q

3#
x1



R

M6*22
x6+1




S

M6*15
x3+1

Note:

1, Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.

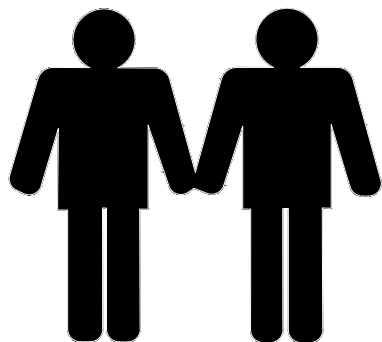

It needs at least two people to install




Before starting the assembly, you must read the whole manual and follow the instructions.


This set comes in 2 boxes. If you do not receive a full set of 2 boxes, please contact our customerservice.

box A : 1-9, 11-20, 22-24, 26, 27, 33, 37, 38, 40, 42, 47, 49, instructions;


box B : 10, 21, 25, 28-32, 34, 35, 36, 39, 41, 43-46, 48, 50-53 screw pack, instructions.

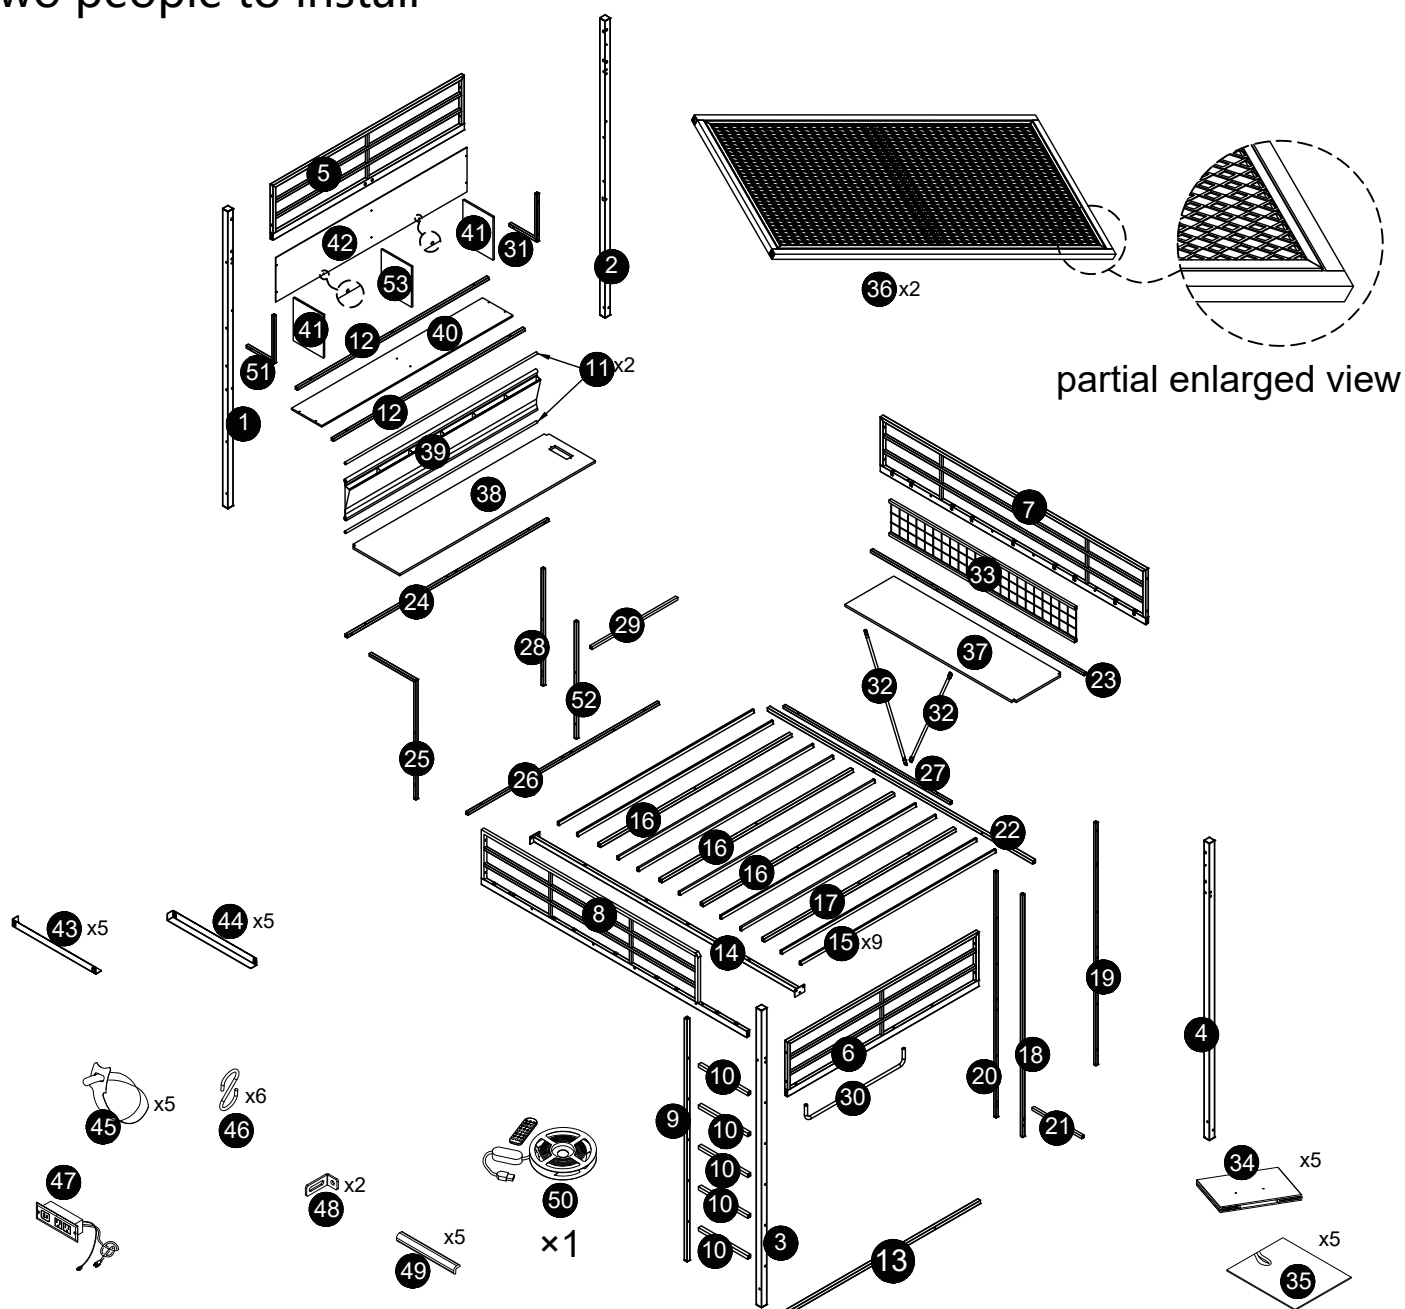

1

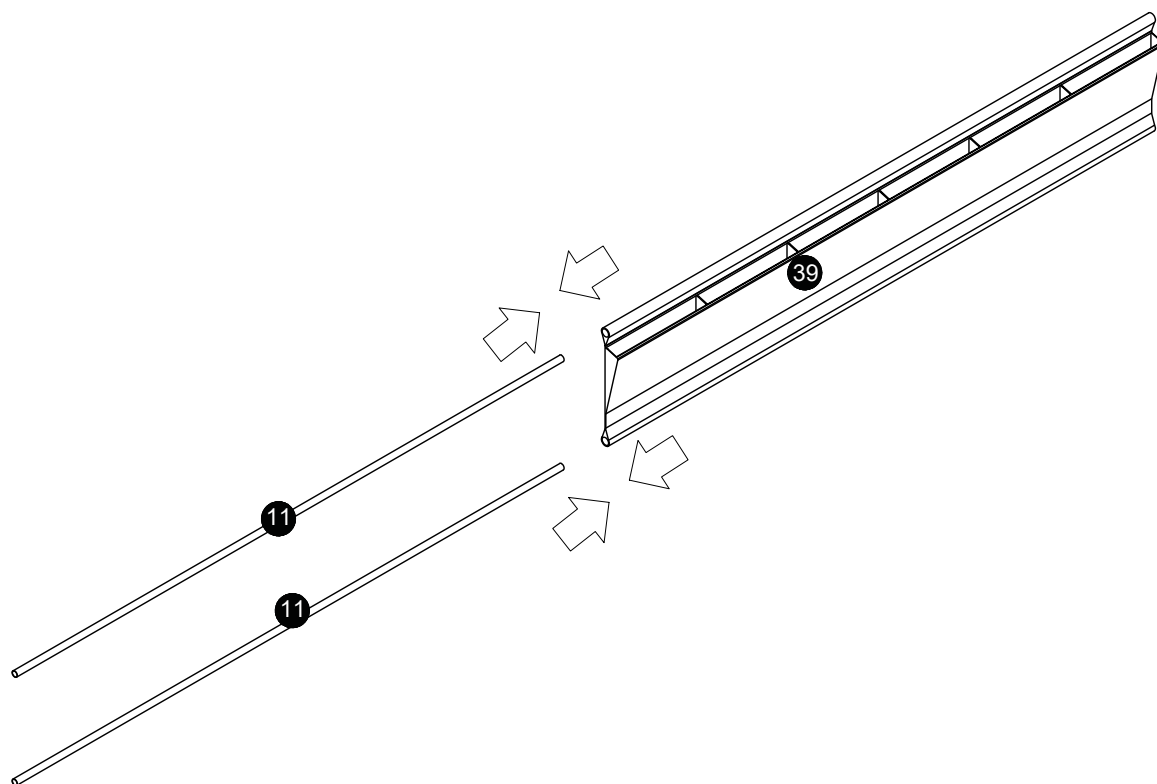

2

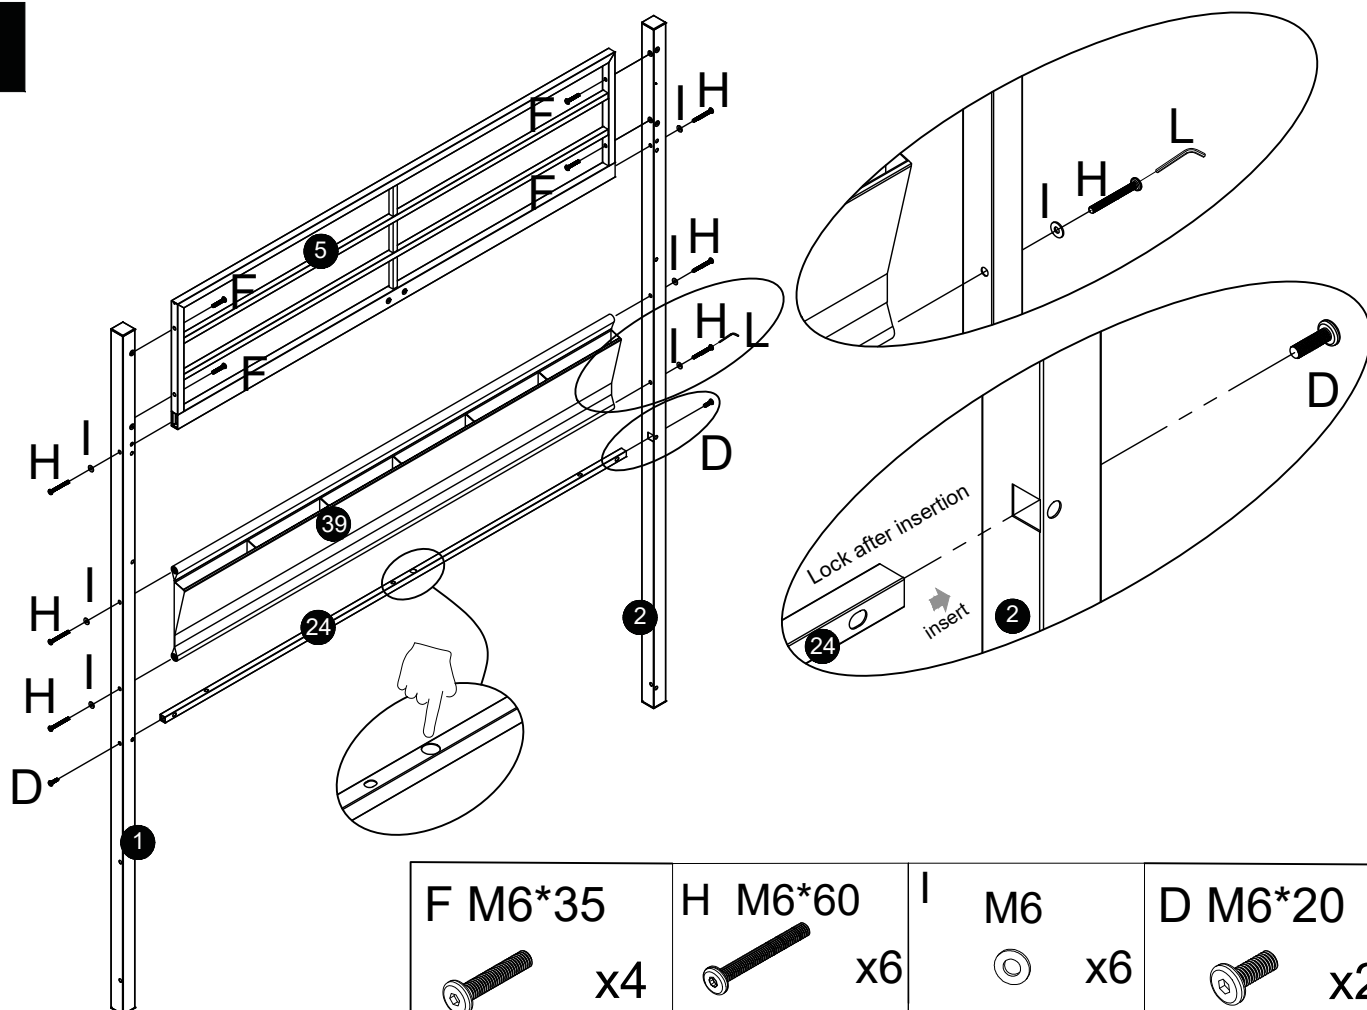

F M6*35



x4

H M6*60



x6

I

M6




x6

D M6*20



x2

3

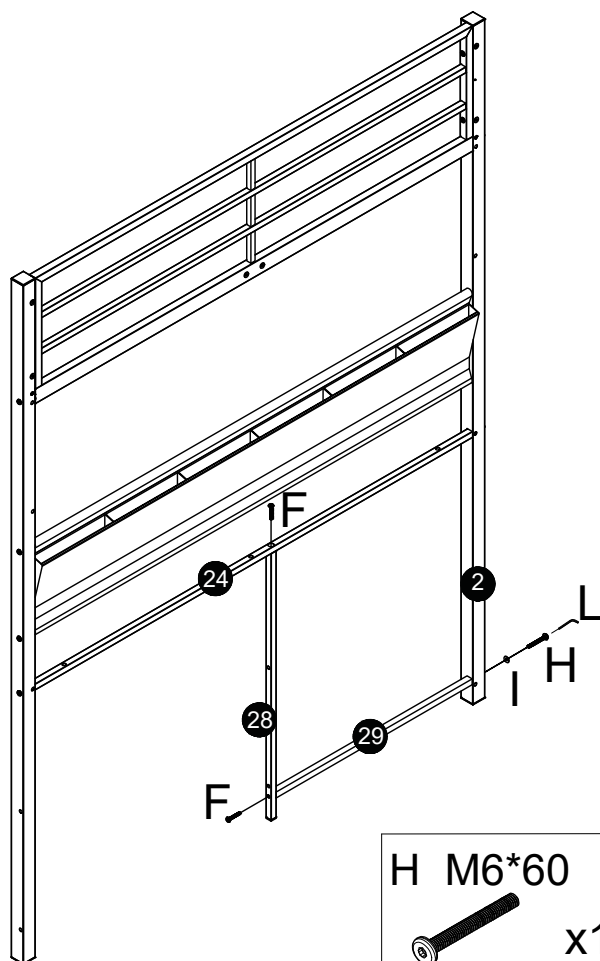


H M6*60
x1

I M6
x1


F M6*35
x2

4

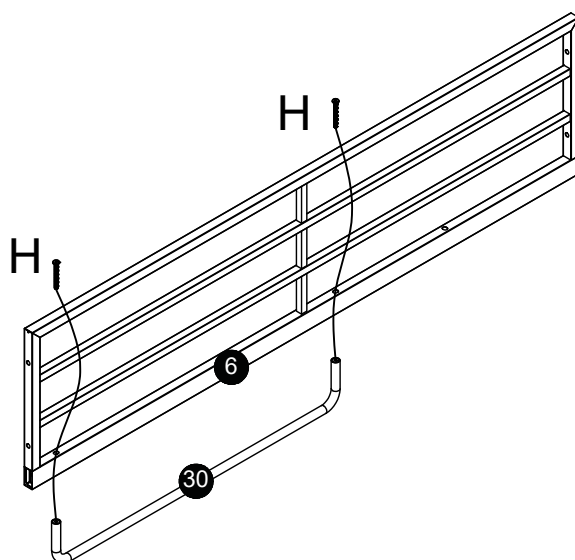



H M6*60
x2

5

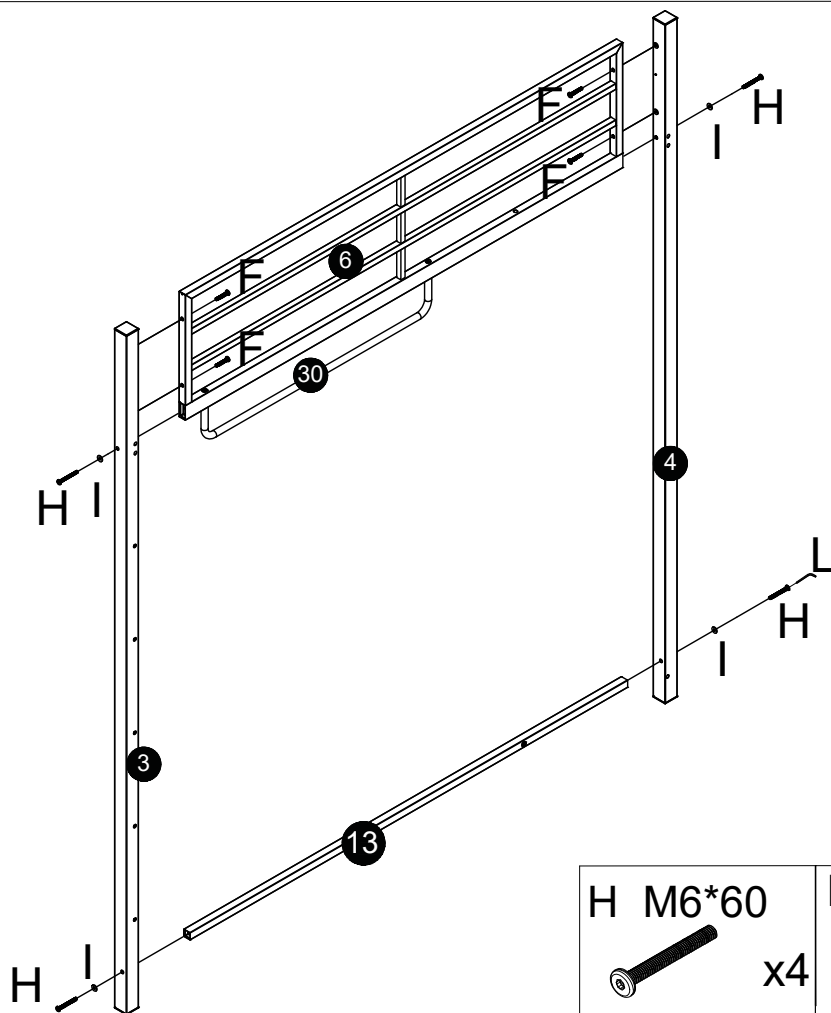


H M6*60	I M6	F M6*35
 x4	 x4	 x4

6

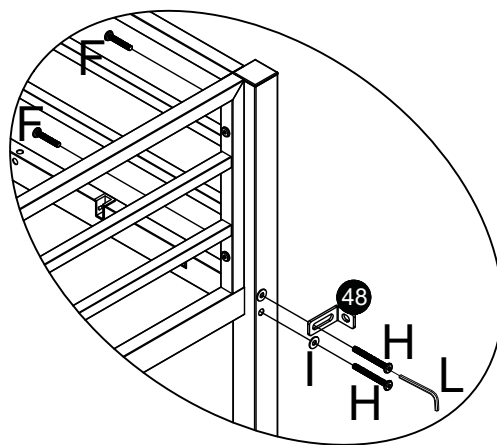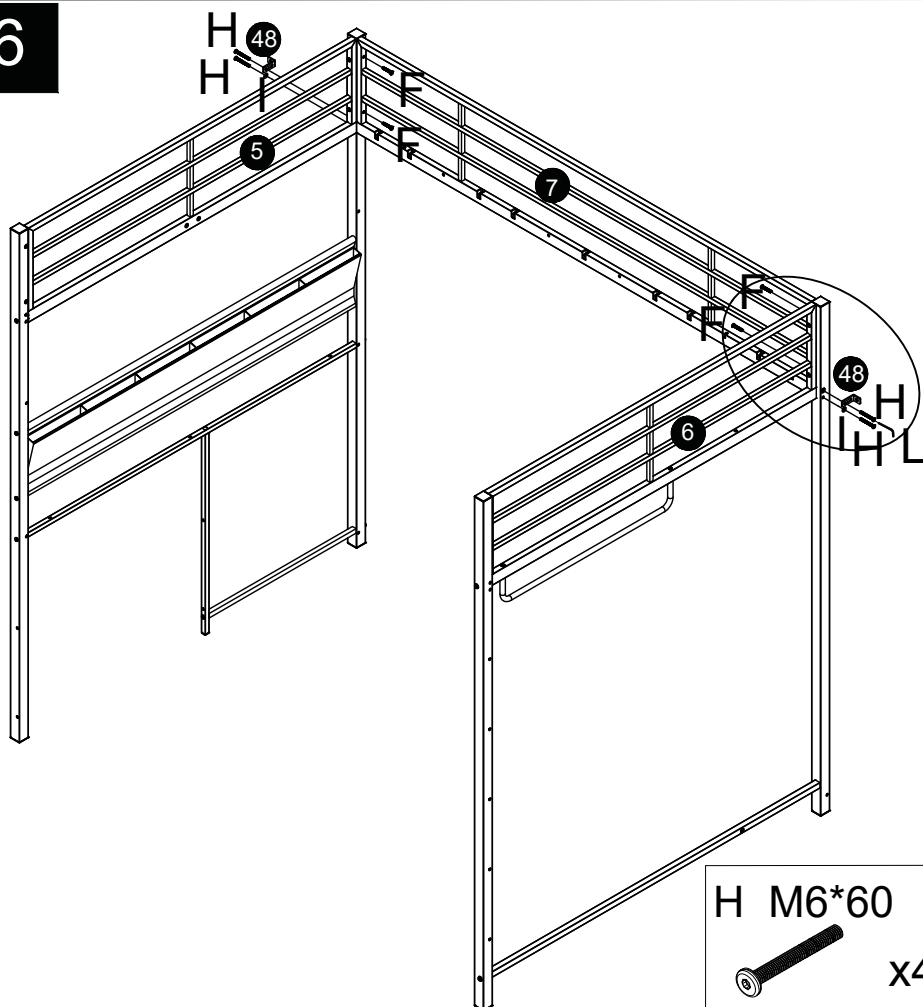

H M6*60	I M6	F M6*35
 x4	 x2	 x4

7

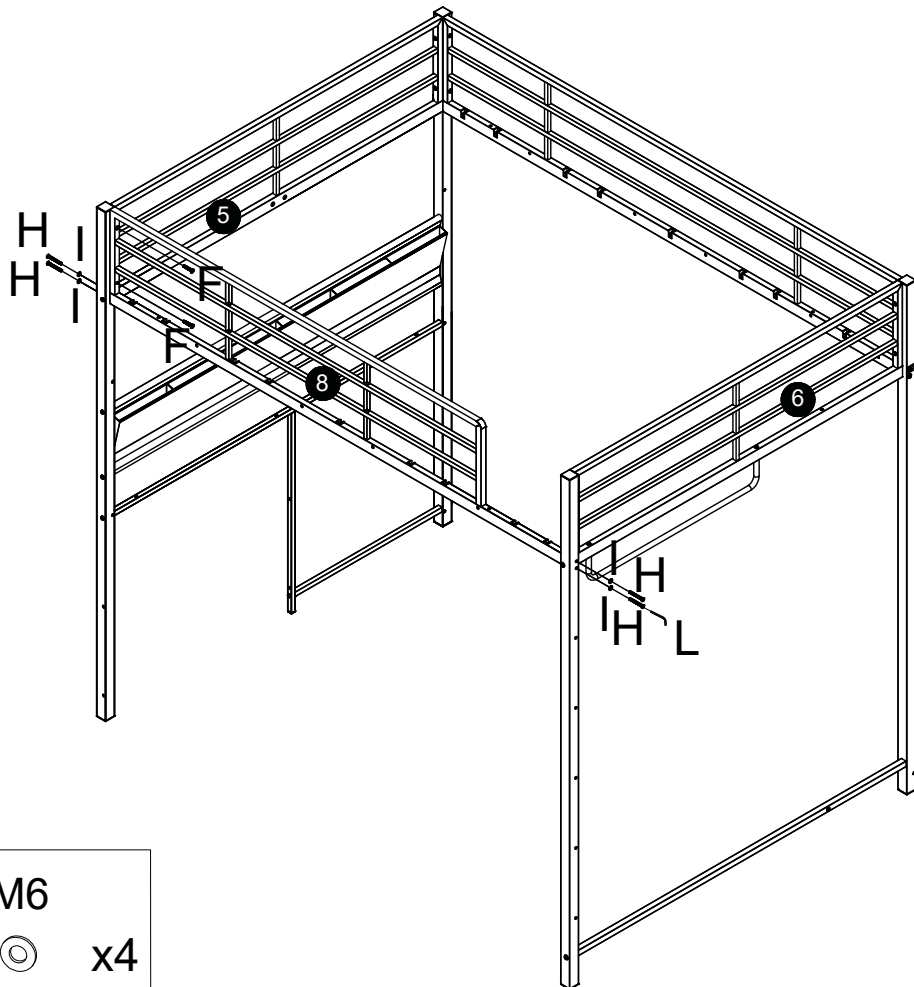

F M6*35



x2

H M6*60



x4


I

M6



x4

8

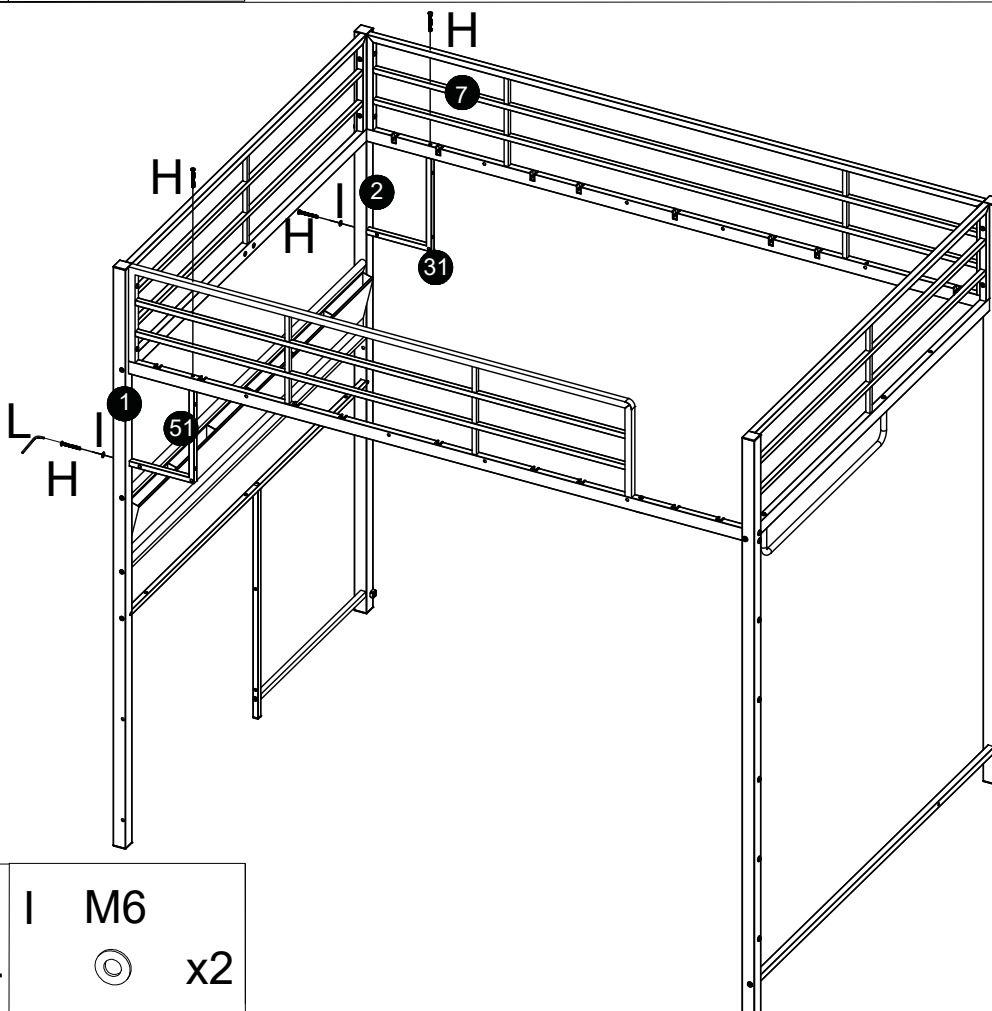

H M6*60



x4


I

M6



x2

9

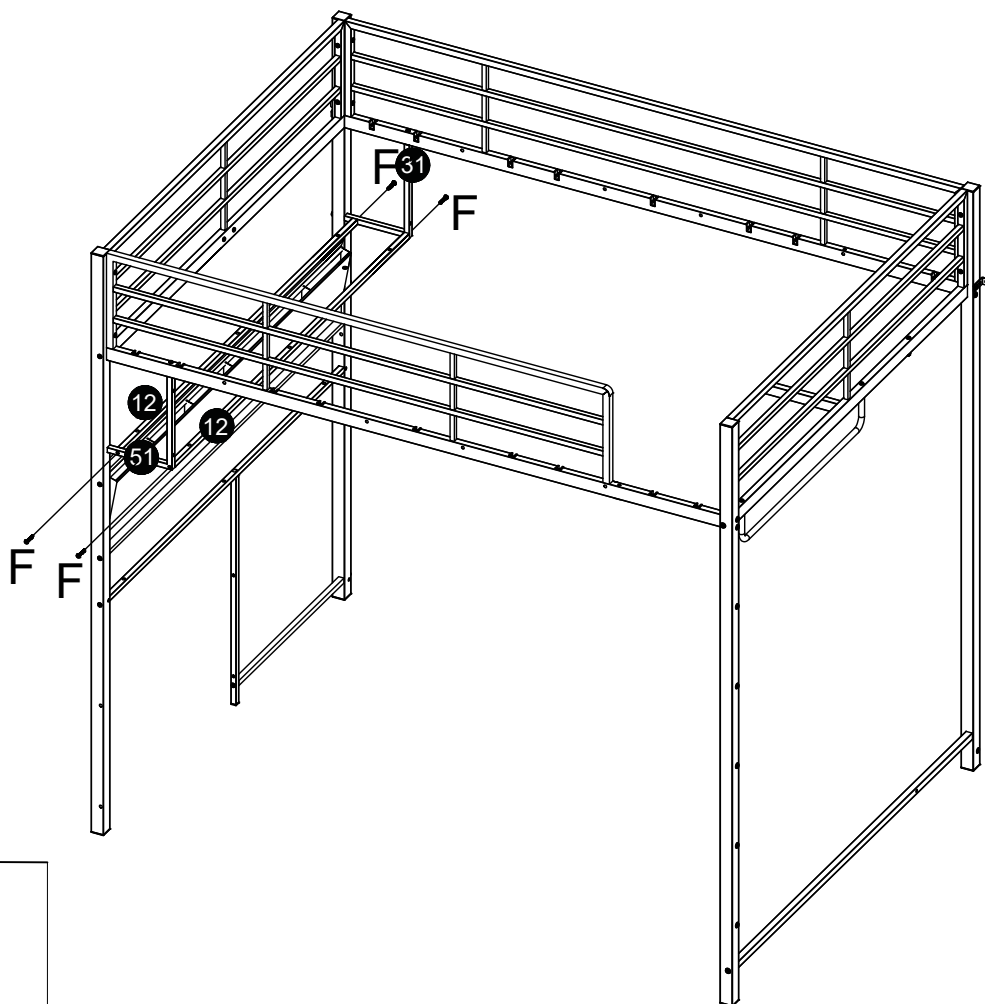


F M6*35



x4

10

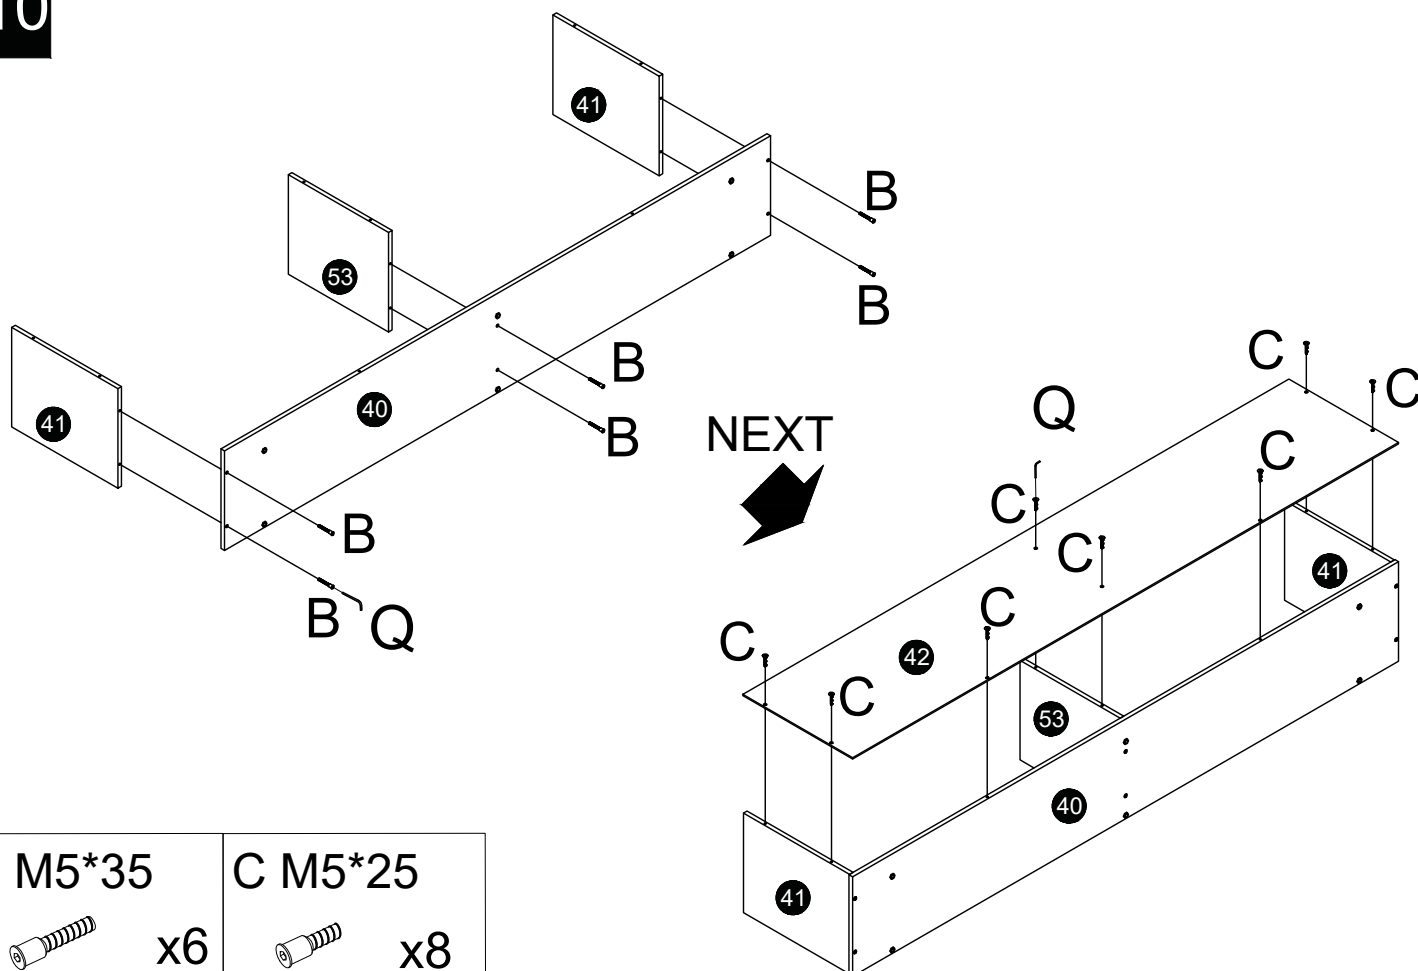

B M5*35




x6

C M5*25




x8

11

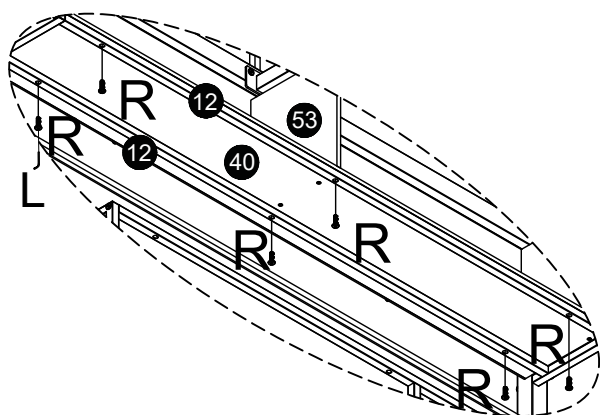

upward view

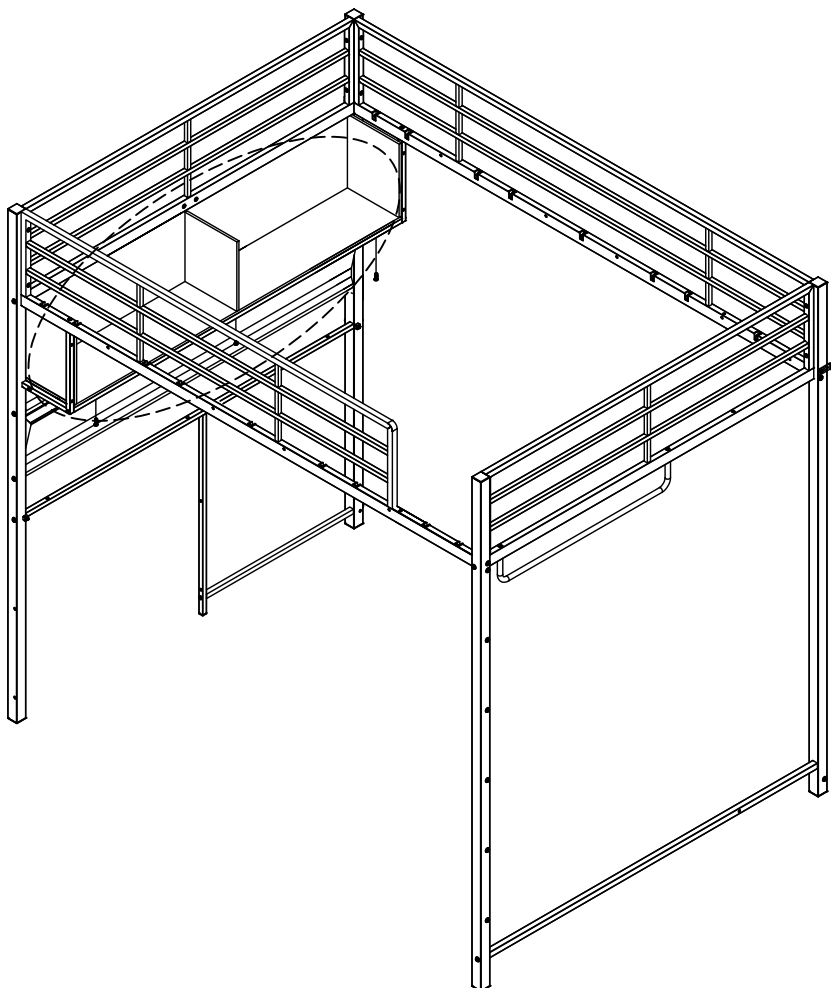


R M6*22



x6

12

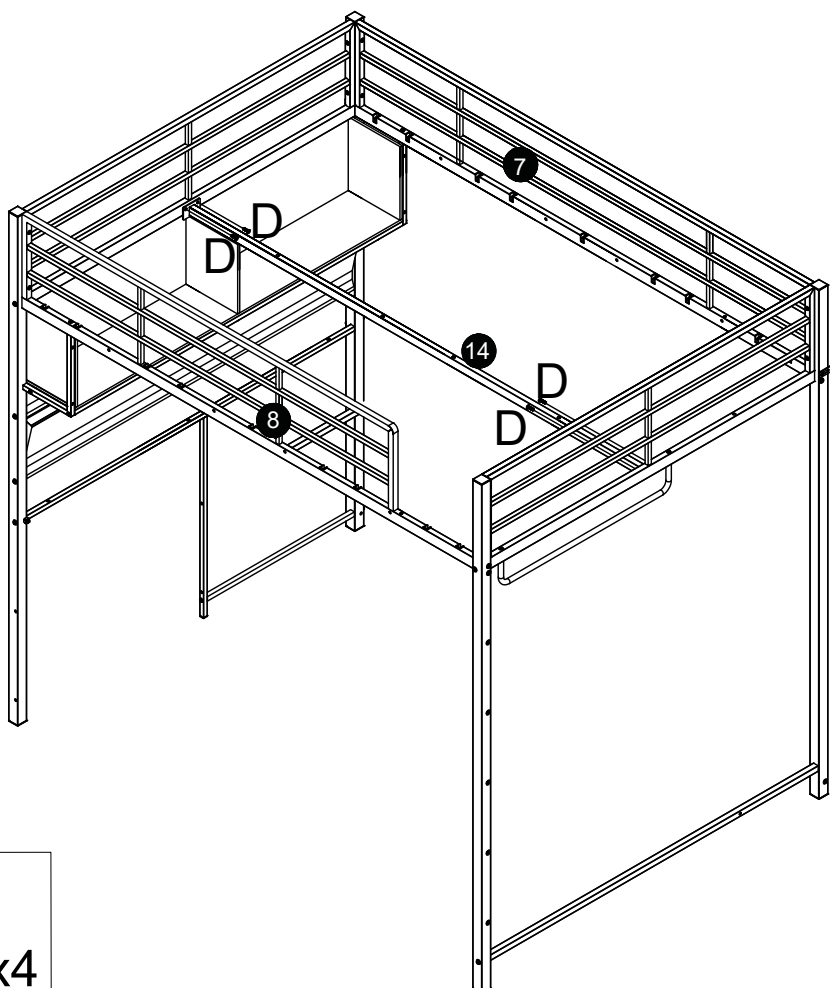


D M6*20




x4


13

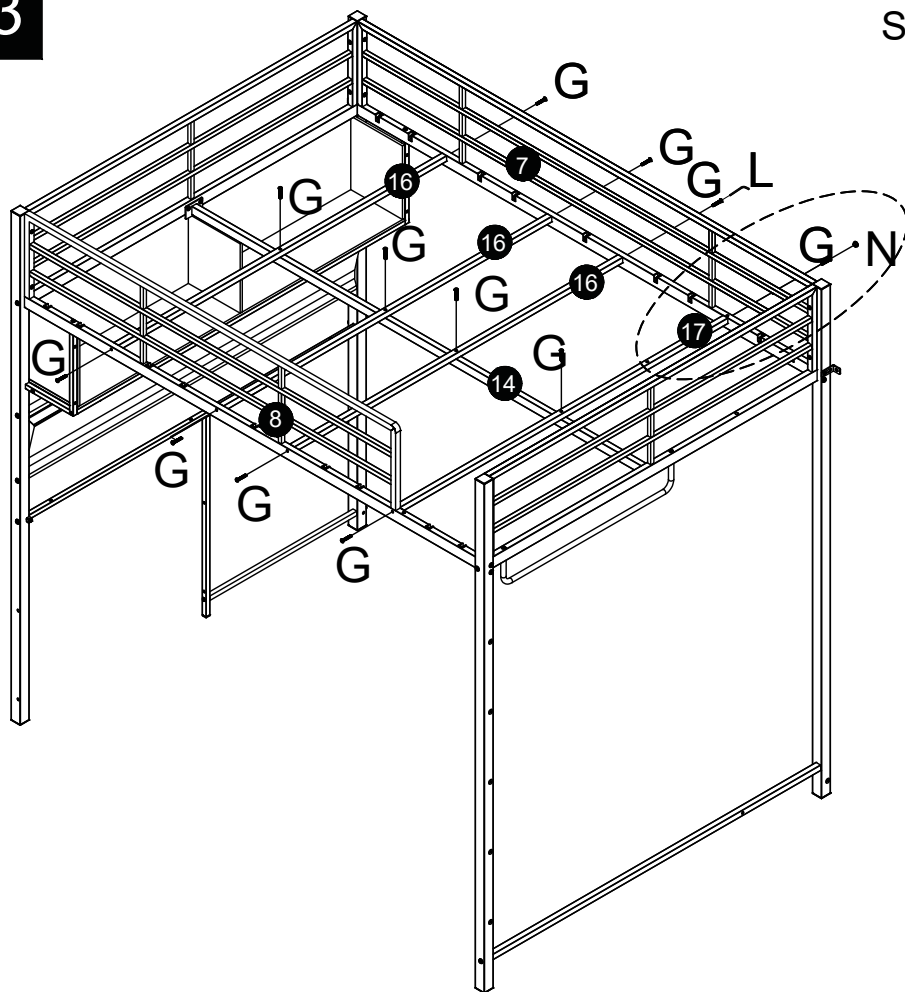

Step:a

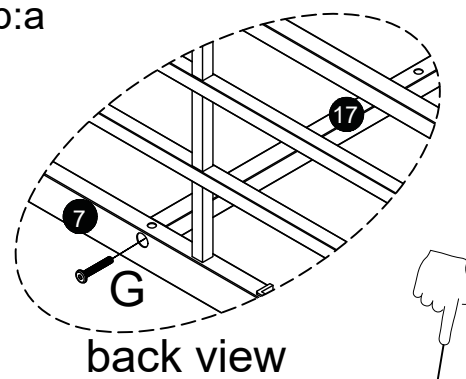

Step:b

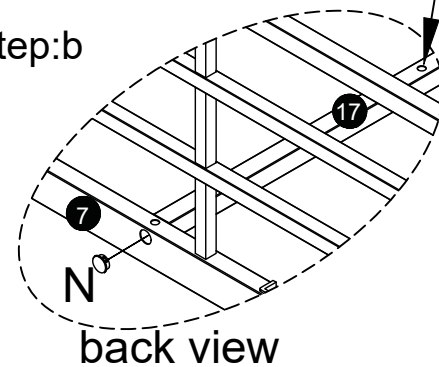

N Ø14




x1

G M6*40



x12

14

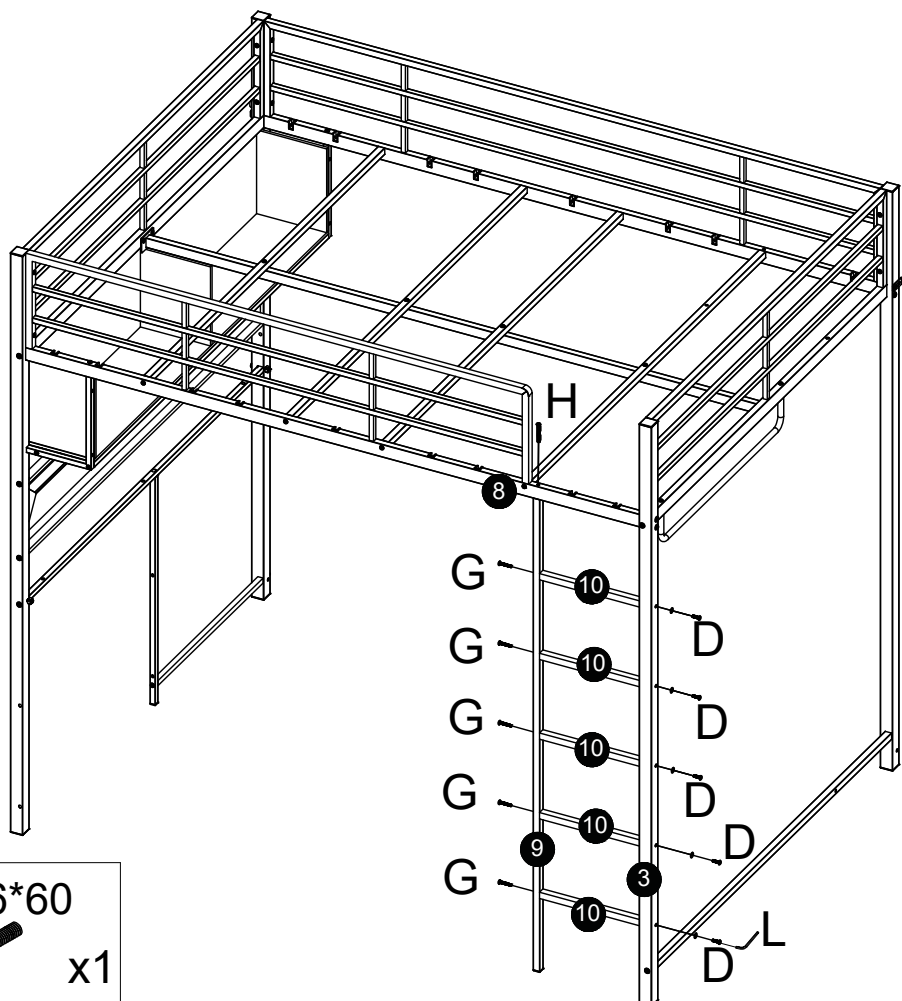

D M6*20



x5

G M6*40




x5

H M6*60




x1

15

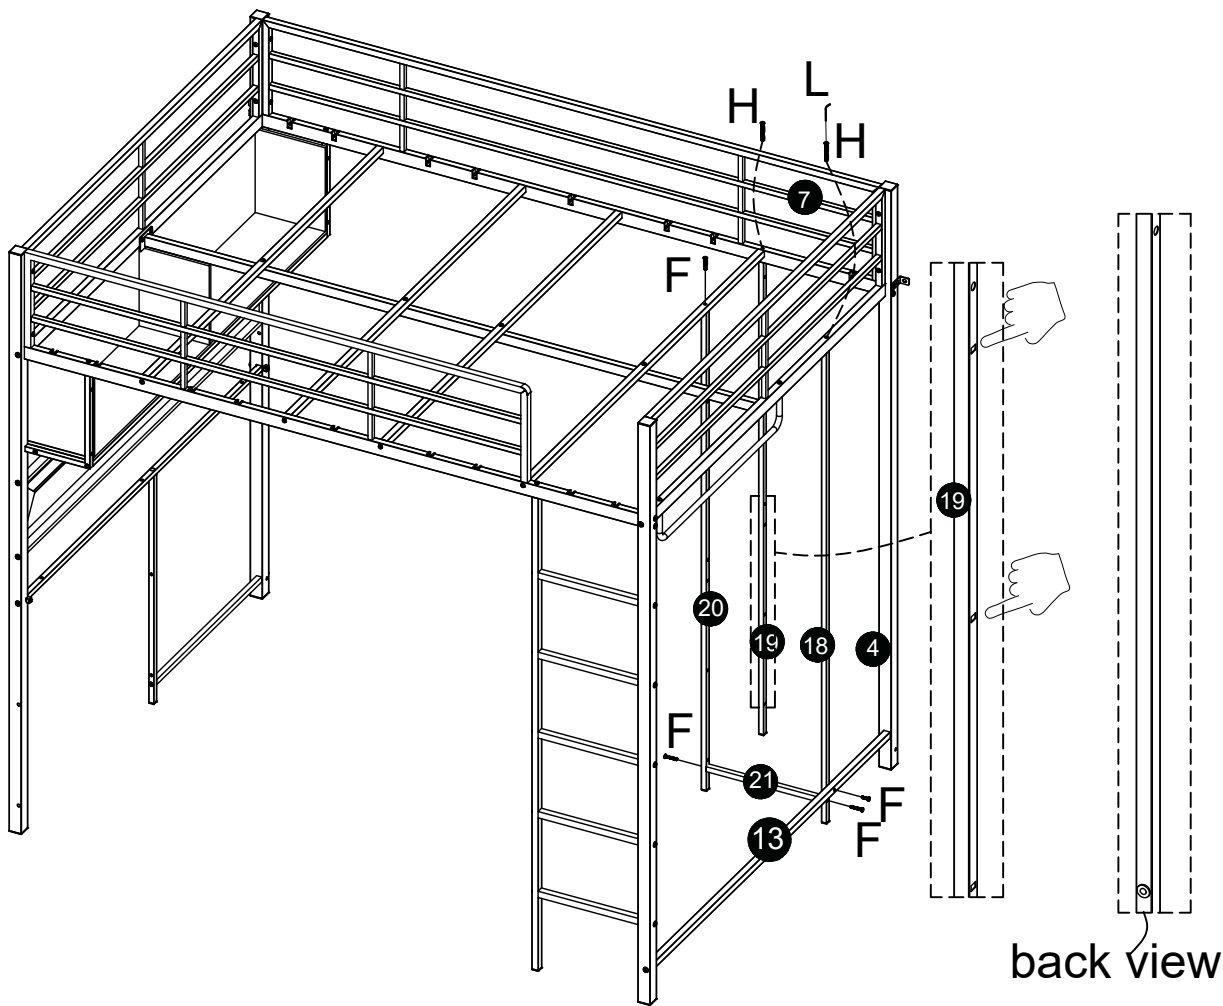


16

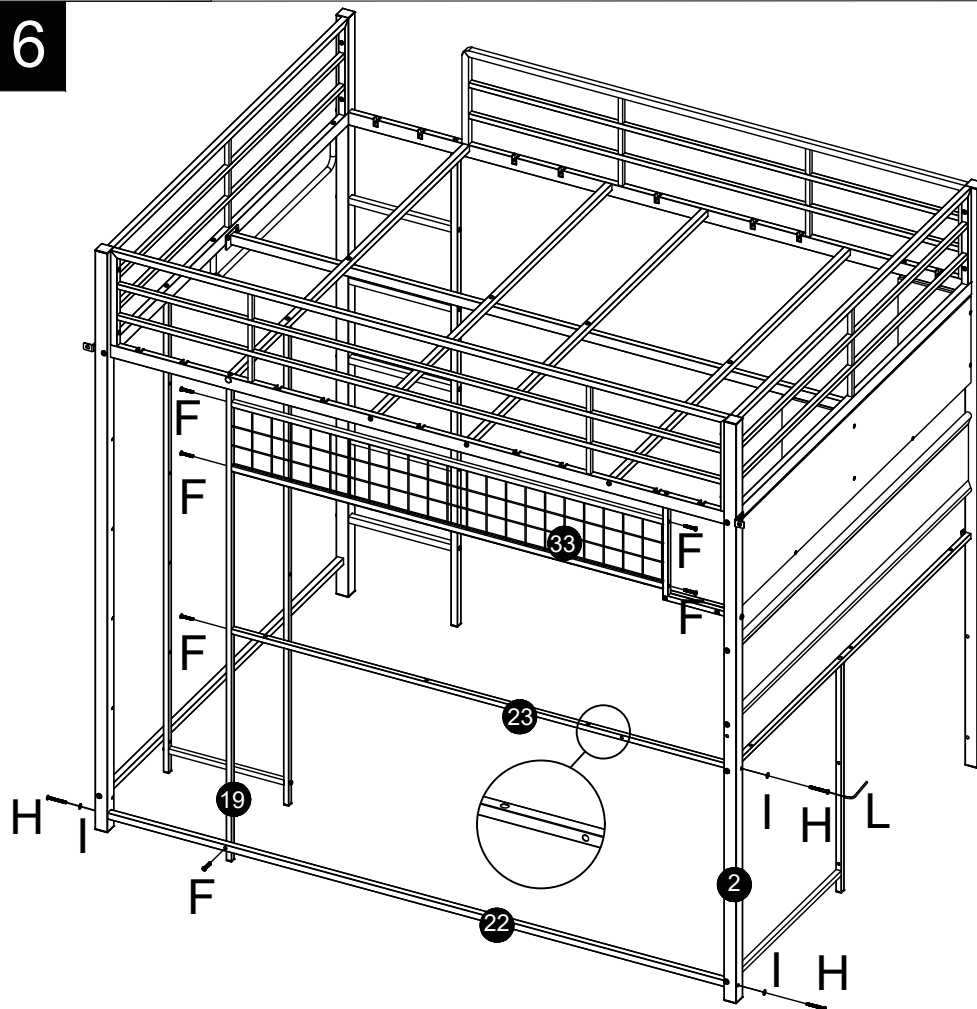


17

S M6*15
 x3

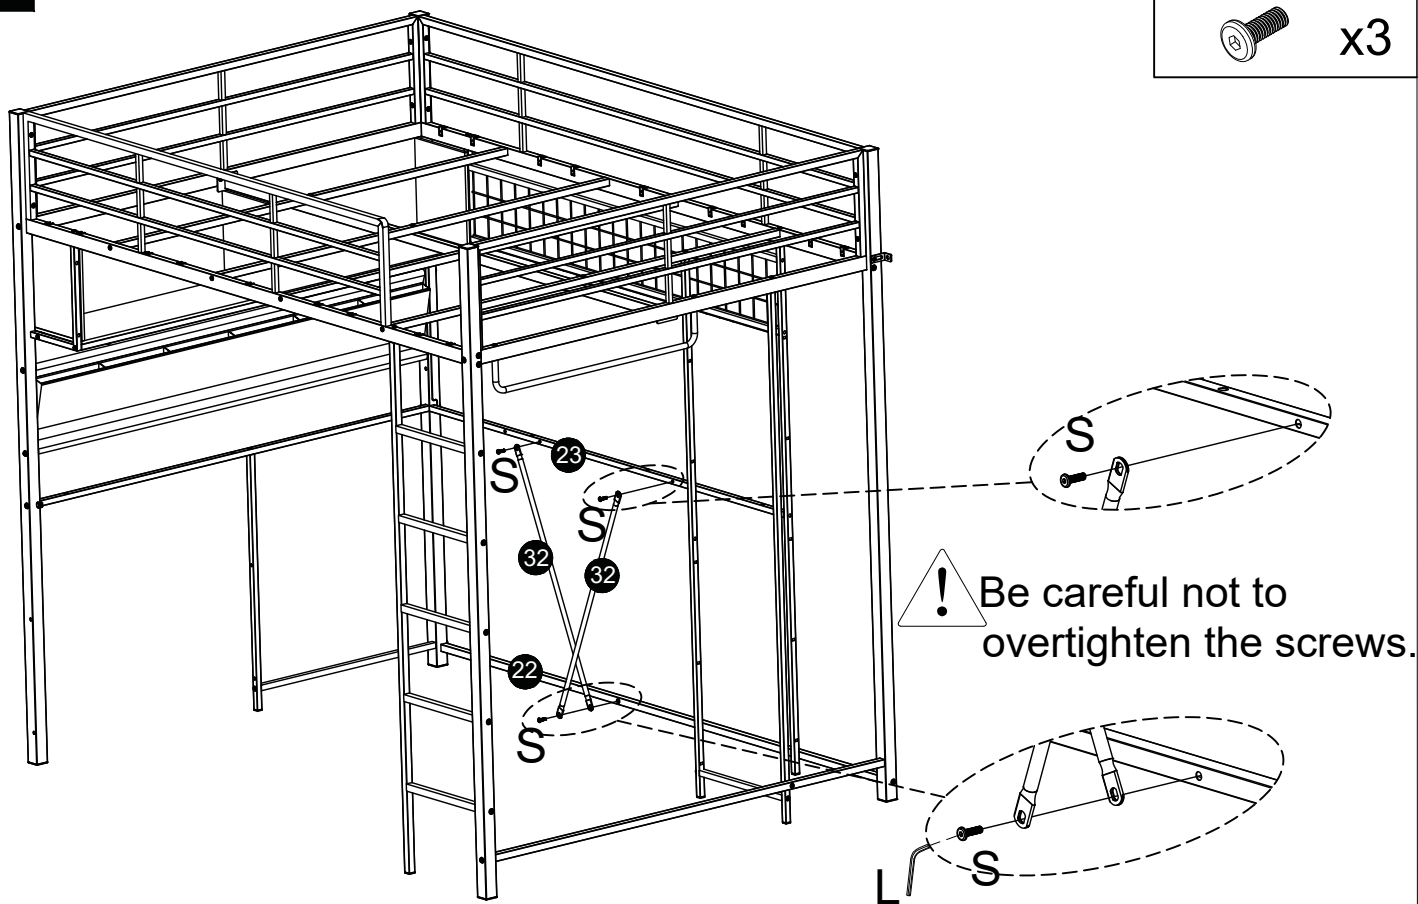

18


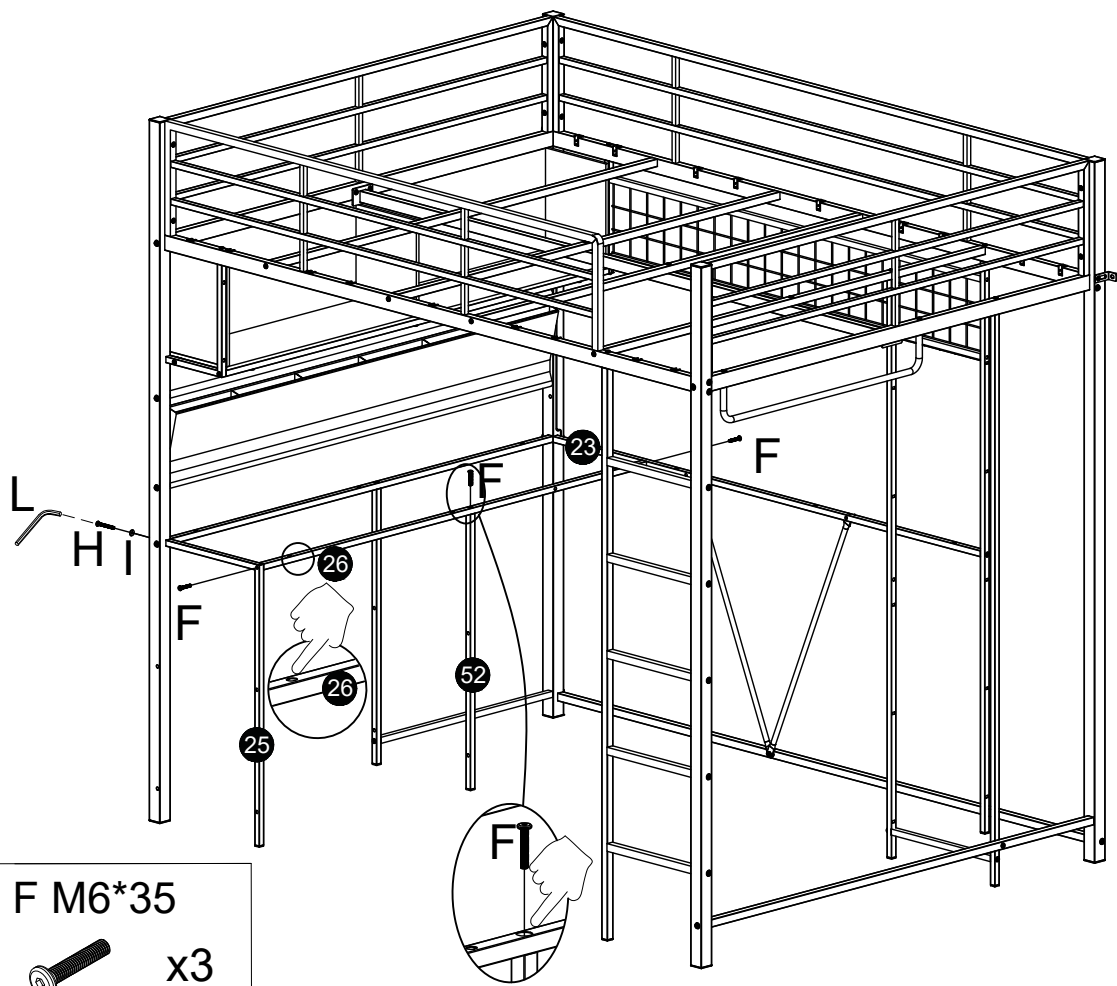


H M6*60
 x1

I M6
 x1

F M6*35
 x3

19

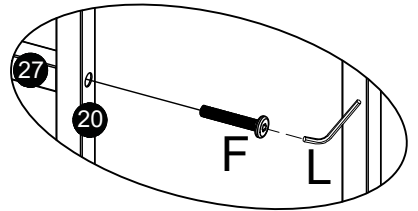
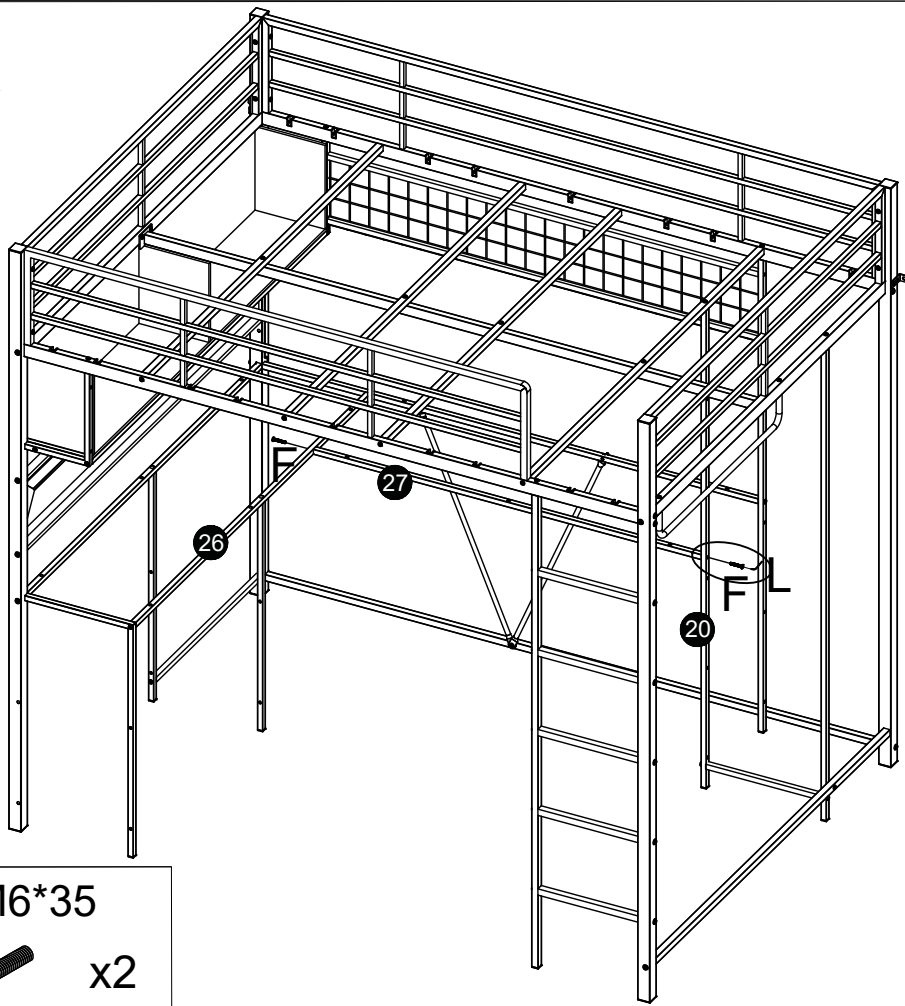


F M6*35



x2

20

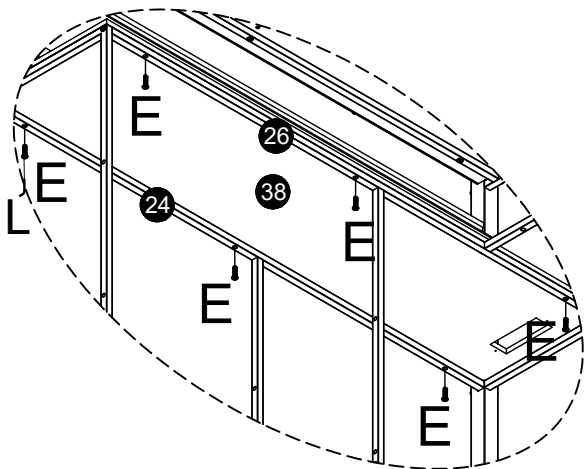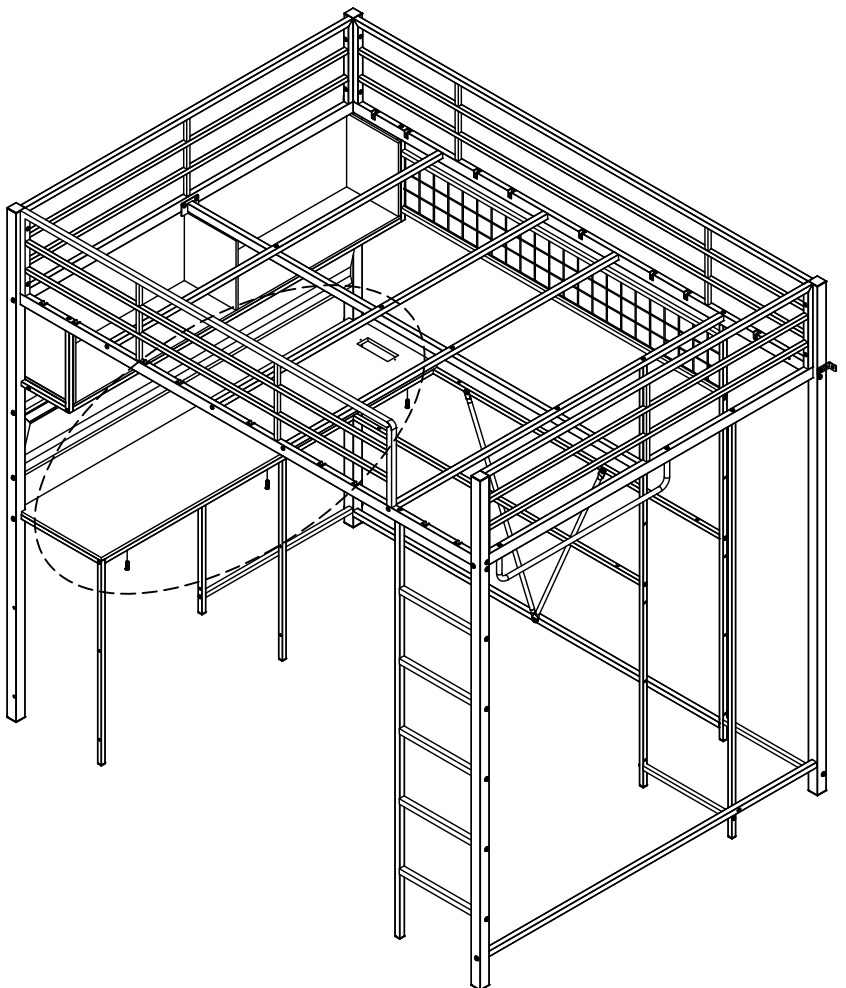


upward view

E M6*24




x6

21

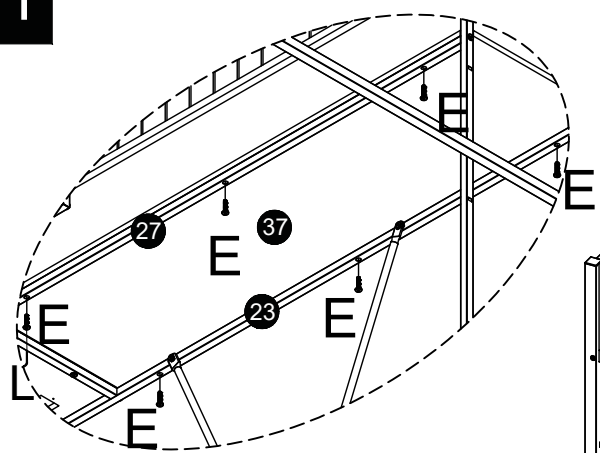

upward view

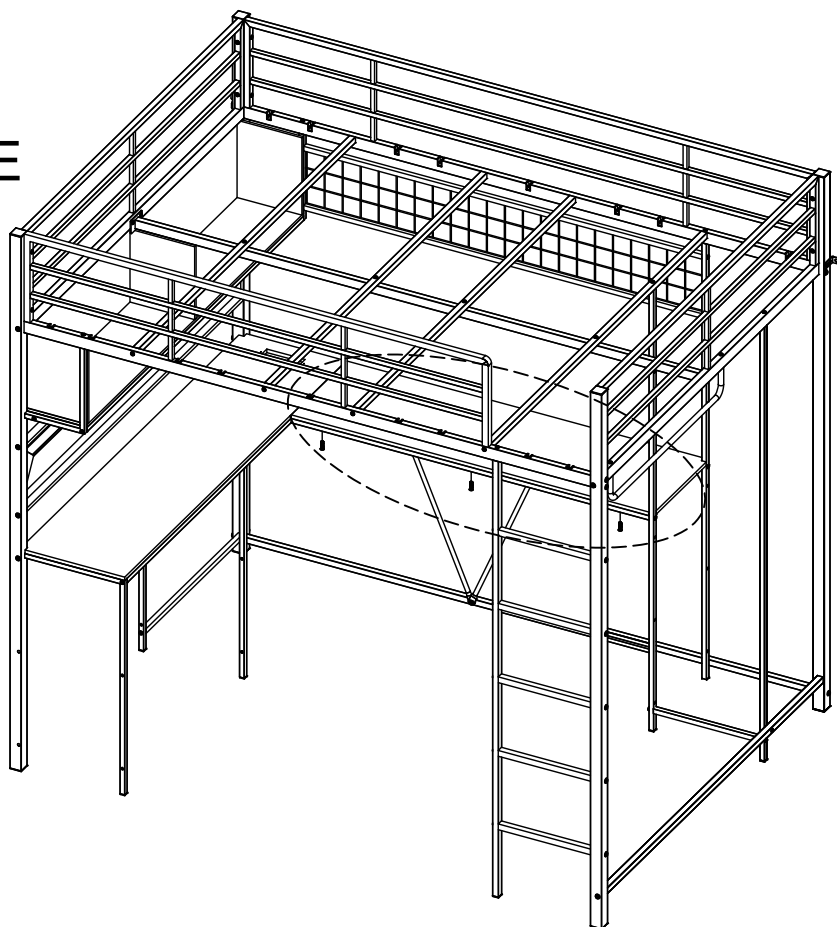


E M6*24



x6

22

Pay attention: the net should be facing upwards.

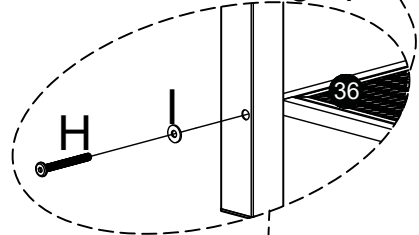

H M6*60



x2

I M6




x2


F M6*35




x6

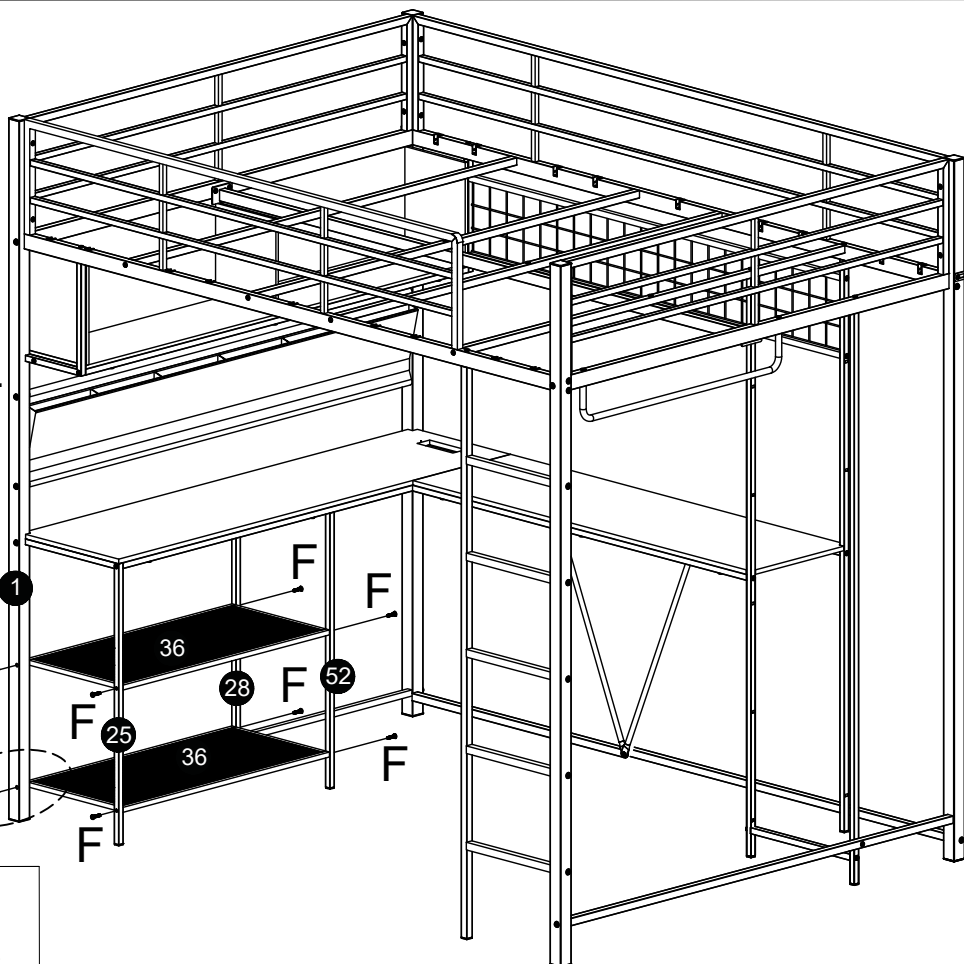

23

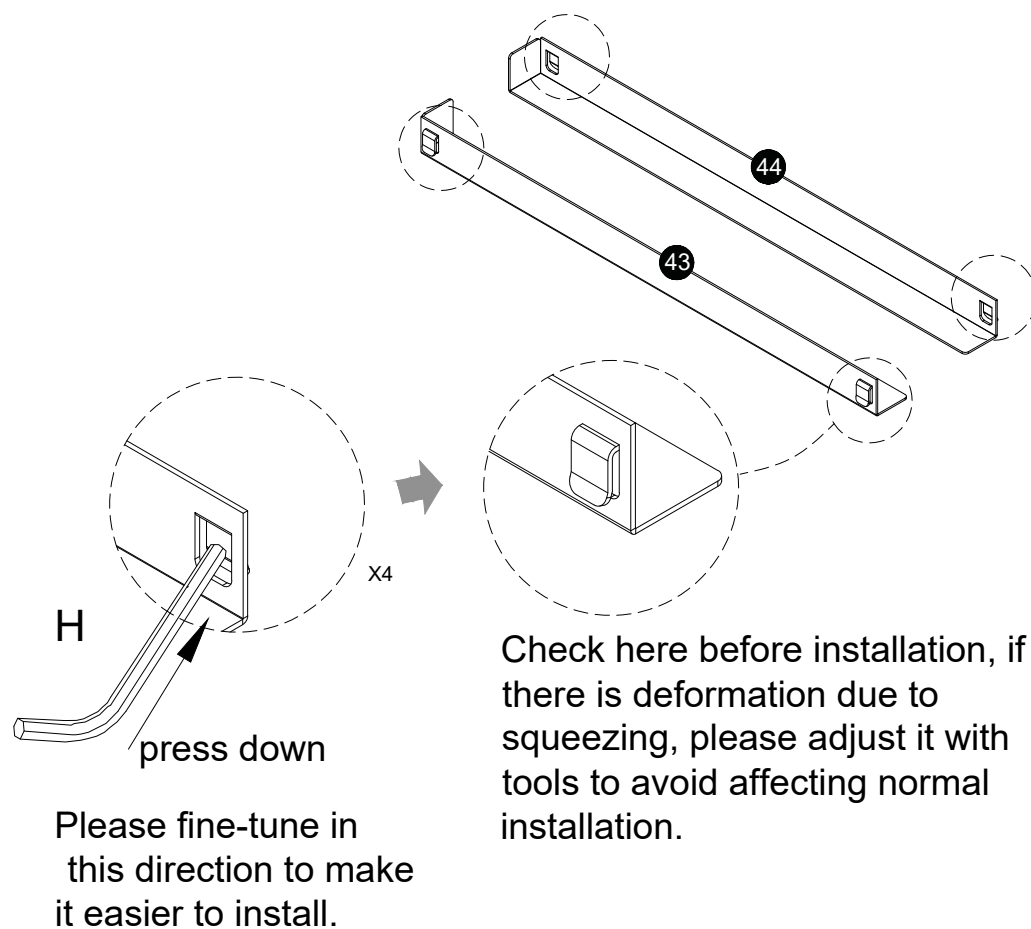

24

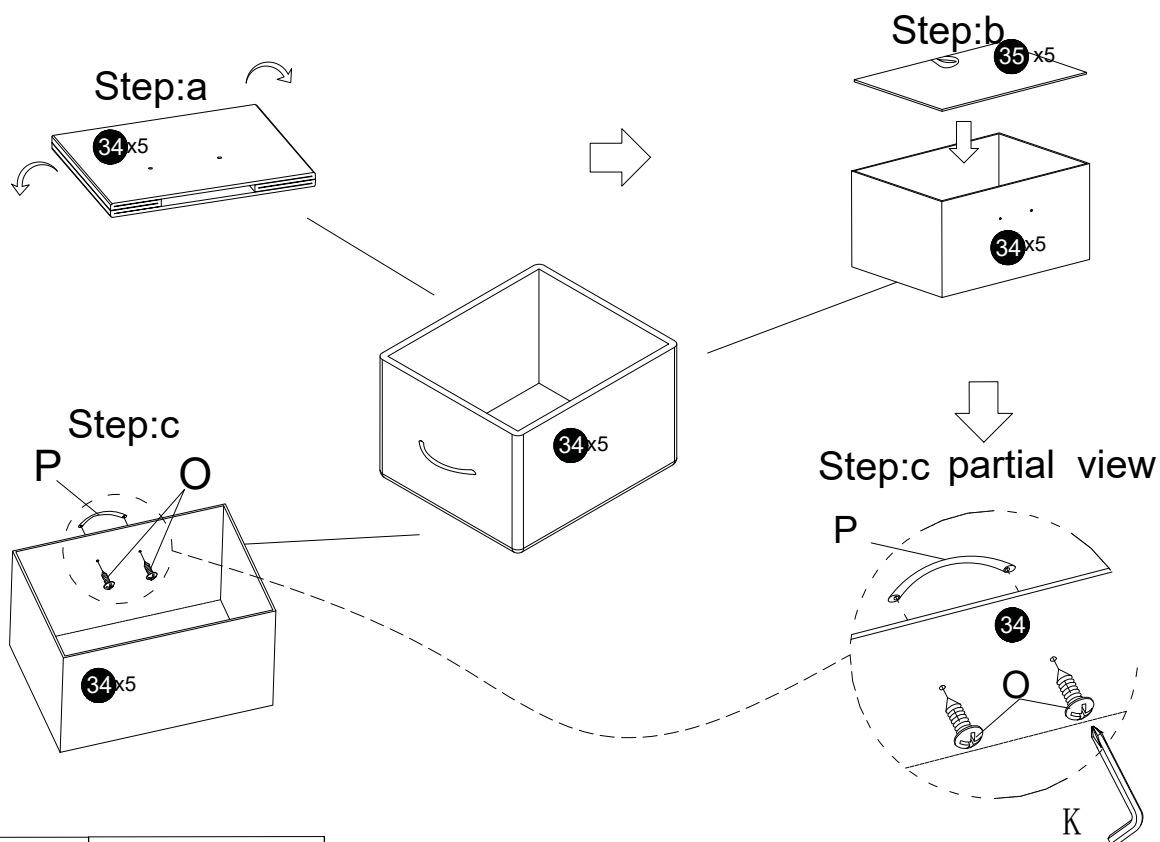

O M4*12





x10


P






x5

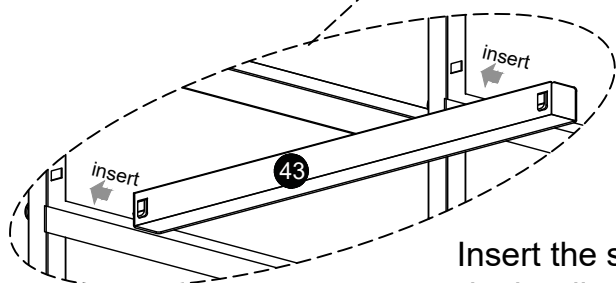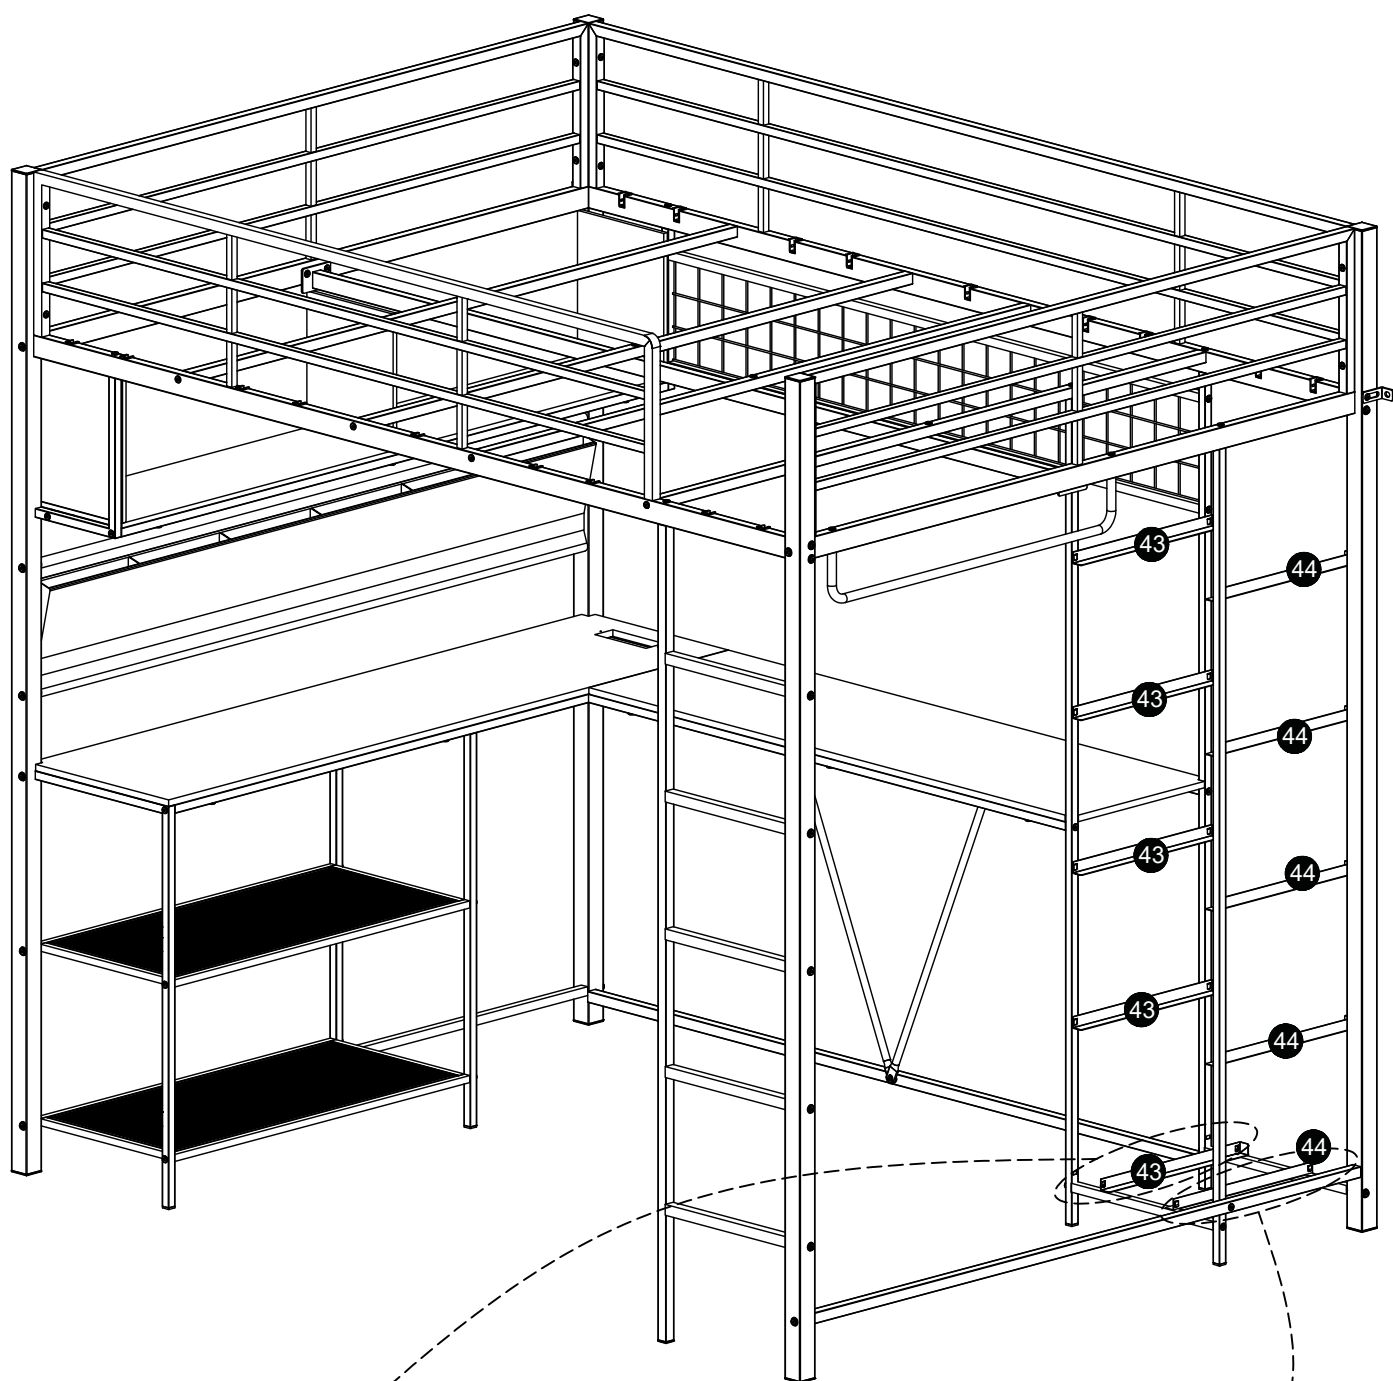


Insert the square hole
in the direction of the
Arrow and press down

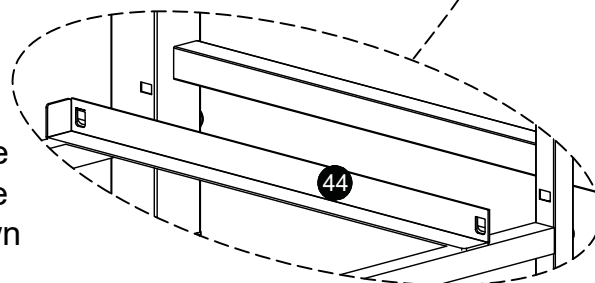



26

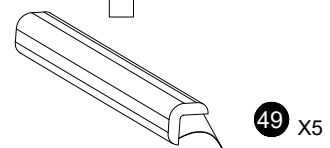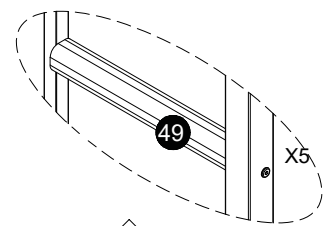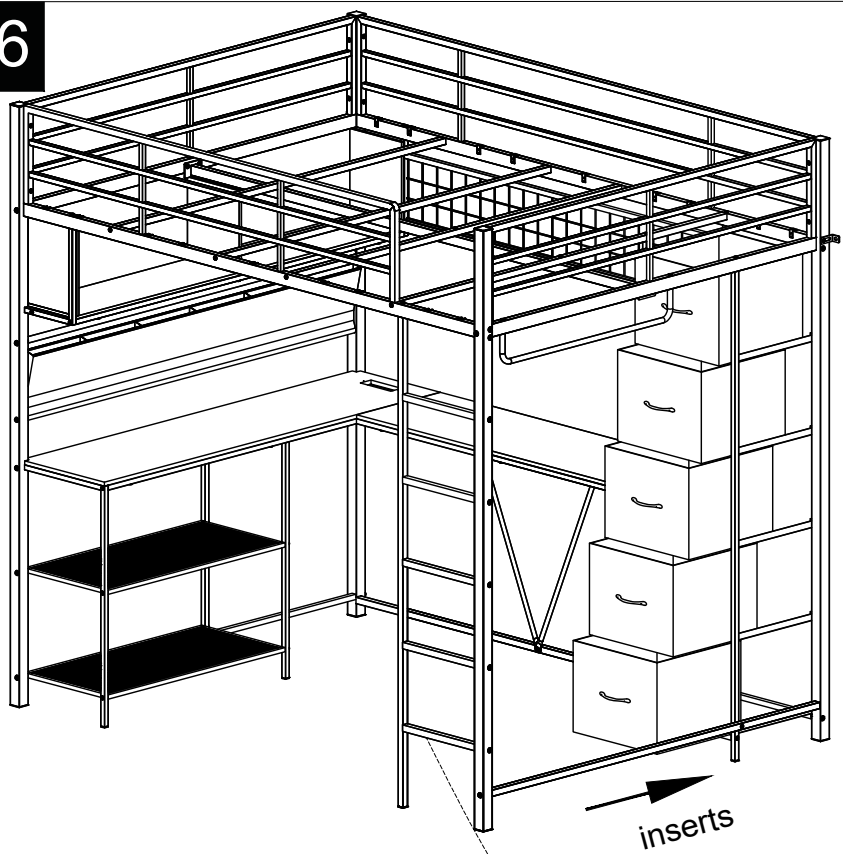


After tearing the tape off the sponge, attach the sponge to the stair tube

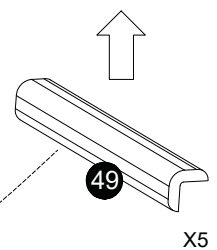

27

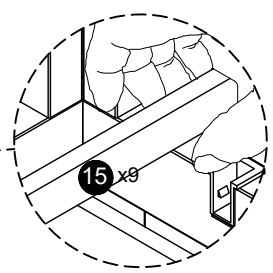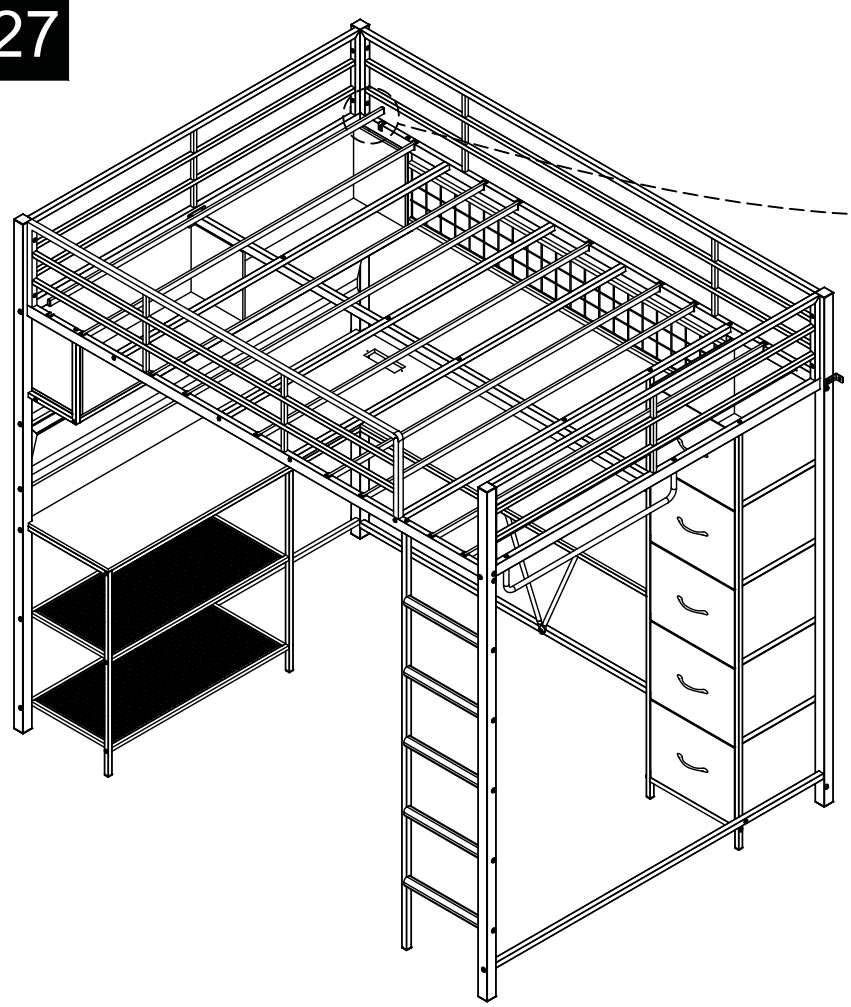

28


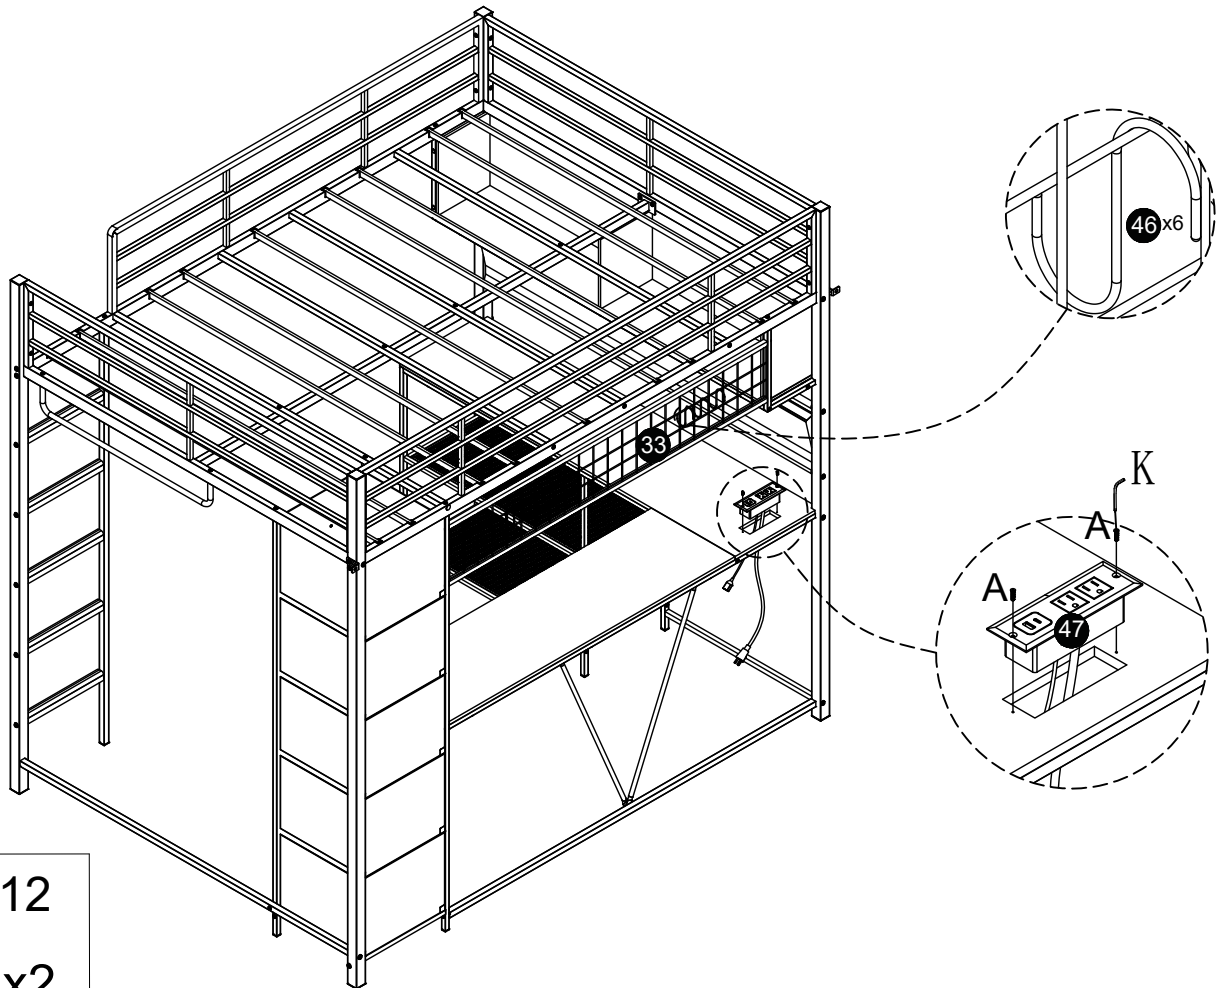


A M4*12




x2


29

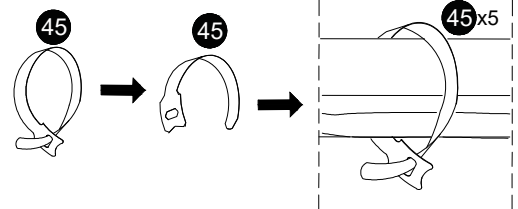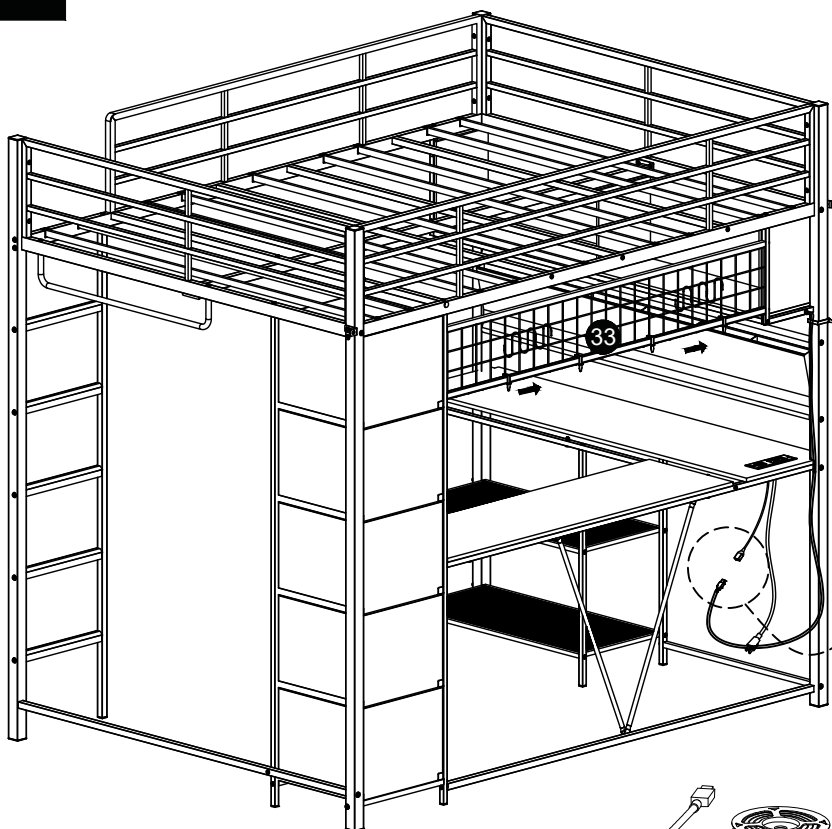

Please loosen the tie and tie it onto the iron pipe. As shown in the figure.


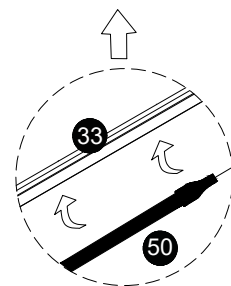


Attach the light strip 50 below the square tube 33.

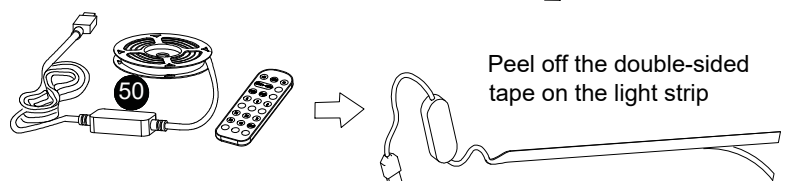


Peel off the double-sided tape on the light strip


30 Positioning

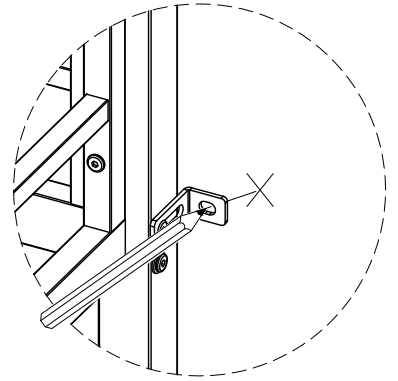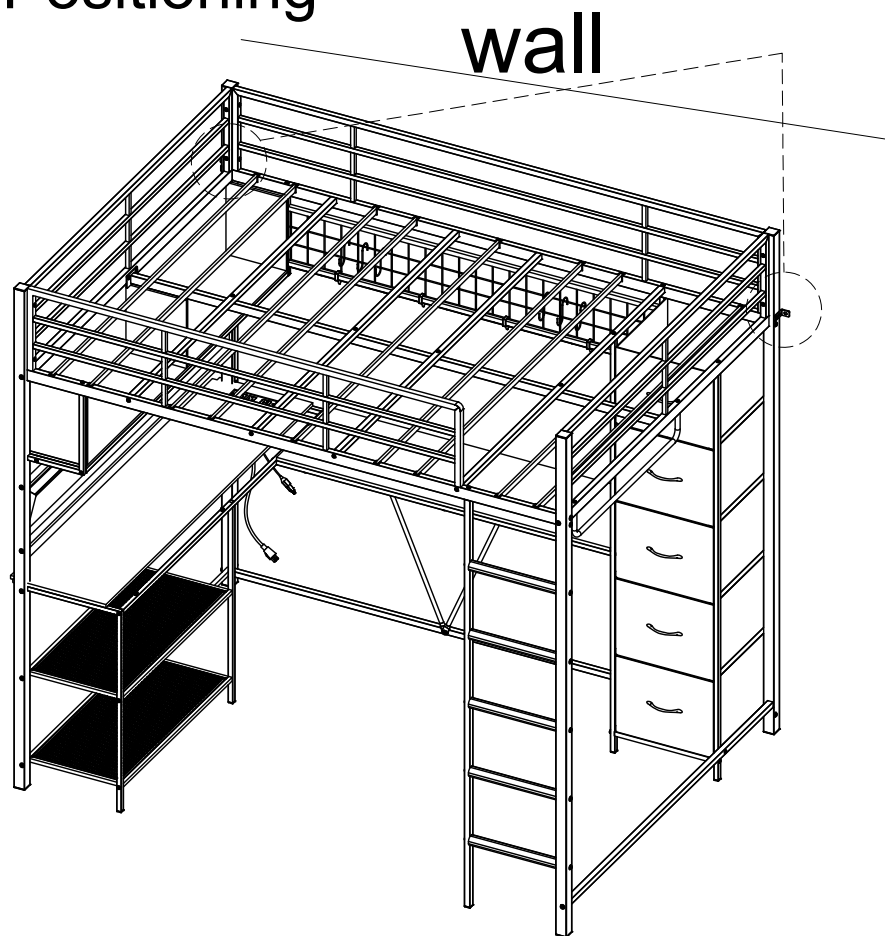

31 Drilling

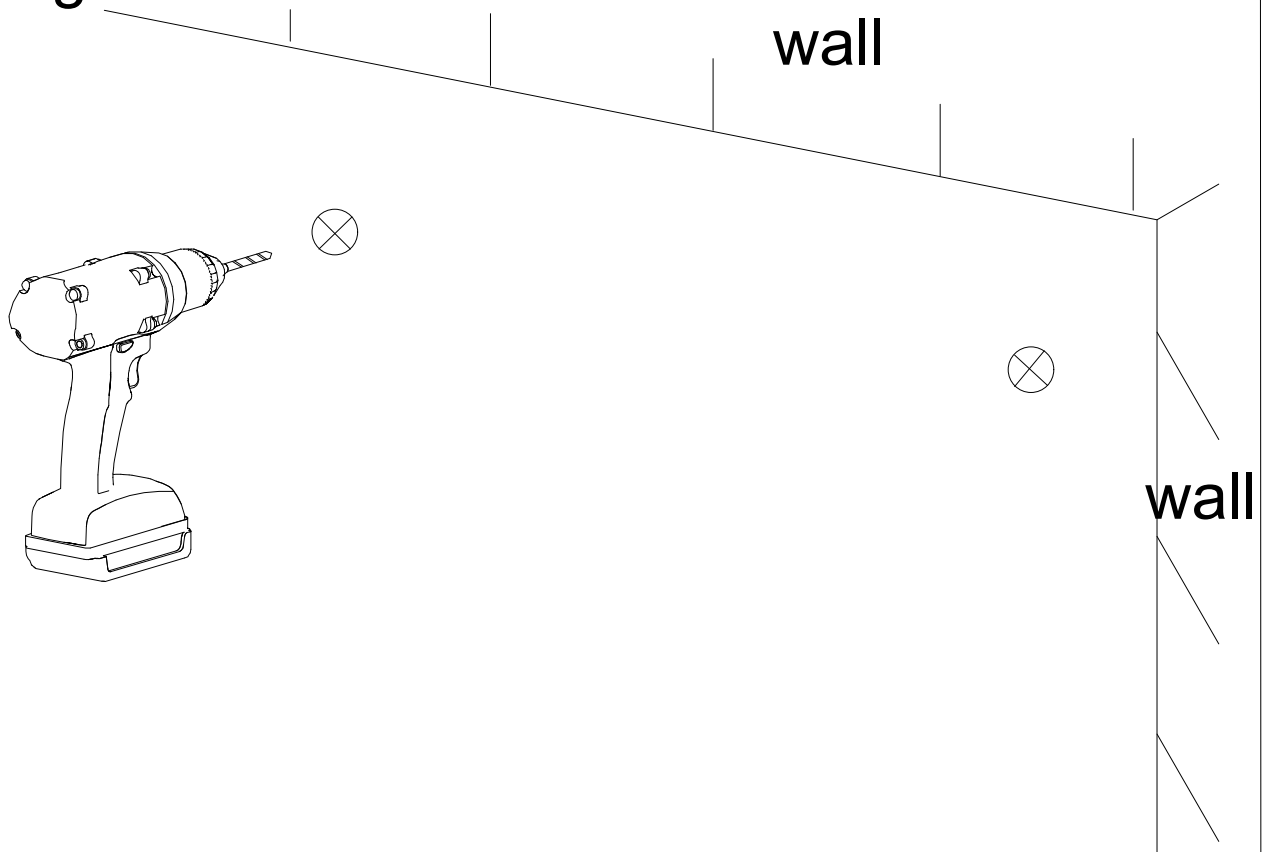

32

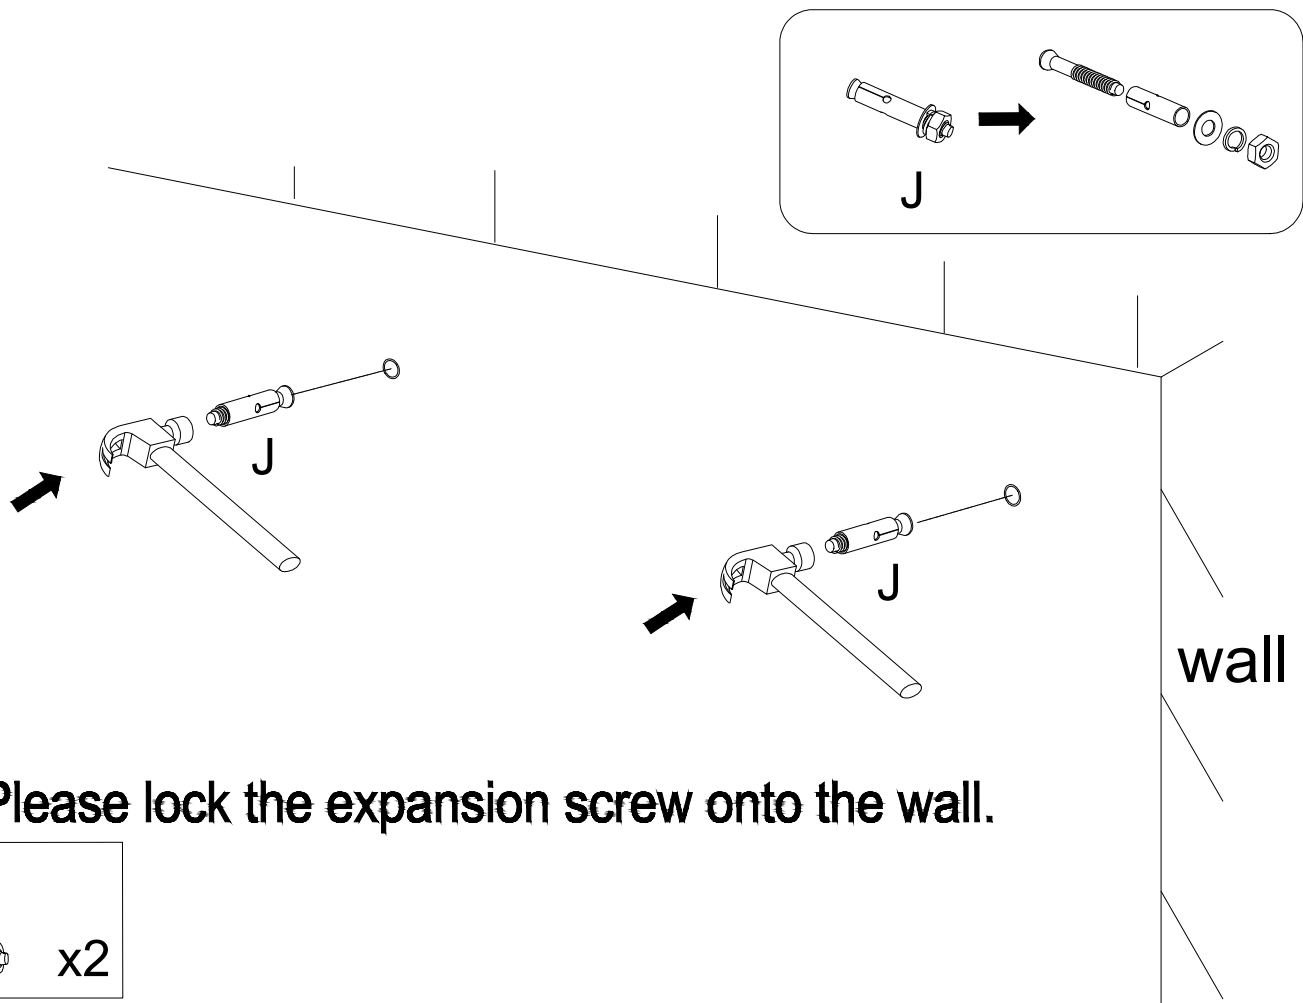

33

