


## UPHOLSTERED HEADBOARD ASSEMBLY


A	Headboard	1 pc
B	Side Wings	2 pcs
C	Legs	2 pcs
D	Long Bolts (M6x20mm)	4 pcs
E	Bolts (M6x20mm)	4 pcs
F	Short Bolts (M6x40mm)	4 pcs
G	Allen Key (5.5mm)	1 pc
H	Allen Key (7.0mm)	1 pc
I	Small Washers (M6)	8 pcs
J	Spring Washers (M6)	4 pcs
K	Large Washers (M6)	4 pcs
L	Short Screws (M4x35mm)	16 pcs
M	Nuts (M6)	4 pcs
N	Male Wall Mount	2 pcs
O	Female Wall Mount	2 pcs
P	Drywall Plugs	8 pcs
Q	Wrench	1 pc

TOOLS NEEDED: Phillips Screwdriver


**1** Remove legs (C), and hardware packet from the compartment on the back of the headboard (A).




**2** Secure side wings (B) to the headboard (A) by tightening the short bolts (F), spring washers (J) and small washers (I) with allen key (G).

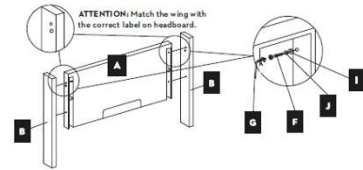

**3** Attach legs (C) to the headboard (A) by tightening long bolts (D), large washers (K) with Allen key (H).

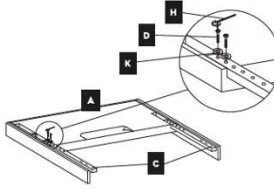


**4** With the front side of the headboard facing the bed frame, attach the headboard (A) to the frame using the bolts (E), small washers (I), nuts (M), with allen key (G) and wrench (Q).

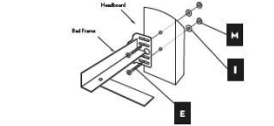

**5** WALL MOUNT OPTION

Screw the two female wall mounts (O) to the top of your headboard with the provided screws (L). Using the remaining screws (L), attach the male wall mounts (N) to your wall. Make sure to place the male wall mounts (N) at the correct height to pair with your previously installed female wall mounts (O). If no wall studs are available to secure the headboard to your wall, use the provided drywall anchors (P) instead. Lift or slide the headboard into place to join the (O) and (N) wall mounts together.

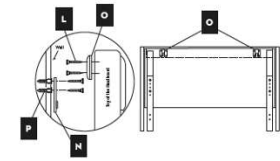

## HEADBOARD MODIFICATION PLATE

# ASSEMBLY INSTRUCTIONS

**1** Place assembled bed frame in front of headboard and position modi plate to determine which slots will line up with headboard brackets and headboard. Use provided lock nuts, small washers, and short M6 bolts to attach modi plates to headboard brackets as shown in figure 1.

**2** Use provided lock nuts, small washers, and short M6 bolts to attach headboard to modi plates.



### STANDARD MODIFICATION PLATE

#### Parts List:

- 2 Modi Plates
- 4 Short M6 Bolts
- 4 Lock Nuts
- 4 Small Washers

