


# *ASSEMBLY INSTRUCTIONS*

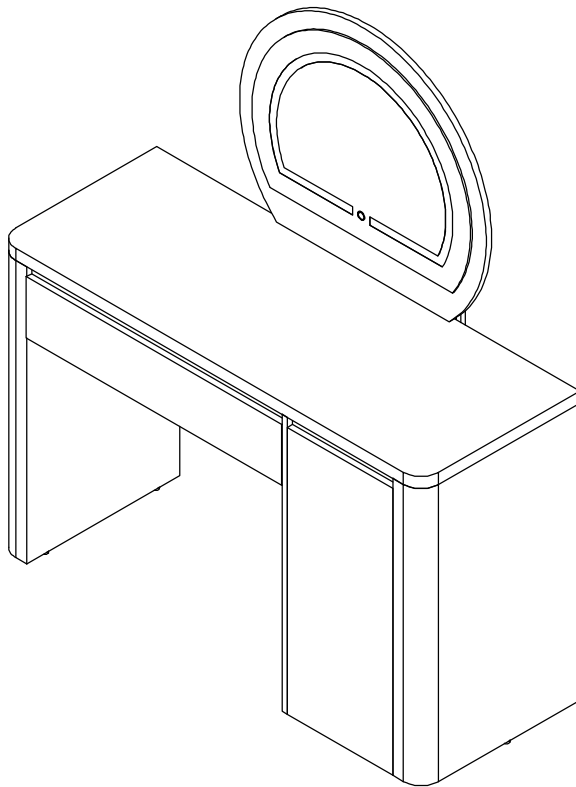

*Fine Furniture for every stage of life*

# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

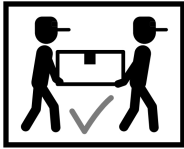


ASSEMBLY TIME 99 MINUTES

## PARTS IDENTIFICATION

A

TOP PANEL

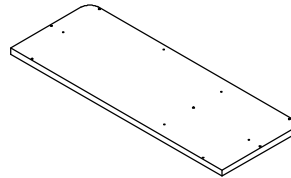

1PC

B

LEFT PANEL



1PC

C


RIGHT PANEL



1PC

D

MIDDLE PANEL

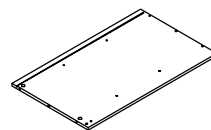


1PC

# ASSEMBLY INSTRUCTIONS

## PARTS IDENTIFICATION

E


LONG FRONT PANEL

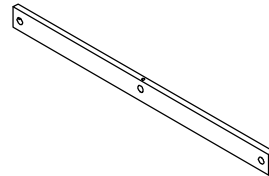

1PC

F


SHORT FRONT PANEL

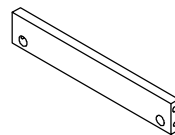

1PC

G

BACK PANEL

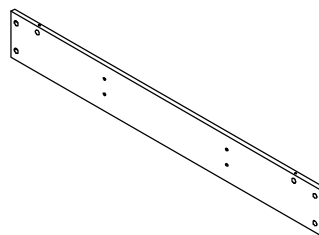

1PC

H


DOOR PANEL



1PC

I

CABINET MIDDLE PANEL

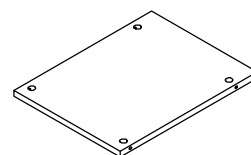


2PCS

# ASSEMBLY INSTRUCTIONS

## PARTS IDENTIFICATION

J

CABINET BOTTOM PANEL

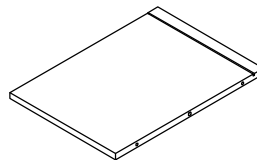

1PC

K


LARGE BACK PANEL



1PC

L


DRAWER FRONT PANEL

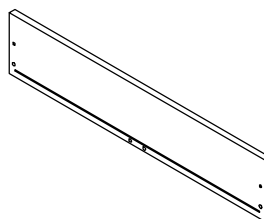

1PC

M


DRAWER LEFT PANEL

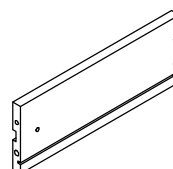

1PC

N


DRAWER RIGHT PANEL

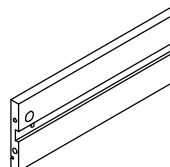

1PC

O

DRAWER BACK PANEL

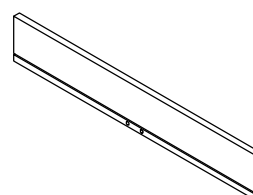


1PC

# ASSEMBLY INSTRUCTIONS


## PARTS IDENTIFICATION

P DRAWER BOTTOM PANEL

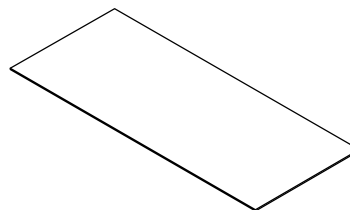


1PC

Q DRAWER SUPPORT PANEL

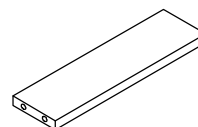


1PC

R MIRROR

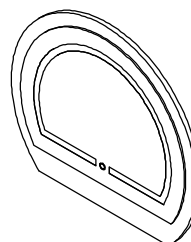


1PC

S CROSSBAR

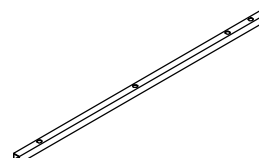


2PCS

T HINGE




2PCS

U SLIDE RAIL

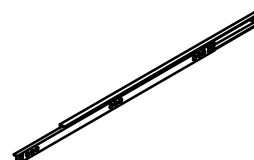

2PCS

V LED POWER ADAPTER

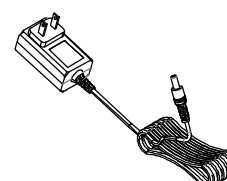


1PC

# ASSEMBLY INSTRUCTIONS


Z

## HARDWARE IDENTIFICATION

|   |                             |                                                                                     |       |    |                       |                                                                                       |       |
|---|-----------------------------|-------------------------------------------------------------------------------------|-------|----|-----------------------|---------------------------------------------------------------------------------------|-------|
| 1 | CAM BOLT<br>(38MM)          |    | 29PCS | 7  | SCREW<br>(8 x 15mm)   |    | 12PCS |
| 2 | CAM-LOCK<br>(Ø15MM)         |    | 29PCS | 8  | BOLT                  |    | 8PCS  |
| 3 | WOOD DOWEL<br>(8 x 30mm)    |    | 10PCS | 9  | CAP<br>(16 x 16mm)    |    | 4PCS  |
| 4 | LONG SCREW<br>(8 x 35mm)    |    | 10PCS | 10 | STICKER               |    | 2PCS  |
| 5 | SMALL BOLT<br>(5/32" x 9mm) |    | 2PCS  | 11 | GLUE                  |    | 1PC   |
| 6 | RAIL SCREW<br>(8 x 12mm)    |  | 6PCS  | 12 | ALLEN WRENCH<br>(4mm) |  | 1PC   |


## STEP 1

Do not tighten until each step is completed or instructed.

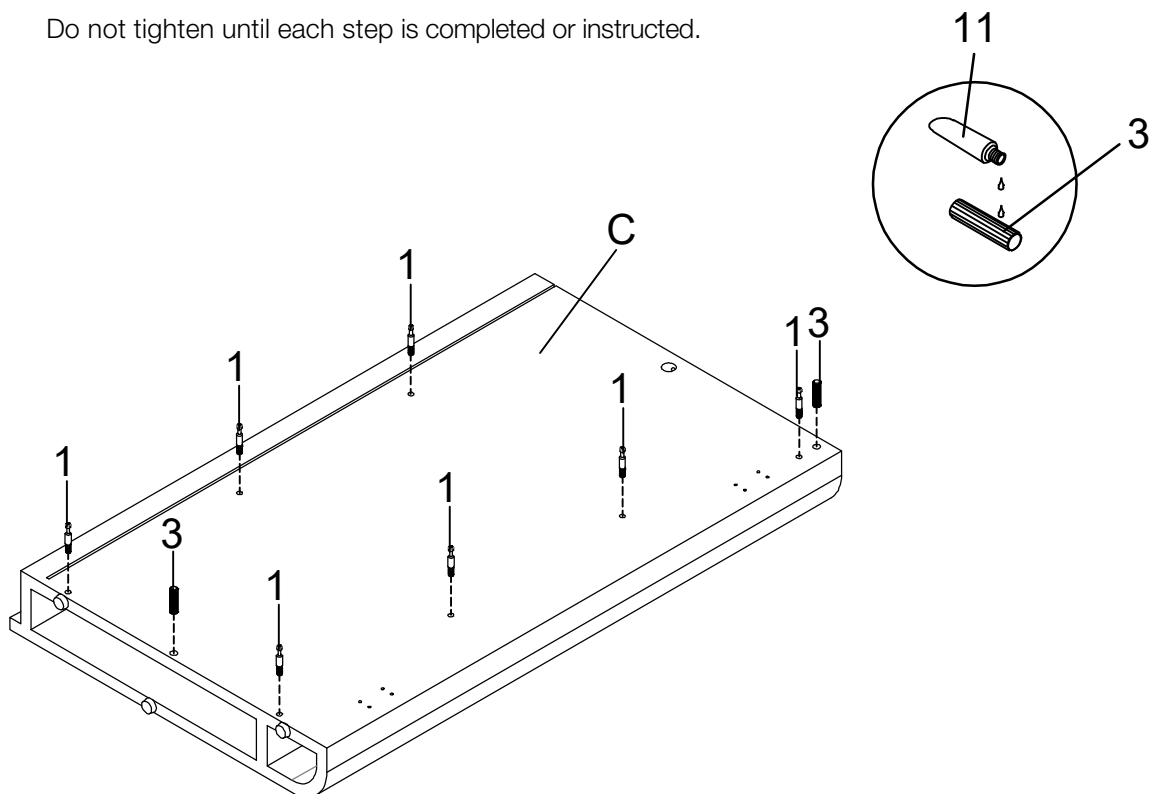


# ASSEMBLY INSTRUCTIONS

## STEP 2

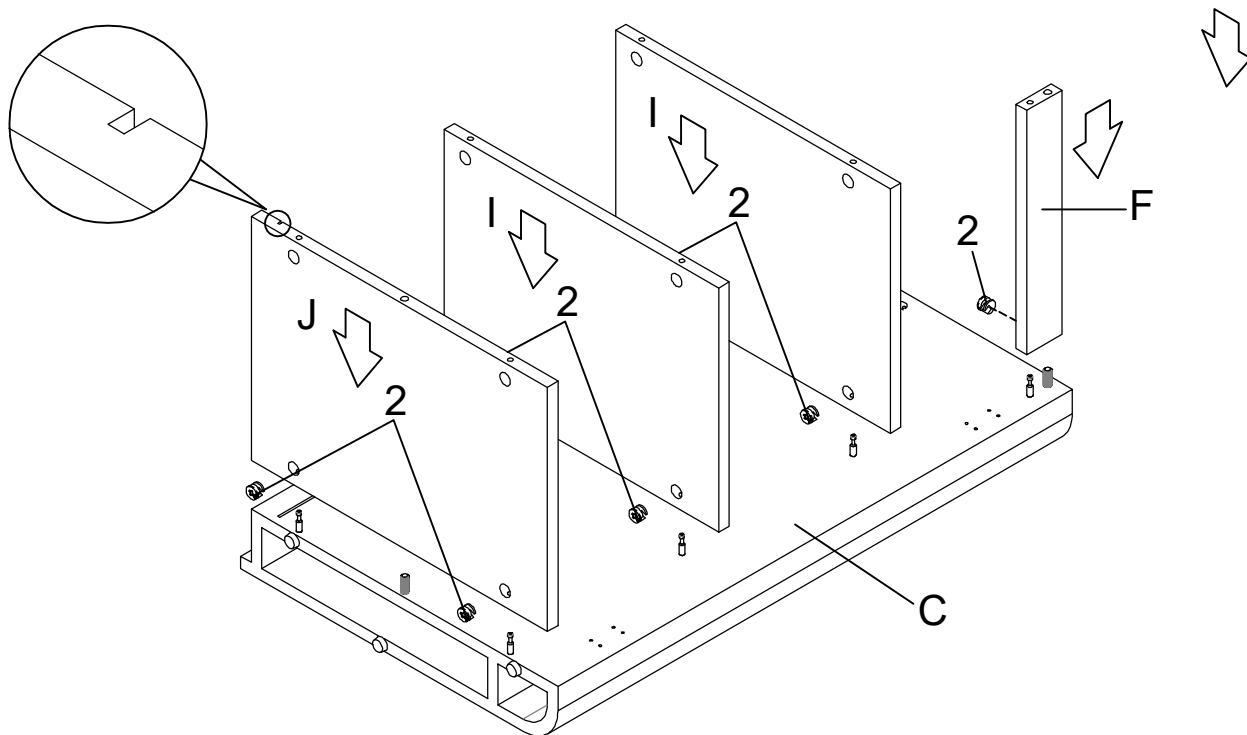


## STEP 3

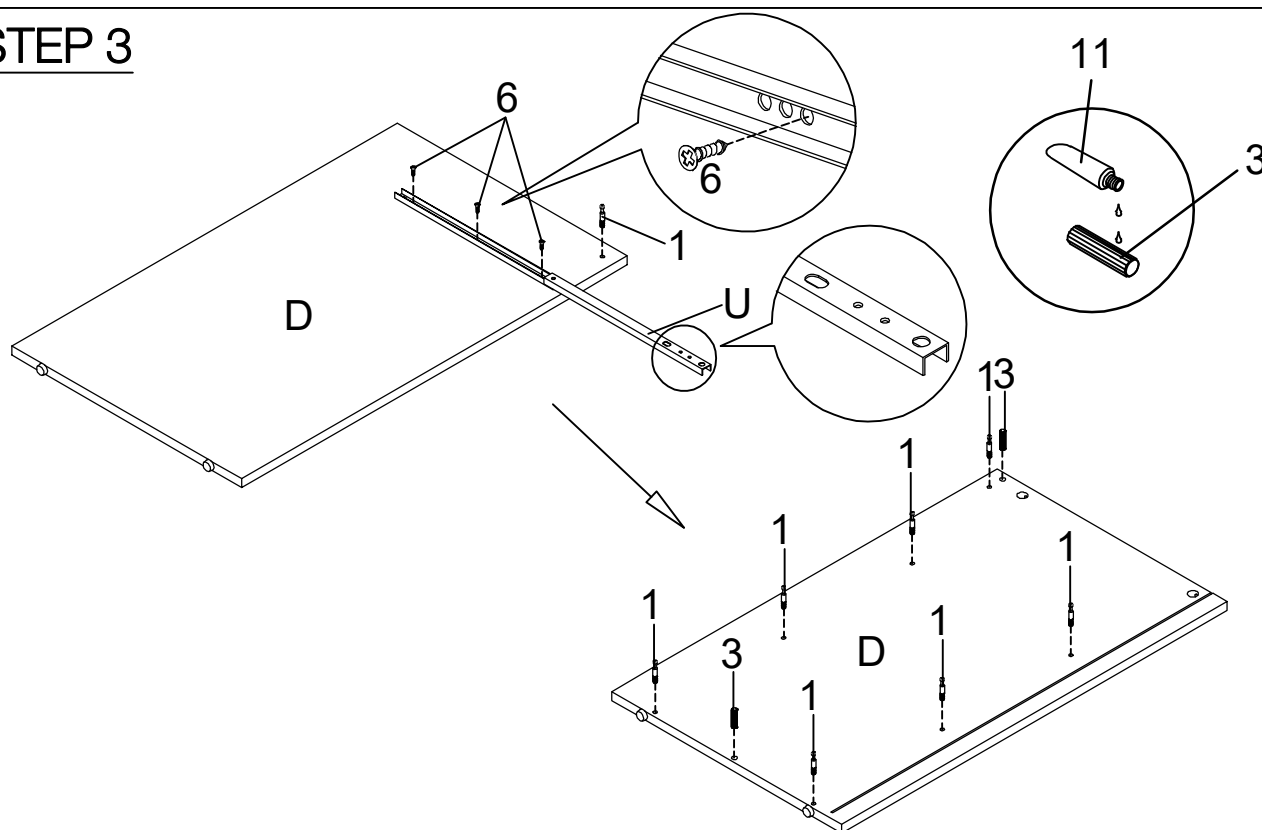


# ASSEMBLY INSTRUCTIONS

## STEP 4

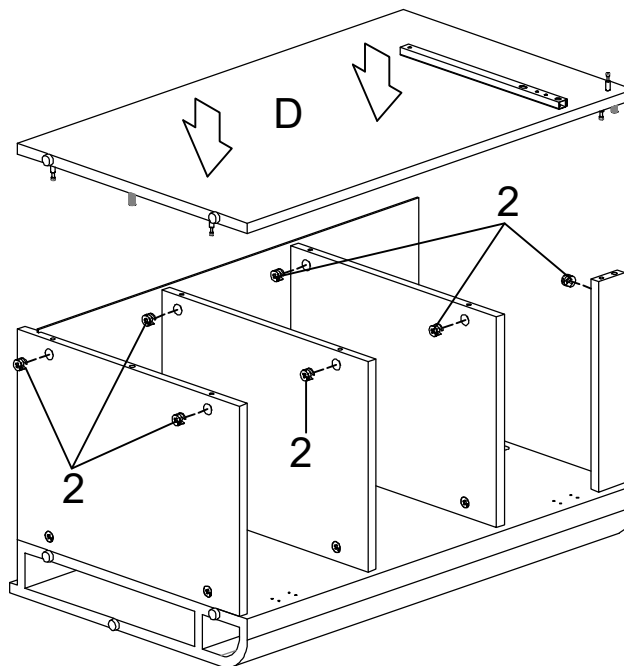


## STEP 5

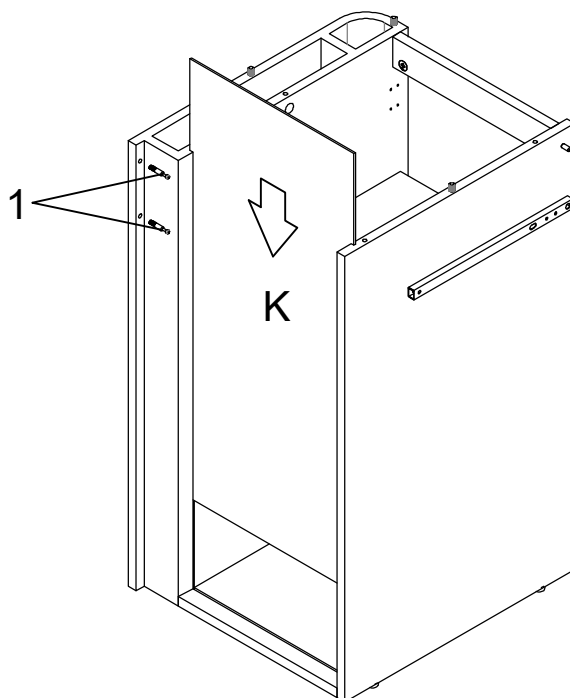


# ASSEMBLY INSTRUCTIONS

## STEP 6

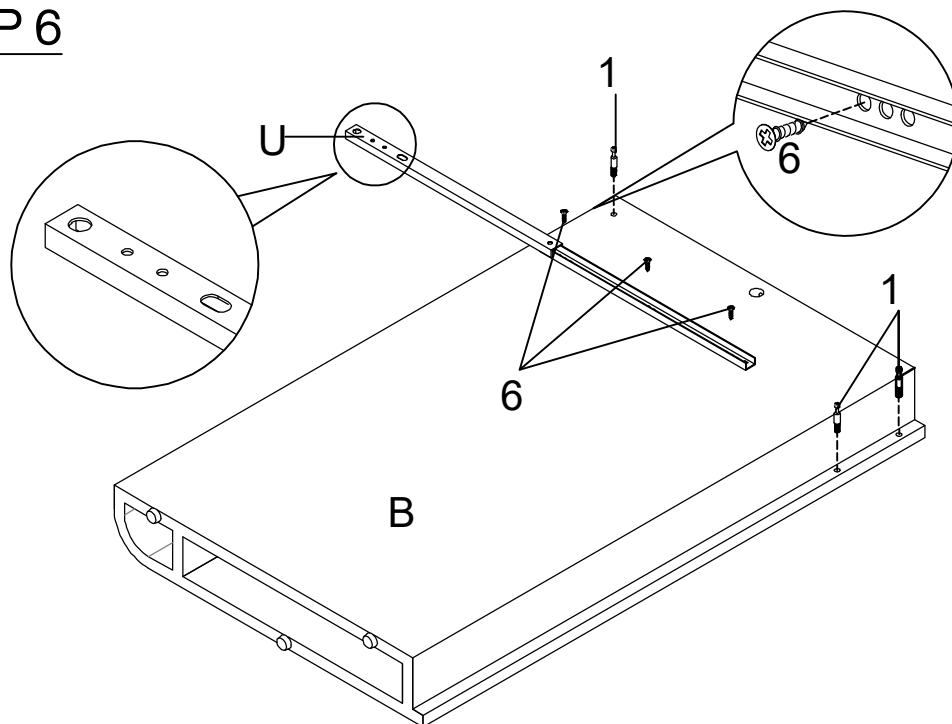


## STEP 7

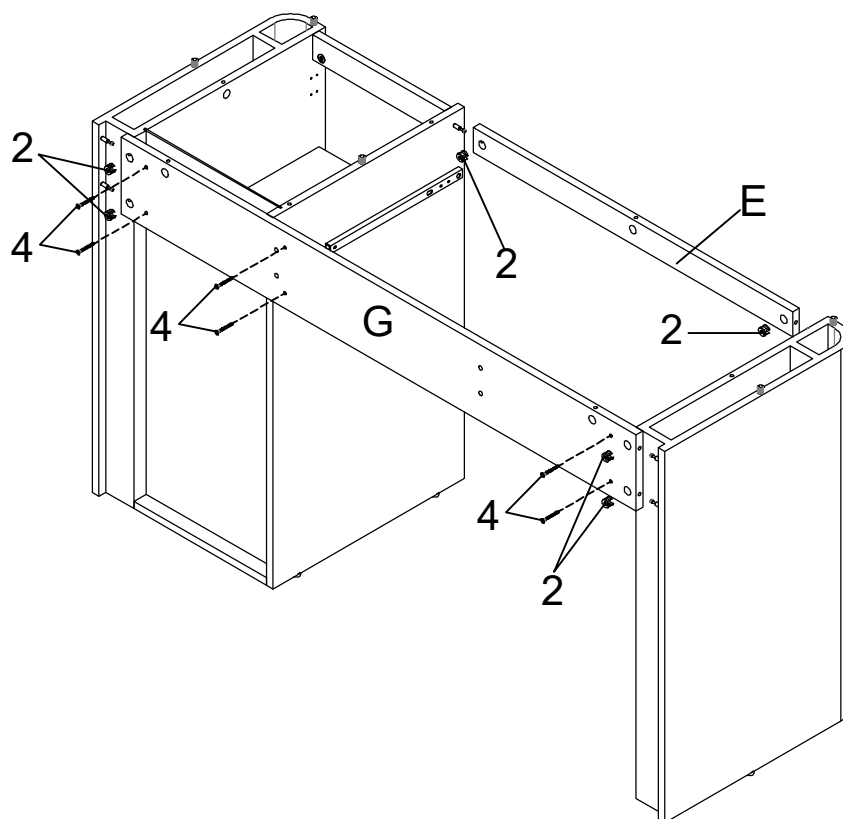


# ASSEMBLY INSTRUCTIONS

## STEP 8

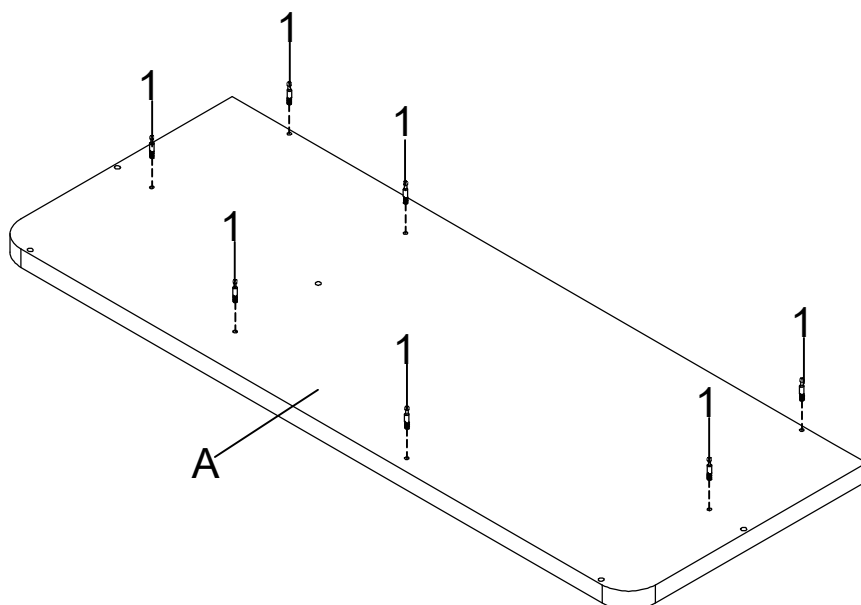


## STEP 9

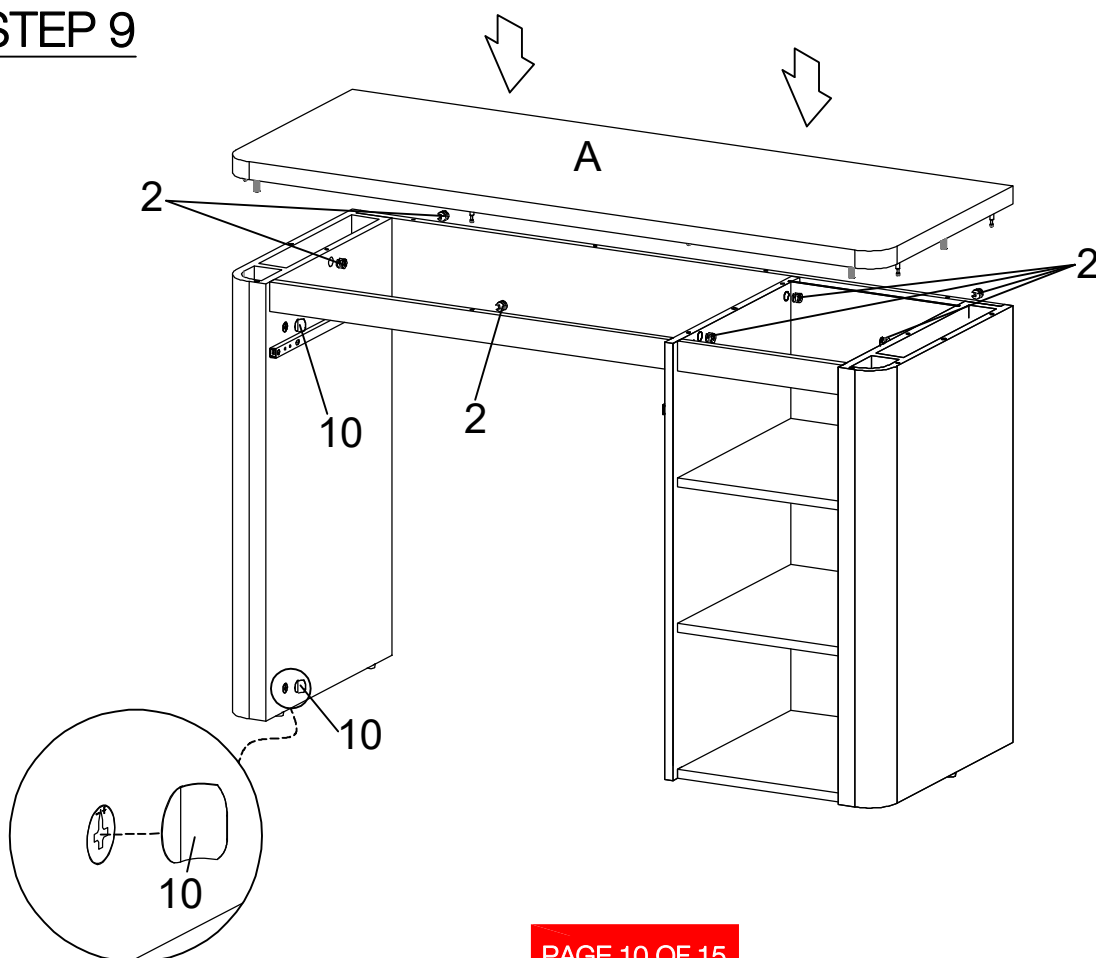


# ASSEMBLY INSTRUCTIONS

## STEP 10

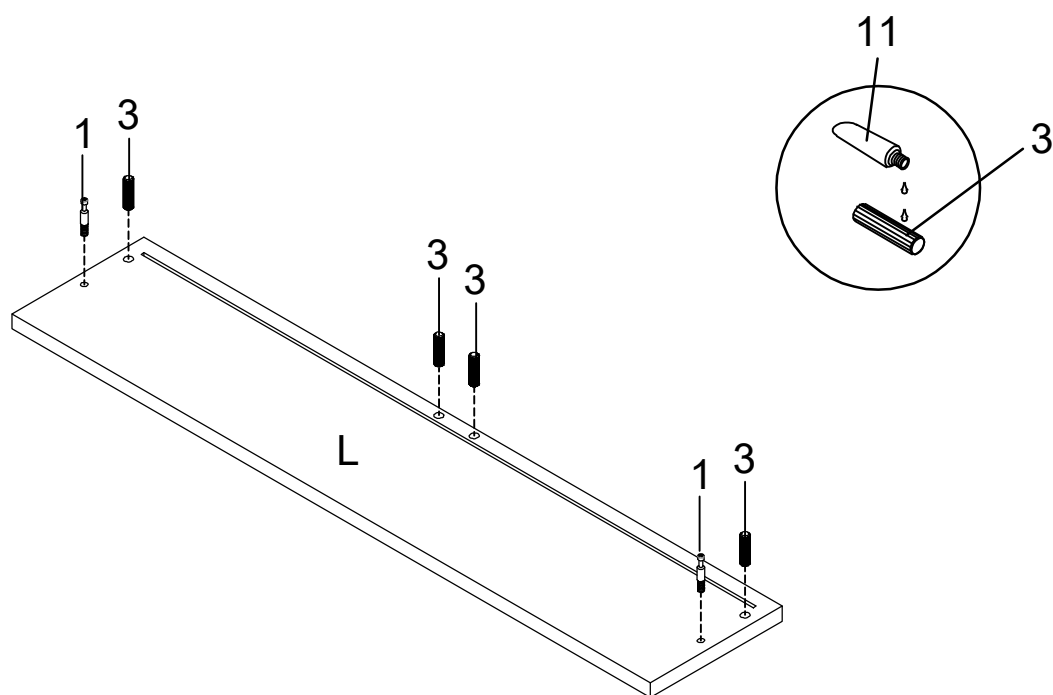


## STEP 11

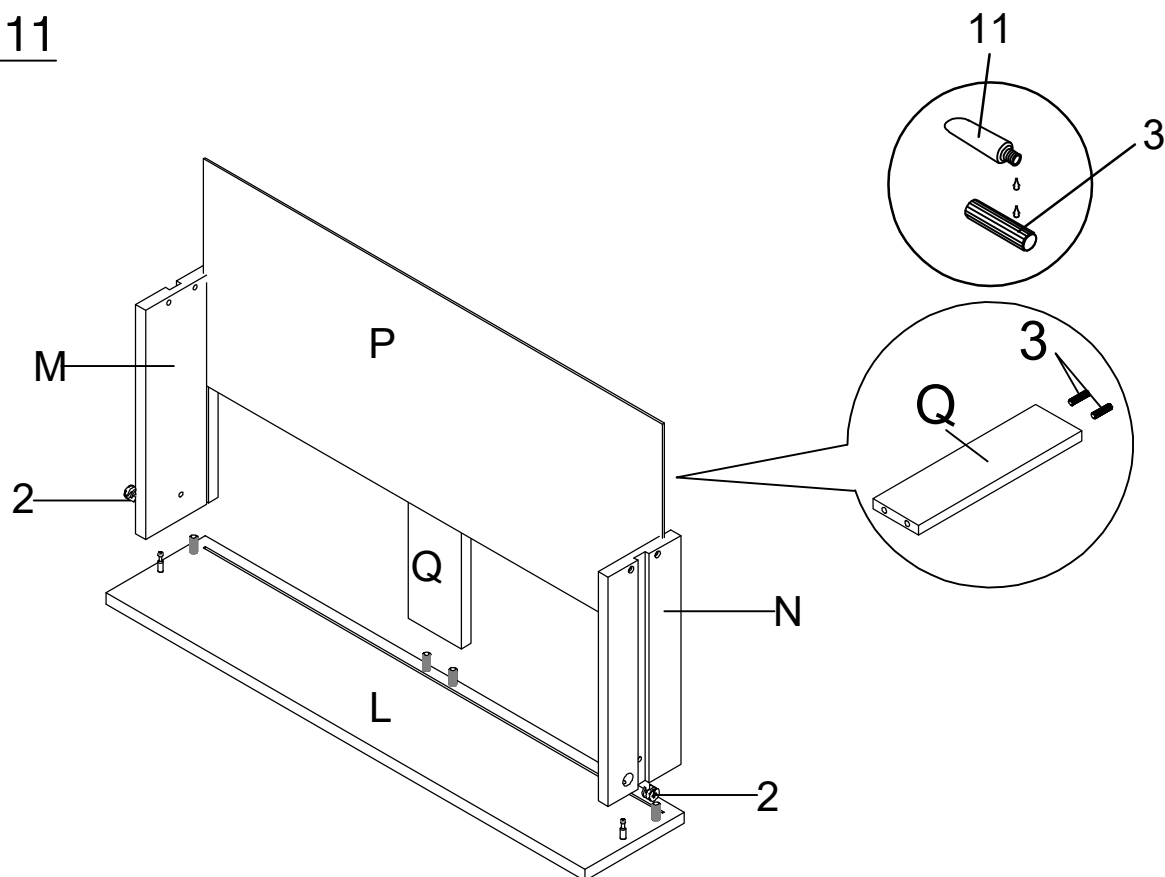


# ASSEMBLY INSTRUCTIONS

## STEP 12


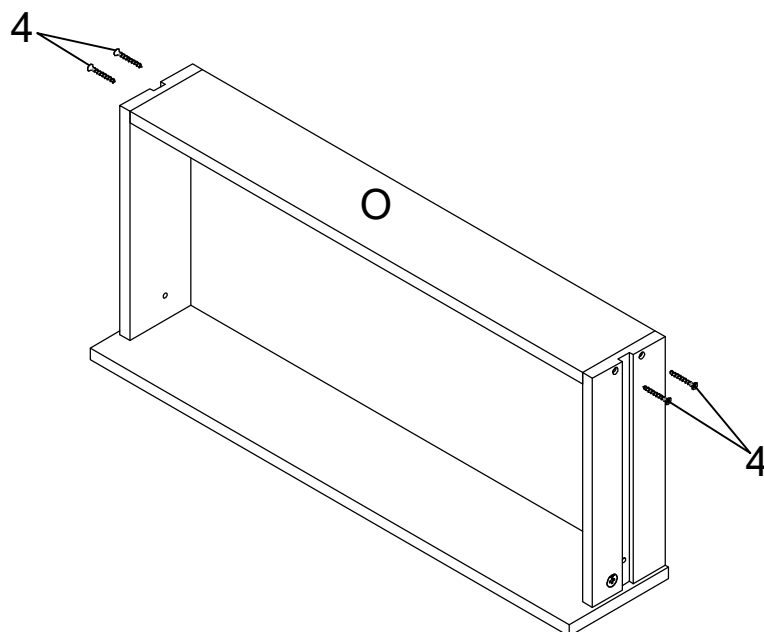


## STEP 13


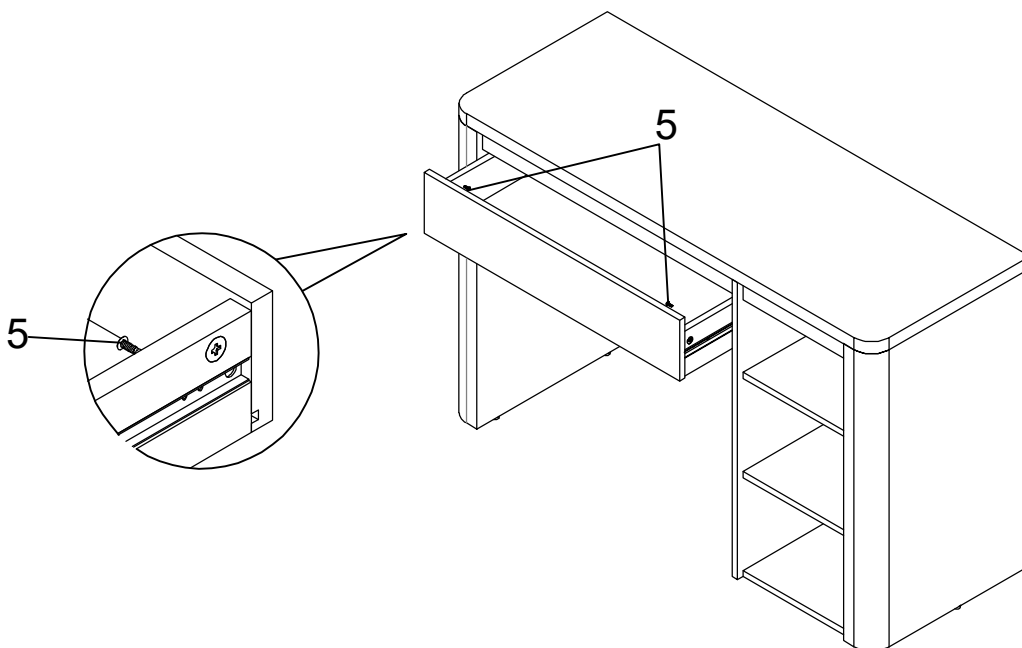


# ASSEMBLY INSTRUCTIONS

## STEP 14

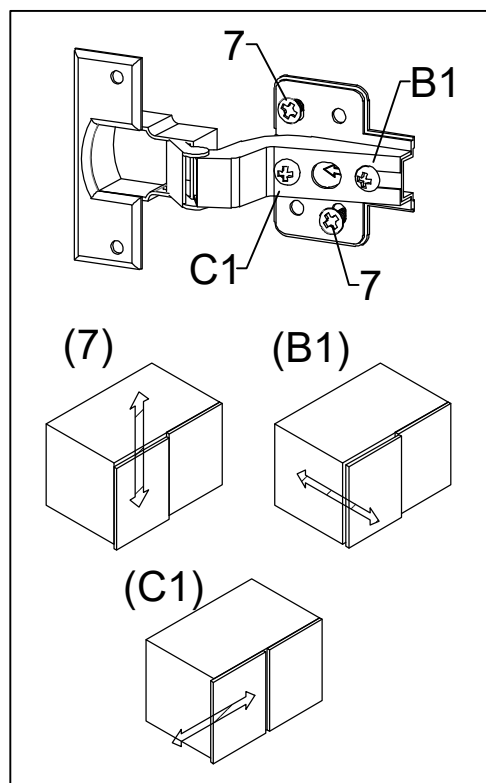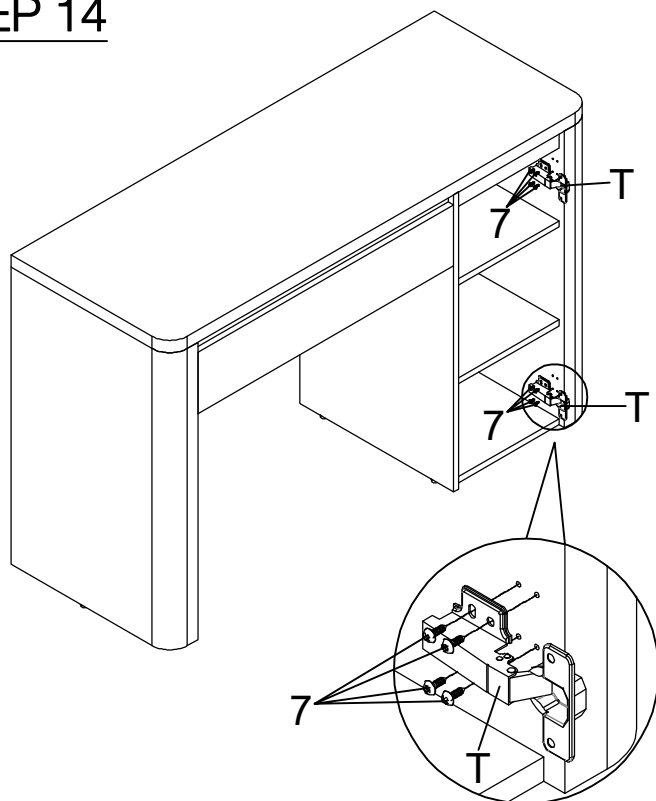


## STEP 15

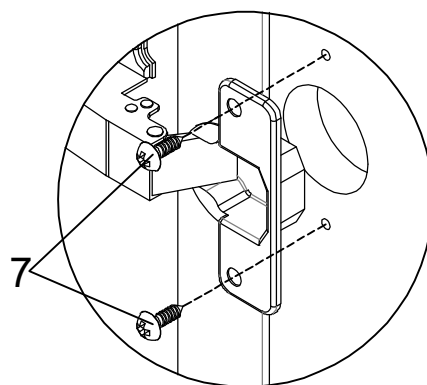
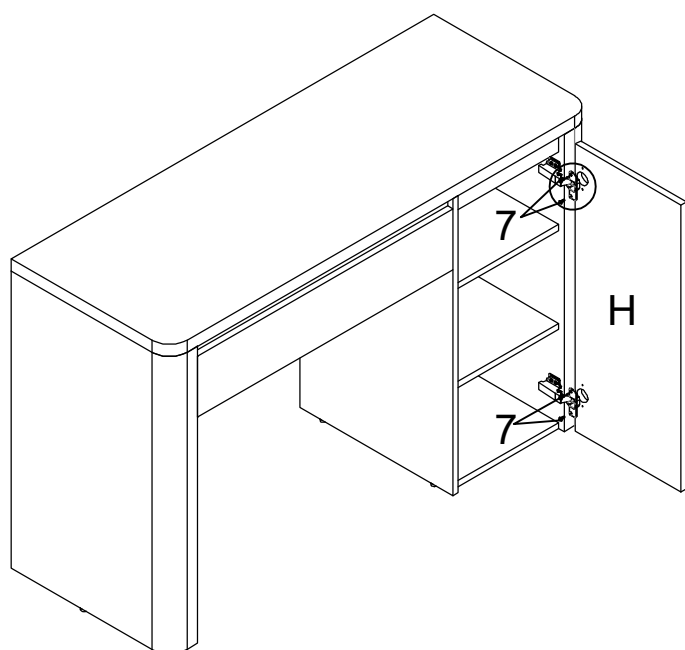


# ASSEMBLY INSTRUCTIONS


## STEP 16

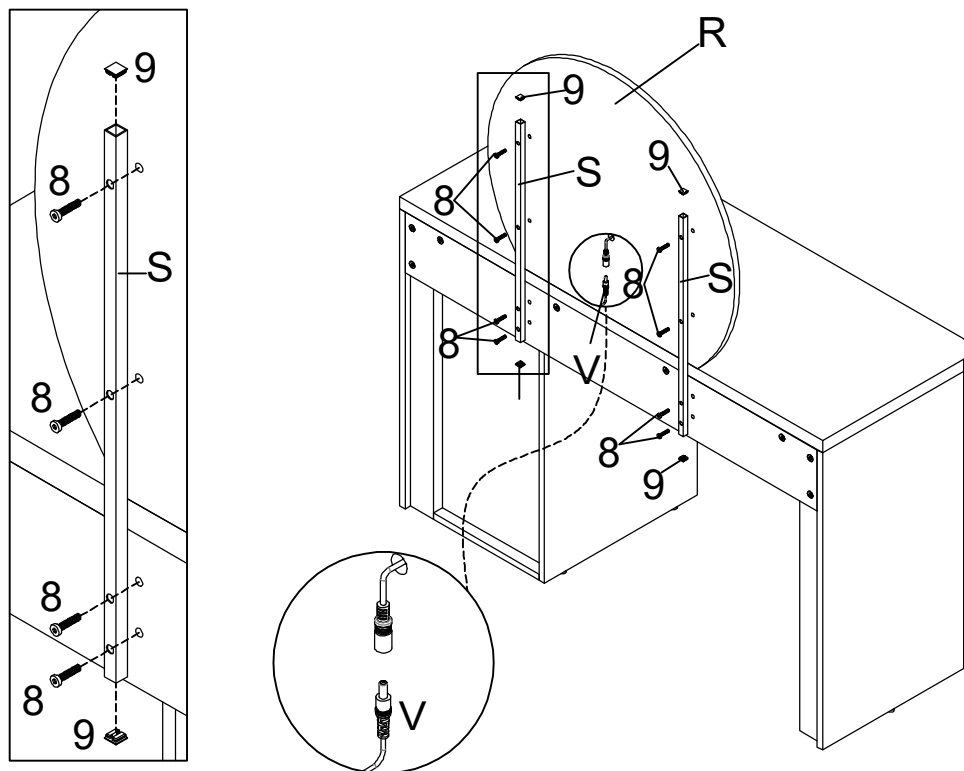

## STEP 17 COMPLETE

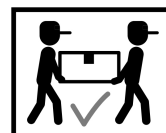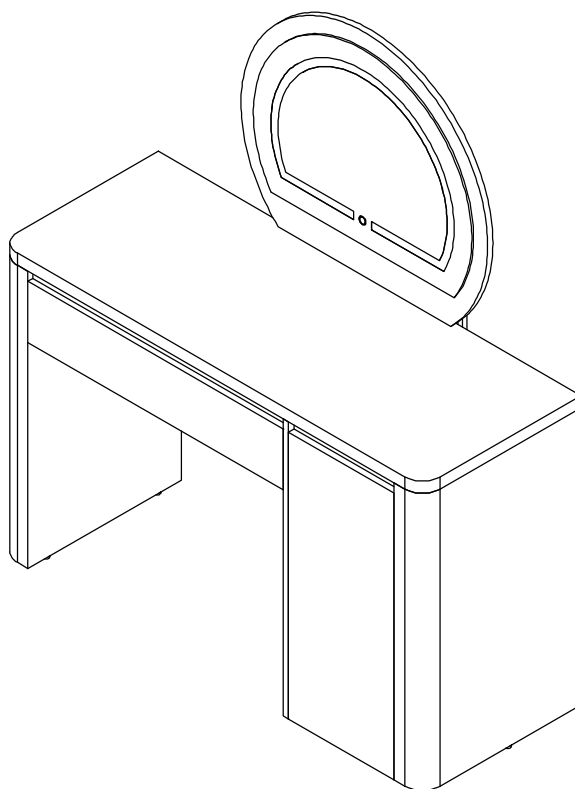

# ASSEMBLY INSTRUCTIONS

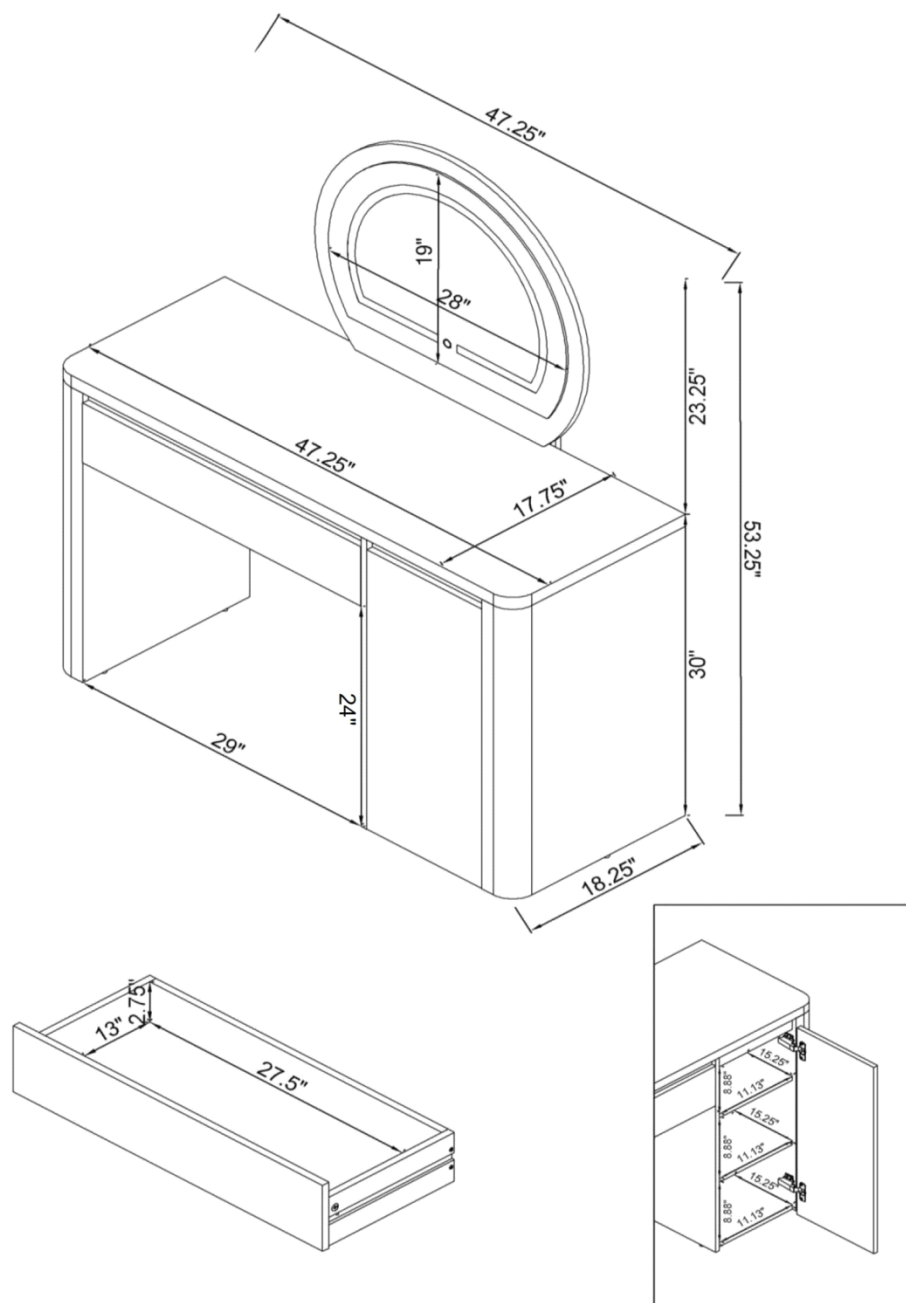

Note : Dimension tolerance  $\pm 5\%$