


OUTDOOR PRIVACY SCREEN

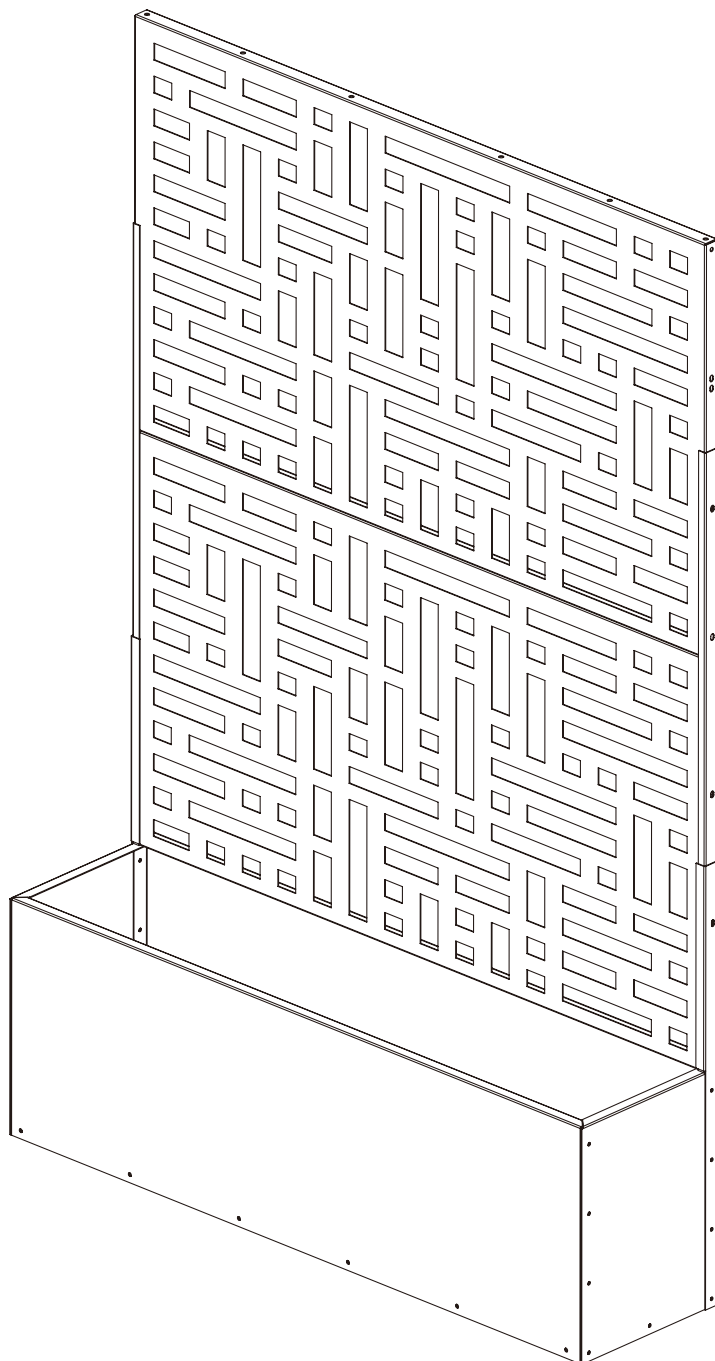





If the privacy screen will be used in a strong wind area, we highly recommend you using four Hex-Head Sleeve Anchors to fix the privacy screen on solid ground.

Before assembling, we recommend:


1. Wear Gloves.

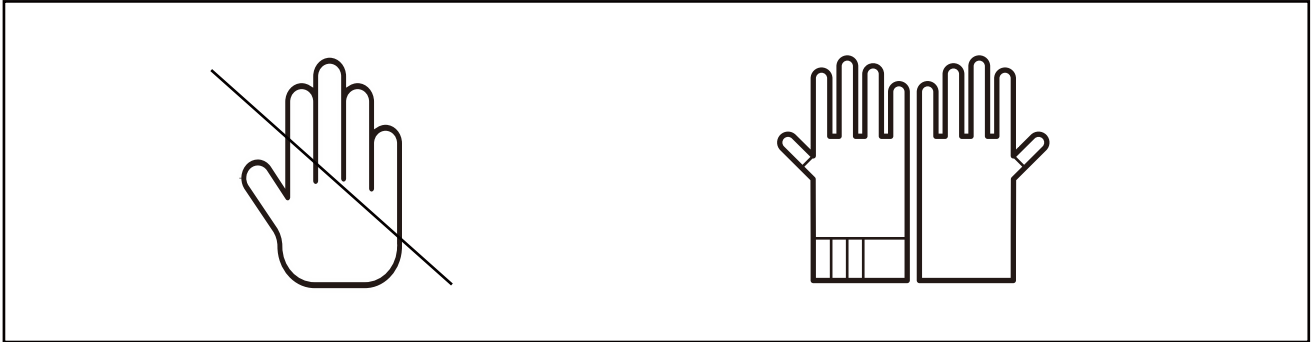


2. Ask for a Helping Hand.

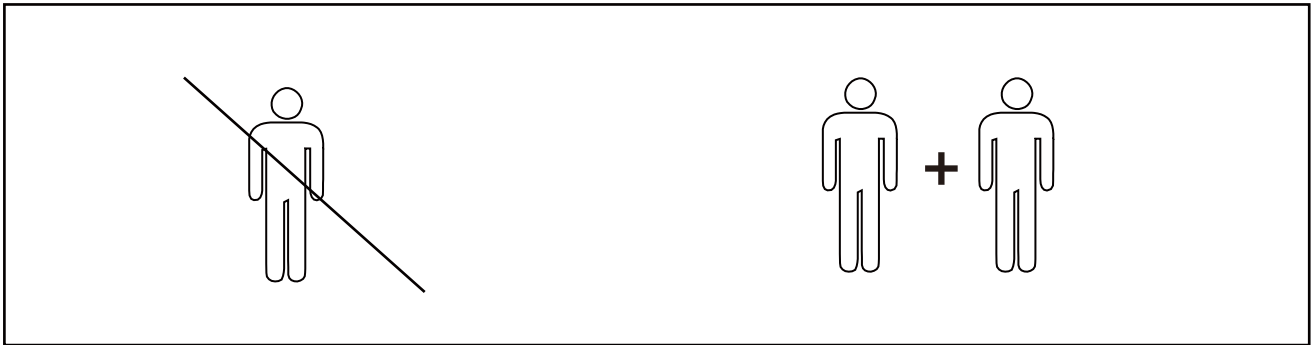

PART LIST

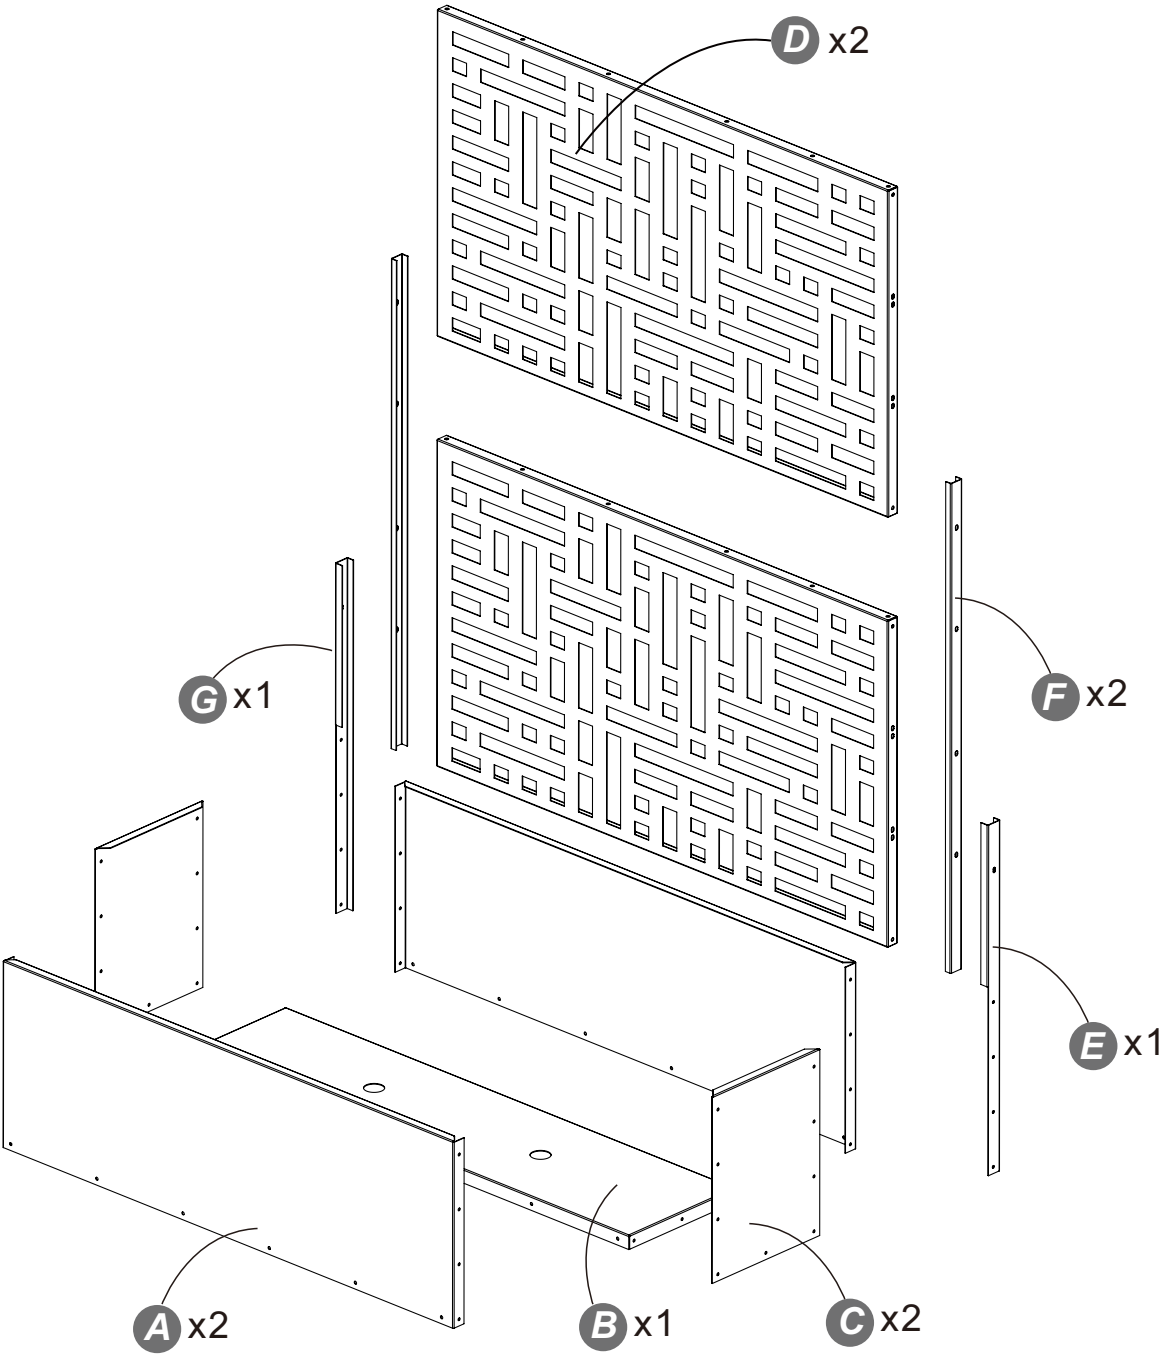

1  M6x12mm x46	2  M6 x46
---	--

STEP

1

1




12Pcs

2




12Pcs

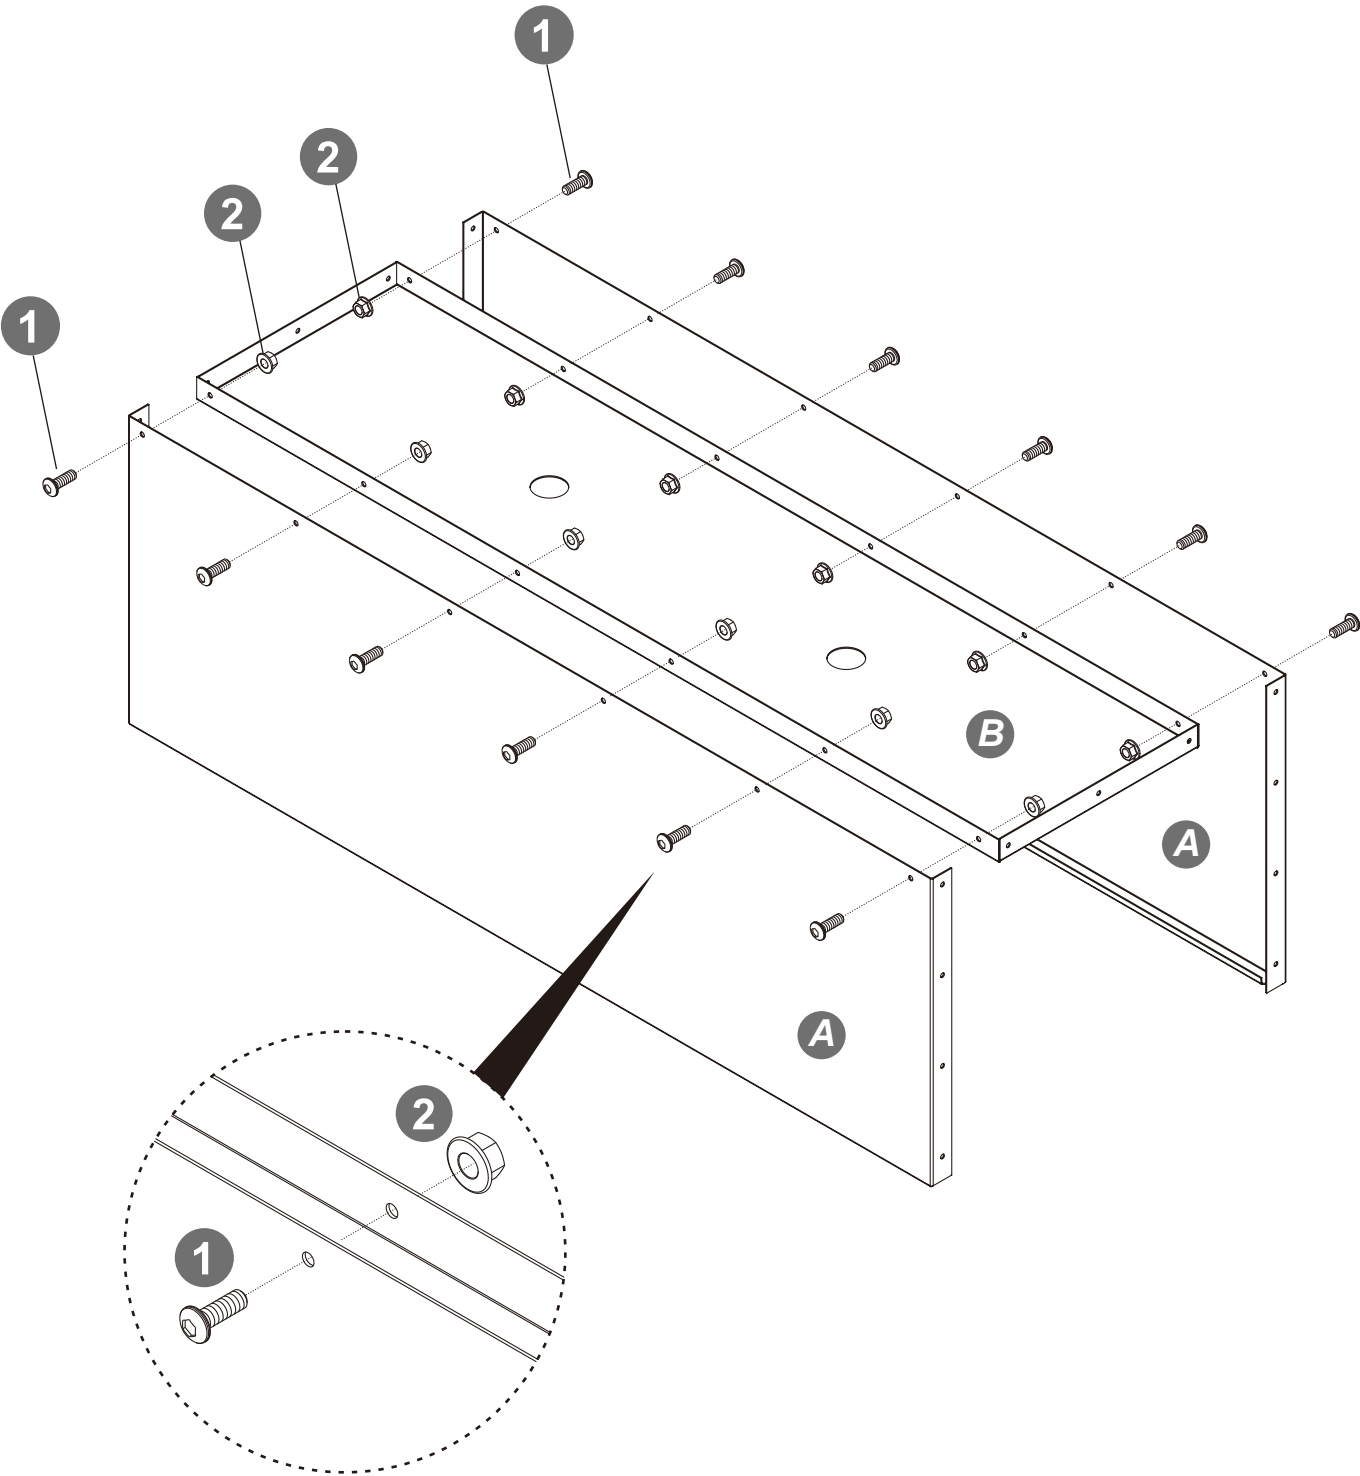

STEP


2

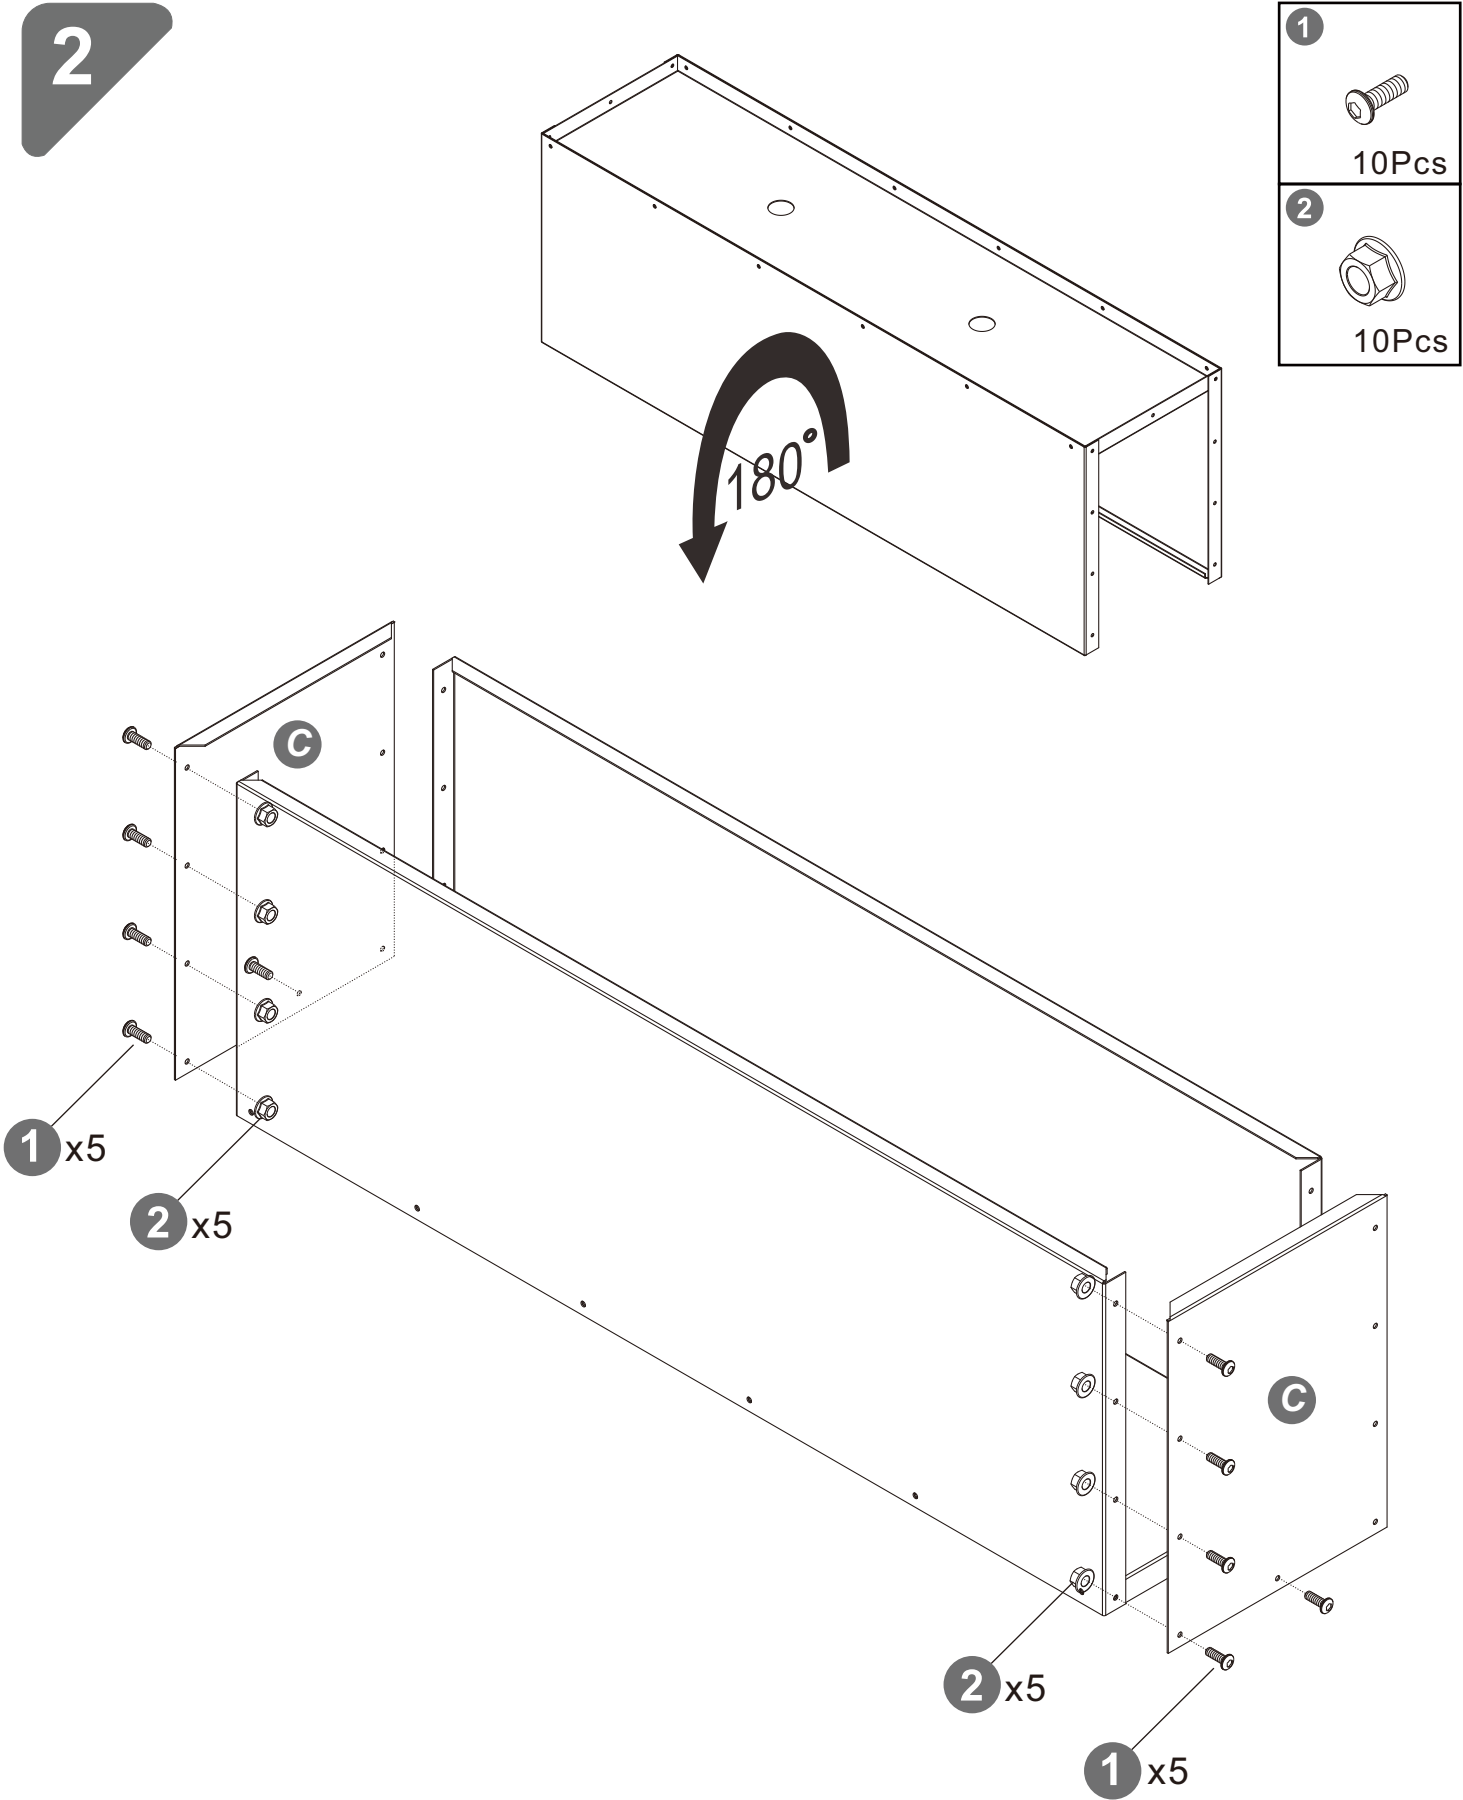

STEP


3

1		8Pcs
2		8Pcs

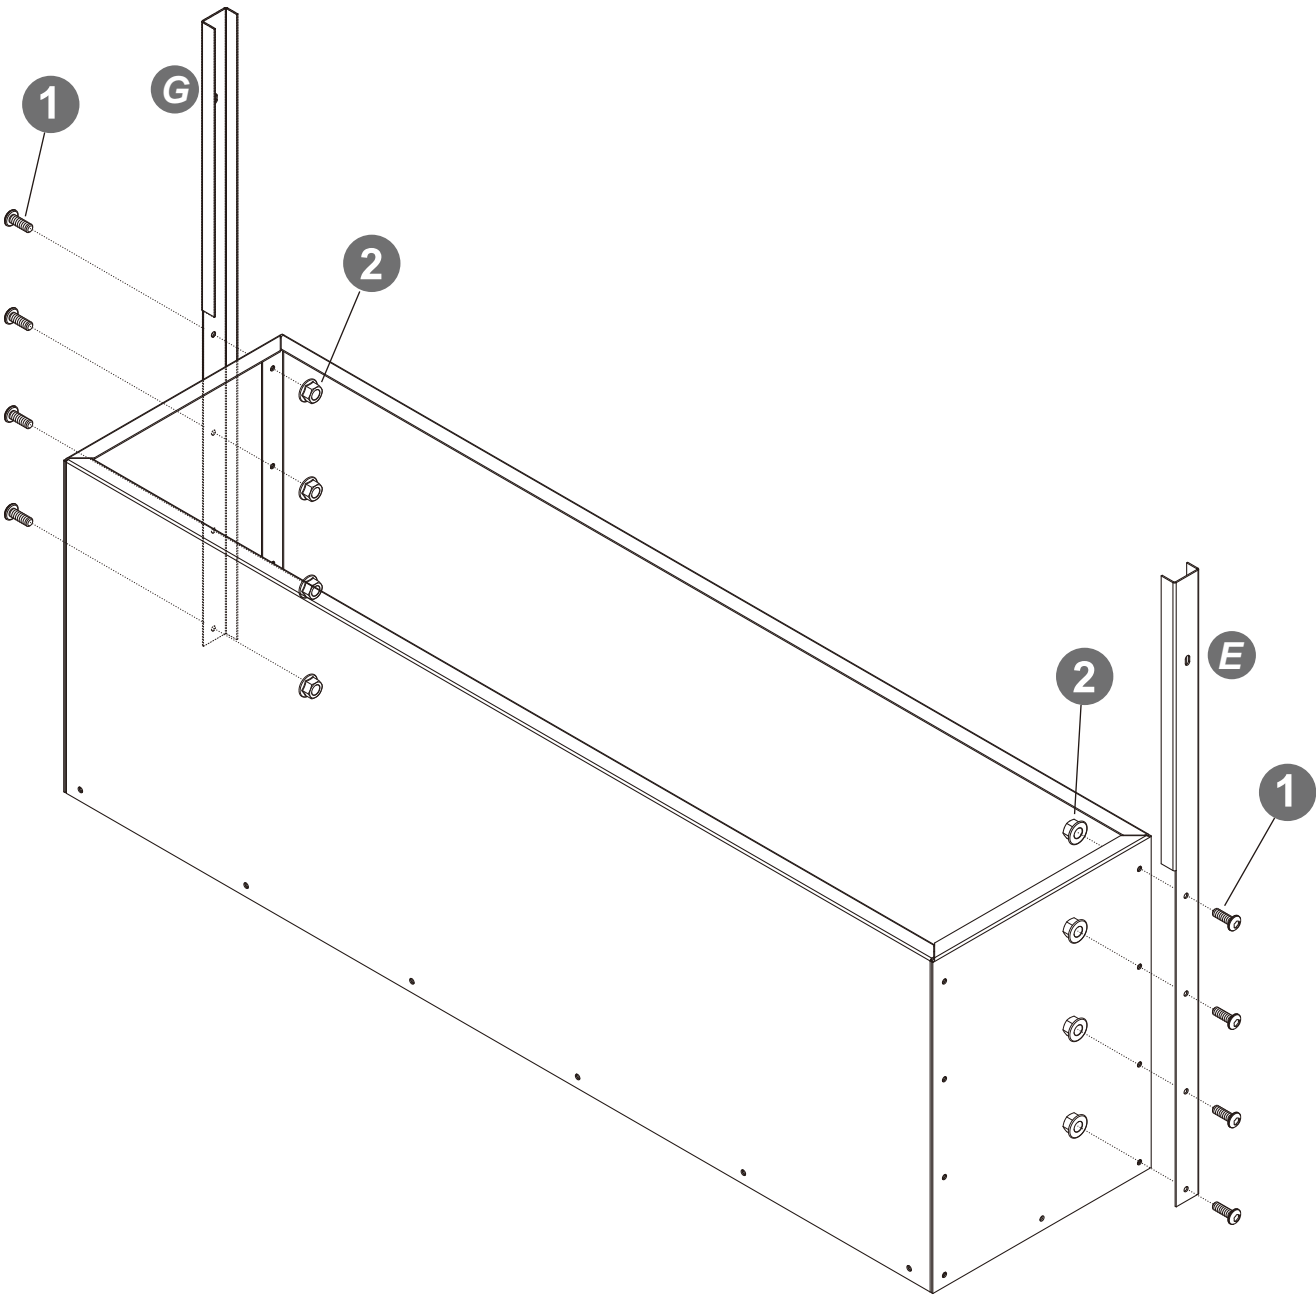

STEP


4

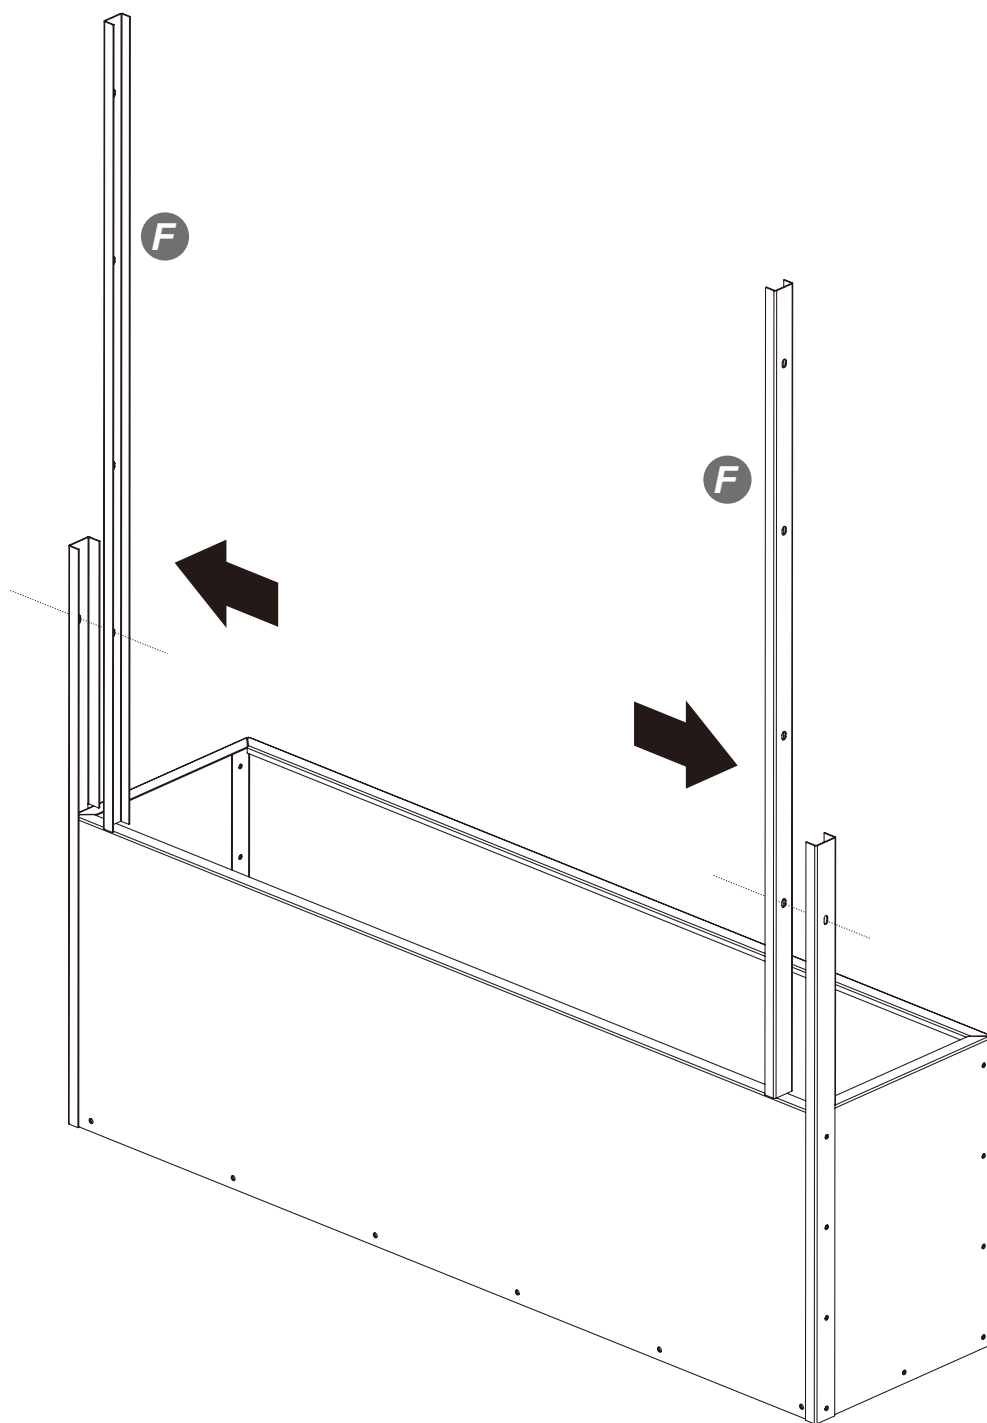

STEP


5

1		4Pcs
2		4Pcs

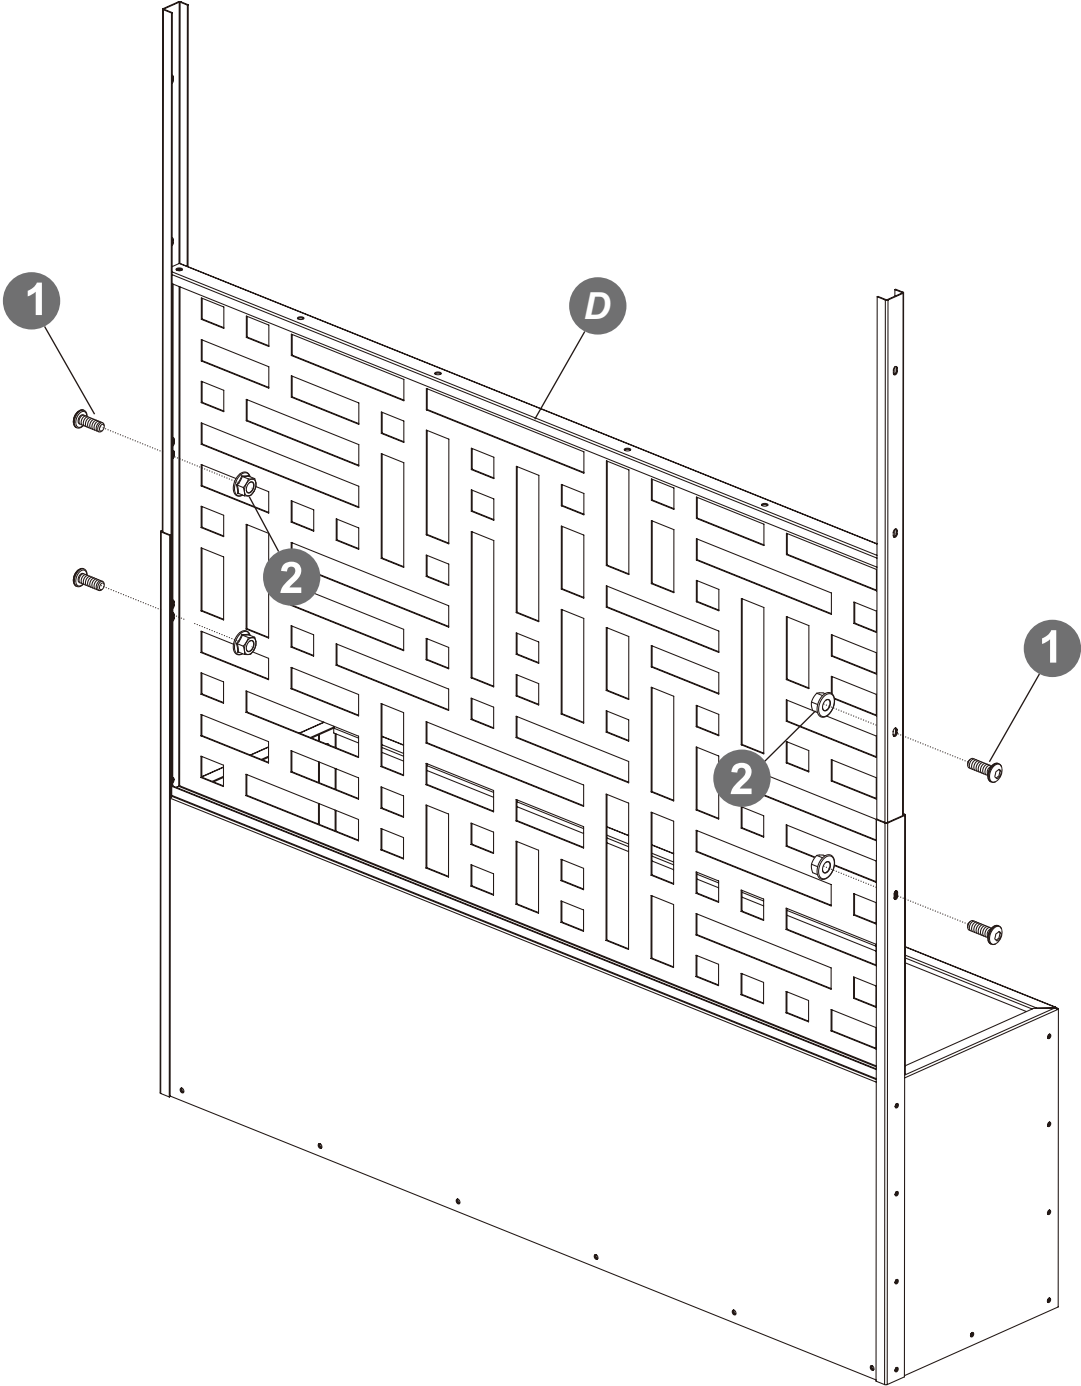

STEP

6

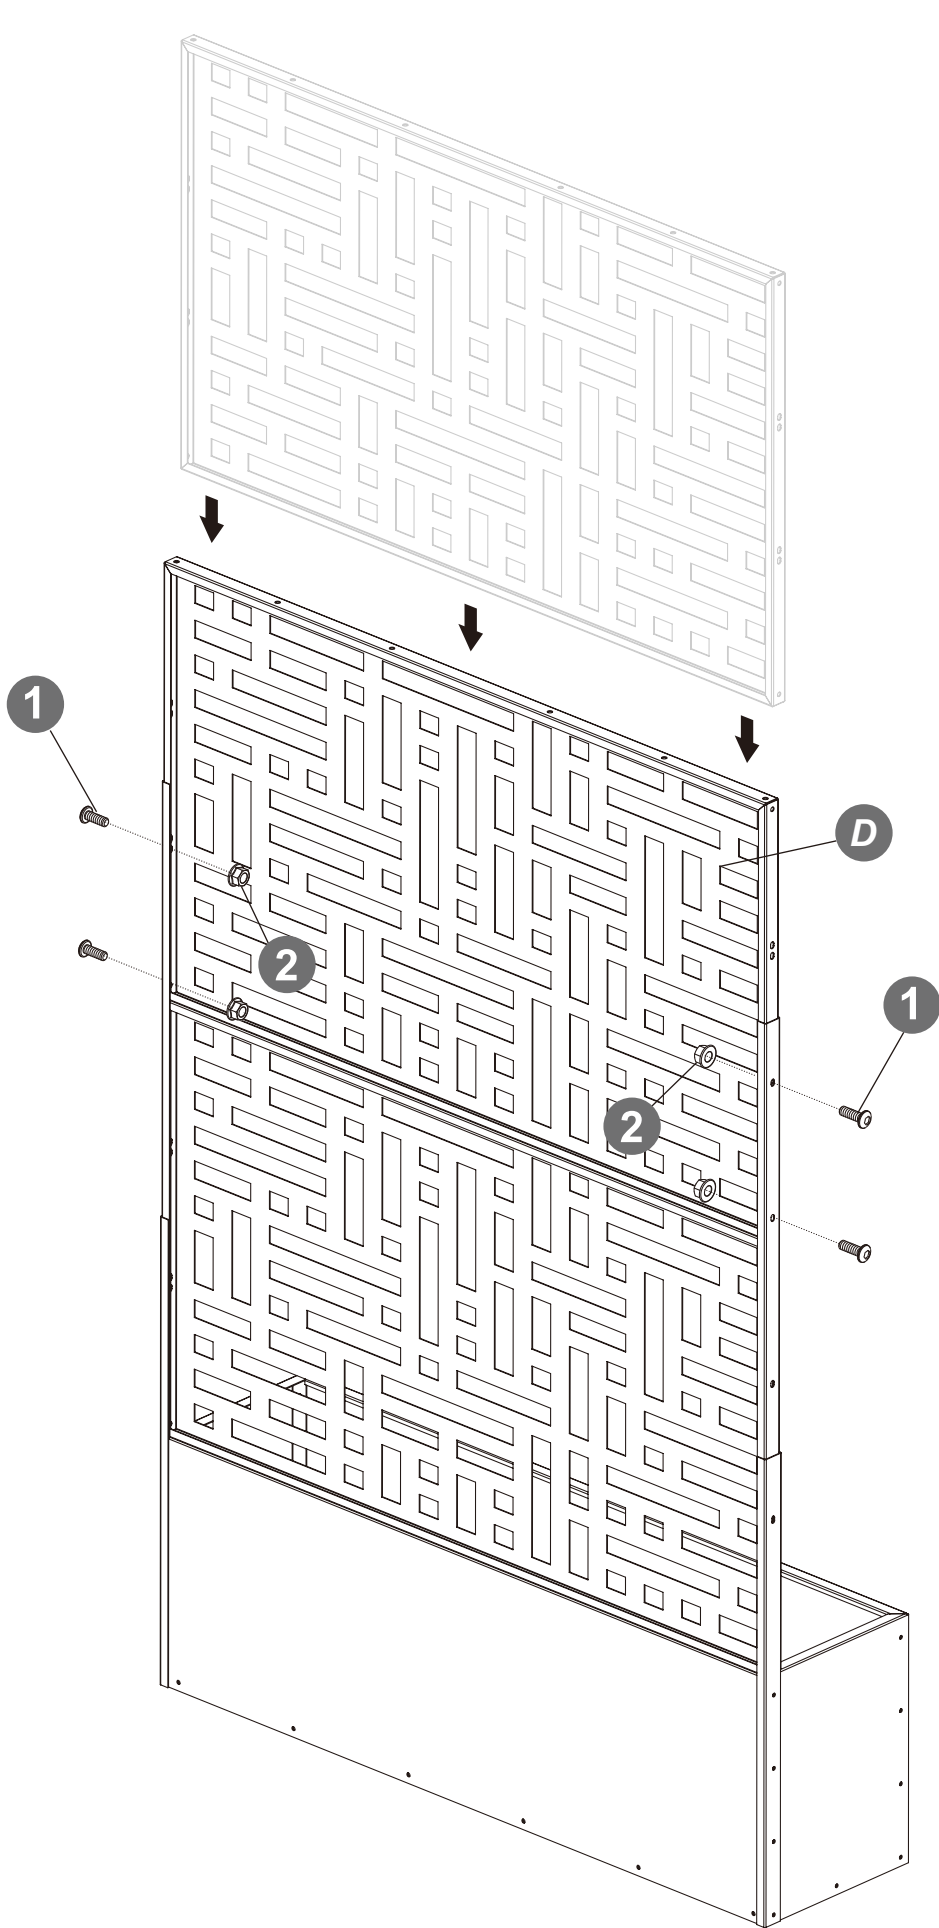

- | | | |
|---|---|------|
| 1 |  | 4Pcs |
| 2 |  | 4Pcs |

STEP

7

1



6Pcs

2



6Pcs

