
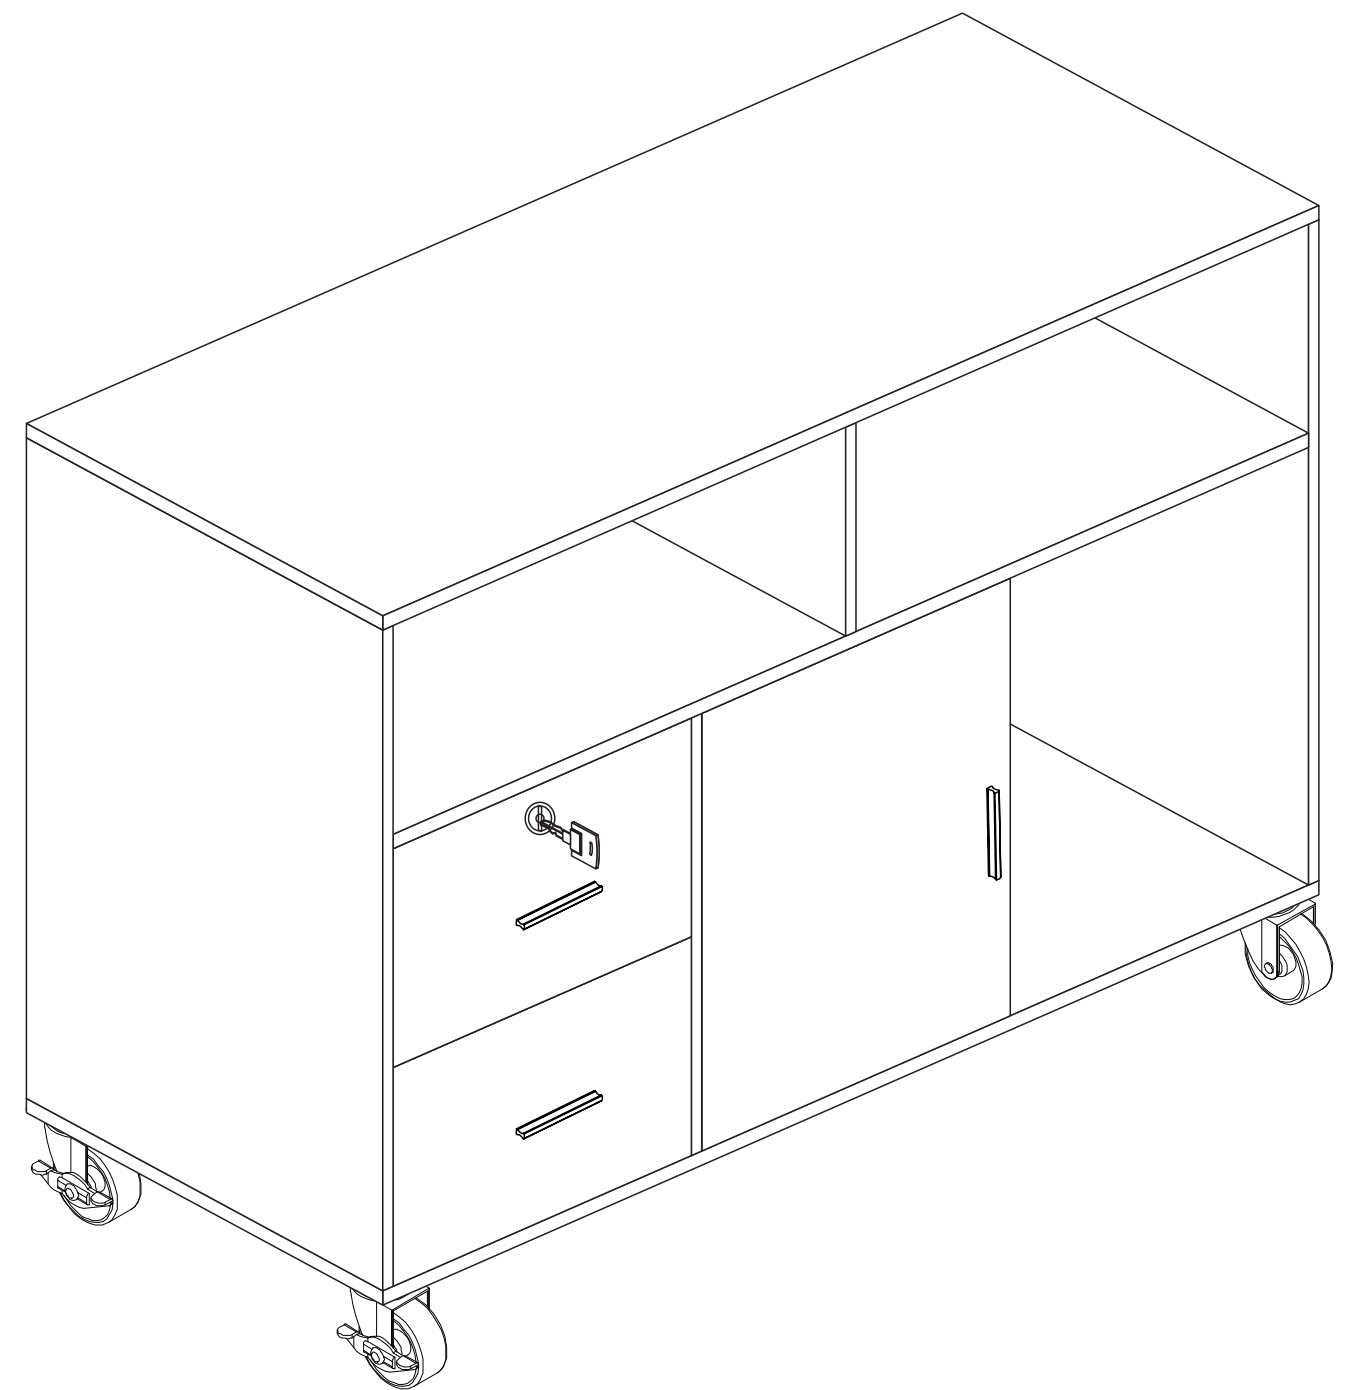
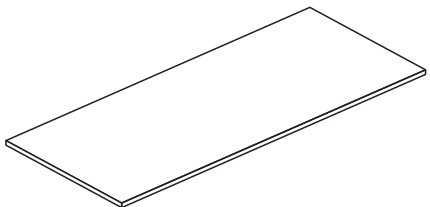
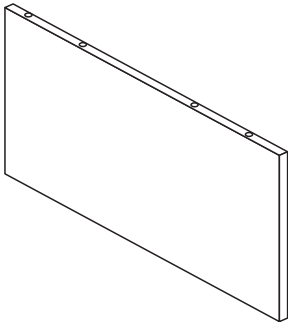
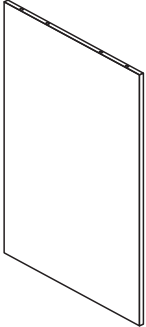
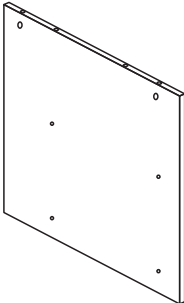
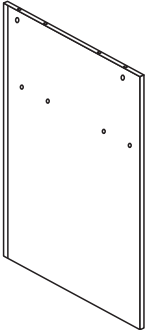
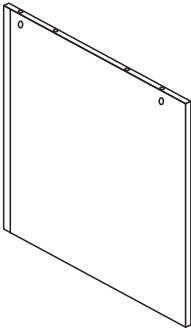
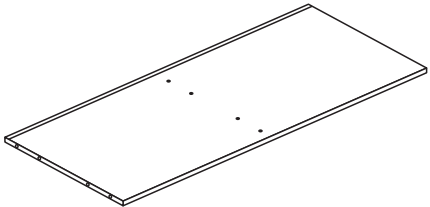


ASSEMBLY INSTRUCTIONS










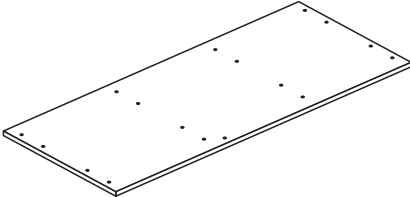


MOBILE 2-DRAWER LATERAL FILING CABINET











ASSEMBLY INSTRUCTIONS

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		X 1	E		X 1
B		X 1	F		X 1
C		X 1	G		X 1
D		X 1	H		X 1










ASSEMBLY INSTRUCTIONS

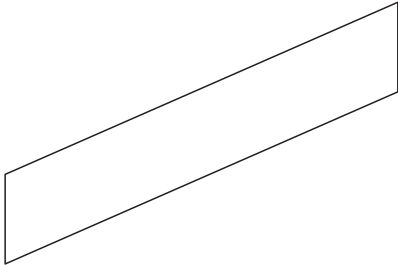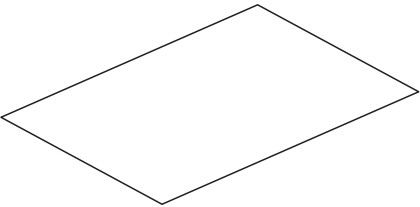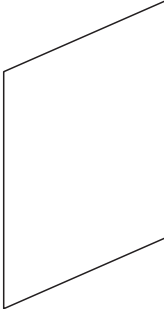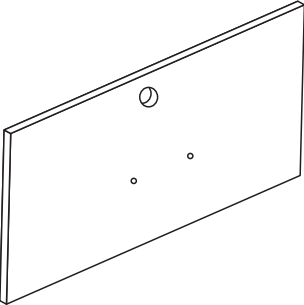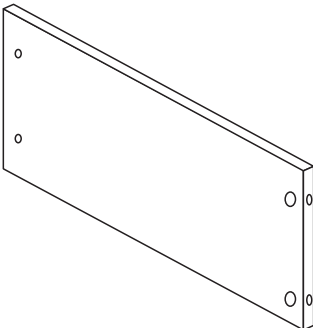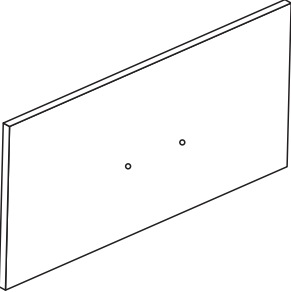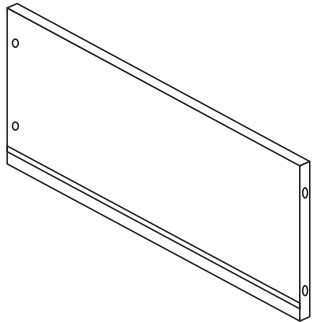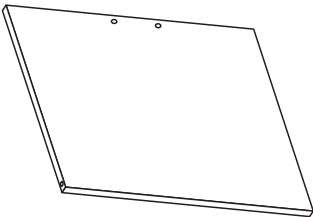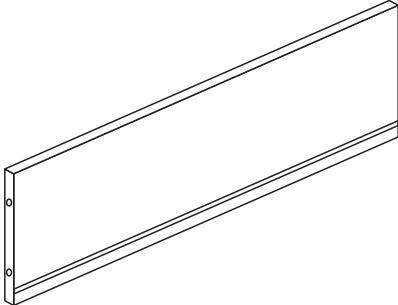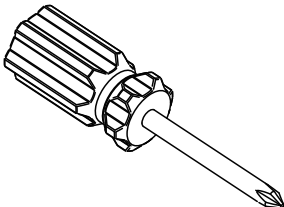Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
I		X 1	N		X 2
J		X 3	O		X 1
K		X 2	P		X 1
L		X 2	Q		X 1
M		X 2	R		X 1

ASSEMBLY INSTRUCTIONS

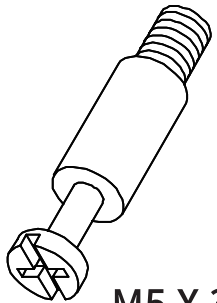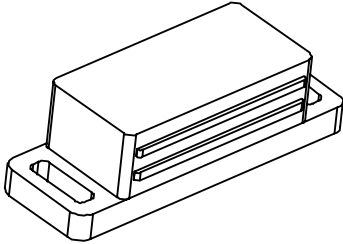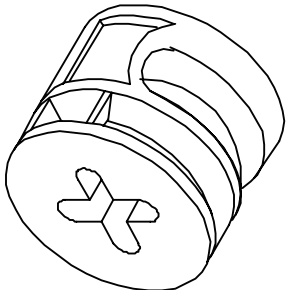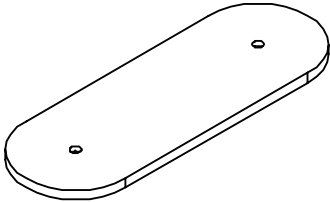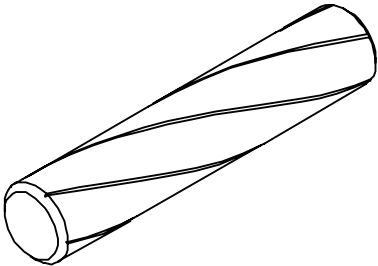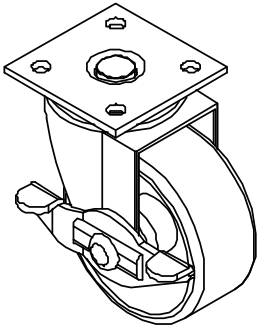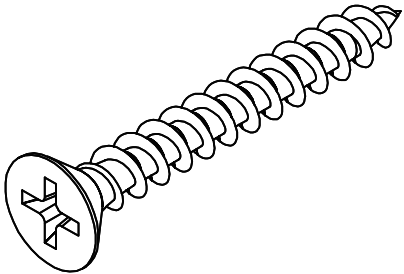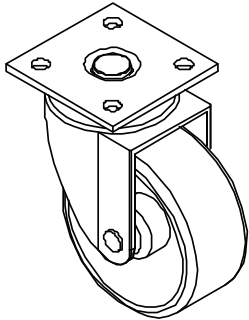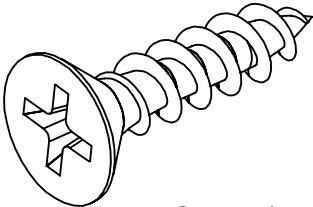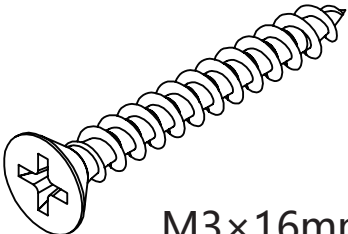Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
a	 M5 X 35mm	×24	f		X 1
b	 M12 X 9.5mm	×24	g		X 1
c	 M8X 30mm	X 24	h		X 2
d	 M4X 35mm	X 8	i		X 3
e	 M3.5×14mm	X38	p	 M3×16mm	X 6

ASSEMBLY INSTRUCTIONS

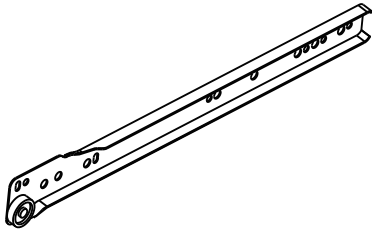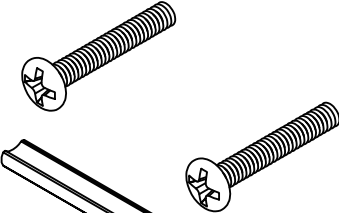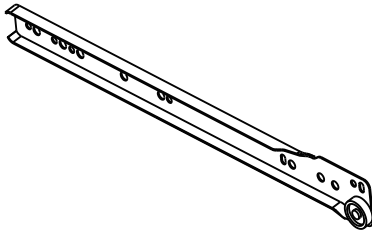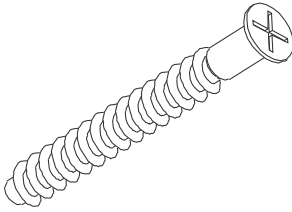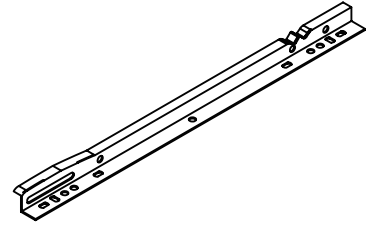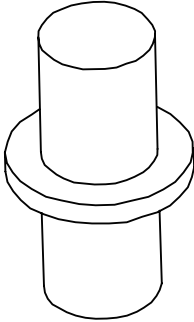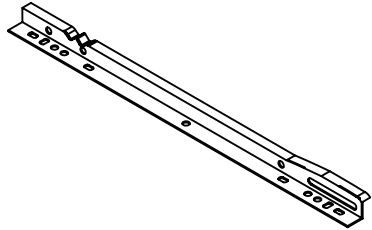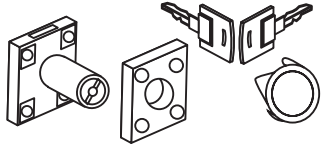
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
k	 M3X 16mm	X 8	CL		X 2
l	 M4 X 18mm	X 3	CR		X 2
m	 M6×38mm	×8	DL		X 2
n		X 2	DR		X 2
o		X 1			

ASSEMBLY INSTRUCTIONS


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

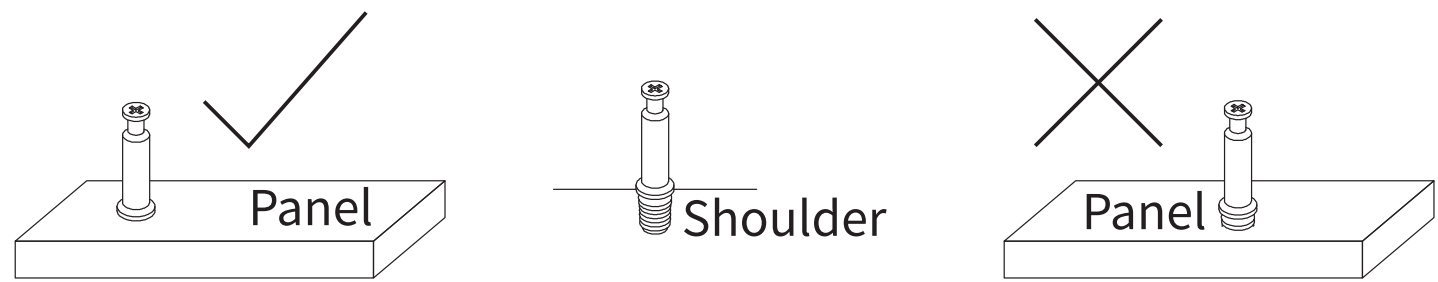



The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

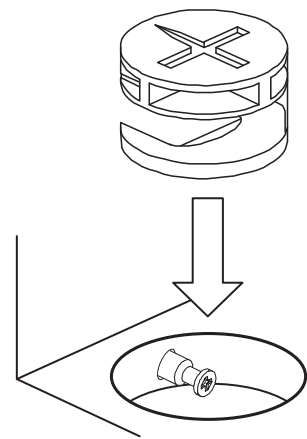

Turn the cam lock clockwise to tighten.

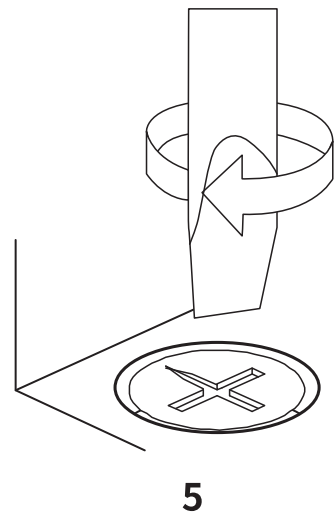


ASSEMBLY INSTRUCTIONS

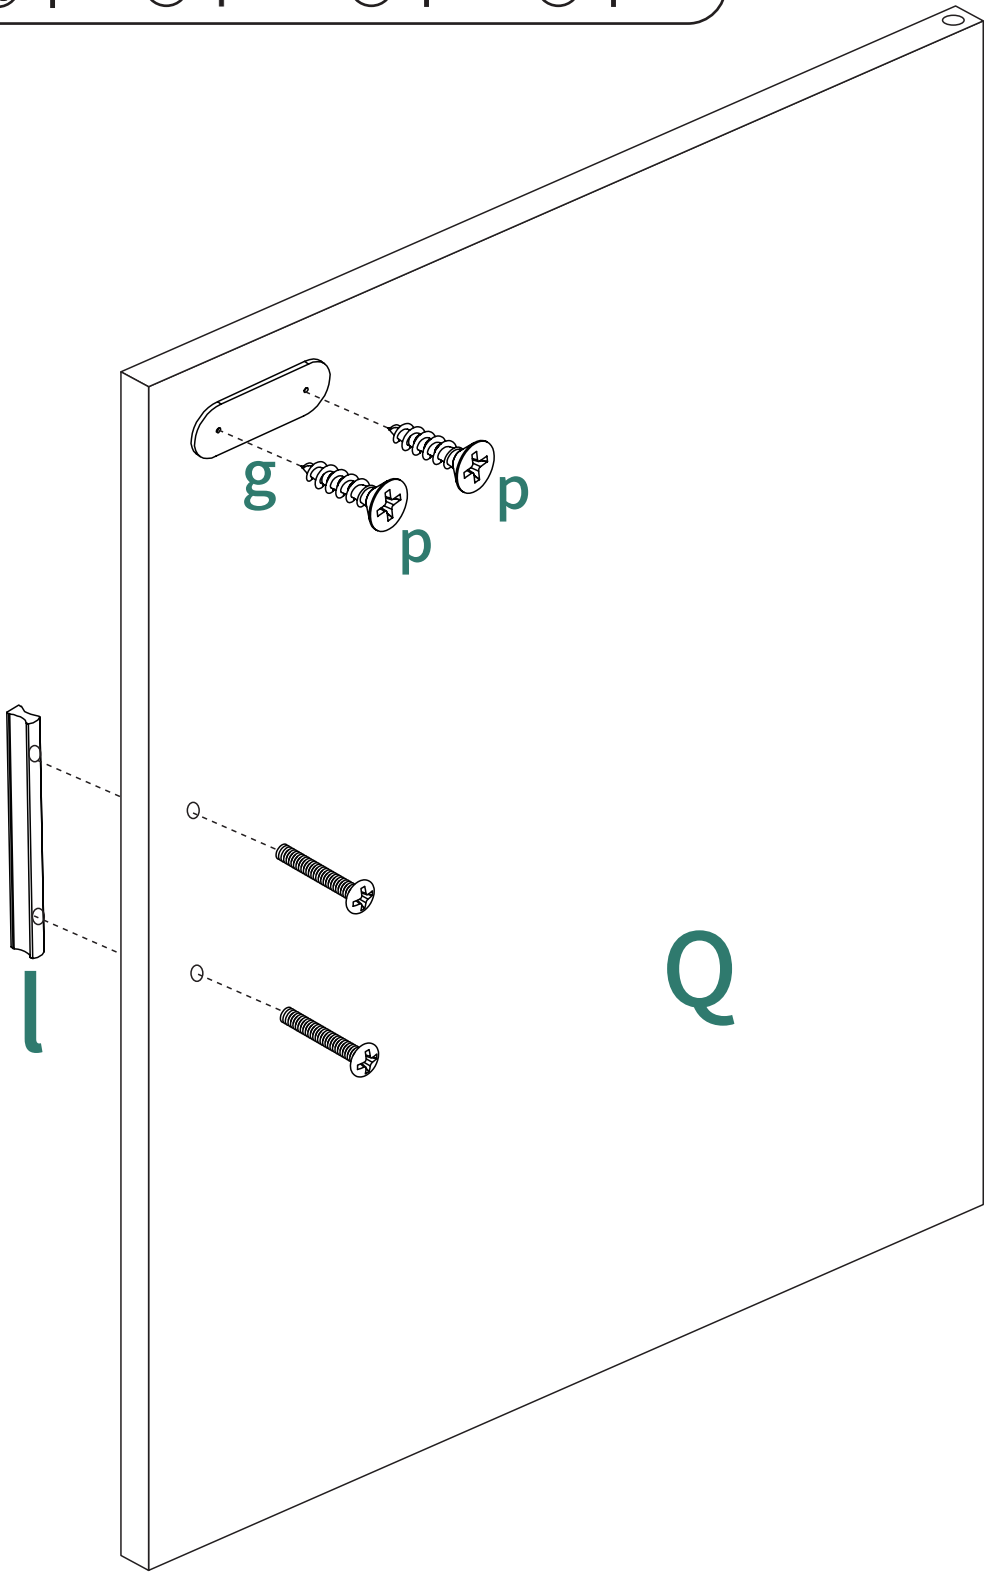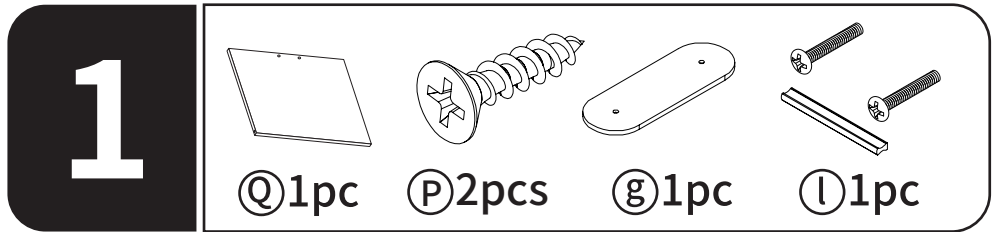



ASSEMBLY INSTRUCTIONS


2



B1pc


F1pc

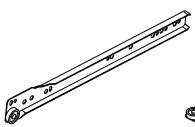
CL2pcs

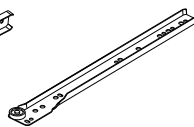
CR2pcs


e8pcs

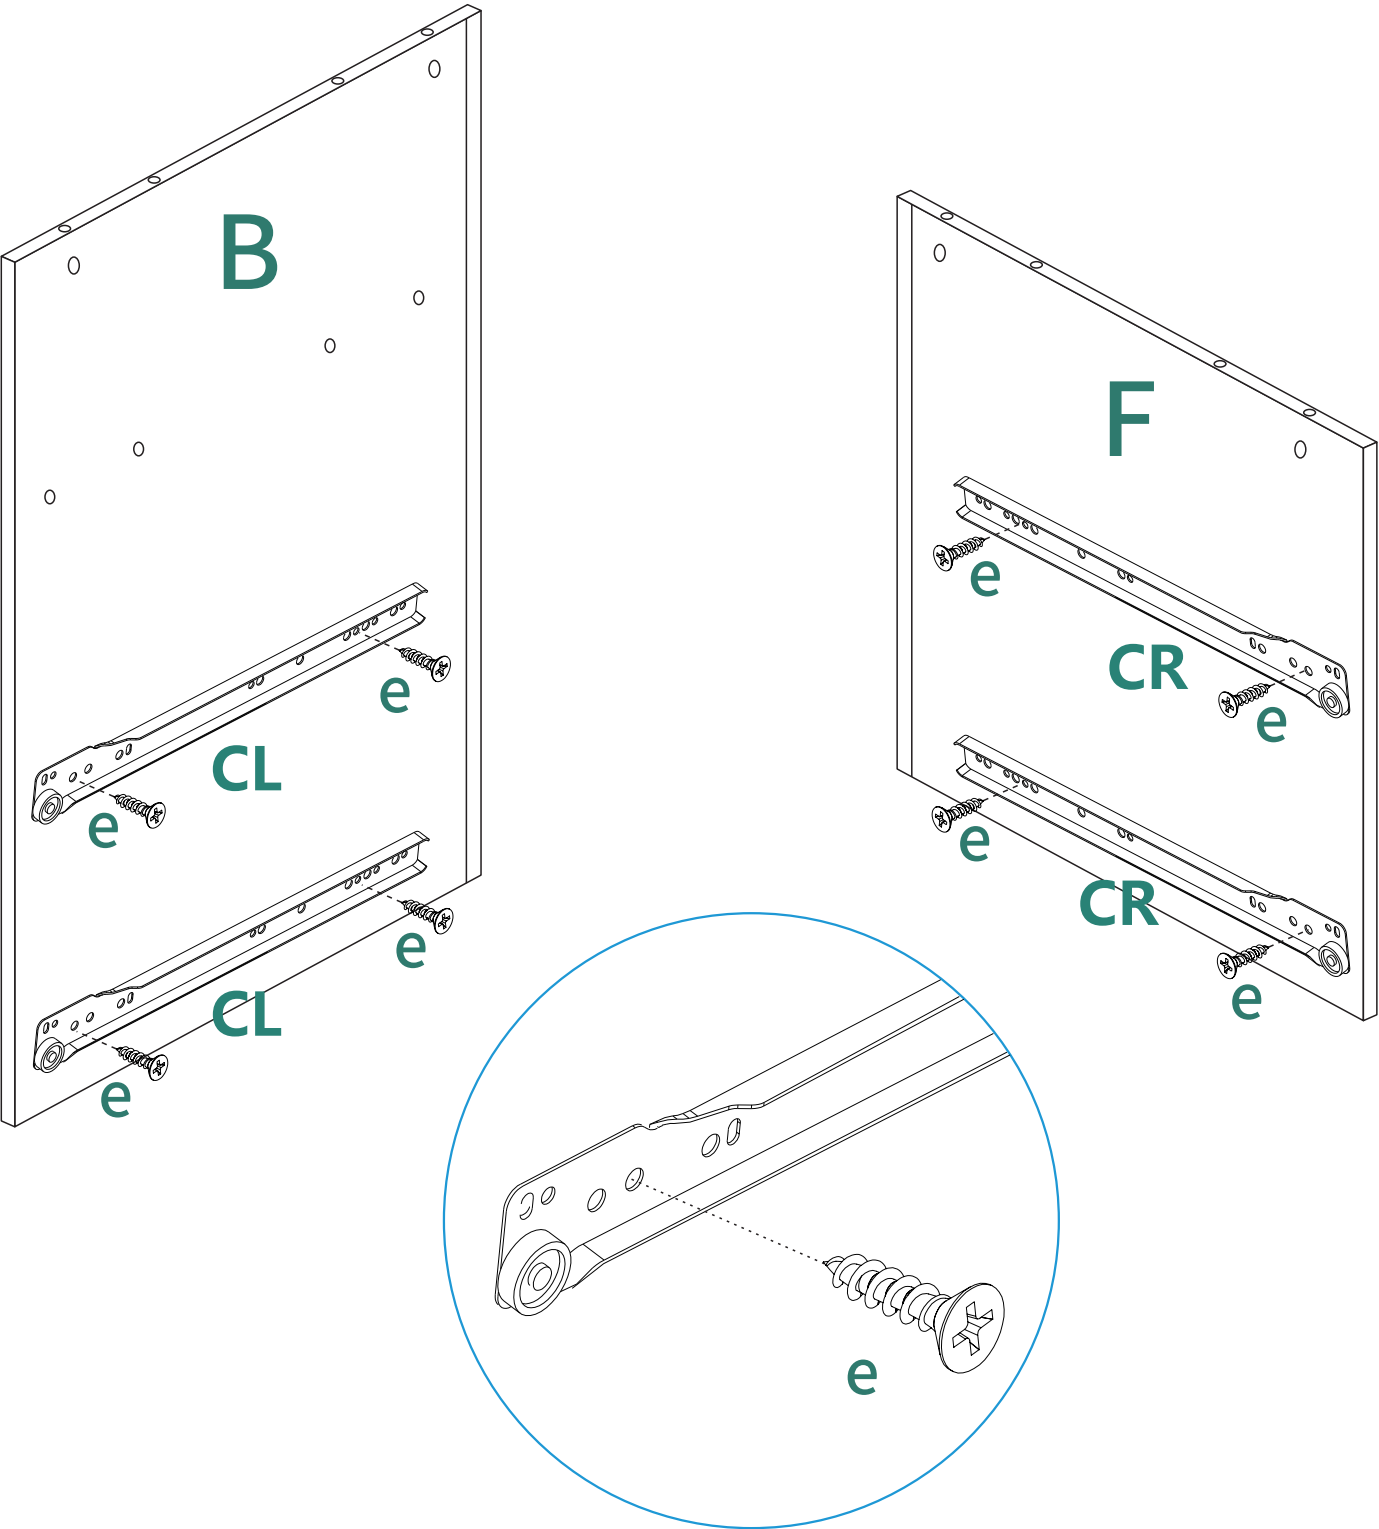



7


ASSEMBLY INSTRUCTIONS


3


X2

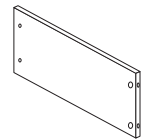

K2pcs

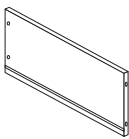
L2pcs

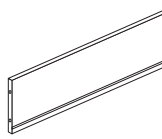
M2pcs


N2pcs





d8pcs

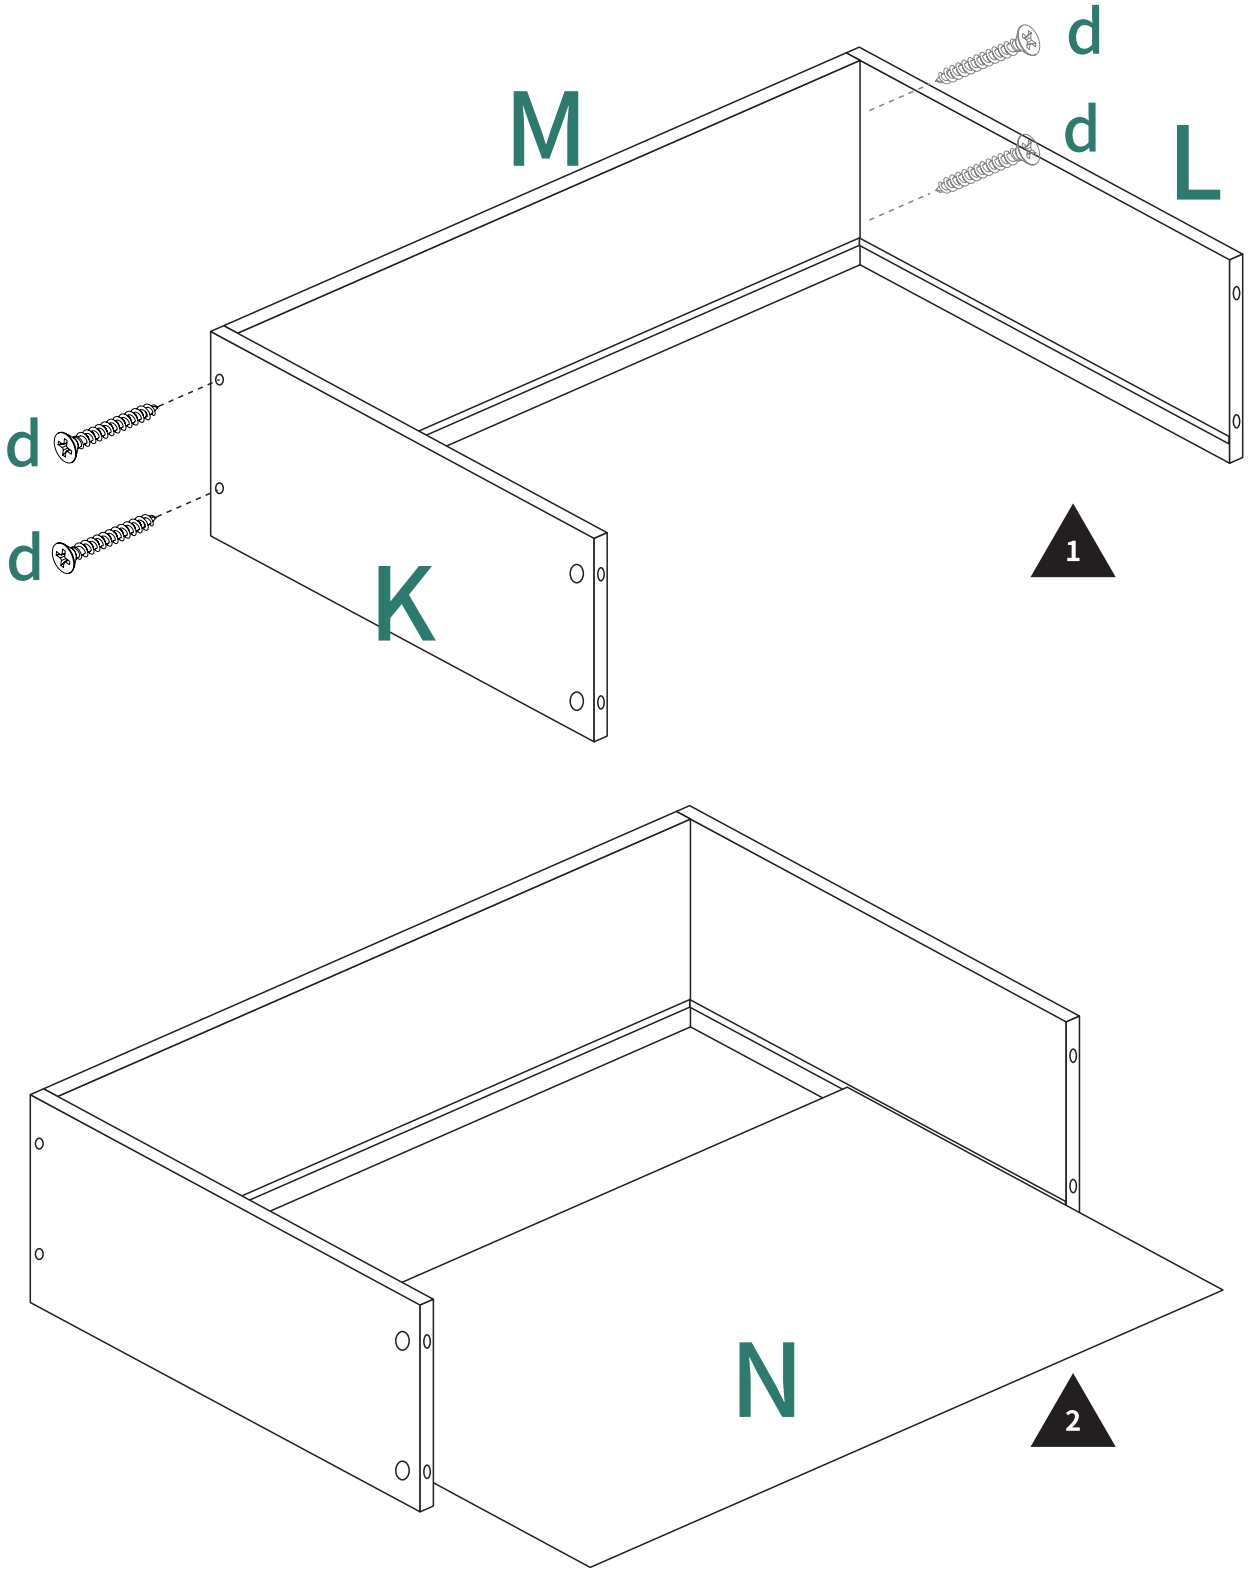

8





ASSEMBLY INSTRUCTIONS

4

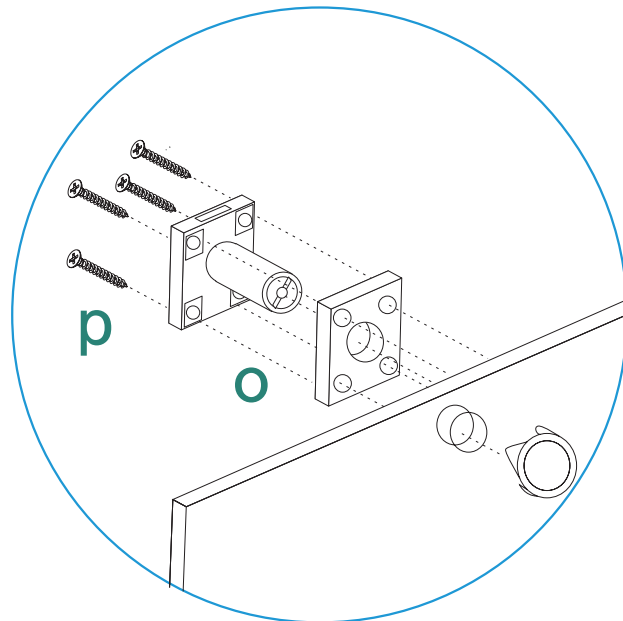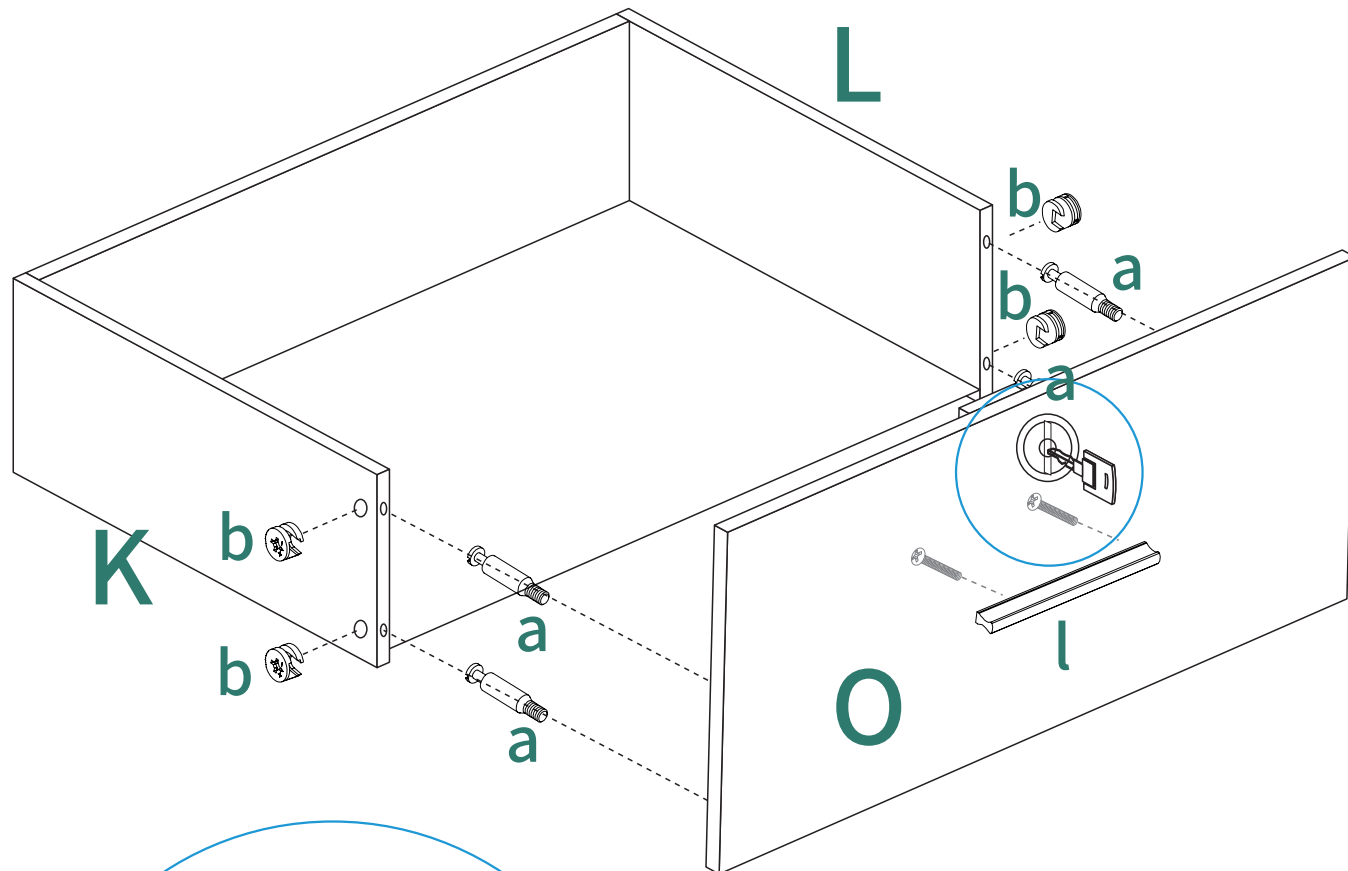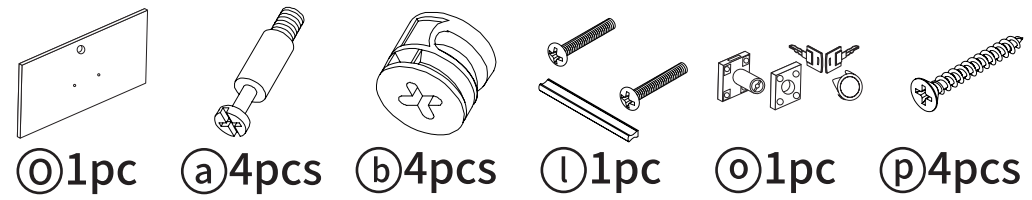



ASSEMBLY INSTRUCTIONS

5

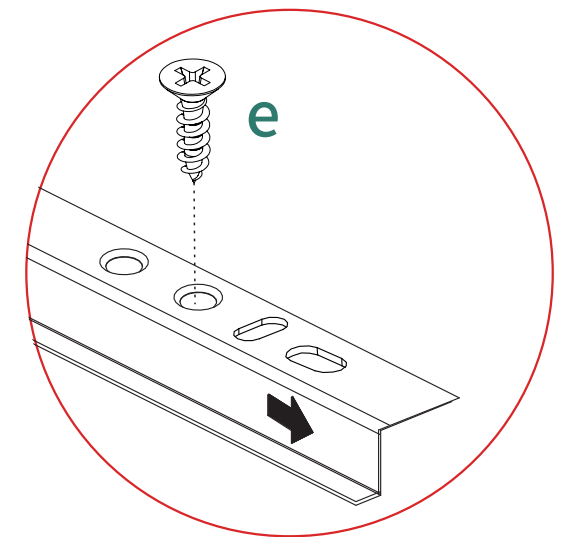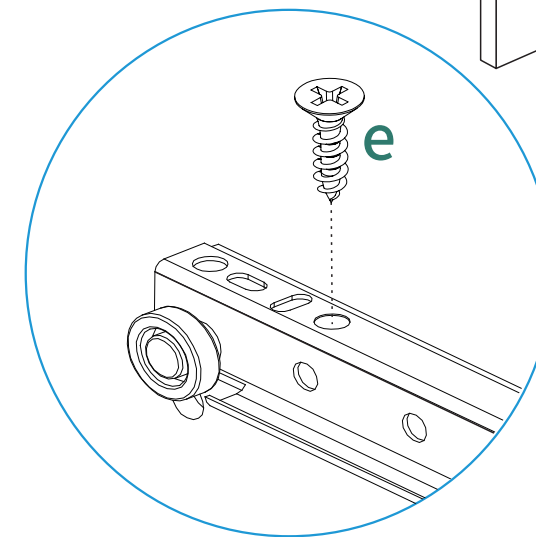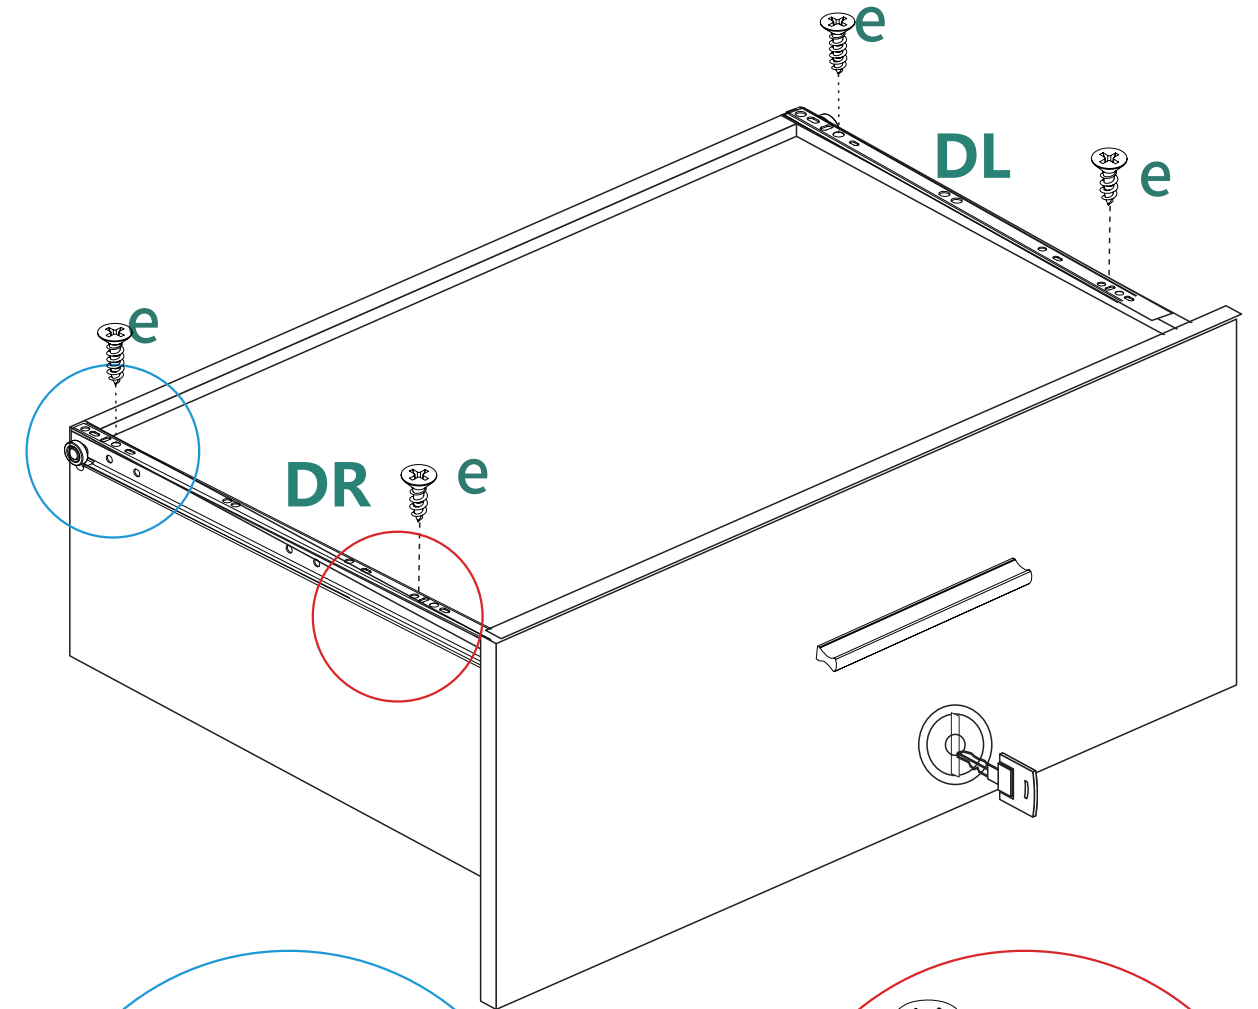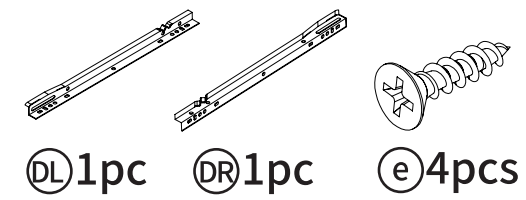



ASSEMBLY INSTRUCTIONS

6

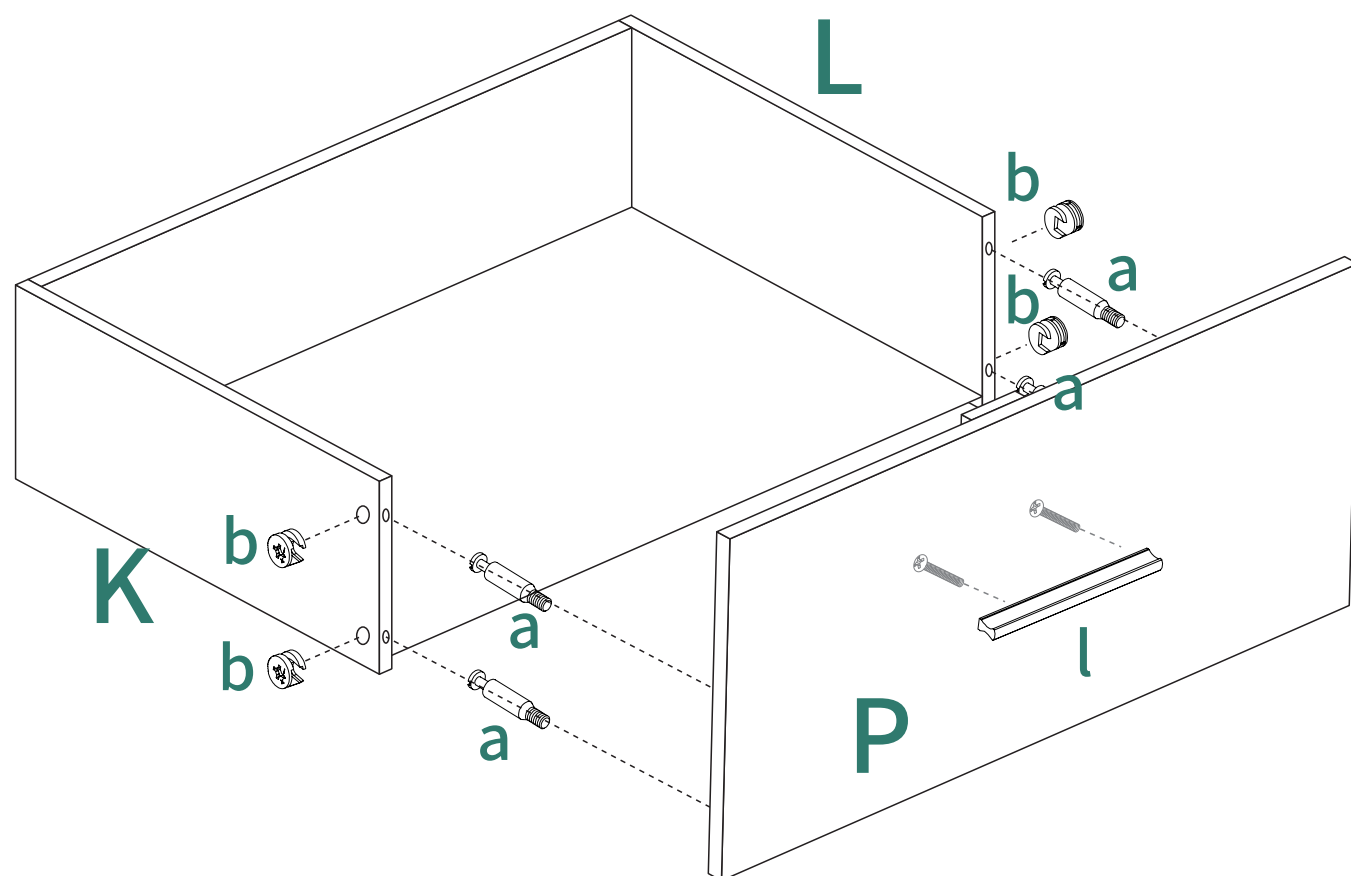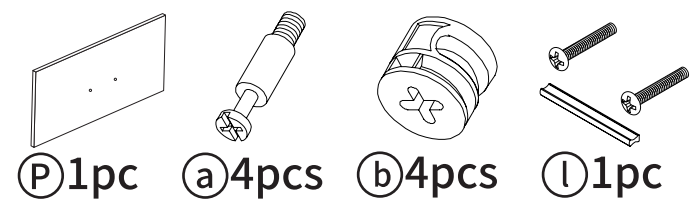




ASSEMBLY INSTRUCTIONS

7

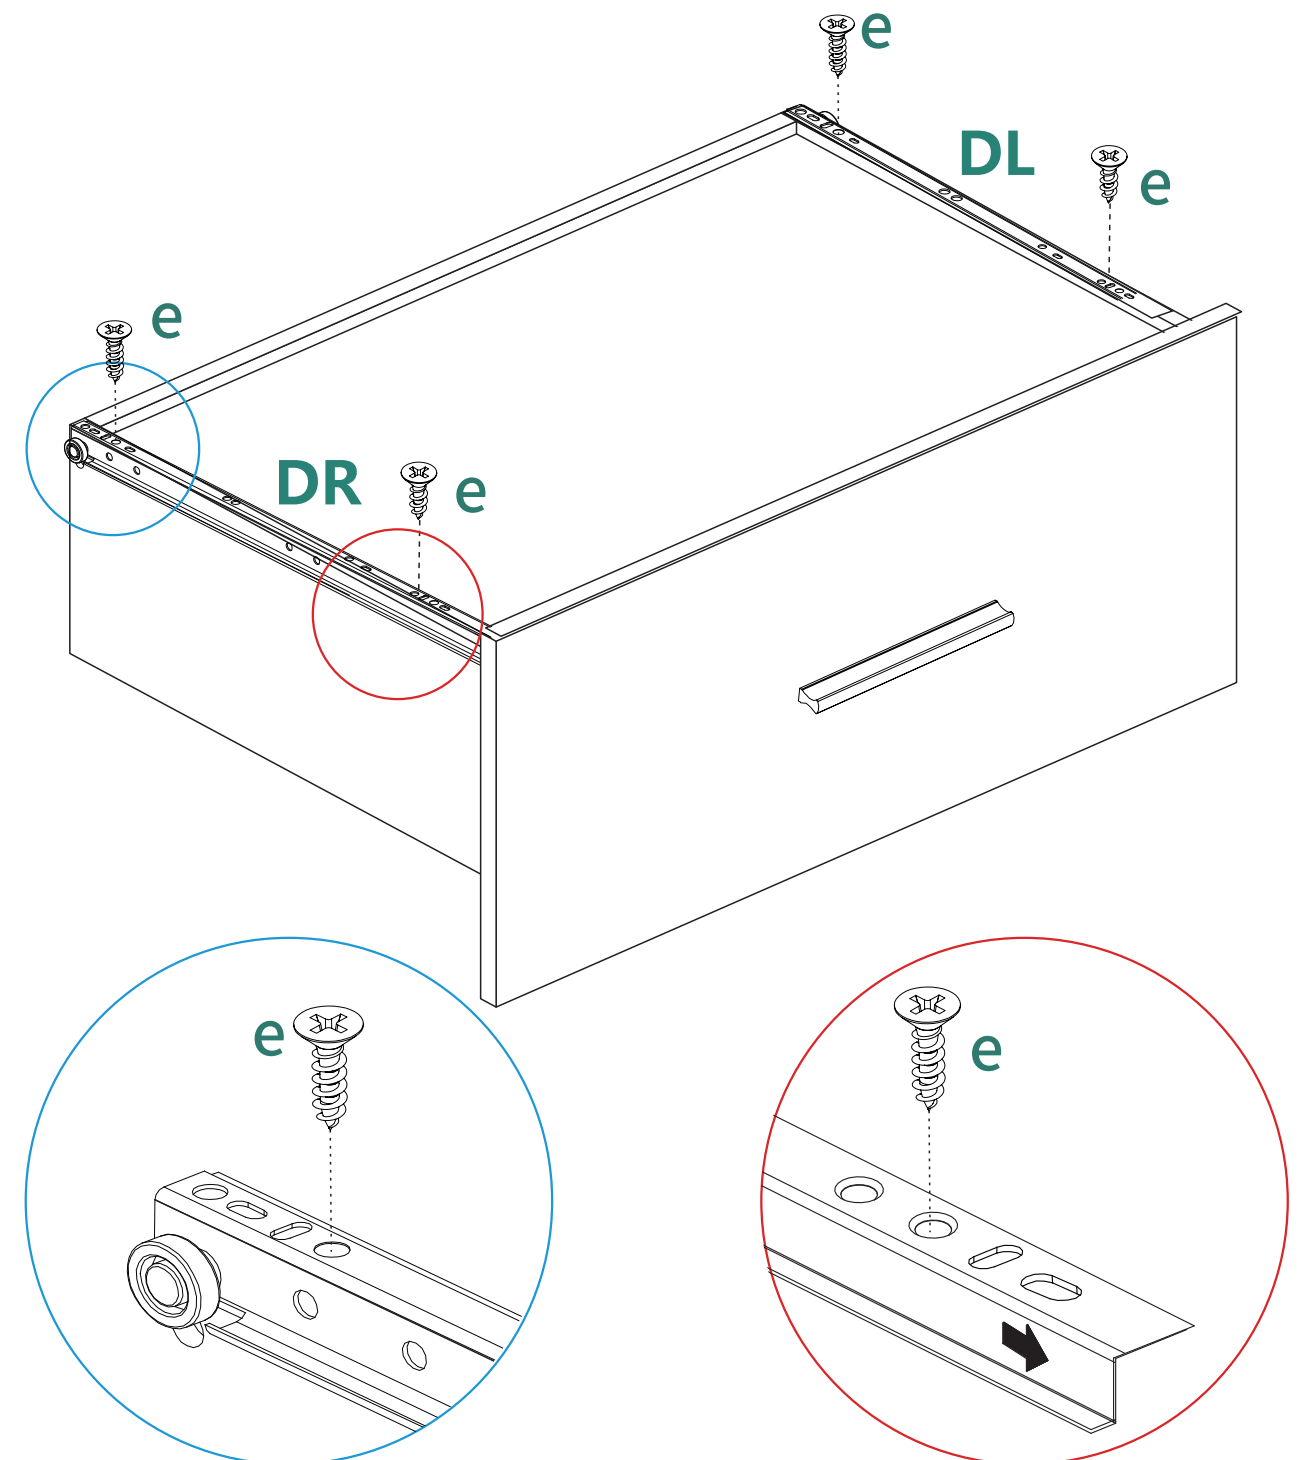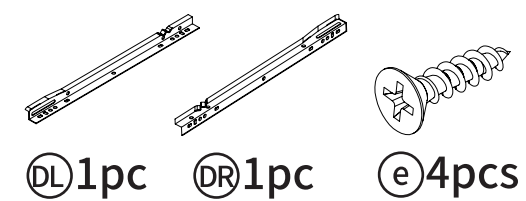

ASSEMBLY INSTRUCTIONS

8




ⓑ1pc

Ⓓ1pc

ⓐ2pcs




ⓑ2pcs

ⓒ2pcs

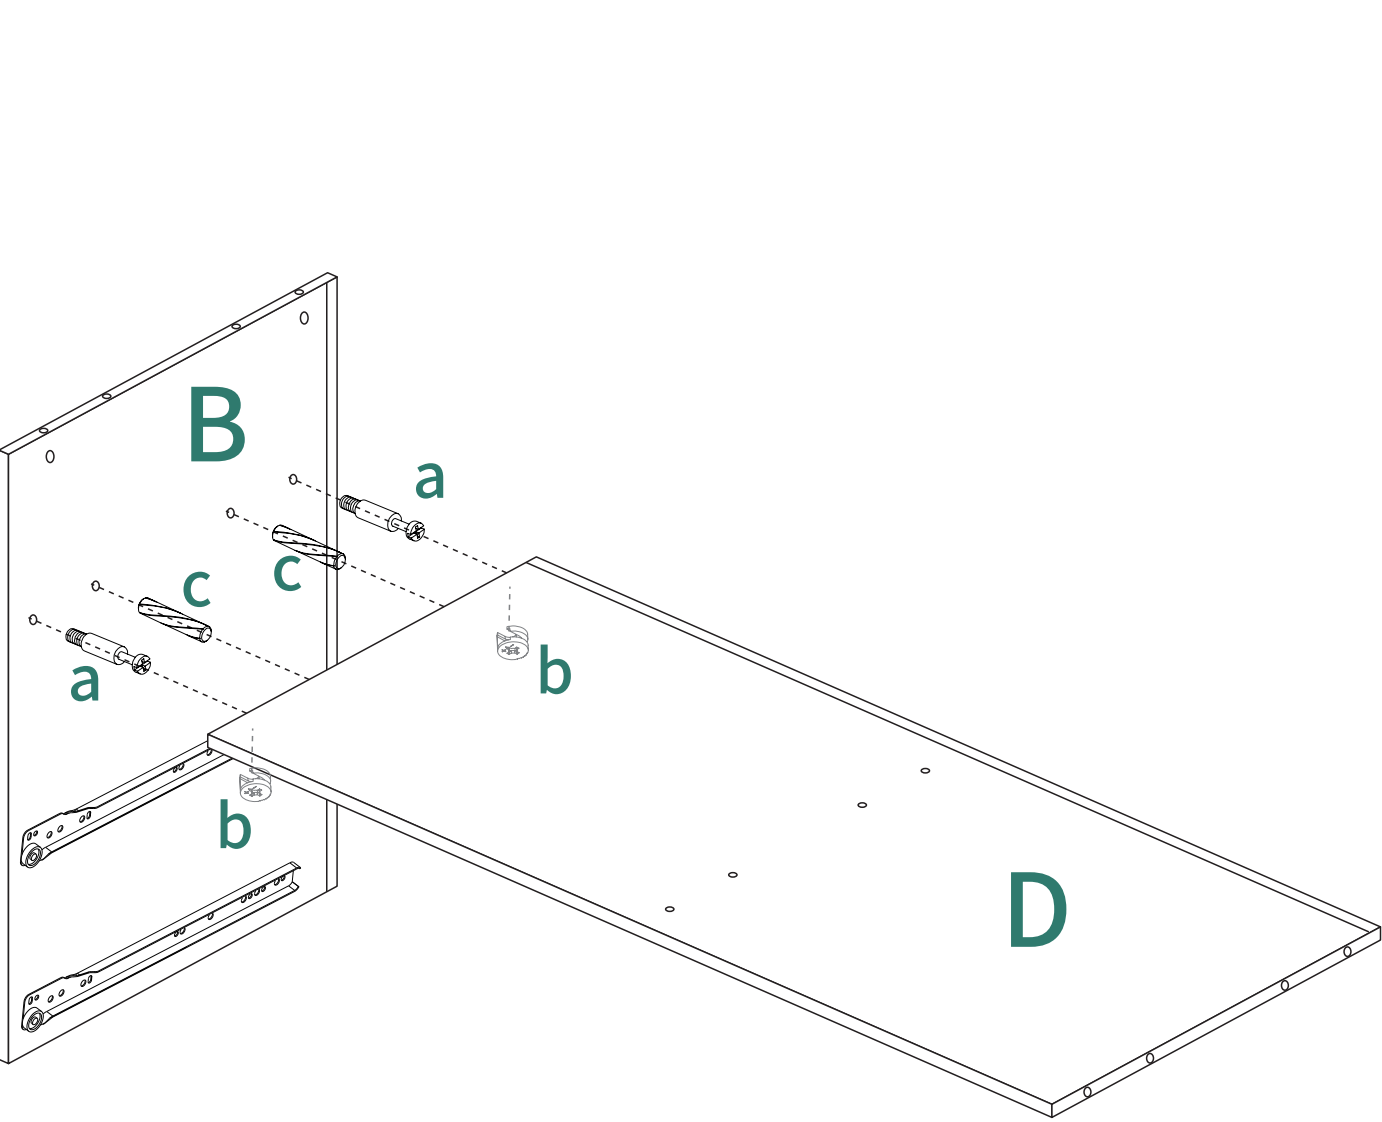

ASSEMBLY INSTRUCTIONS

9

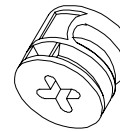


ⓒ1pc

ⓐ2pcs



ⓑ2pcs

ⓒ2pcs

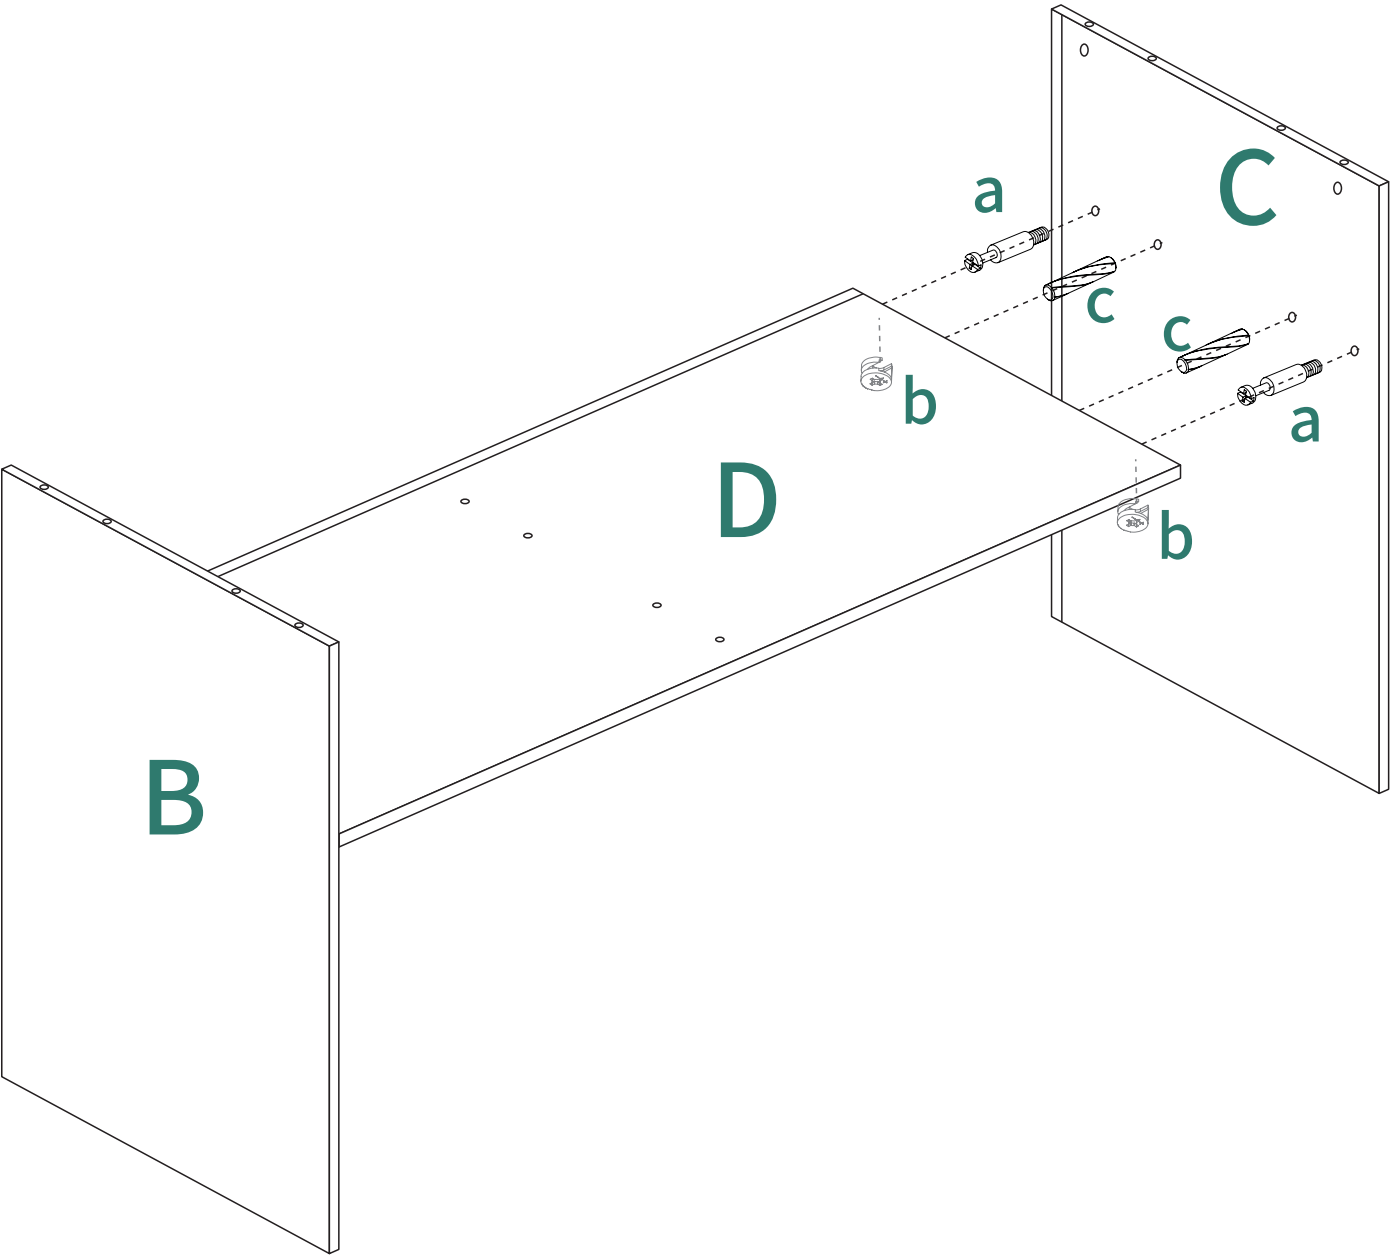



ASSEMBLY INSTRUCTIONS

10

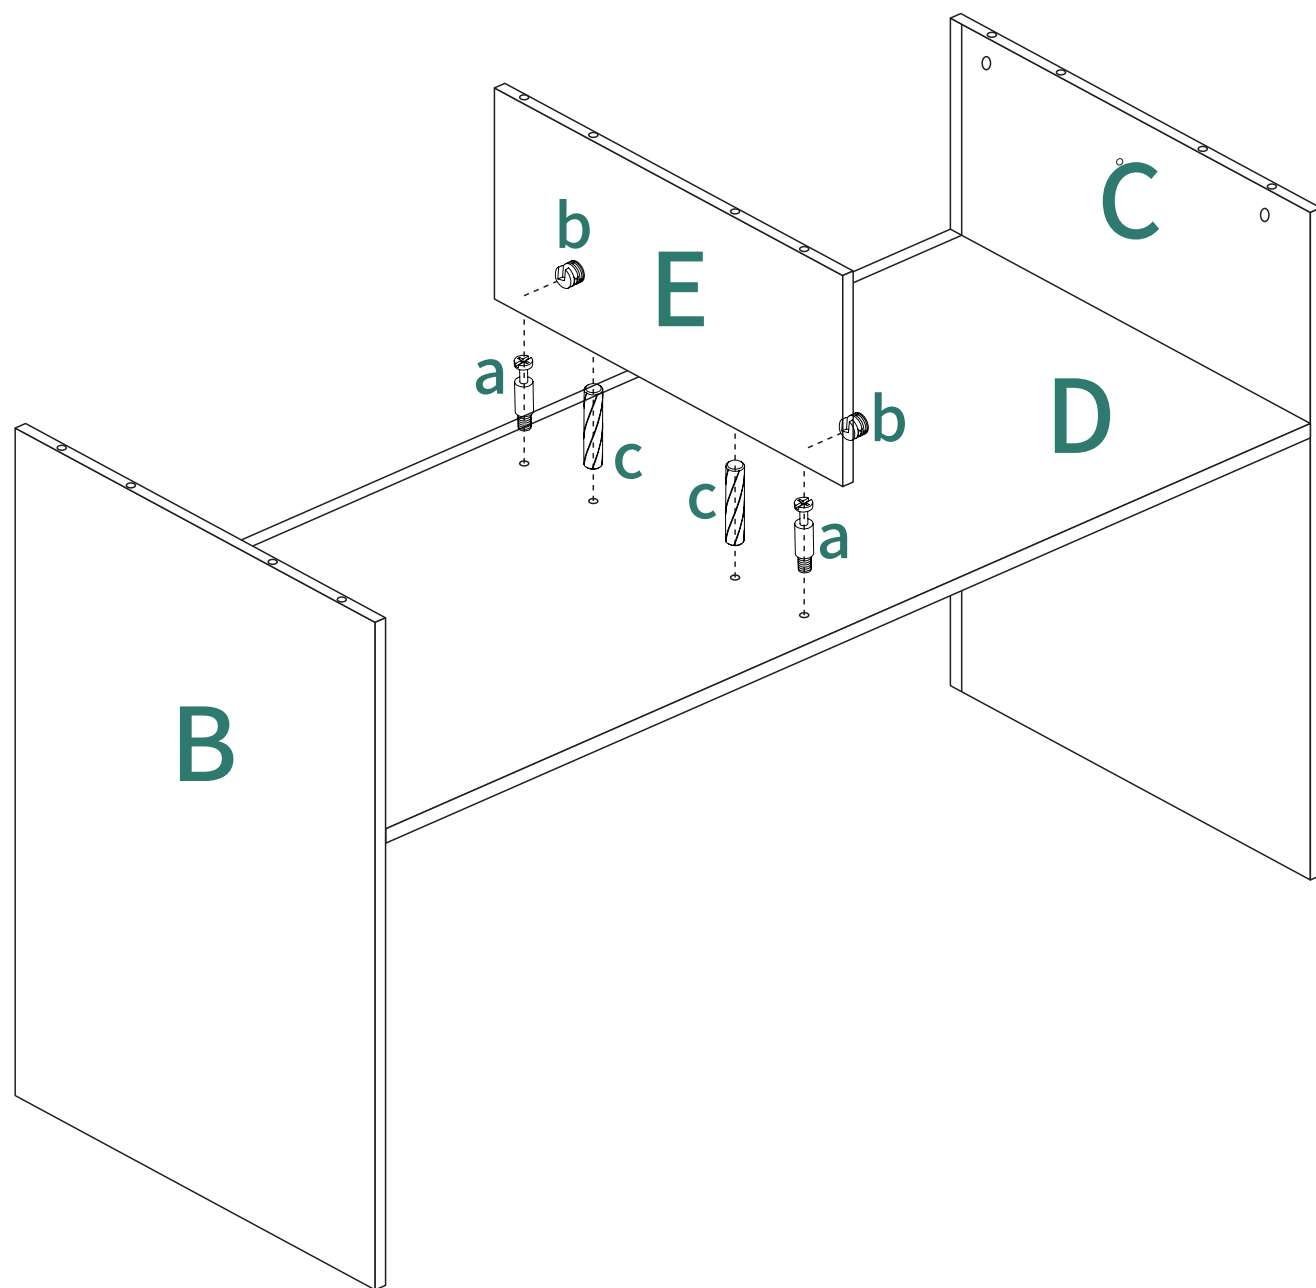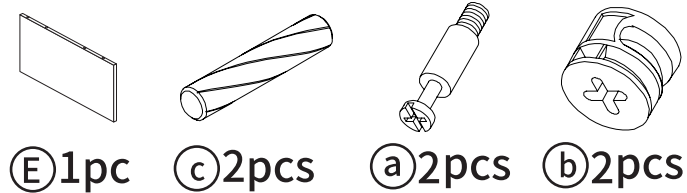


ASSEMBLY INSTRUCTIONS


11

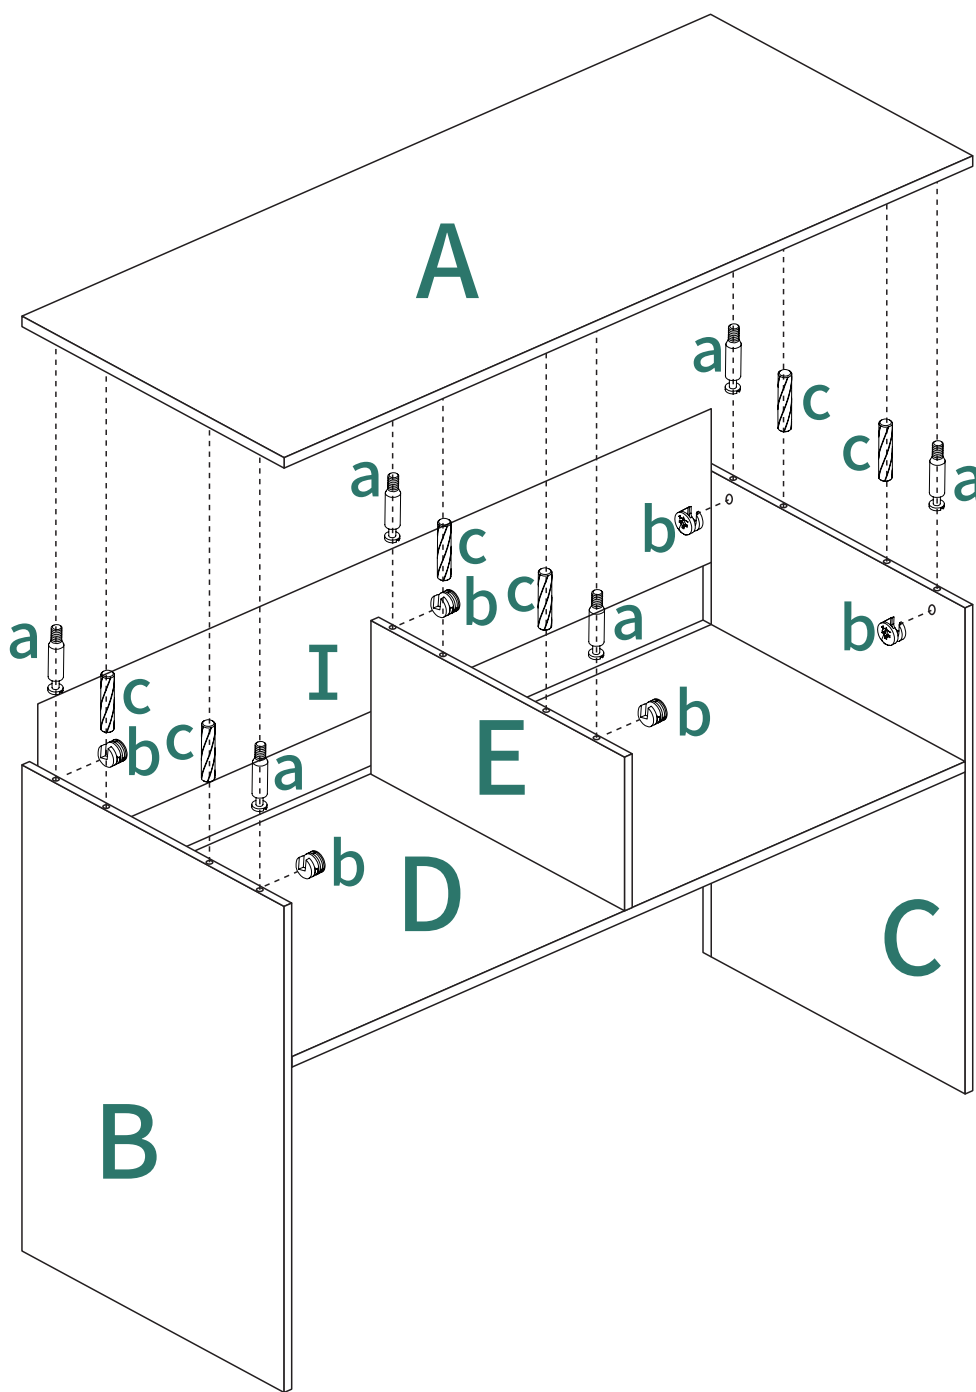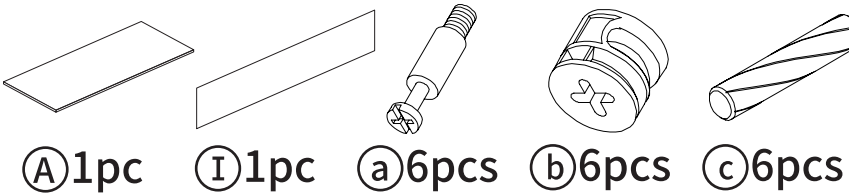

ASSEMBLY INSTRUCTIONS

12



F 1pc


G 1pc


a 4pcs



b 4pcs



c 4pcs

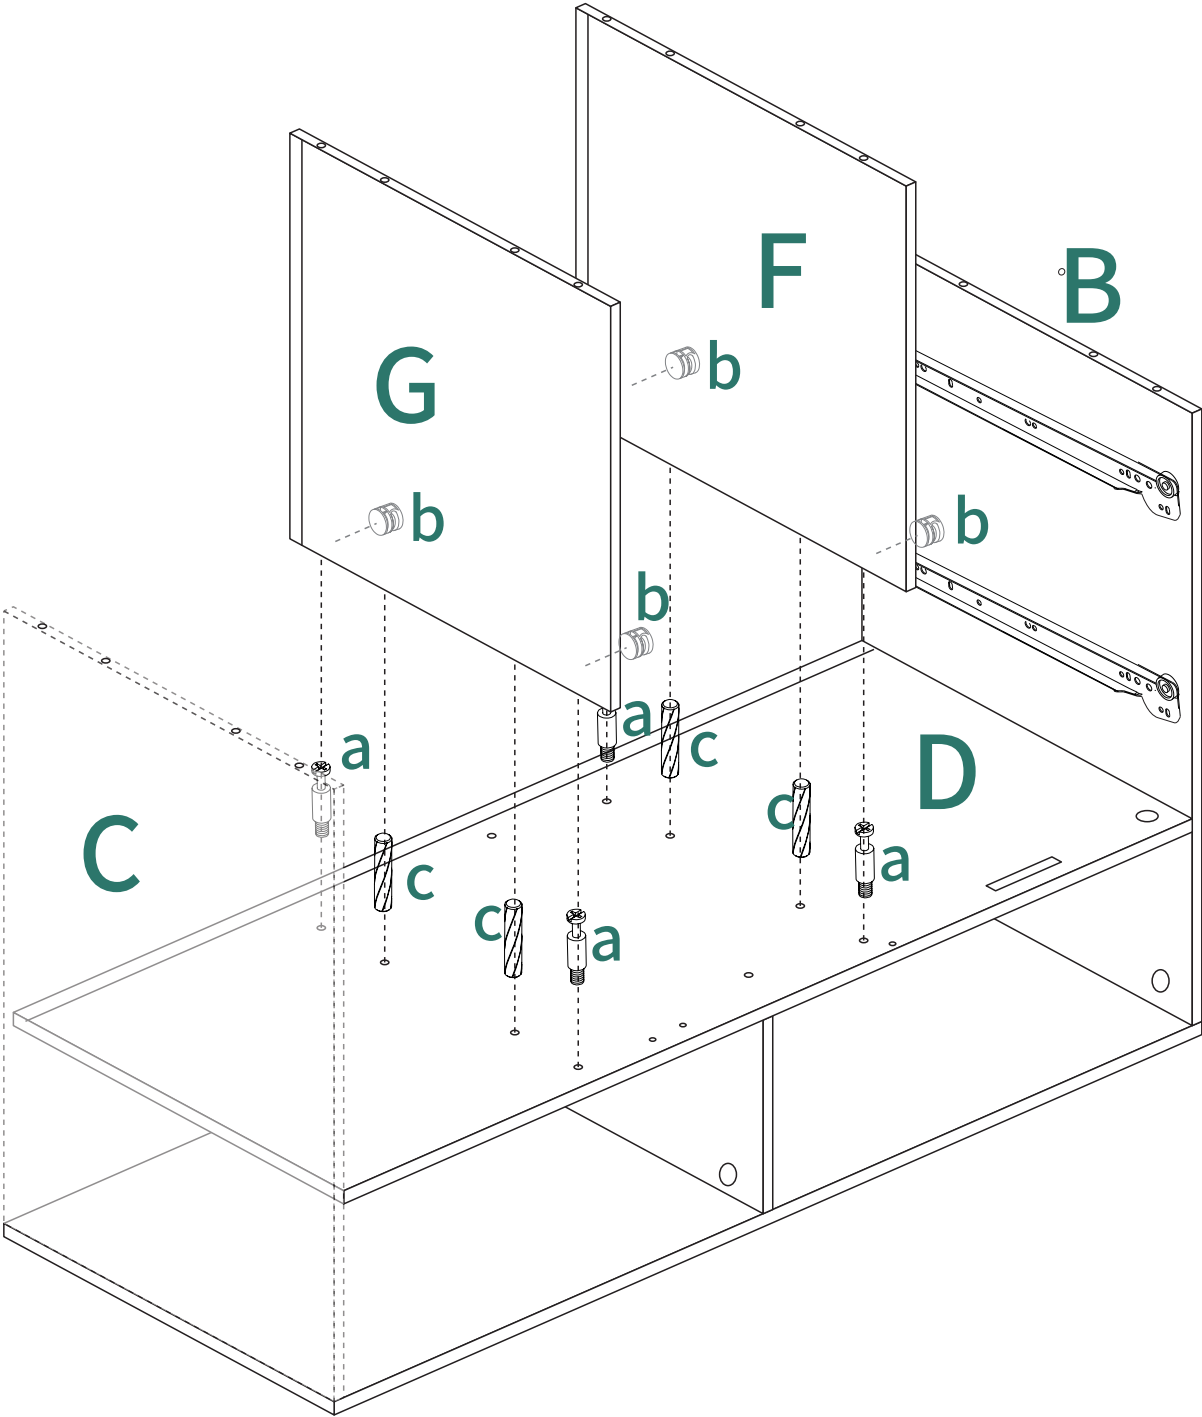



ASSEMBLY INSTRUCTIONS

13




J 3pcs

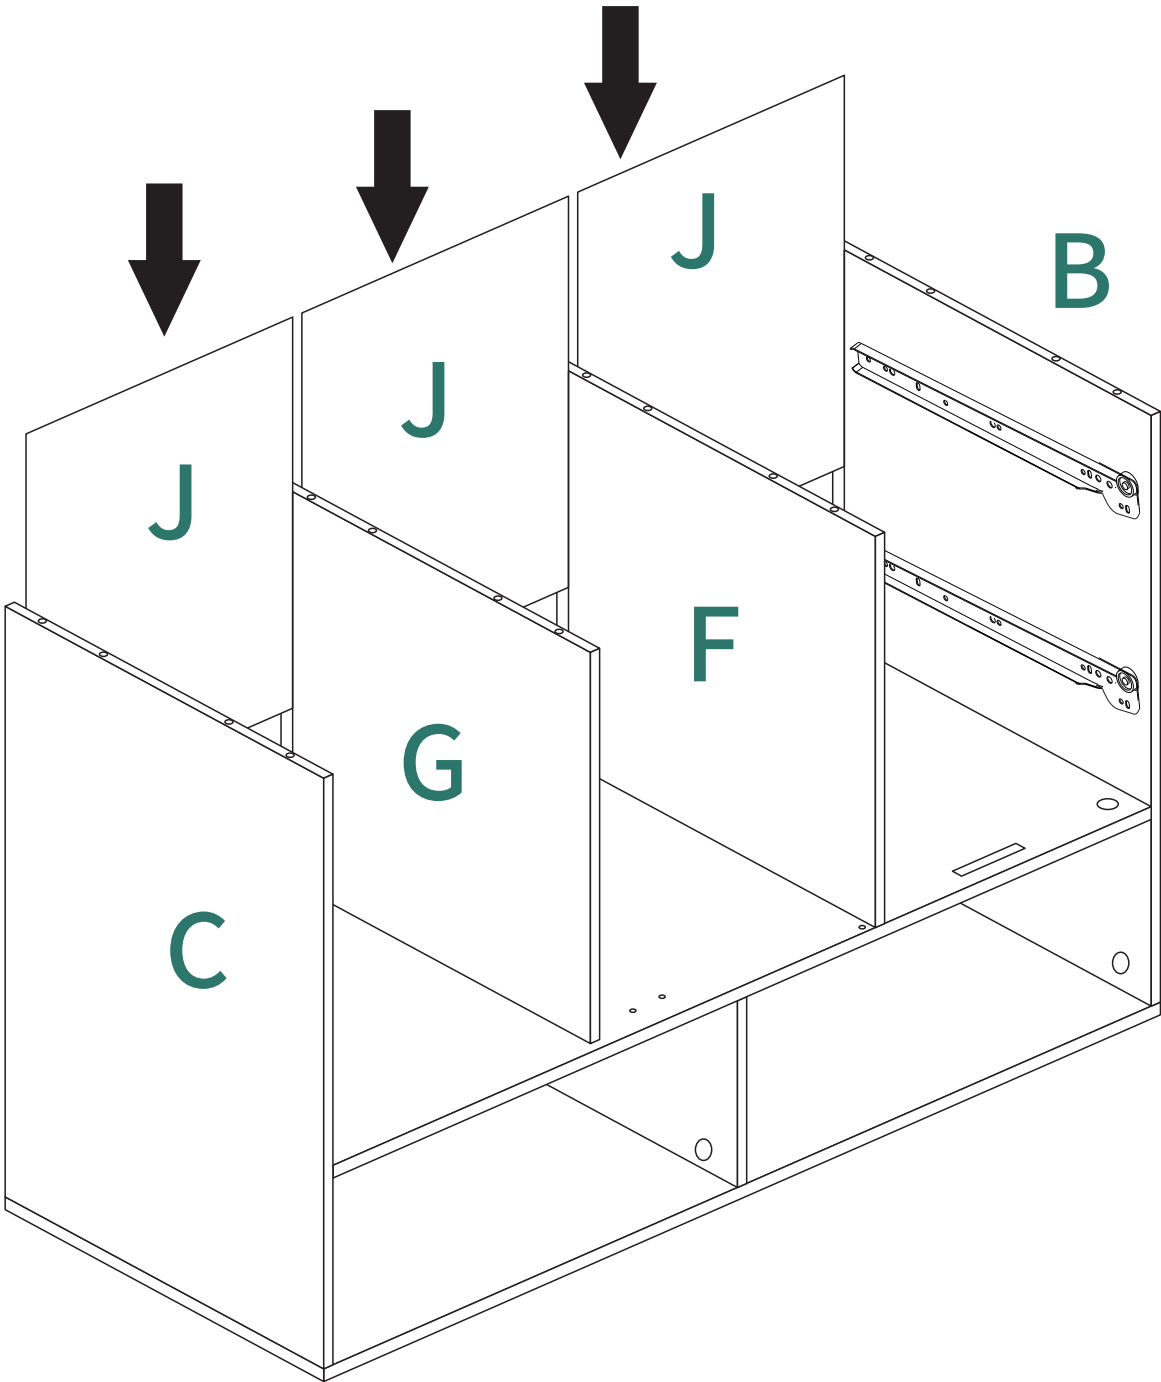

ASSEMBLY INSTRUCTIONS

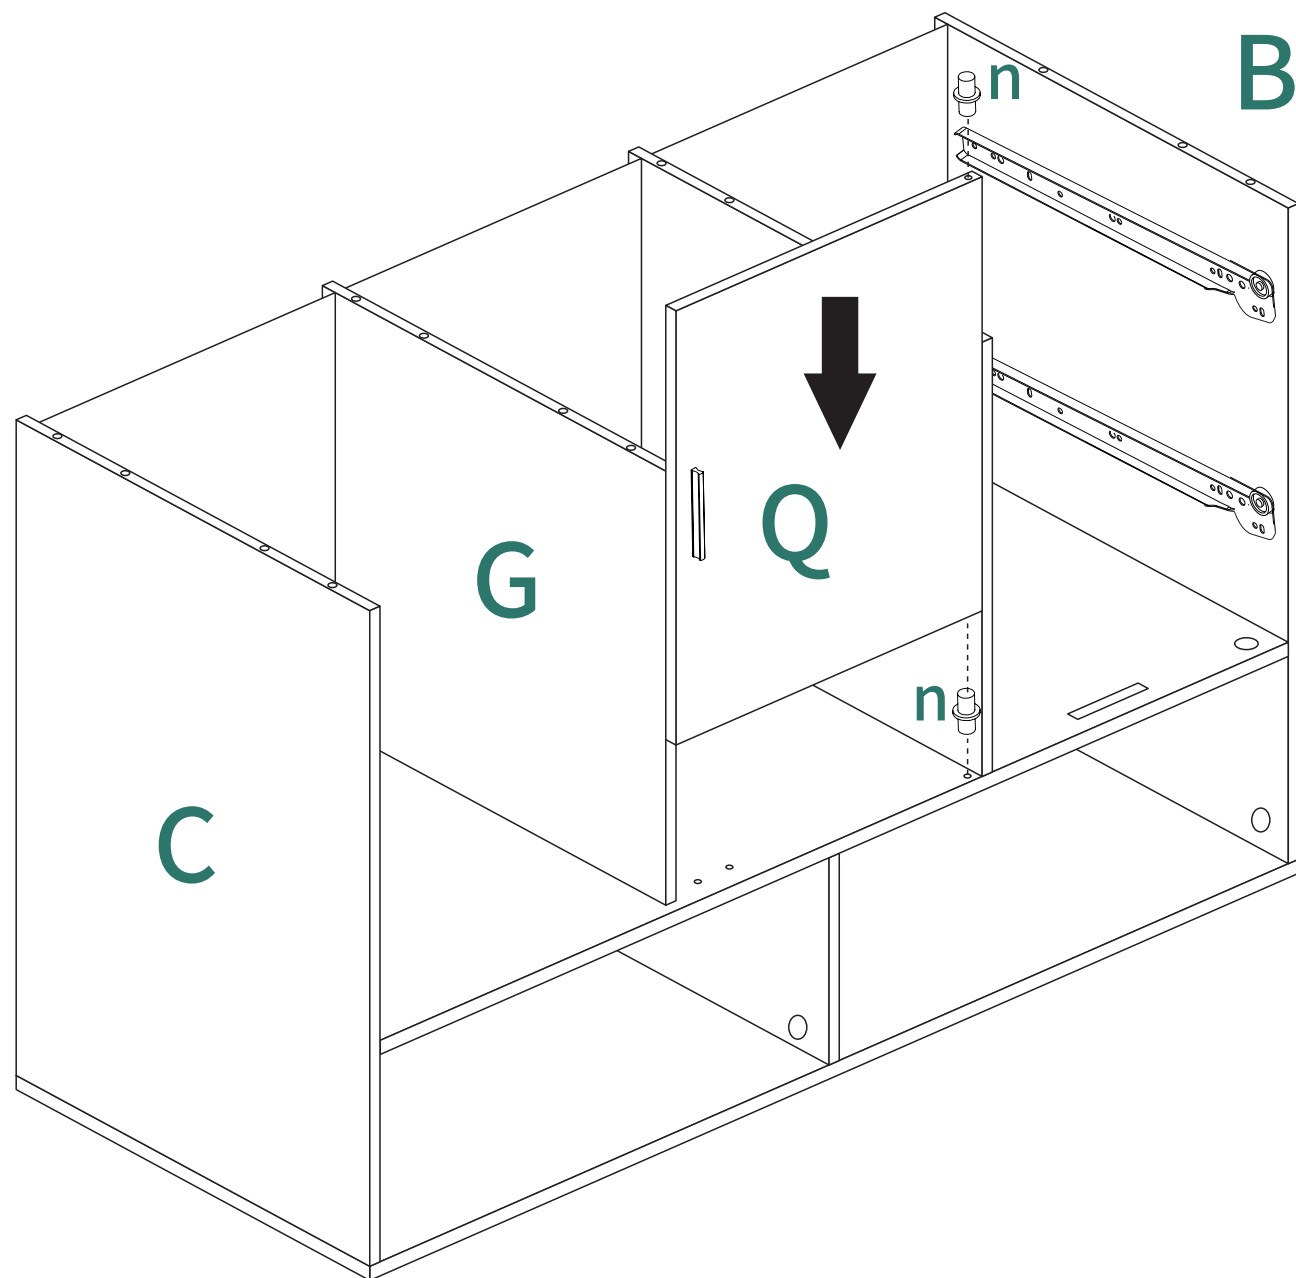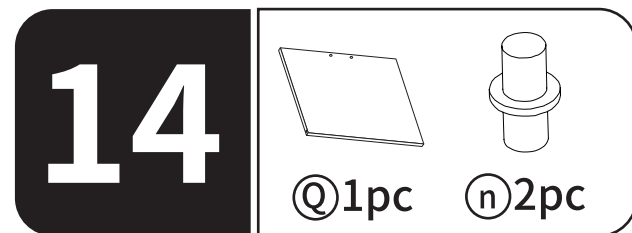


ASSEMBLY INSTRUCTIONS

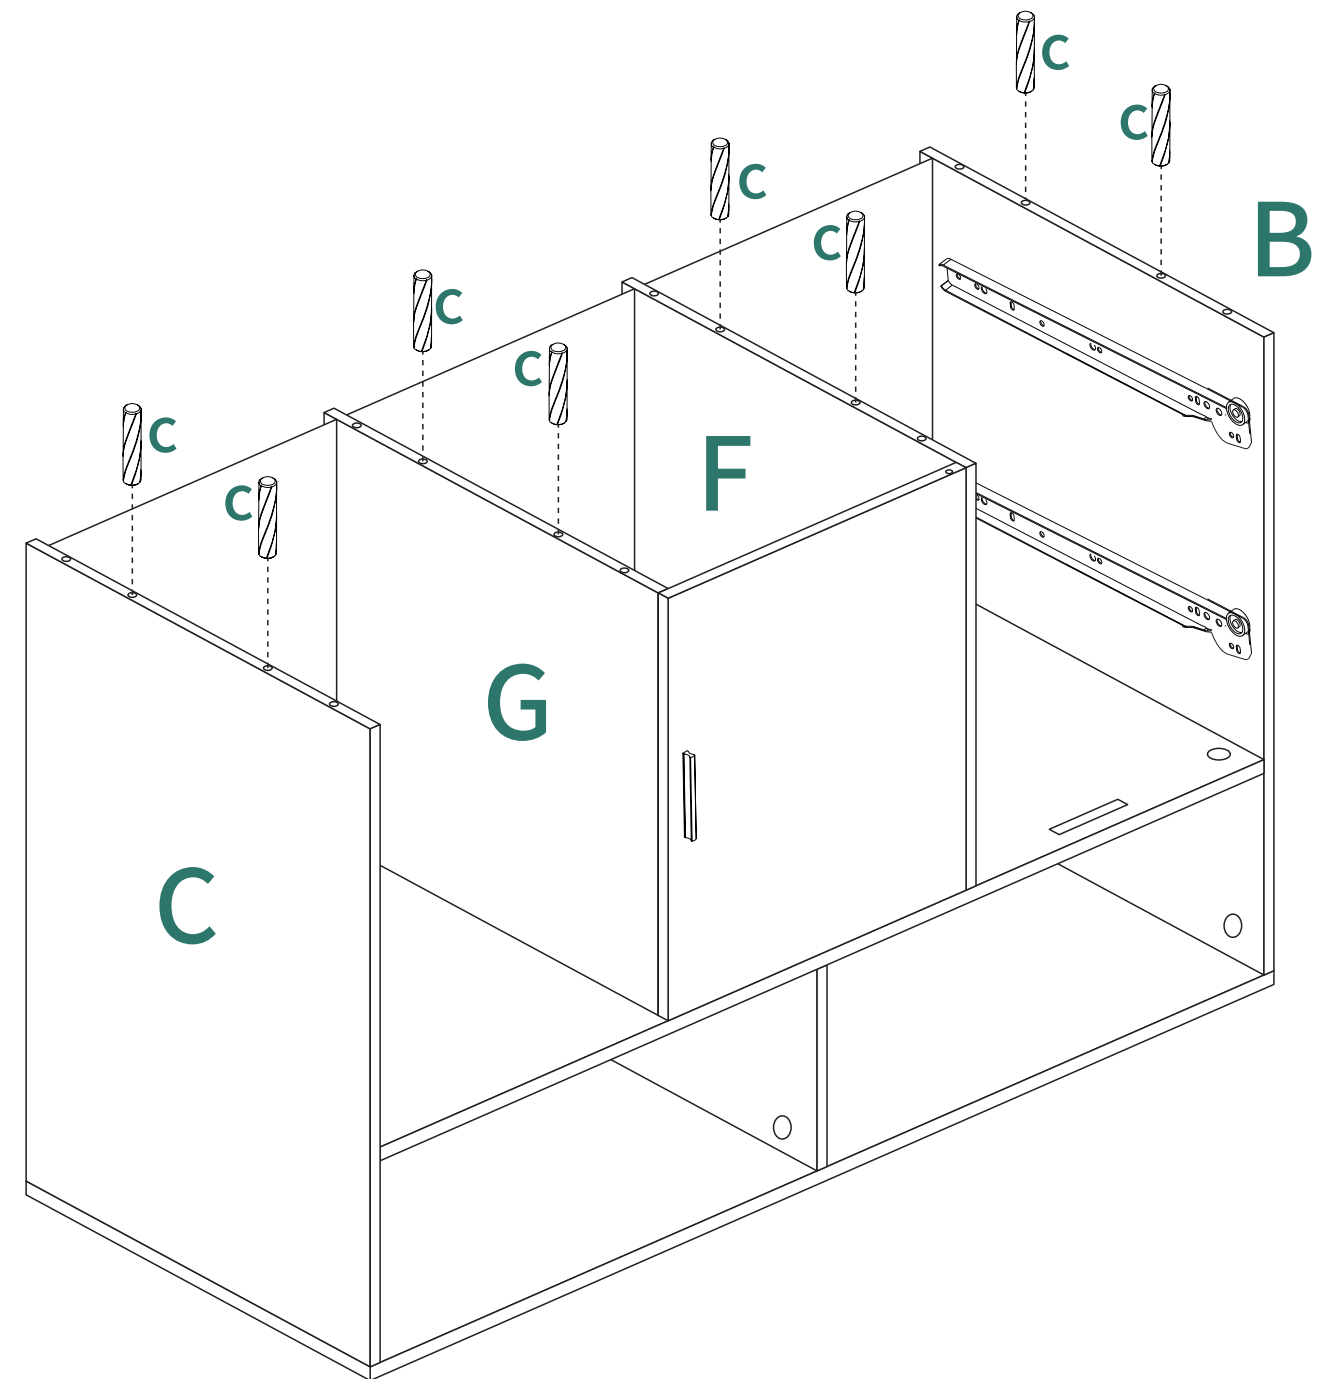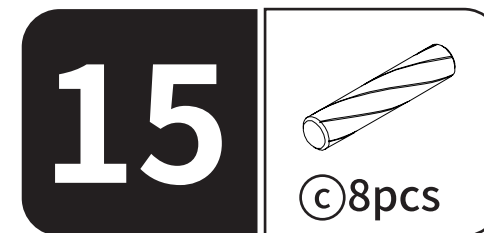

ASSEMBLY INSTRUCTIONS


16



H 1pc




m 8pcs

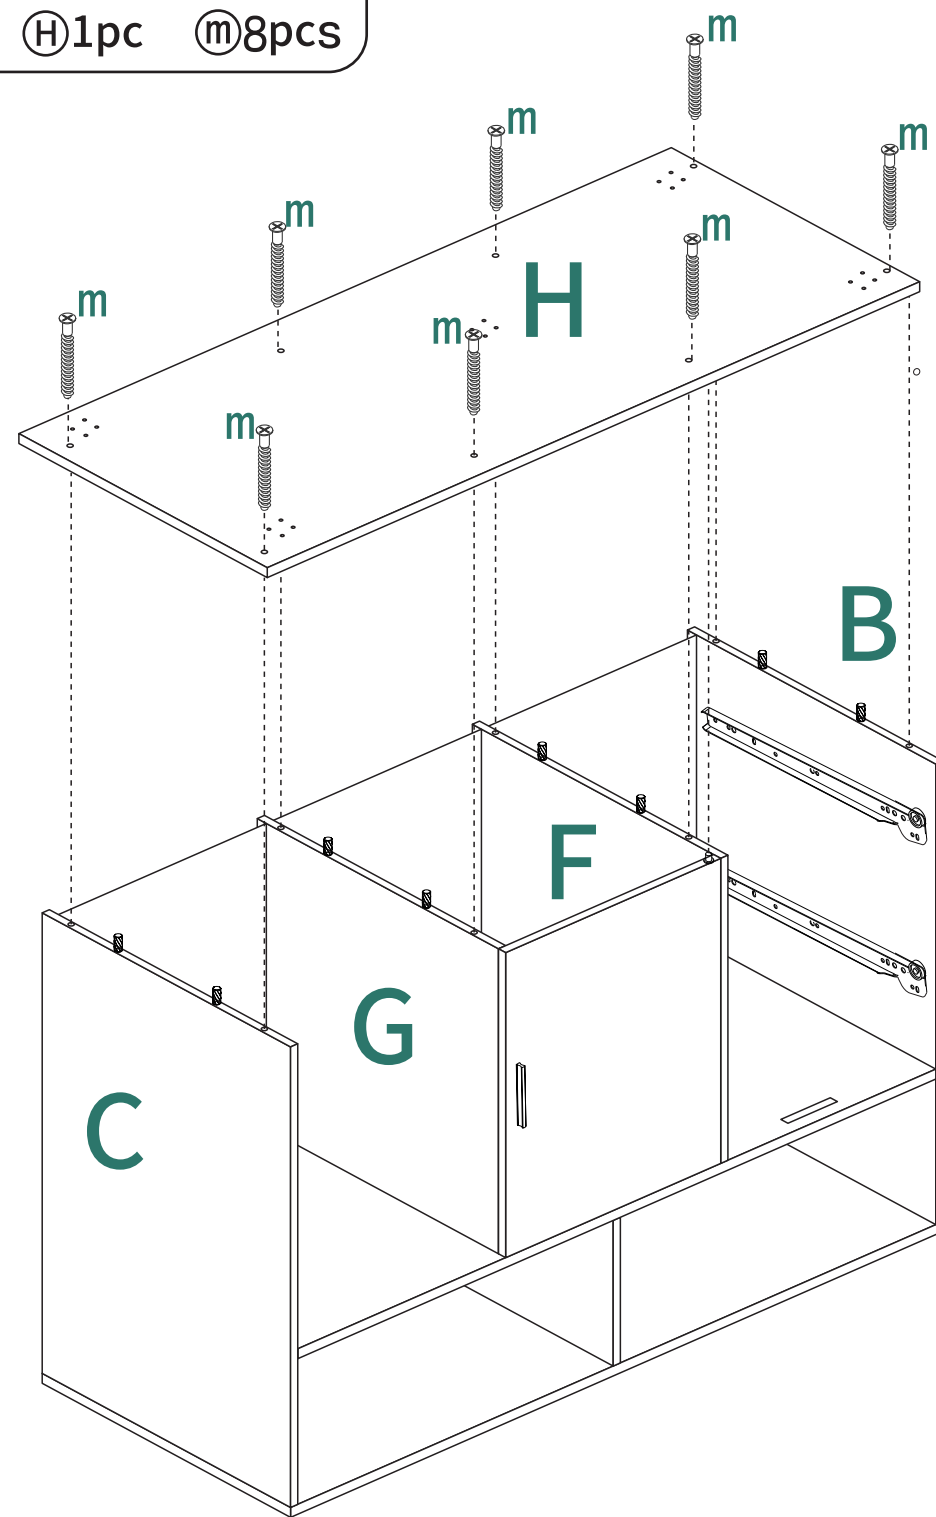


ASSEMBLY INSTRUCTIONS

17

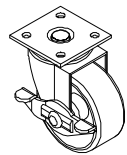


h 2pcs

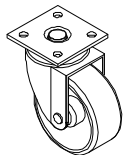

i 3pcs




e 20pcs

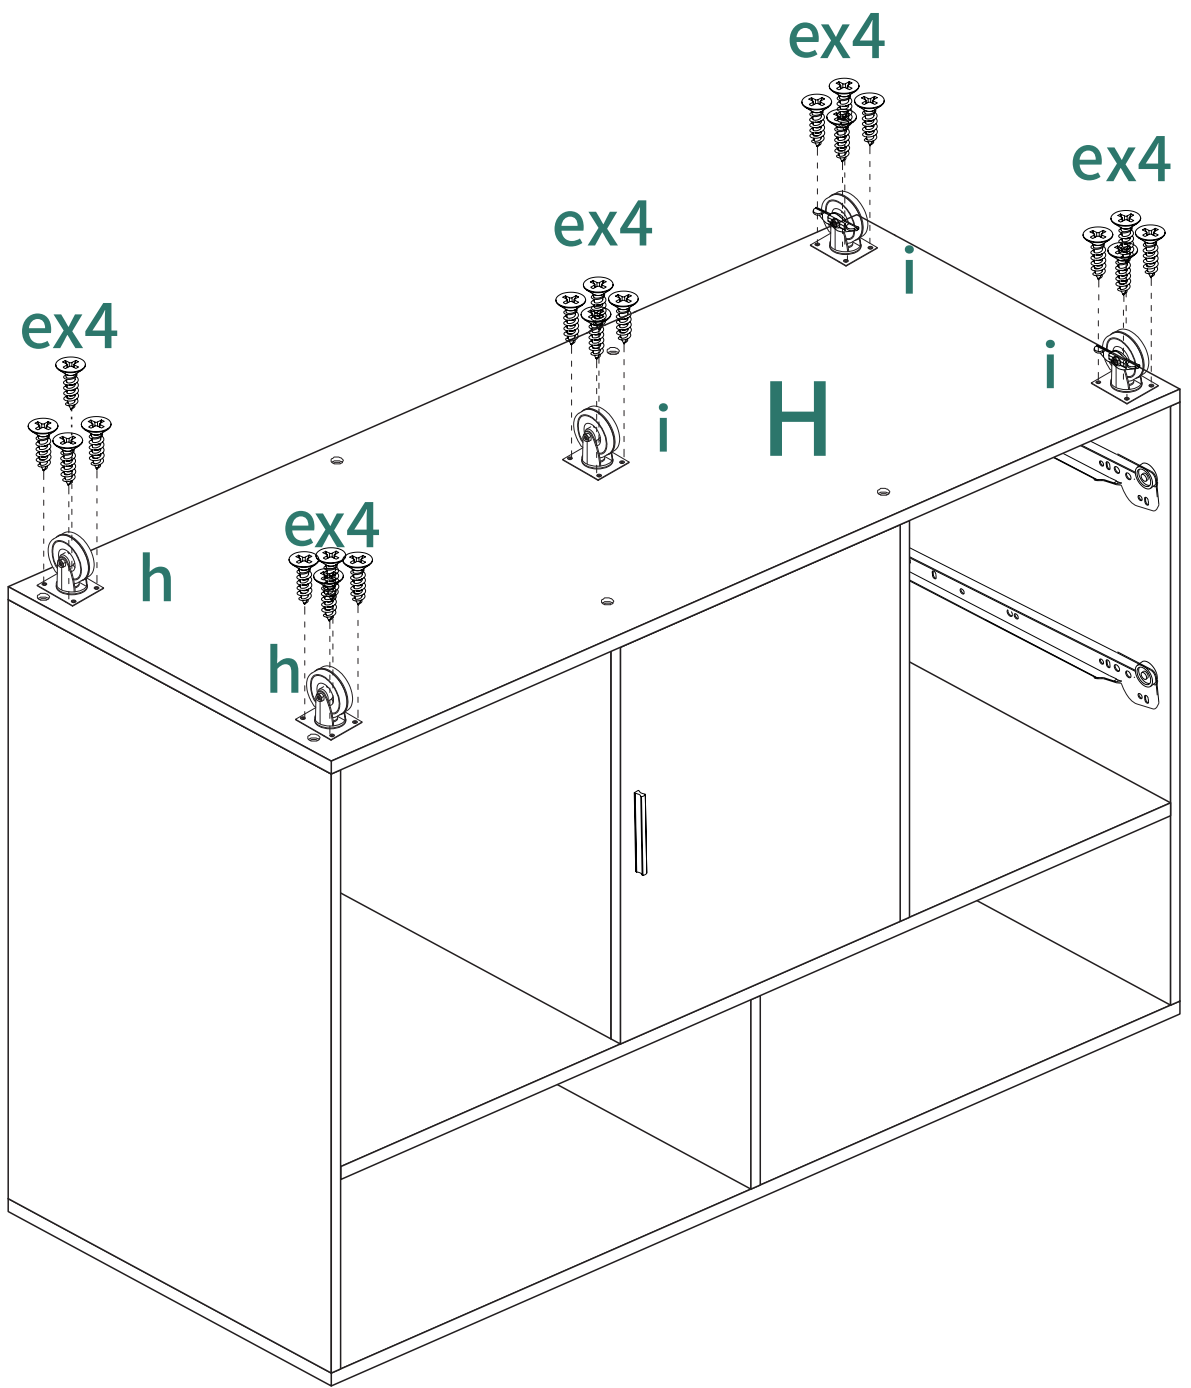


ASSEMBLY INSTRUCTIONS

18




ⓕ1pc ⓔ2pcs

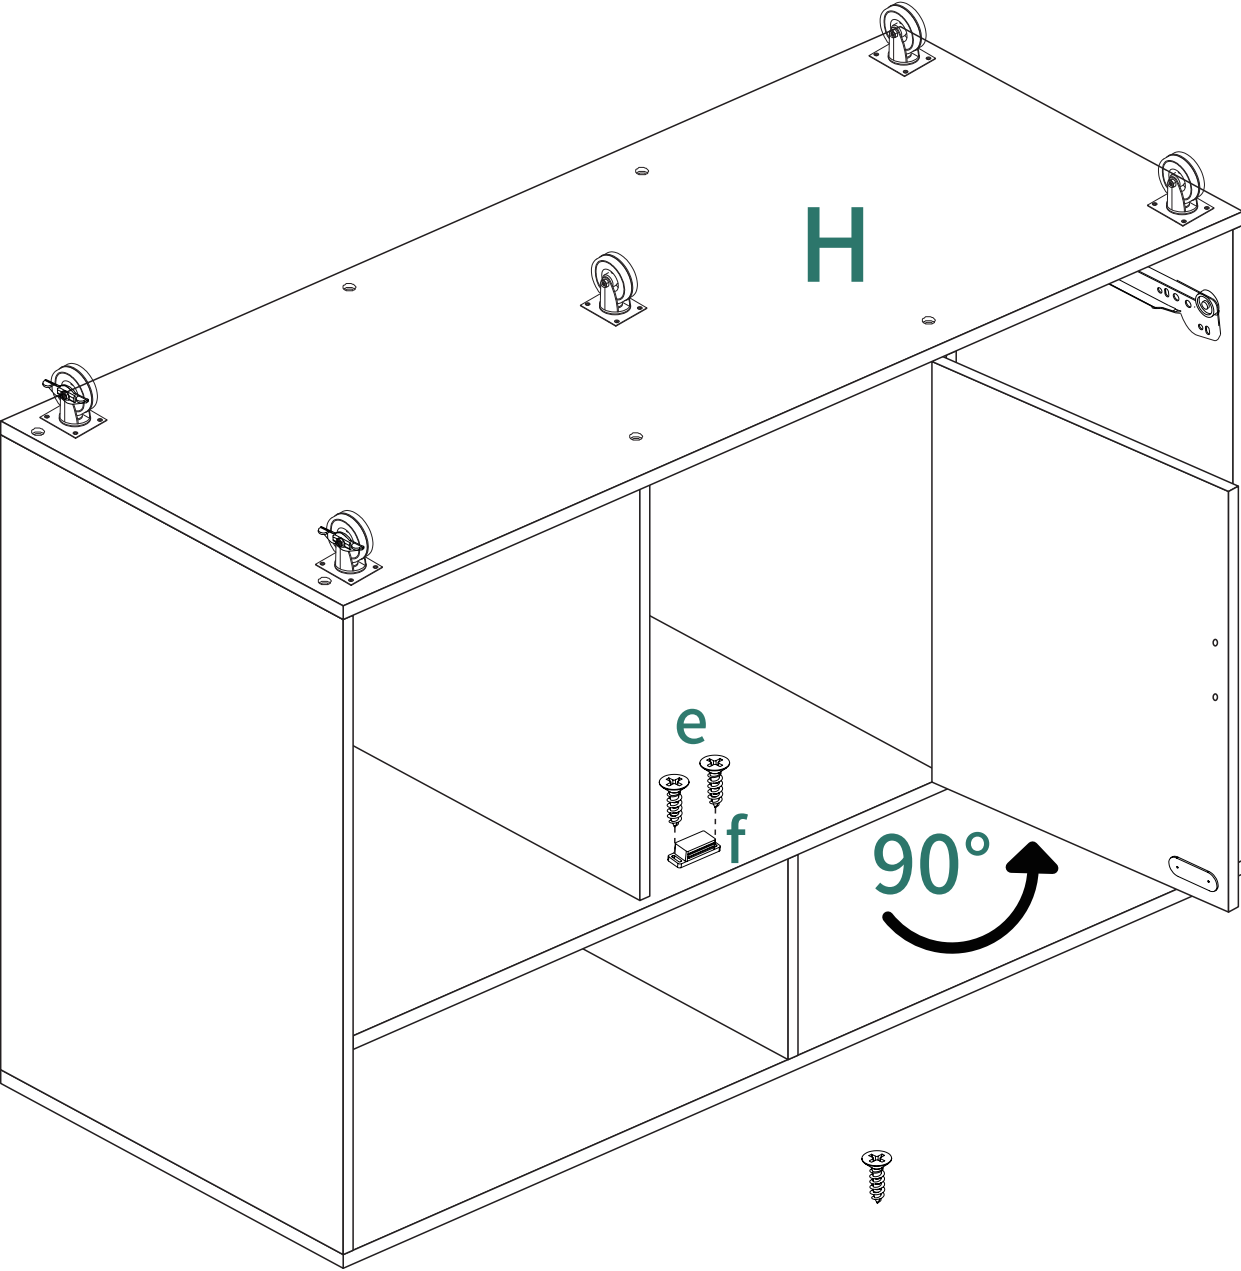


ASSEMBLY INSTRUCTIONS


19

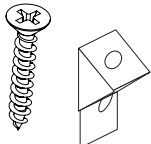


Ⓚ8pc

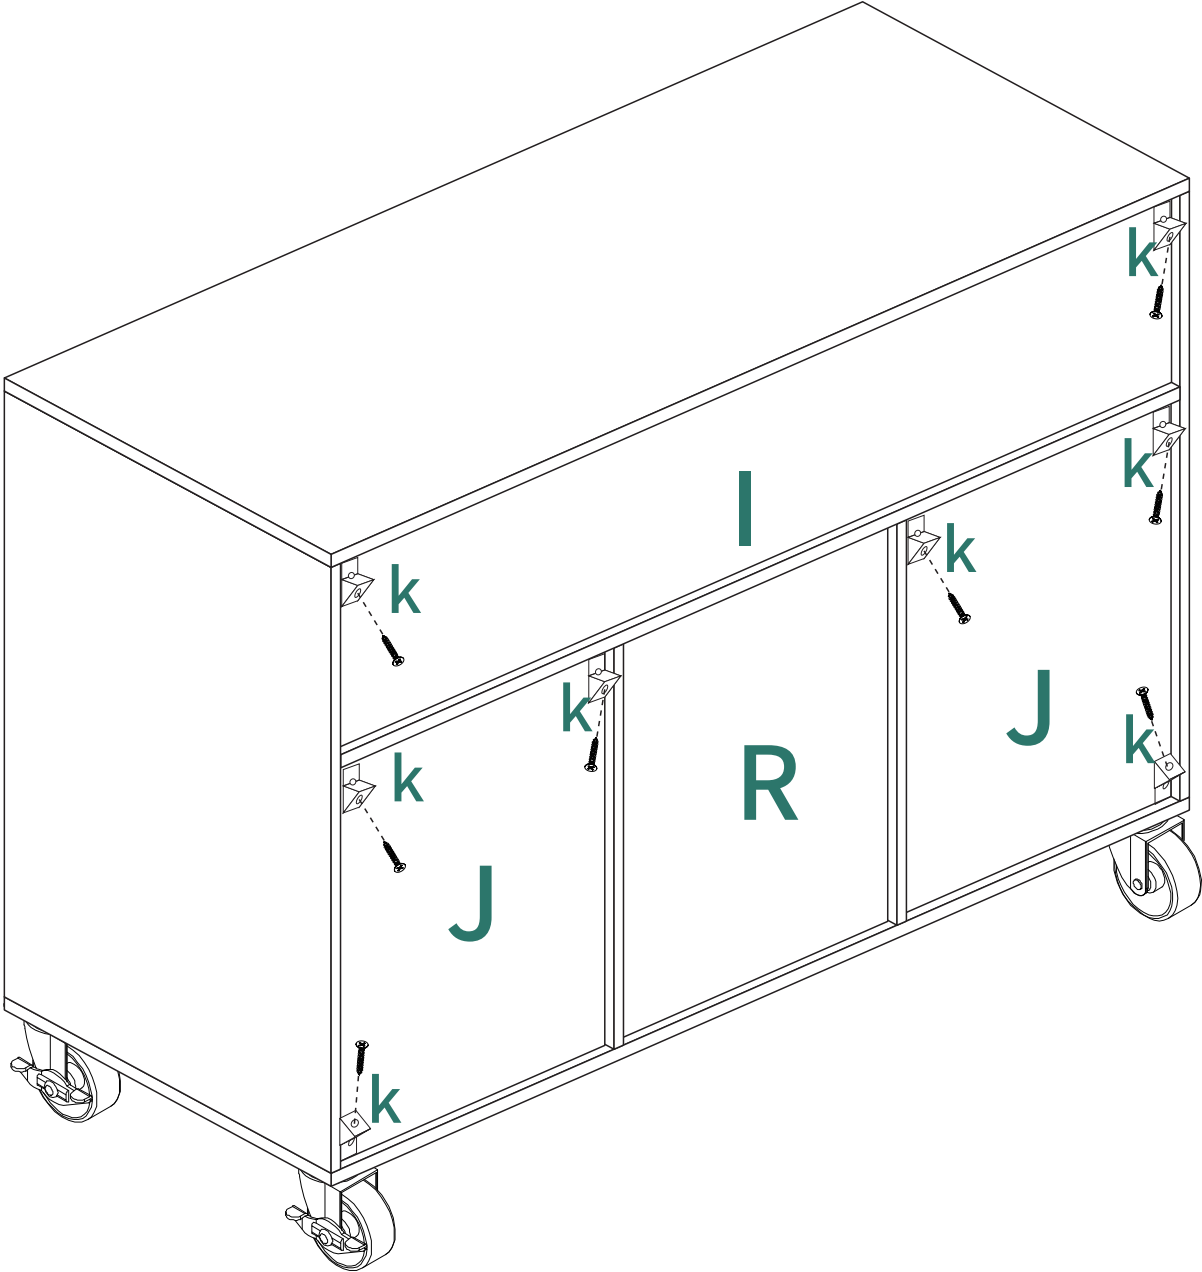

20

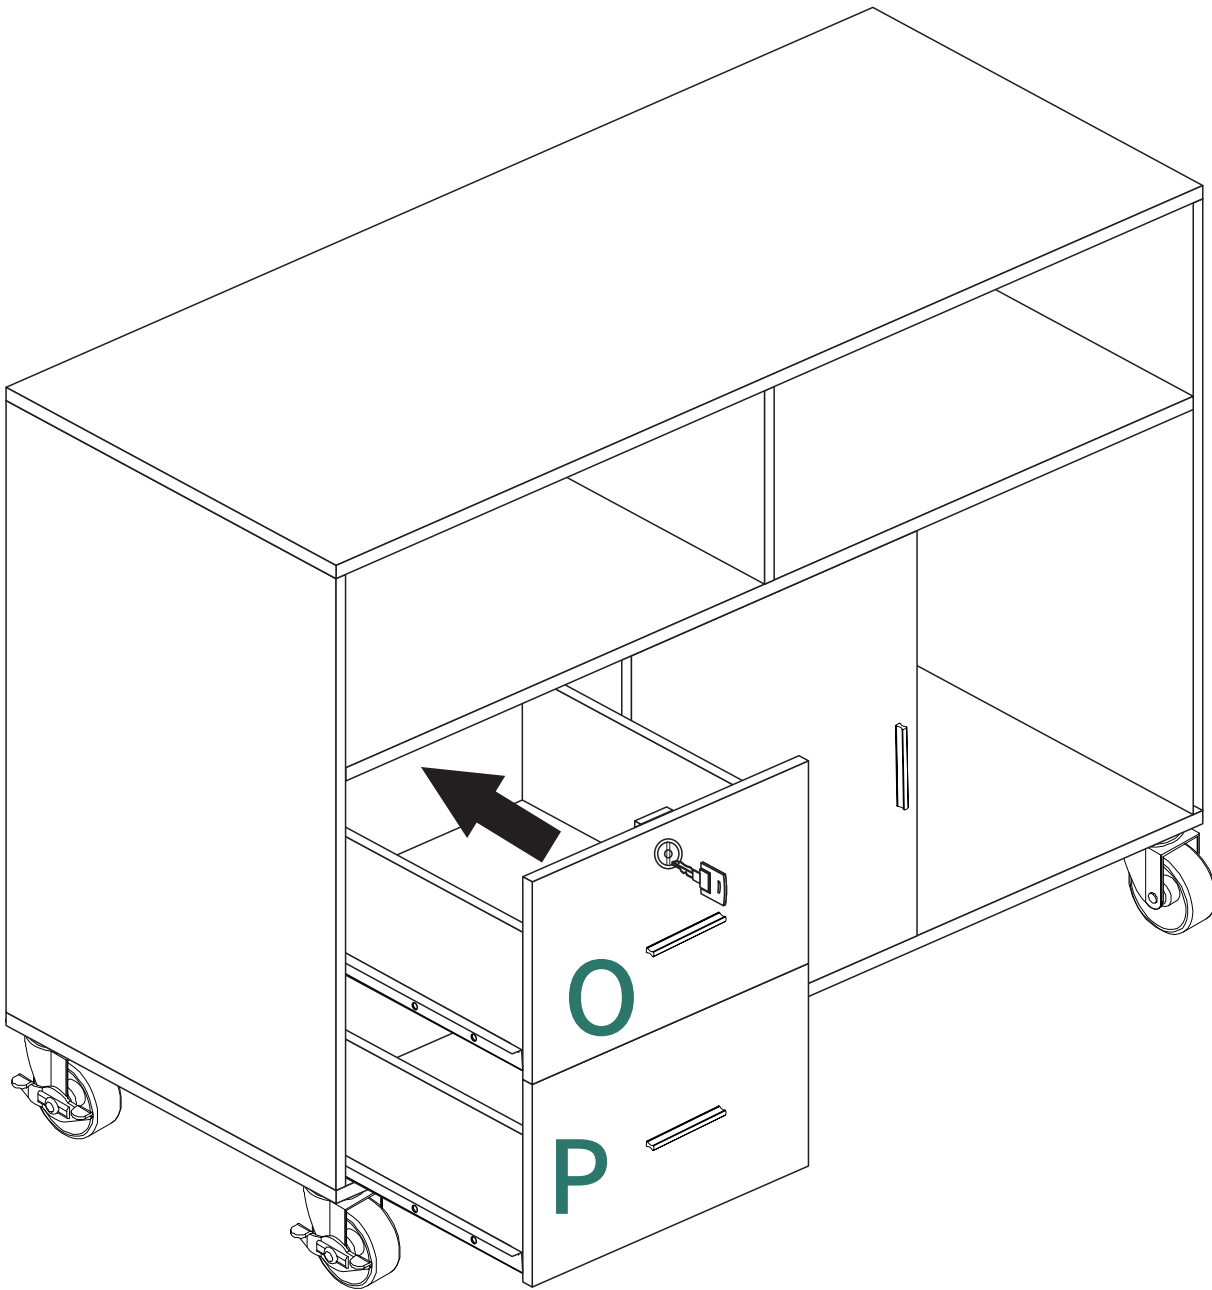

21

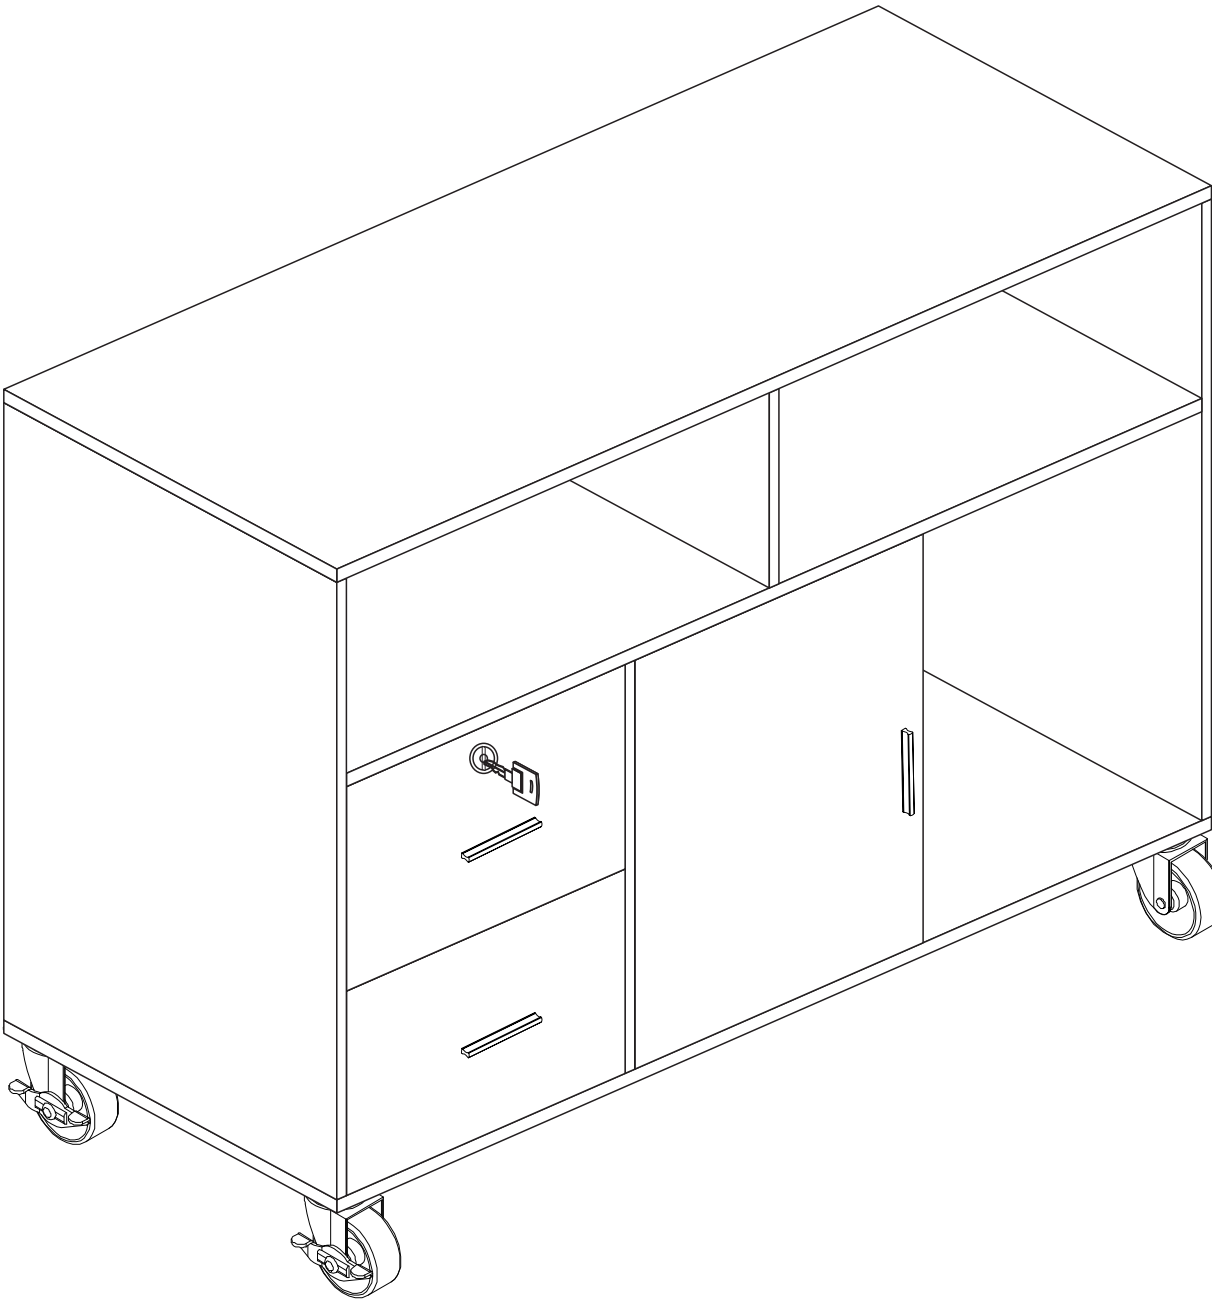

Complete Installation