


CORONA NARROW 3 DRAWER BEDSIDE #COR109

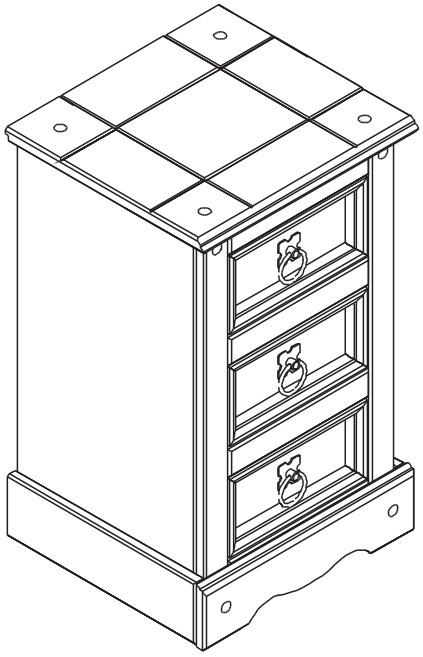

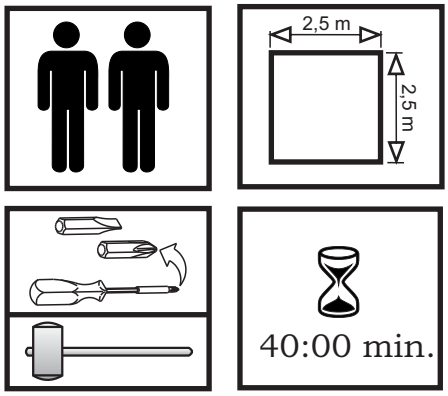

Width = 35cm
Depth = 32,5cm
Height = 57,9cm

- Please check that all fittings are correct before assembling the item.
- Replacement parts can be supplied for any damages to the item.
- Please keep all packaging until the item is assembled as we will require information from this if replacement parts are required.
- If you have any questions regarding the assembly of your item please call 01709 836856 or email admin@mercersfurniture.co.uk

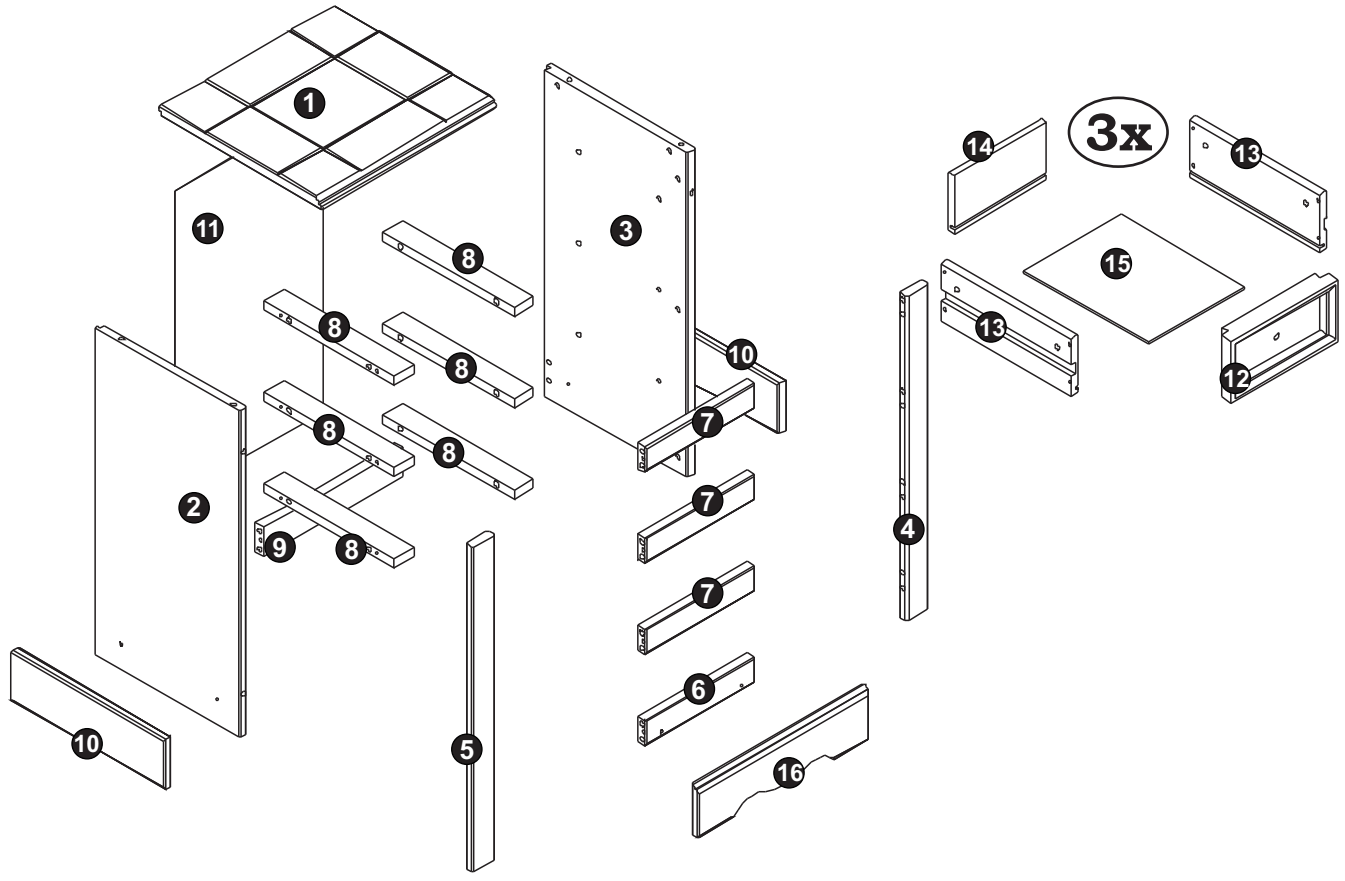


A	8,0 x 25 mm	40 x	D	8 x 8	15 x	G	08 x
B	3,5 x 30 mm	14 x	E		03 x	H	4,0 x 25 mm 10 x
C	8,0 x 40 mm	06 x	F		03 x	I	3,0 x 30 mm 32 x


J		10 x
K	4,0 x 30 mm	06 x
Y		01 x

ORDER: 2025-02-01 PROFORMA 16/2025 BATCH NUMBER: 24/0167


01

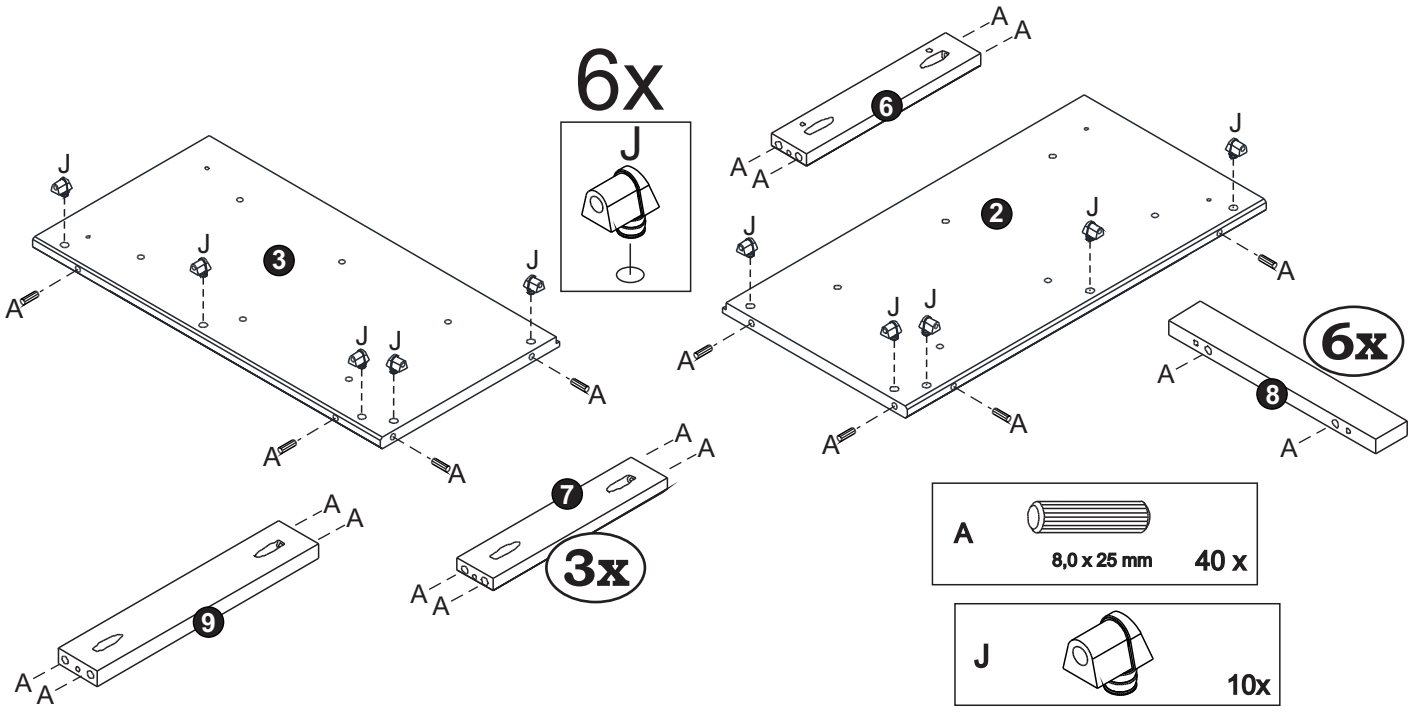


02

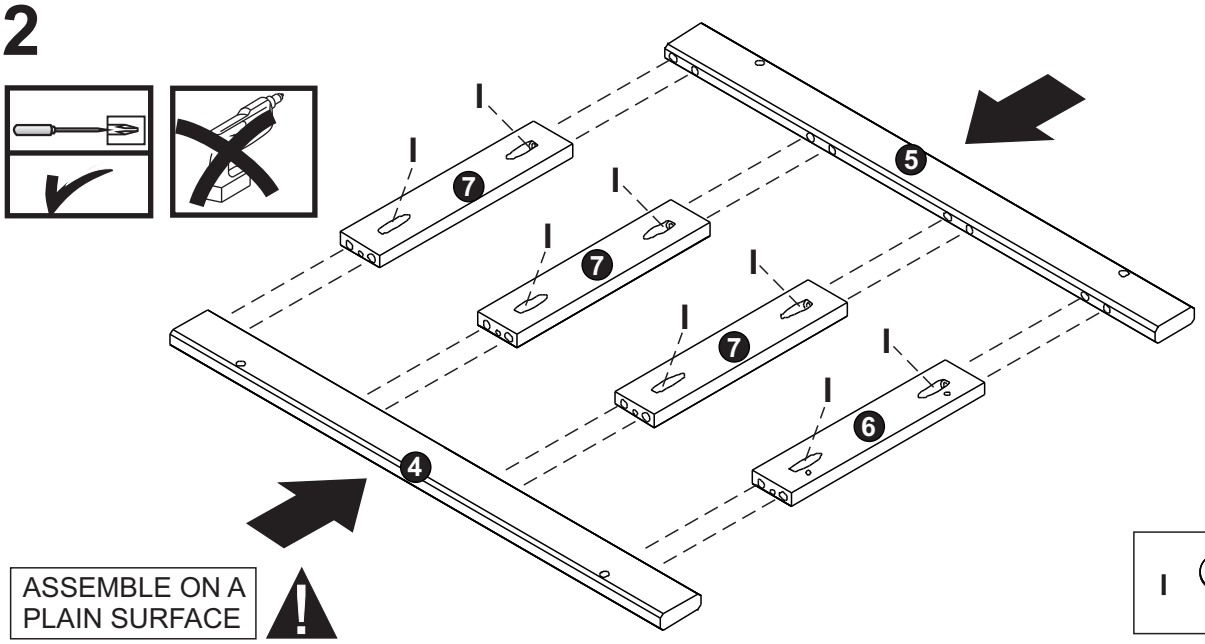


ASSEMBLE ON A PLAIN SURFACE




03

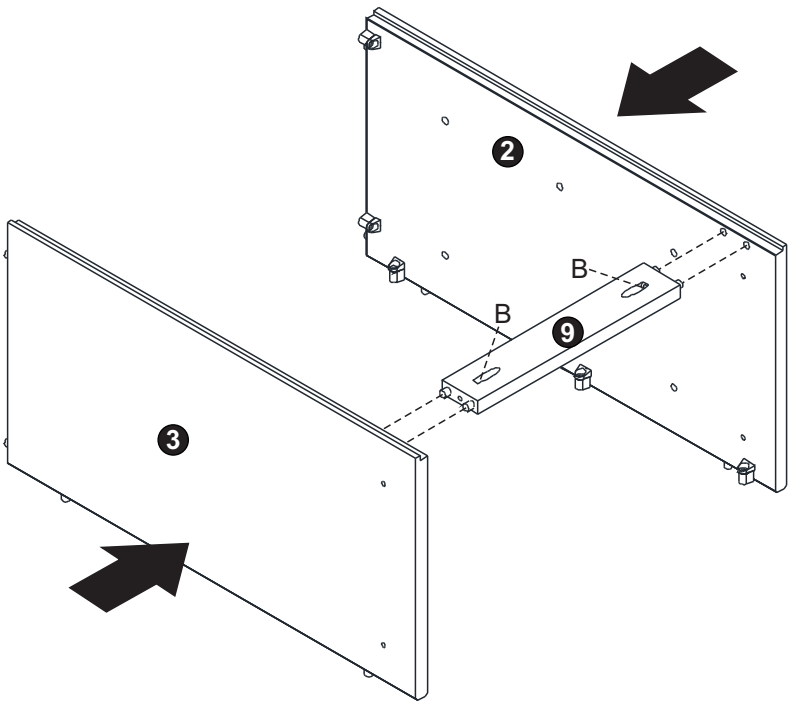




04

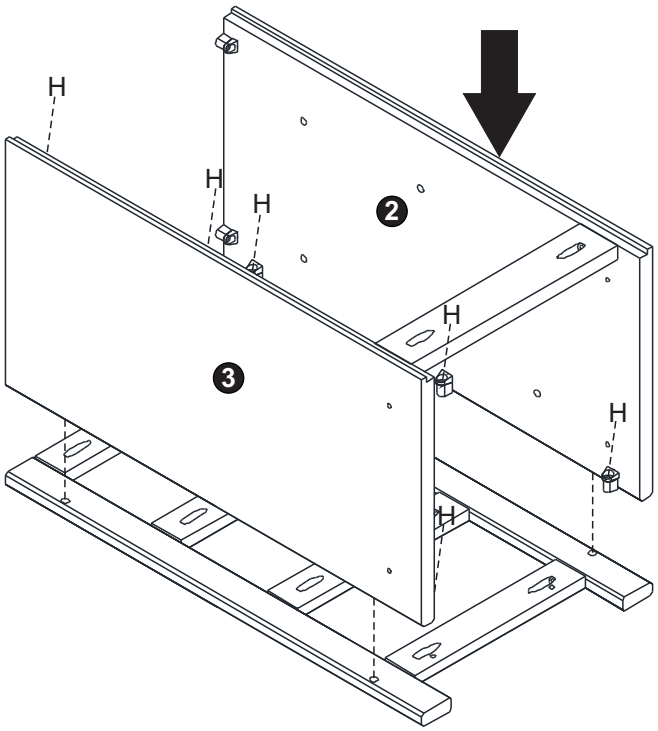


H 4,0 x 25 mm 06 x

05

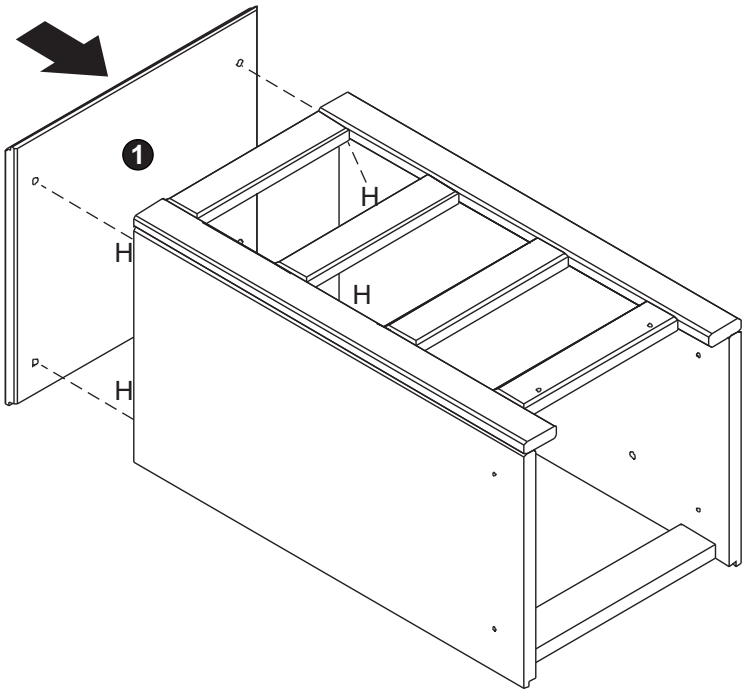


H 4,0 x 25 mm 04 x

06

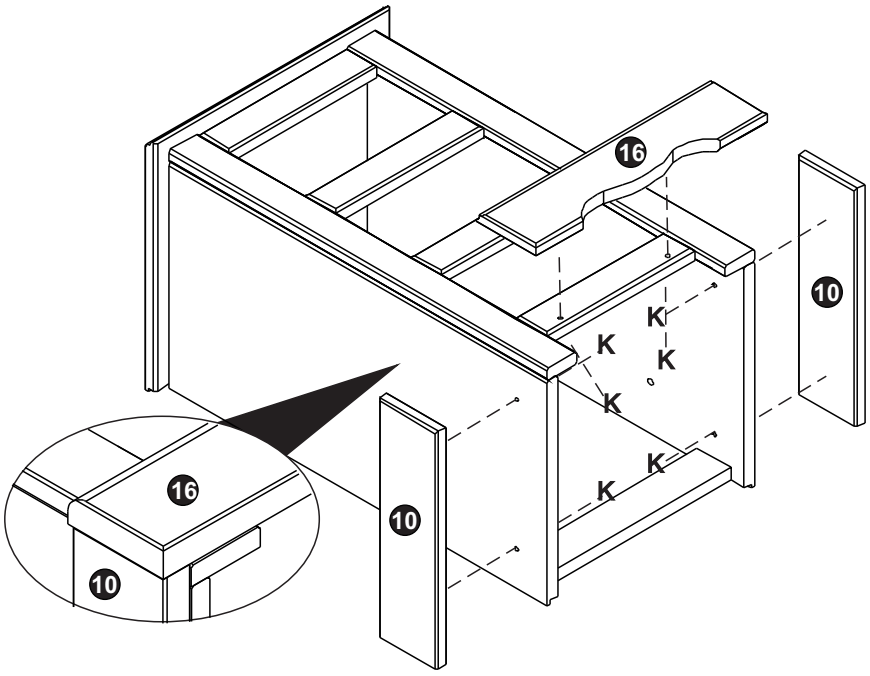


K 4,0 x 30 mm 06 x


07

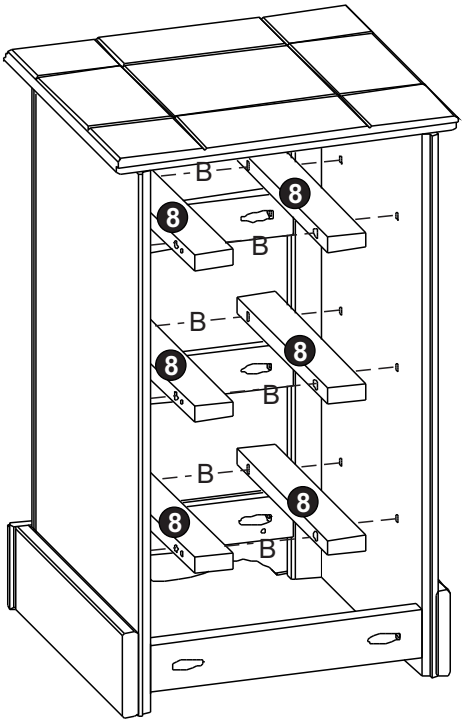

B	3,5 x 30 mm	12 x


08

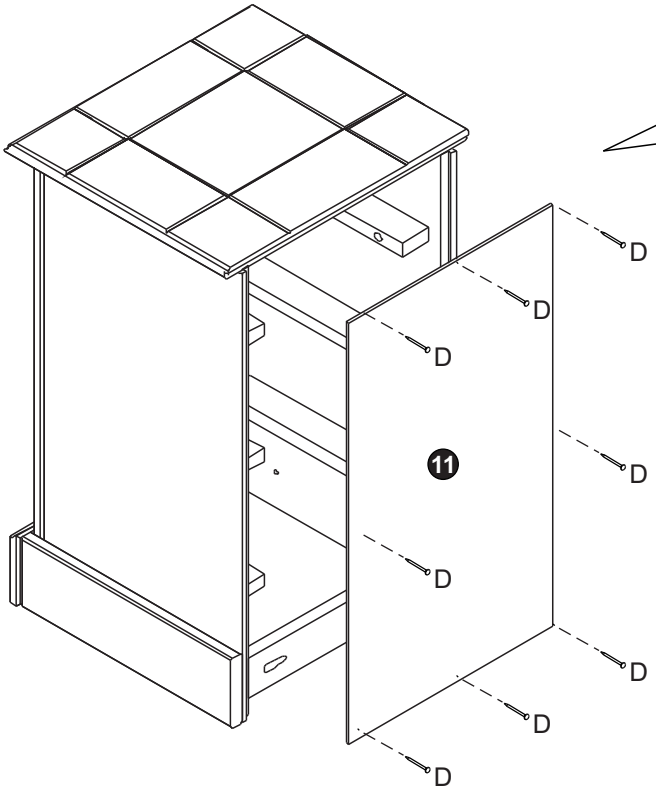

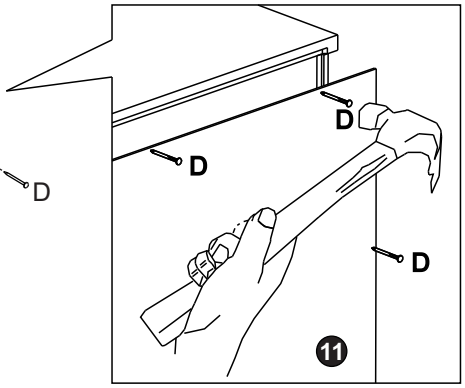


D	8 x 8	15 x

09

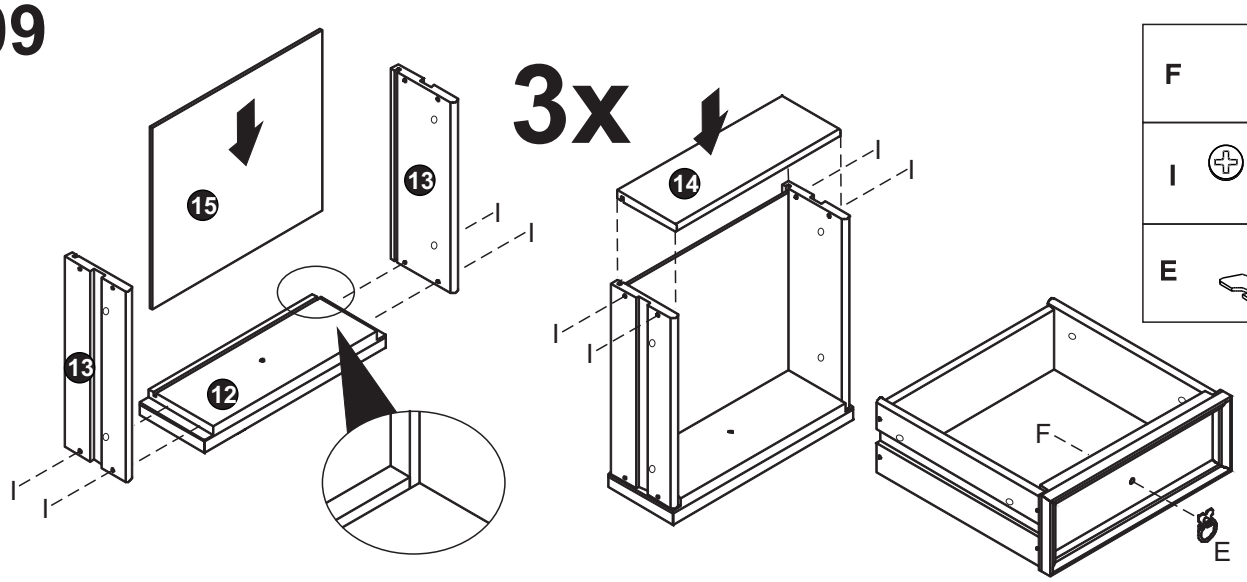

F		03 x
I	3,0 x 30 mm	24 x
E		03 x

10

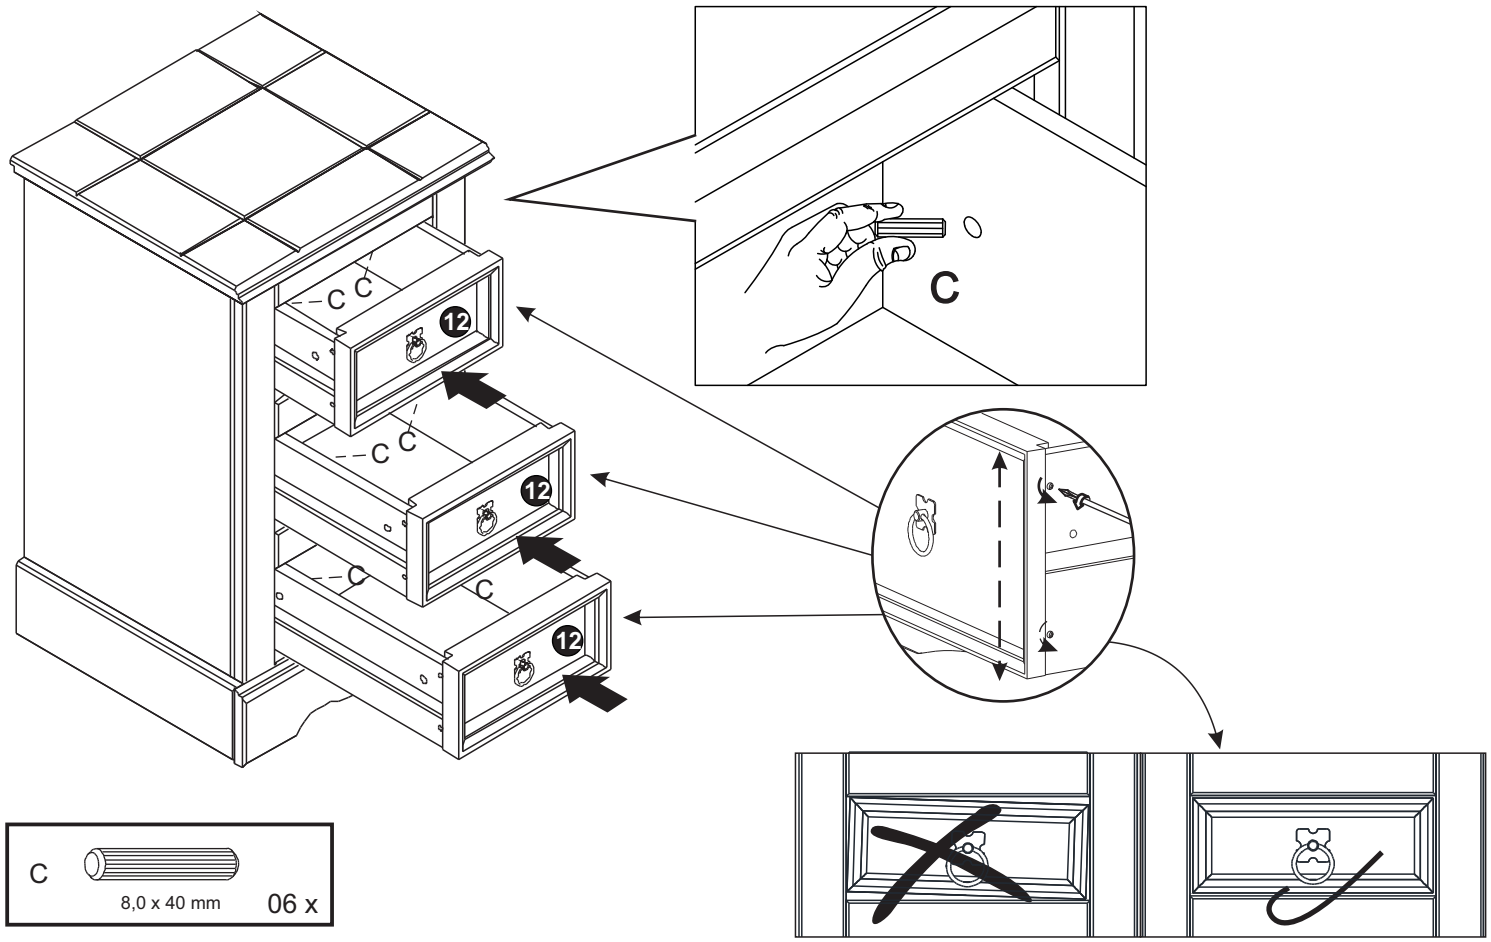


C

8,0 x 40 mm


06 x

11

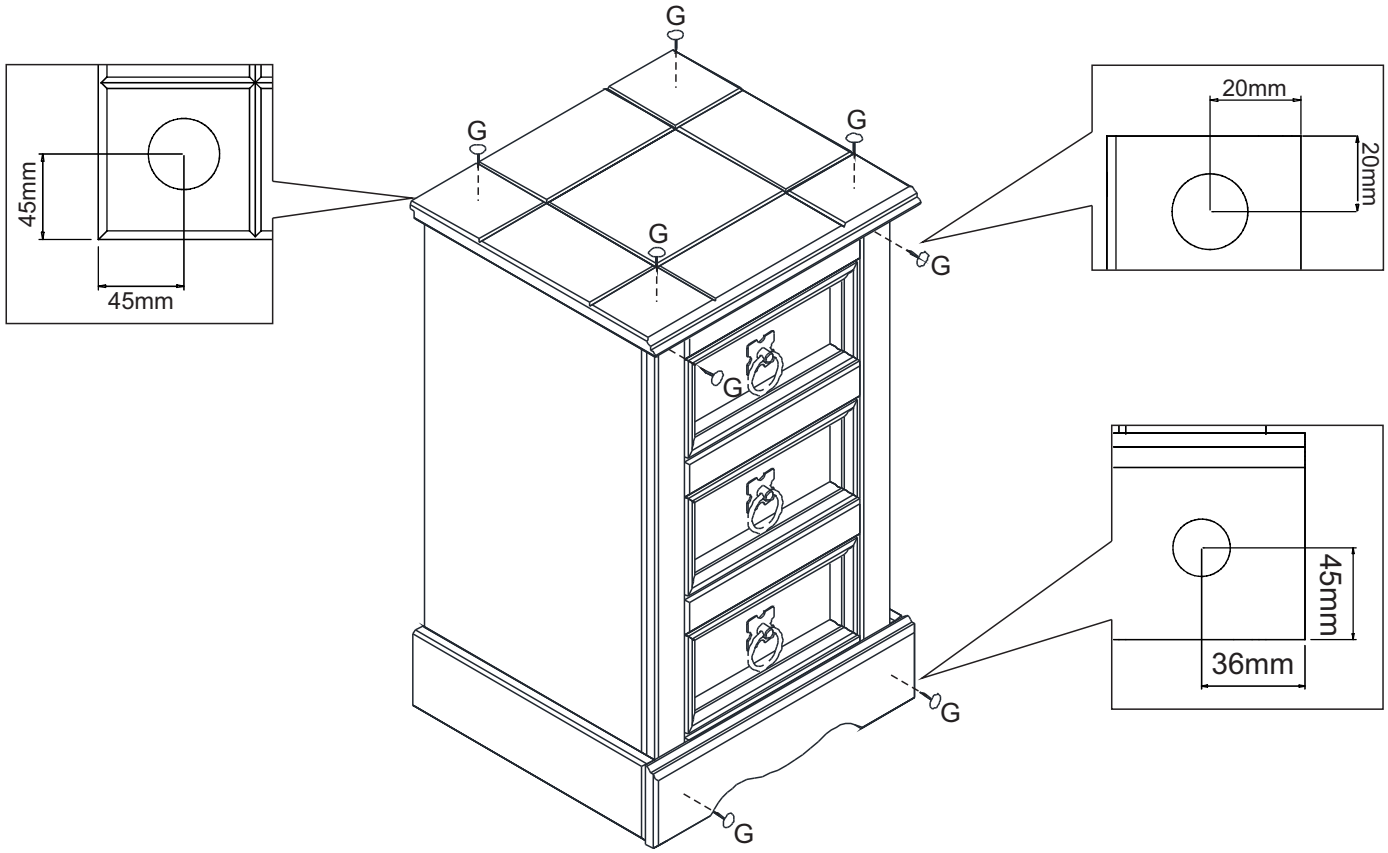

G

08 x

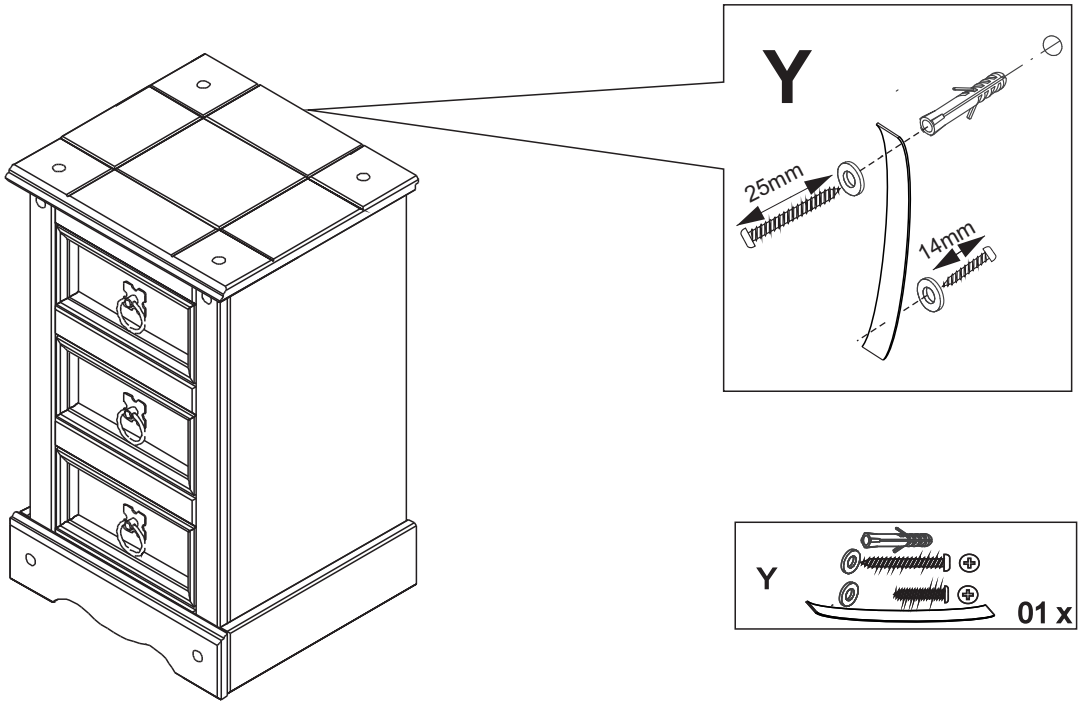

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, IT WILL REQUIRE SPECIAL FITTINGS (NOT SUPPLIED).

- Place the fixing strip against the wall and mark the position for drilling hole.

- Drill a hole in the wall to a depth of 30mm by using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you

to use a 5mm drill bit for a tighter fit.

- Insert the wall plug into the hole with end flush to the wall surface.

- Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.

- Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end fixing strip to the back

edge of the furniture top using the 14mm screw + washer and securely tighten.