


ASSEMBLY INSTRUCTIONS

Bath Deluxe Storage Hutch

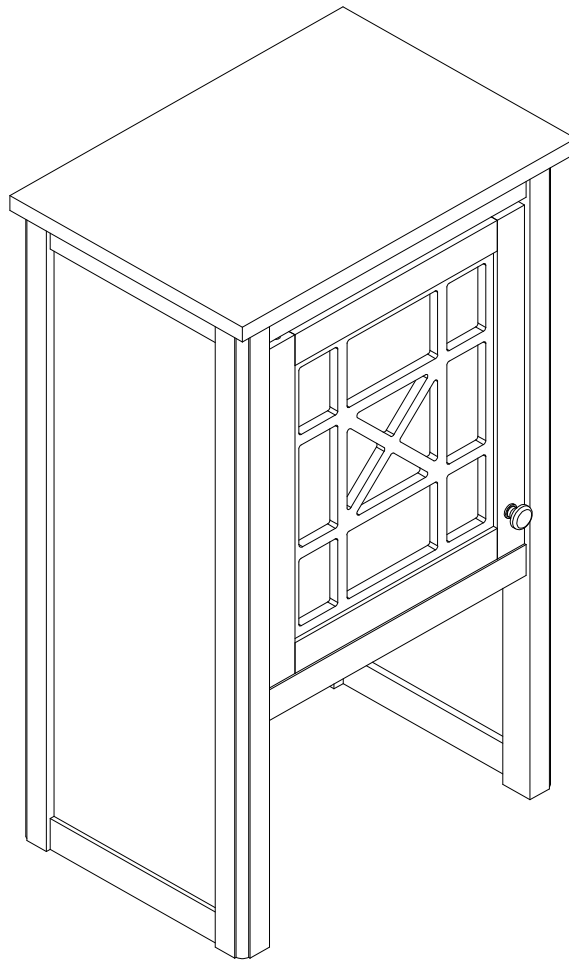


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"





. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
. Please assemble on a clean soft surface to avoid damage.

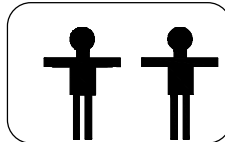


50 minutes

Tool Included


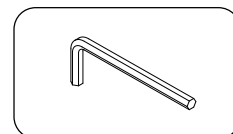
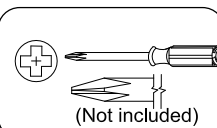


www.boltonfurniture.com

Part List- Bath Deluxe Storage Hutch

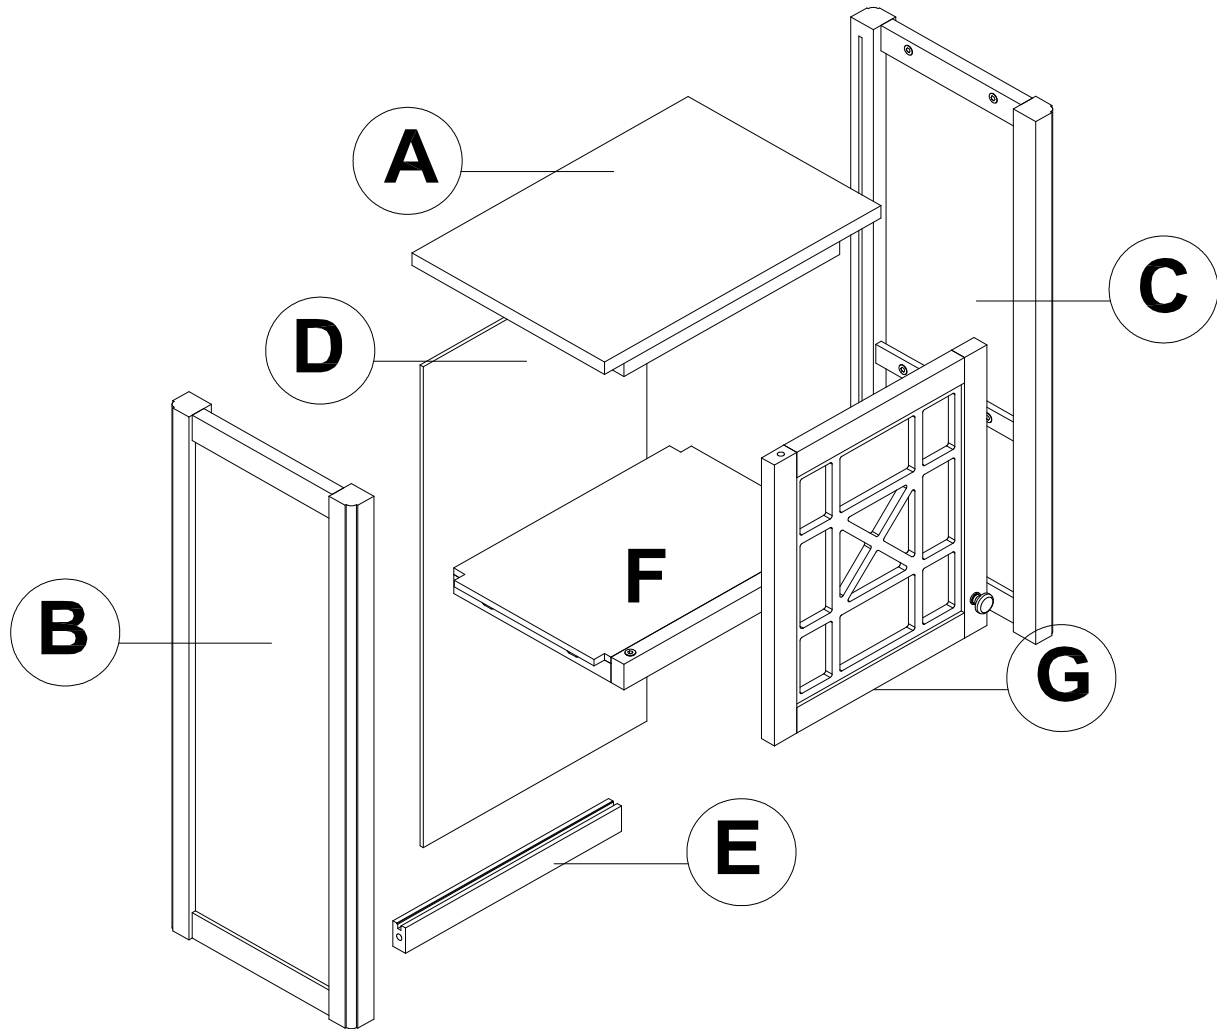


Identifying the hardware-Identify the hardware using the illustrations below.

H  08 M6X30mm	I  01 M6X45mm	J  03	K  01
L  02	M  01	N  01	O  01 M4*25
P  02	Q  04	R  01 Anti-Tip Bag	


Step 1

H  02
M6X30mm

M  01

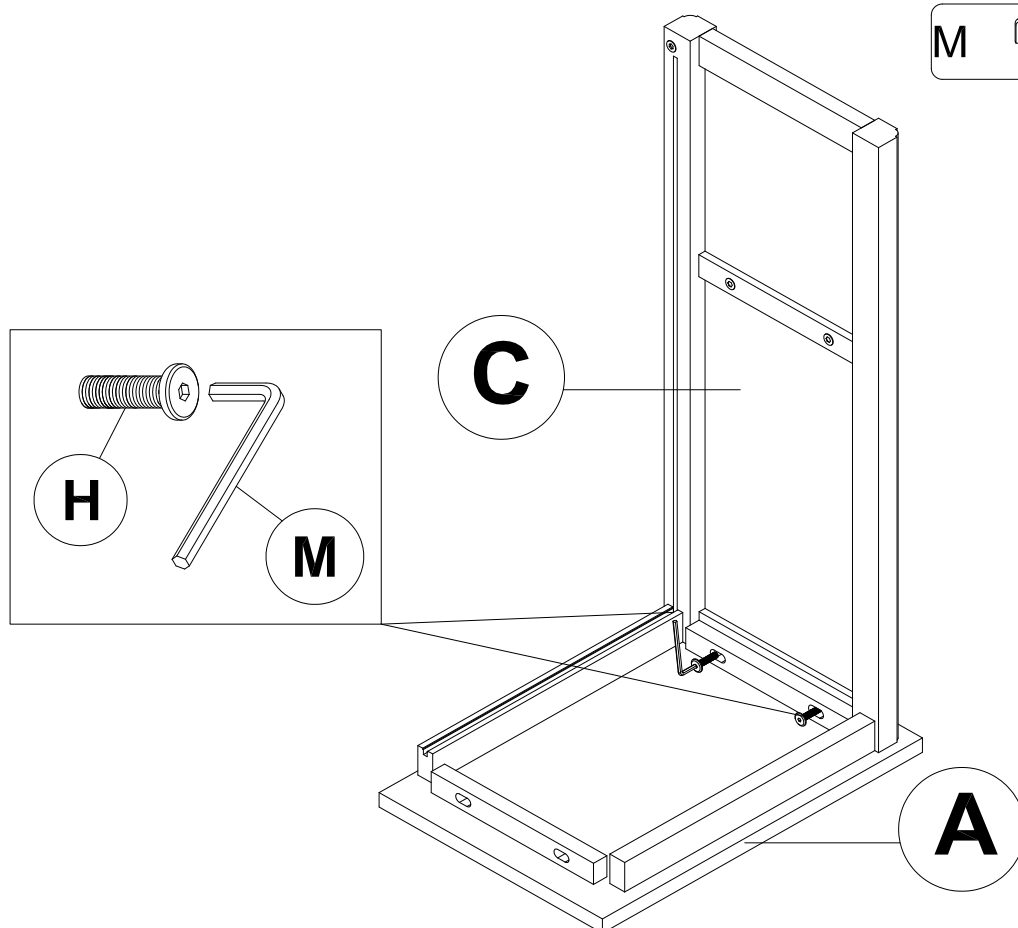

Step 2


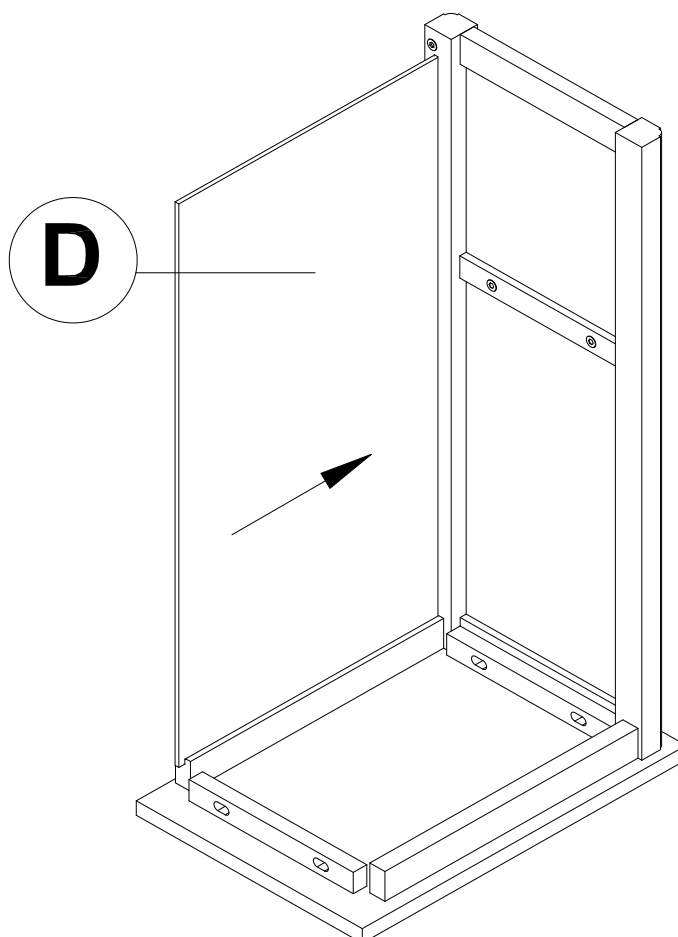


Step 3

H  02
M6X30mm


M  01



F

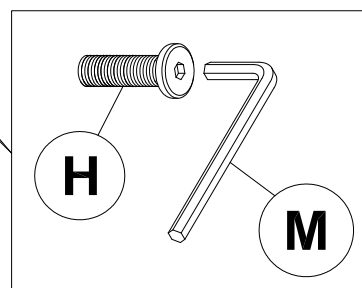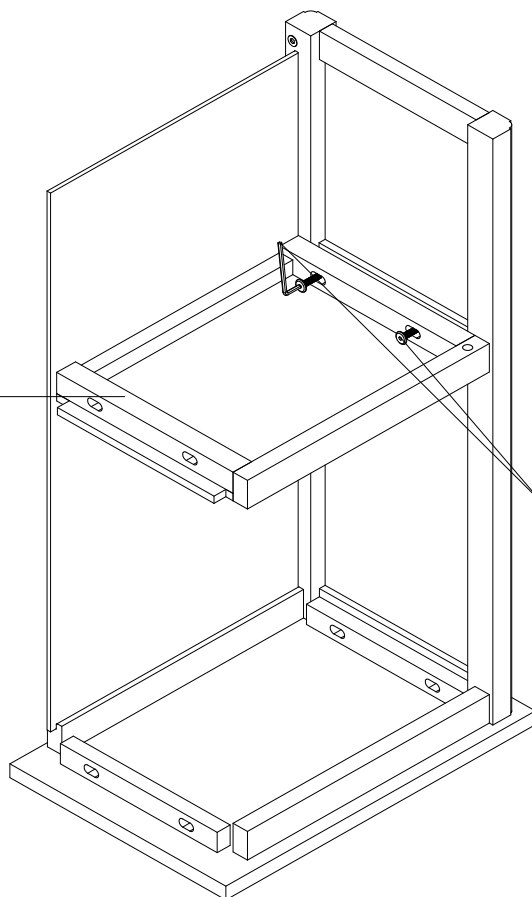



Step 4:

J  01



 01
(Not included)

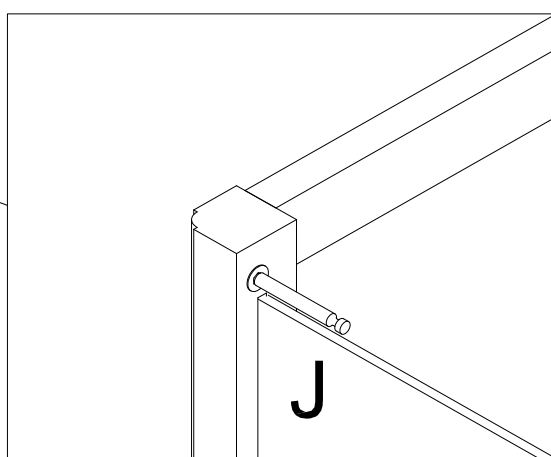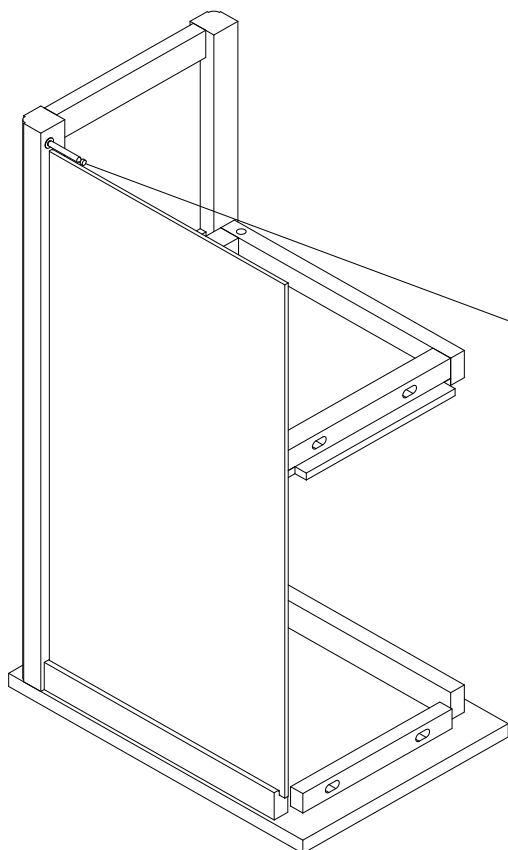




Step 5:

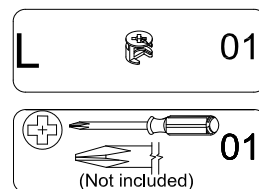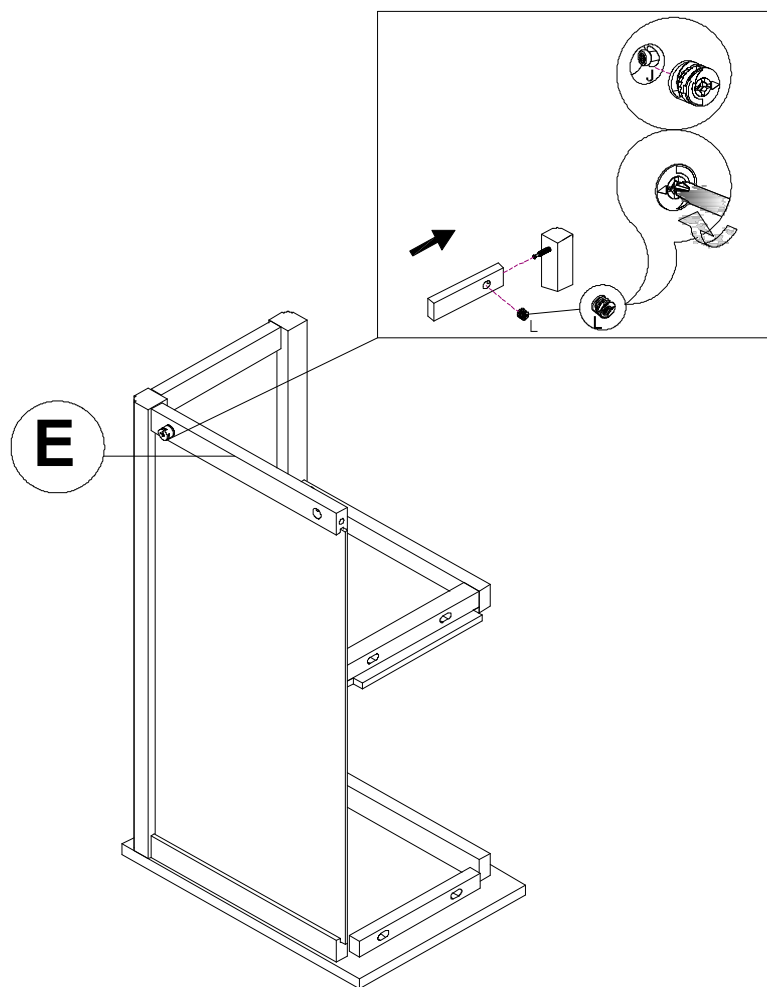

Step 6:

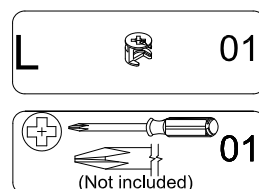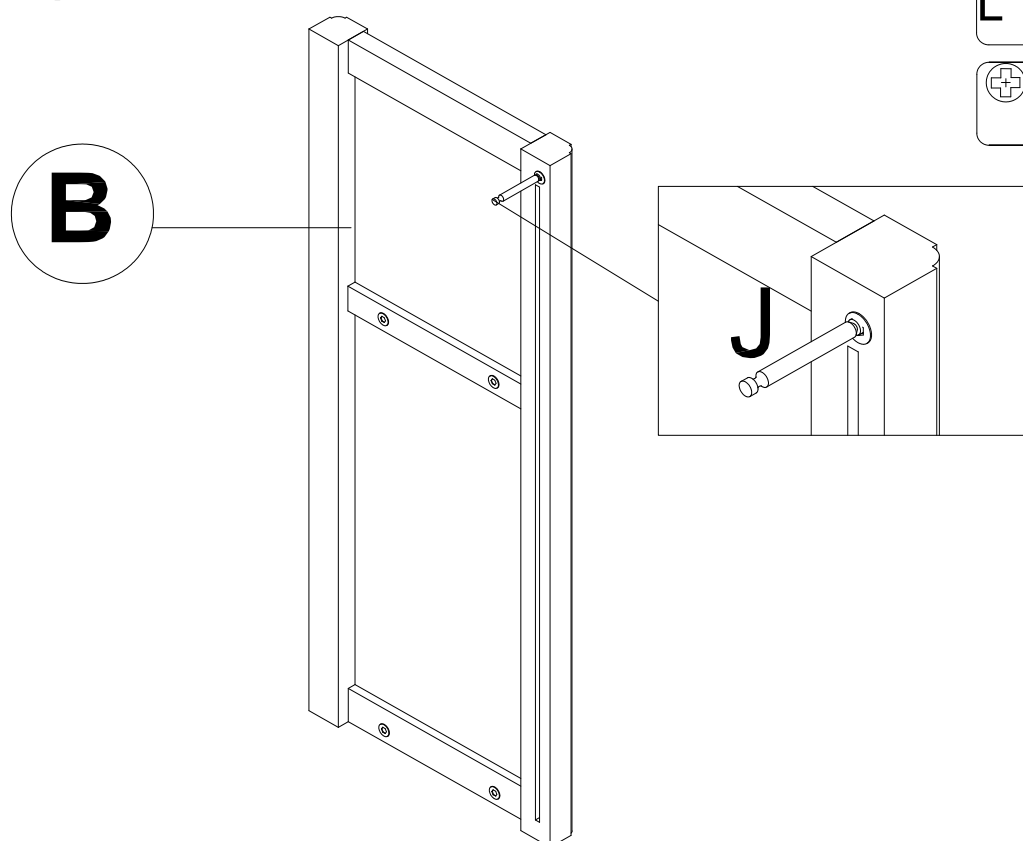


Step 7

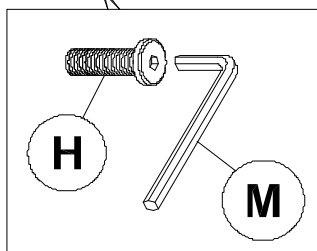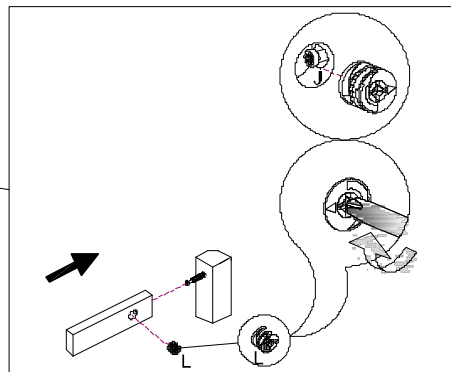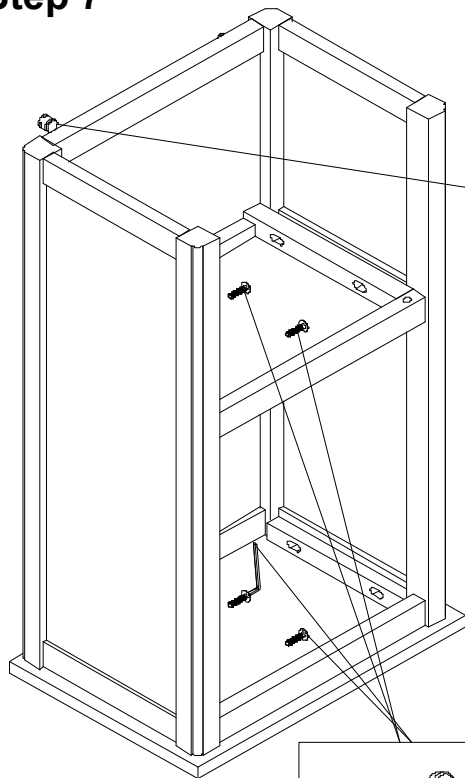

H		04
M6X30mm		
M		01
L		01
		01
(Not included)		

Step 8







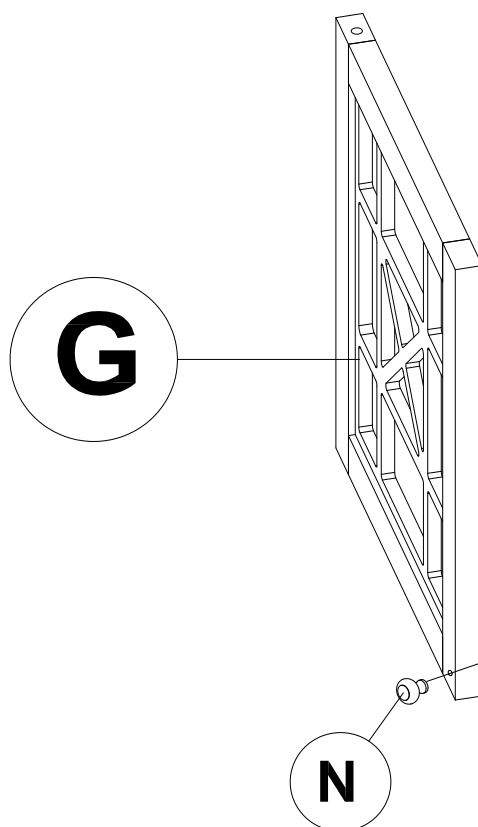


N






O

N		01
O		01
M4*25		
		01
(Not included)		



Step 9

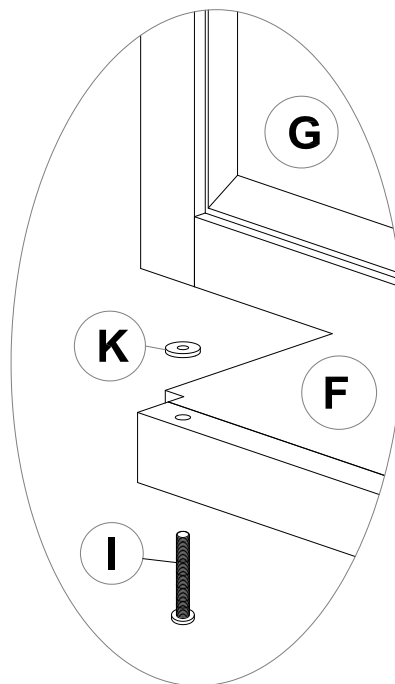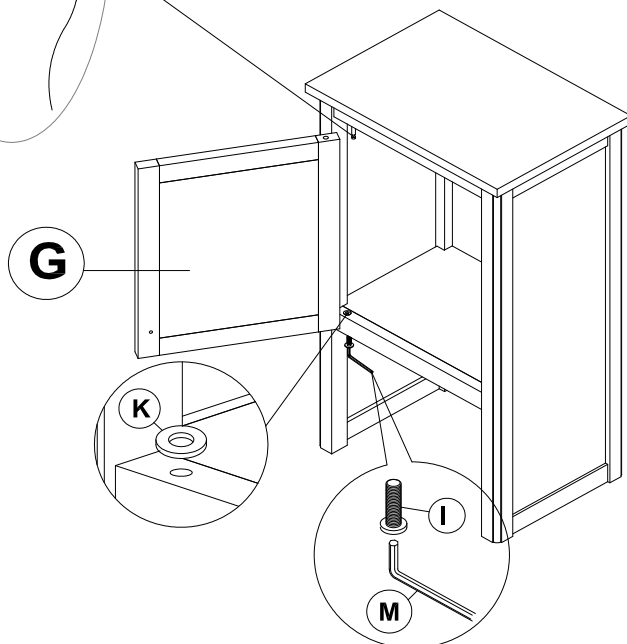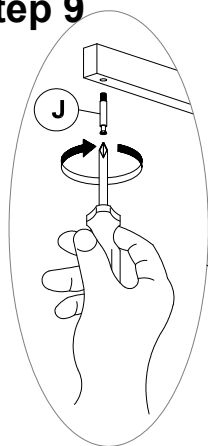





Step 10:

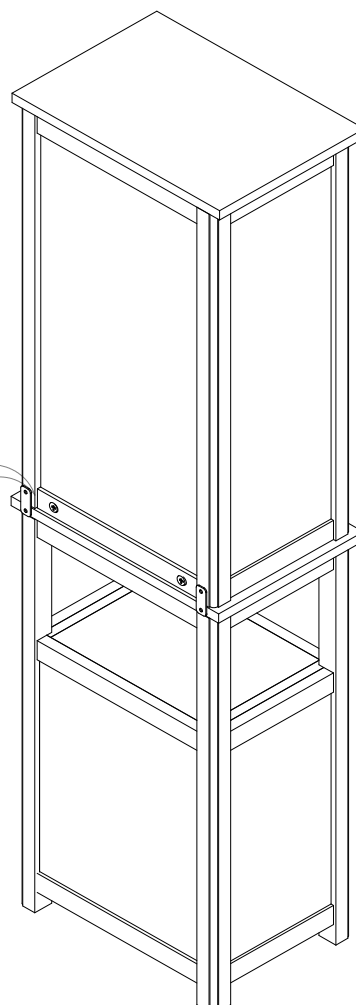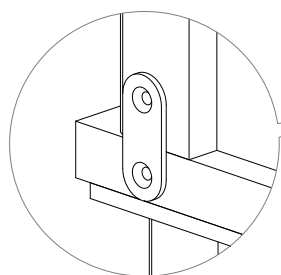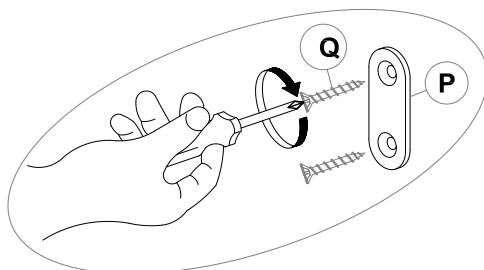


"R" Anti-Tip Bag

A	 4x14 Screw	02	C	 Plastic wall bracket	02
B	 4x35 Screw	02	D	 Nylon strap 140mm	01

Secure to Stud Behind Wallboard

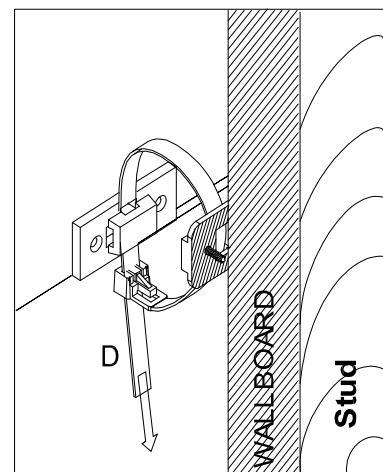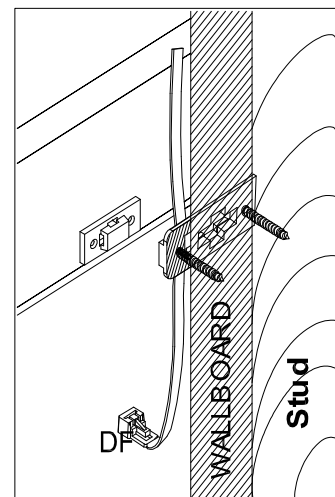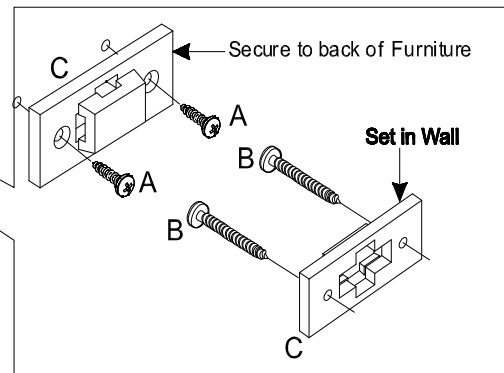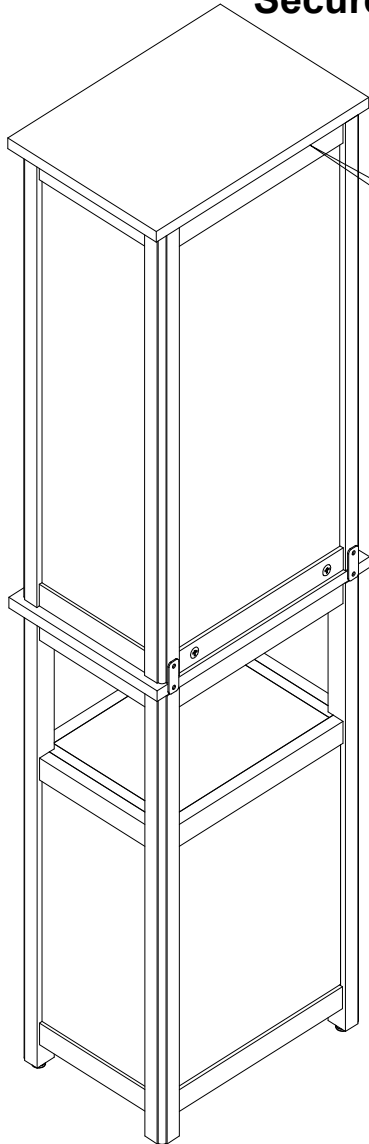

Secure to Stud behind Wallboard!

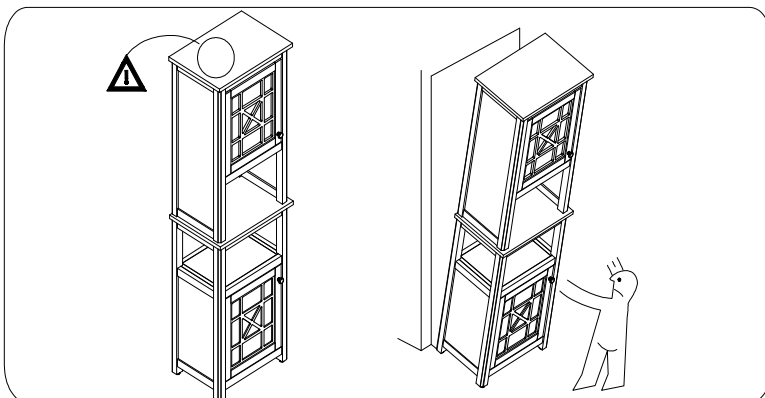

www.boltonfurniture.com