


Assembling Guide

Thank you for choosing our product!

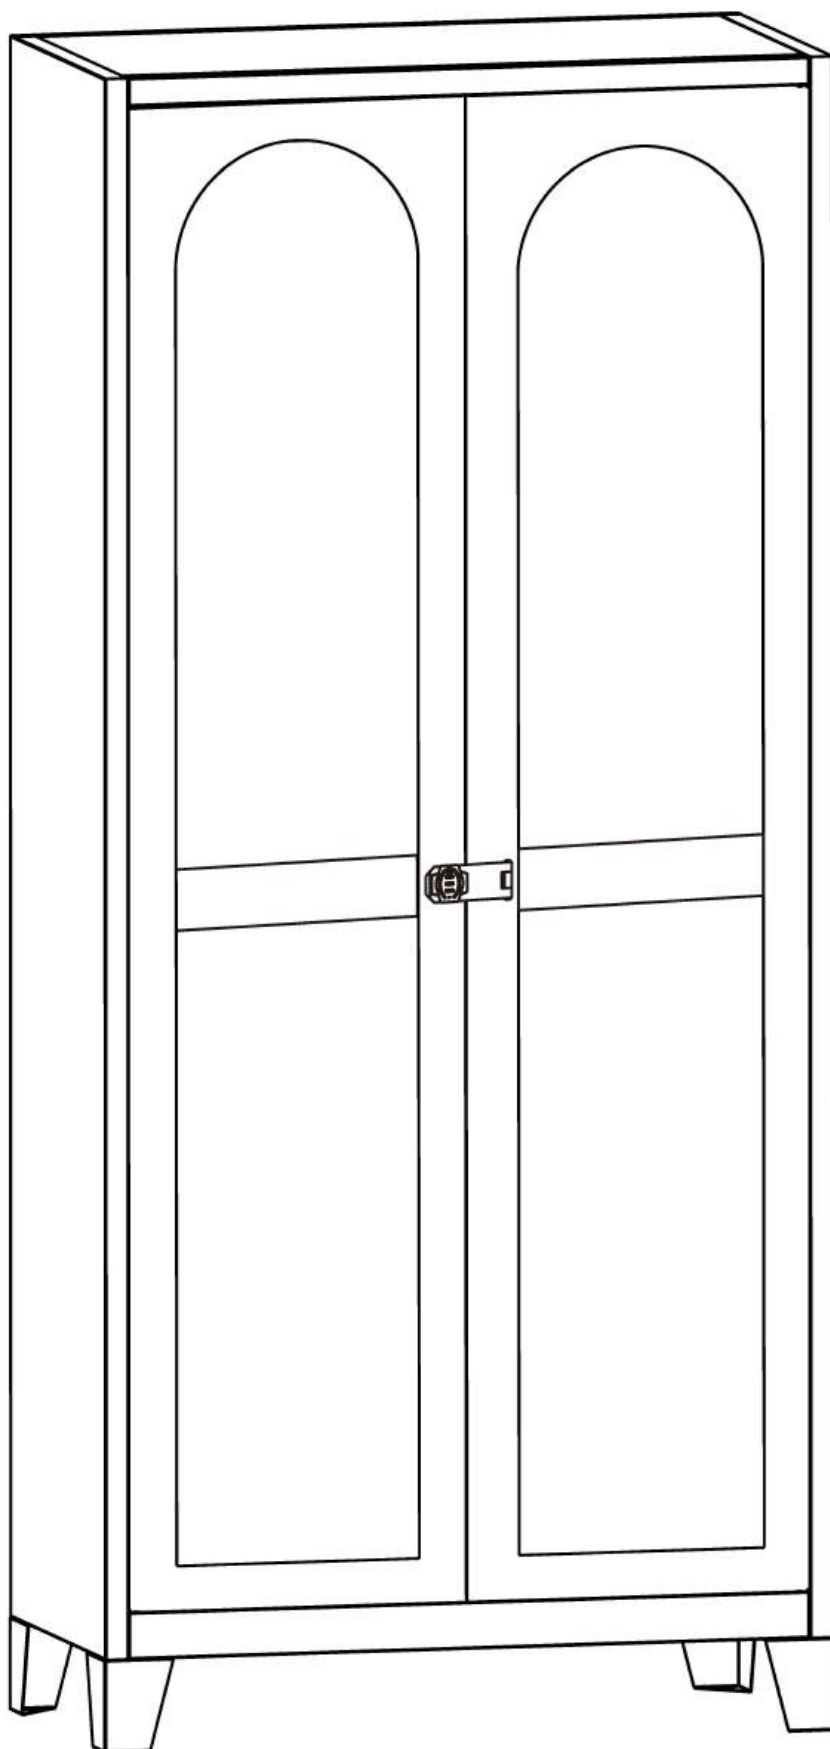

2 PERS



30 MINS

Exploded View




WARNING!






If furniture is tipped over, it may cause serious injury or even death. To prevent tip-over of this furniture, be sure to use it with the wall attachment devices provided. Use the appropriate screws and plugs for your wall.












If the supplied wall attachment devices do not match the walls in your home, consult your local professional to use screws and plugs that fit your walls. Please read and follow each step in the instructions carefully.

Please pay attention to the iron corner protectors and cabinet parts inside the package. If the iron corner guard is damaged, you can just discard it; if you find any broken or damaged cabinet parts, please contact customer service

immediately for replacement. Sharp edges of metal parts can cause serious injury.

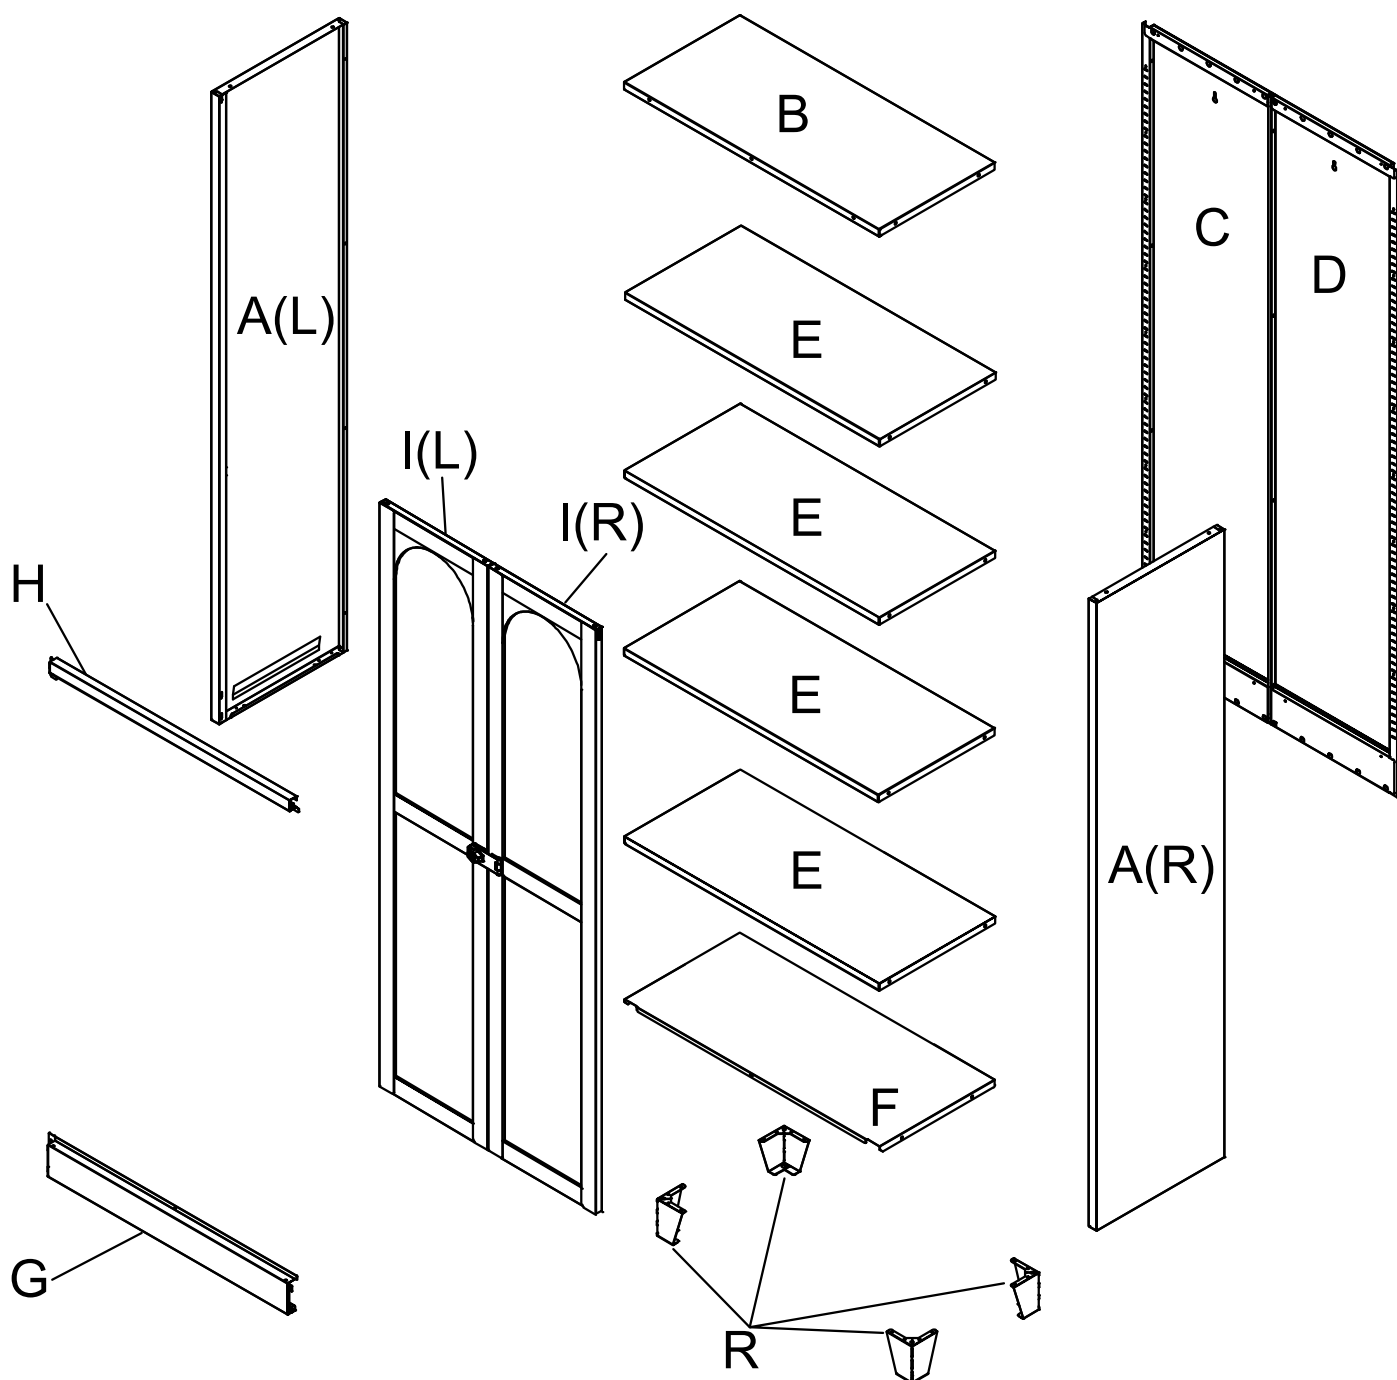

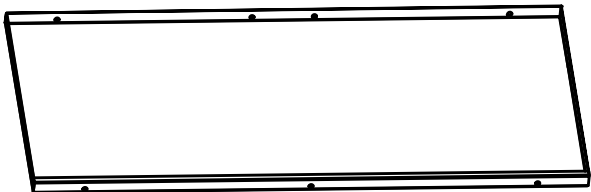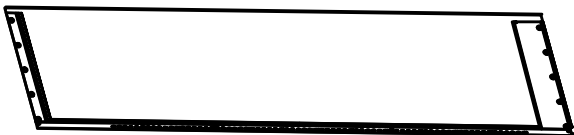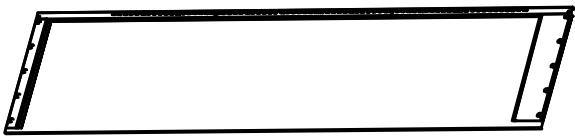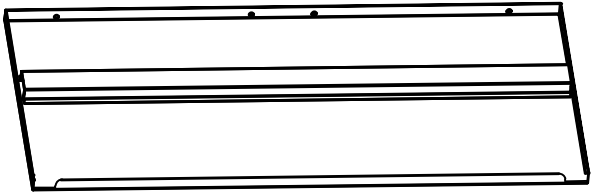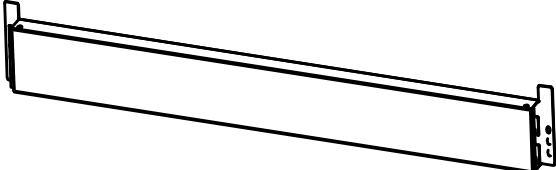
A(L)x1 Left Panel	A(R)x1 Right Panel
	
Bx1 Top Panel	Cx1 Left Back Panel
	
Dx1 Right Back Panel	Ex4 Shelf
	
Fx1 Bottom Panel	Gx1 Bottom Frame Bar (Thicker)
	

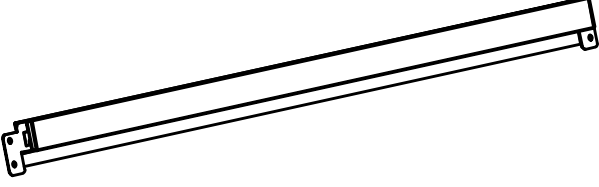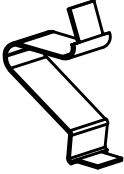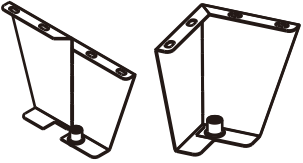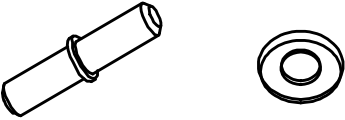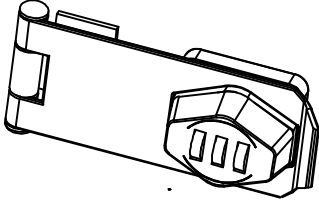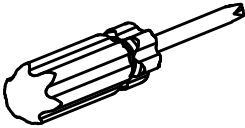Hx1 Top Frame Bar (Thinner)	I(L)x1 Left Door
	
I(R)x1 Right Door	Tx16 Shelf Clip
	
Sx47 Screw	Rx4 Foot Stand
	
Yx2 Hinge and Gasket	Vx2 Expansion screws
	
Ux1 Lock	Screwdriver
	
Ox4 Adjustable Foot	*It would be better if you could use power tools for installation.
	

We always provide some extra screws for backup.
Don't worry if you have some left over after installation.


STEP 1 Install the back.

Attach D to C, and secure with 4 S screws.

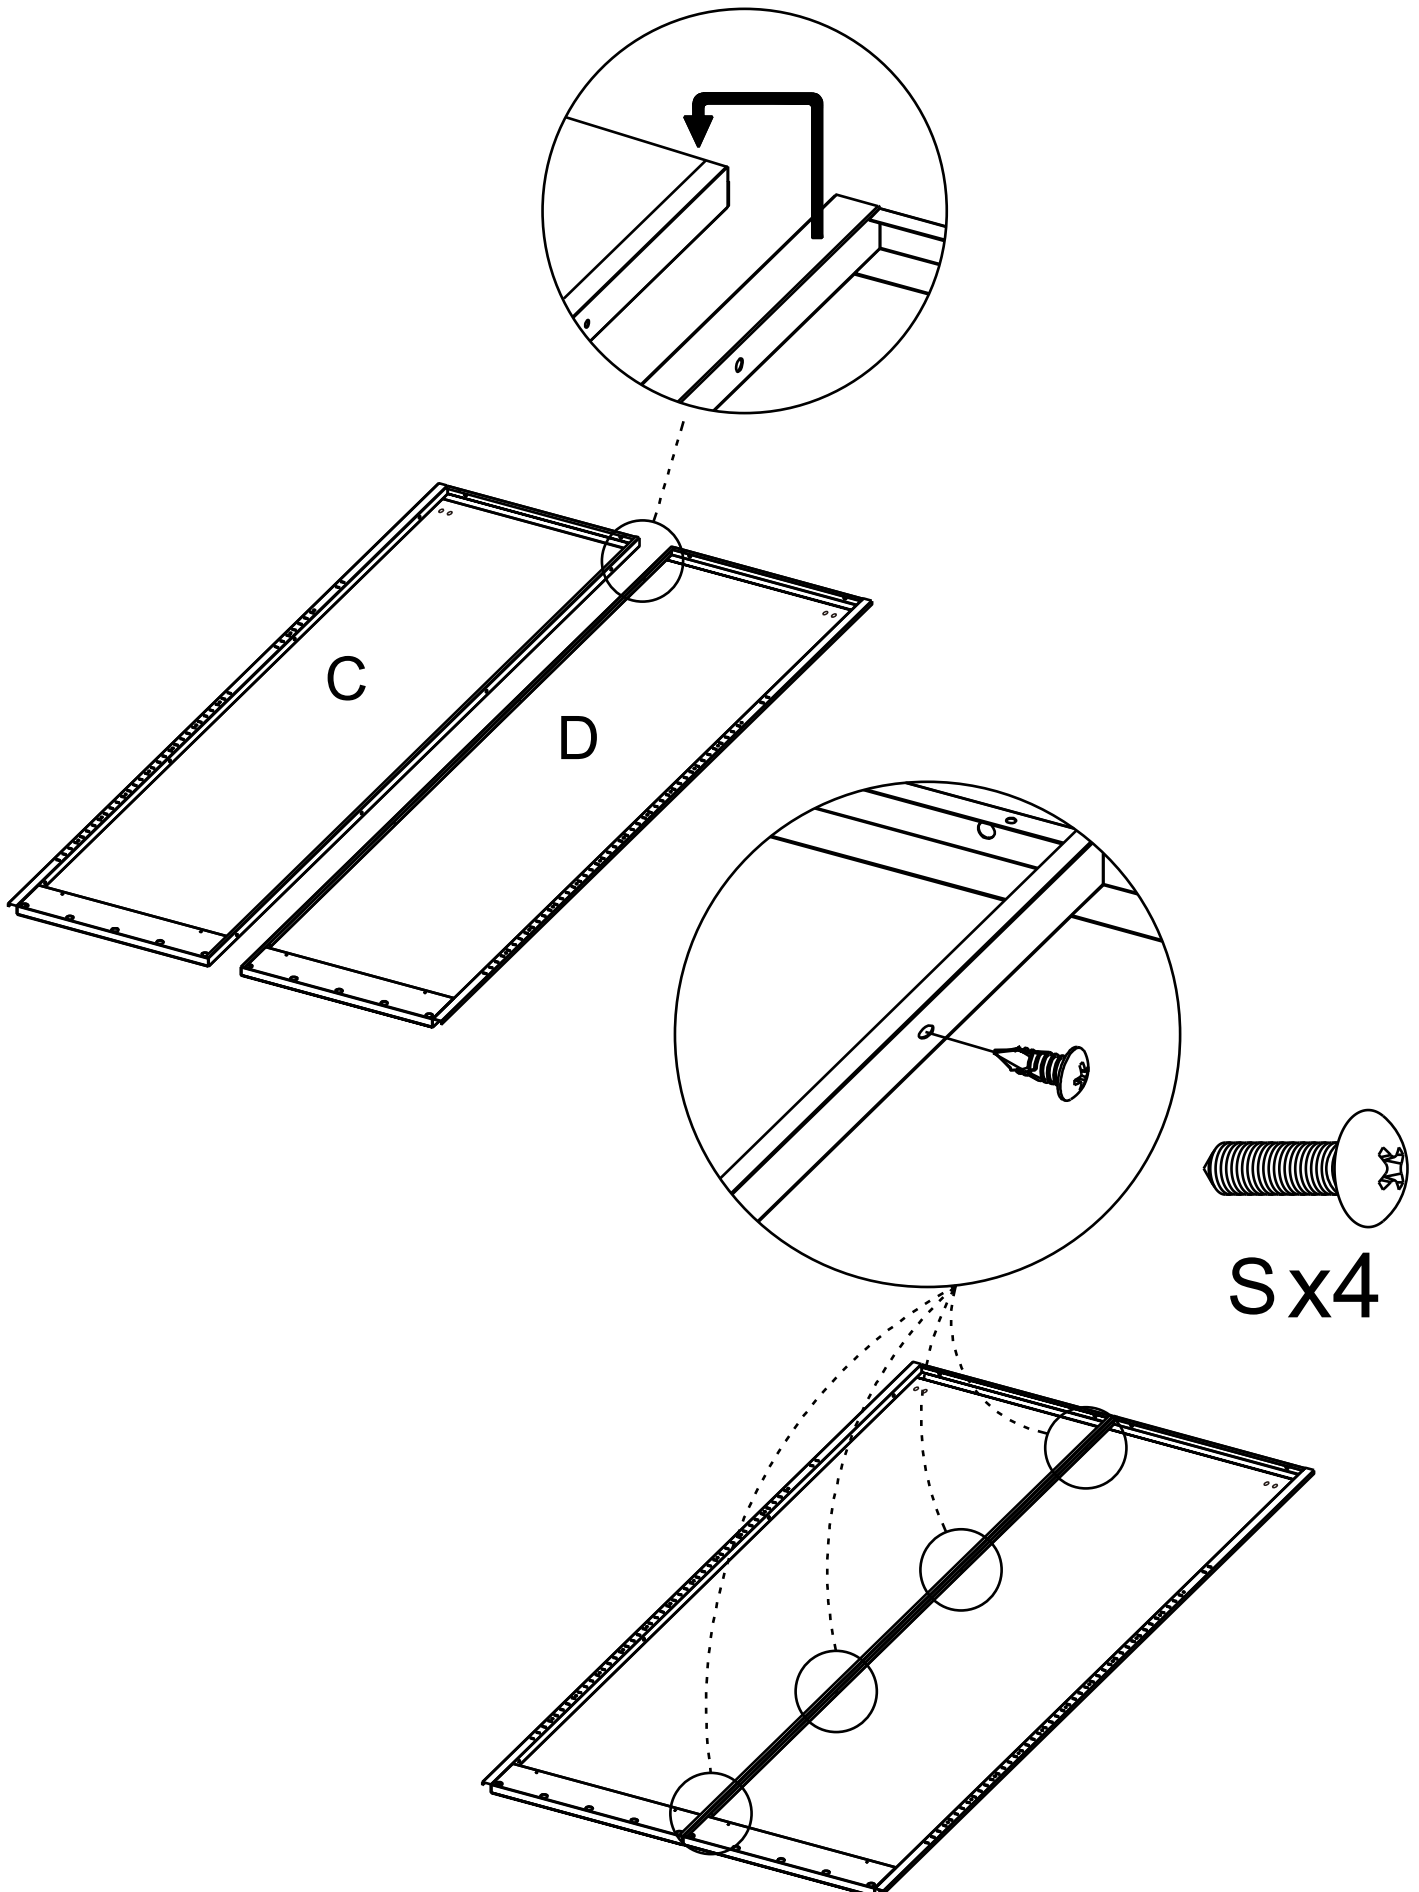


STEP 2 Install the sides.

Attach A (L) and A(R) to the back, and secure with 8 S screws.

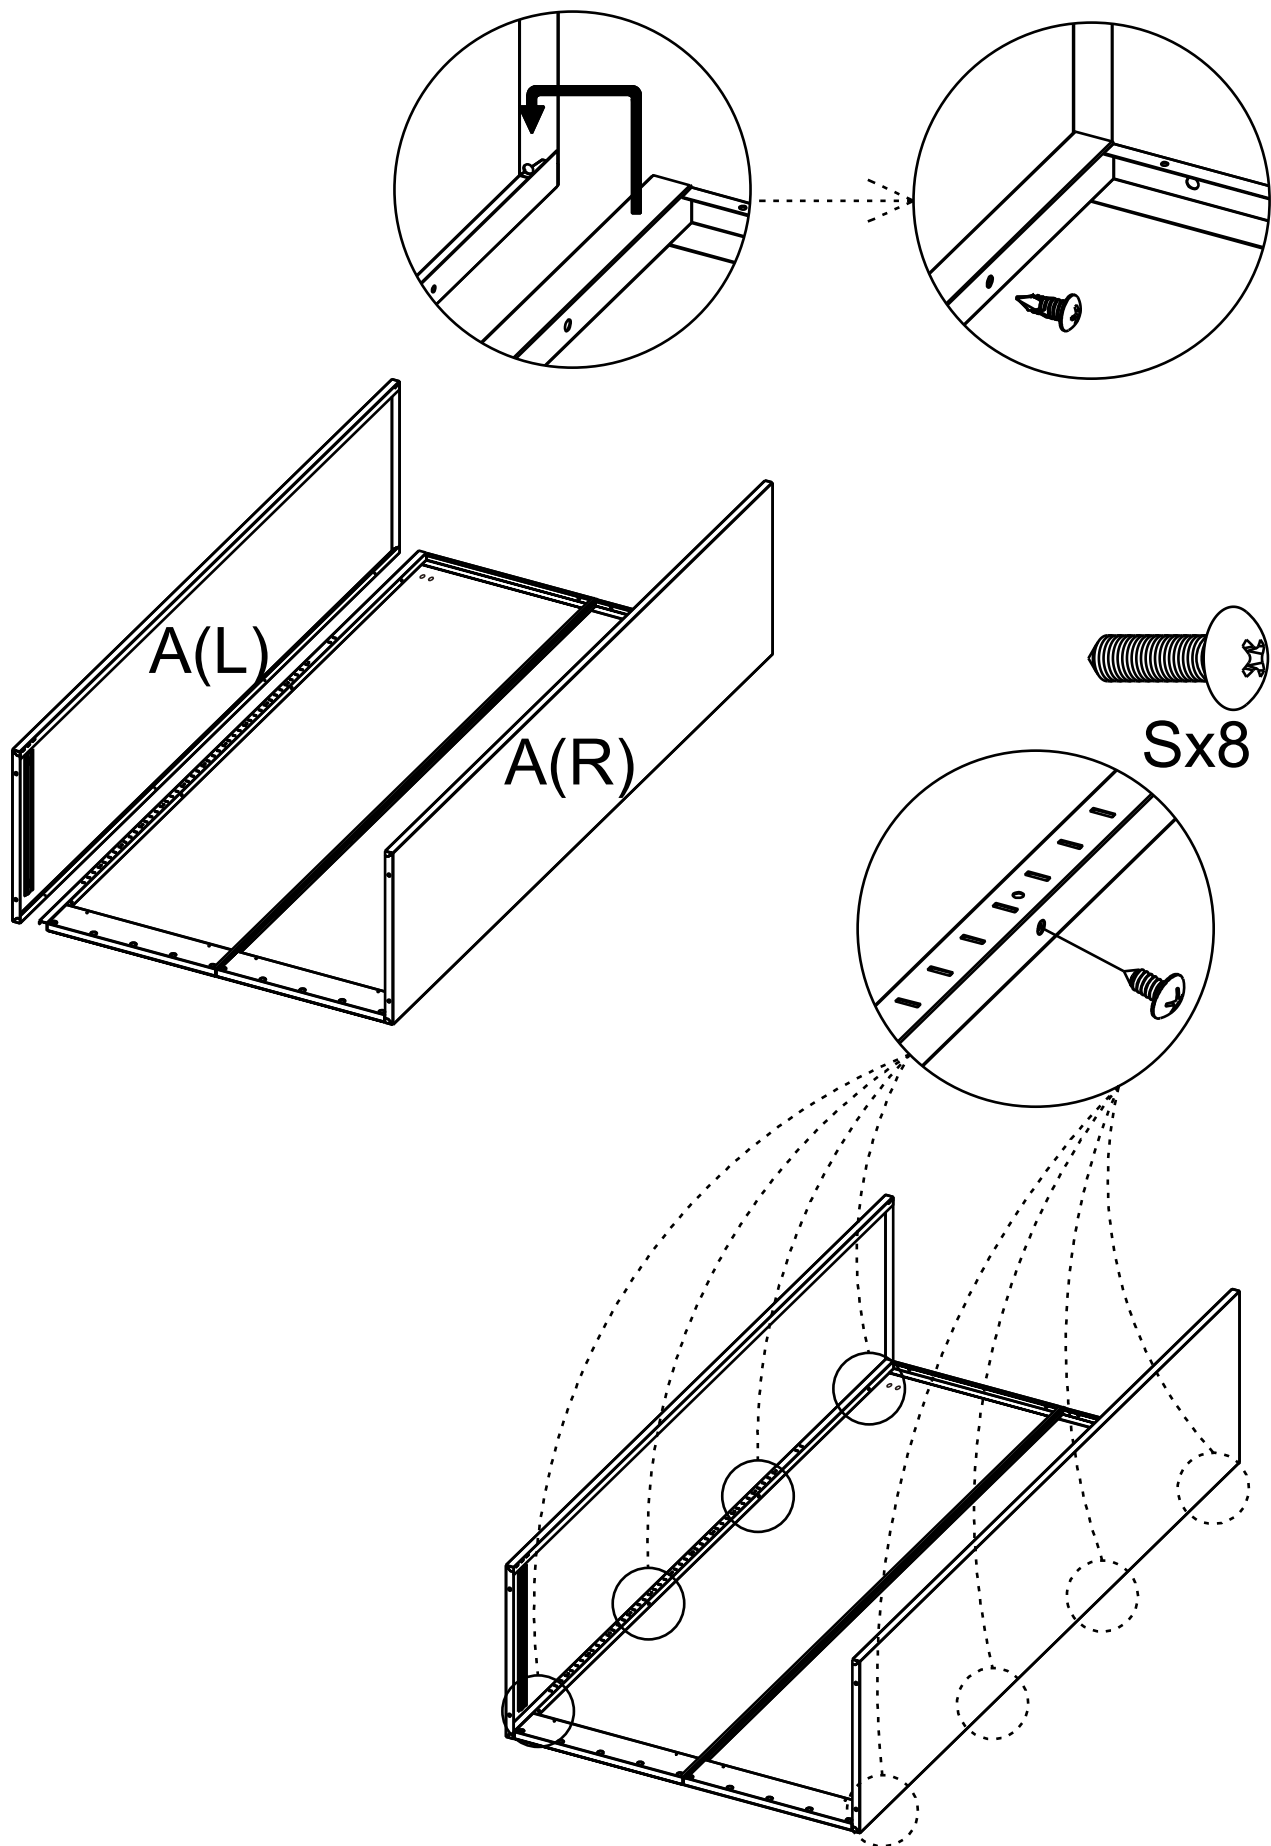


STEP 3 Install the top , and bottom frame bar.

Hook in H and G into sides, and secure with S screws.

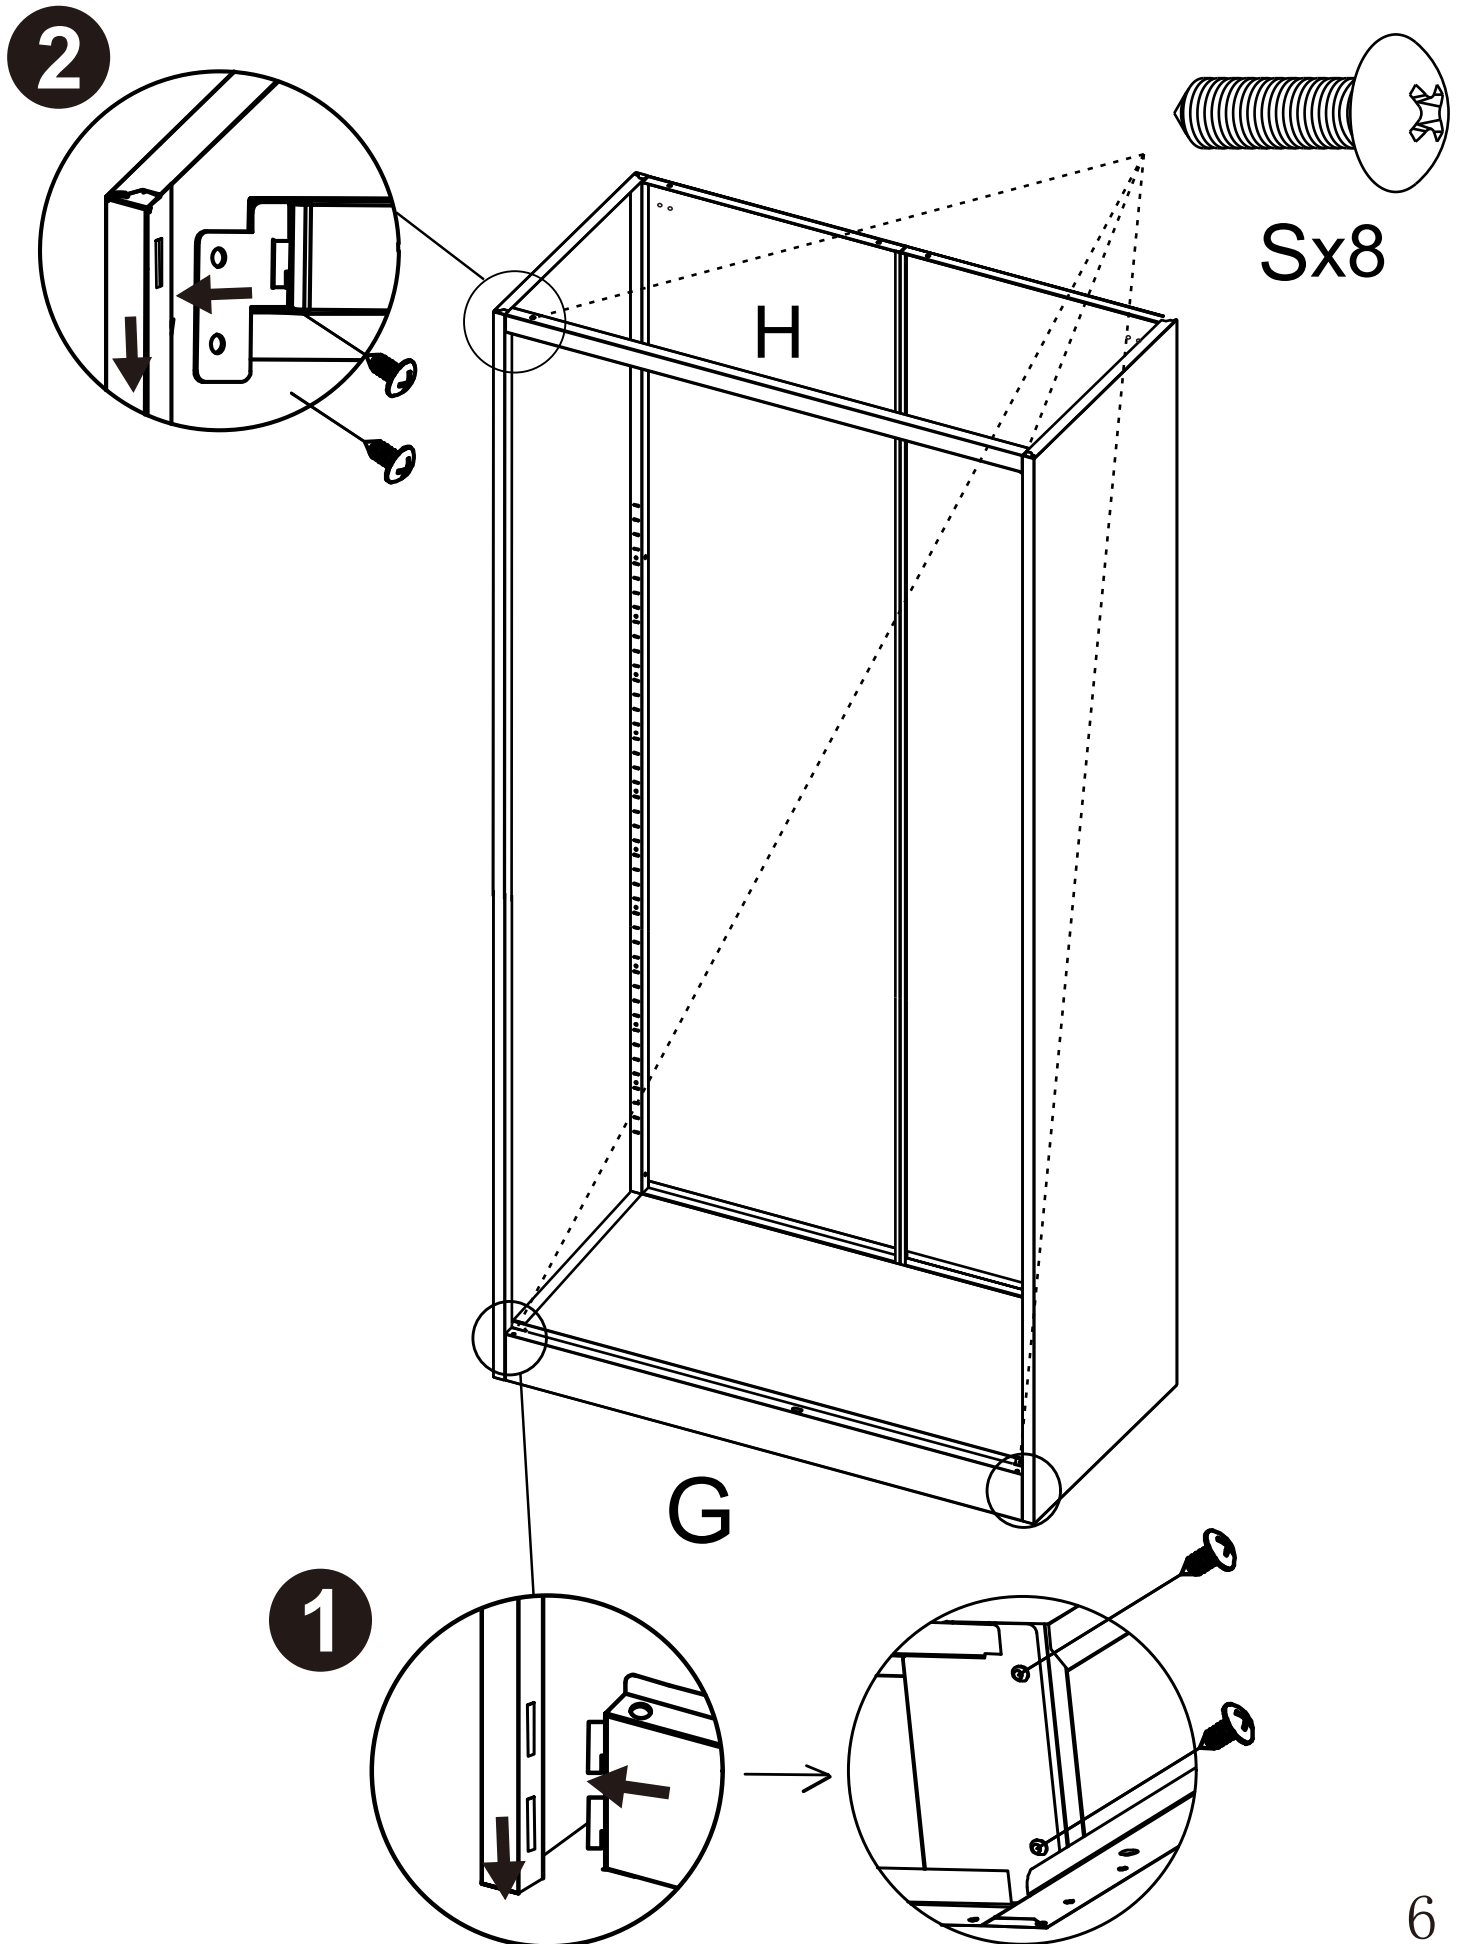




STEP 4 Install the top, and bottom panels .

Put F in, lift B up and secure with S screws.


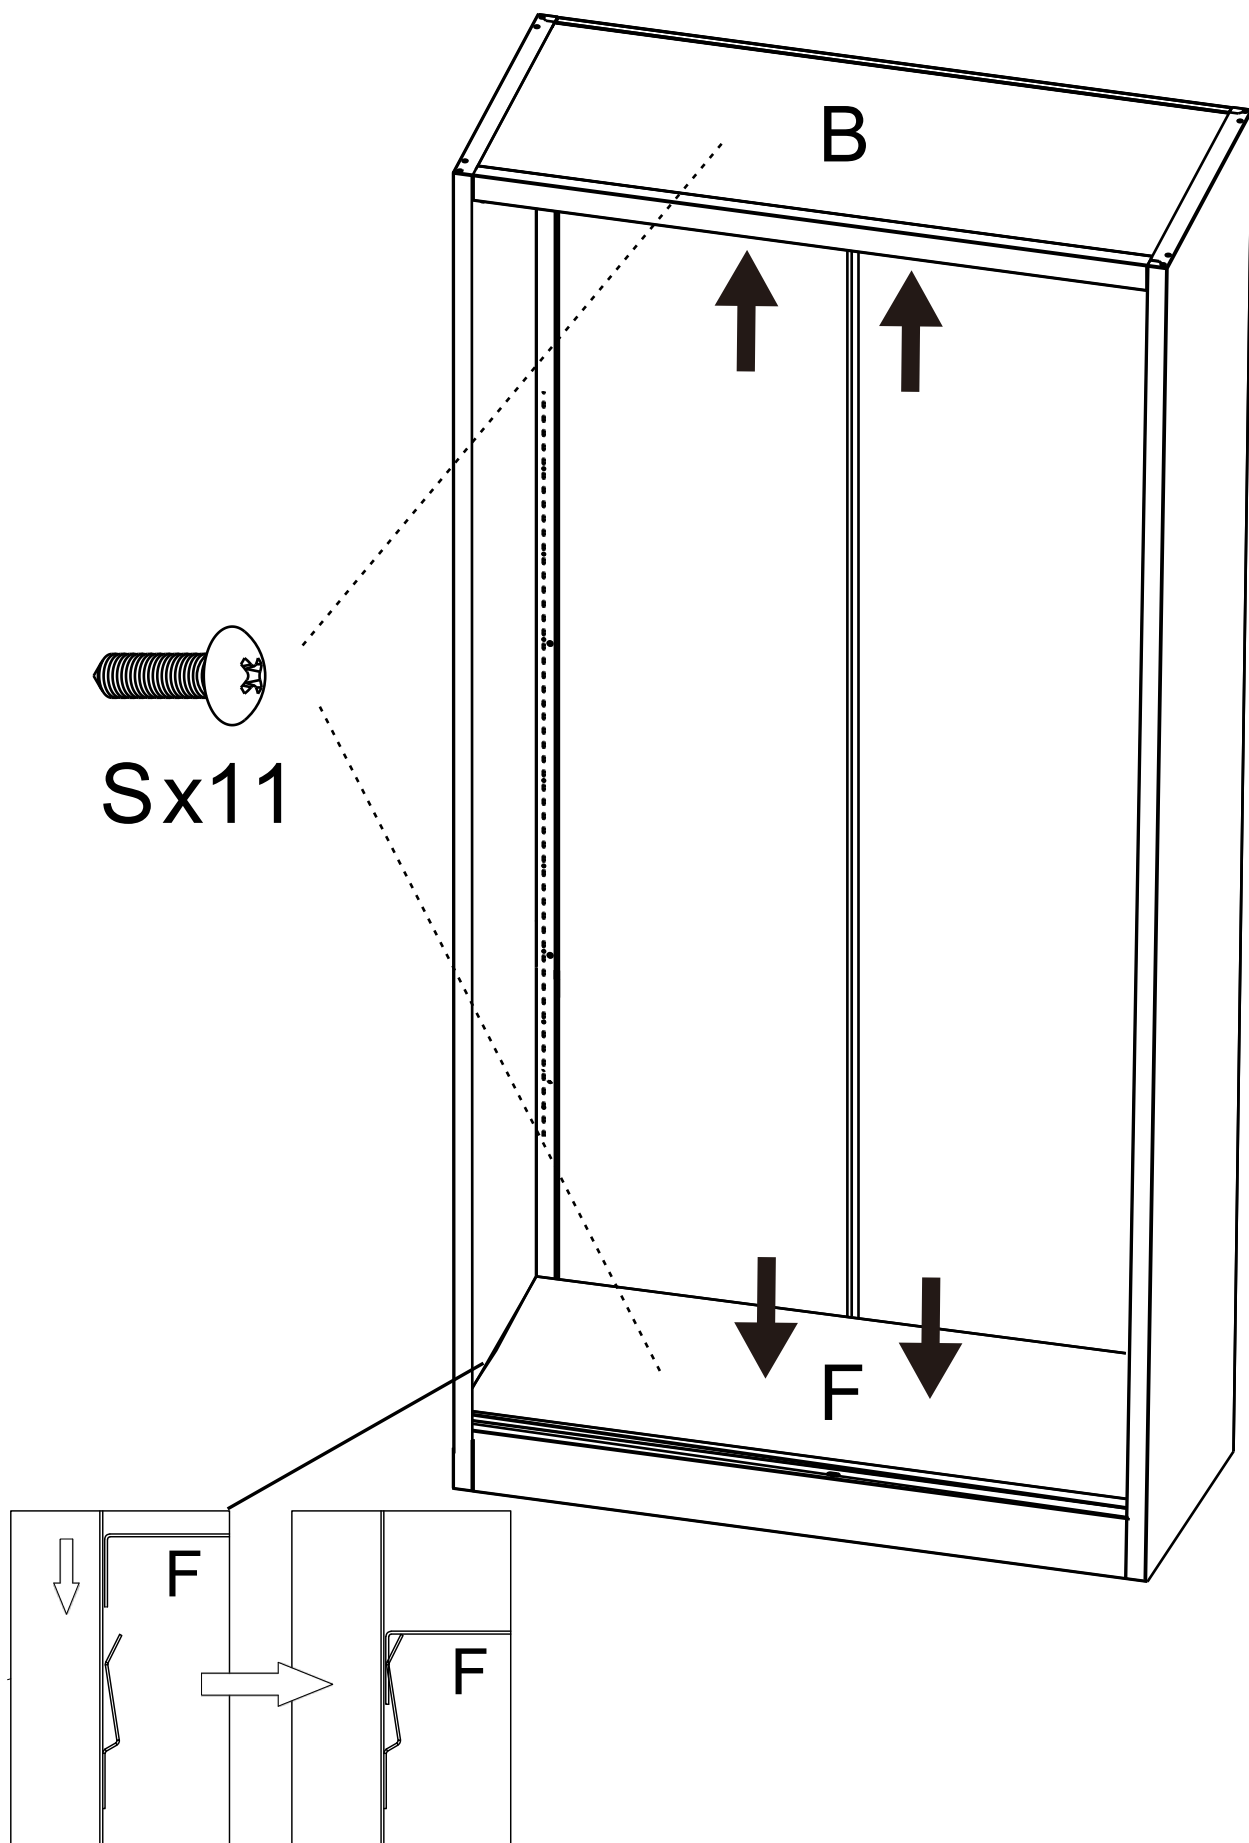


STEP 5 Install the foot stand and adjustable foot.

If the height is perfect for you, then no need to install the feet, you can skip this step.

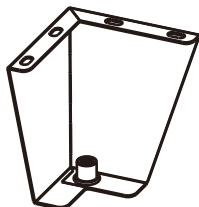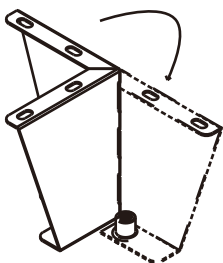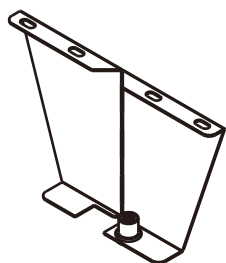

Manually bend the standing foot into shape and twist the adjustable foot in.



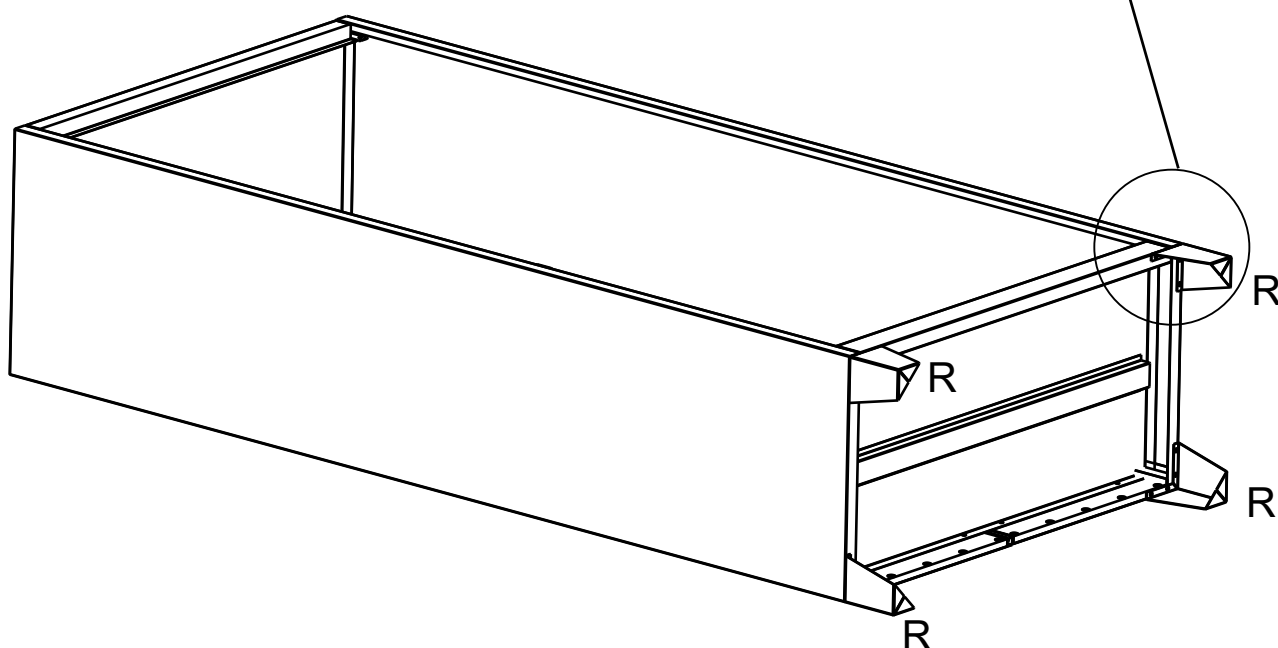
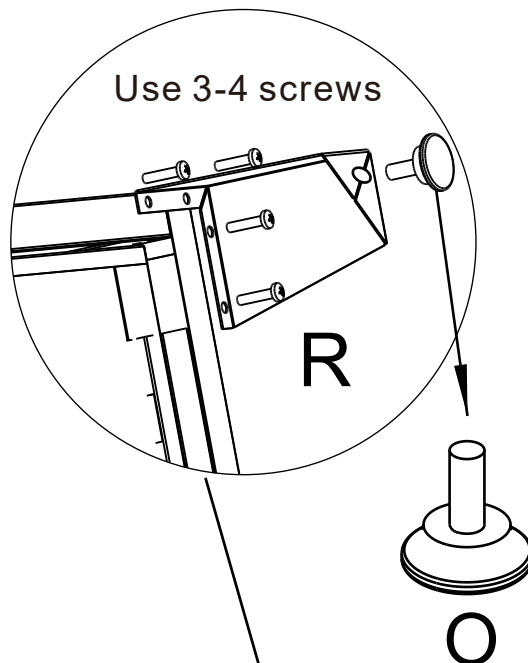


STEP 6 Install the shelf.

First to clip in T and then put E on it.

1. Insert bending side first
2. Fall down the flat side to secure

Now shelf can safely sits on it
Make sure the clips at 4 corners
are at the same height.

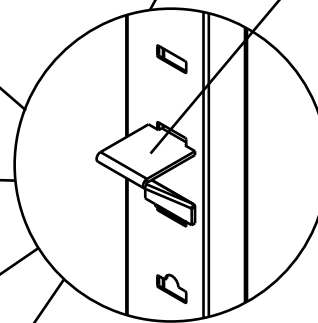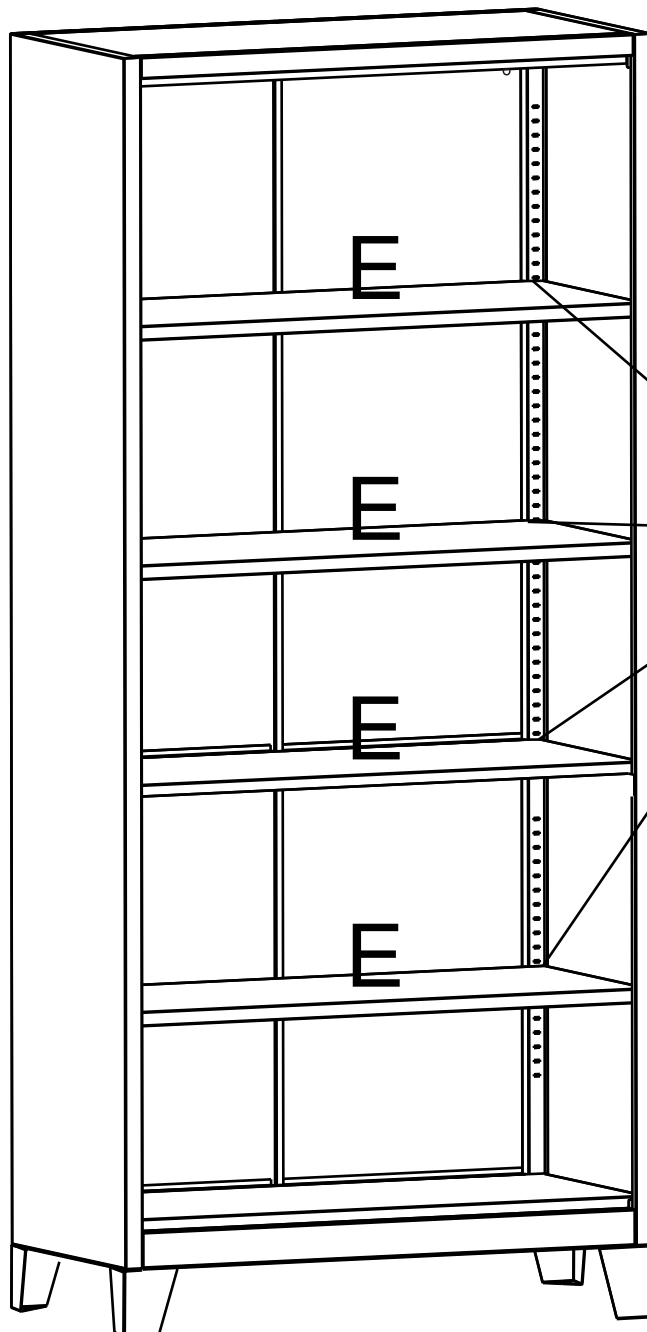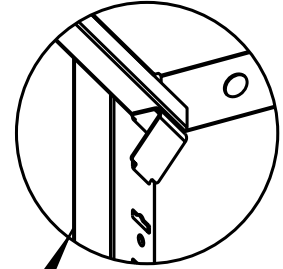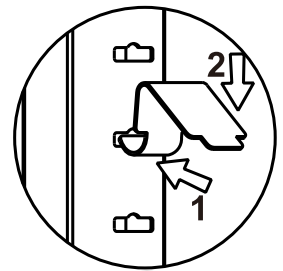


Tx16



STEP 7 Install the doors.

1. First to insert Y (you may need to add 1-2 gaskets) into the holes on bottom frame bar.
2. Put I in. Then press down the top hinge spring to insert the I(L) and I(R).
3. Install the lock.

2

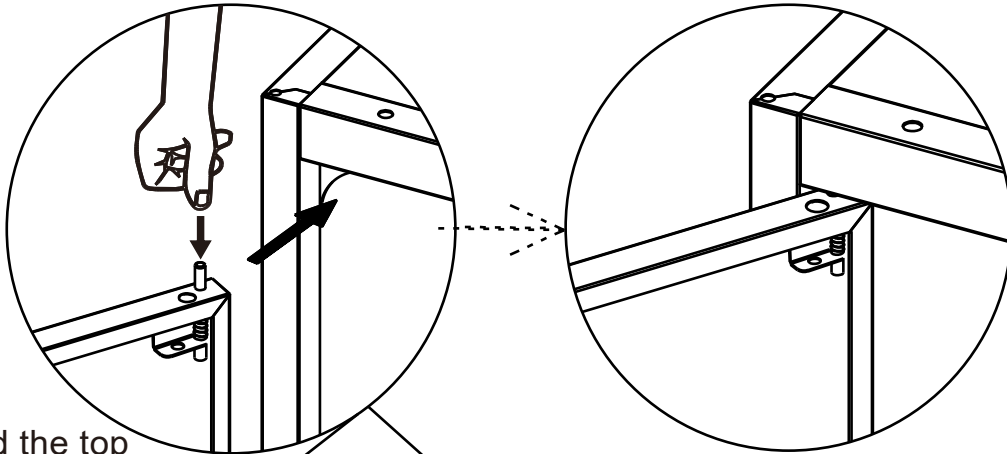


If you can't find the top hinge spring, it may have been pressed into the door frame. Simply use a screwdriver to gently pry it out.

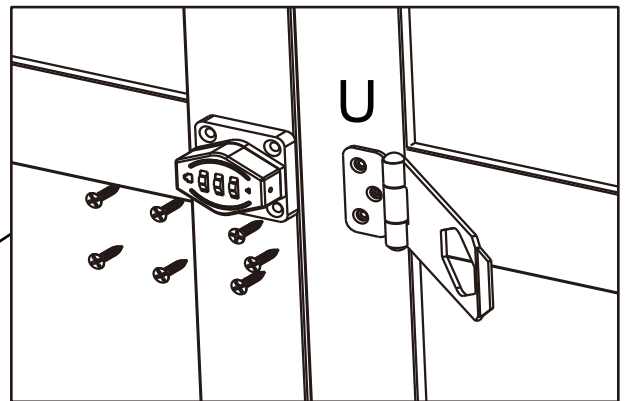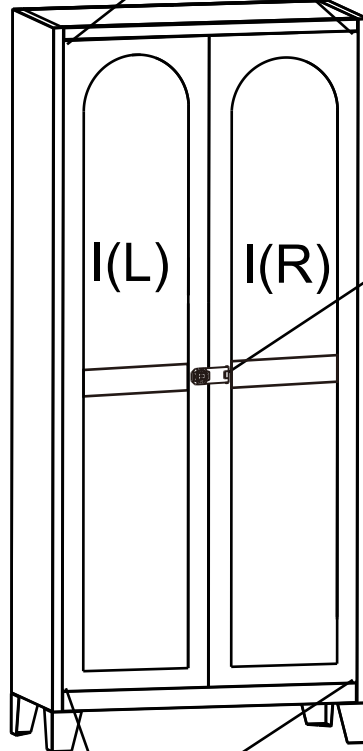

To change the passcode: insert the pin into the small hole on the side and change the passcode. Release the pin once the password is changed.


1

Y

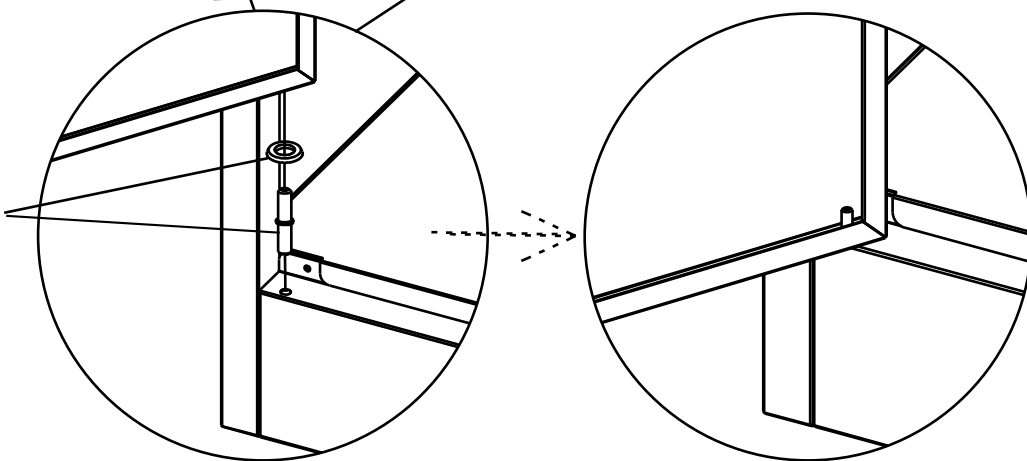

STEP 8 Install the expansion screws.

The cabinet can be fixed to the wall as needed.

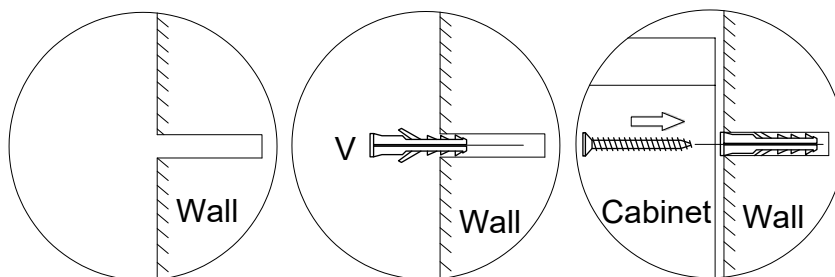

1. Drill holes on the wall

2. Insert V

3. Fasten the screw from cabinet

