

20YNXH-RBC02-F

# **INSTRUCTION MANUAL**

**FULL BED** 


# **BEFORE STARTING**

#### **Before Using Product**


- Read each step carefully before starting. It is very important that each step
  is performed in the correct order. If these steps are not followed in
  sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a little tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

# WARNING

- > Do not allow children to climb on unit.
- ➤ Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- > During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- > Please make sure that all objects are removed before moving the assembled unit.
- ➤ The unit must be team lifted,not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- ➤ Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

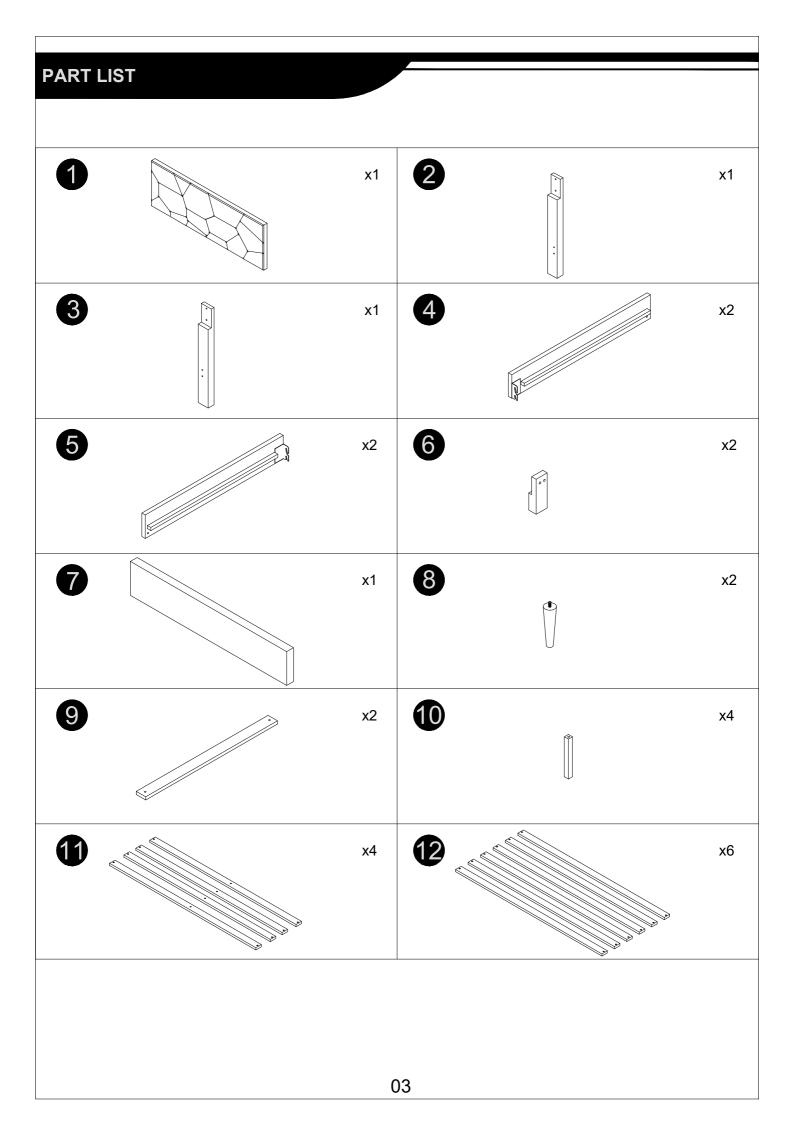


HARDWARE LIST			
HARDWARE LIST			
A	x1		x8
<b>U</b>		anaman ( S	
4mm		Ø5/16" x 20mm	
	x4		x16
aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa			
Ø5/16" x 40mm		Ø5/16"	
	x16		x4
Ø5/16"		Ø5/16" x 35mm	
G	x20		x8
Ammamama(X)			
Ø4 x 30mm		Ø4 x 15mm	
	x2		
Metal bracket			
	C	)4	

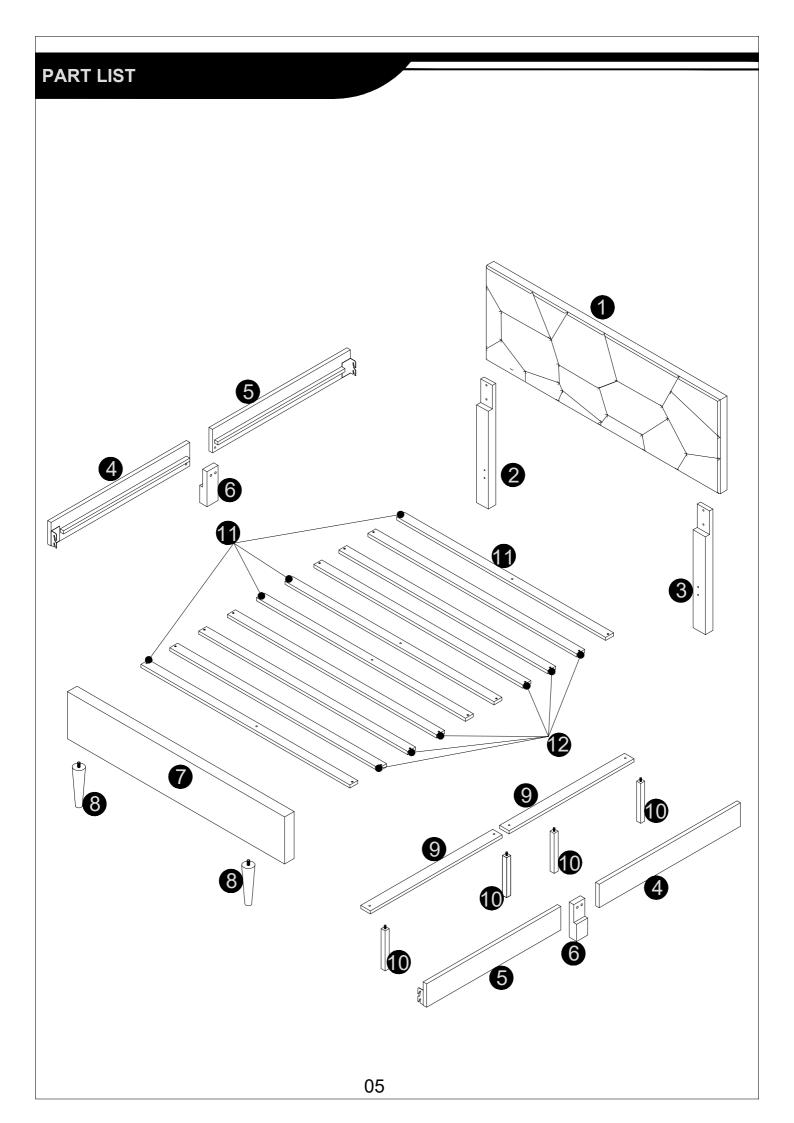


# STEP:1

Note: Attach the leg (5) to the footboard (2) and tighten it.

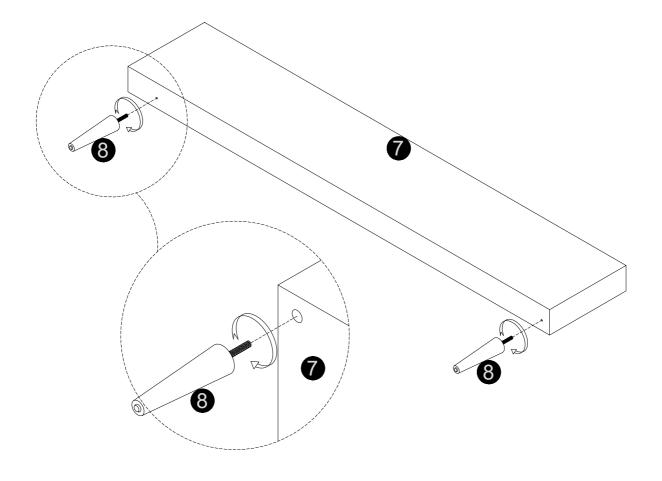


#### STEP:2

Note: Attach the headboard left leg (2) and right leg (3) to the headboard (1) using bolt (C) spring washer (D) and flat washer (E) tighten by Allen key (A).

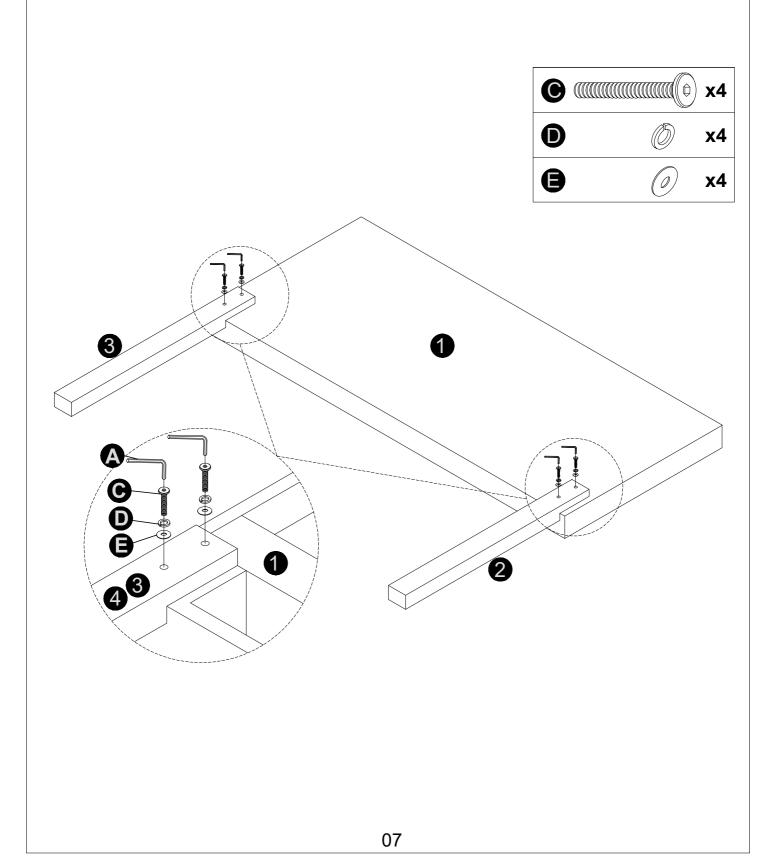


#### STEP:3

Note: Attach the support leg (6) to the side rail (4)&(5) using bolt (F) spring washer (D) and flat washer (E) tighten by Allen key (A).

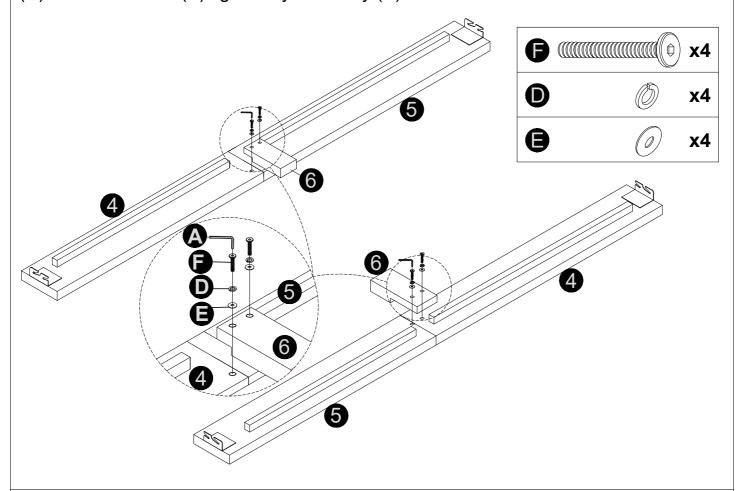

#### STEP:4


Note: Insert metal bracket (I) to the side rail (4)&(5) using screw (H) tighten it.

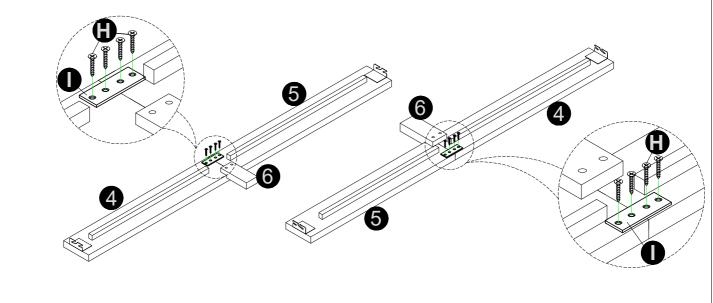

#### STEP:5


Note: Attach the side rail (4)&(5) to the right leg (3) and left leg (2) of the headboard frame, using bolt (B) and the spring washer (D), flat washer (E).

Attach the side rail (4)&(5) to the footboard (7) using bolt (B) and the spring washer (D), flat washer (E) and tighten it by Allen key (A).

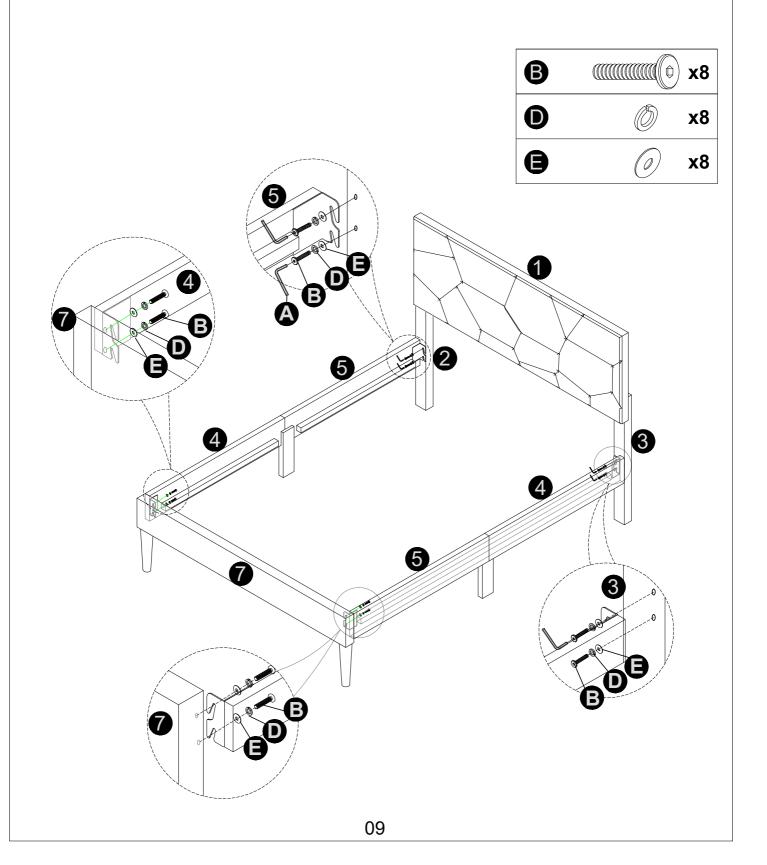


# STEP:6

Note: Attach the support leg (10) and middle cross bar (9) to the slat (11) and tighten it.

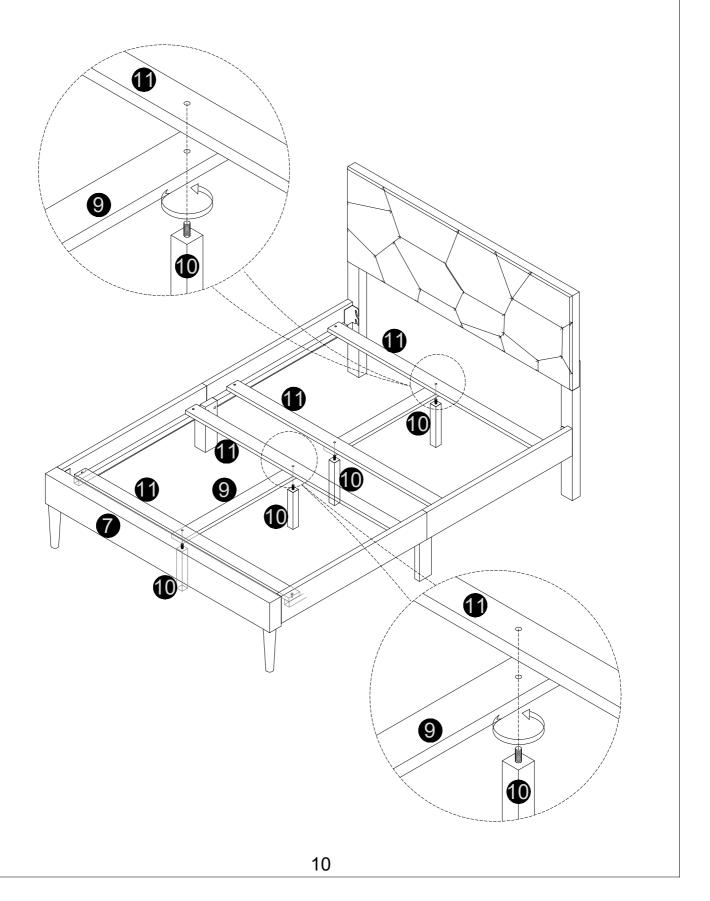

## STEP:7

Note: Attach the slat (11) and (12) to the side rail (4)&(5) and using screw (G) to tighten it.

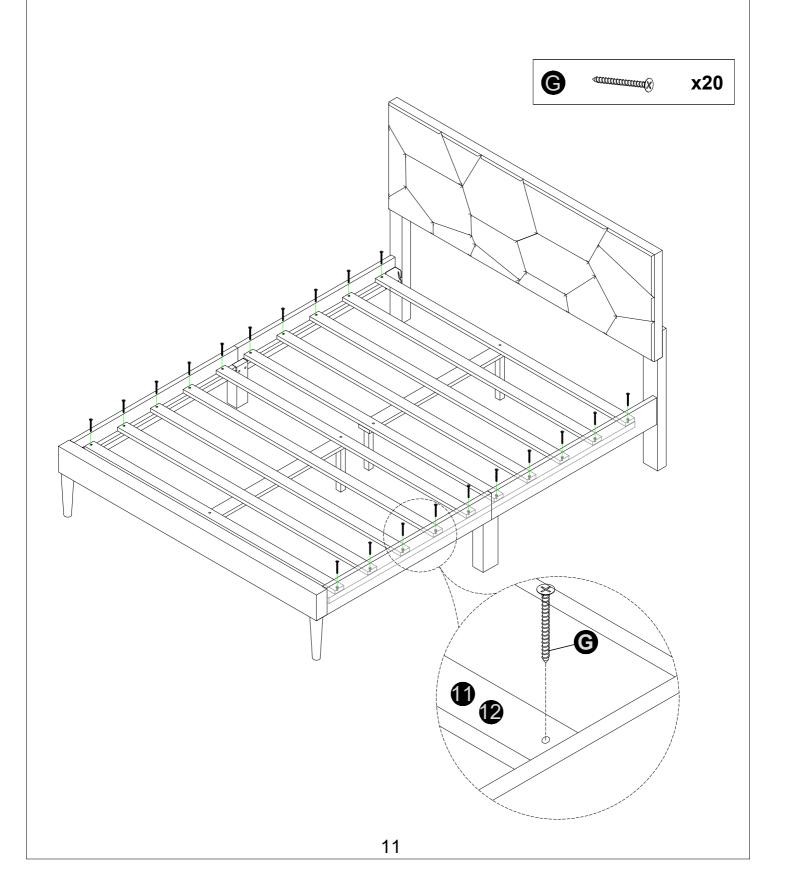

# STEP:7

