
# Over -the toilet- rack


## The assembly instructions

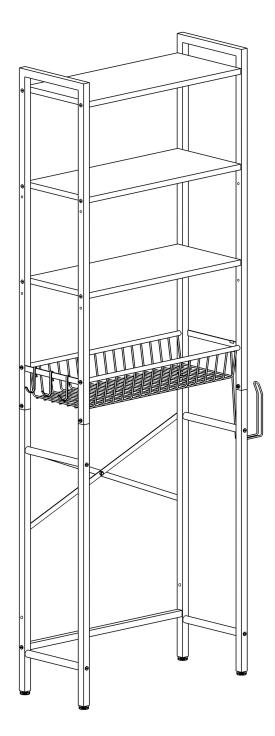


Thank you for purchasing our products, please read the instructions carefully before you assemble the product, please do not hesitate to contact us if there is assembly problem, there will be someone to guide assembly.

# **MATTERS NEEDING ATTENTION**

Please follow the instruction manuals and use a pad to avoid damage during assembly.

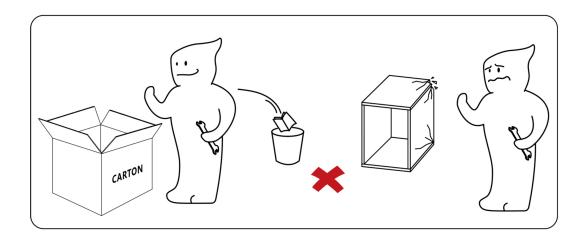

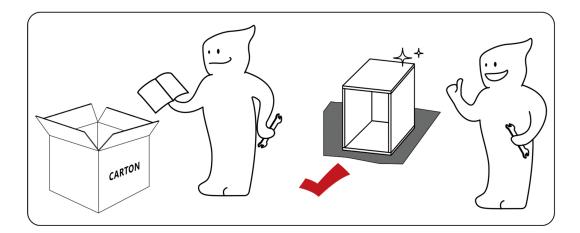



Not intended for use by children.





Keep away from fire or other heat sources.




We recommend wearing protective gloves.

#### Accessories List

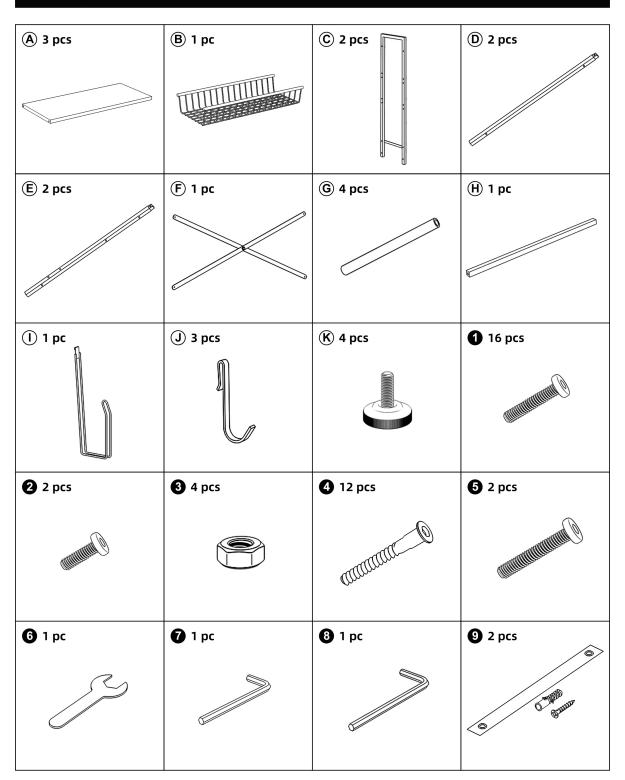

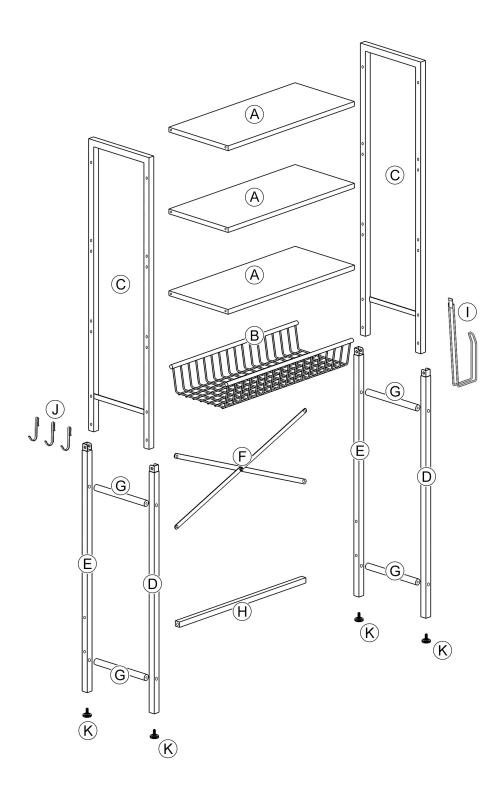

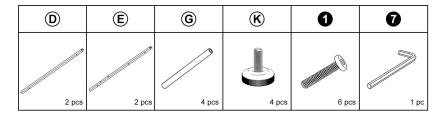



TIPS:


here temporarily without screws.

1.Subsequent steps need to be assembled x-shaped frame, 2.Please press the hole location to distinguish the accessory for D and E. **(G**) **(G**) ▲ Note: Note that the E tube is assembled on one side of the 2 round holes! E ▲ Note: (E) Note that the E tube is assembled on one side of the 2 round holes! **(D) (**D) 0 G **(G**) K 1


TIPS: Please note that the location of the accessory for **(D)** and **(E)** towards!

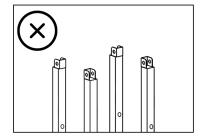


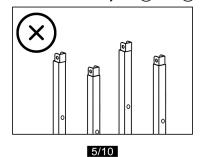

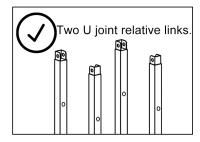



F	H	0	2	6	0
1 pc	1 pc	2 pcs	2 pcs	2 pcs	1 pc

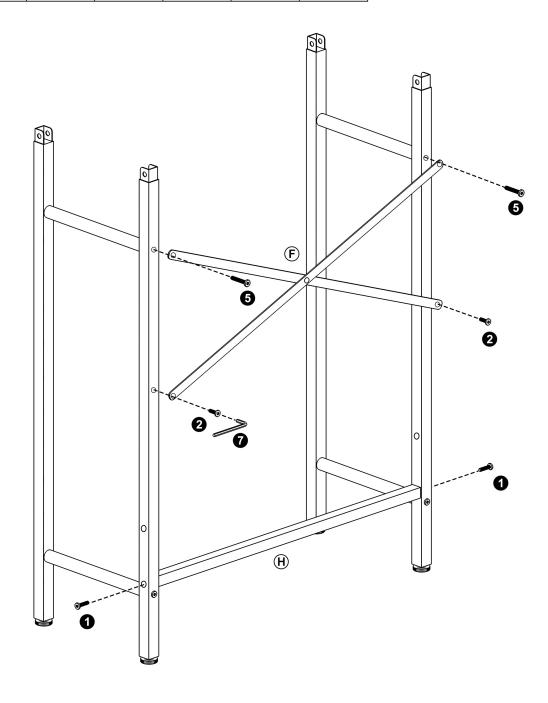


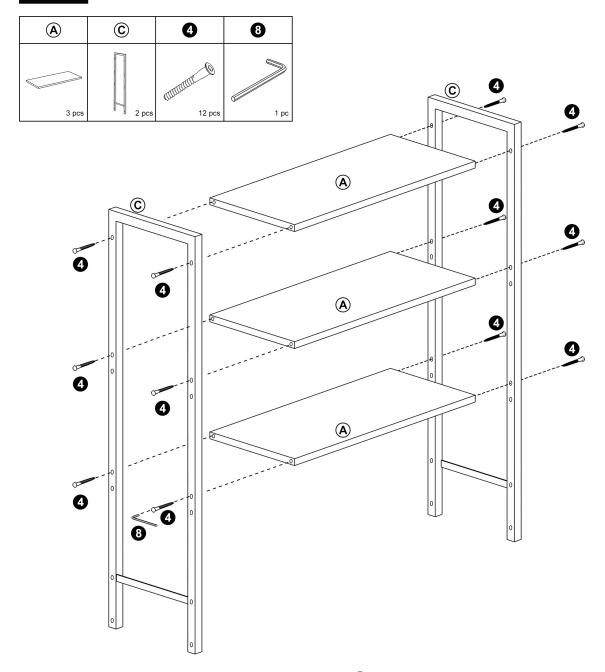


TIPS: Please note that the location of the accessory for C towards!

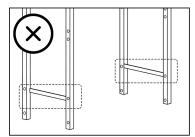


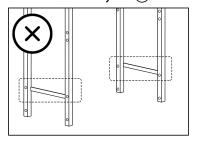


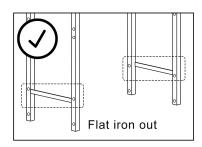


B	0	7
1 pc	4 pcs	1 pc

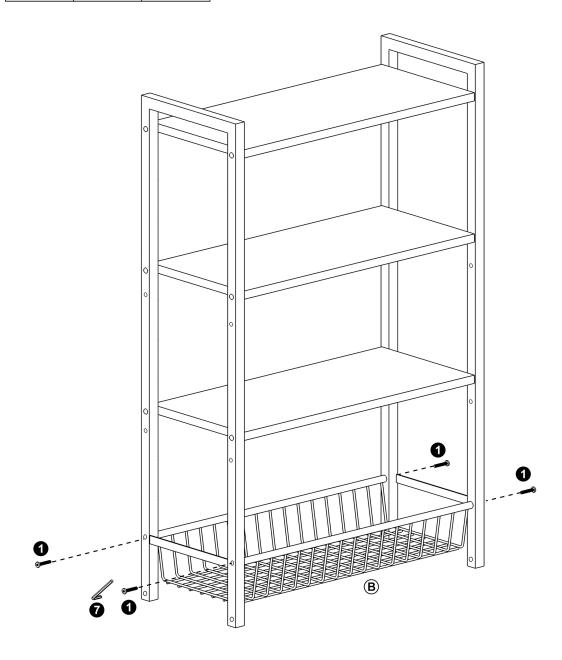

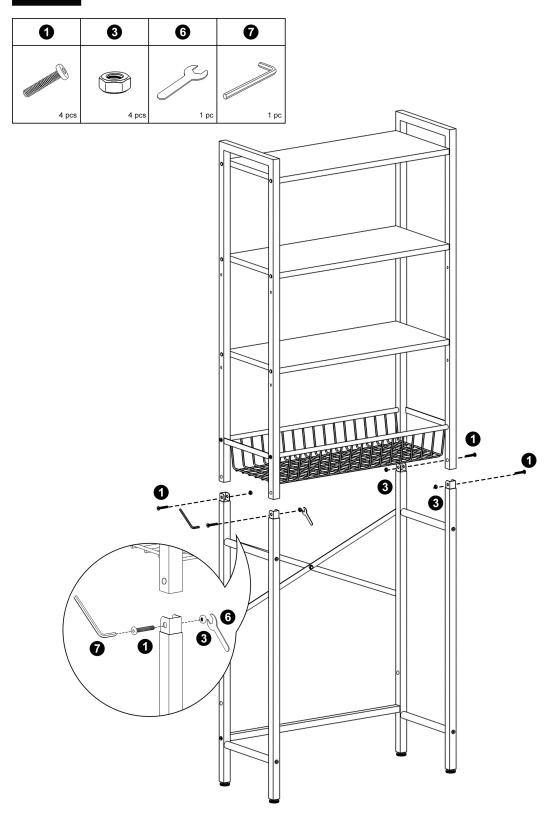


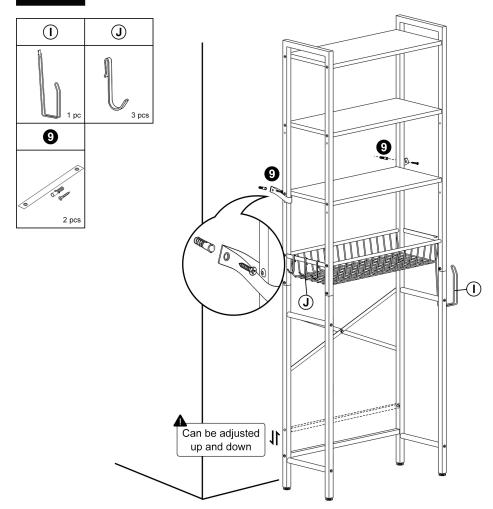

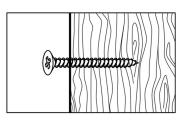

#### Drywall or plaster with available wood stud:

- Mark the attachment point(s) with a pencil at the appropriate height and positioned over wood stud(s).
- Drill a pilot hole(s) with a diameter that matches the screw into the wood stud(s), at the height you marked with pencil.
- Secure the screw to the wood firmly as the picture shows.

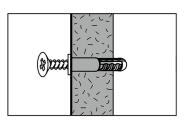

#### Drywall without available wood stud:

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill a hole(s) with a diameter that matches the plastic anchor through the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.
- Insert the screw into the plastic plug firmly as the picture shows. Do not over-tighten.