


FIT METAL POST & WOOD RAILINGS




T316 Black Invisible Cable Railing kit

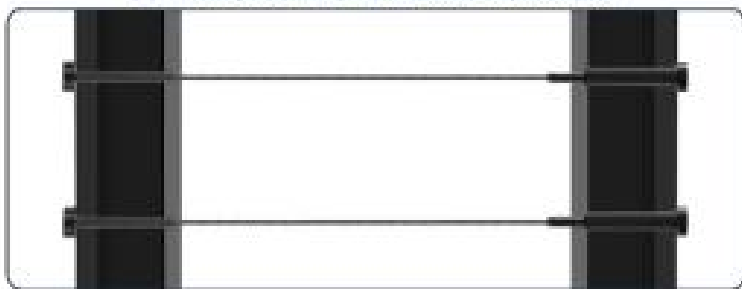

Step 1: Drill holes in both balustrades.



Step 2: Fix cable with hydraulic pliers through a hole in one railing.

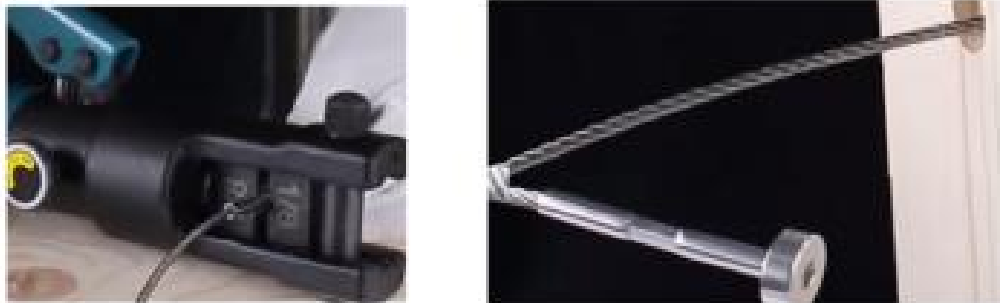

Step 3: Fix the end of the cable and tighten it through the railing.

