


HUAYING

HY006-WH

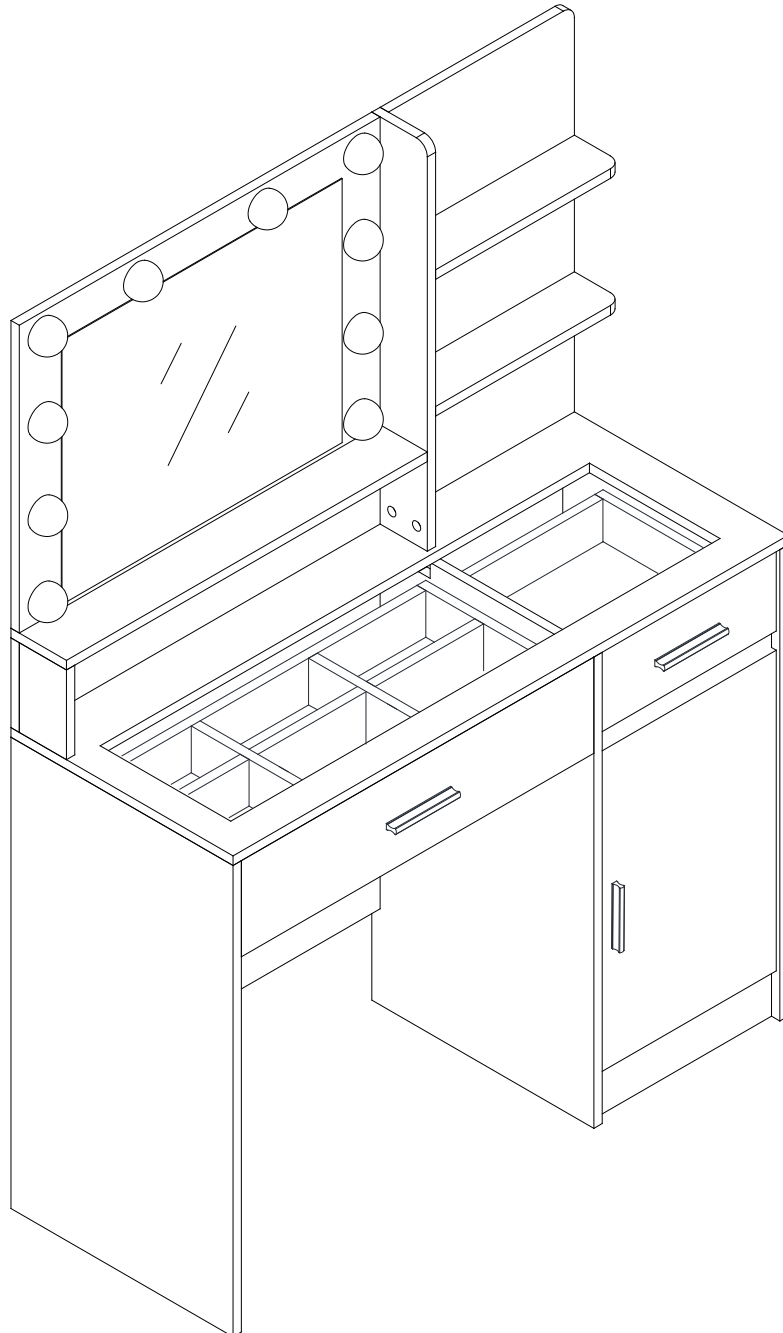

Suggestion: To make the installation process easier and faster, we recommend that two people work together to install the Dresser


Helpful Hints

1. We recommend two people to assemble the product easier and faster.
2. Please DO NOT tighten the screws deeply during assembling avoiding that metal frame can be bent and plank will crack.
3. We recommend that all screws should not be tightened over during assembling to make it easy to adjust. When it is adjusted to proper station all screws should be tightened.
4. Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Customer Service

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us freely.  **hy20241127@163.com**

EXPLODED

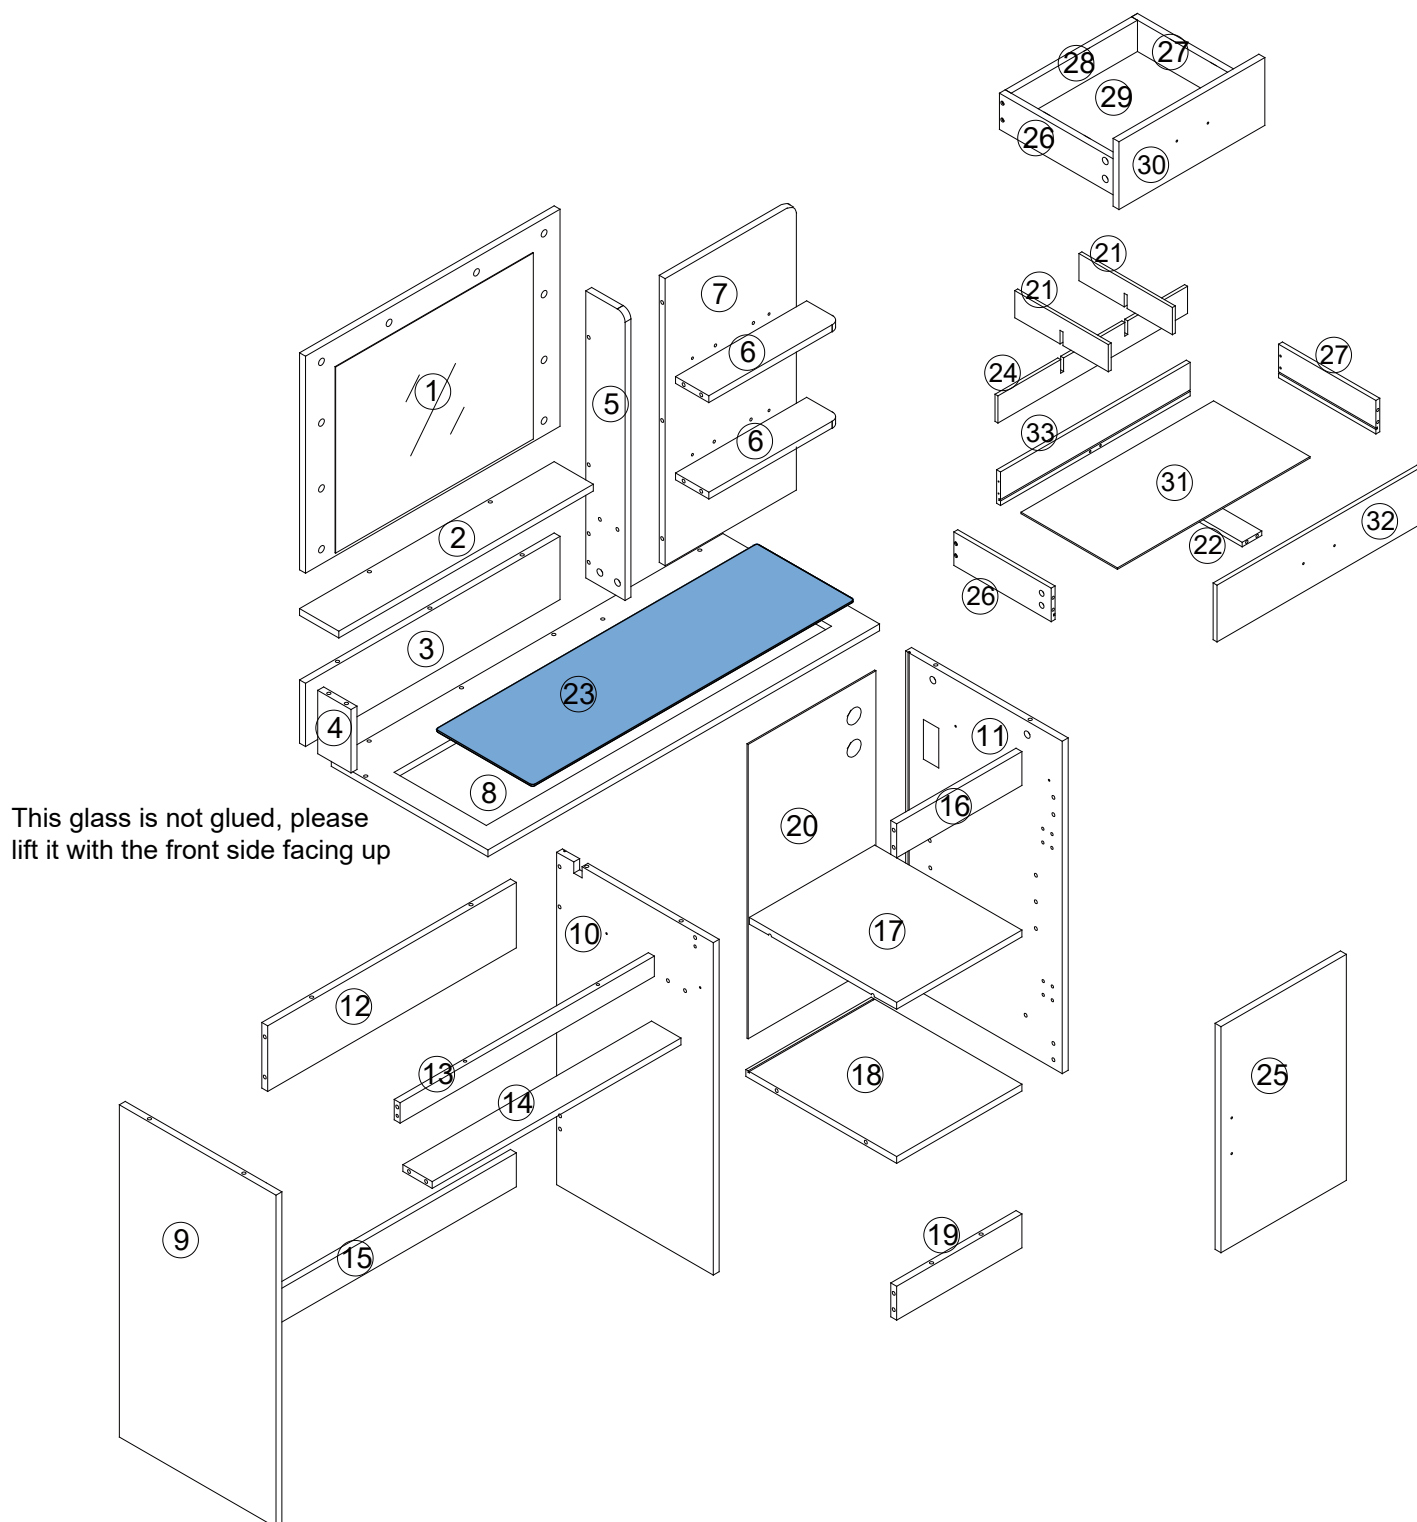

Accessories list

① x1	② x1	③ x1
④ x1	⑤ x1	⑥ x2
⑦ x1	⑧ x1	⑨ x1
⑩ x1	⑪ x1	⑫ x1
⑬ x1	⑭ x1	⑮ x1
⑯ x1	⑰ x1	⑱ x1















★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over-they're included as a "just in case" for your convenience.

Accessories list

①9 x1	②0 x1	②1 x2
②2 x1	②3 x1	②4 x1
②5 x1	②6 x2	②7 x2
②8 x1	②9 x1	③0 x1
③1 x1	③2 x1	③3 x1


★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over—they're included as a "just in case" for your convenience.

Accessories list

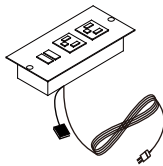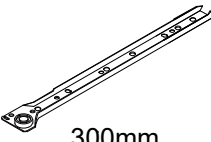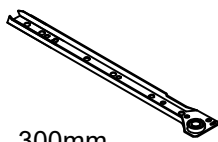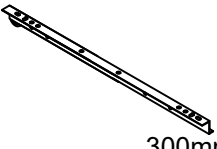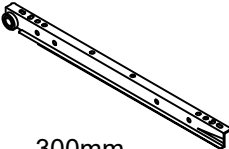A x75+5  m6.5x35mm SCREW & PLASTIC LOCK	B x75+5  15x9.5mm SCREW & METAL LOCK	C x20+3  m3.5x12mm SCREW
D x3  +2  m4x15mm METAL PLATE	E x4  SHELF SUPPORT PEG	F x1  SOCKET
G x6+1  m6x30mm SCREW	H x16+1  m4x40mm SCREW	I x1  HAIR DRYER HOLDER
J x2  HINGE	CL x2  300mm	CR x2  300mm
DL x2  300mm	DR x2  300mm	LED x1 
K x4   m3x14mm SCREW	L x12  m3x12mm SCREW	T x12+1  m4x14mm SCREW
M x10 	N x1  X9  X1  X10  X1	S x2  


★ In many cases, we include additional hardware. So after following the assembly instructions, don't worry if there are still extra pieces left over-they're included as a "just in case" for your convenience.

STEP 1

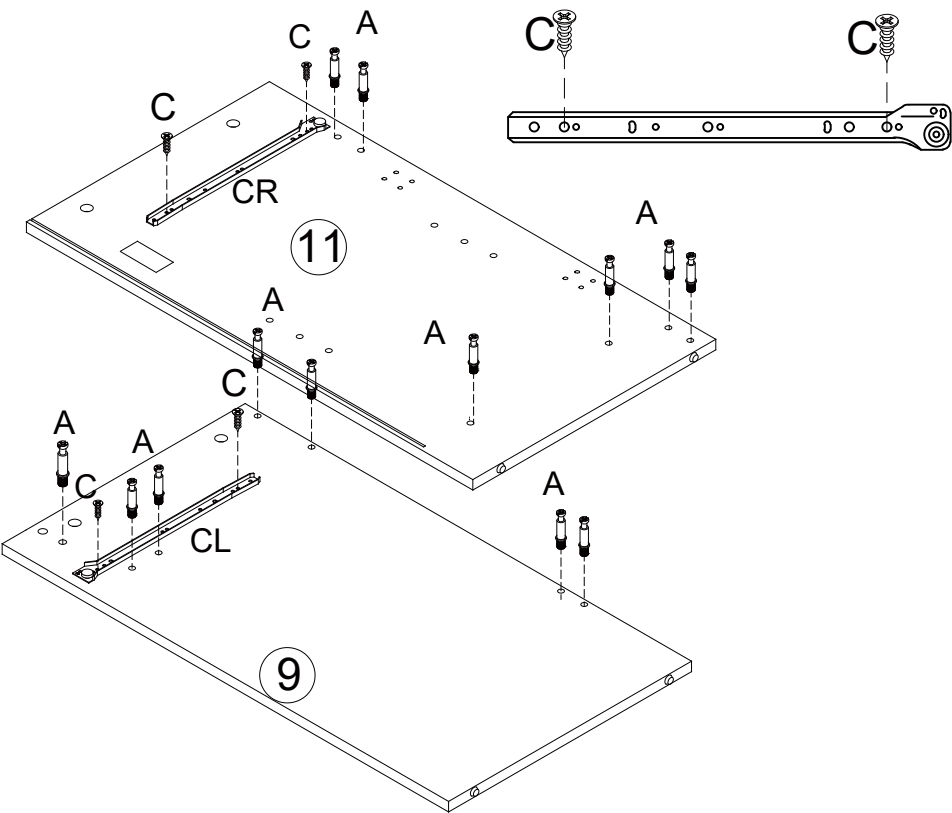


- A x13  m6.5x35mm
- C x4  m3.5x12mm
- CL x1  300mm
- CR x1  300mm

STEP 2

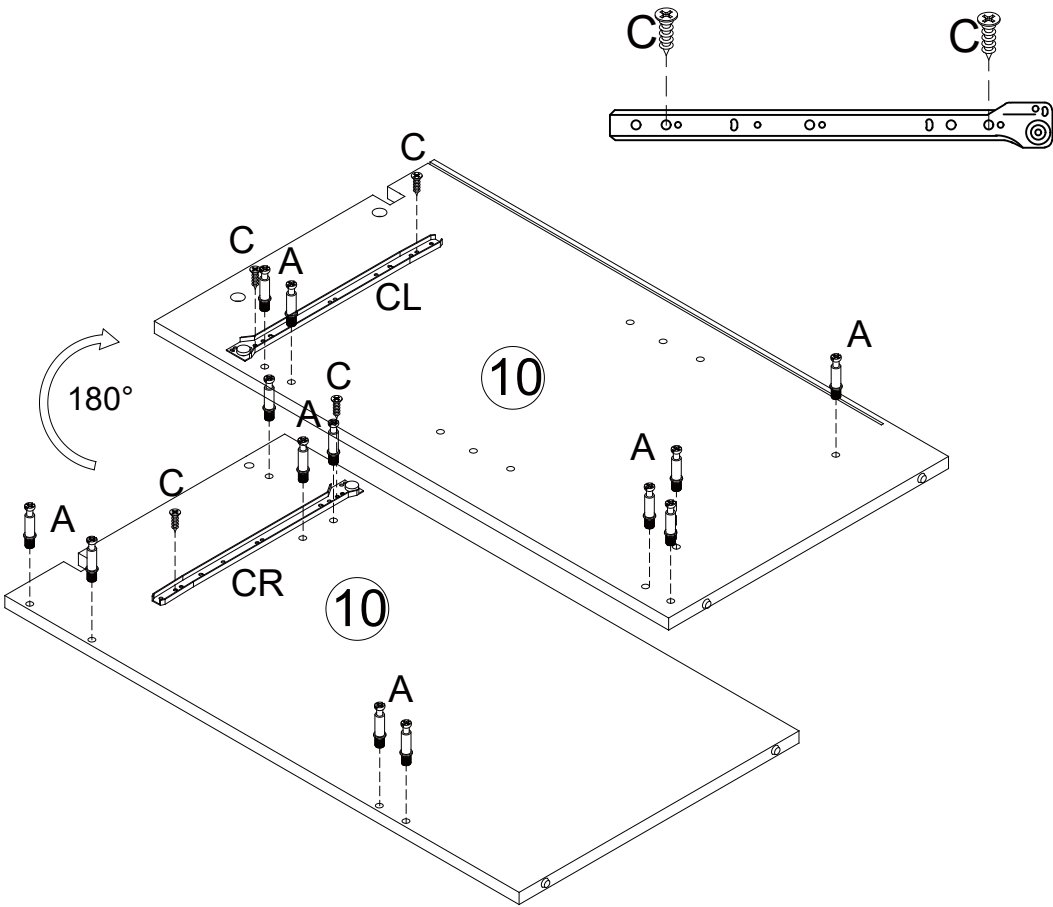


- A x13  m6.5x35mm
- C x4  m3.5x12mm
- CL x1  300mm
- CR x1  300mm

STEP 3

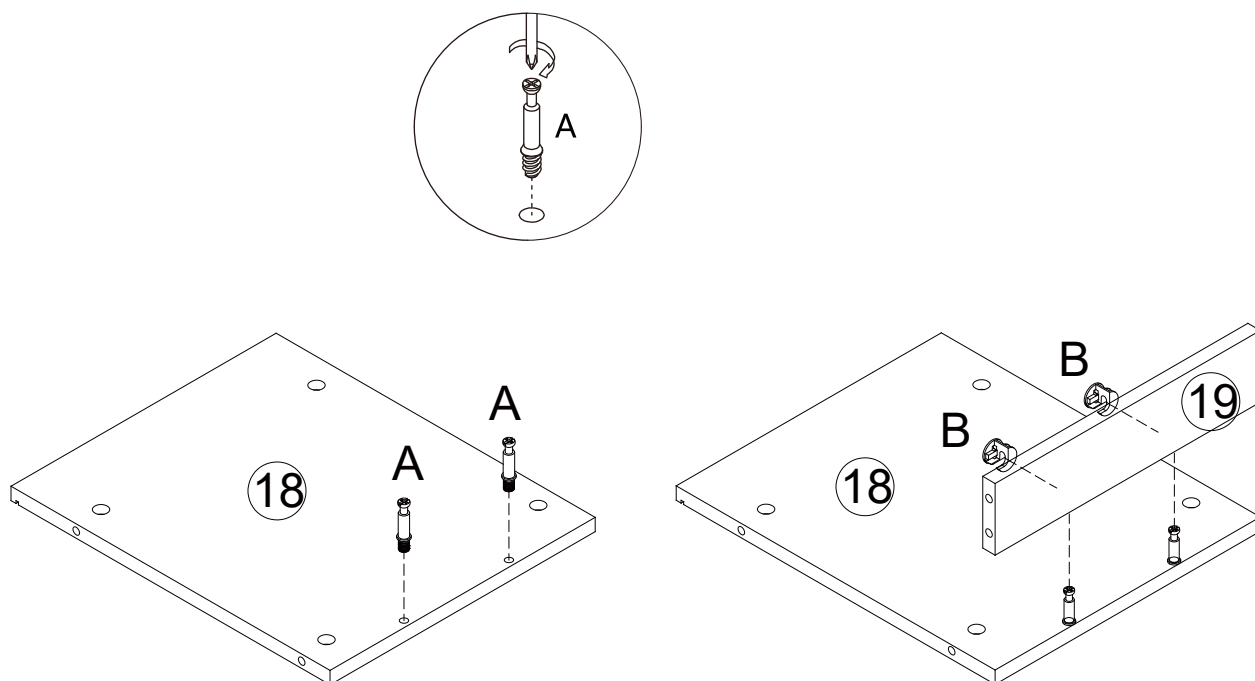


- (A) x2  m6.5x35mm
- (B) x2  15x9.5mm

STEP 4

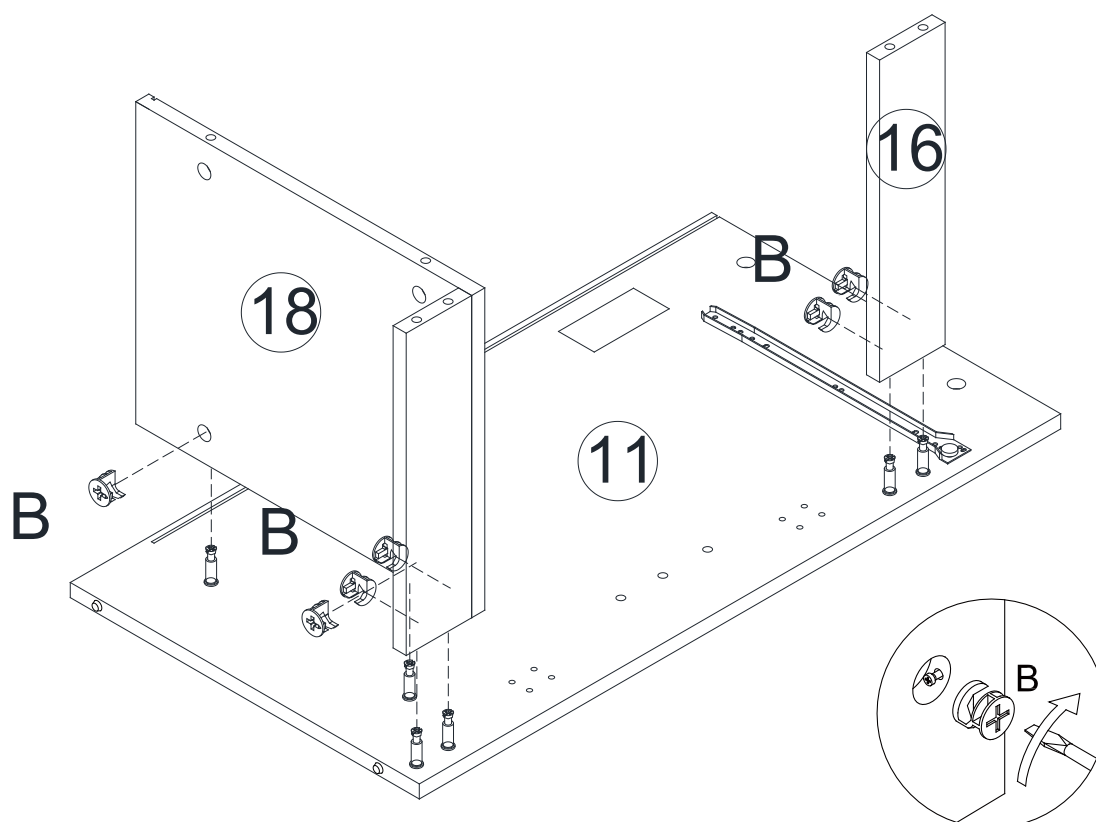


- (B) x6  15x9.5mm

STEP 5

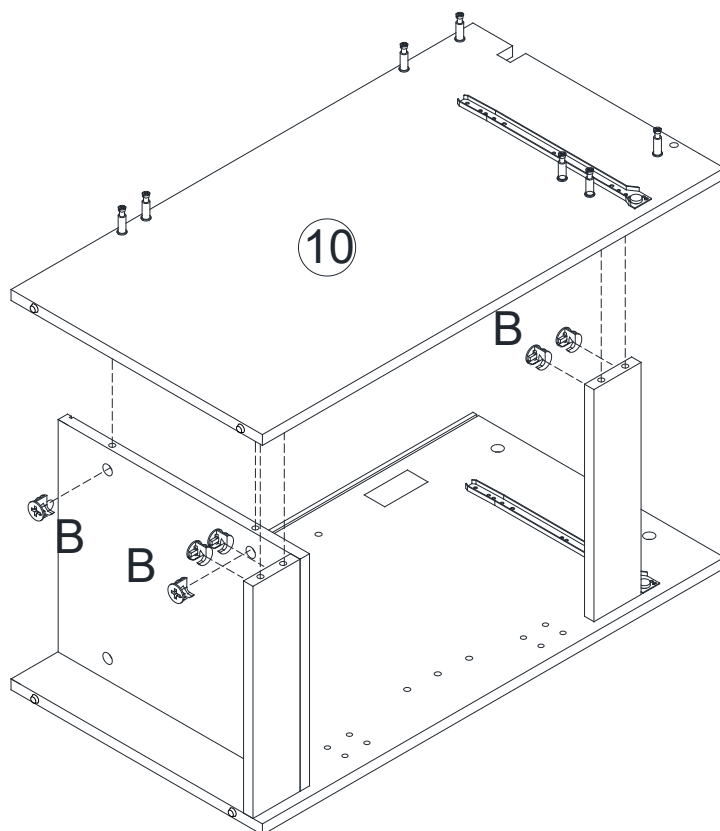

(B) x6  15x9.5mm

STEP 6

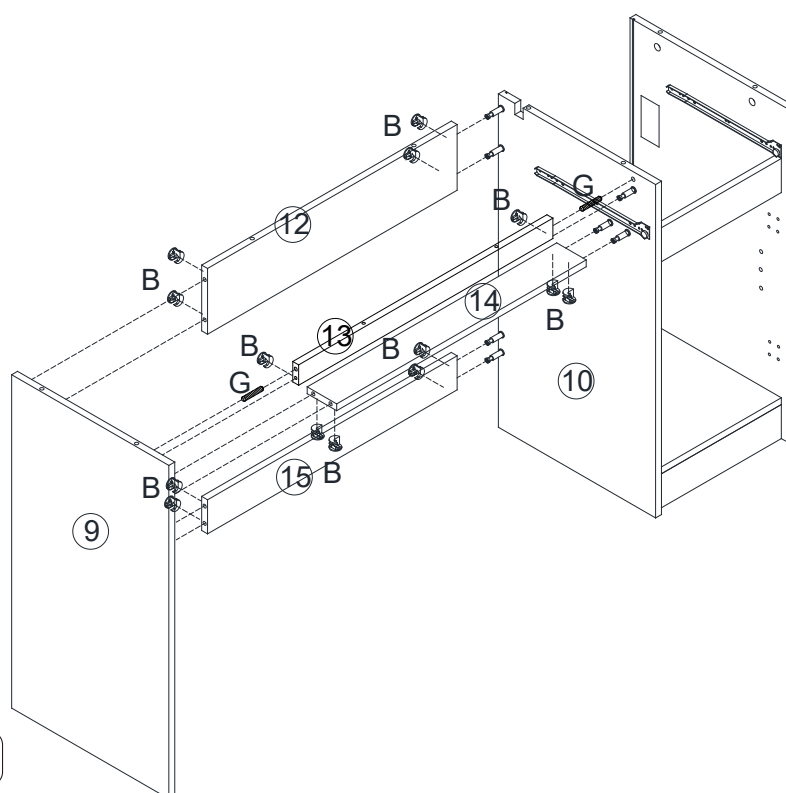


(B) x14  15x9.5mm


(G) x2  m6x30mm

STEP 7


Tear off the adhesive and stick it on

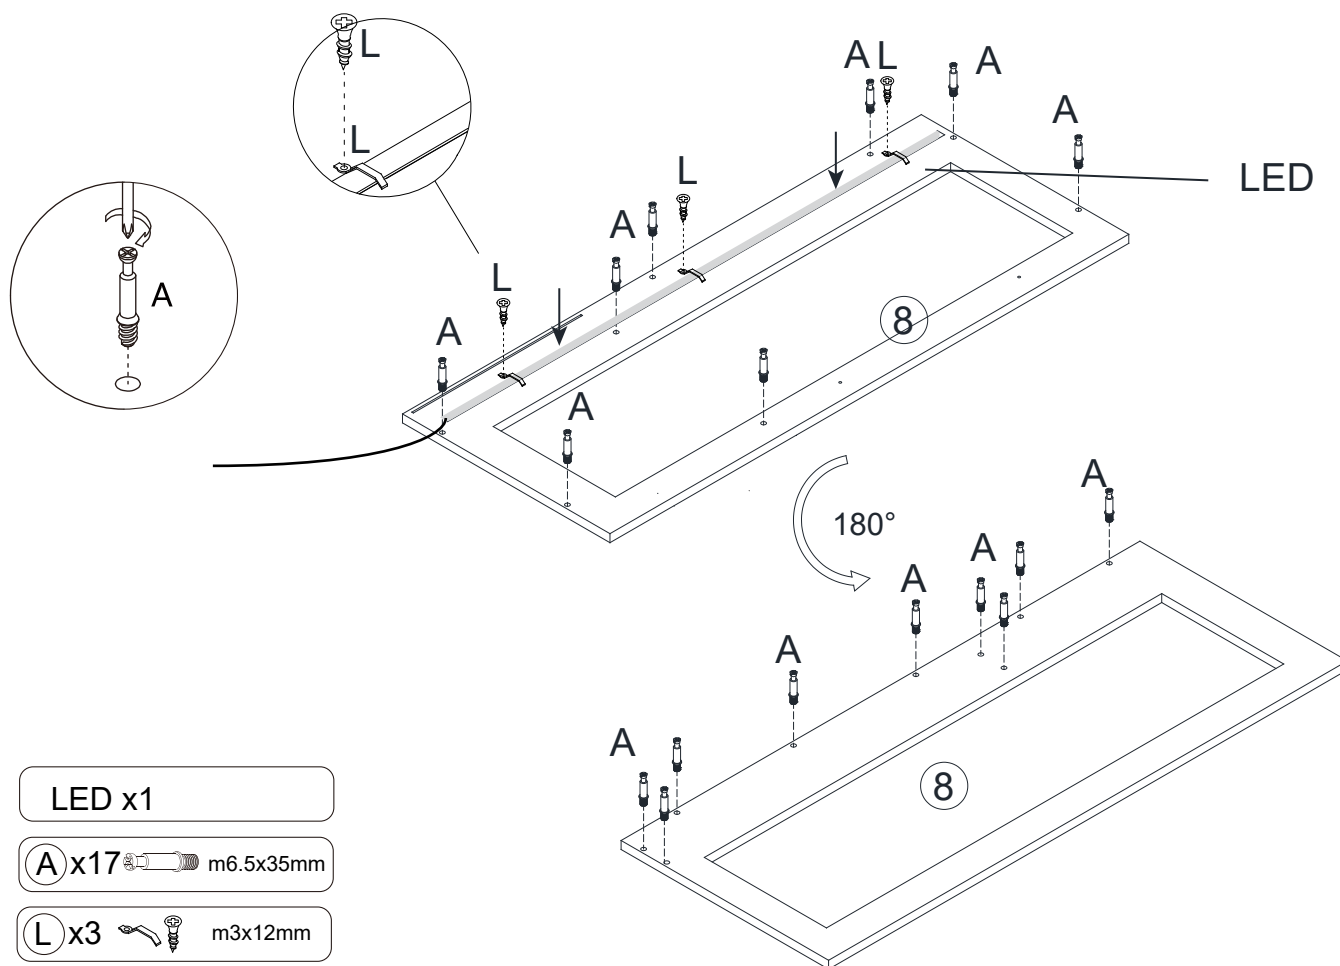

STEP 8

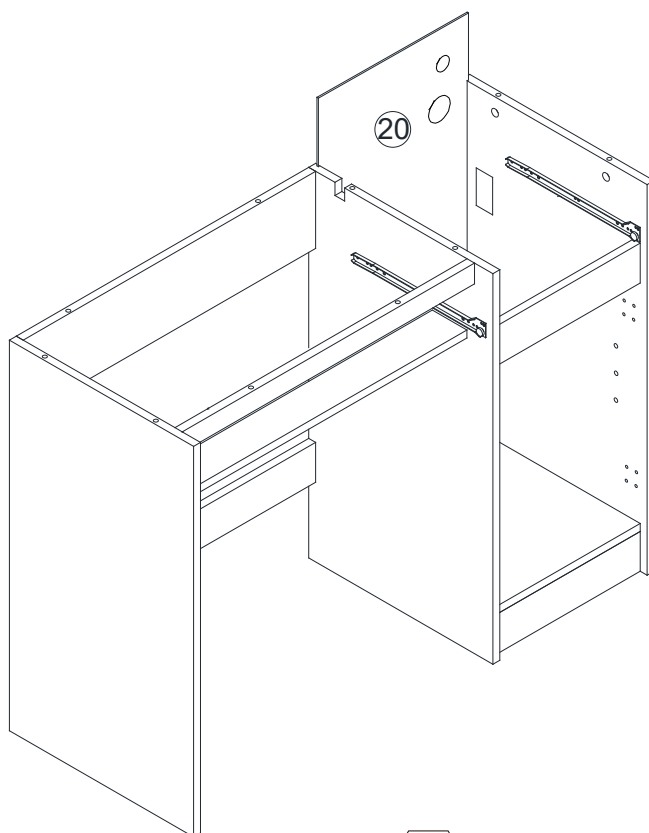


STEP 9

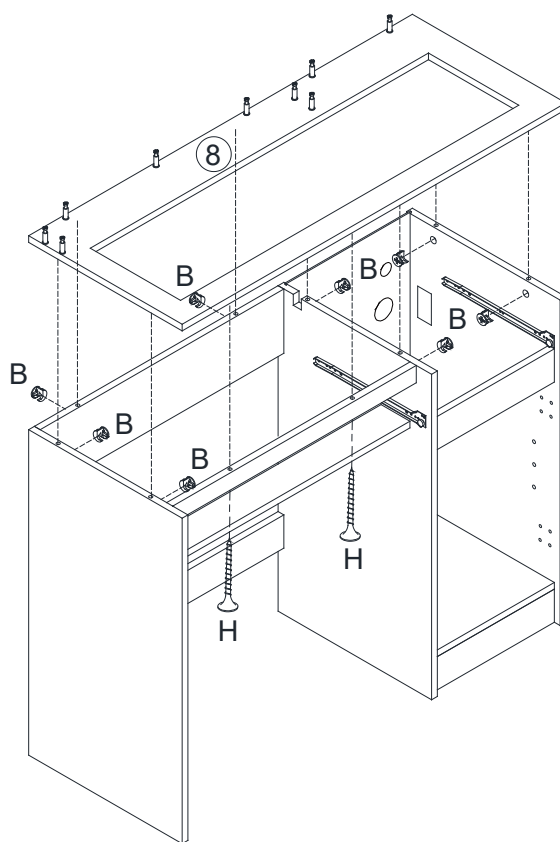

B x8  15x9.5mm


H x2  m4x40mm

STEP 10

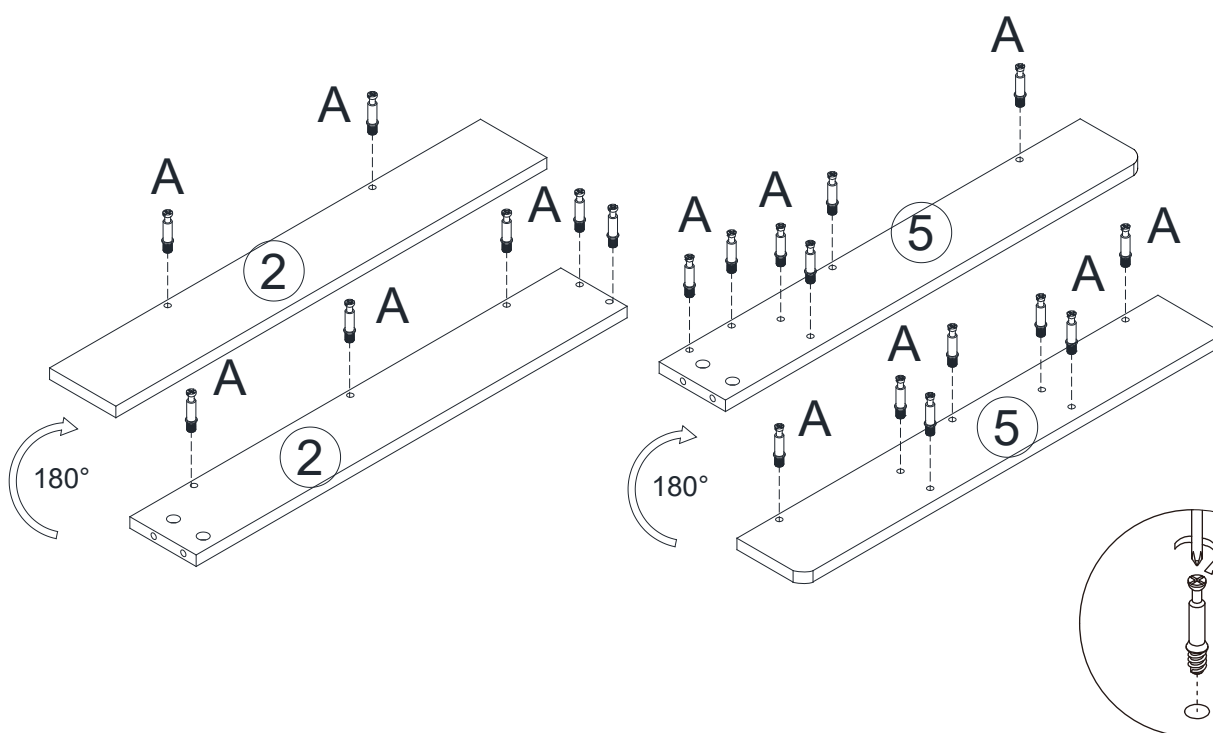


A x20  m6.5x35mm

STEP 11


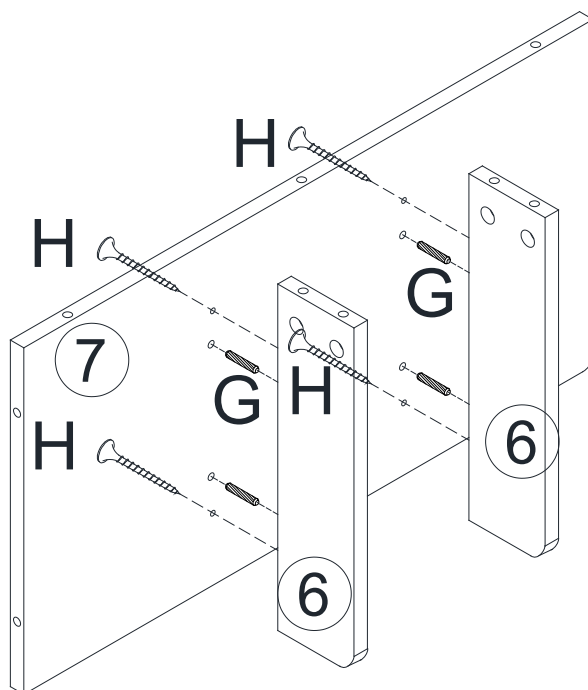


G x4  m6x30mm

H x4  m4x40mm

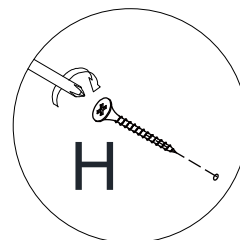


STEP 12

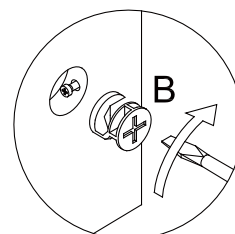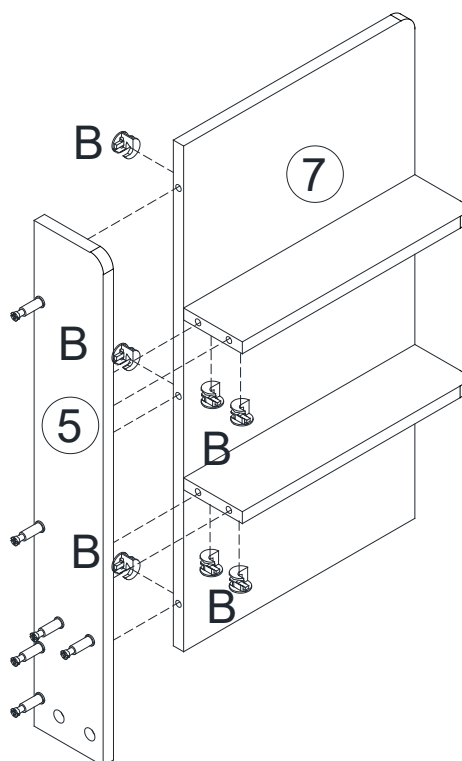

B x7  15x9.5mm

STEP 13

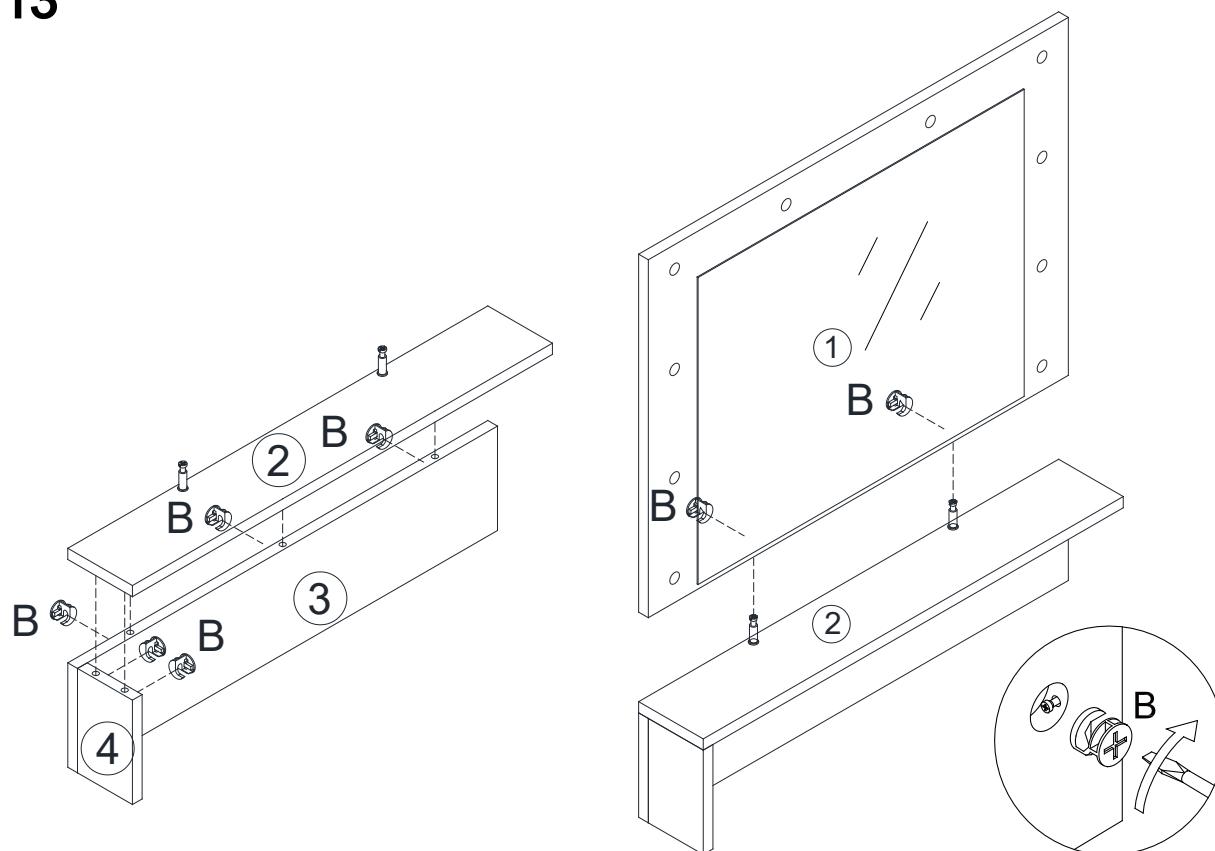


(B) x7



15x9.5mm

STEP 14


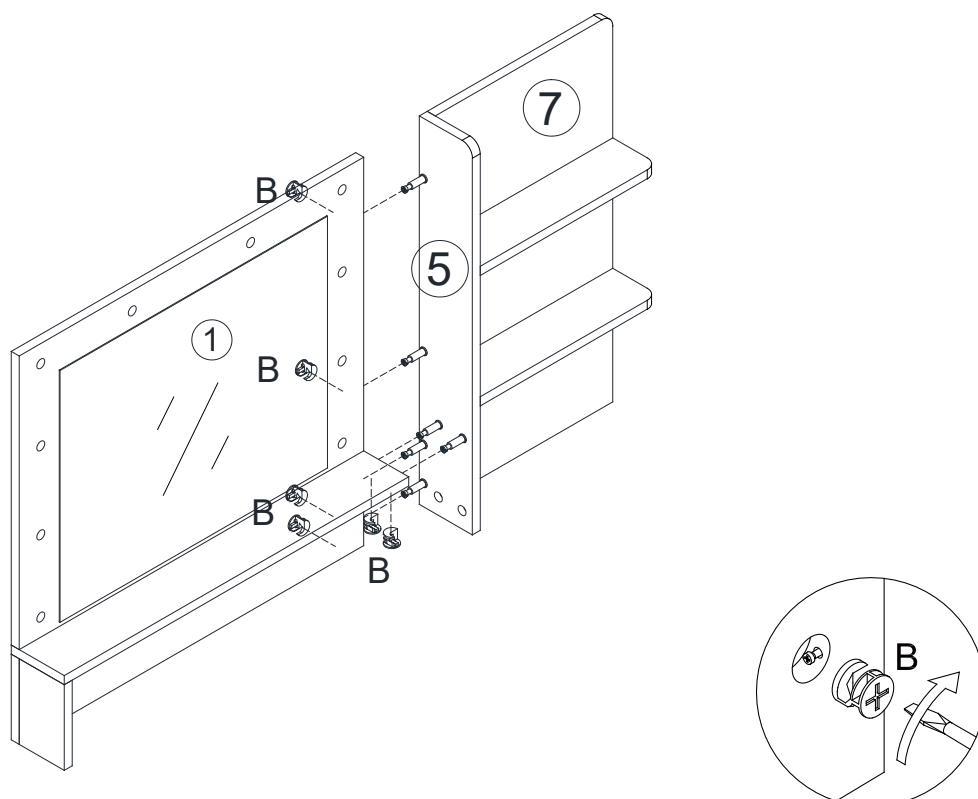


(B) x6





15x9.5mm

STEP 15

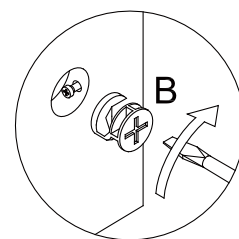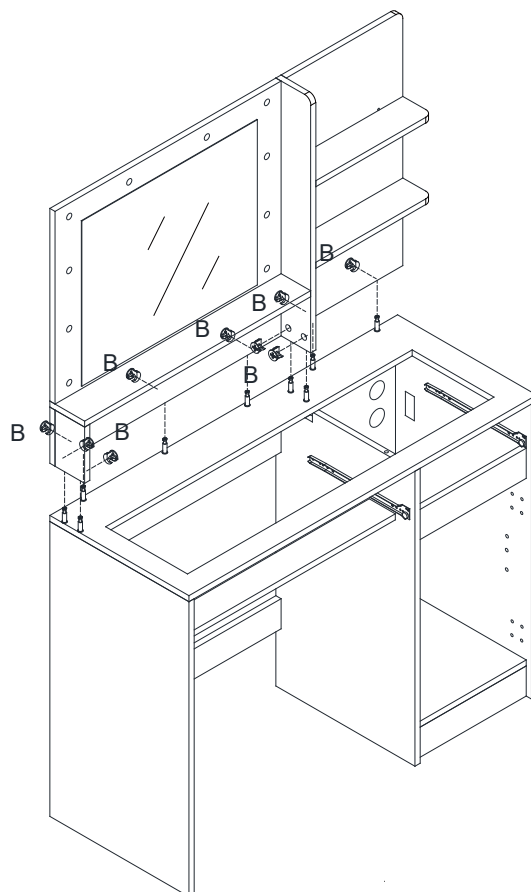


(B) x9  15x9.5mm

STEP 16

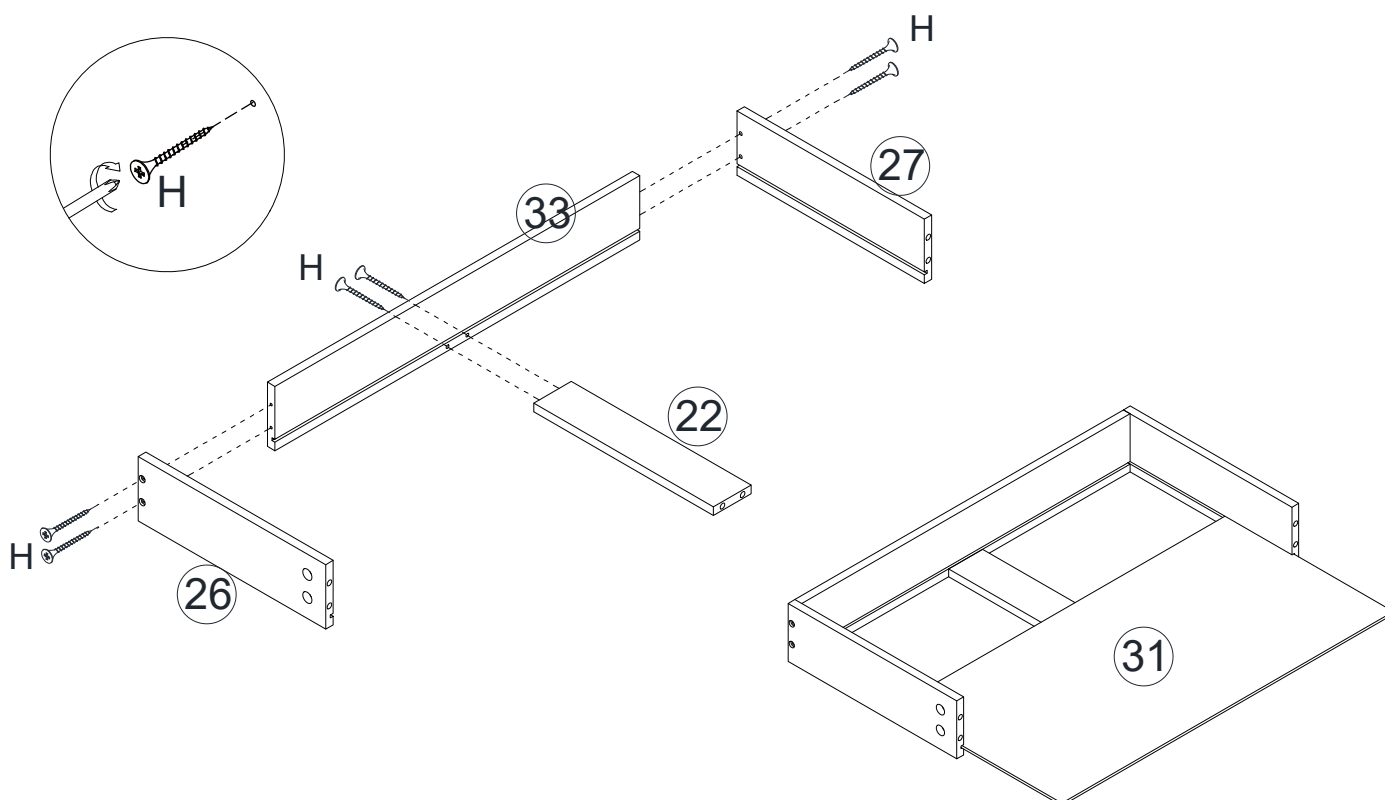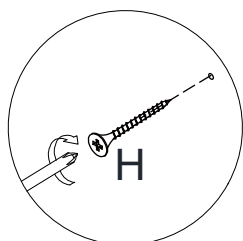


(H) x6  m4x40mm


STEP 17

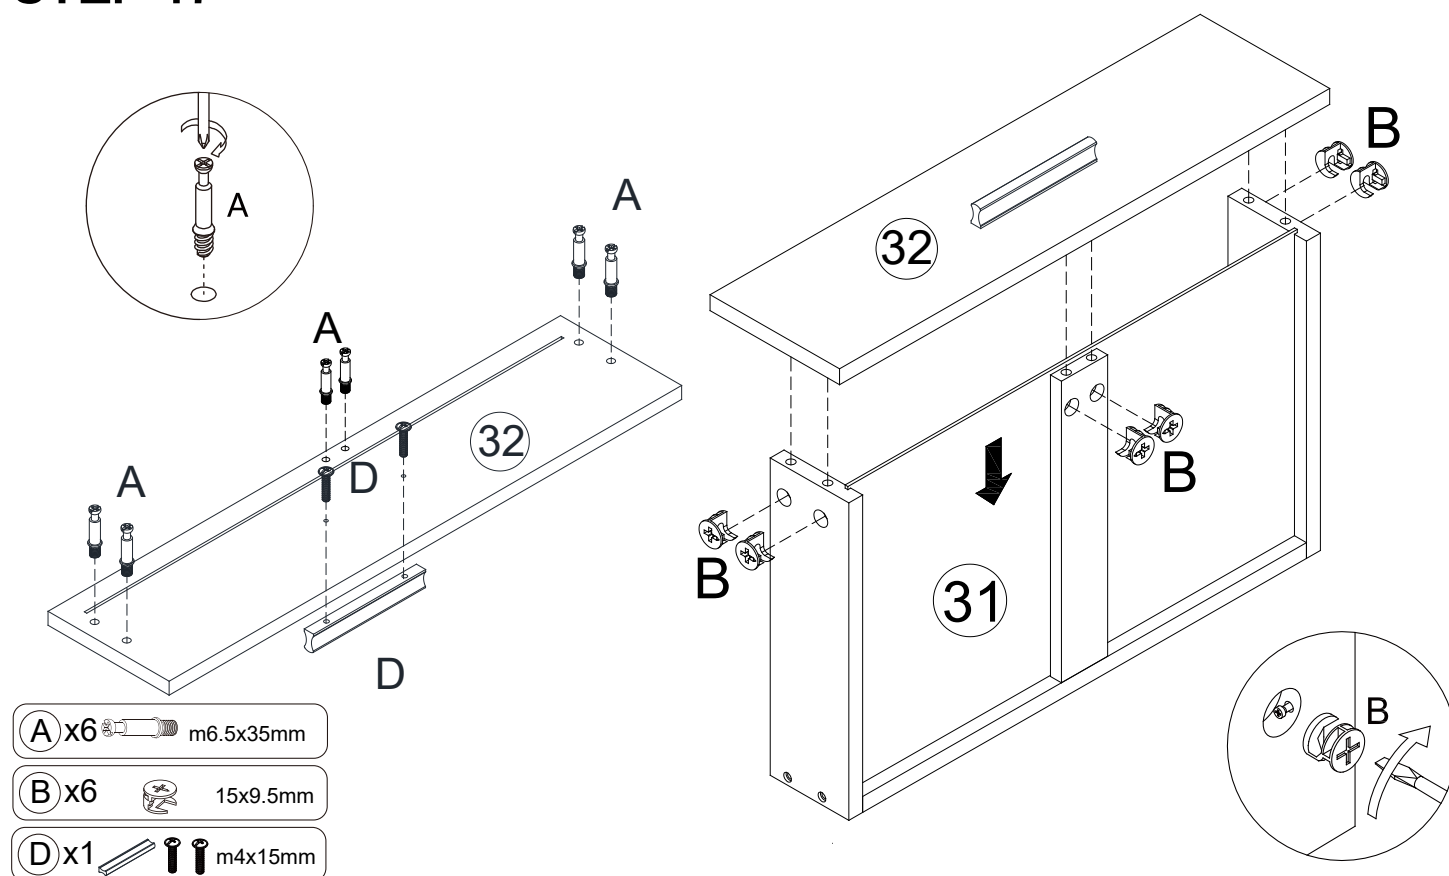


STEP 18

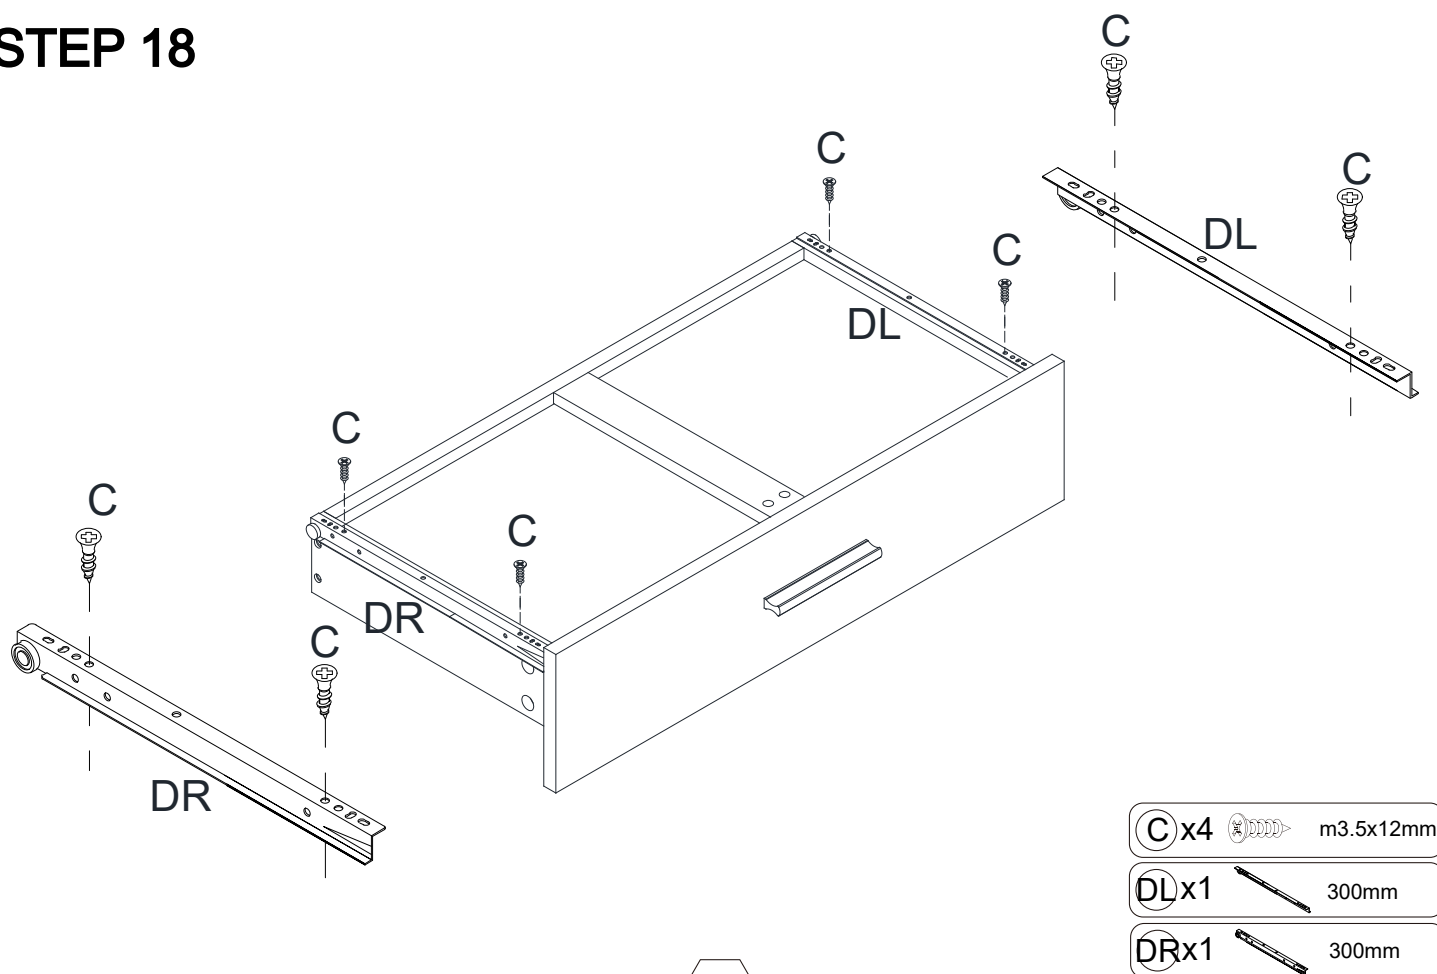


STEP 19

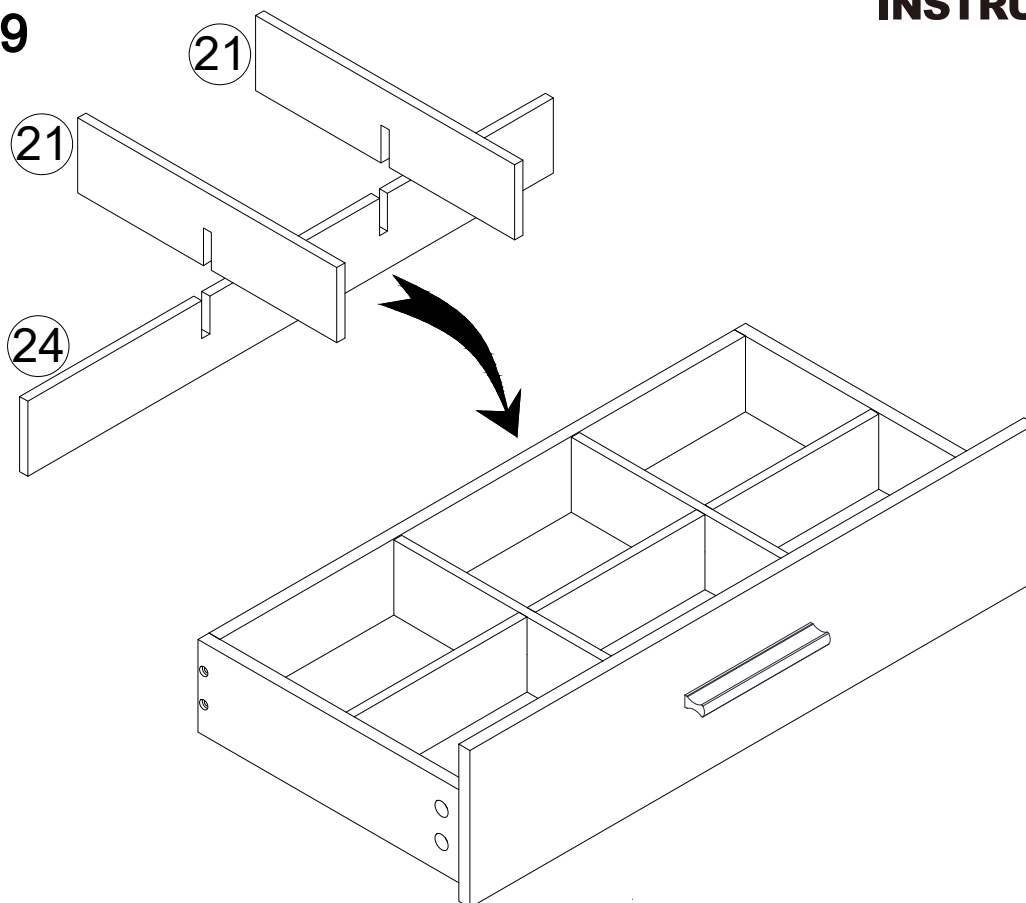


STEP 20

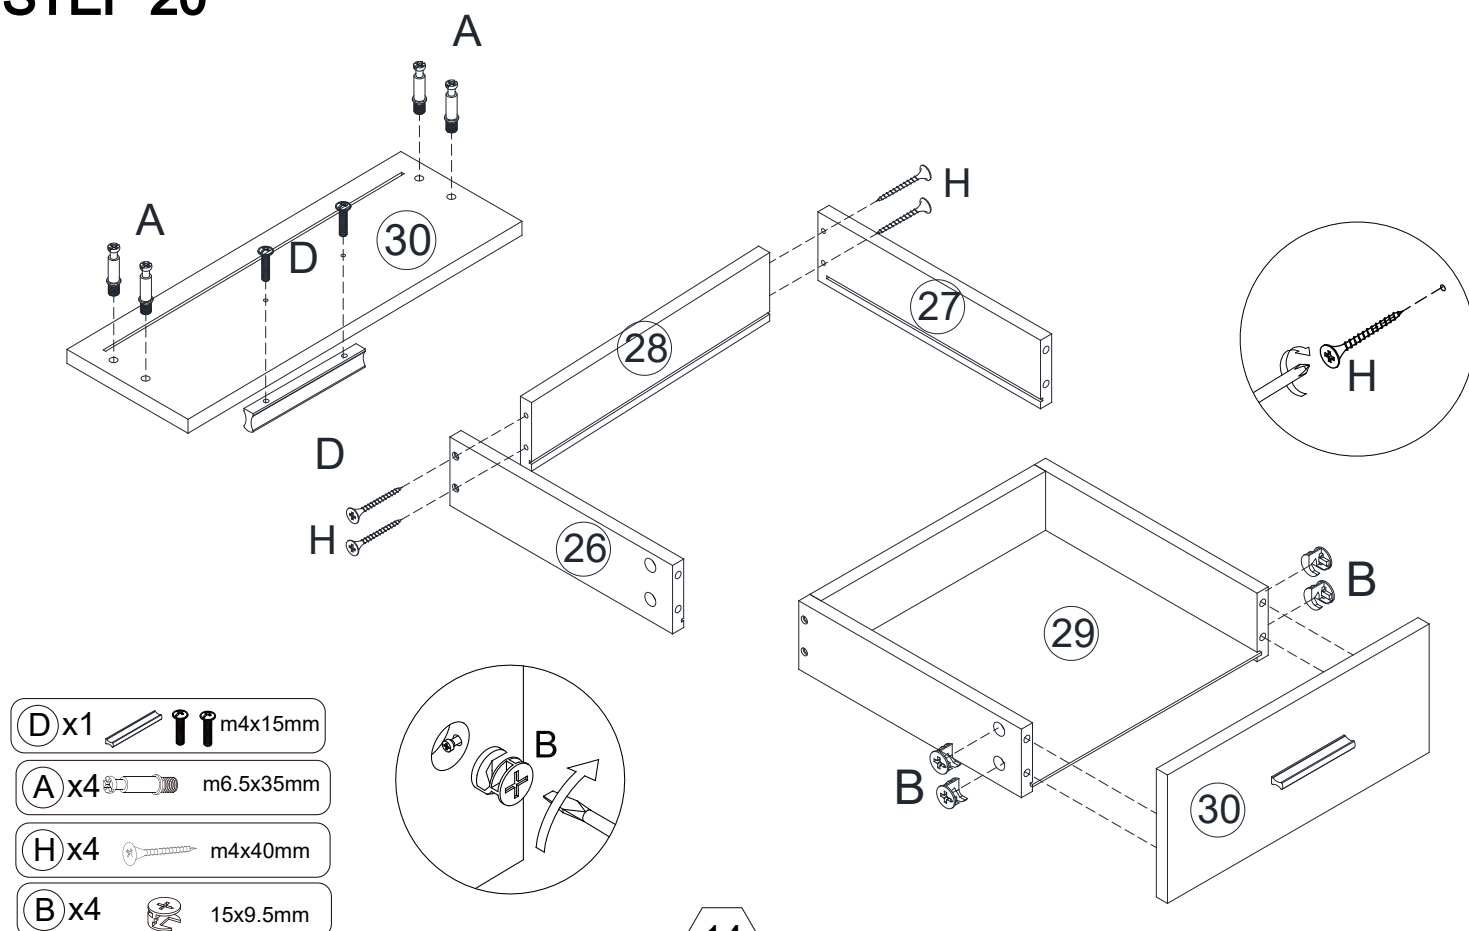



STEP 21

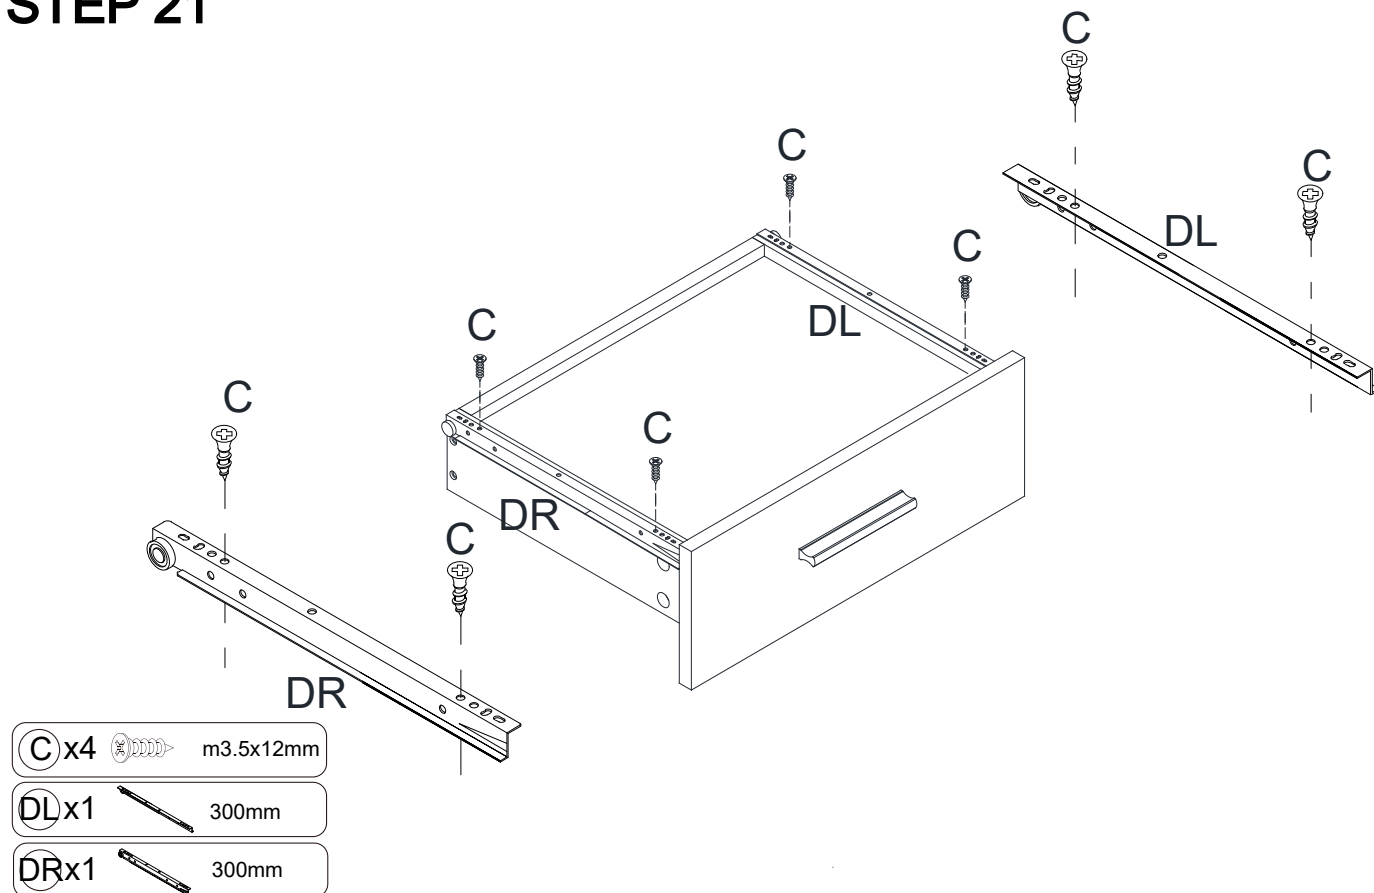

STEP 22


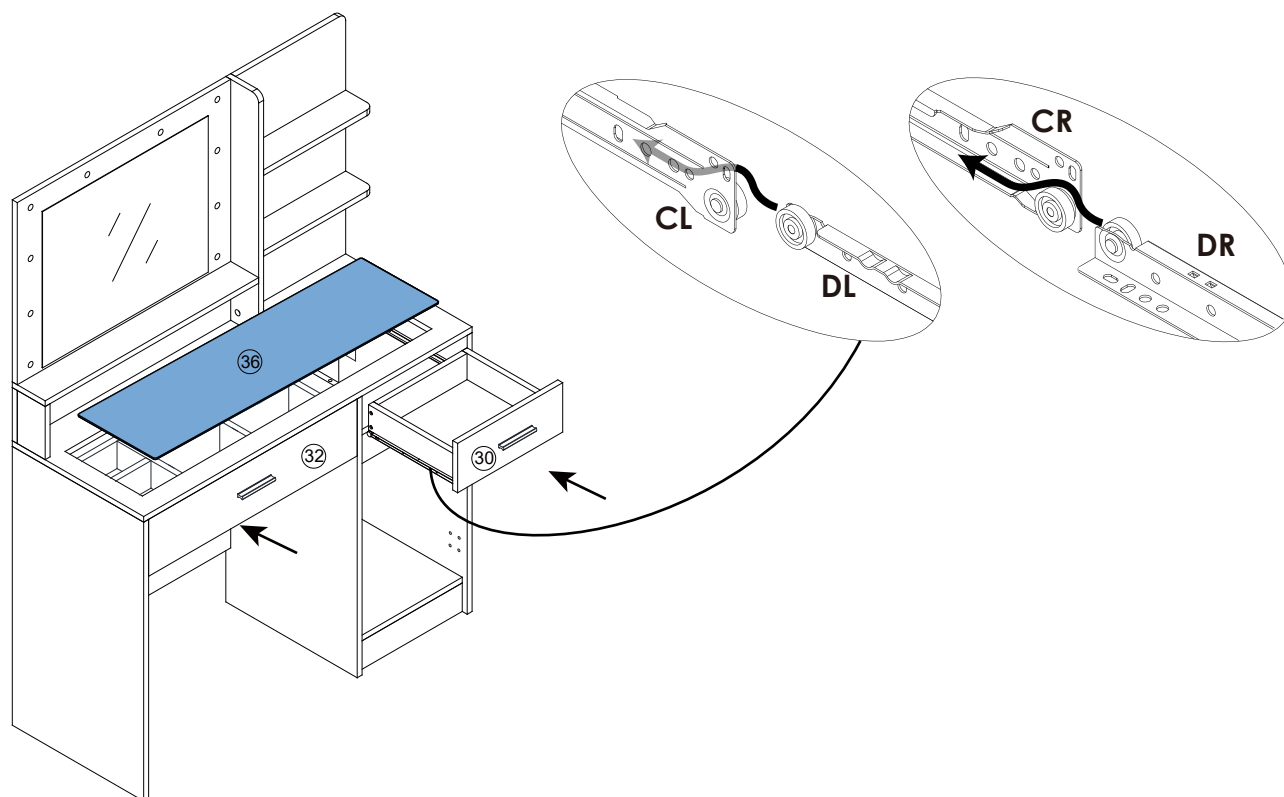


STEP 23

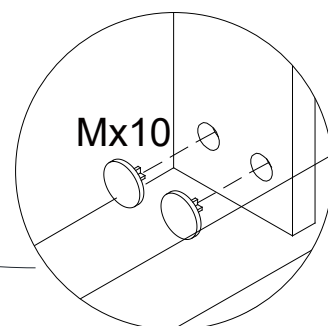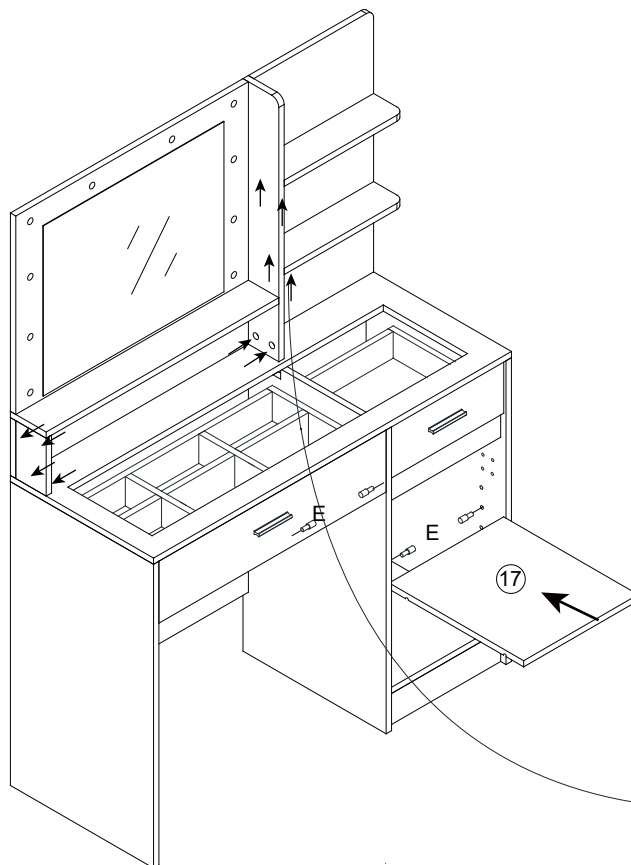

- M x10 
- E x4 


STEP 24

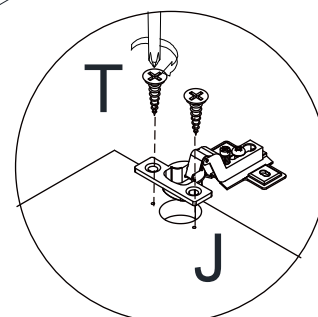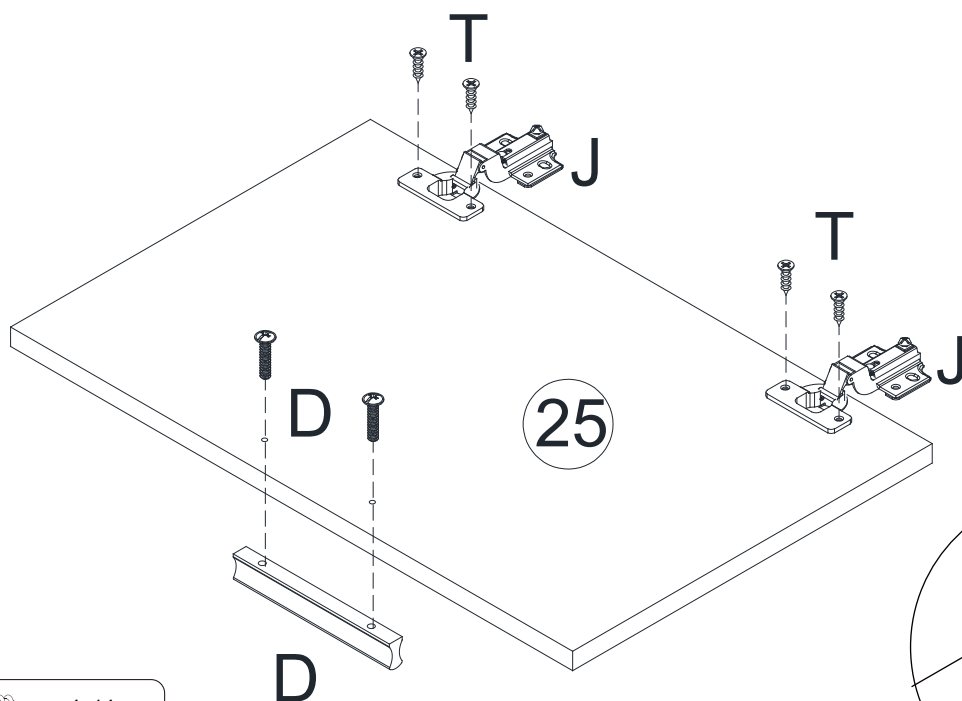


- T x4  m4x14mm
- D x1  m4x15mm
- J x2 

STEP 25

Then you've come to the right place.
Follow the illustrations below to get
your cabinet door aligned and ready for
action.
If your door is too low or too high...

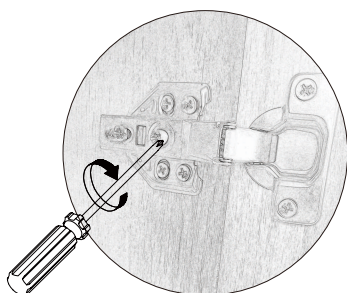


The tightness of the screws on the rotating hinge
can be adjusted to control the size of the door gap
to be moderate.

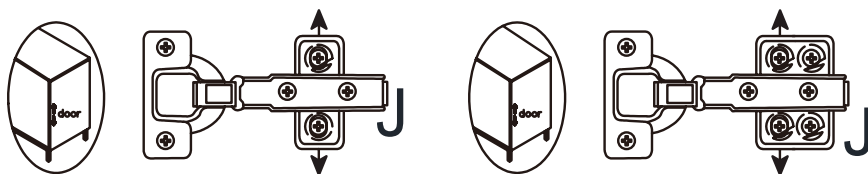


Loosen the height screws, then move the door up or down to
make it level.

If the space between your doors is off...


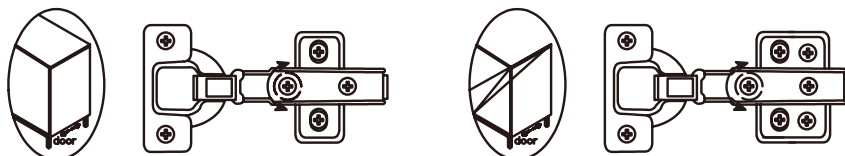


Loosen the side-to-side screws, then screw counter-clockwise
to make the gap wider or clockwise to close any gaps.

If you need to adjust the depth of the doors...



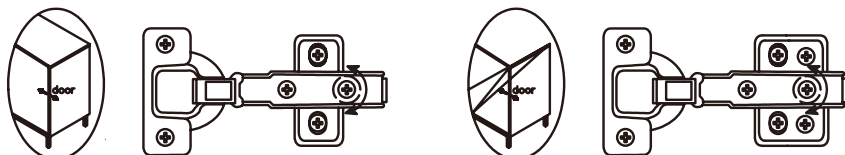


Adjust the in-and-out screws until the door is aligned with the
side of the cabinet.

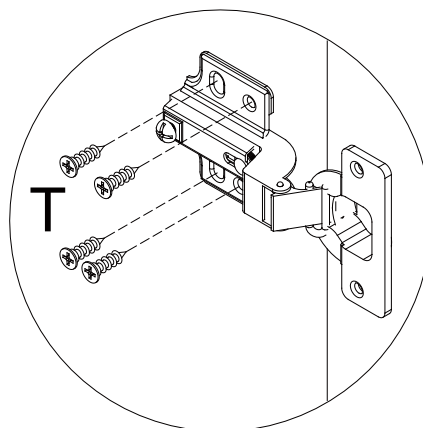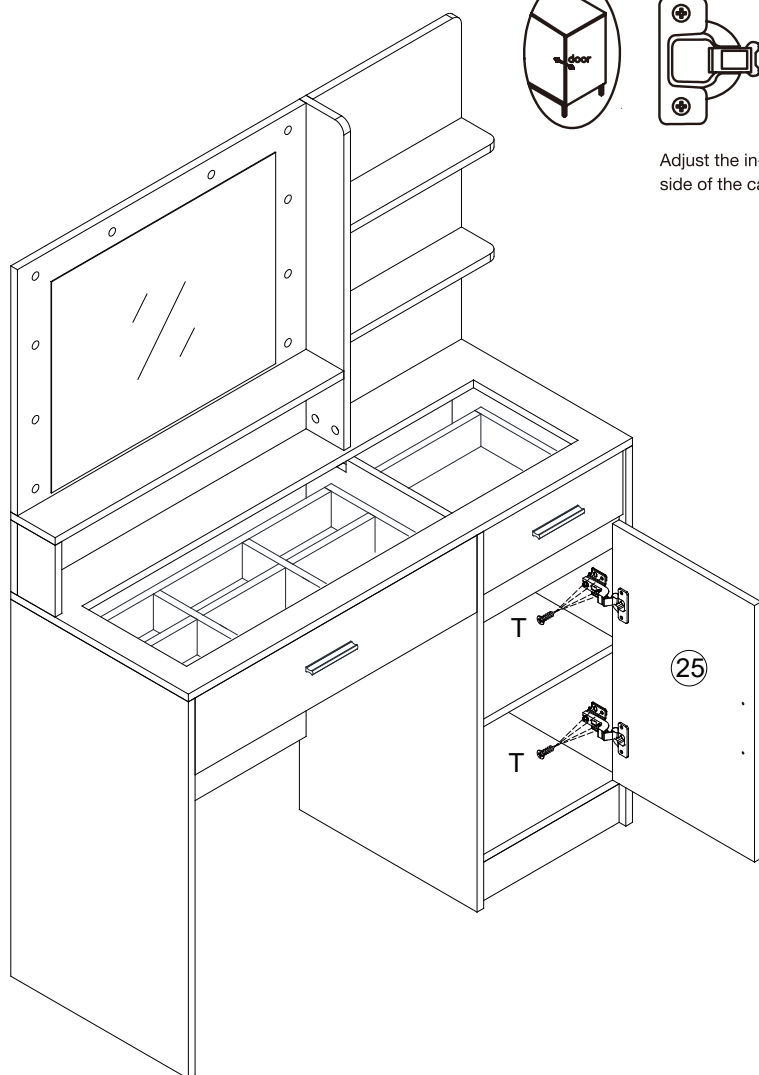




STEP 26

INSTALLATION INSTRUCTIONS

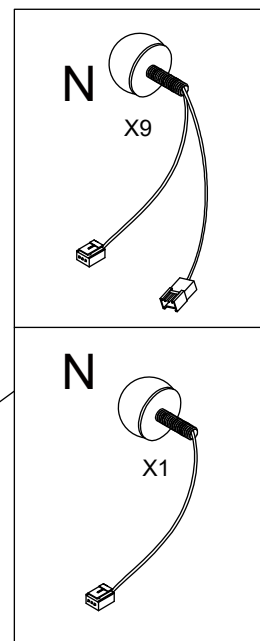
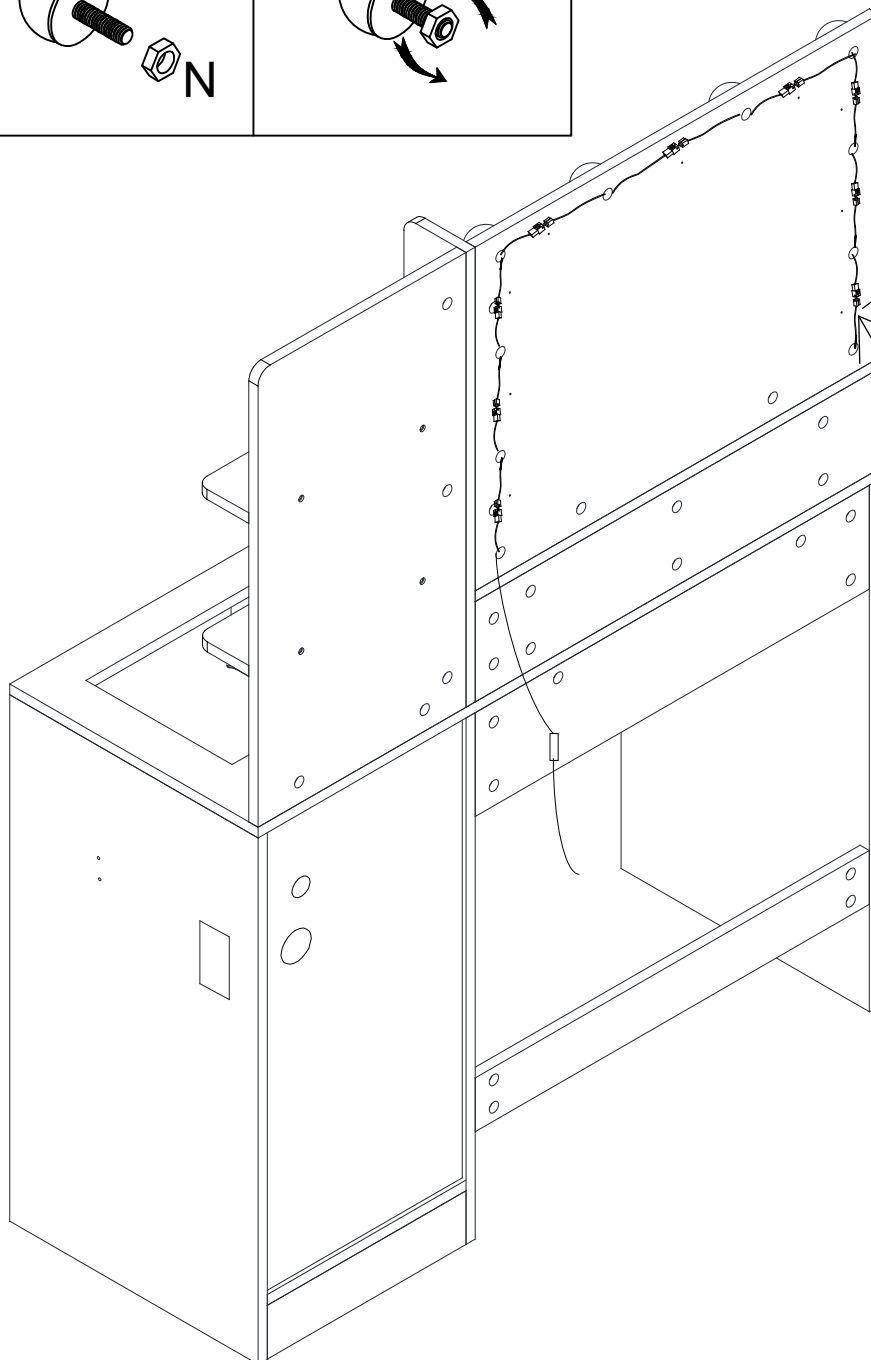
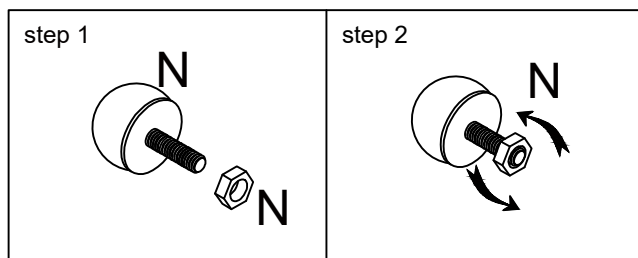


This is a single line light

STEP 27

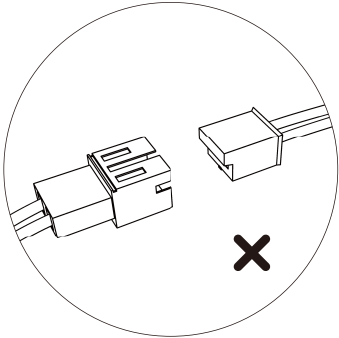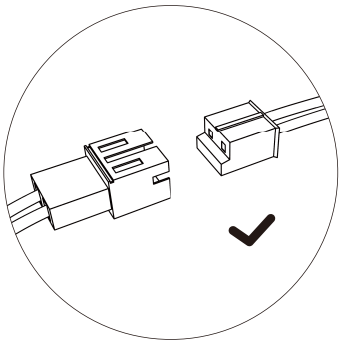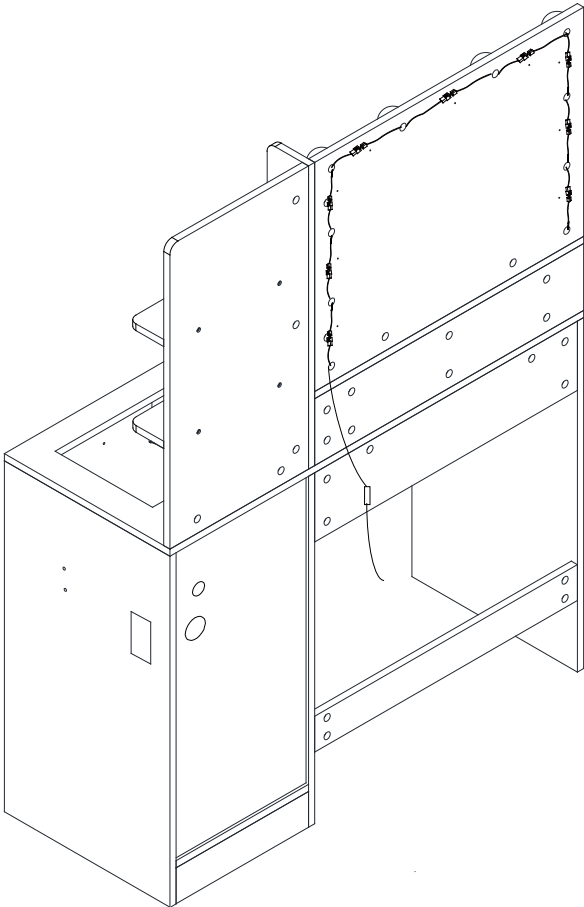


STEP 28

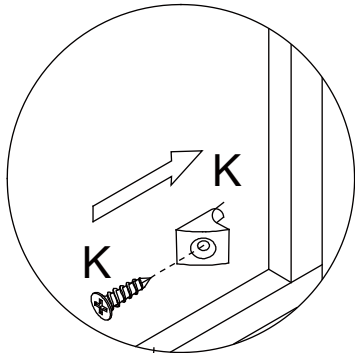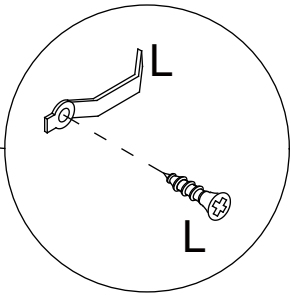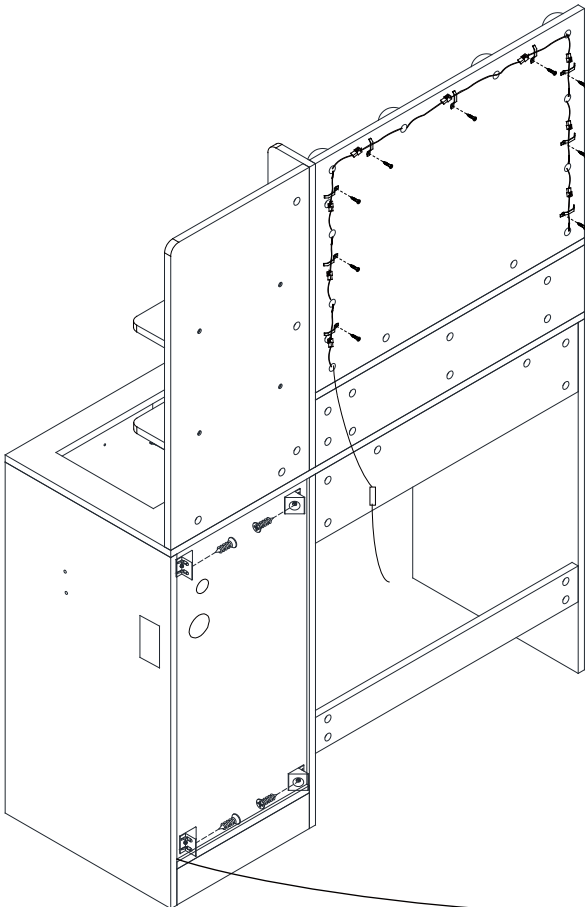

L x9  m3x12mm


K x4  

STEP 29

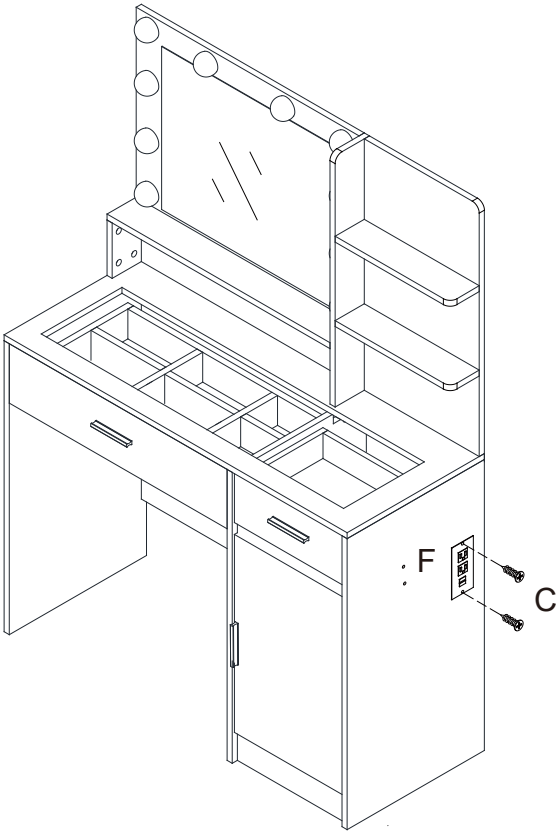

- C** x2  m3.5x12mm
- F** x1 

STEP 30

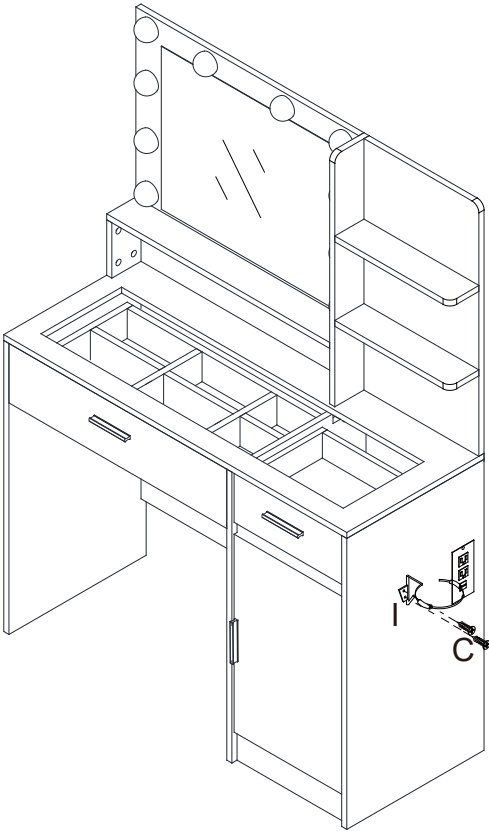

- C** x2  m3.5x12mm
- I** x1 

STEP 31

INSTALLATION INSTRUCTIONS

