

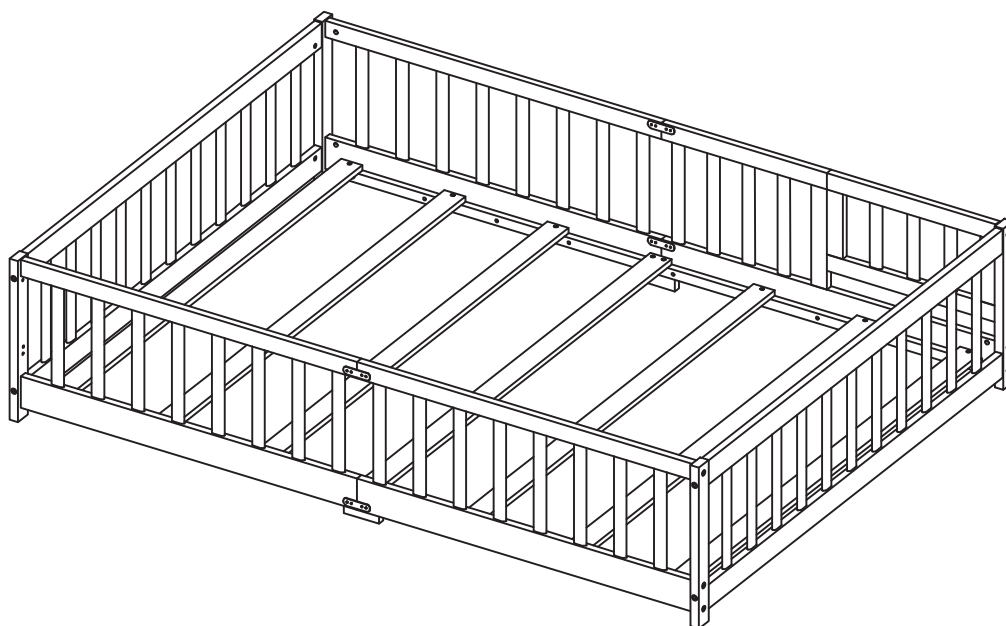


# ASSEMBLY INSTRUCTIONS











## FULL FLOOR BED WITH FENCE

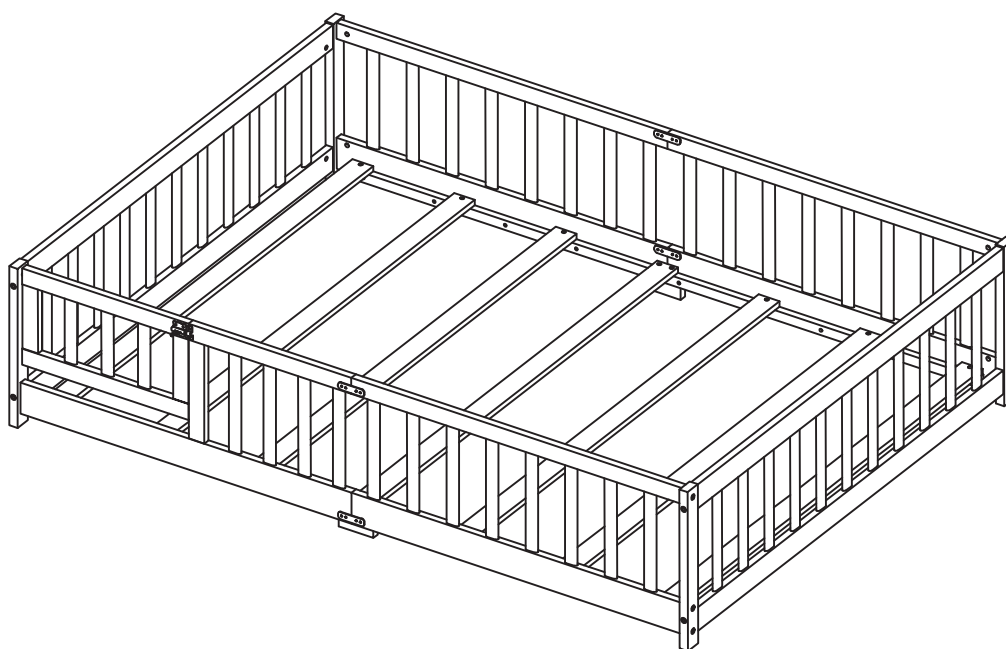








# Detail View

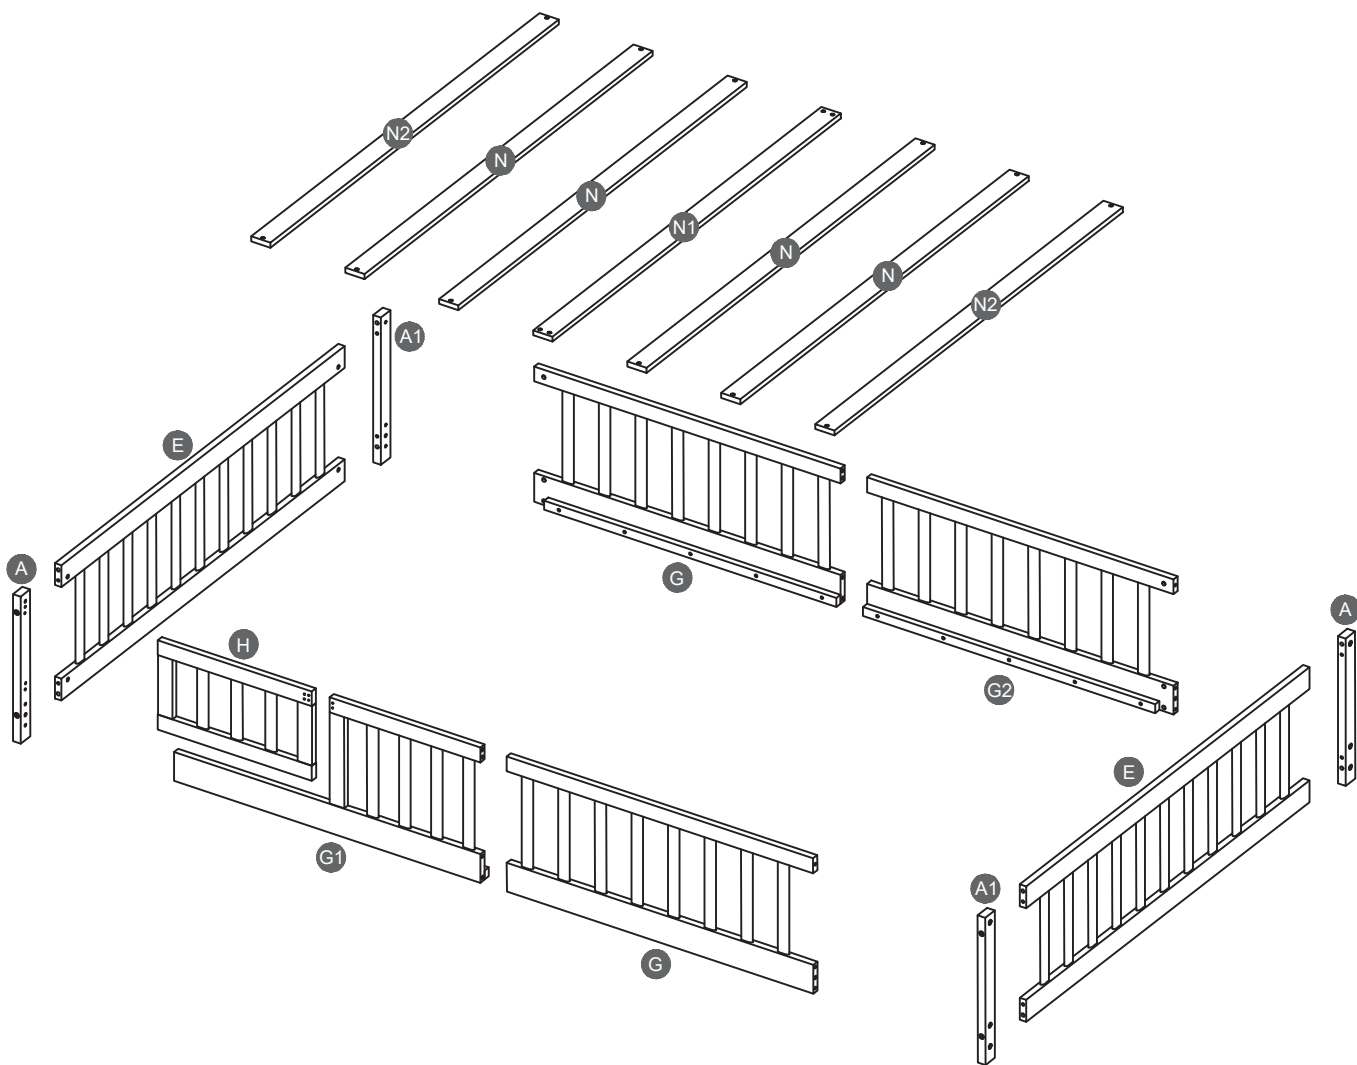


# Part List
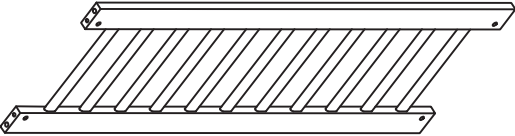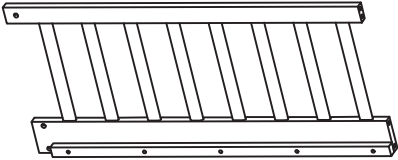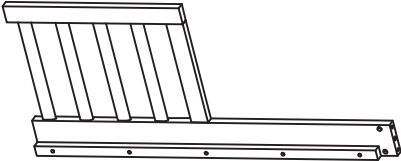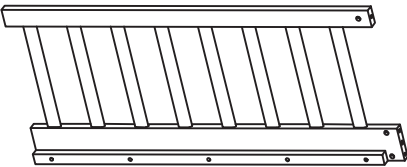
|                                                                                                                                                  |                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>A</div> <div>  </div> <div>Leg - 2pcs</div>                | <div>A1</div> <div>  </div> <div>Leg - 2pcs</div>               |
| <div>E</div> <div>  </div> <div>Hb. Fb. Panel - 2pcs</div>      | <div>G</div> <div>  </div> <div>Side Rail - 2pcs</div>          |
| <div>G1</div> <div>  </div> <div>Side Rail - 1pc</div>          | <div>G2</div> <div>  </div> <div>Side Rail - 1pc</div>          |
| <div>H</div> <div>  </div> <div>Door - 1pc</div>               | <div>N</div> <div>  </div> <div>Bed Slats - 4pcs</div>         |
| <div>N1</div> <div>  </div> <div>Bed Slats (Mid.) - 1pc</div> | <div>N2</div> <div>  </div> <div>Bed Slats (End) - 2pcs</div> |

# Hardware List


|                                                                                                                                           |                                                                                                                                       |                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b><br><br>M6 x 80mm<br>JCBC (8pcs)                 | <b>2</b><br><br>M6 x 65mm<br>JCBC (11pcs)            | <b>3</b><br><br>M6 x 15mm<br>Barrel Nut (19pcs)           |
| <b>4</b><br><br>M10 x 30mm<br>Wood Dowel (Short) (12pcs) | <b>5</b><br><br>Metal Bracket (8pcs)                 | <b>6</b><br><br>M3.5 x 16mm<br>CSK Screw (46pcs)          |
| <b>7</b><br><br>Side Rail Bottom Support (2pcs)          | <b>8</b><br><br>M4 x 32mm<br>CSK Screw (4pcs)        | <b>9</b><br><br>M4 x 25mm<br>CSK Screw (12pcs)            |
| <b>10</b><br><br>M6 x 30mm<br>JCBC-W (4pcs)              | <b>11</b><br><br>20 x 20 x 230mm<br>Wood Block (1pc) | <b>12</b><br><br>Sticker Cap (2pcs)                       |
| <b>13</b><br><br>6 x 24 x 55mm (135°)<br>Hinges (2pcs) | <b>14</b><br><br>10 x 40 x 60mm<br>Lock (1pc)      | <b>15</b><br><br>M10 x 40mm<br>Wood Dowel (Long) (8pcs) |
| <b>16</b><br><br>M4 Allen Key (1pc)                    |                                                                                                                                       |                                                                                                                                              |

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




**PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !**


## STEP 1:

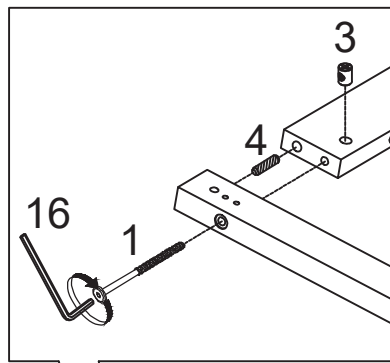


|      |                                                                                    |      |                                                                                     |      |                                                                                    |
|------|------------------------------------------------------------------------------------|------|-------------------------------------------------------------------------------------|------|------------------------------------------------------------------------------------|
| 1    |  | 3    |  | 4    |  |
| 8PCS |                                                                                    | 8PCS |                                                                                     | 8PCS |                                                                                    |

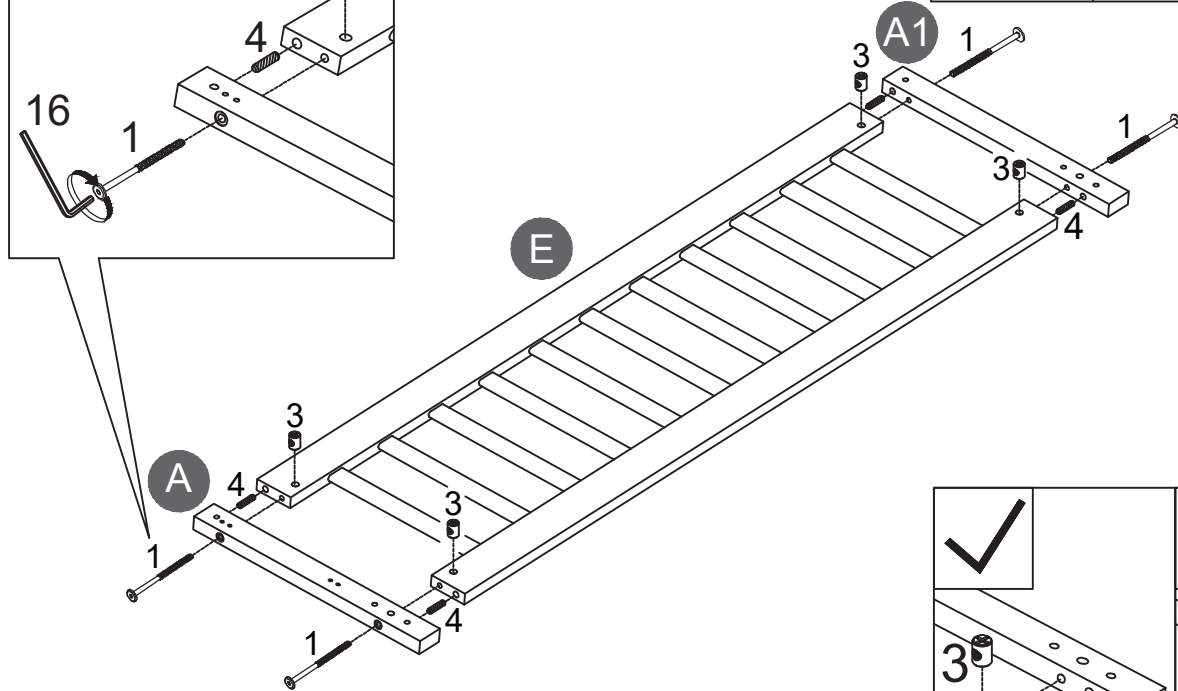

Note: Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

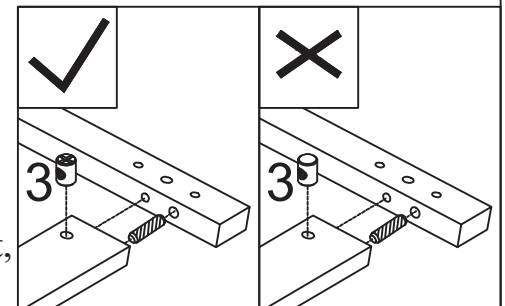


## STEP 2:

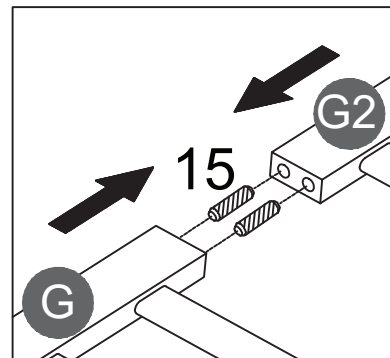




Note:  
Use the **Long Wood Dowel**  
M10x 40mm

|      |                                                                                       |
|------|---------------------------------------------------------------------------------------|
| 15   |  |
| 4PCS |                                                                                       |

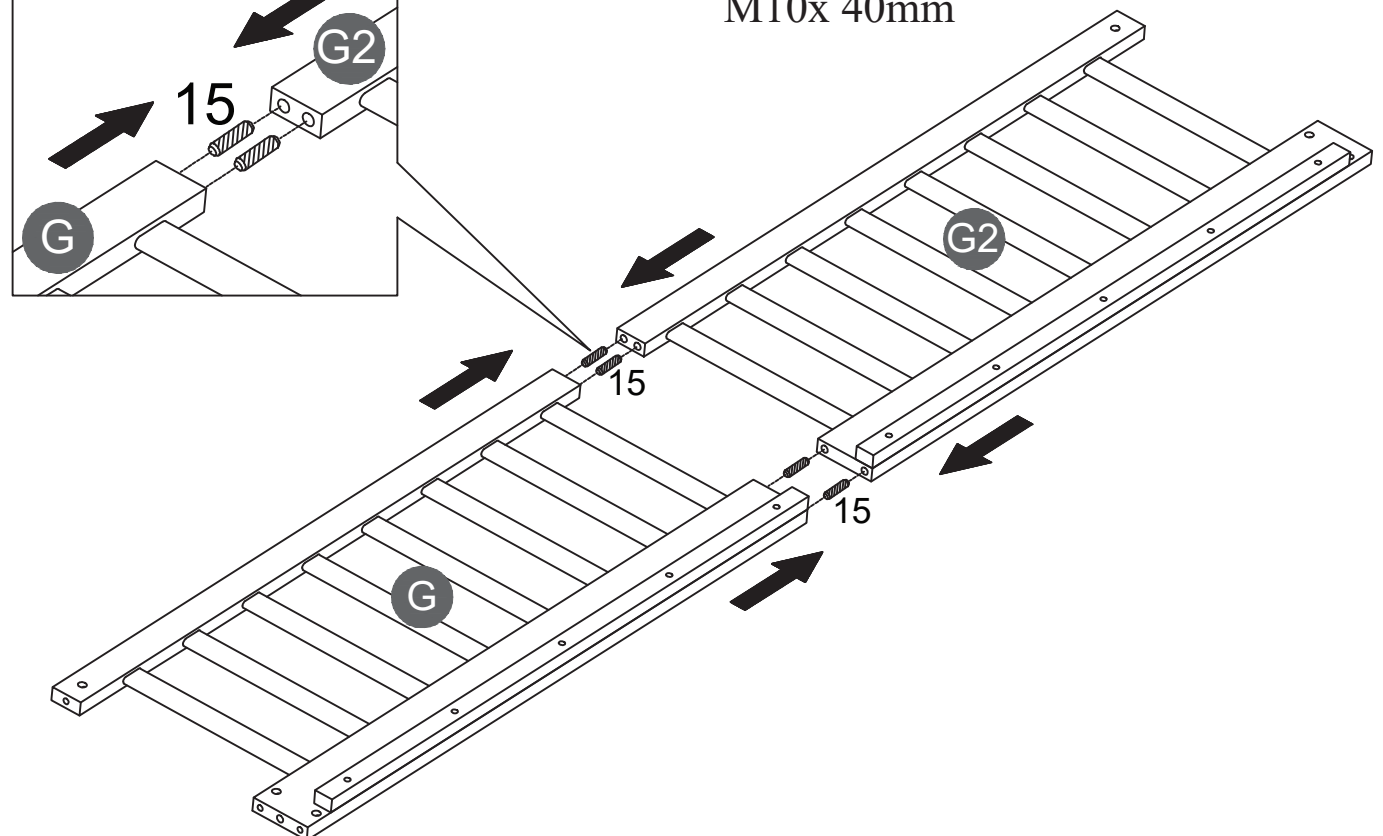




### STEP 3:

|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>5</b>                                                                            | <b>6</b>                                                                            |
|  |  |
| <b>2PCS</b>                                                                         | <b>8PCS</b>                                                                         |

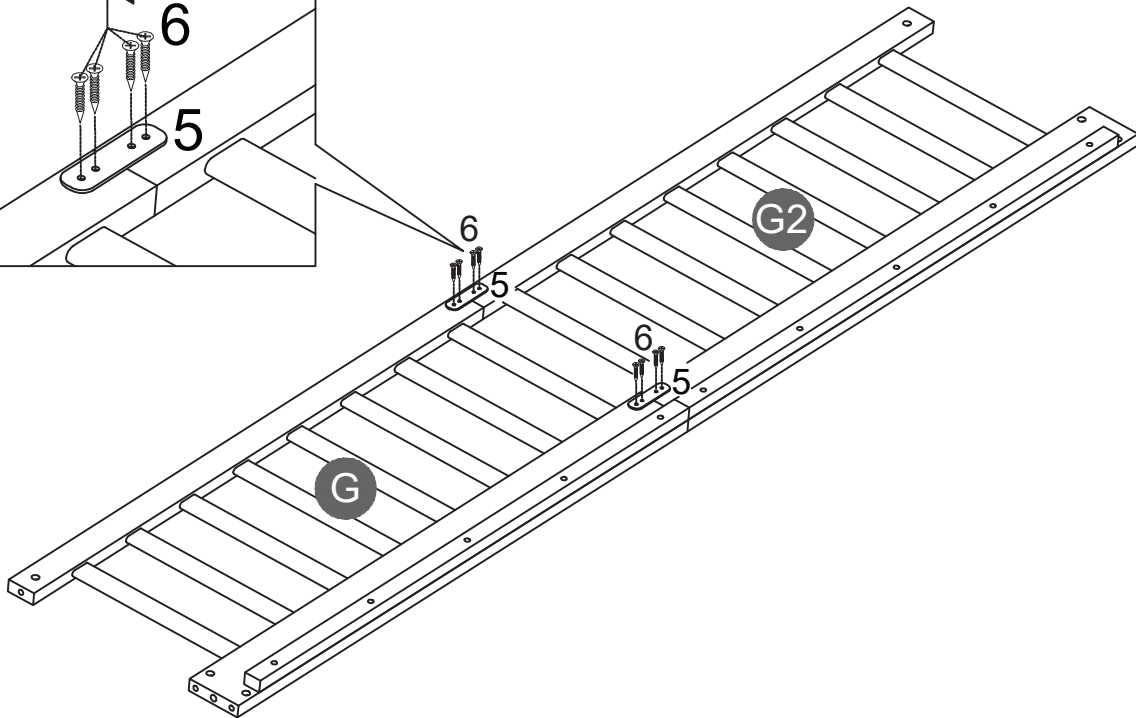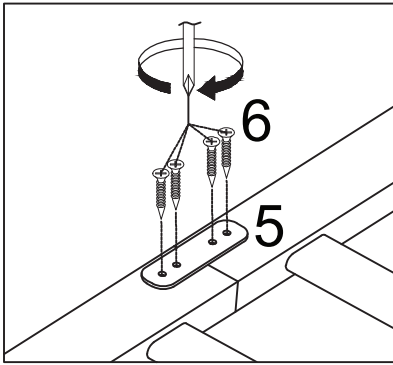

### STEP 4:

|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <b>5</b>                                                                              | <b>6</b>                                                                              |
|  |  |
| <b>2PCS</b>                                                                           | <b>8PCS</b>                                                                           |

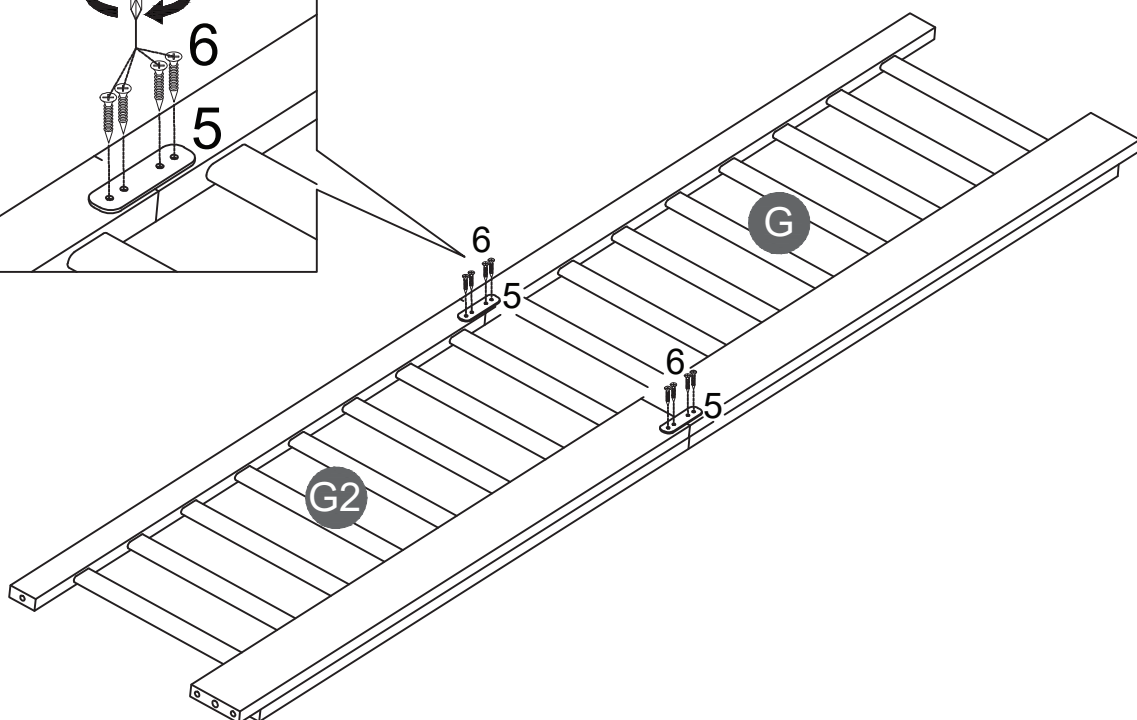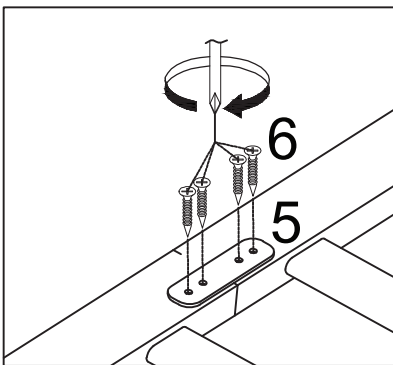

After completing the installation of Step 3, please flip to the other side.



## STEP 5:

15




4PCS

Note:  
Use the **Long Wood Dowel**  
M10x 40mm

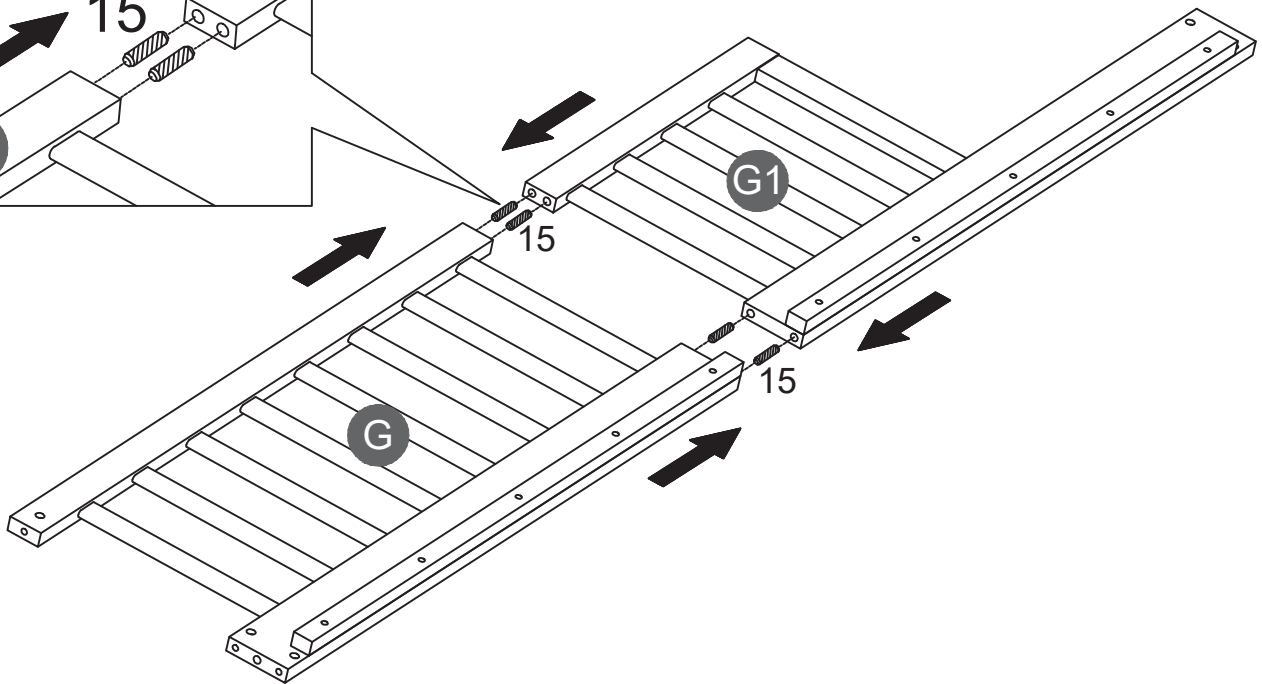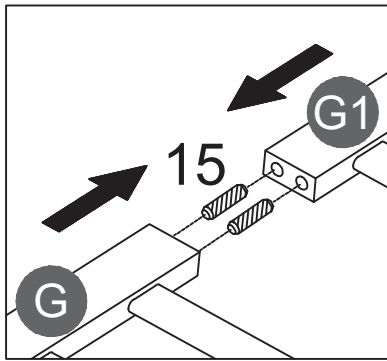

## STEP 6:

5





2PCS



6




8PCS

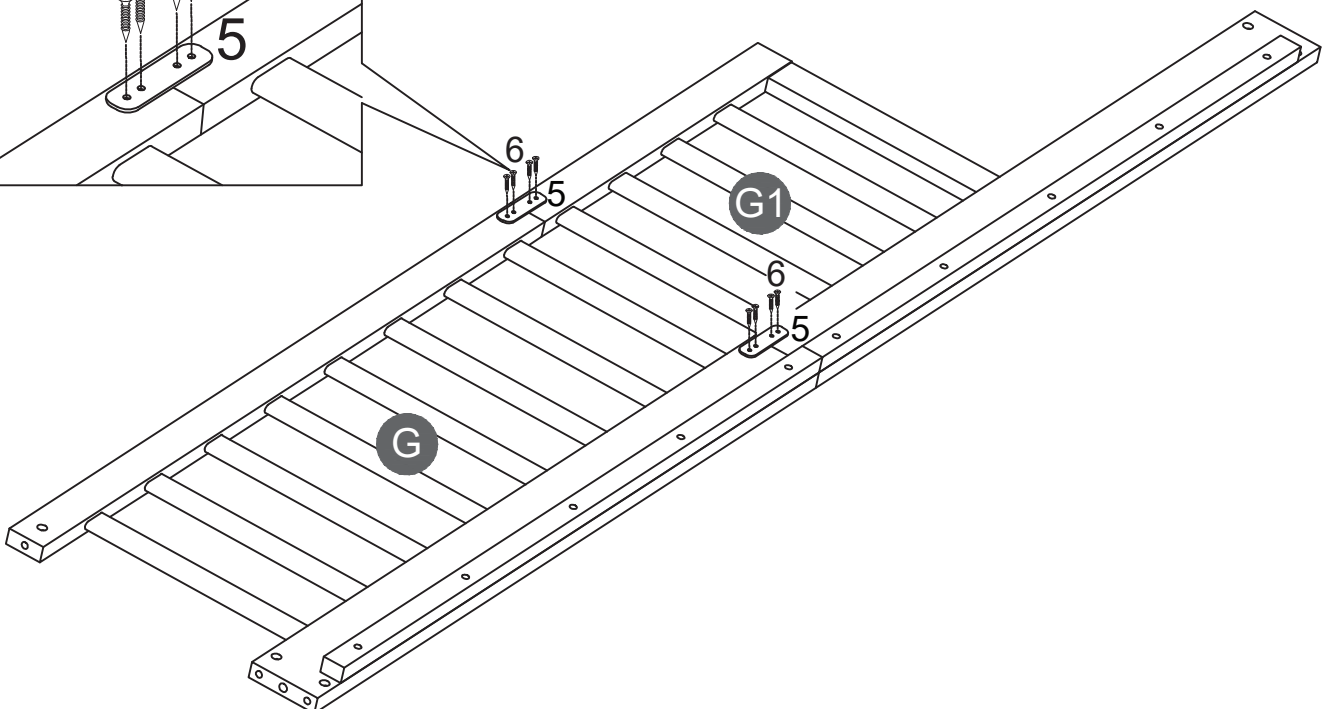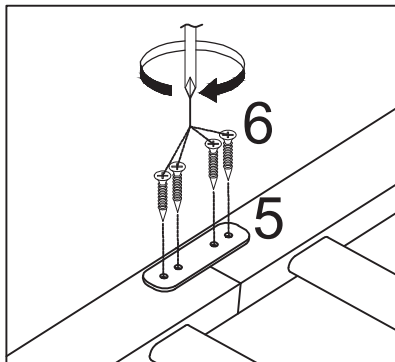


## STEP 7:

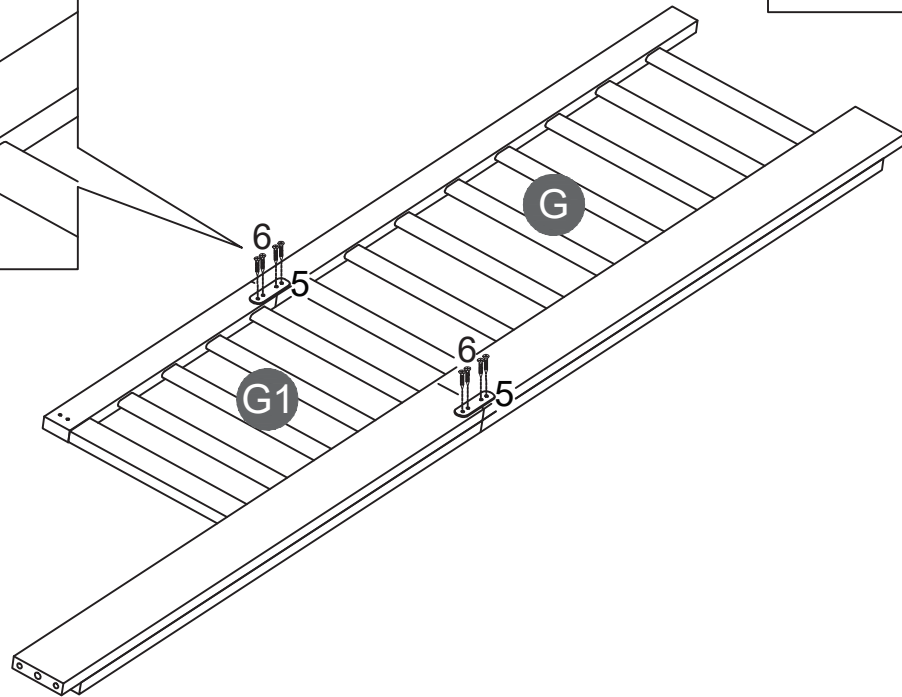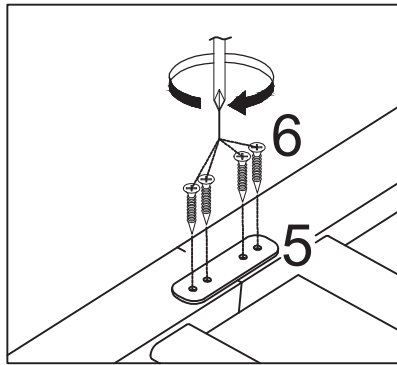


|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>5</b>                                                                            | <b>6</b>                                                                            |
|  |  |
| <b>2PCS</b>                                                                         | <b>8PCS</b>                                                                         |

After completing the installation of Step 6, please flip to the other side.


## STEP 8:

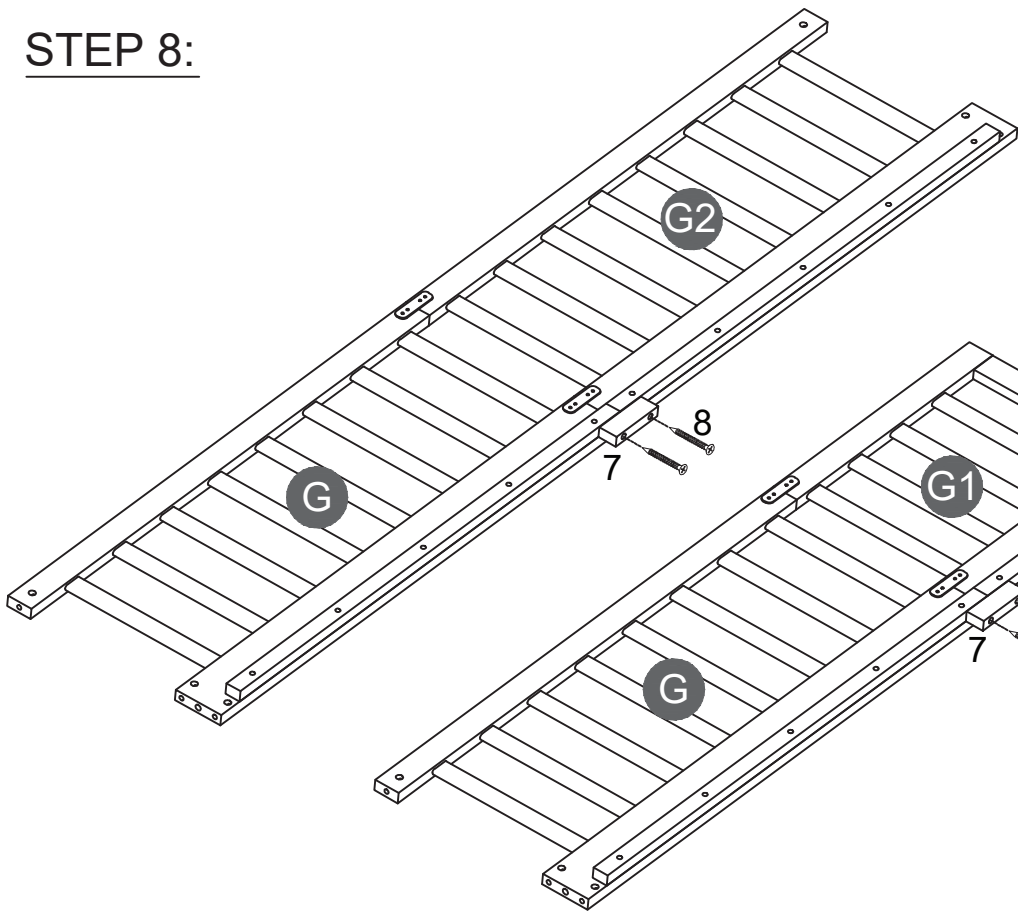


|                                                                                       |                                                                                       |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <b>7</b>                                                                              | <b>8</b>                                                                              |
|  |  |
| <b>2PCS</b>                                                                           | <b>4PCS</b>                                                                           |

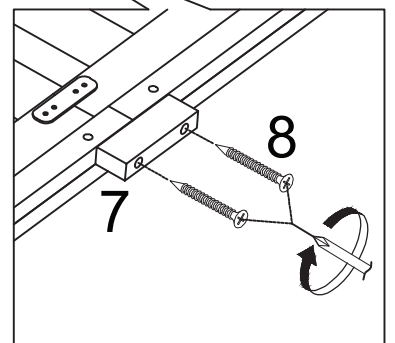


## STEP 9:

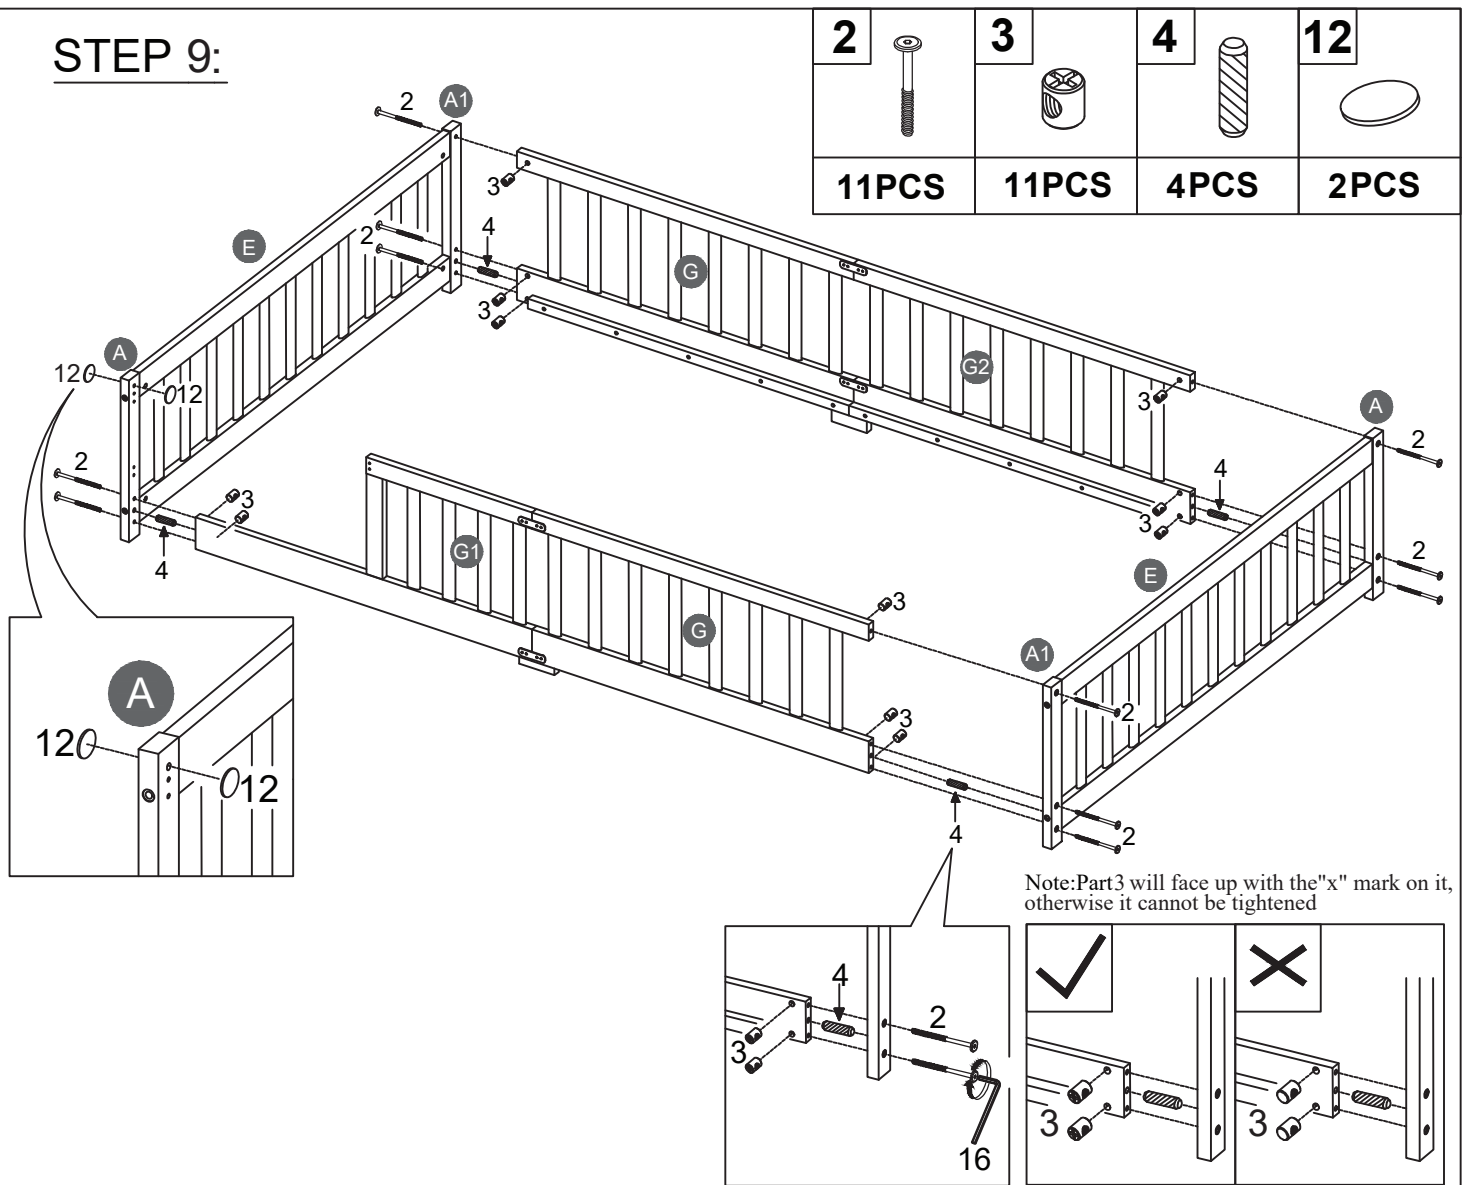

## STEP 10:

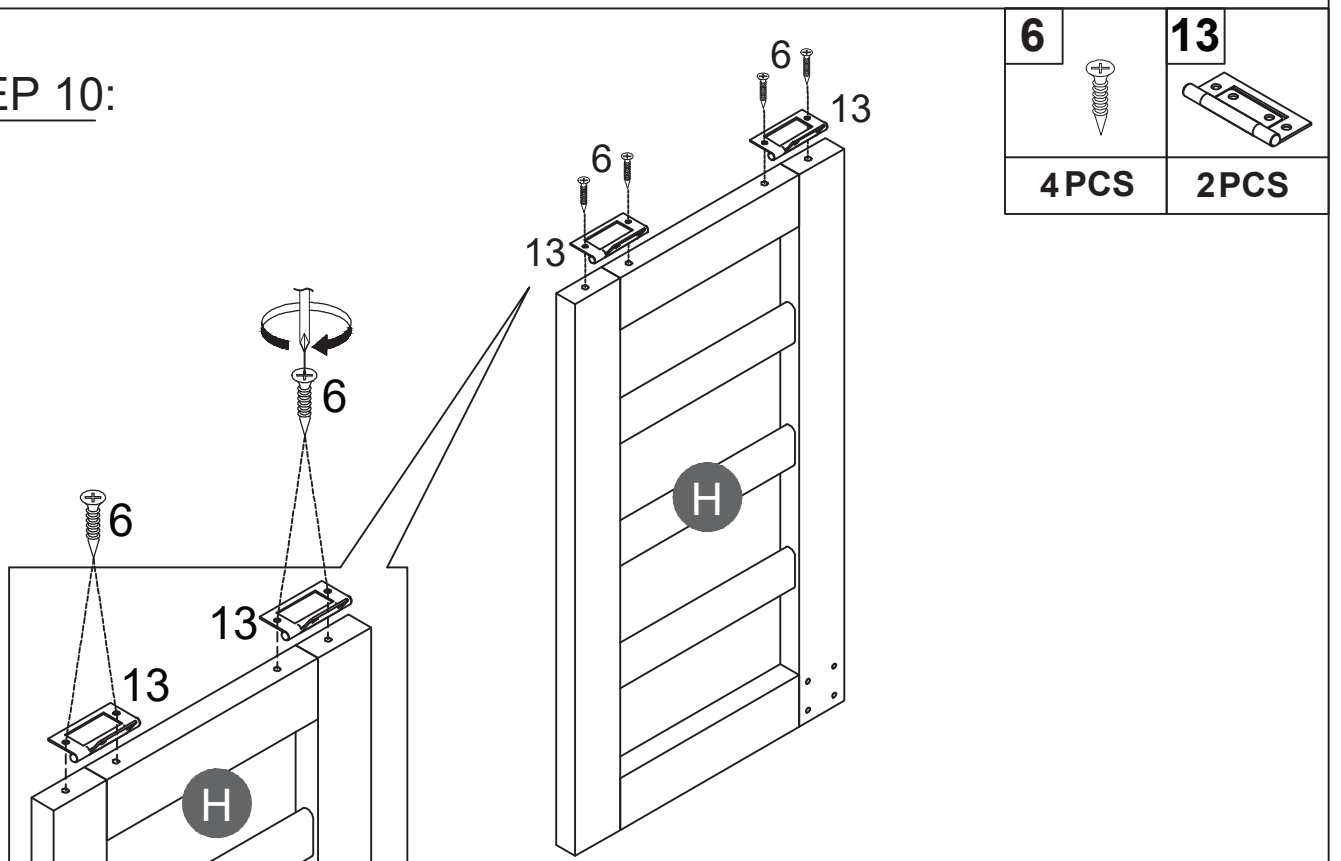

## STEP 11:

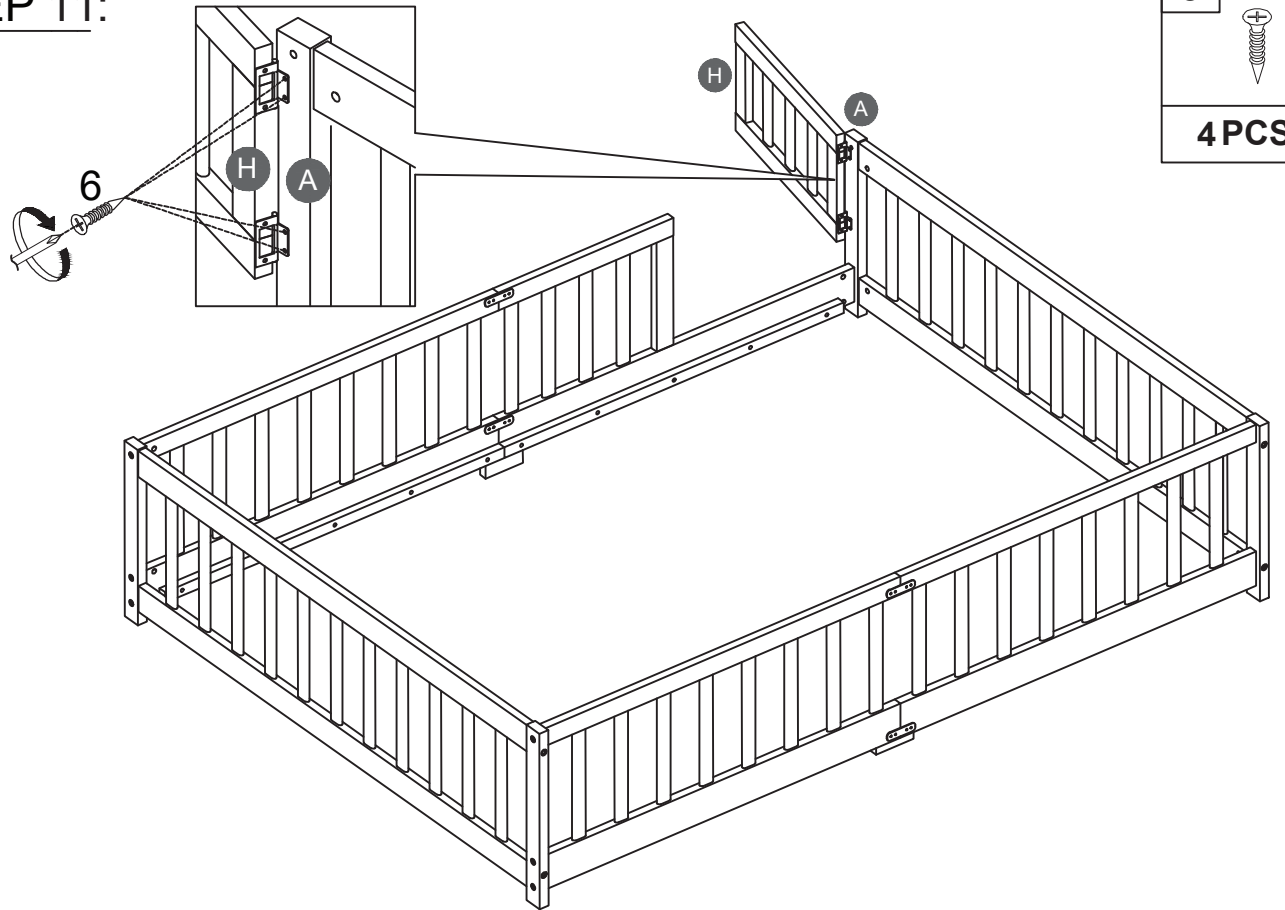


6



4 PCS

## STEP 12:

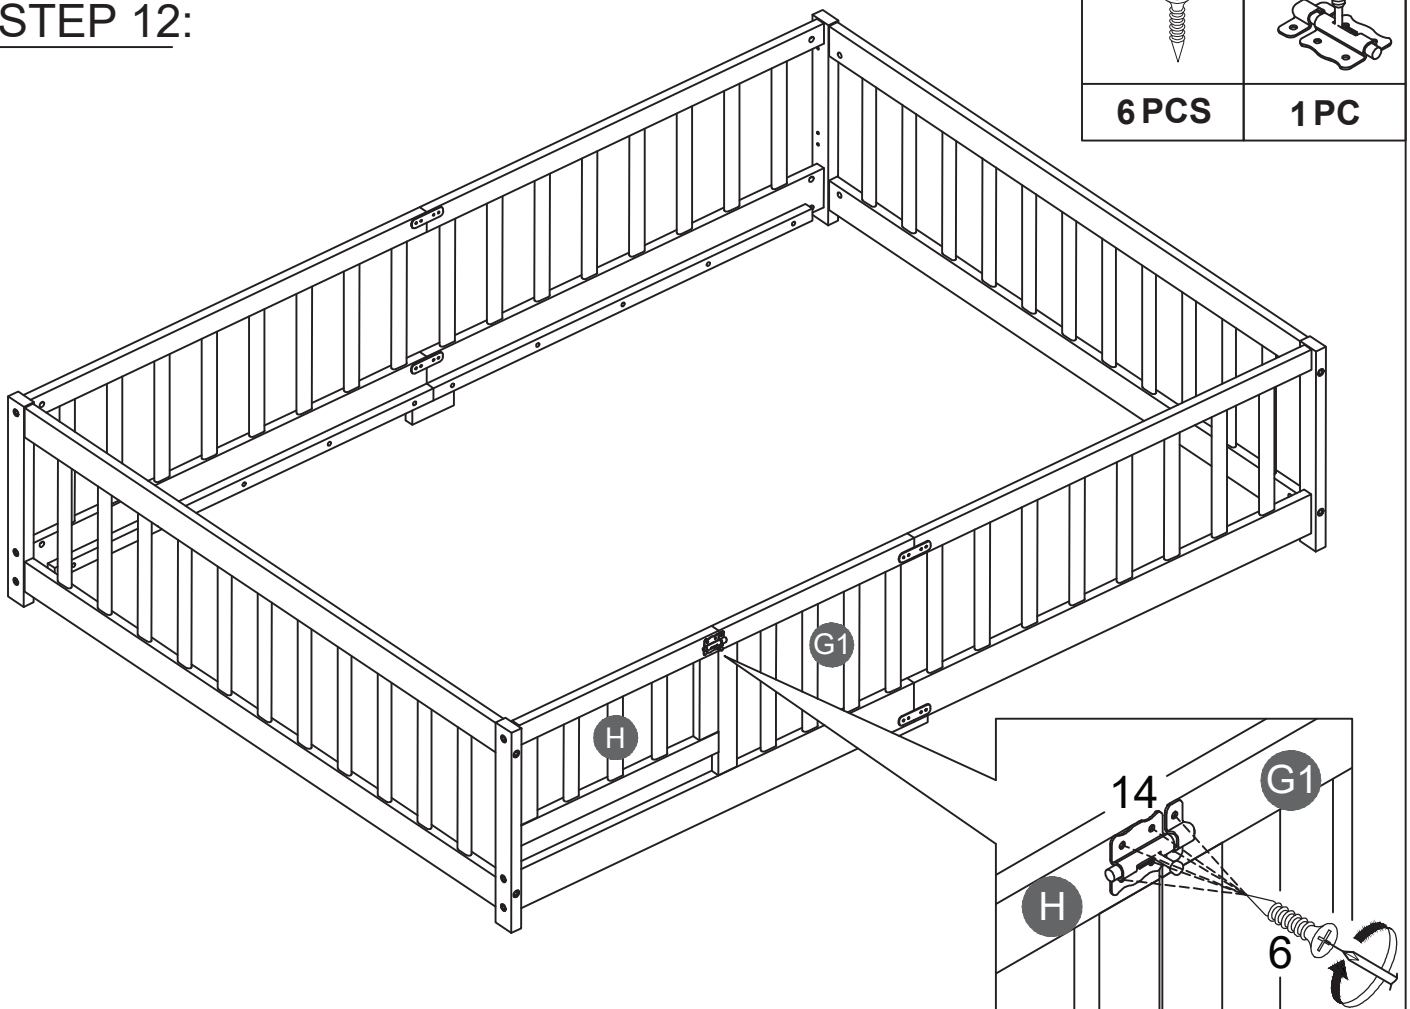


6




6 PCS

14




1 PC

## STEP 13:

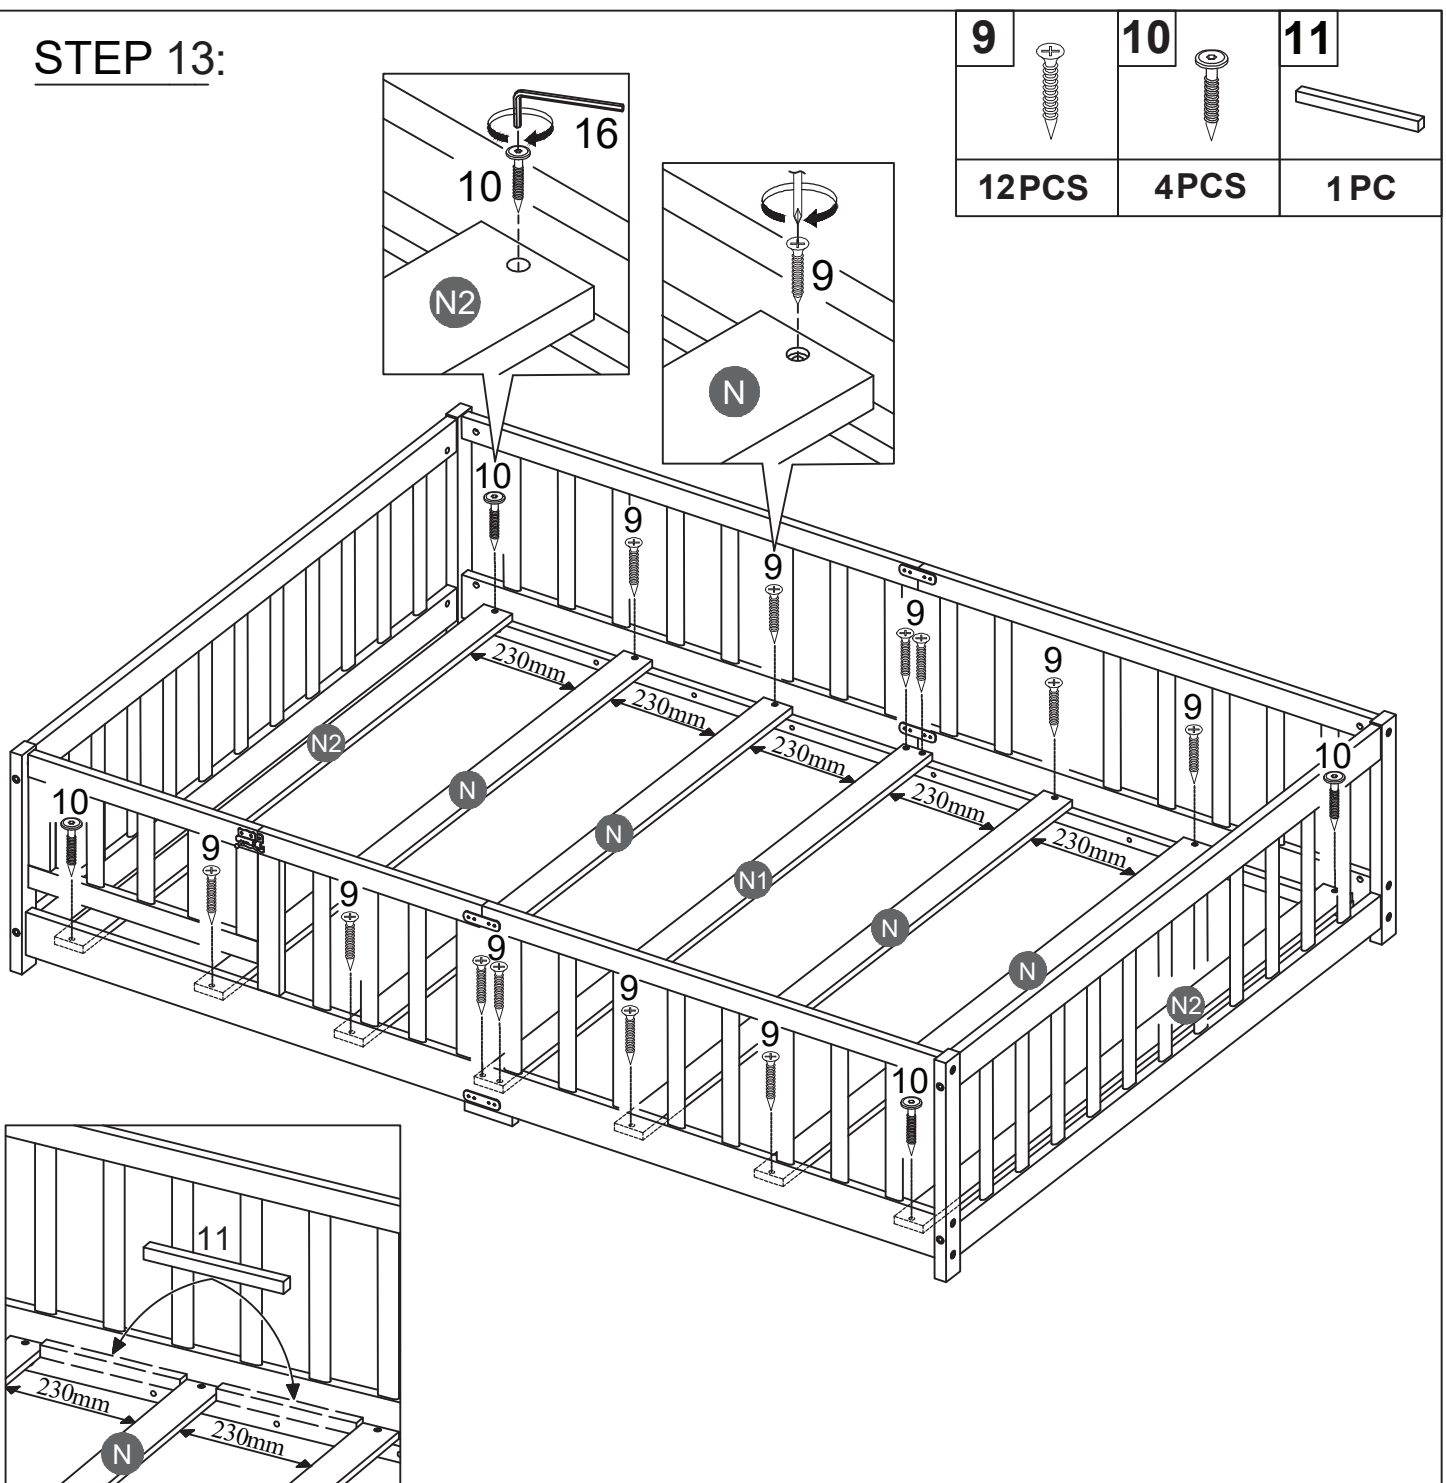

Note: Use Wood Block as a guidance distance between Bed Slats.

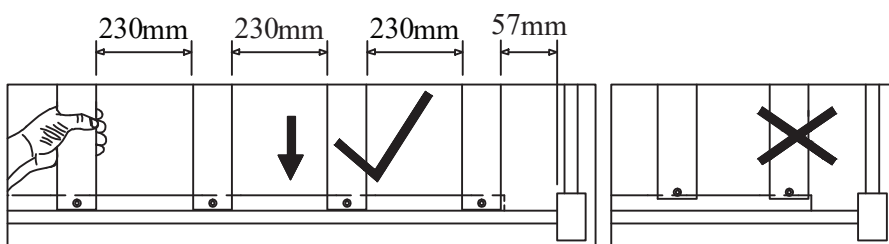

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.