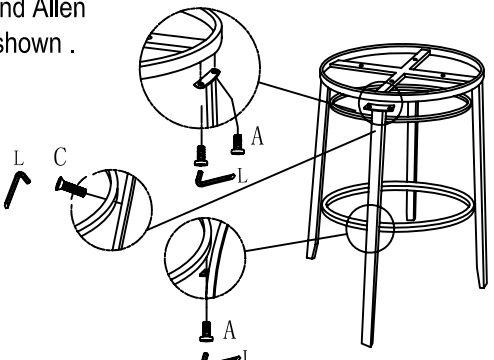
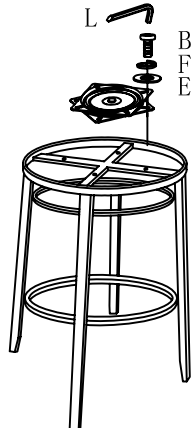
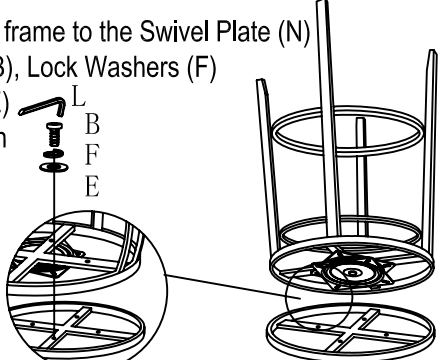
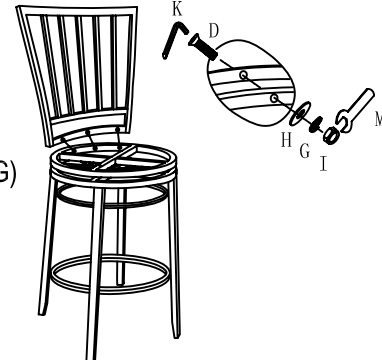
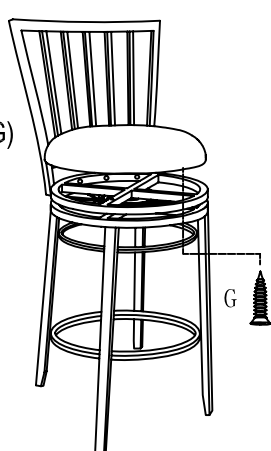
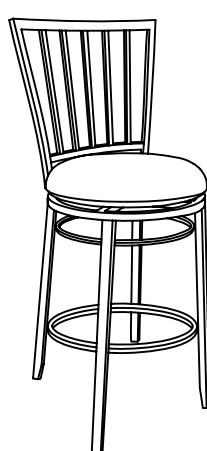



ASSEMBLY INSTRUCTIONS

STOOL

LOOSELY ATTACH EACH SCREW UNTIL FRAME IS ASSEMBLED THEN TIGHTEN WHEN COMPLETE

<p>1</p> <p>Attach the four legs to Upper Ring and Bottom Ring by using Bolts (A) , (C) and Allen Wrench (L) as shown .</p> 	<p>2</p> <p>Attach Swivel Plate (N) to the chair base by using Bolts (B), Lock Washers (F), Flat washers (E) and Allen Wrench (L), as shown.</p> 
<p>3</p> <p>Attach chair seat frame to the Swivel Plate (N) by using Bolts (B), Lock Washers (F) , Flat Washers (E) and Allen Wrench (L), as shown.</p> 	<p>4</p> <p>Fasten the backrest to seat frame by using Allen Wrench (K), Open Wrench (M), Bolts (D), Nuts (I), Lock Washers (G) and Flat Washers (H), as shown.</p> 
<p>5</p> <p>Attach Cushion to the Seat Frame by using Screws (G) and tighten by screwdriver (not included) , as shown</p> 	<p>6</p> <p>Assembly is complete</p> 

IMPORTANT NOTE:
HARDWARE PACK LOCATON

















Hardware Box

HARDWARE PACK

MADE IN CHINA

CHECK THAT THE FOLLOWING PARTS ARE IN CARTON

A		B		C		D		E		F		G		H		I		G		K		L		M		N	
	Allen Bolt 1/4" * 12mm 12PCS		Allen Bolt 1/4" * 15mm 8PCS		Allen Bolt 1/4" * 30mm 4PCS		Allen Bolt 5/16" * 30mm 3 PCS		Flat washer 1/4" 8PCS		LOCK WASHER 1/4" 8PCS		Lock Washer 5/16" 3 PCS		Flat washer 5/16" 3 PCS		NUT 5/16" 3 PCS		Screw Ø5 x 35mm 4PCS		Allen Wrench 5 mm		Allen WRENCH 4mm		Allen WRENCH		SWIVEL PLATE 160x160x24mm 1PC