


# WALL CABINET

## installation instructions

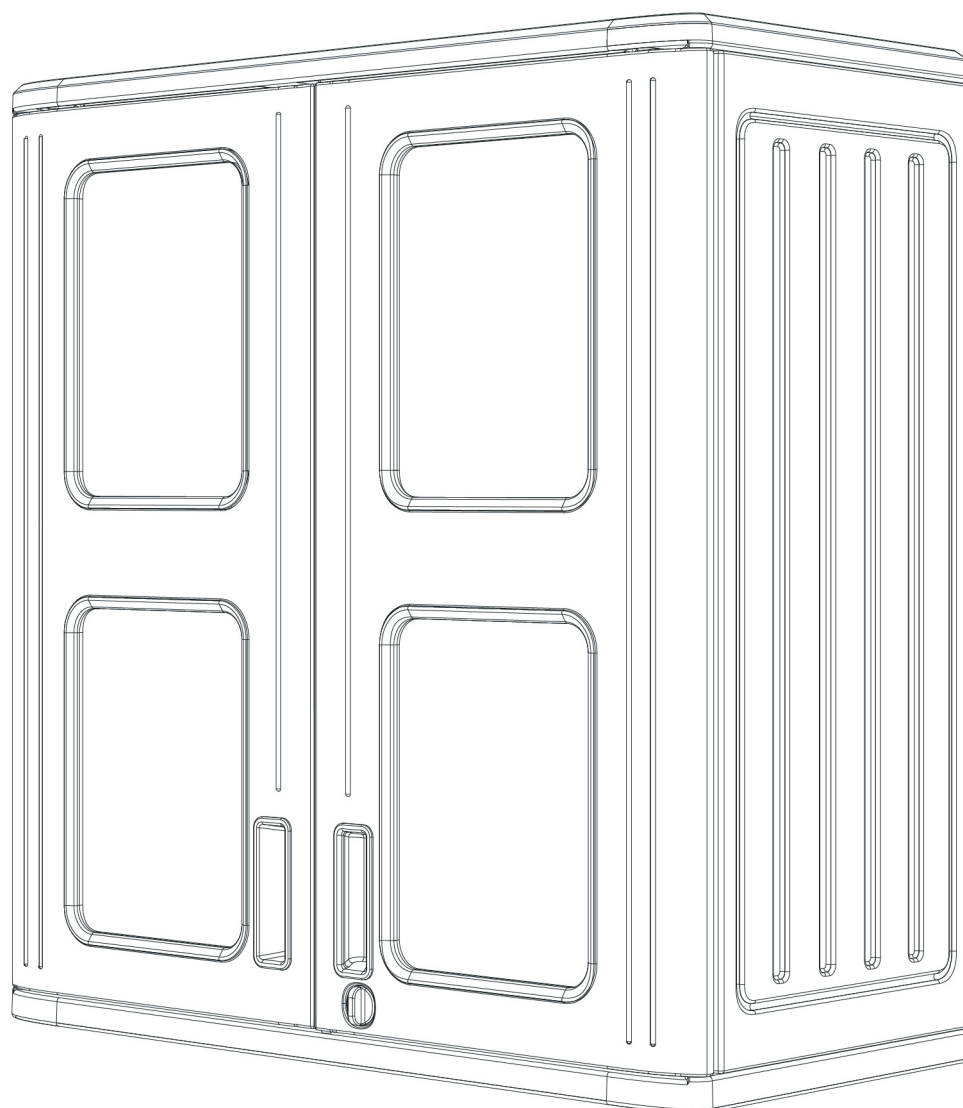

# Parts List

| No. | Parts No.  | Name                              | Material         | Quantity | Specifications |
|-----|------------|-----------------------------------|------------------|----------|----------------|
| 01  | BGS09001   | Floor                             | HDPE             | 1        | 731*341*33.5   |
| 02  | BGS09002   | Left side panel                   | HDPE             | 1        | 752.5*309*30   |
| 03  | BGS09003   | Right side panel                  | HDPE             | 1        | 752.5*309*30   |
| 04  | BGS09004   | Left back panel                   | HDPE             | 1        | 752.5*363.5*20 |
| 05  | BGS09005   | Right back panel                  | HDPE             | 1        | 752.5*363.5*20 |
| 06  | BGS09006   | Left door                         | HDPE             | 1        | 732*385*36     |
| 07  | BGS09007   | Right door                        | HDPE             | 1        | 732*385*36     |
| 08  | BGS09008   | Roof                              | HDPE             | 1        | 730*340*32.5   |
| 09  | BGS09010   | Bottom support bar                | iron             | 1        | 687*16*50      |
| 10  | BGS09011   | Adove strengthen rod              | iron             | 1        | 675*194*18     |
| 11  | BGS09012   | Bottom strengthen rod             | iron             | 2        | 205*113*24     |
| 12  | BGS09018   | knob switch                       | pp               | 1        | 29.5x25x25     |
| 13  | BGS09019   | Knob lock plate                   | pp               | 1        | 36x16x6.6      |
| 14  | GS00300017 | Hinges                            | galvanized       | 2        | 104.5*44*25    |
| 15  | Y202656    | setscrew                          | Stainless steel  | 4        | M6*60          |
| 16  | Y202331    | Cross pan head self-tapping screw | Stainless steel  | 17       | M4x10          |
| 17  | Y202649    | Large flat head cross screw       | Stainless steel  | 19       | M5*10          |
| 18  | Y3167      | Large flat head cross screw       | Stainless steel  | 2        | M6*16          |
| 19  | Y202527    | Large flat head cross bolt        | Stainless steel  | 8        | M5*10          |
| 20  | Y202329    | cross head bolt                   | Stainless steel  | 2        | M5*25          |
| 21  | GS0300022  | L Fixing Piece                    | Galvanized sheet | 2        | 40*15*16       |
| 22  | BGS09021   | L Fixed piece 1                   | Galvanized sheet | 2        | 28*28*16       |
| 23  | Y202651    | The M5 nut                        | Stainless steel  | 2        | M5             |
| 24  | BGS09015   | Wall cabinet installation         |                  | 1        | A4             |
| 25  | Y202432    | Phillips screwdriver              | carbon steel     | 1        | 150x20x20      |
| 26  | GS09002    | Wall Cabinet Laminates            | Galvanized sheet | 1        | 696*225*15     |
| 27  |            | screw spare bag                   |                  | 1        |                |

please save the spare parts.

---

# TOOLS REQUIRED



screwdriver



M10 drill



impact drill




level

---

# PARTS NUMBER POSITION


Parts number position

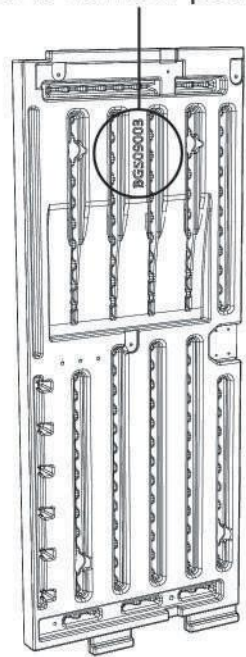

# Wall Panels and Floor

Left side panel  
BGS09002

Roof  
BGS09008

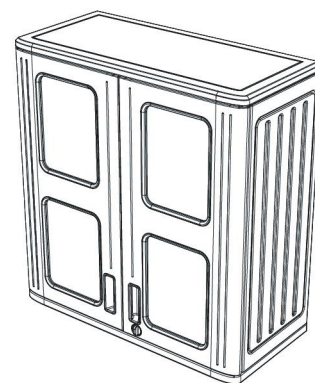

Left back panel  
BGS09004

Right back panel  
BGS09005


Left door  
BGS09006

Right door  
BGS09007


Floor  
BGS09001

Right side panel  
BGS09003


wall cabinet shelf  
GS09002

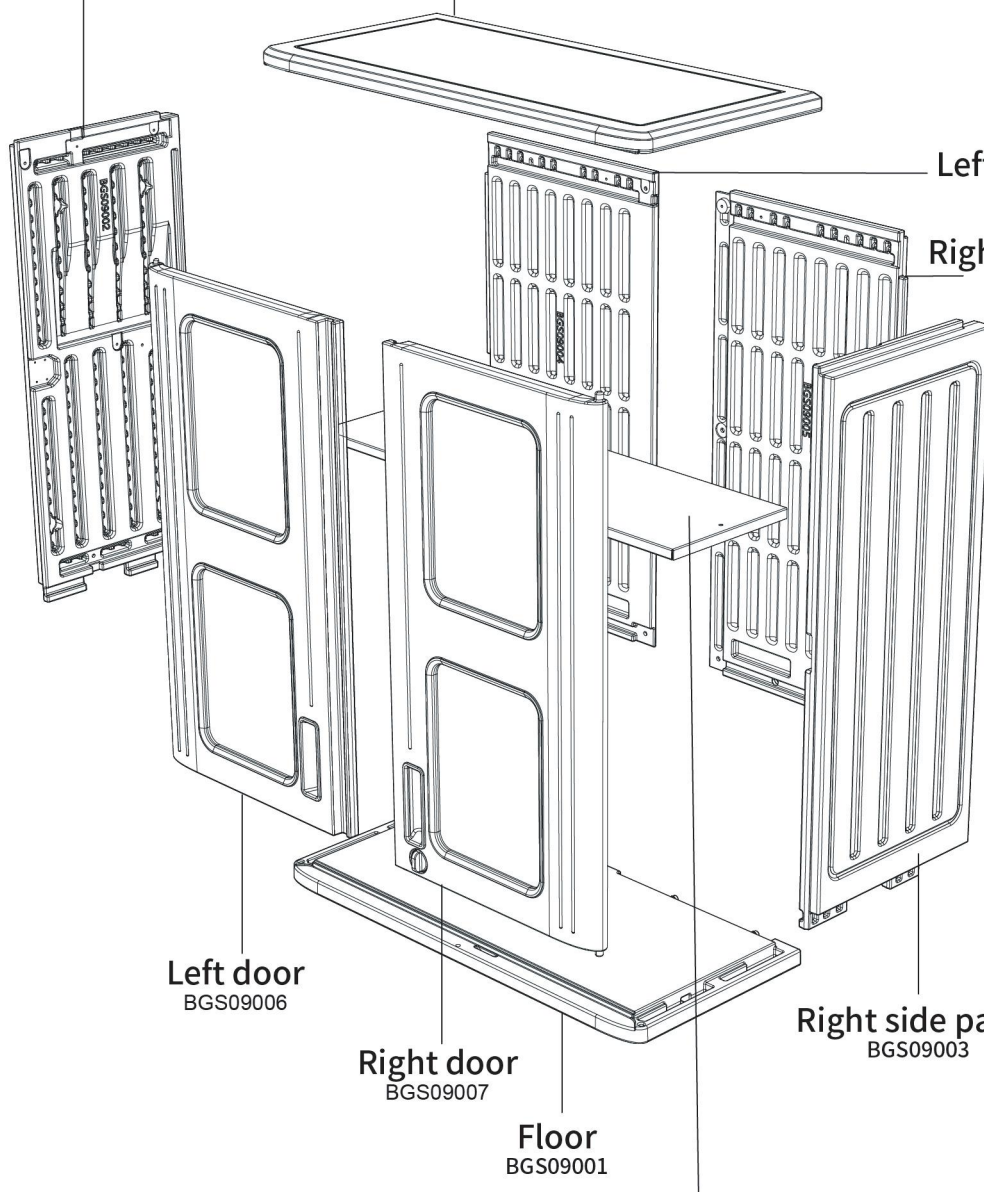

# Hardware

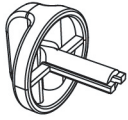


knob switch  
BGS09018




Knob lock plate  
BGS09019




L Fixing Piece  
(GS0300022)x2pcs

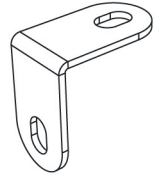


L Fixed piece 1  
(BGS09021)x2pcs




Bottom strengthen rod  
(BGS09012)x 2pcs

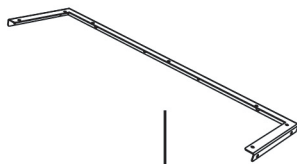

Adobe strengthen rod  
BGS09011

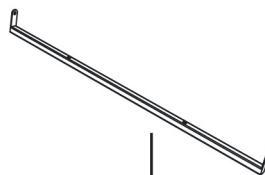


Bottom support bar  
BGS09010

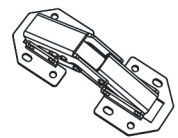


Hinges  
(GS00300017)x2pcs


# Hardware

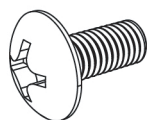


Large flat head cross bolt  
(Y202527)  
M5x10x 8pcs

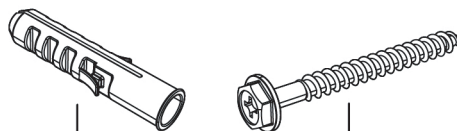


setscrew  
(Y202656)  
M6x60x4pcs




Cross pan head  
self-tapping screw  
(Y202331)  
M4x10x 17pcs

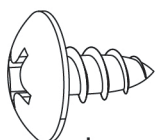


Large flat head  
cross screw  
(Y202649)  
M5x10x 19pcs

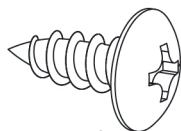

Large flat head  
cross screw  
(Y3167)  
M6x16x2pcs

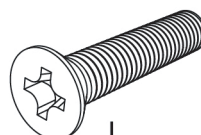

cross head bolt  
(Y202329)  
M5x25x2pcs




The M5 nut  
(Y202651)  
M5x2pcs

1


## Left rear panel and right rear panel installation



Left back panel  
BGS09004




Right back panel  
BGS09005


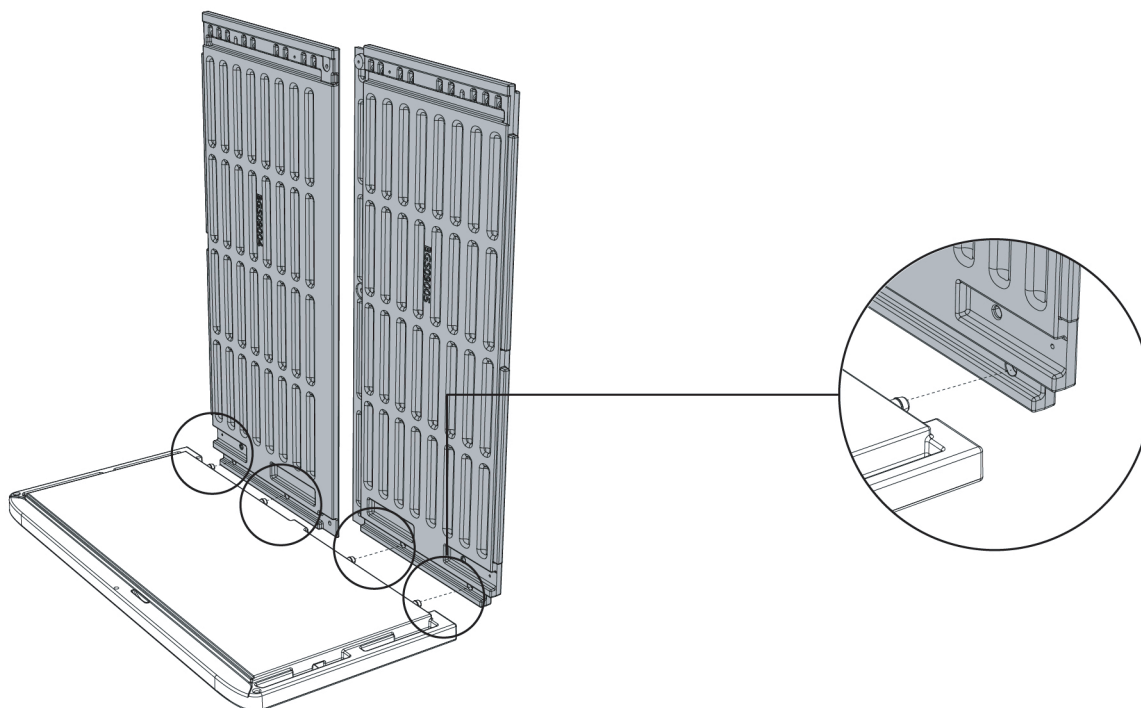


2

## Left rear panel and right rear panel fixed



Large flat head cross screw  
Y3167  
M6x16x2pcs

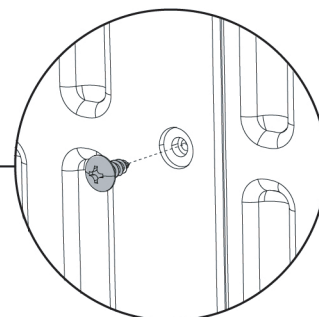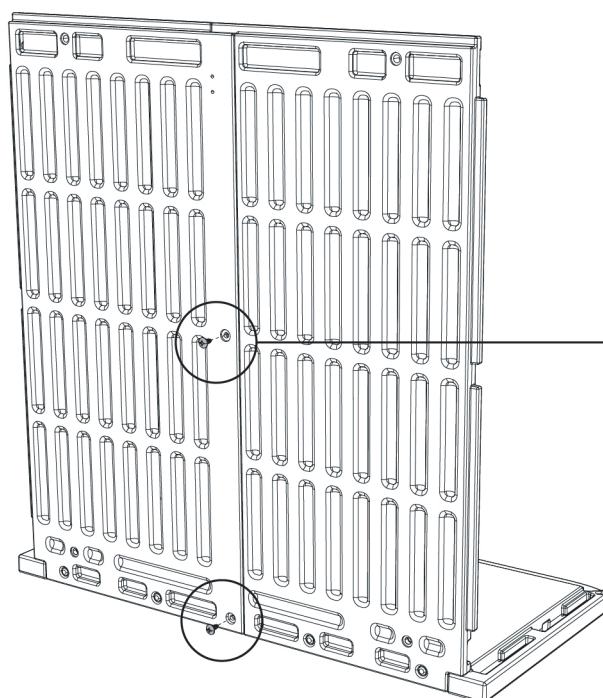

Large flat head cross screw  
Y3167  
M6x16x2pcs



### 3 side panel mount




Left side panel  
BGS09002



Right side panel  
BGS09003

**Remarks:** The side panels are inserted at an angle.

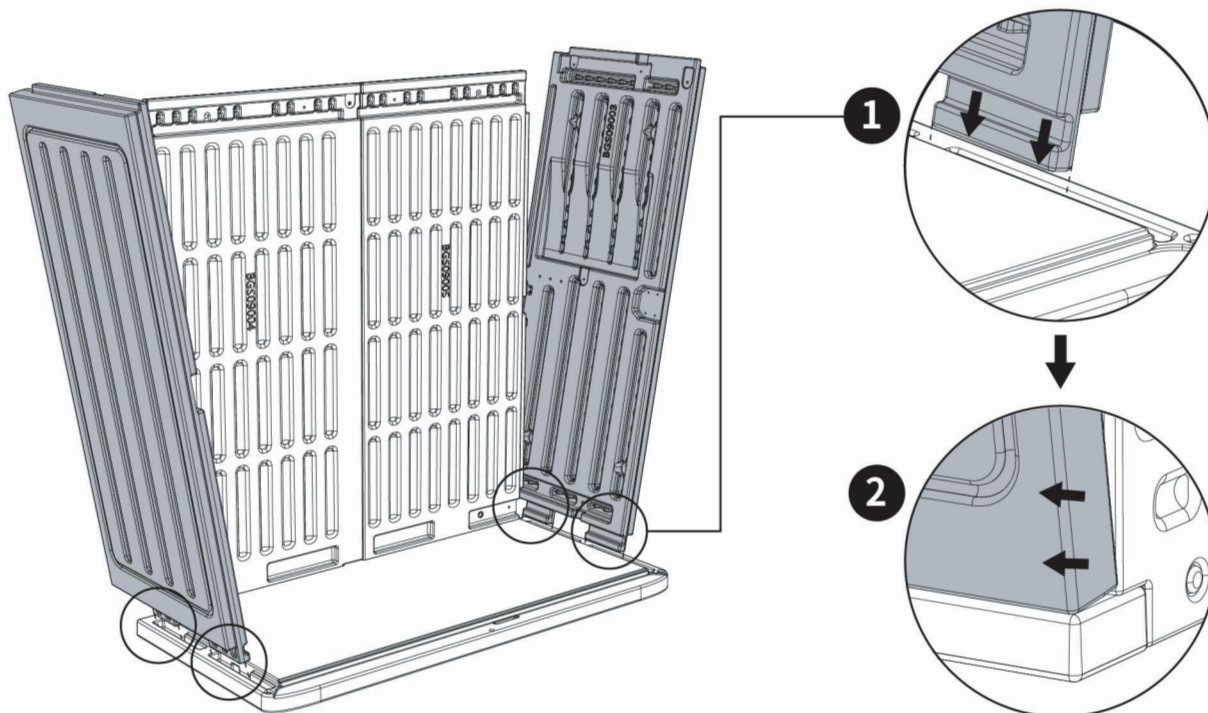

### 4 Top cover and door panel installation




Roof  
BGS09008



Left door  
BGS09006




Right door  
BGS09007

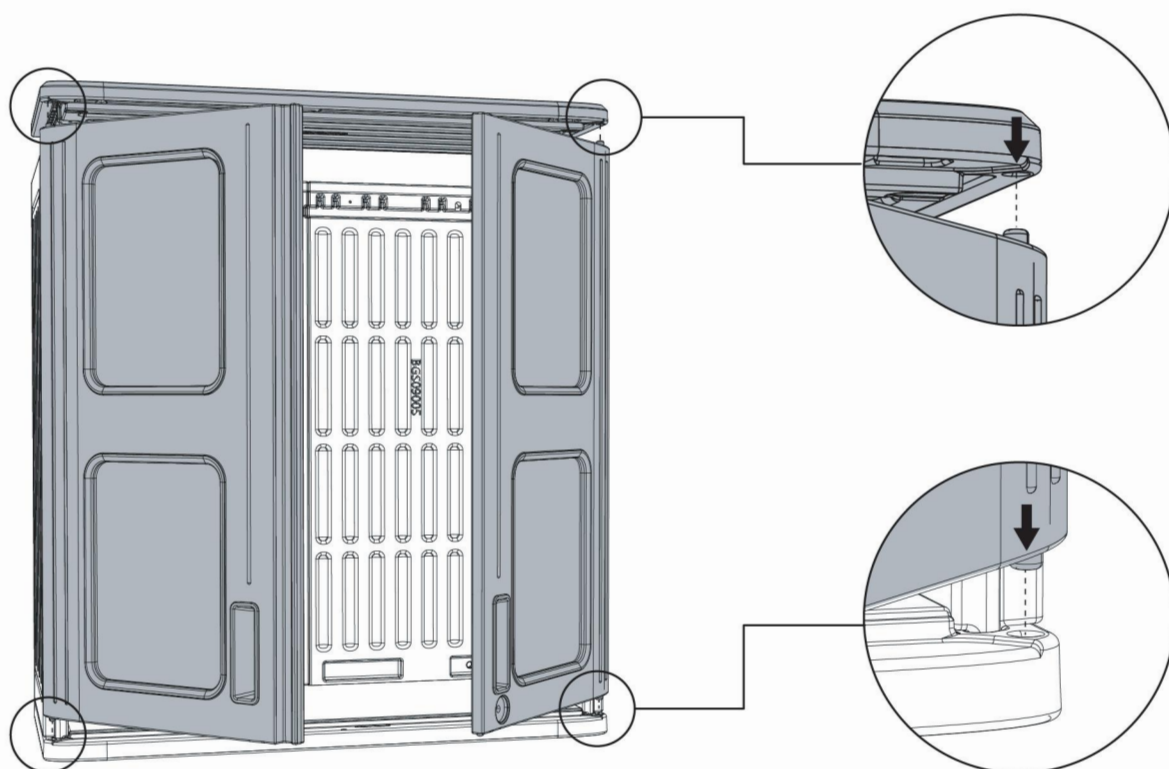




5


## Fixing the upper cover



L Fixed piece 1  
(BGS09021)x2pcs




Large flat head cross bolt  
(Y202527)  
M5x10x4pcs

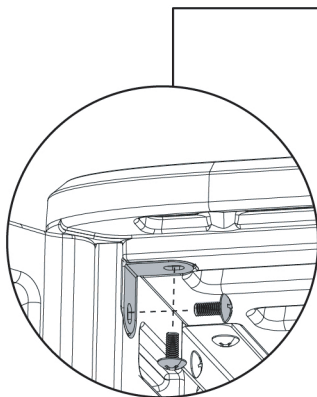

L Fixed piece 1  
(BGS09021)x2pcs

Large flat head cross bolt  
(Y202527)  
M5x10x4pcs

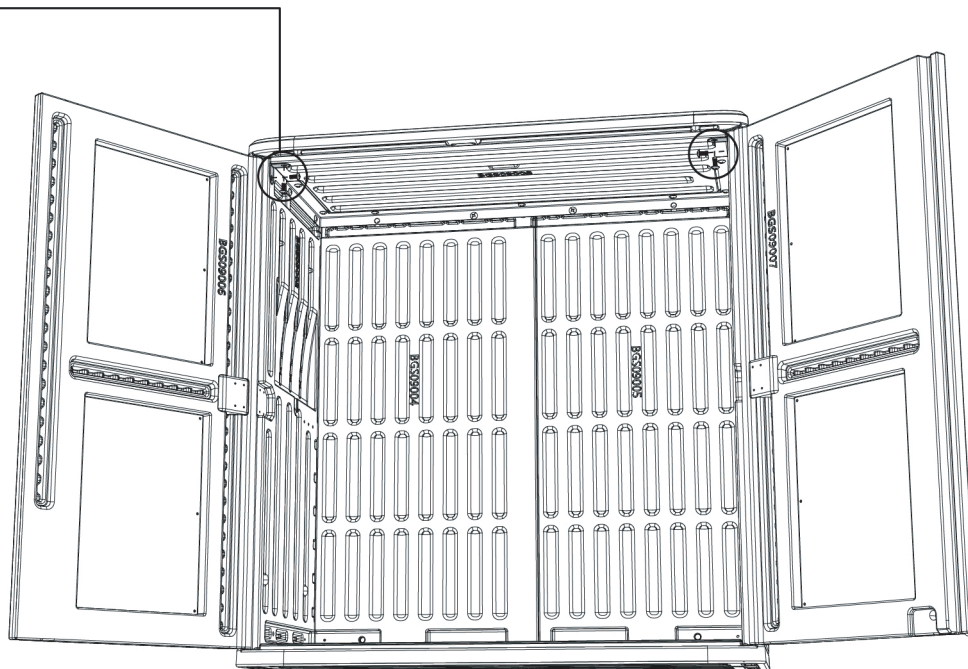

6


## Install the upper reinforcement



Adove strengthen rod  
BGS09011




Large flat head cross screw  
(Y202649)  
M5x10x13pcs

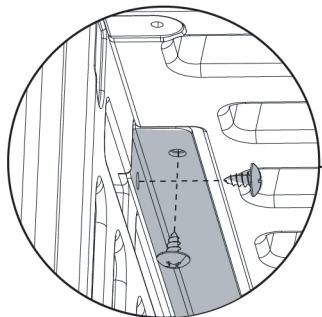

Adove strengthen rod  
BGS09011

Large flat head cross screw  
(Y202649)  
M5x10x13pcs

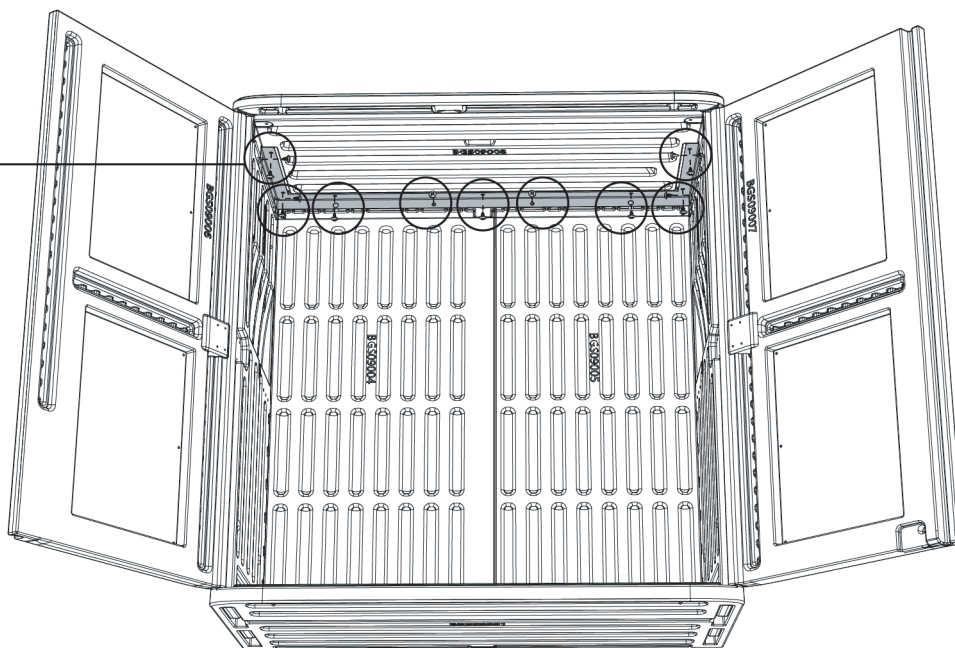



## 7 Lower reinforcement bar installation



Bottom strengthen rod  
(BGS09012)x2pcs



Large flat head cross screw  
(Y202649)  
M5x10x4pcs

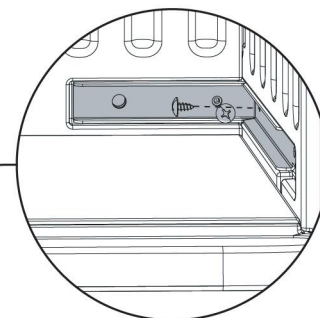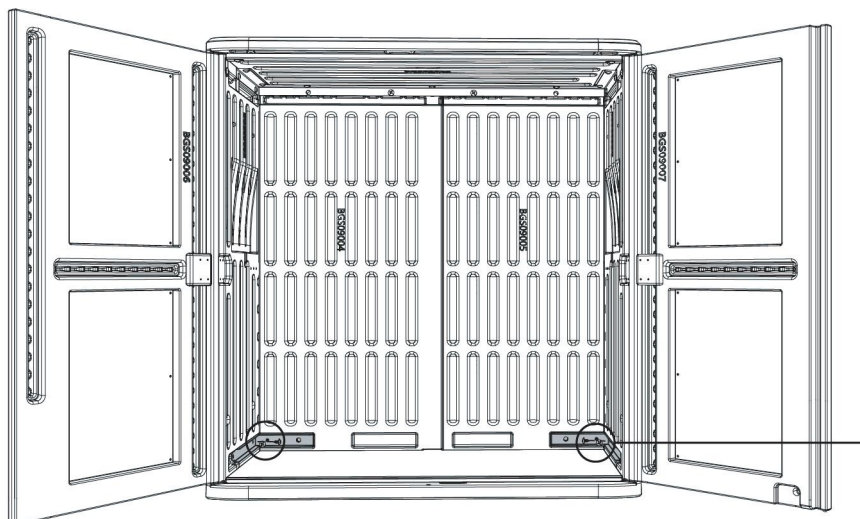

Bottom strengthen rod  
(BGS09012)x2pcs

Large flat head cross screw  
(Y202649)  
M5x10x4pcs



## 8 Bottom Brace Installation



bottom stay  
BGS09010



Countersunk head cross bolt  
(Y202329)  
M5x25x 2pcs

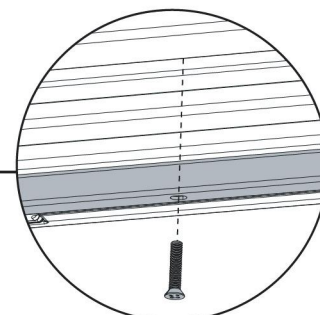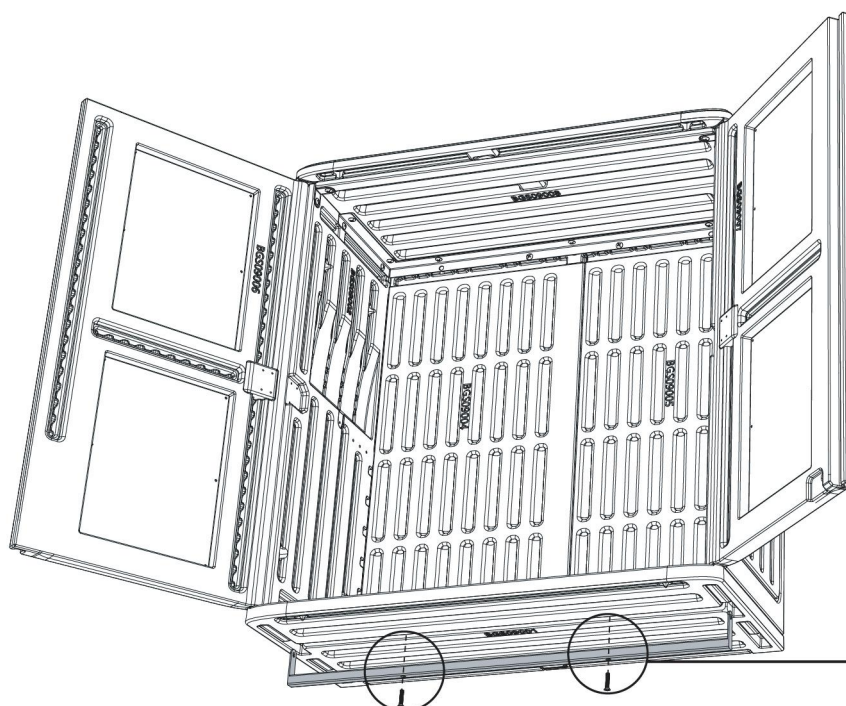

bottom stay  
BGS09010


Countersunk head cross bolt  
(Y202329)  
M5x25x 2pcs

9



## Bottom stay fixed



Bottom support bar  
BGS09010



Large flat head cross bolt  
(Y202527)  
M5x10x2pcs

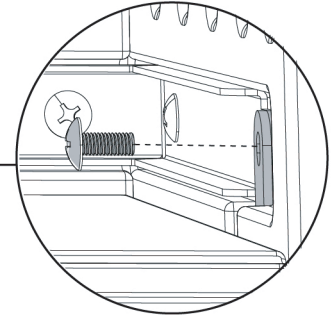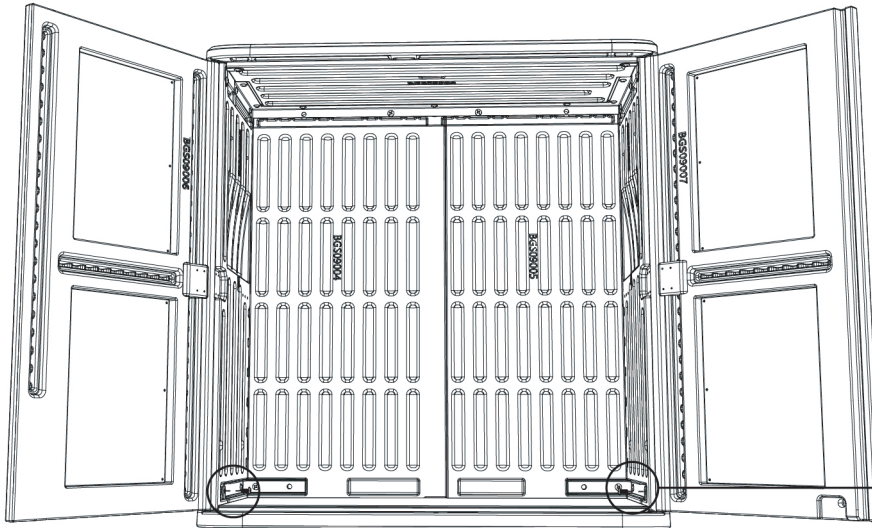


Bottom support bar  
BGS09010


Large flat head cross bolt  
(Y202527)  
M5x10x2pcs

10


## Cabinet shelf installation




Wall cabinet shelf  
GS09002



Large flat head cross screw  
(Y202649)  
M5x10x2pcs





Large flat head cross bolt  
(Y202527)  
M5x10x2pcs



L Fixing Piece  
(GS0300022)x2pcs



The M5 nut  
(Y202651)  
M5x2pcs

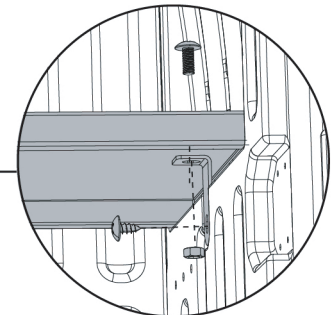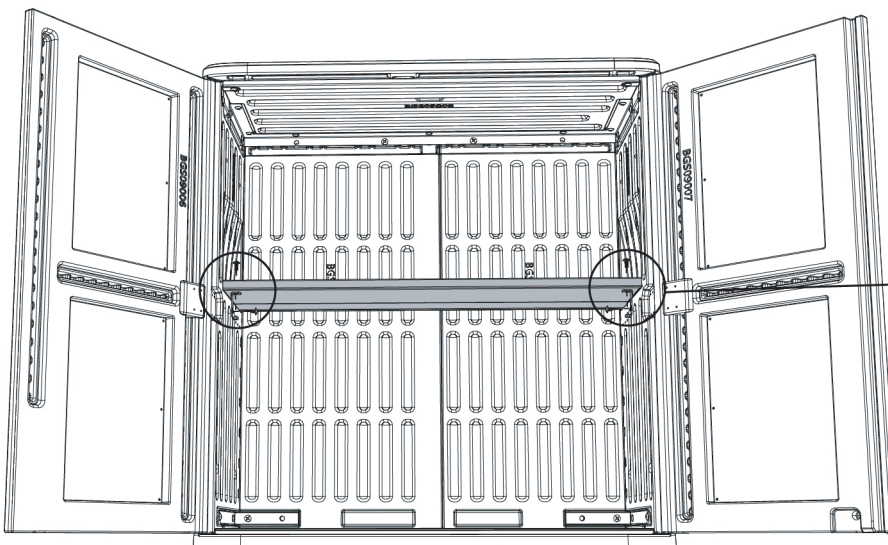

Wall cabinet shelf  
GS09002

Large flat head cross screw  
(Y202649)  
M5x10x2pcs


Large flat head cross bolt  
(Y202527)  
M5x10x2pcs

The M5 nut  
(Y202651)  
M5x2pcs

L Fixing Piece  
(GS0300022)x2pcs



## 11 4 inch damping hinge installation


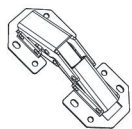


Hinges  
GS00300017



Cross pan head self-tapping screw  
(Y202331)  
M4x10x16pcs


**Remarks:**The hinges of the left and right door panels are installed uniformly.

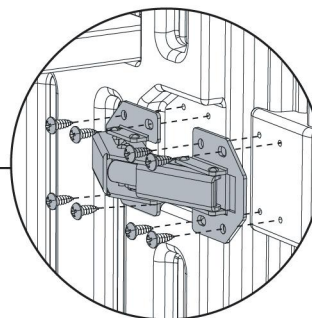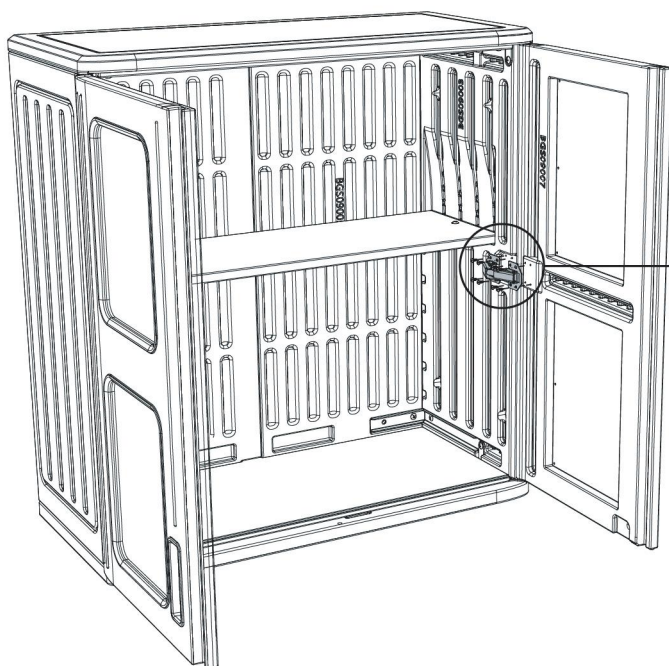

Hinges  
GS00300017

Cross pan head self-tapping screw  
(Y202331)  
M4x10x16pcs

## 12 Knob installation





Knob switch  
BGS09018



Knob lock plate  
BGS09019



Cross pan head self-tapping screw  
(Y202331)  
M4x10x1pcs

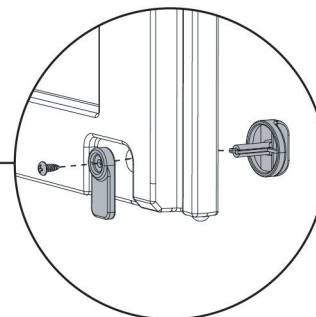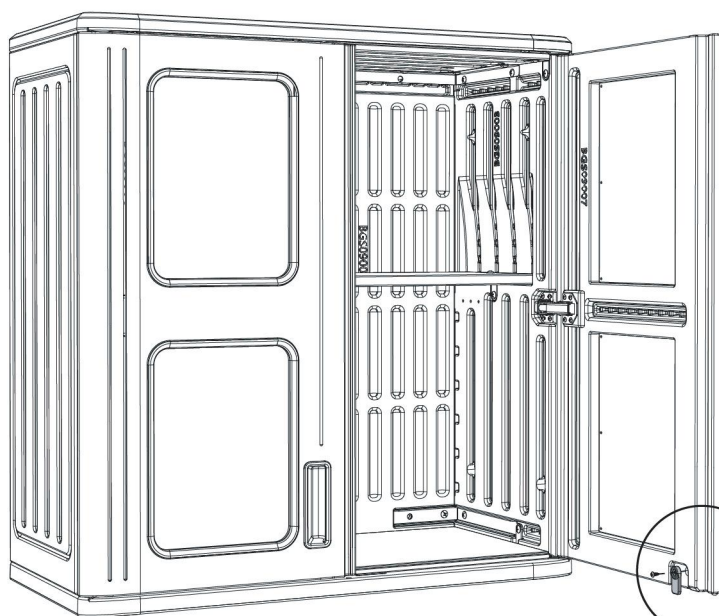

Knob switch  
BGS09018

Knob lock plate  
BGS09019

Cross pan head self-tapping screw  
(Y202331)  
M4x10x1pcs

# 13 Wall cabinets are installed on cement or brick walls



impact drill



M10 drill bit





level ruler




setscrew  
(Y202656)  
M6x60x4pcs

**Remarks:** ① Before installation, measure the horizontal position of the wall cabinet using a level. ② Drill the hole to a depth of 50mm with a 10mm diameter drill bit and place the expansion screw tube in the hole.

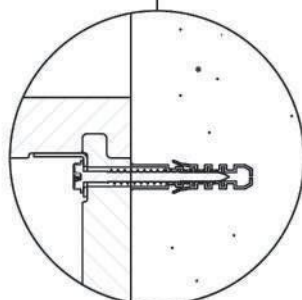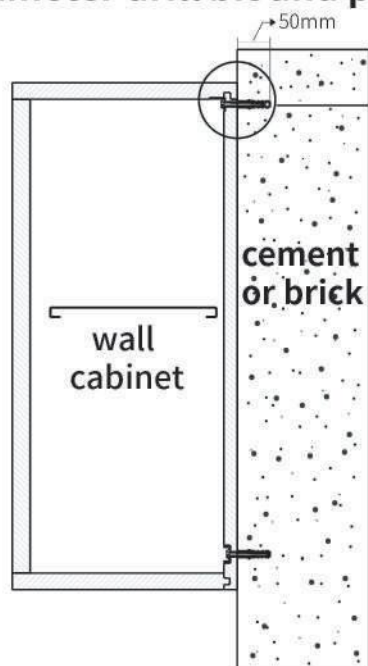



setscrew  
(Y202656)  
M6x60x4pcs

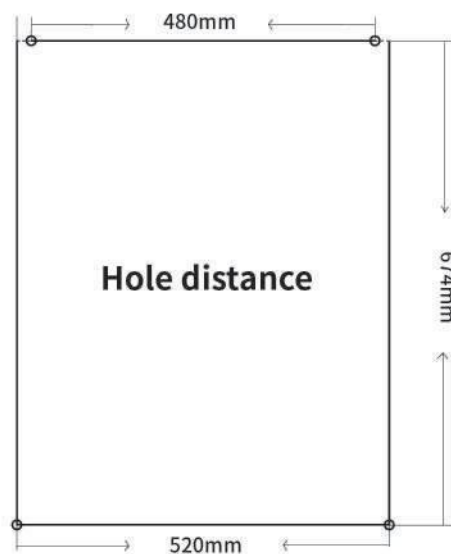

## 13-1 The wall cabinet is fixed on the cement wall or brick wall



setscrew  
(Y202656)  
M6x60x4pcs

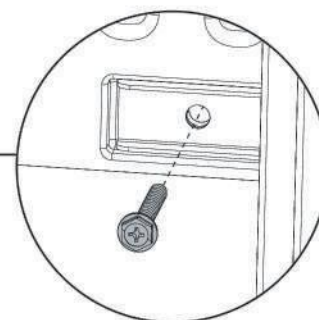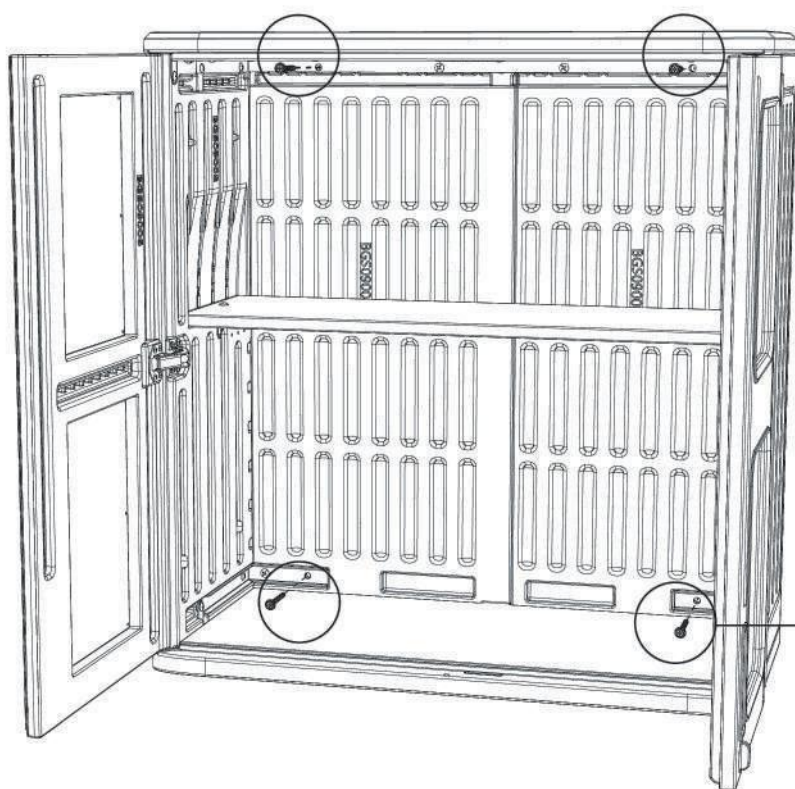

setscrew  
(Y202656)  
M6x60x4pcs

# 14 Cabinet wood wall installation mode




level ruler



setscrew  
(Y202656)  
M6x60x4pcs

**Remarks:** You can use a level ruler to draw a line to measure whether the wall cabinet is installed neatly.

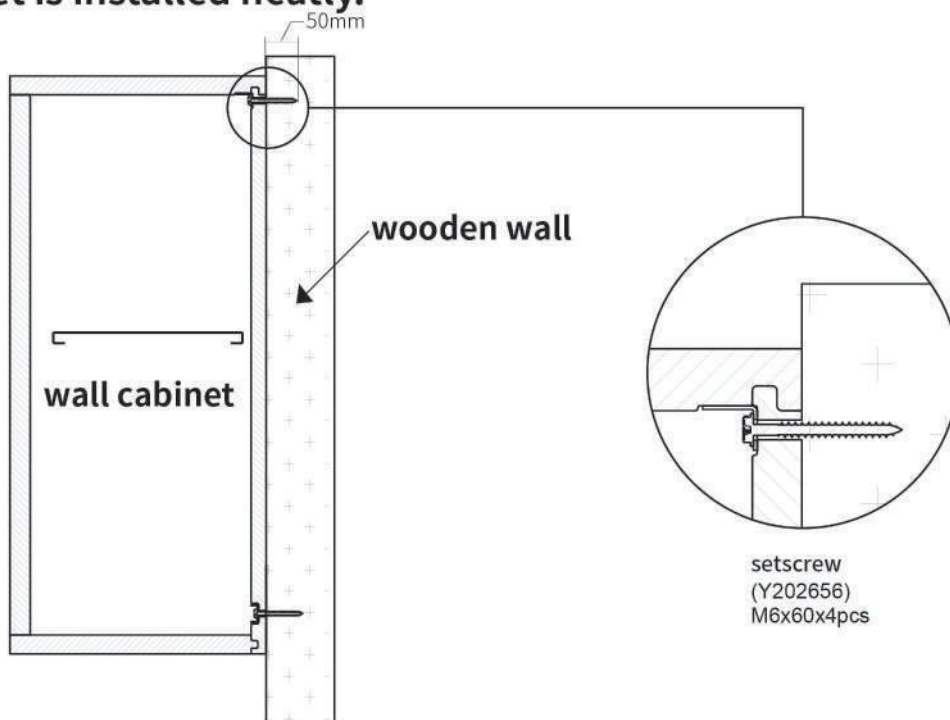

## 14-1 The wall cabinet is fixed on the wooden wall



setscrew  
(Y202656)  
M6x60x4pcs

**Remarks:** When installing on a wooden wall, cancel the expansion tube, and directly drive it into the wooden wall with M6\*60 screws.

