
ASSEMBLY INSTRUCTIONS

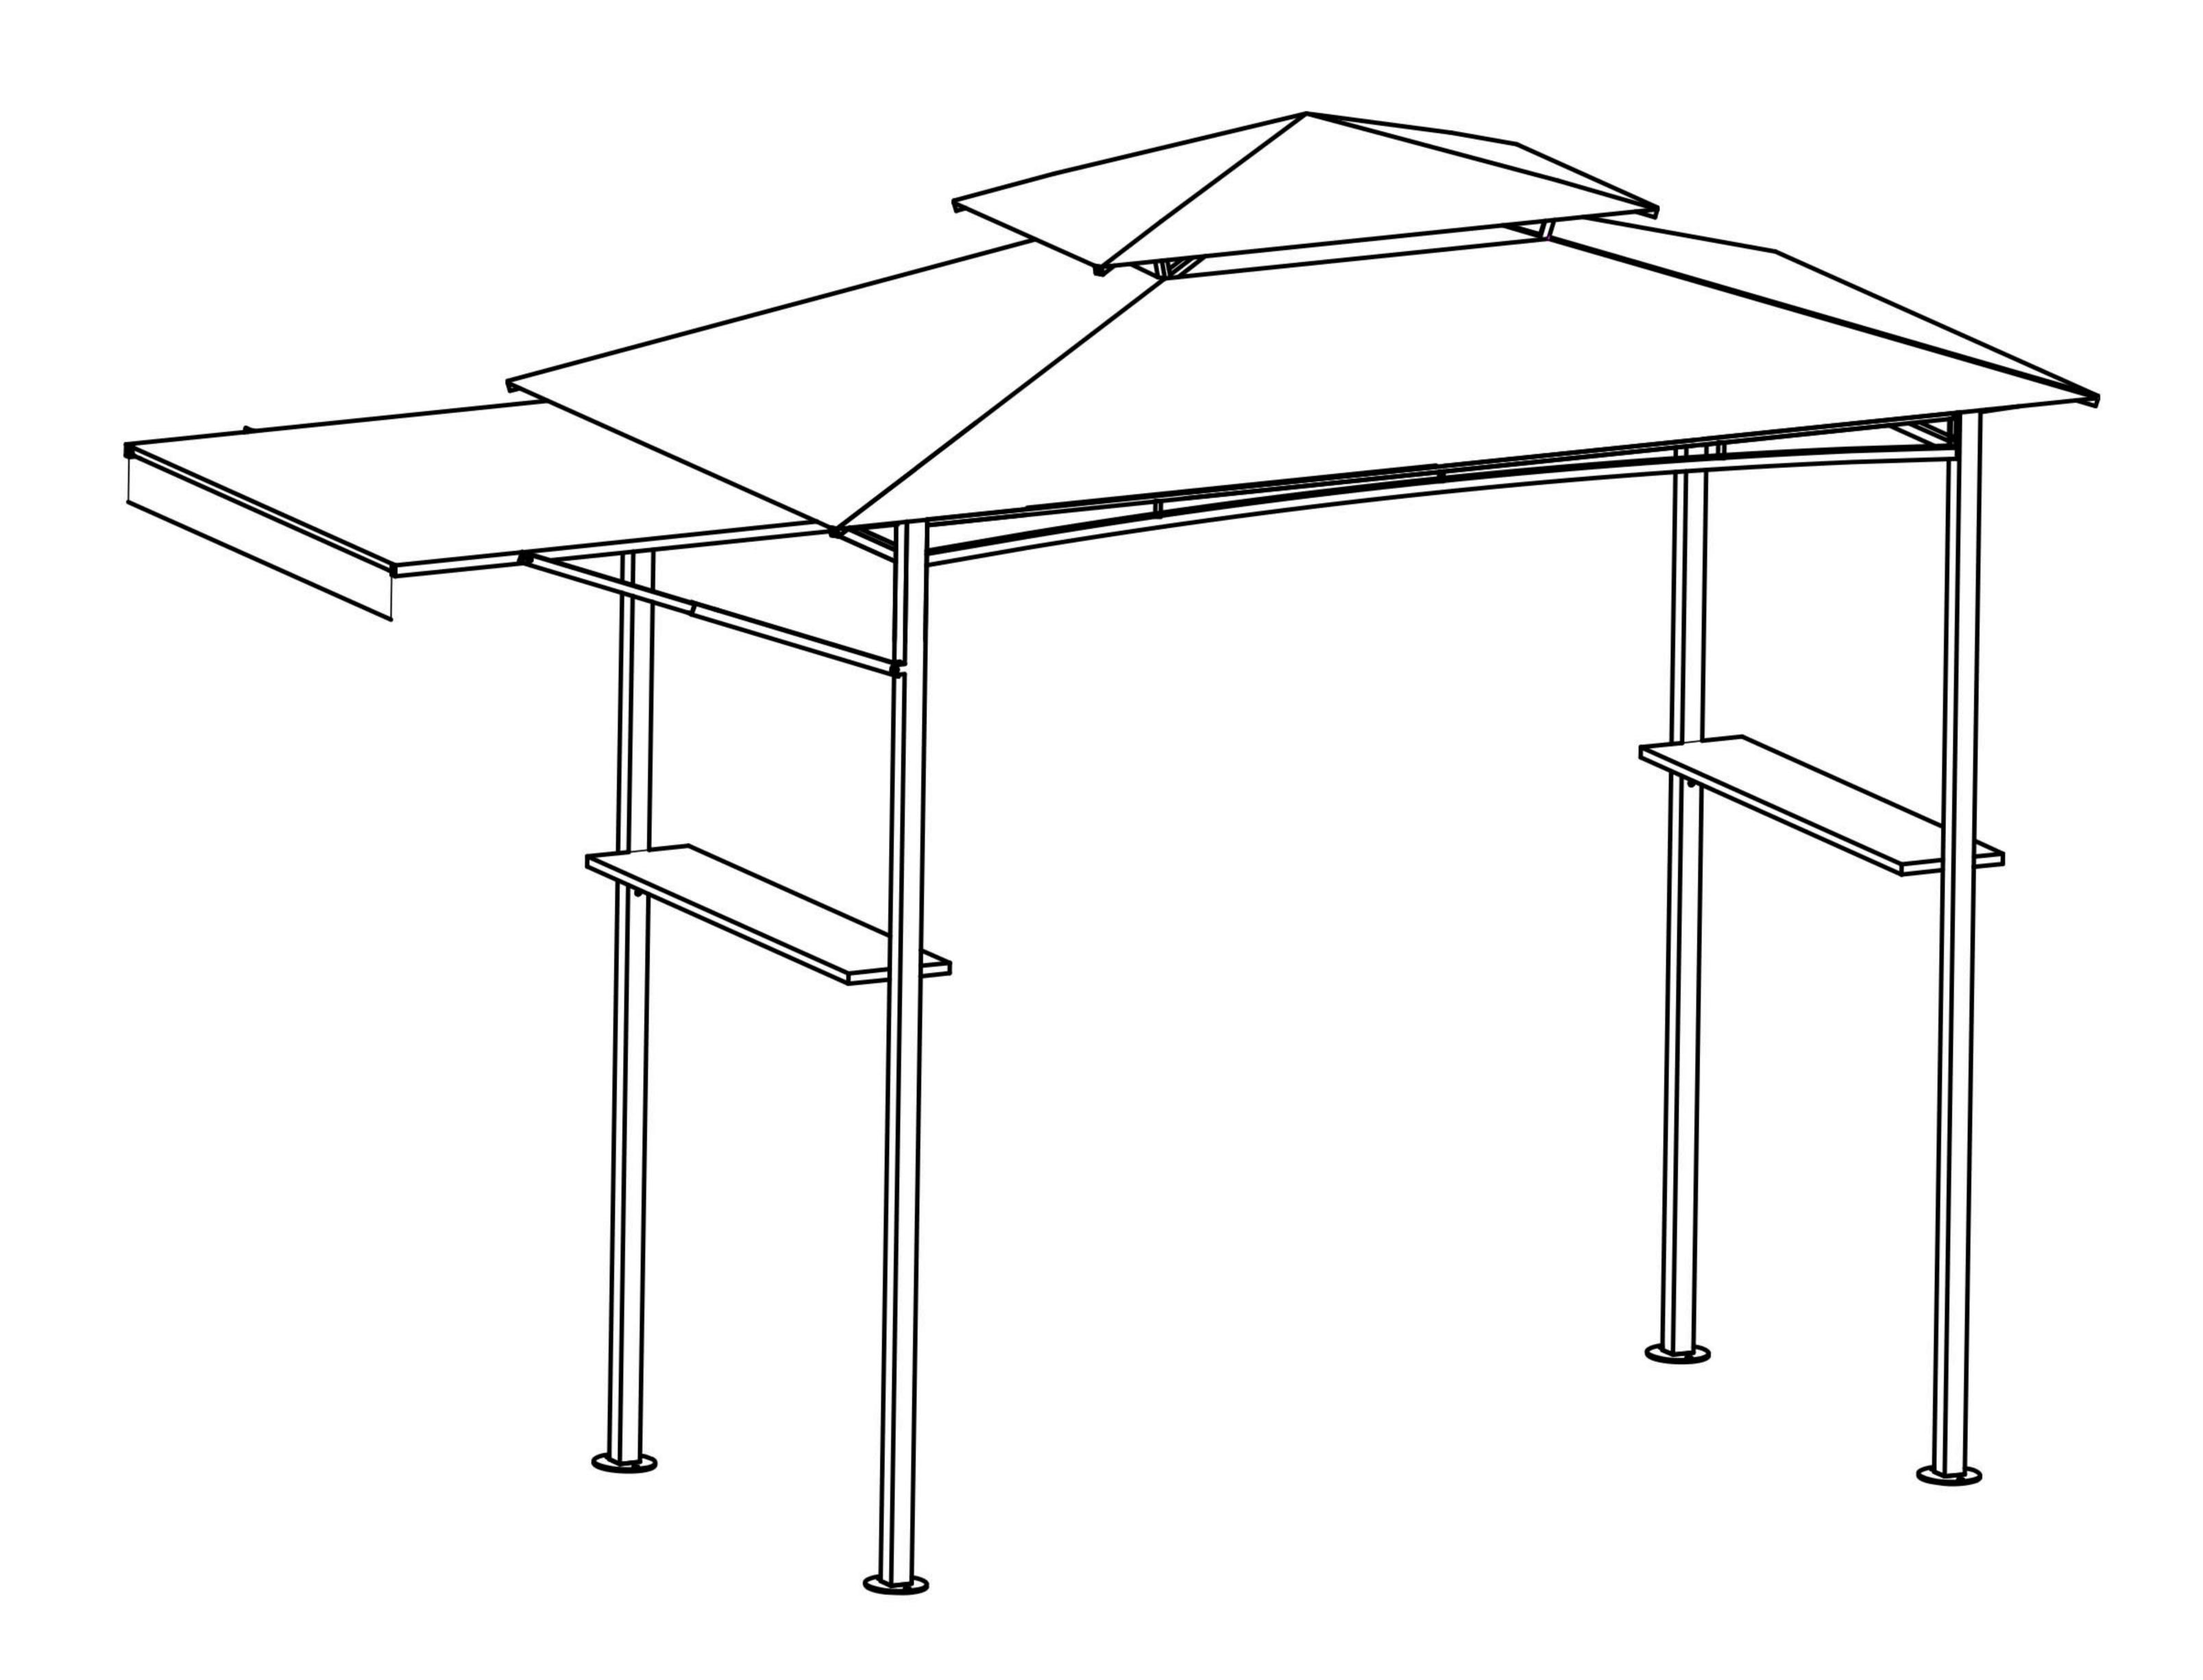



Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com

TOOLS RECOMMENDED

*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.



DRILL



RUBBER MALLET



STEPLADDER (6.5Ft Or More)



SAFETY HAT



GLOVES



SAFETY GOGGLES

ATTENTIONS



Since it is easy to lose many small accessories during the installation, please collect all the screw accessories before the assembly is completed



To better align the screws for practical situations, do not fully tighten screws initially



Please reinforced the Gazebo and do not use in heavy winds or inclement weather



Make sure all screws are tightented before use and check all screws, buckles and straps every 90 days



Two or more people are required for assembly



Please clear the snow off the roof in time for the heavy snowfall and do not use it

ACCESSORY CATALOGUE

Item no.	Reference Image	Qty.
A		1
AI		
A2	♦ ::	
A3	♦	4
A4	♦ :	1
B		4
B 1		2
		4
		4

ACCESSORY CATALOGUE


ltem no.	Reference Image	Qty.


ltem no.	Reference Image	Qty.	ltem no.	Reference Image	Qty.
		4			
		4			8
Gi		4			8
		4			2
					2
					2
					2


ACCESSORY CATALOGUE


ltem no.	Reference Image	Qty.
		2
		2
1	(b) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	20
2	(C) (O) (O) (M6X30)	8
3	(a) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	10

ltem no.	Reference Image	Qty.
	M6X50	8
5	(a) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	2
6	(a) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	8
	(a) (b) (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	2

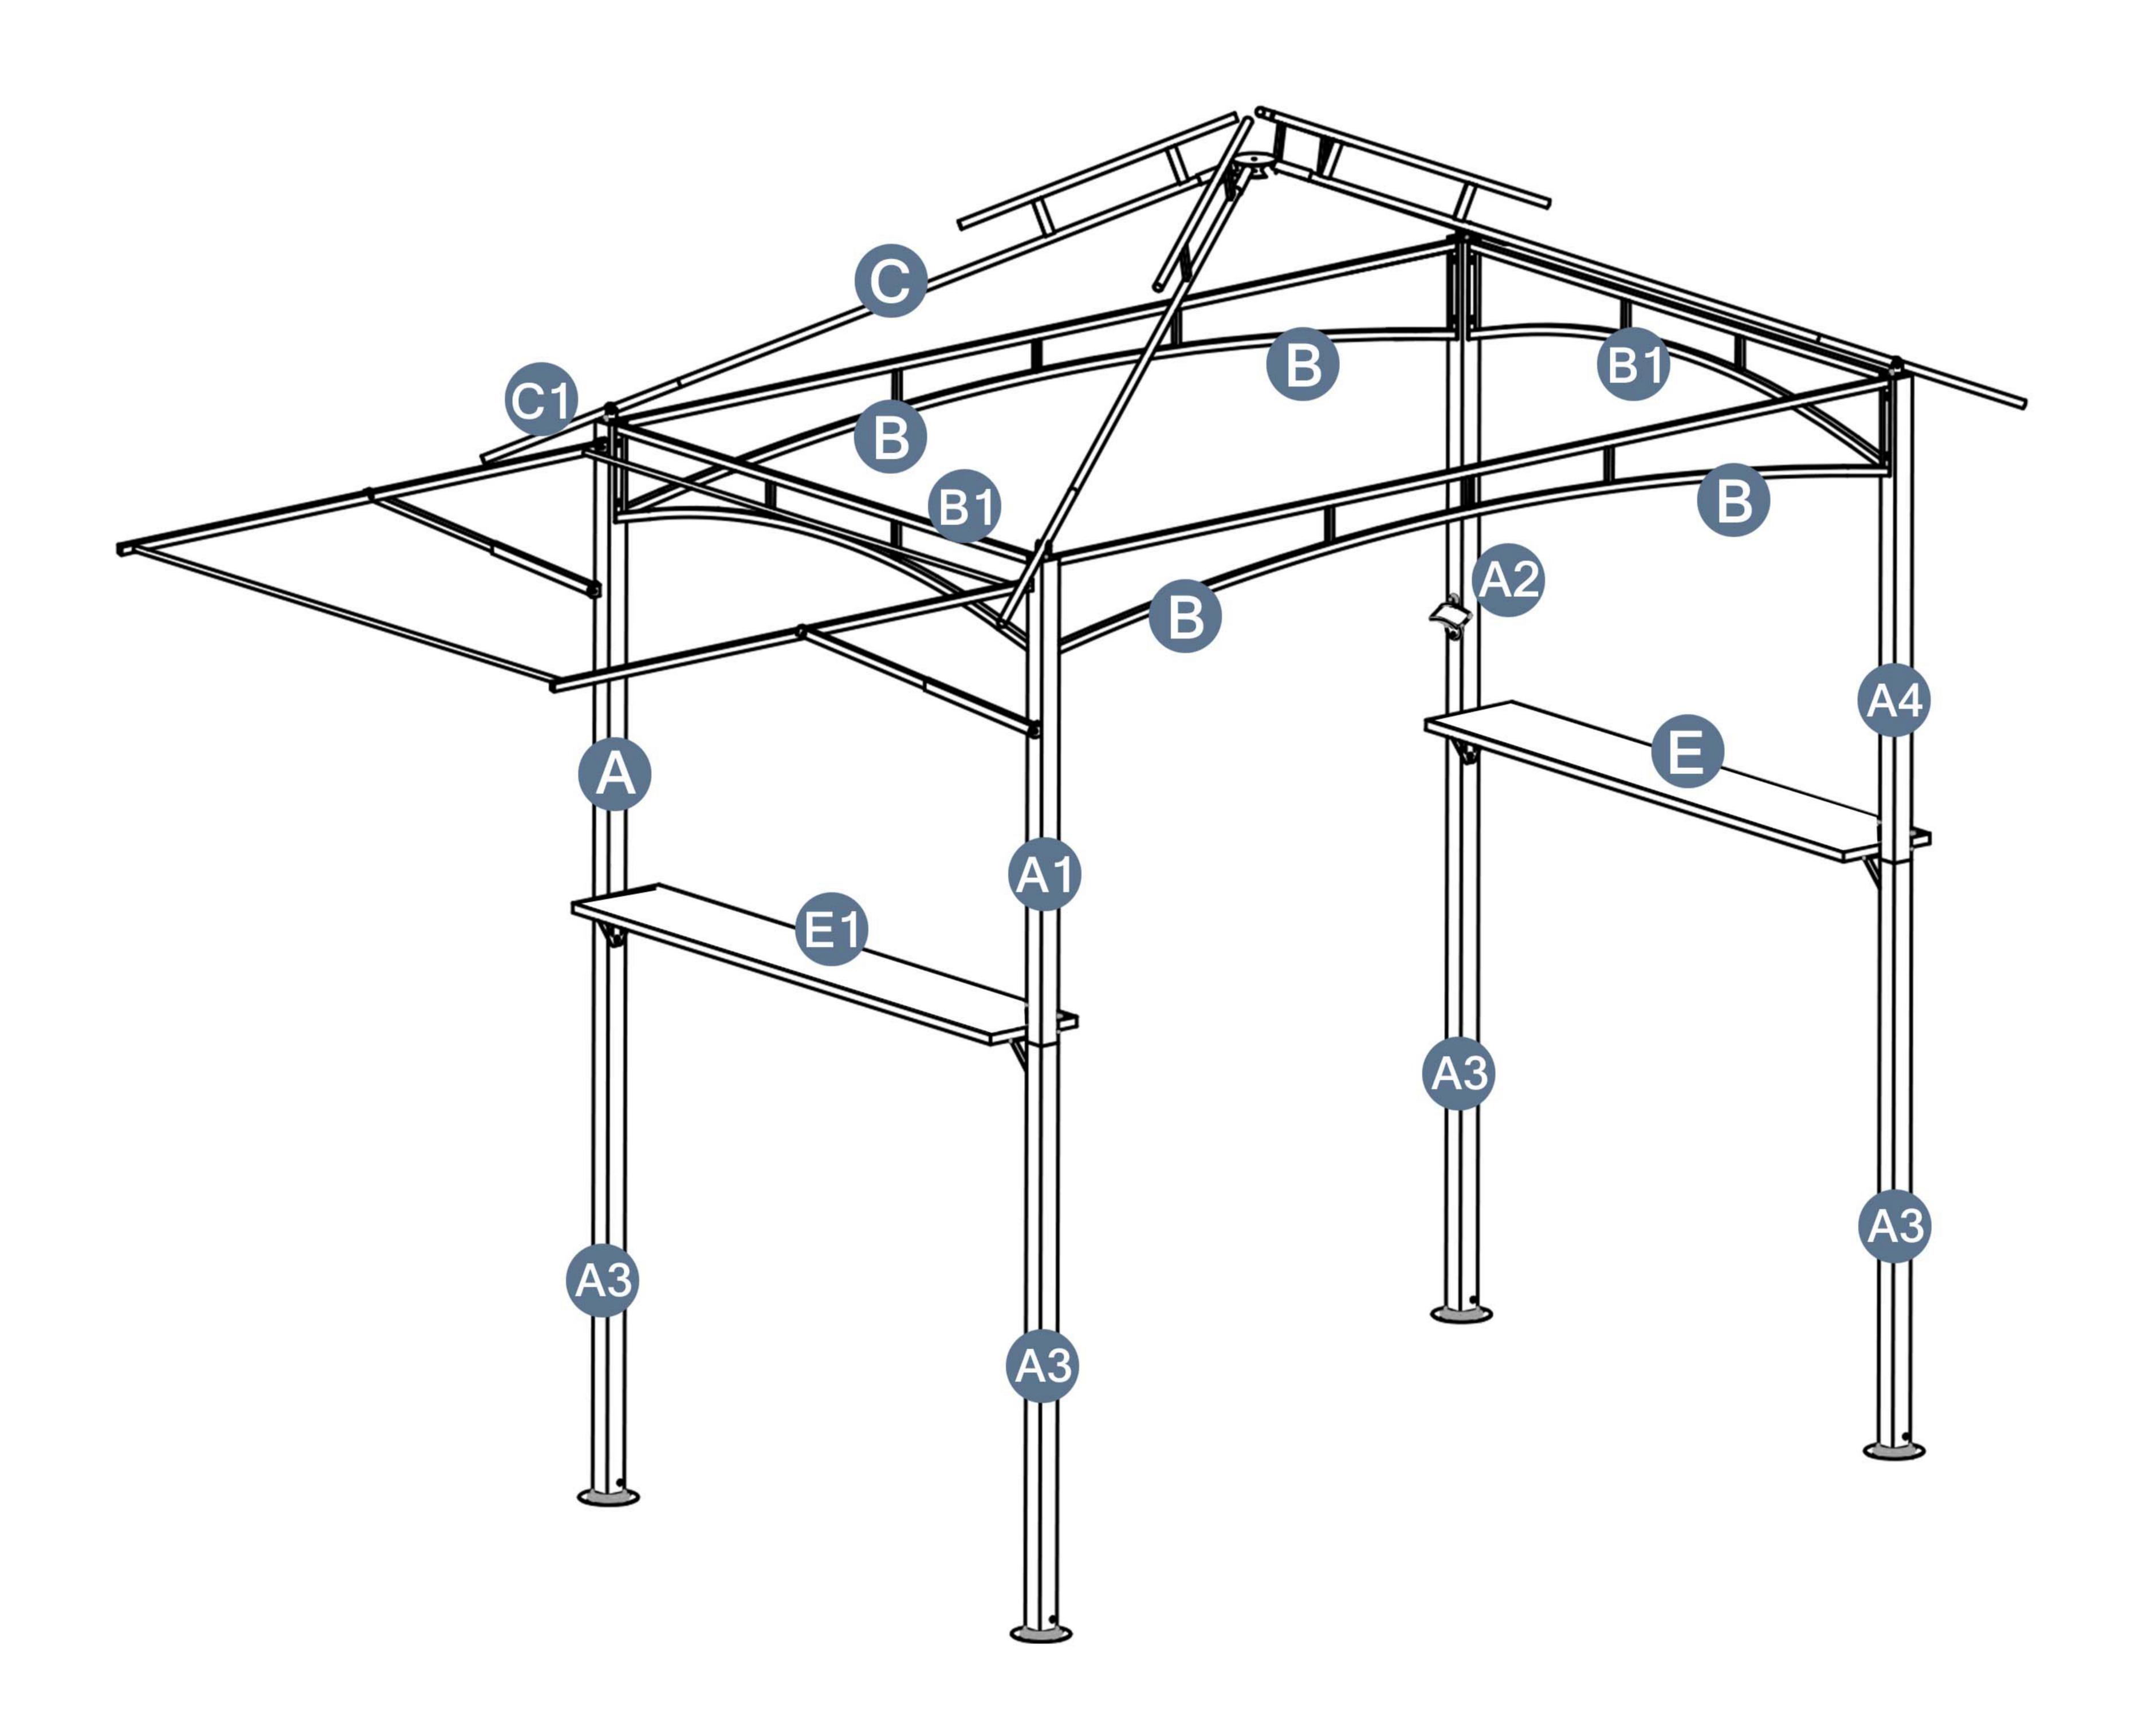

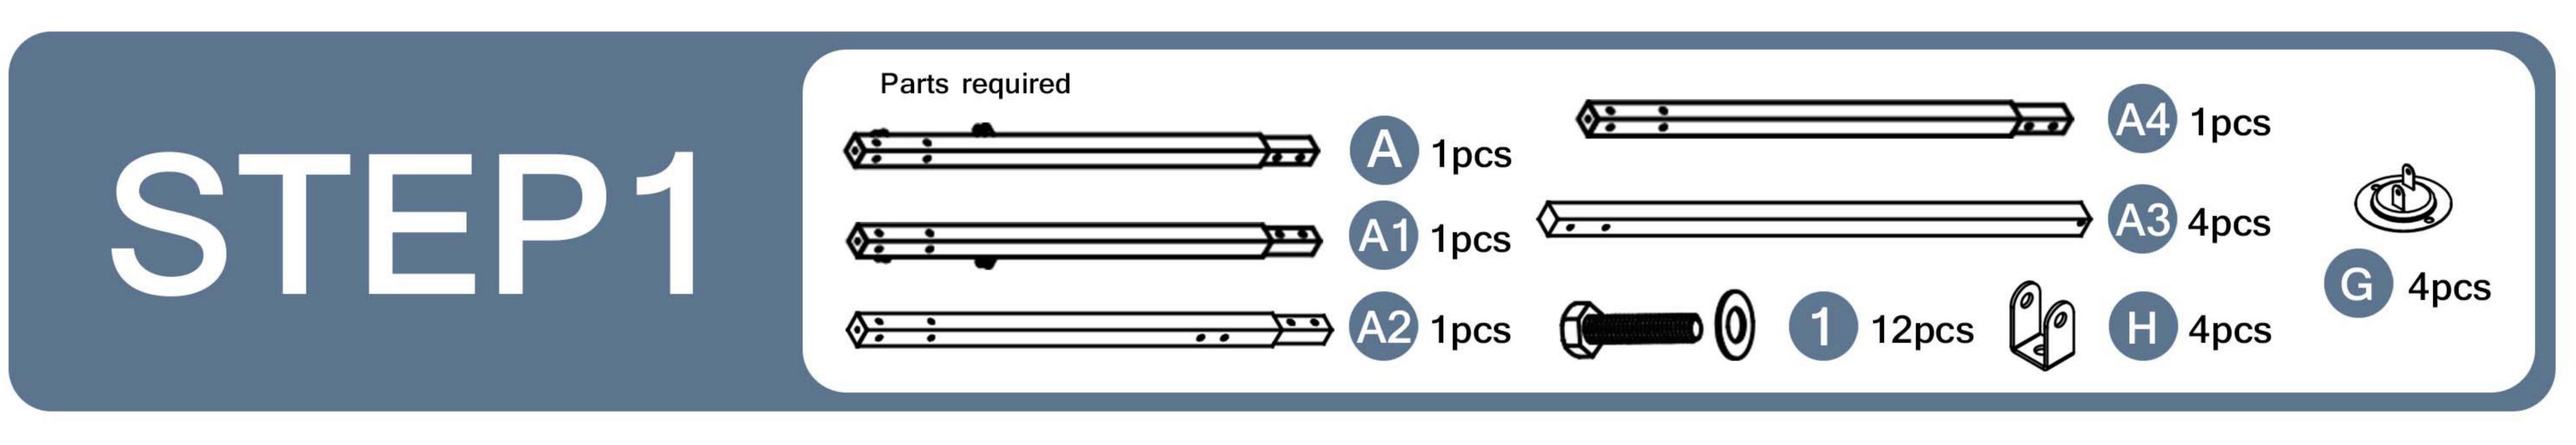


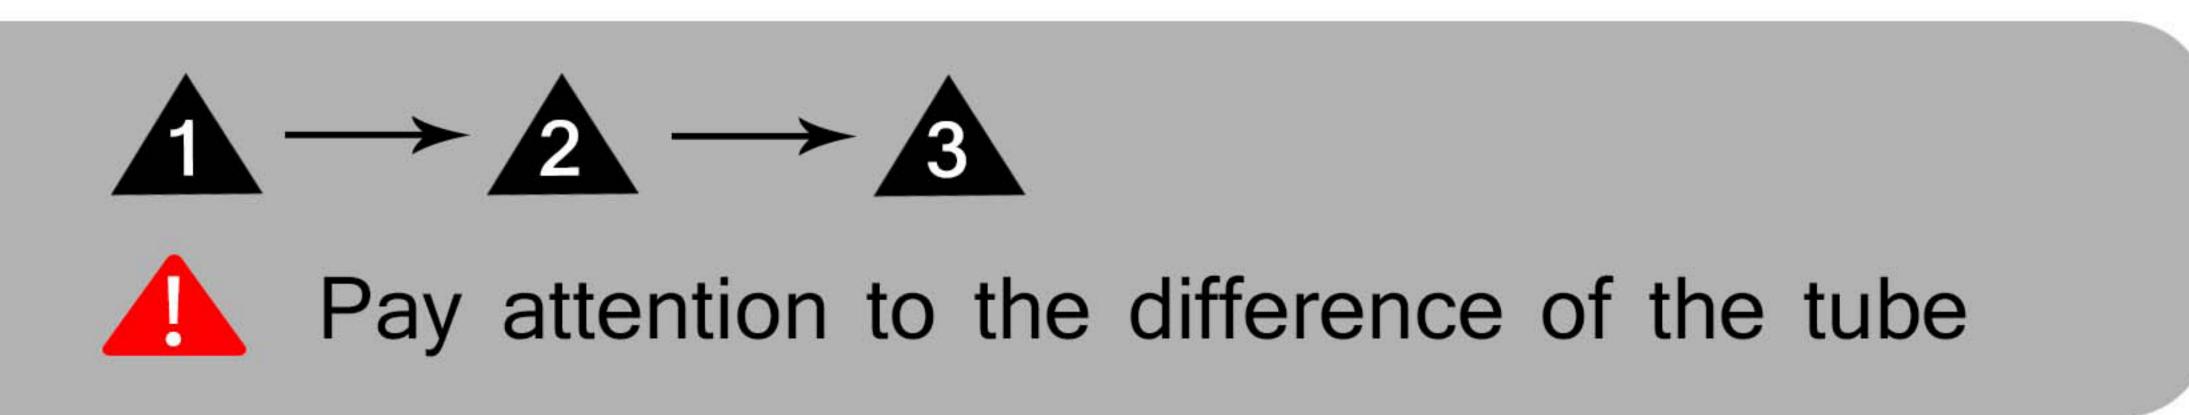

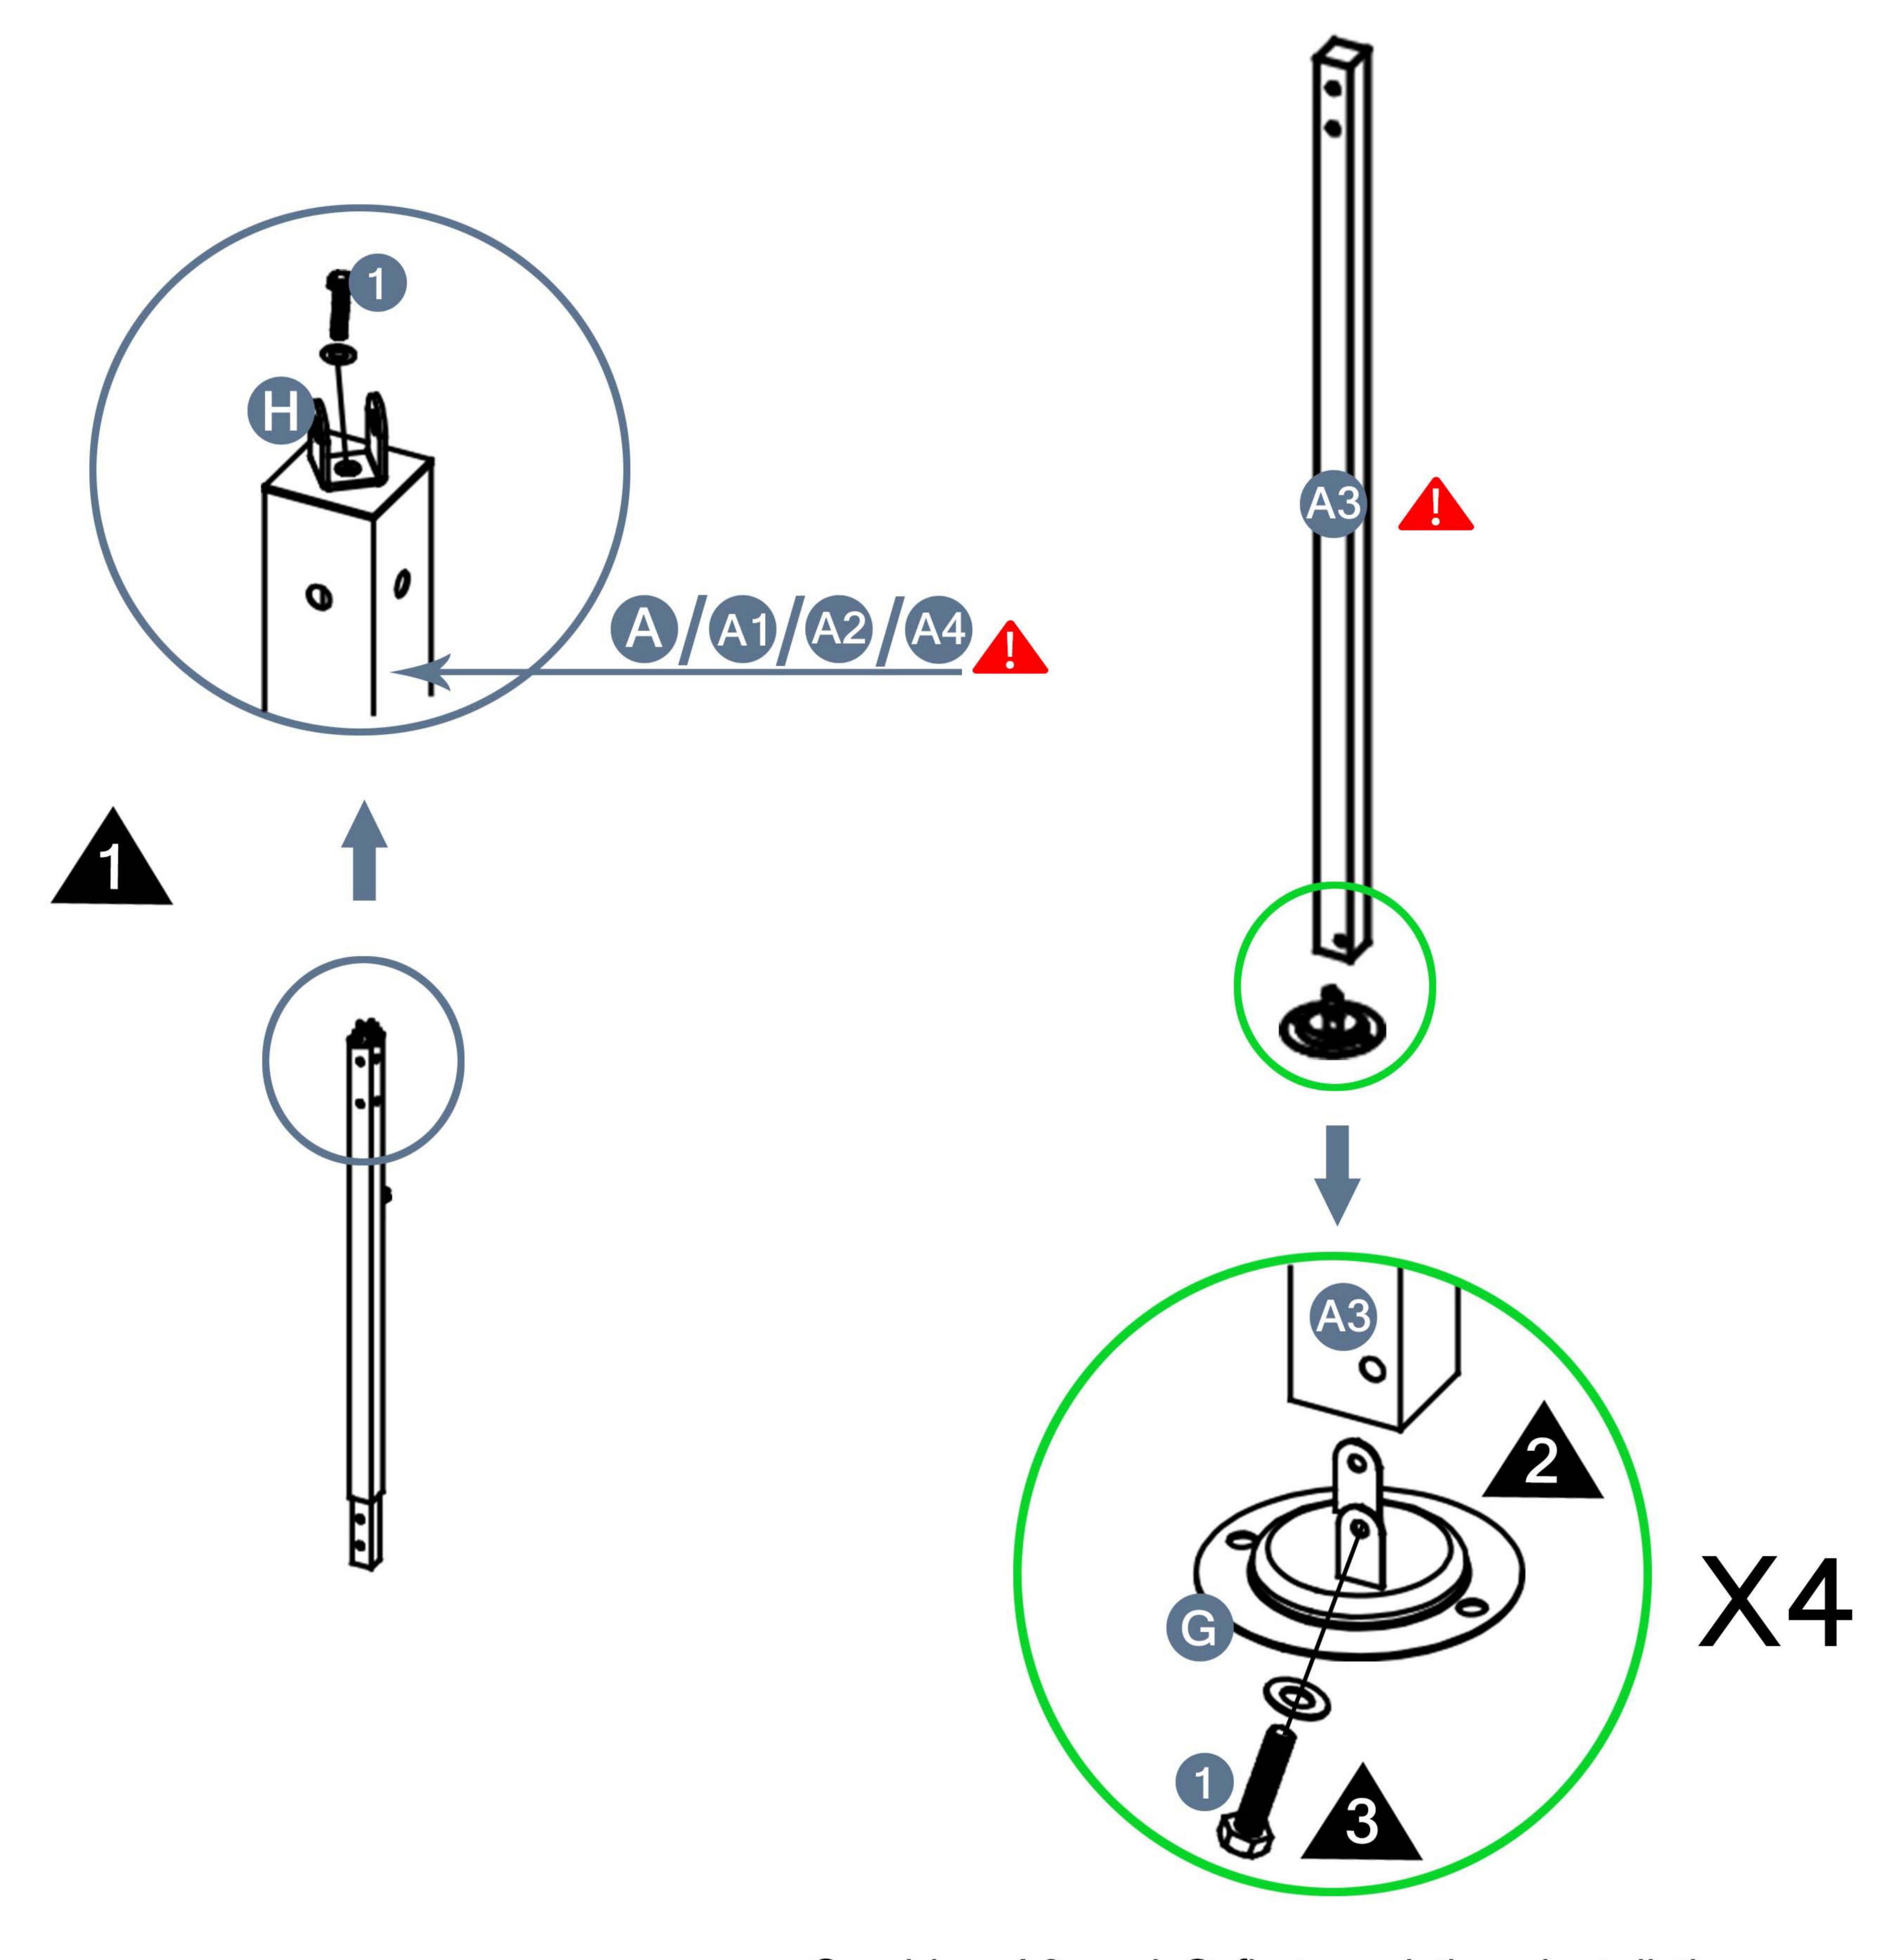



Combine A3 and G first, and then install the screws. In the third step, one screw on each side of the left and right.



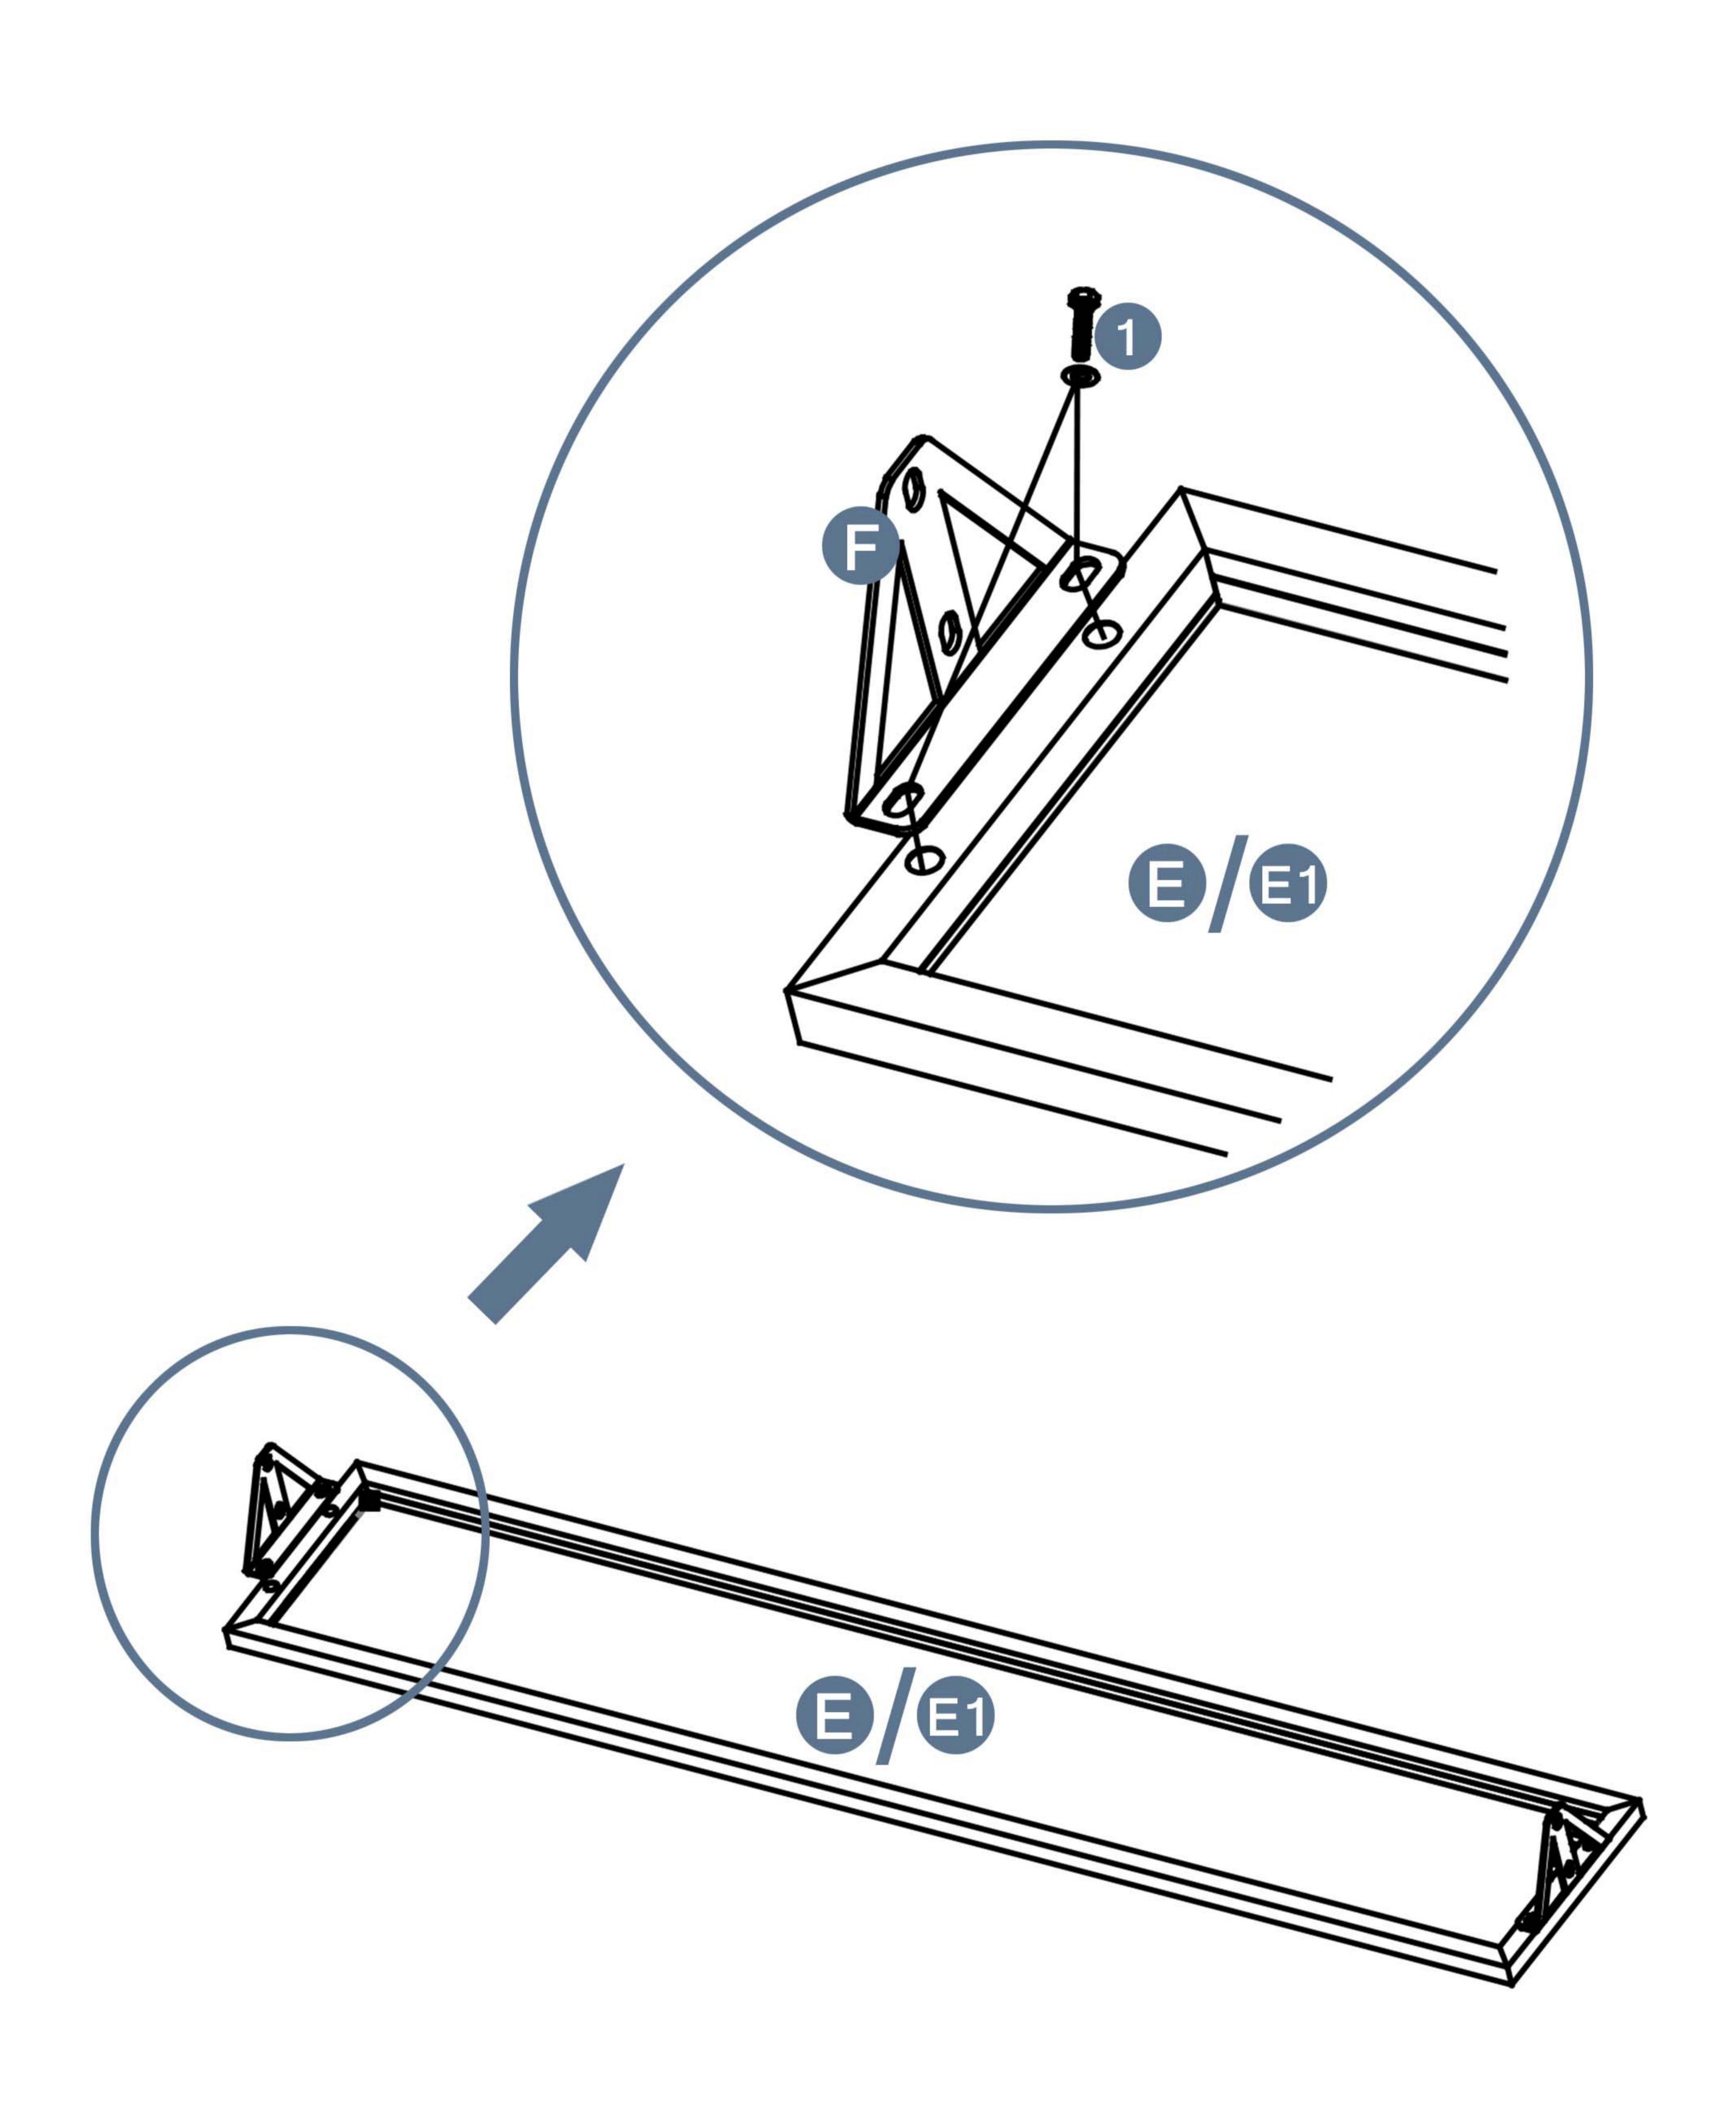



Please note that F is installed on the back of E/E1.

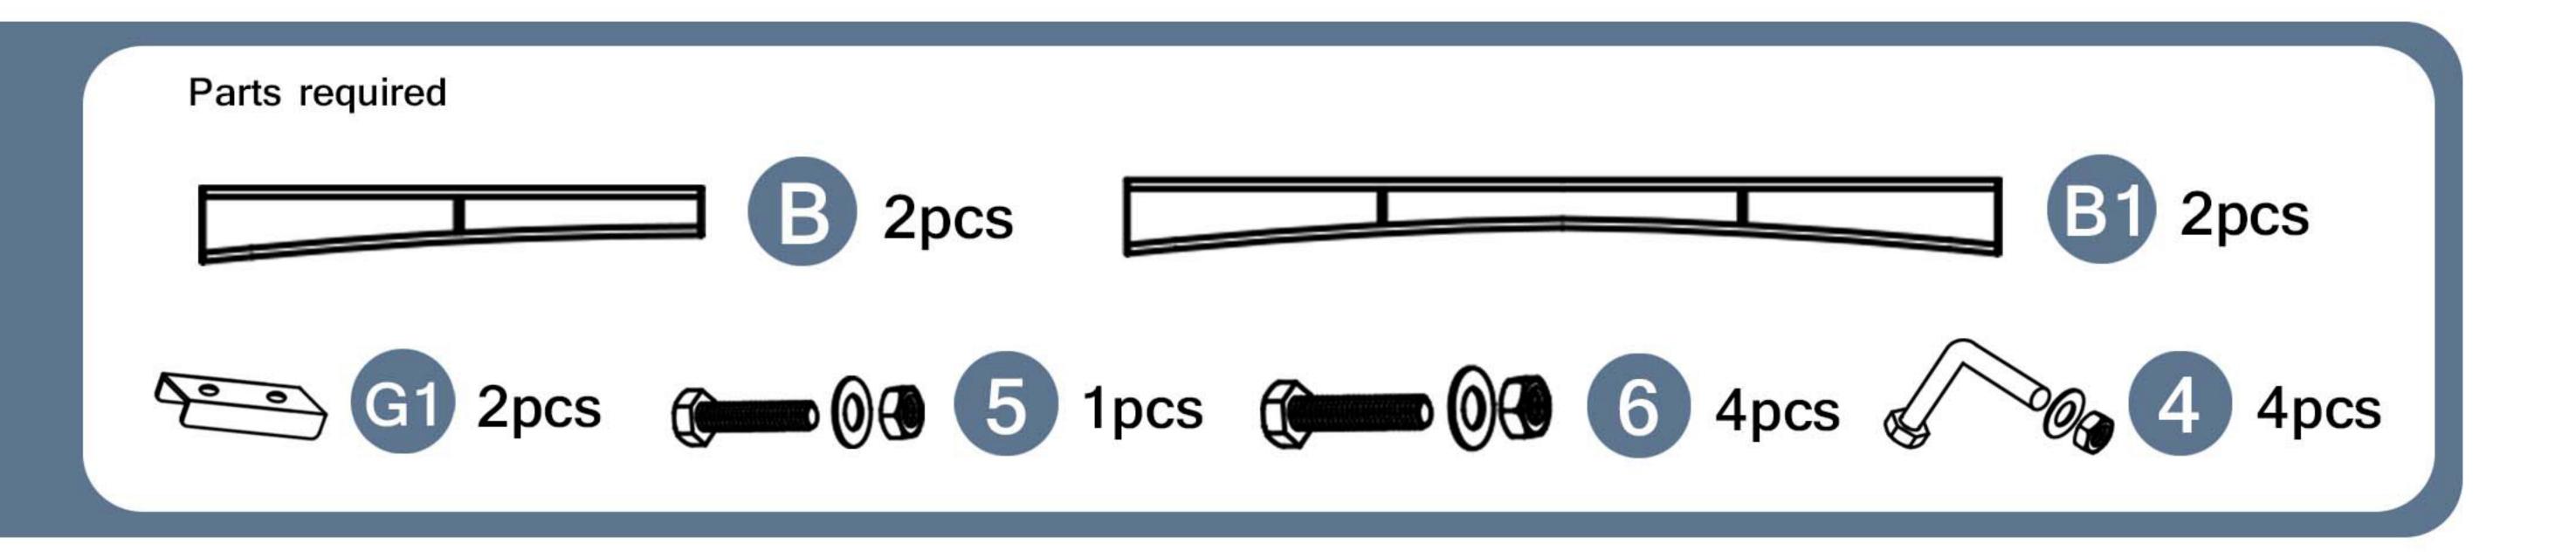


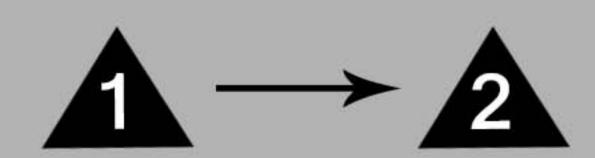


Pay attention to the difference of screws.

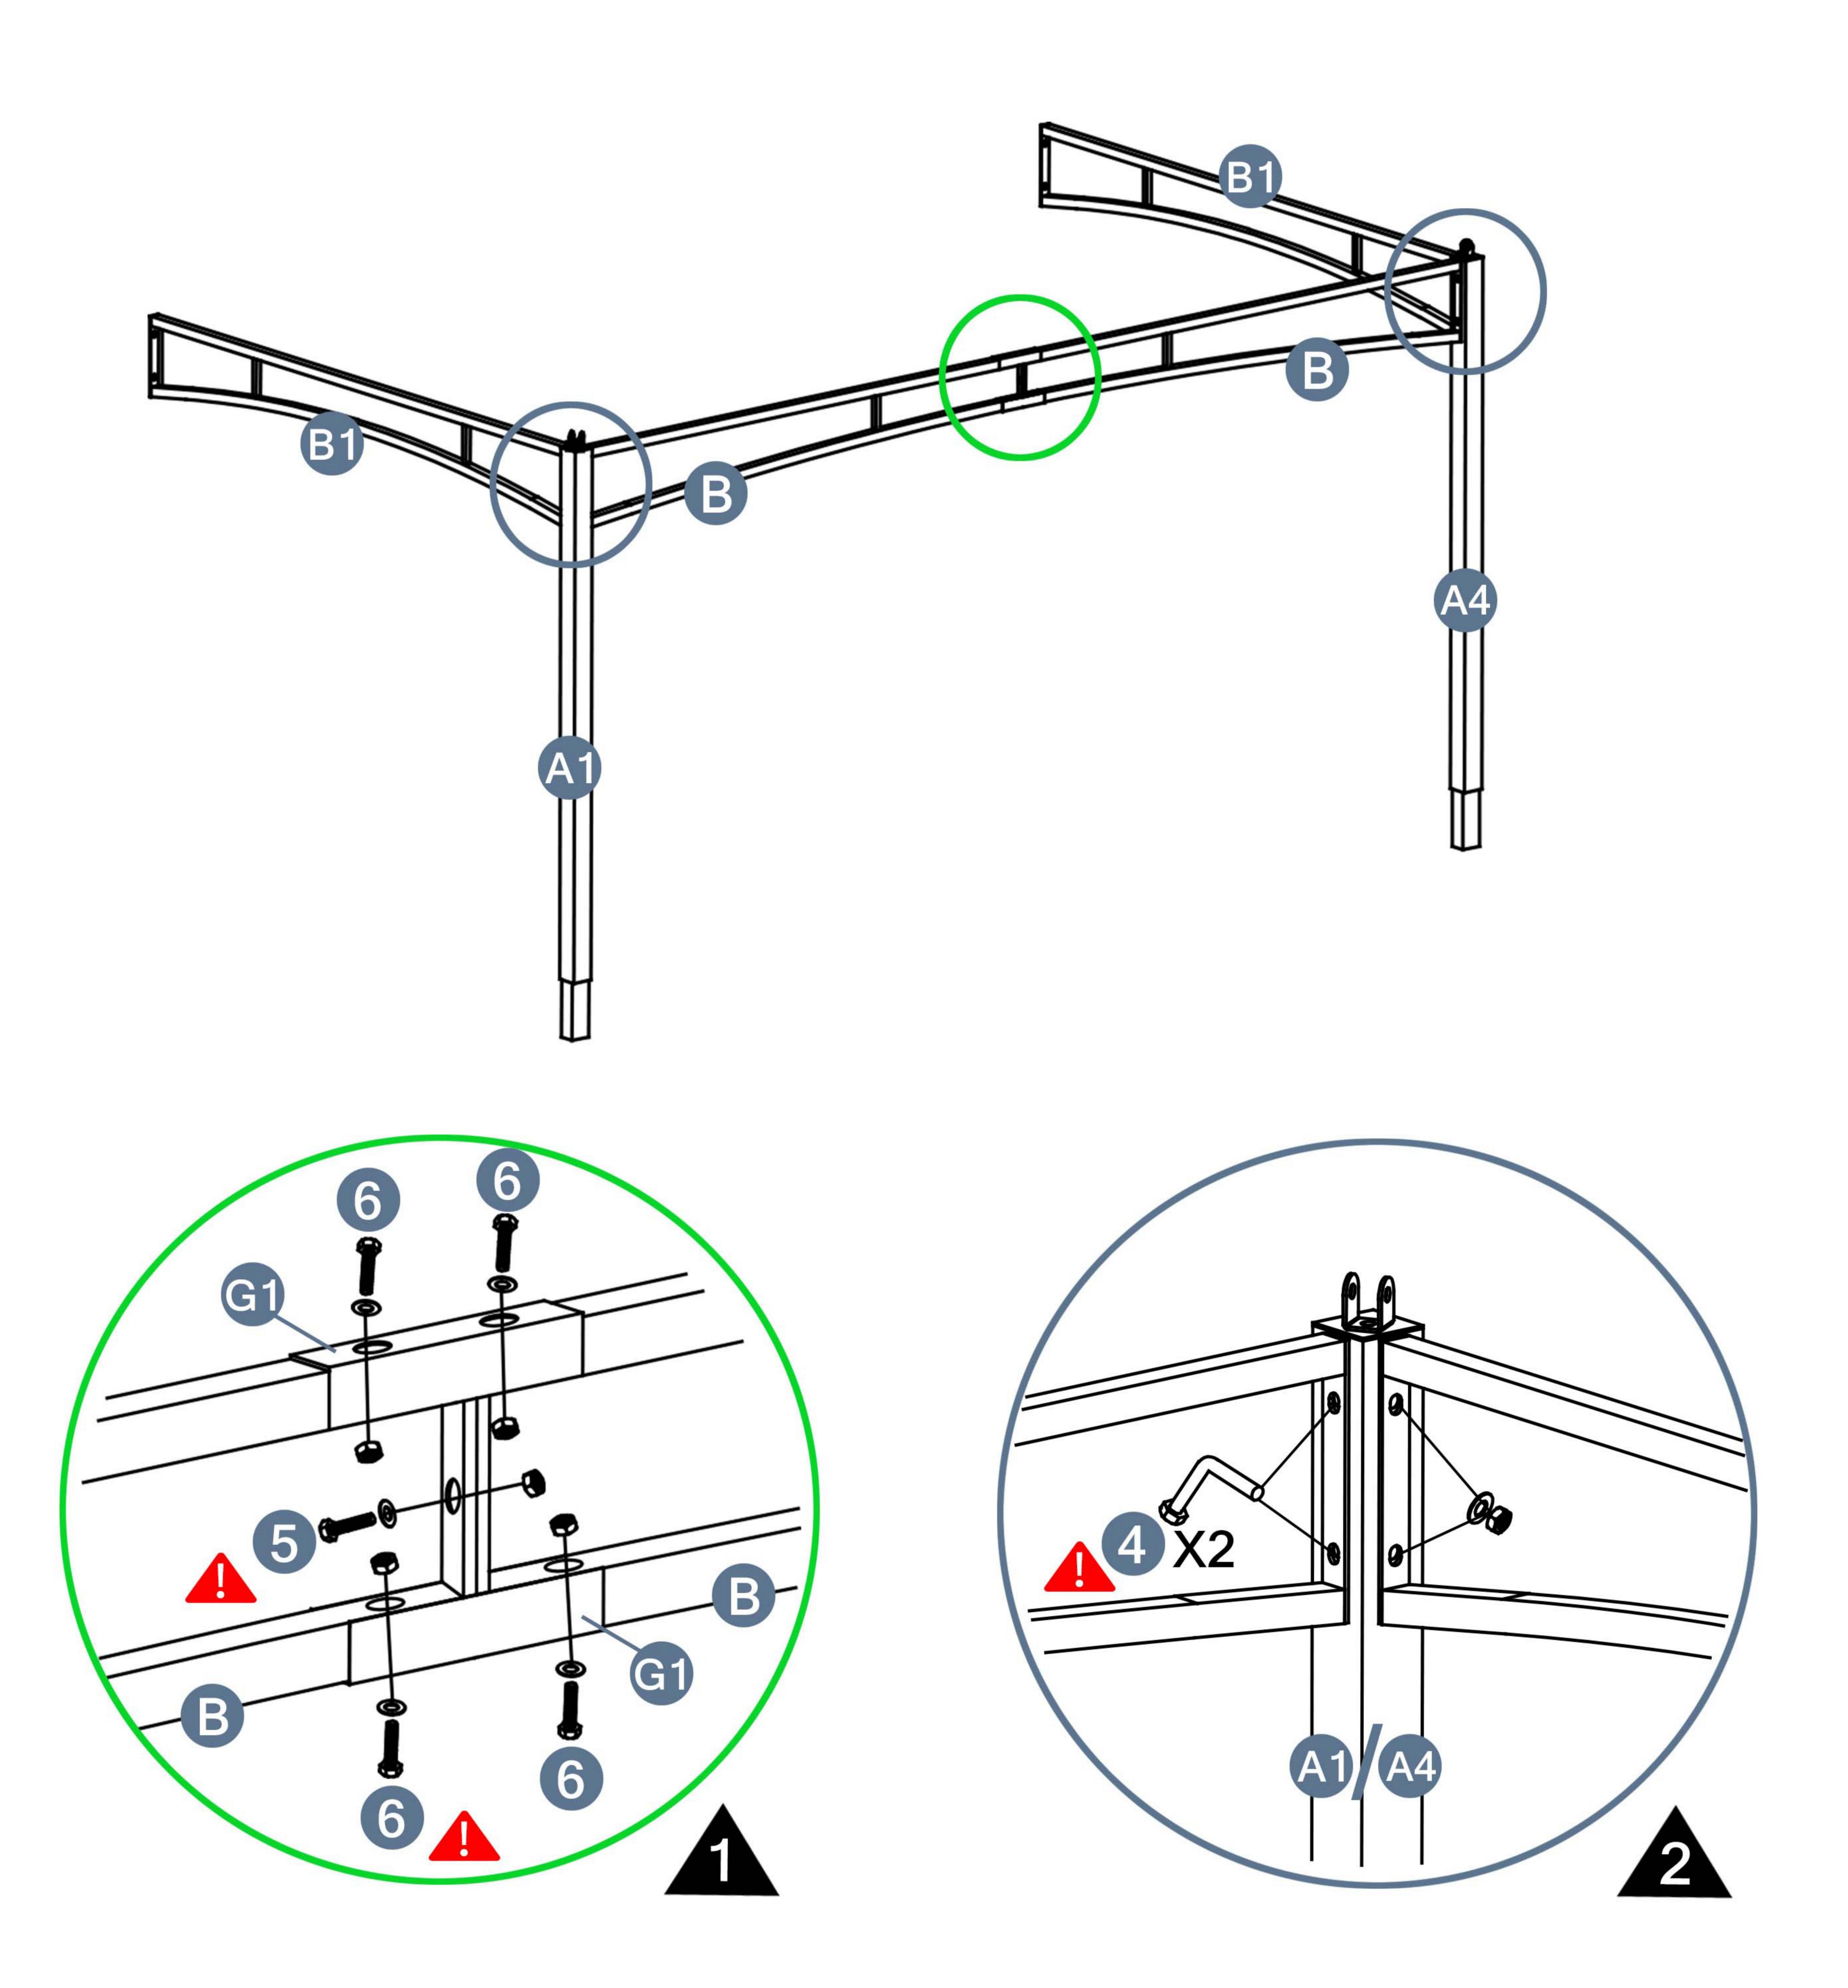


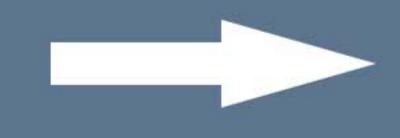


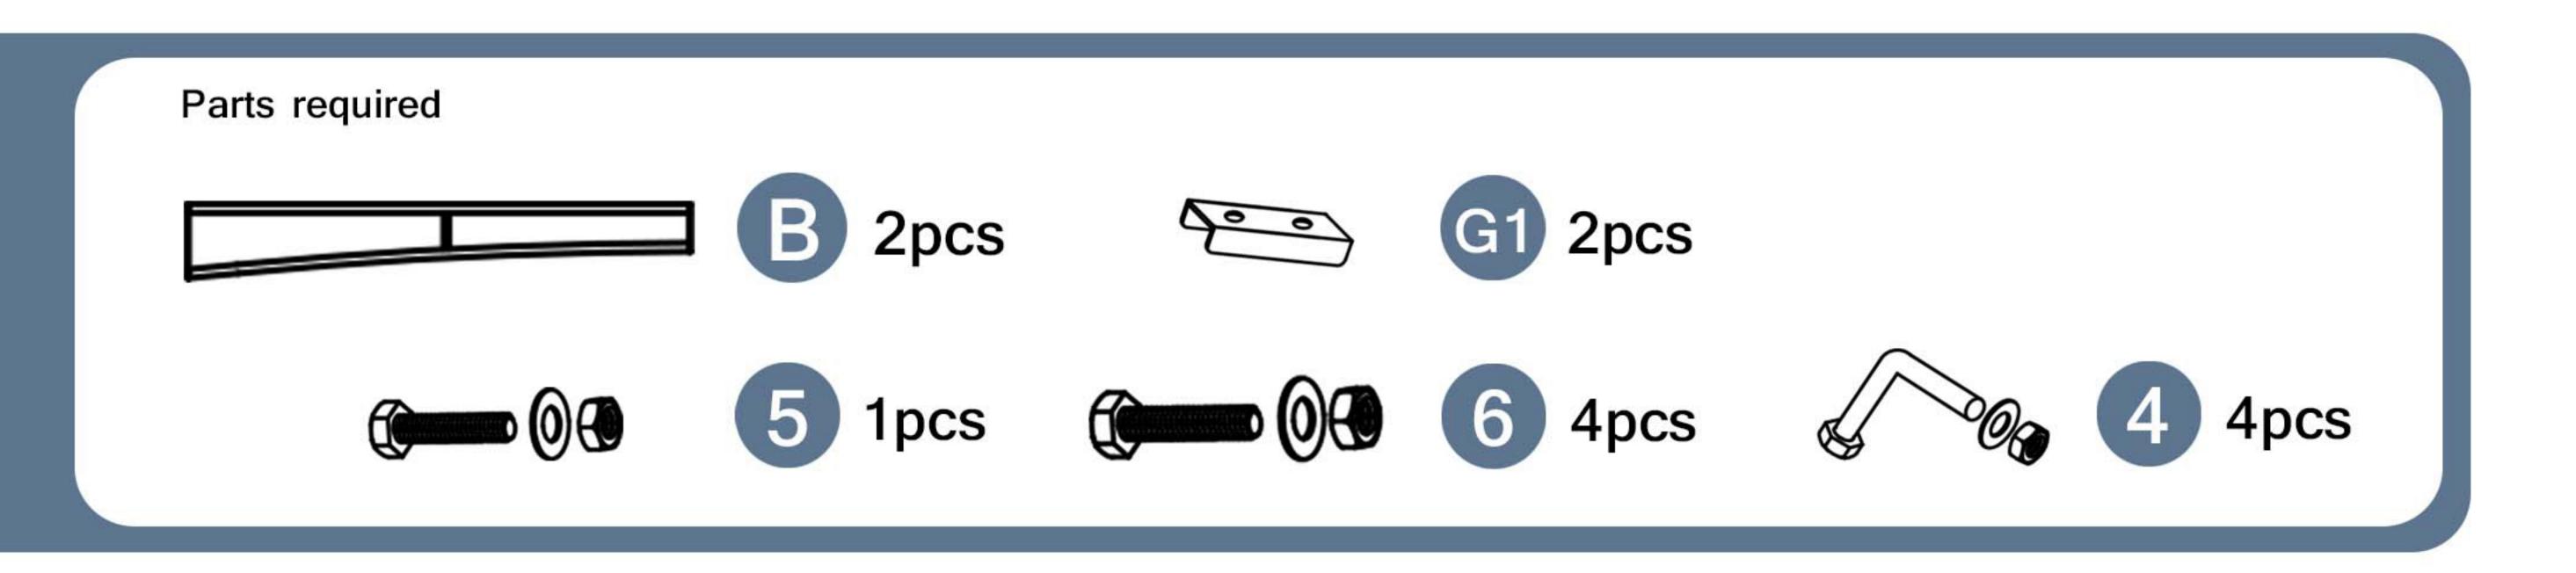

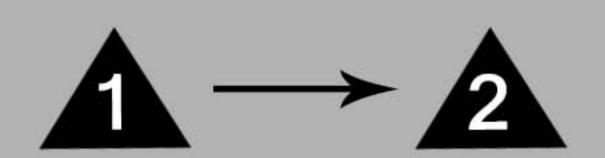

Pay attention to the difference of screws.

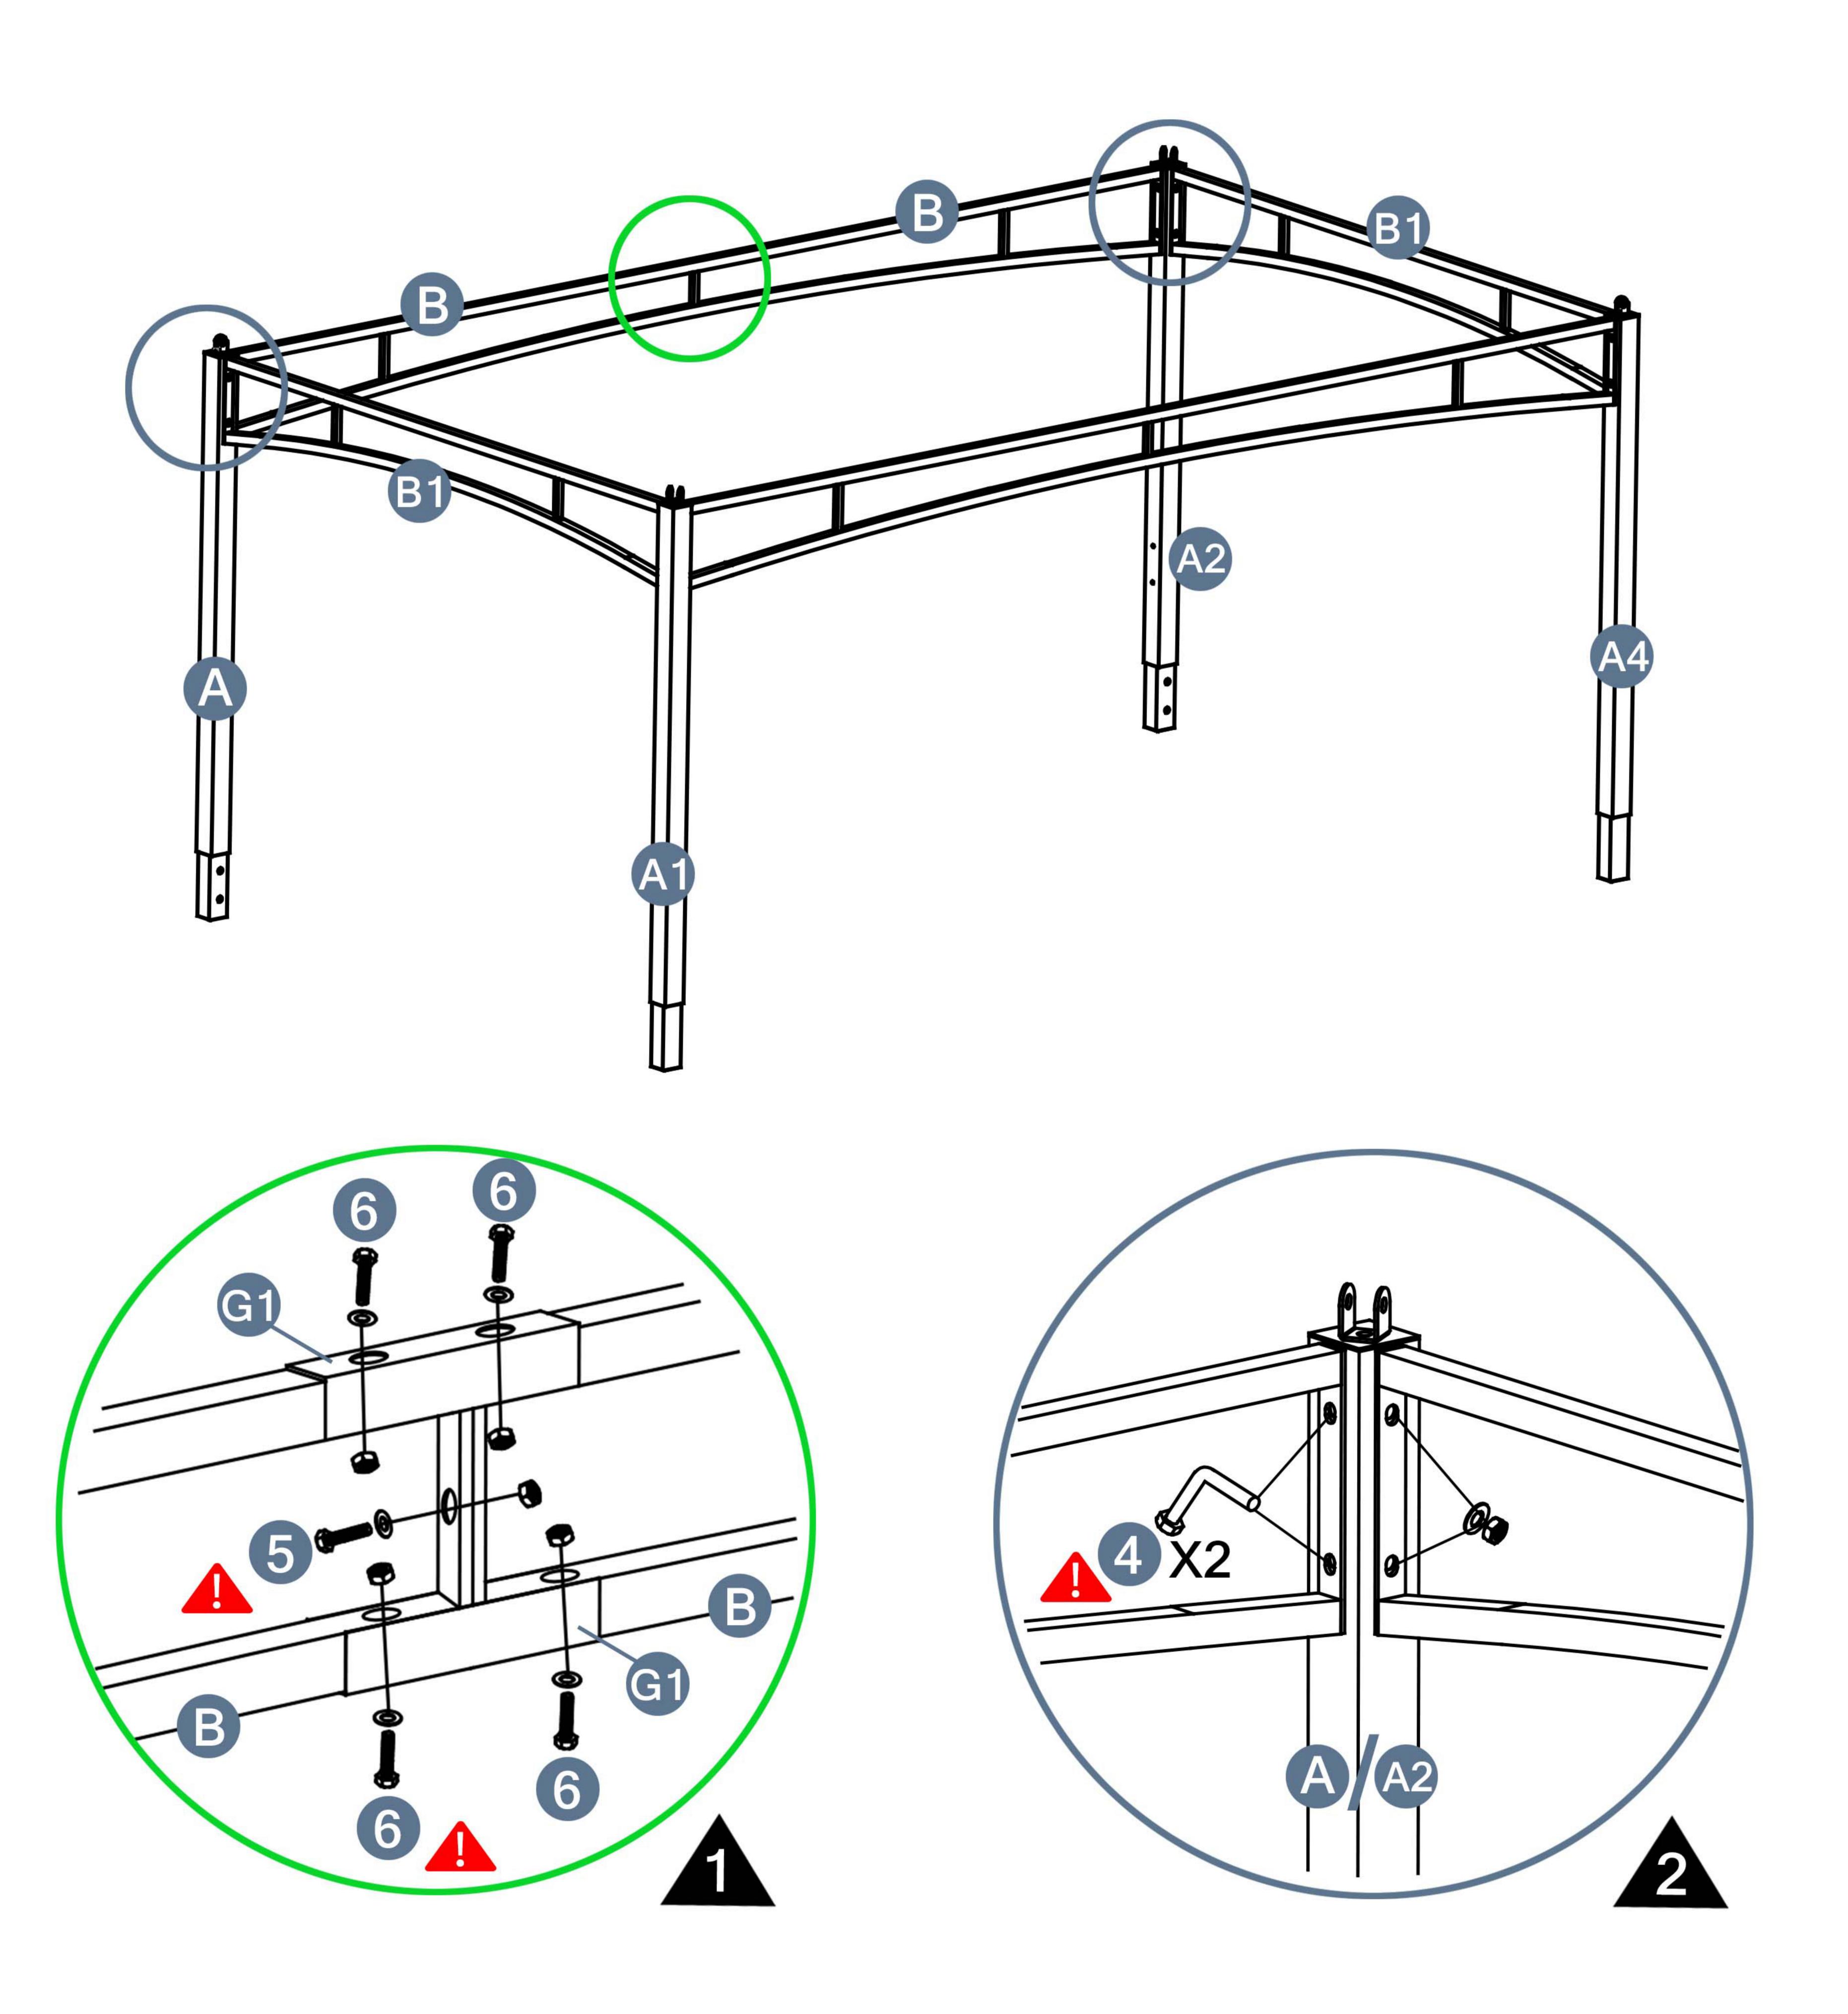

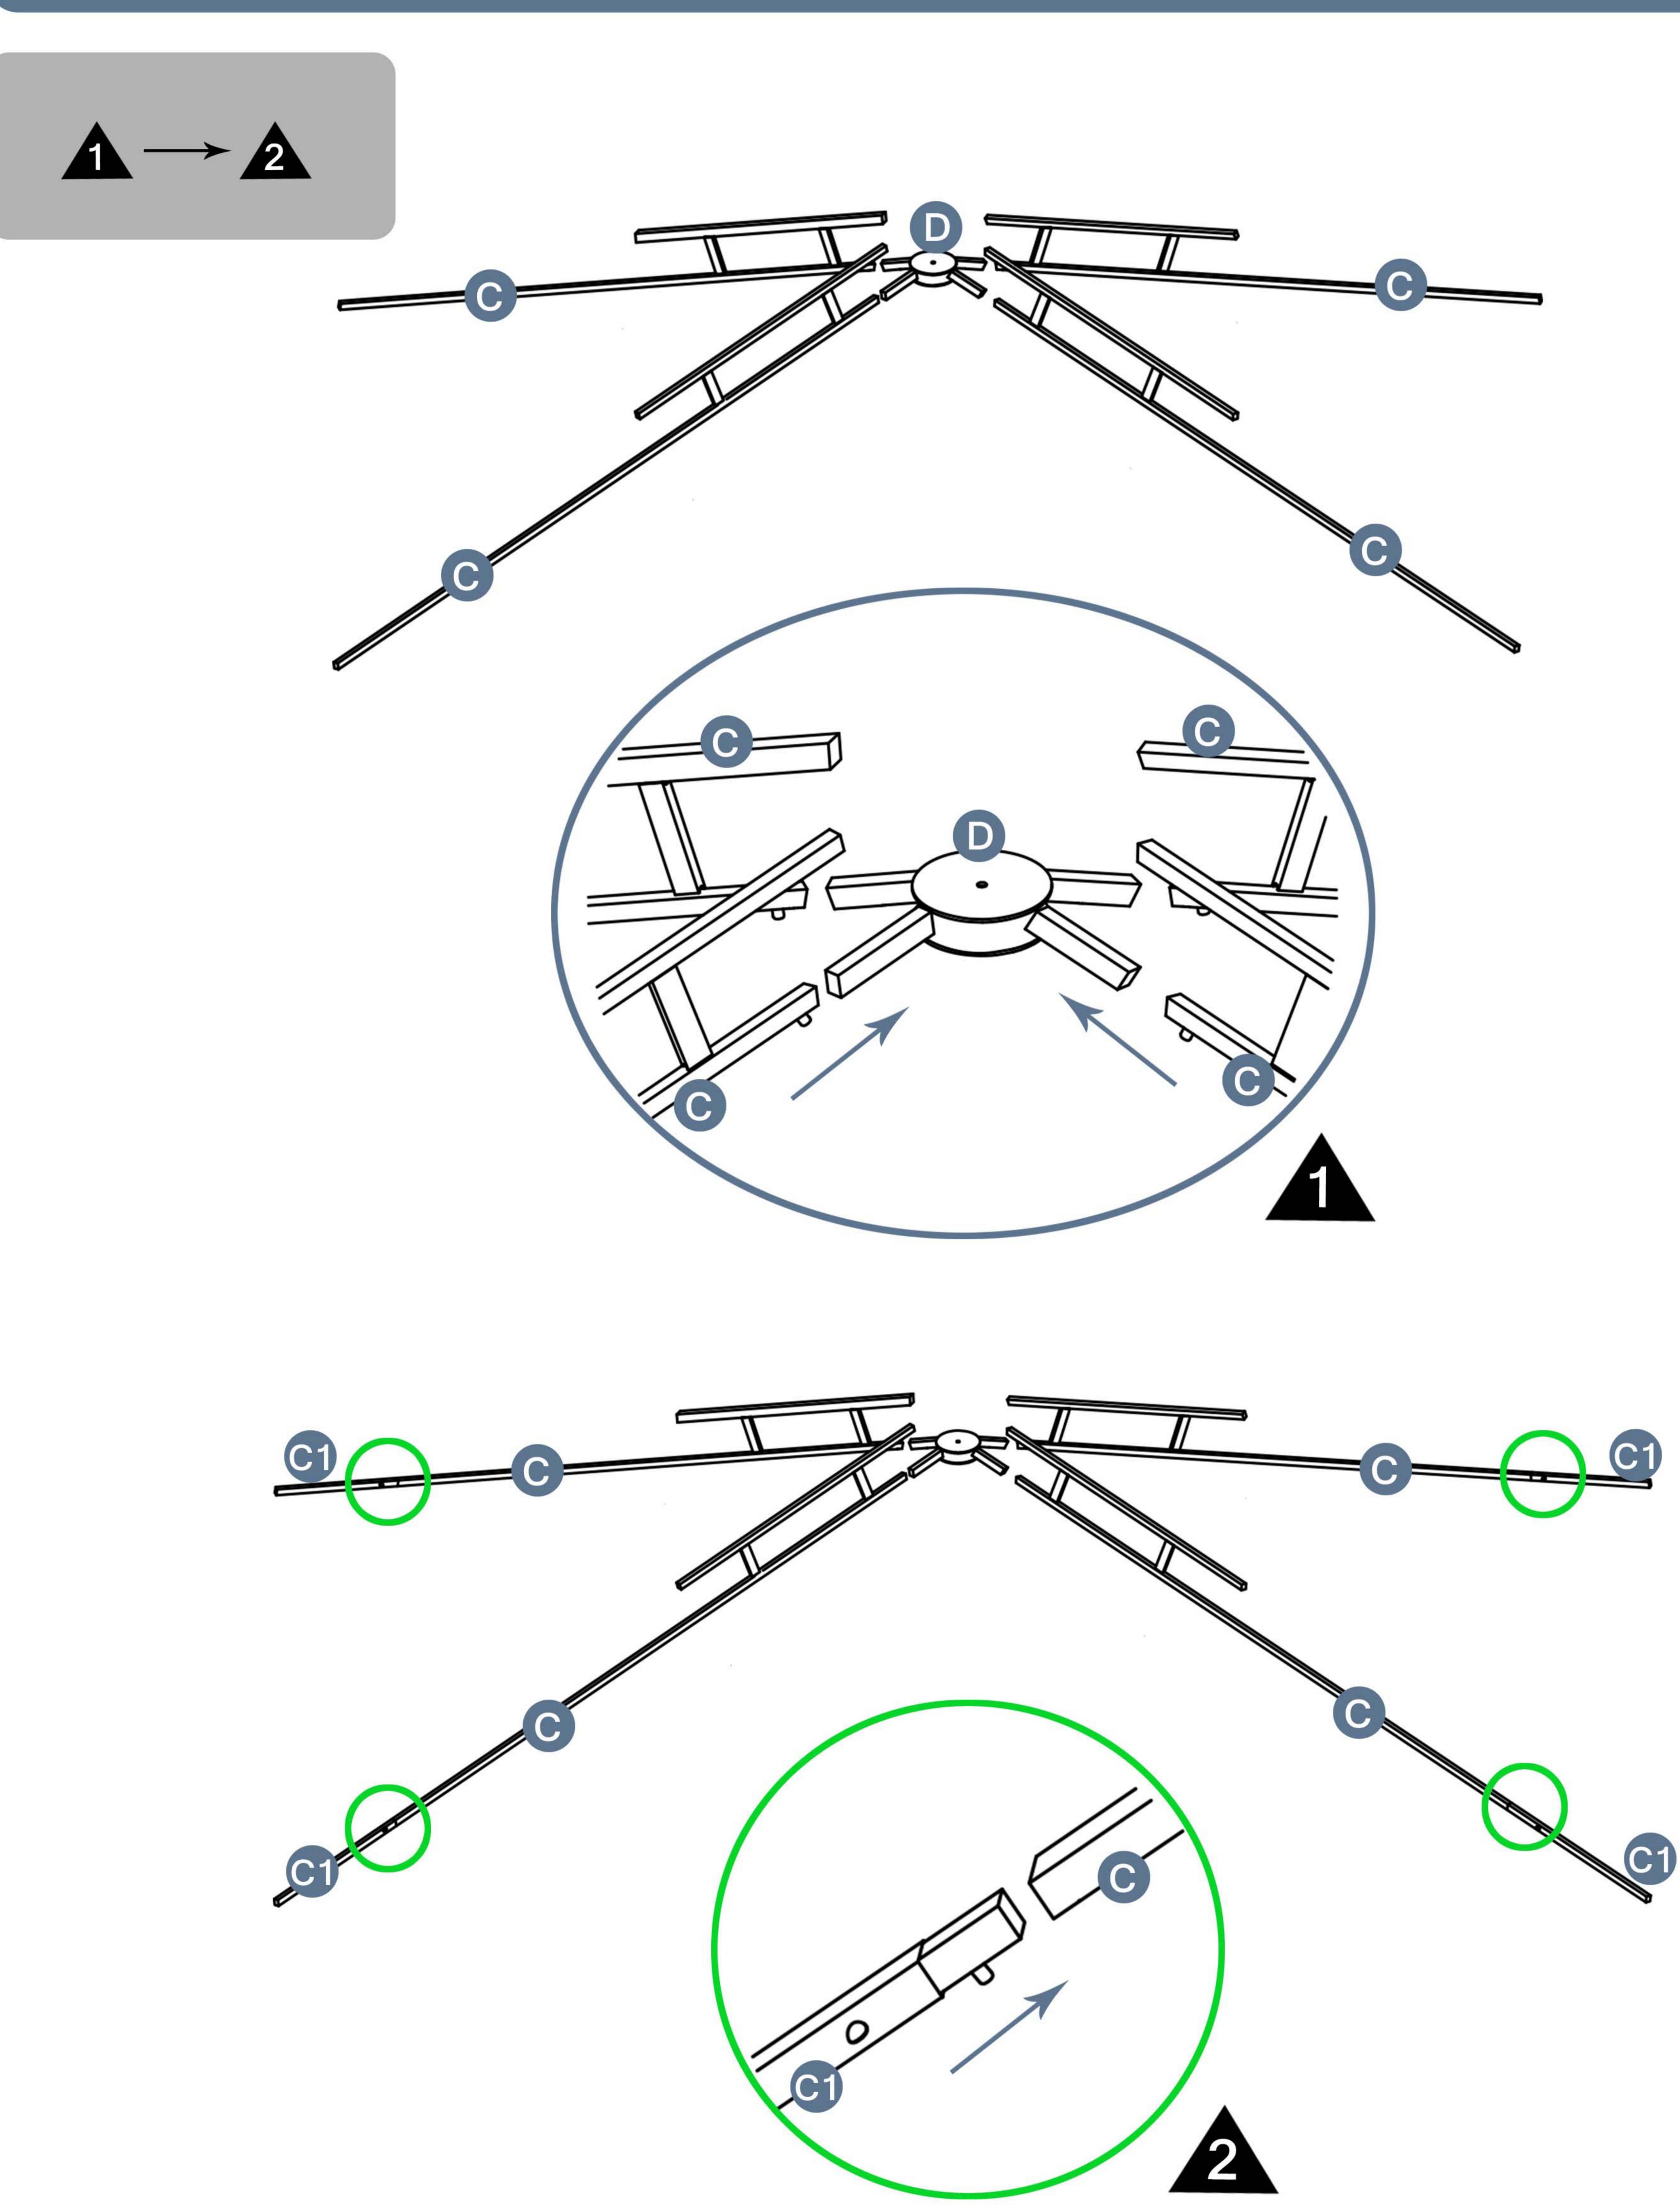












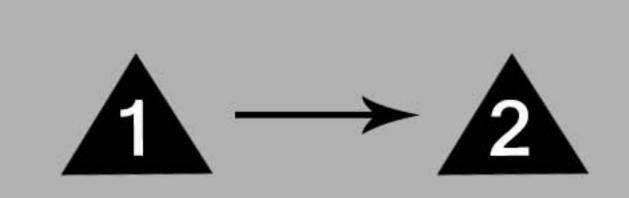

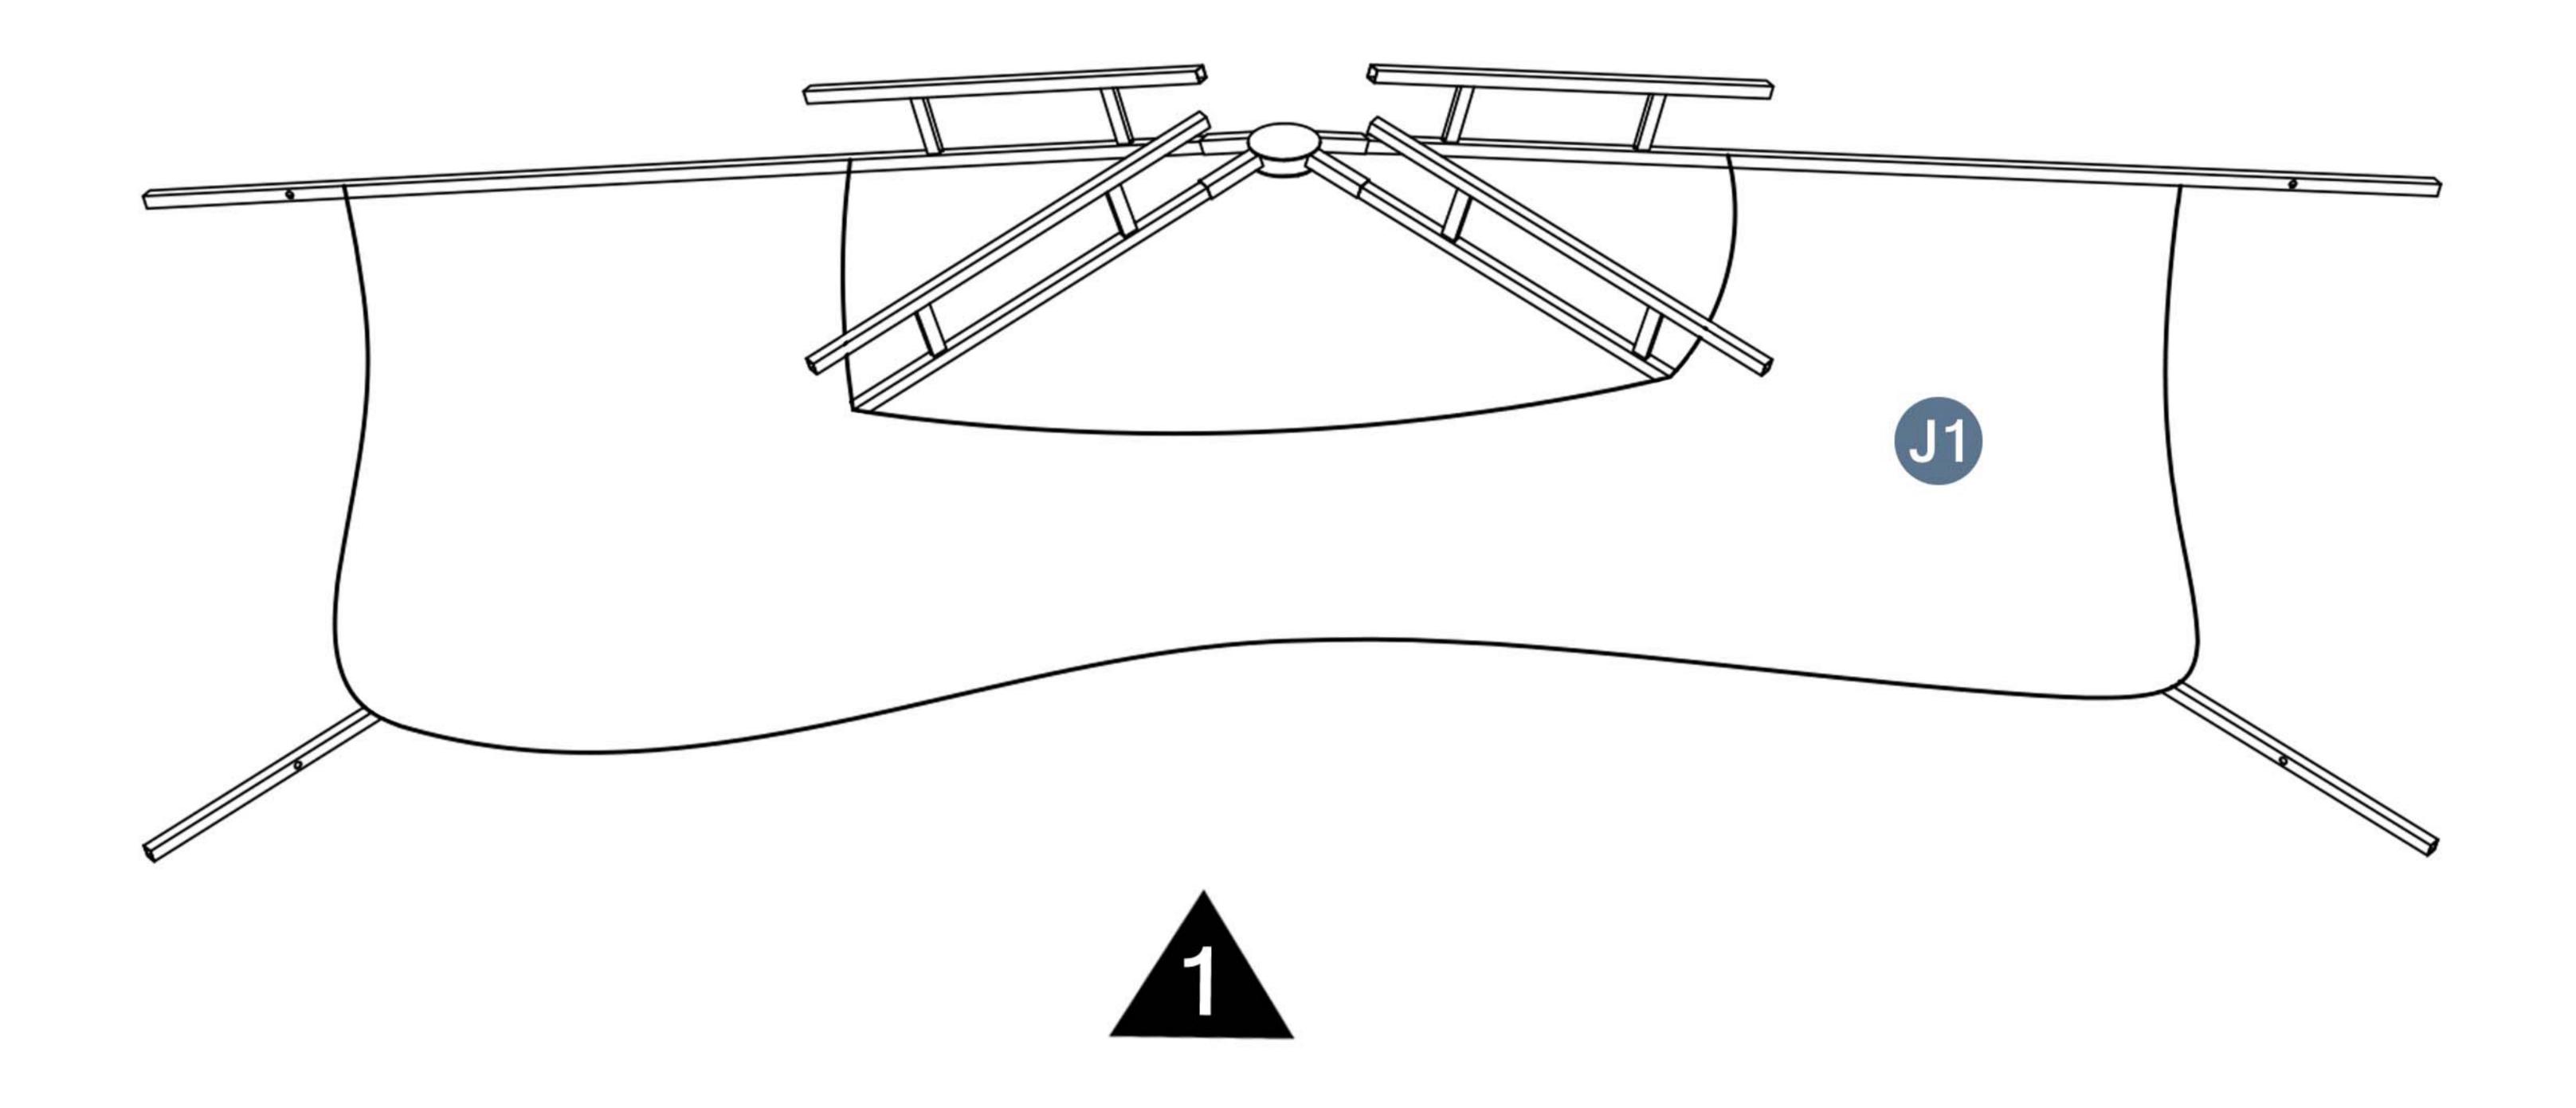


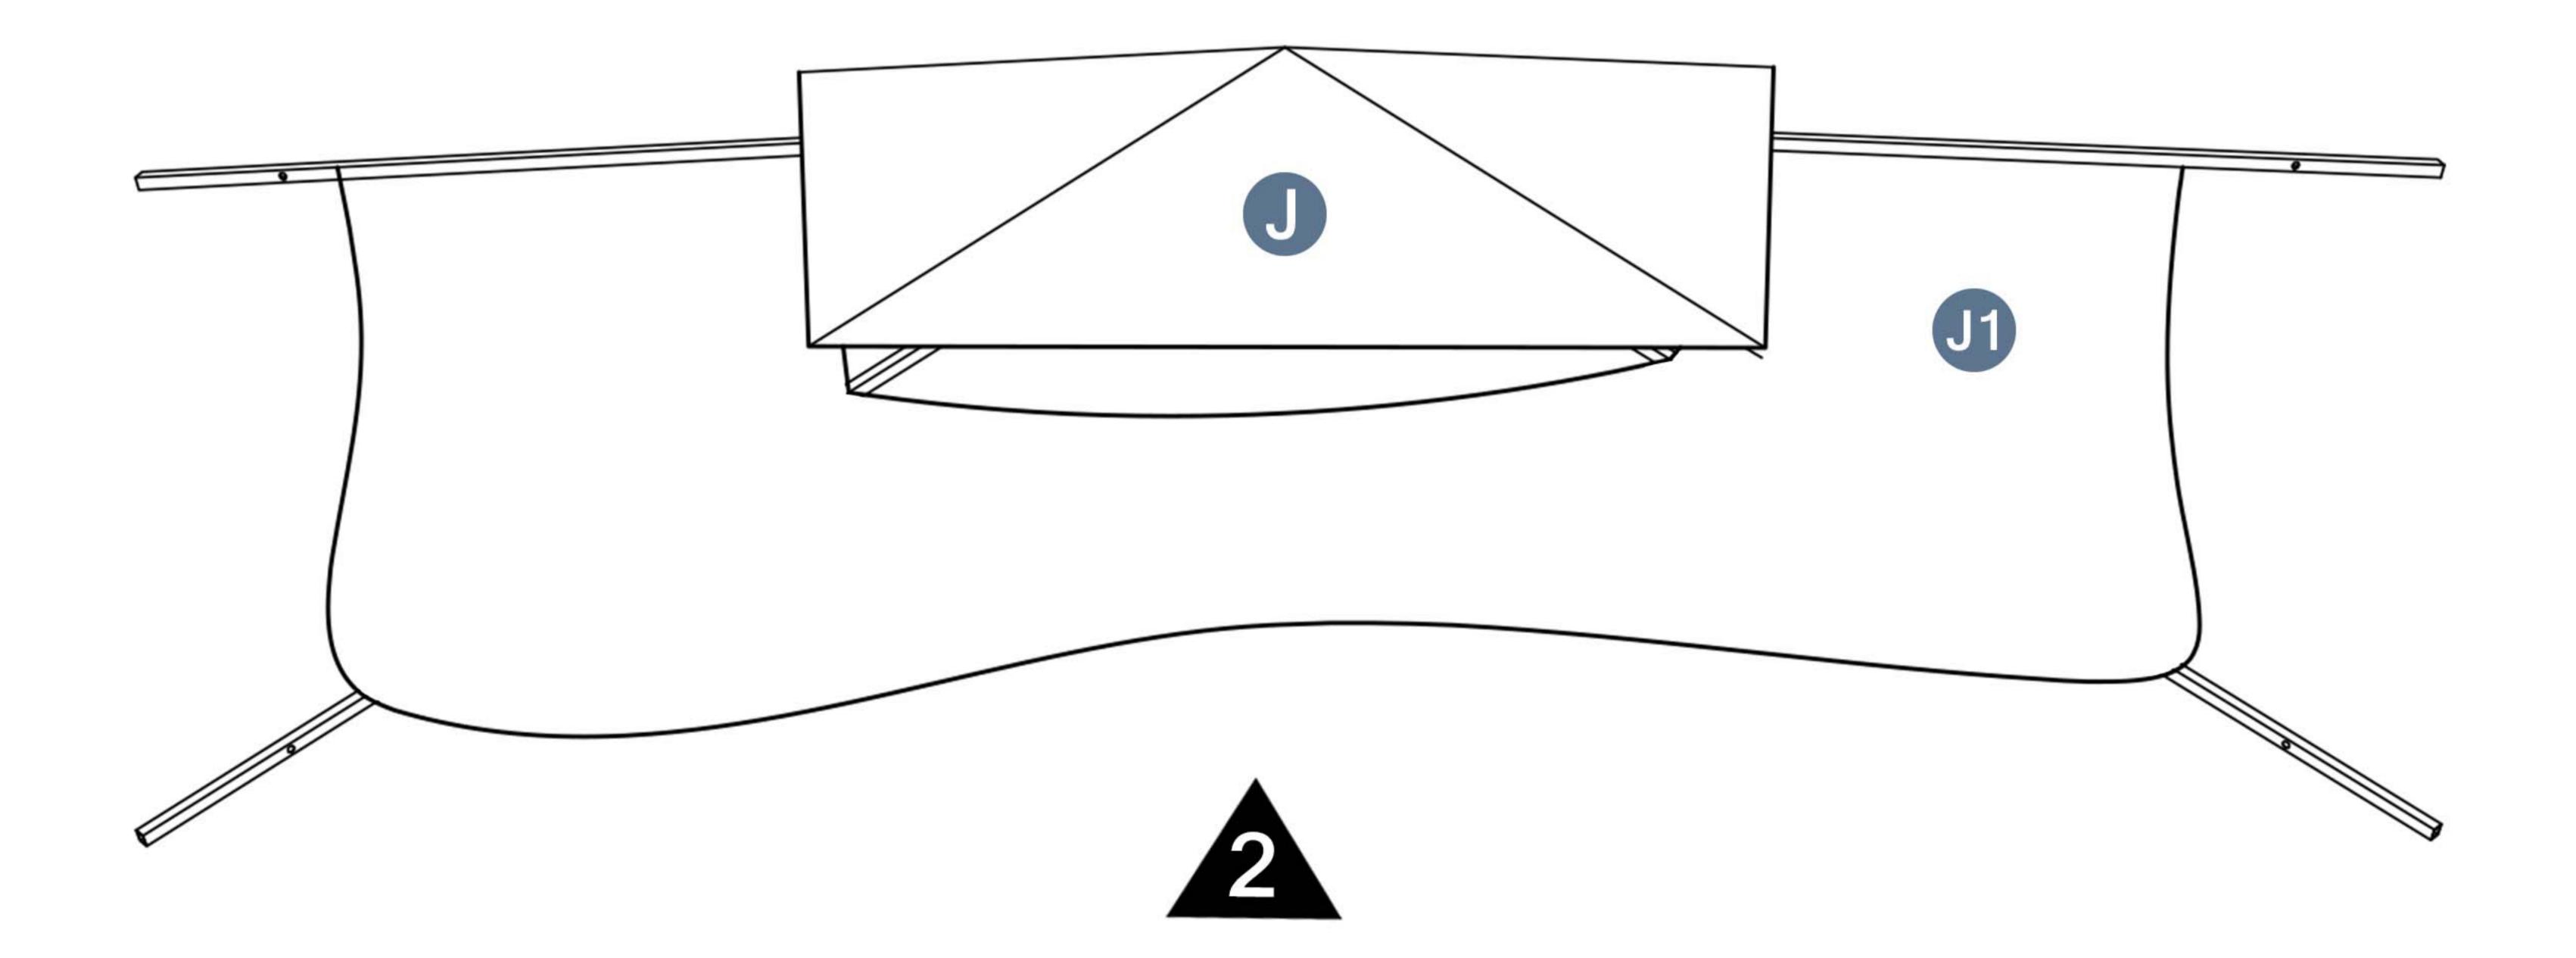

STEP/






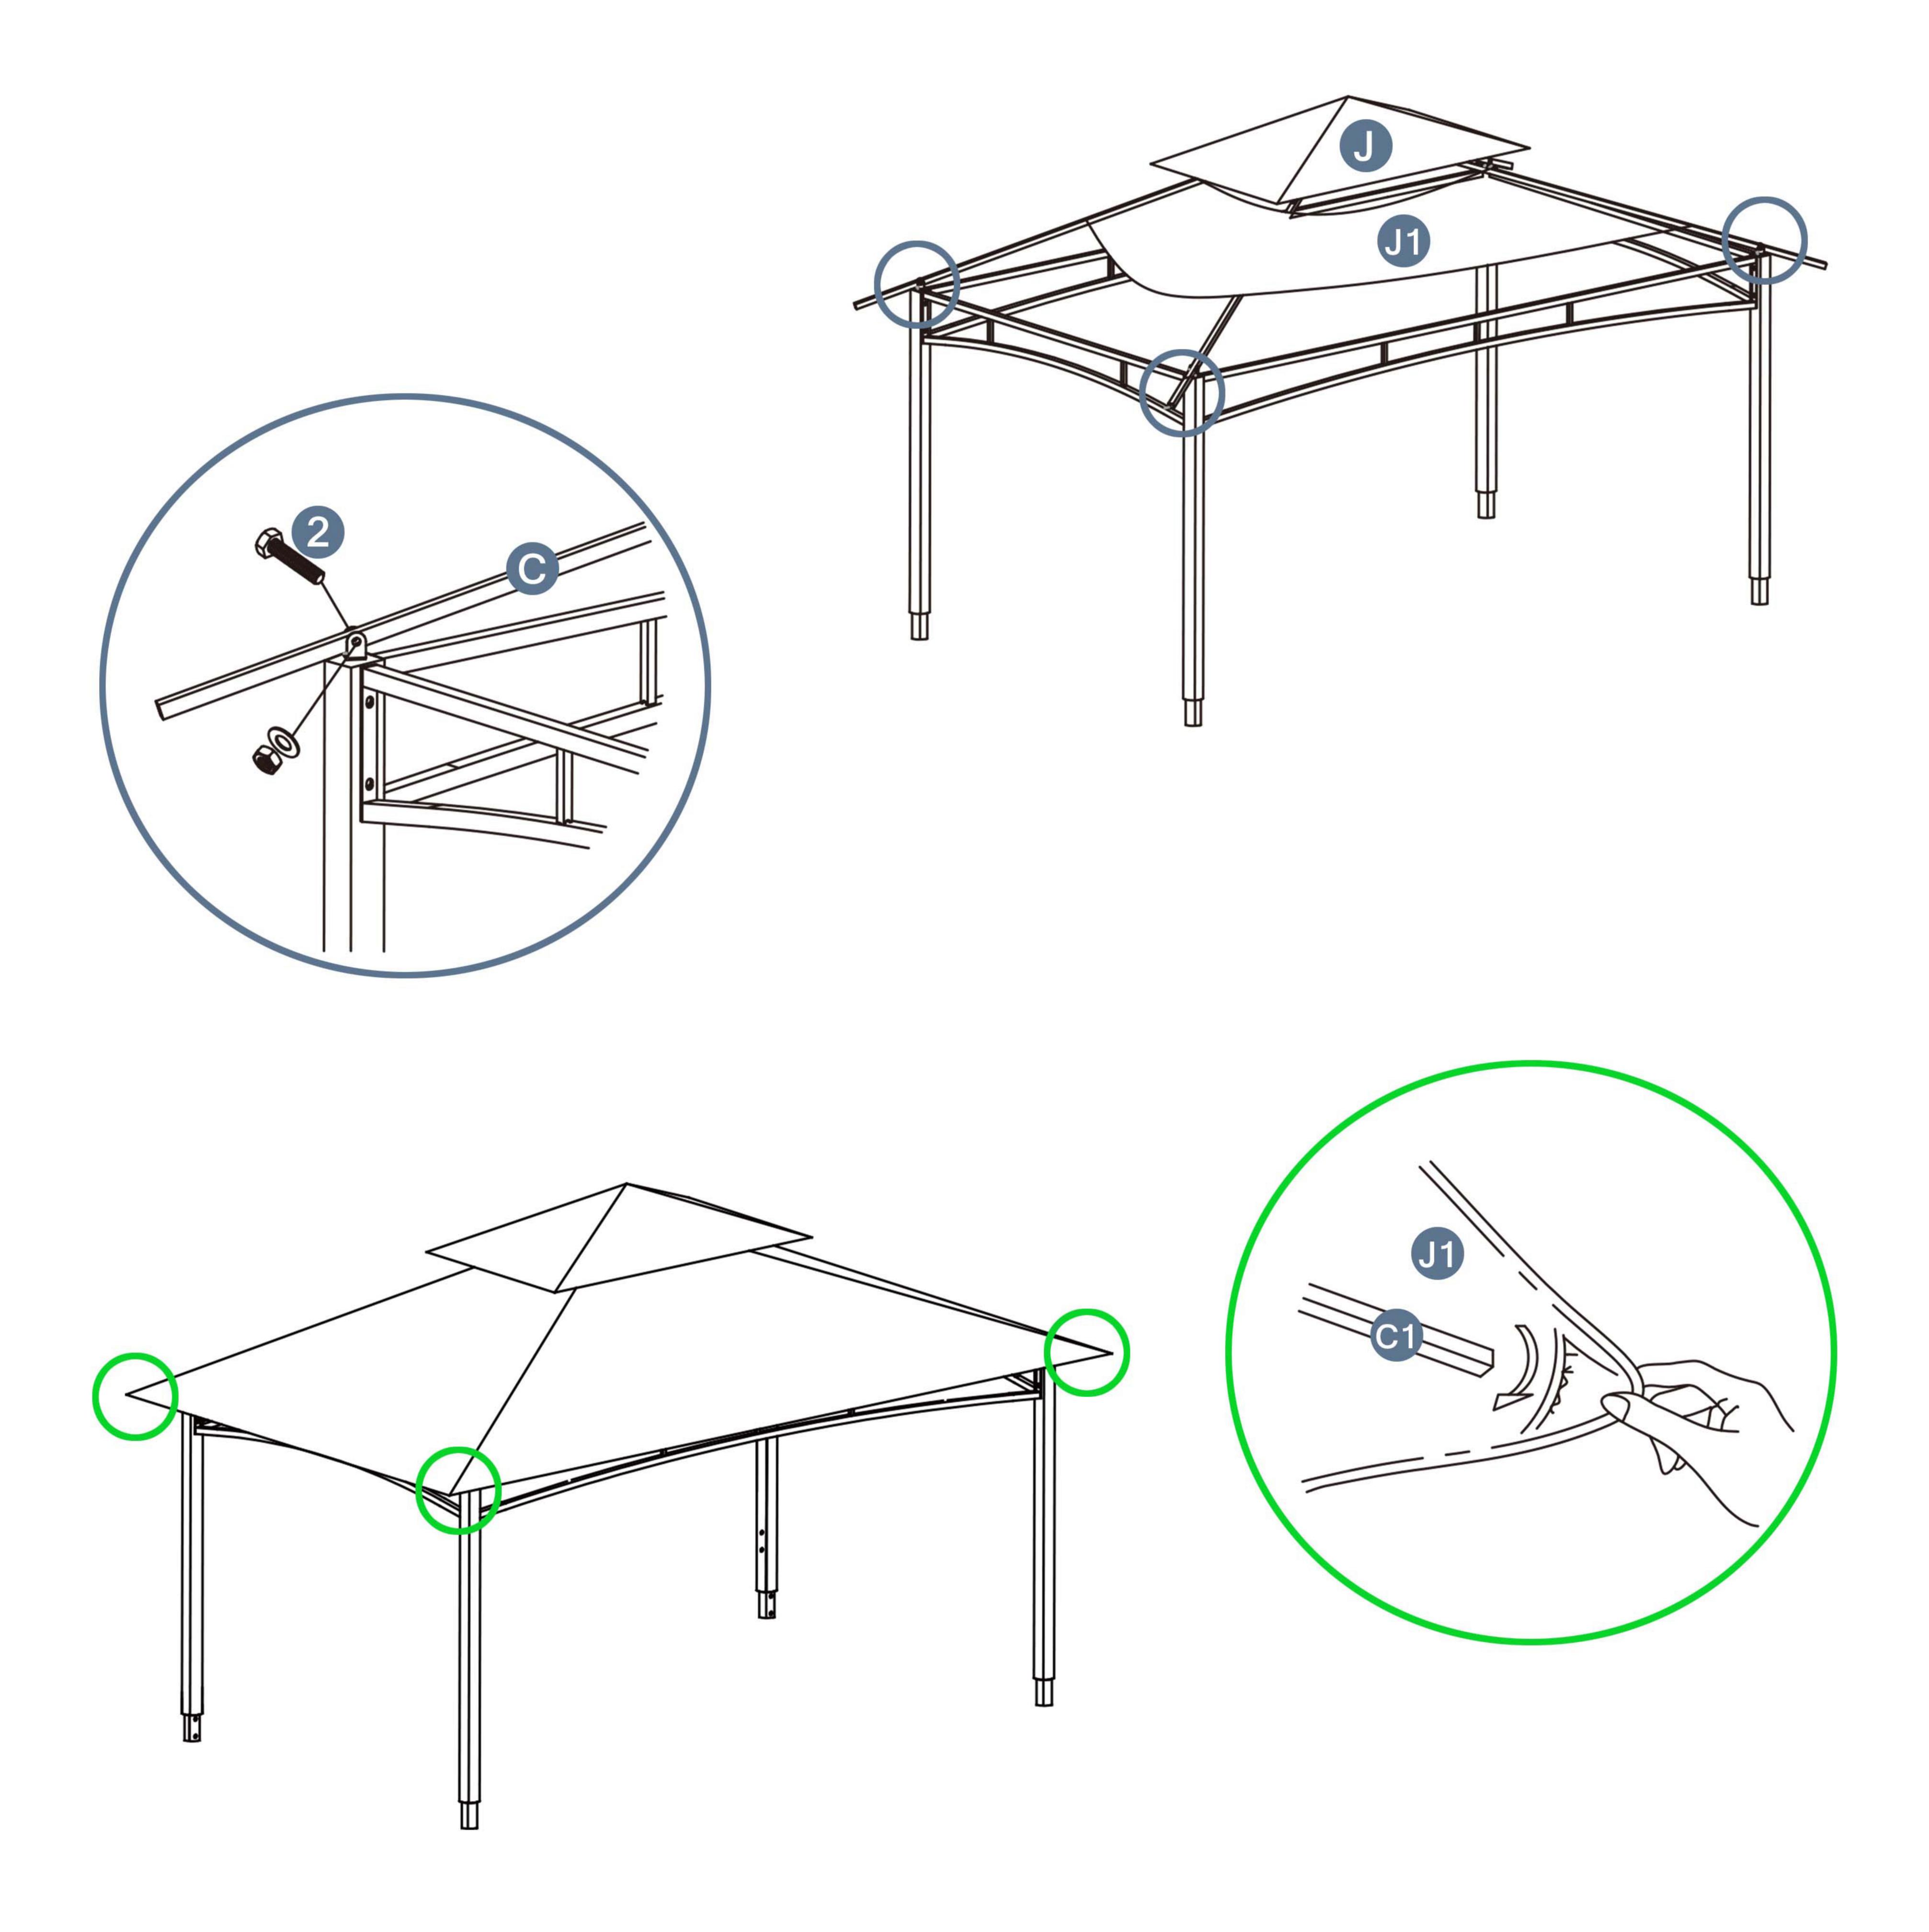









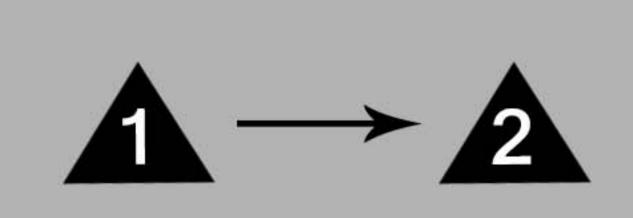

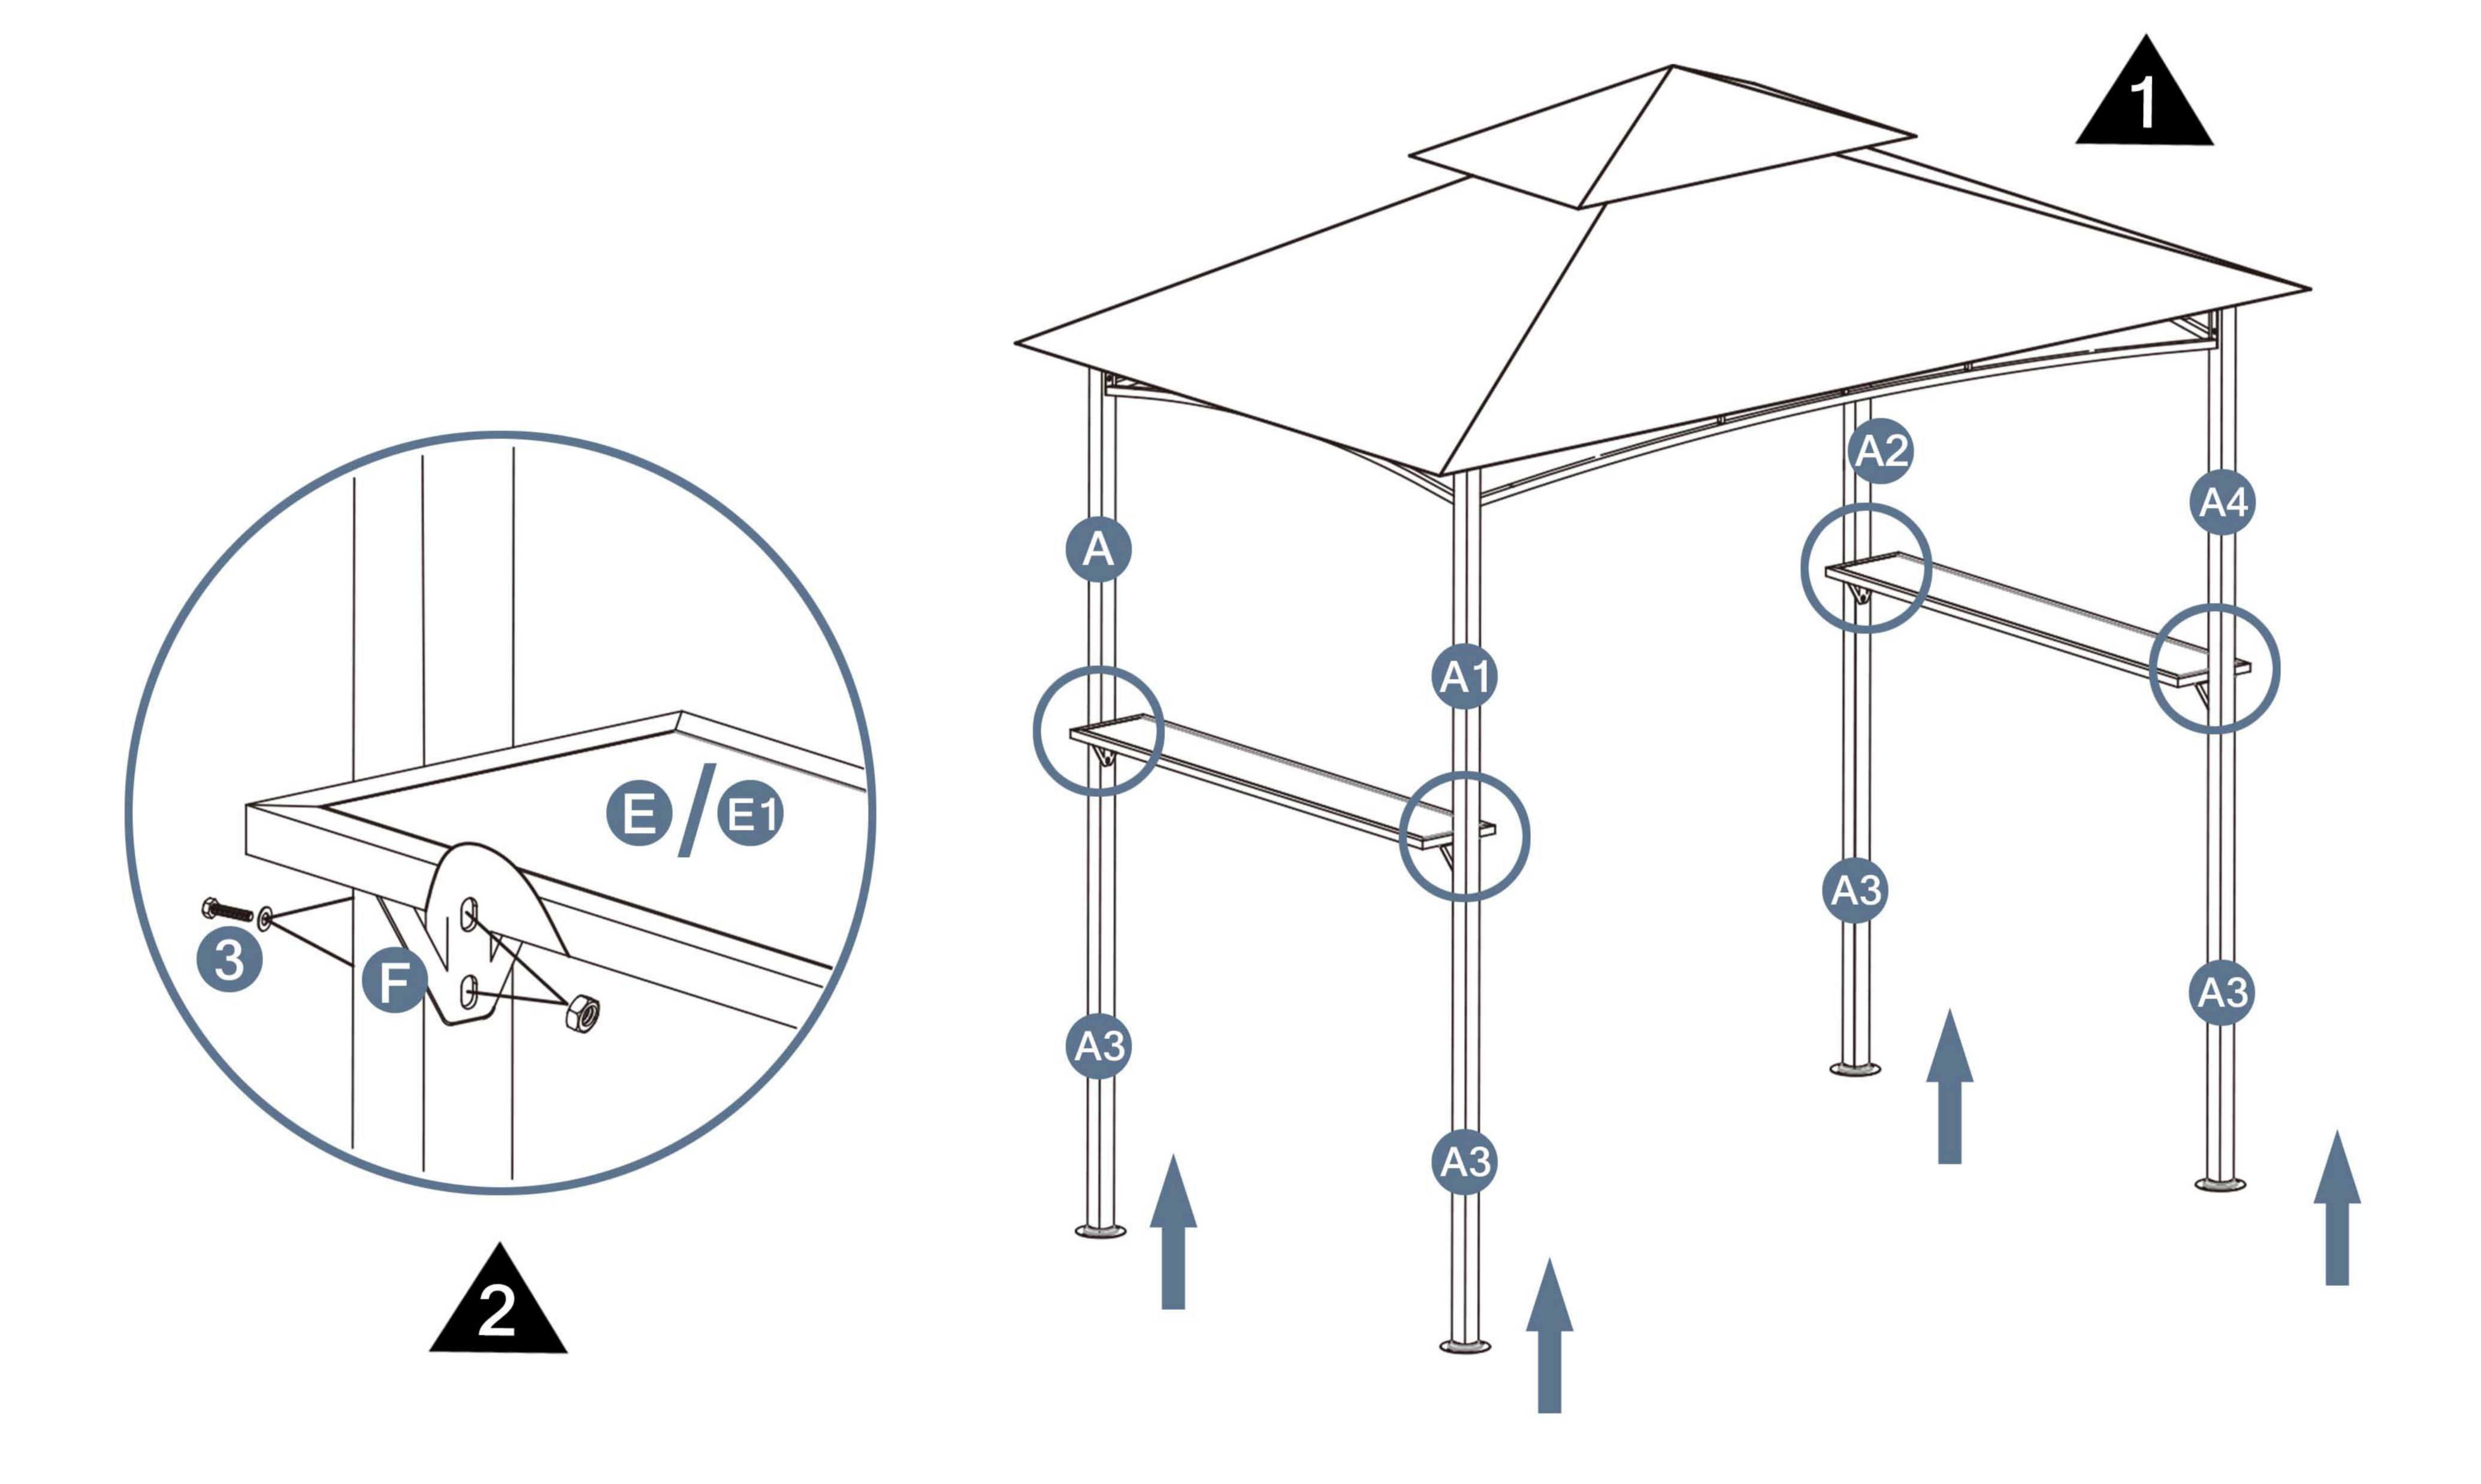


Install the A3 tubes at the four corners first.

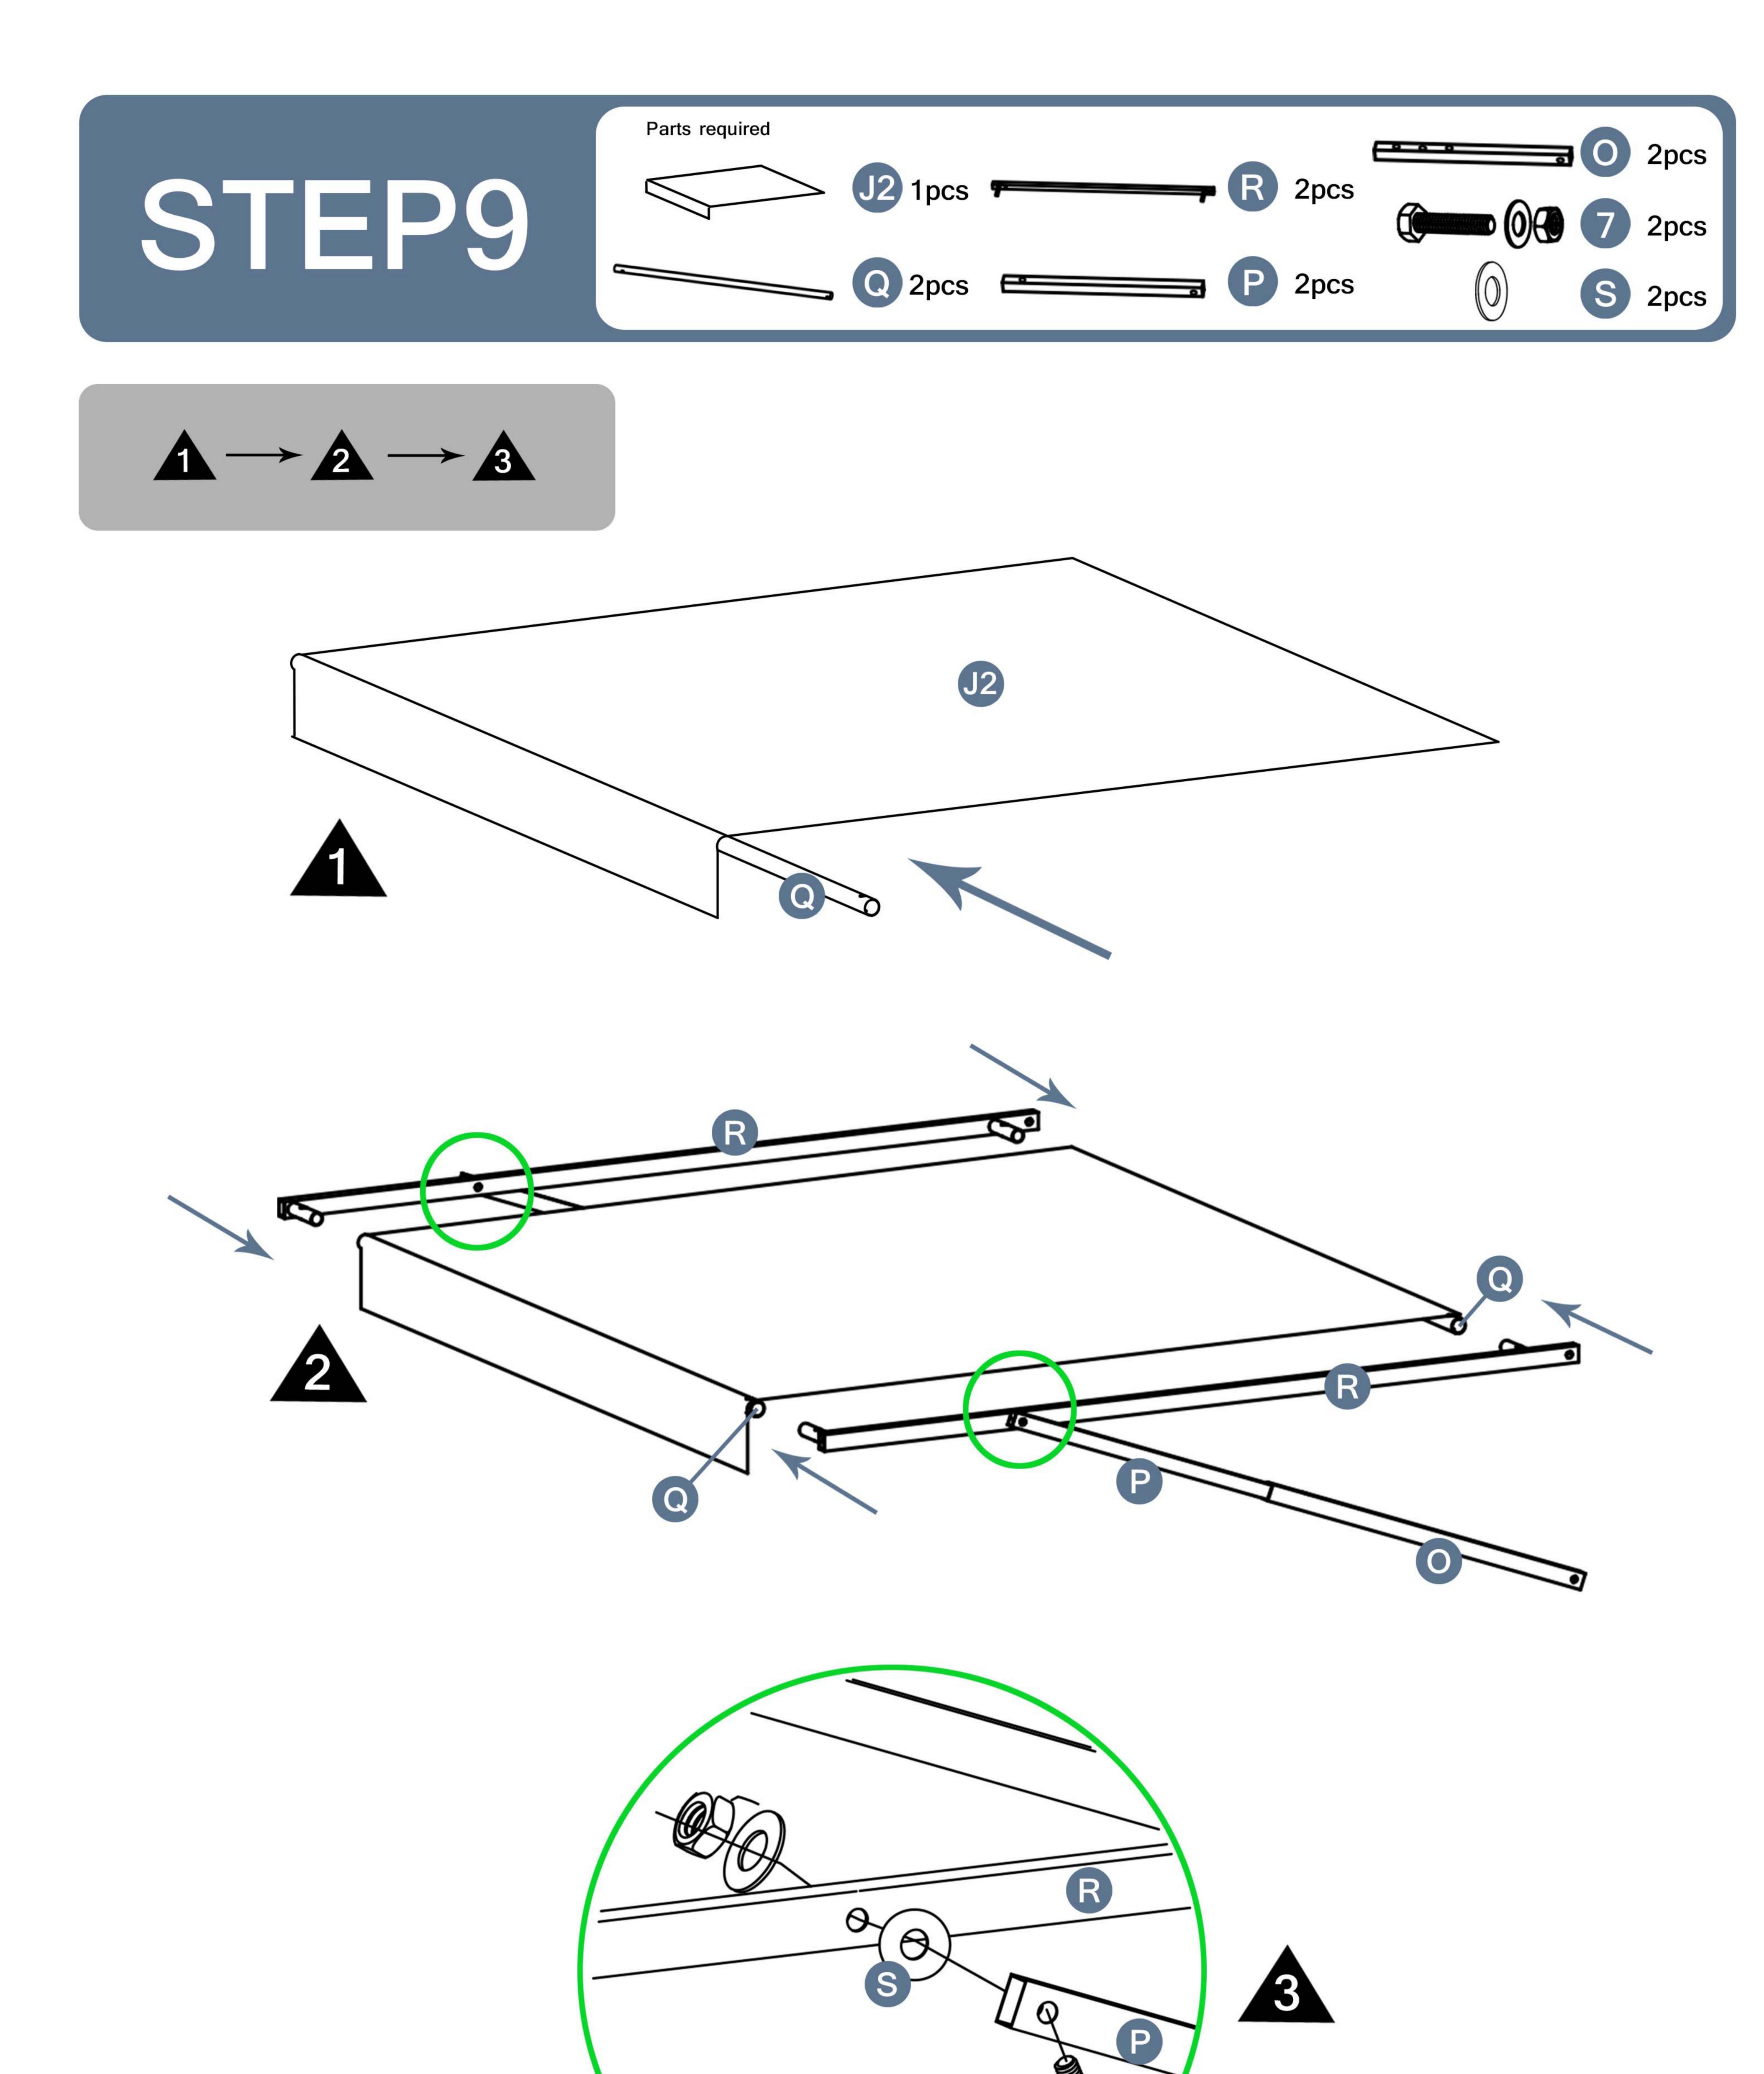






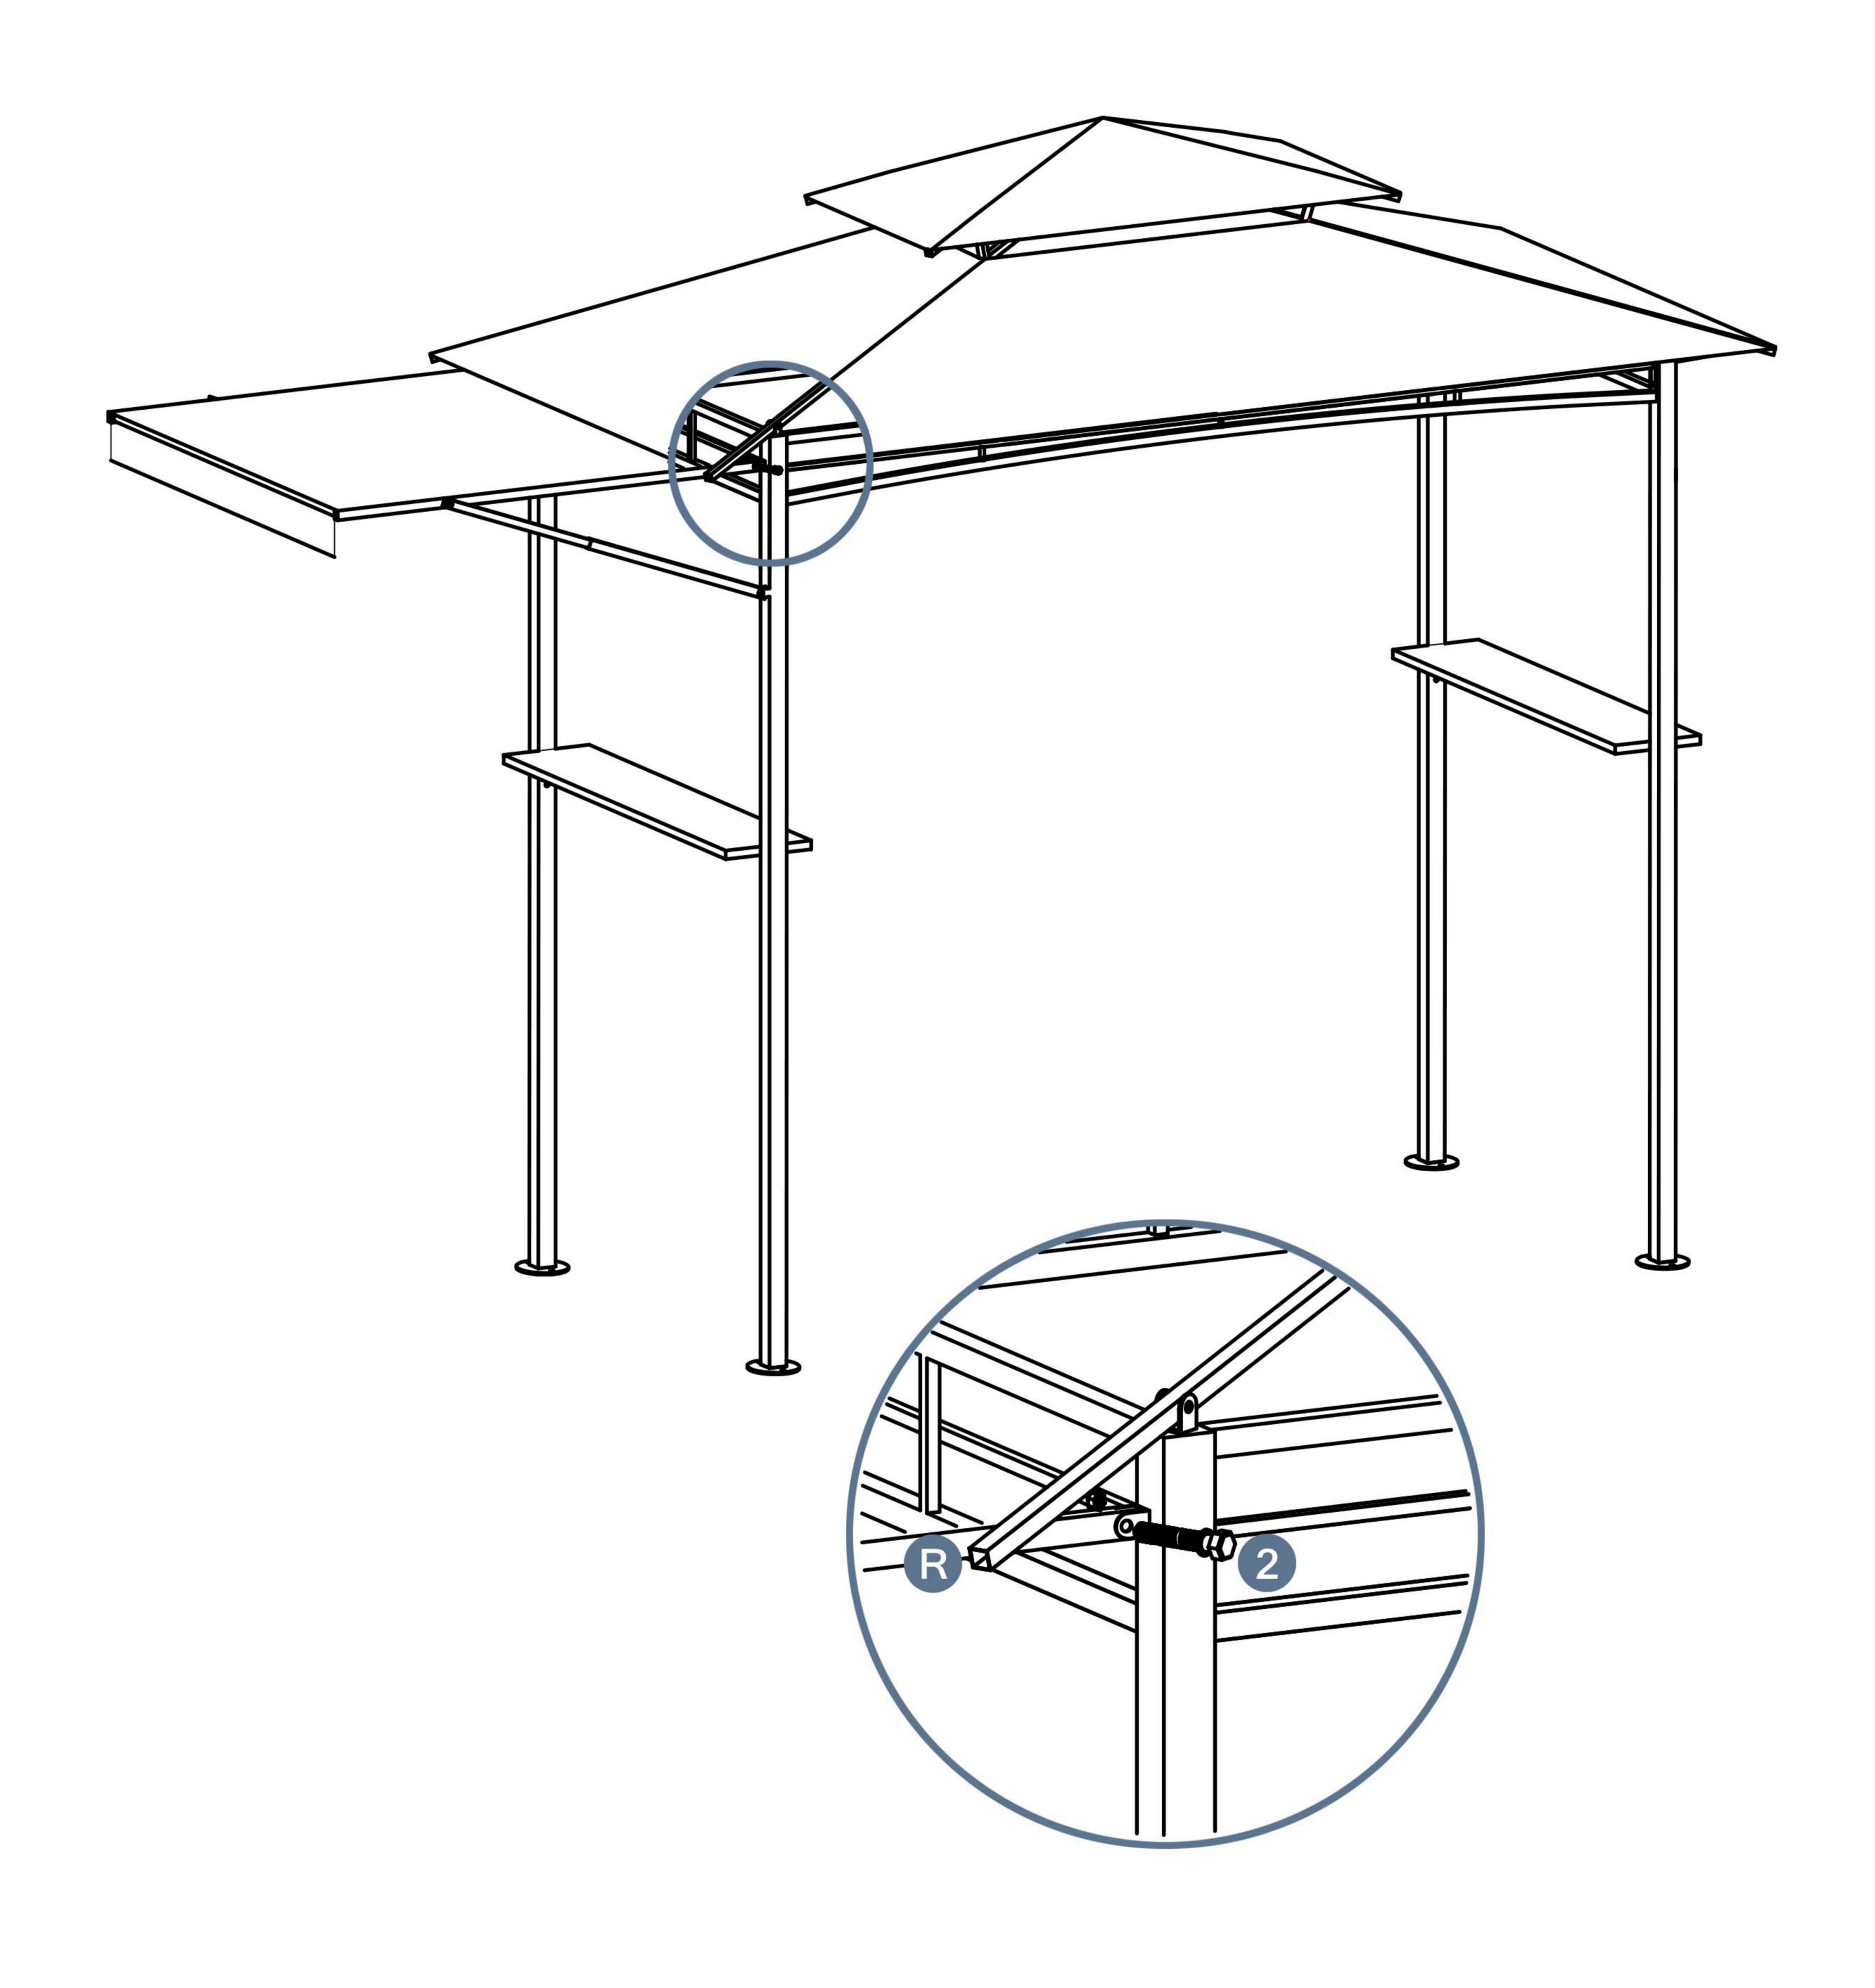

STEP11






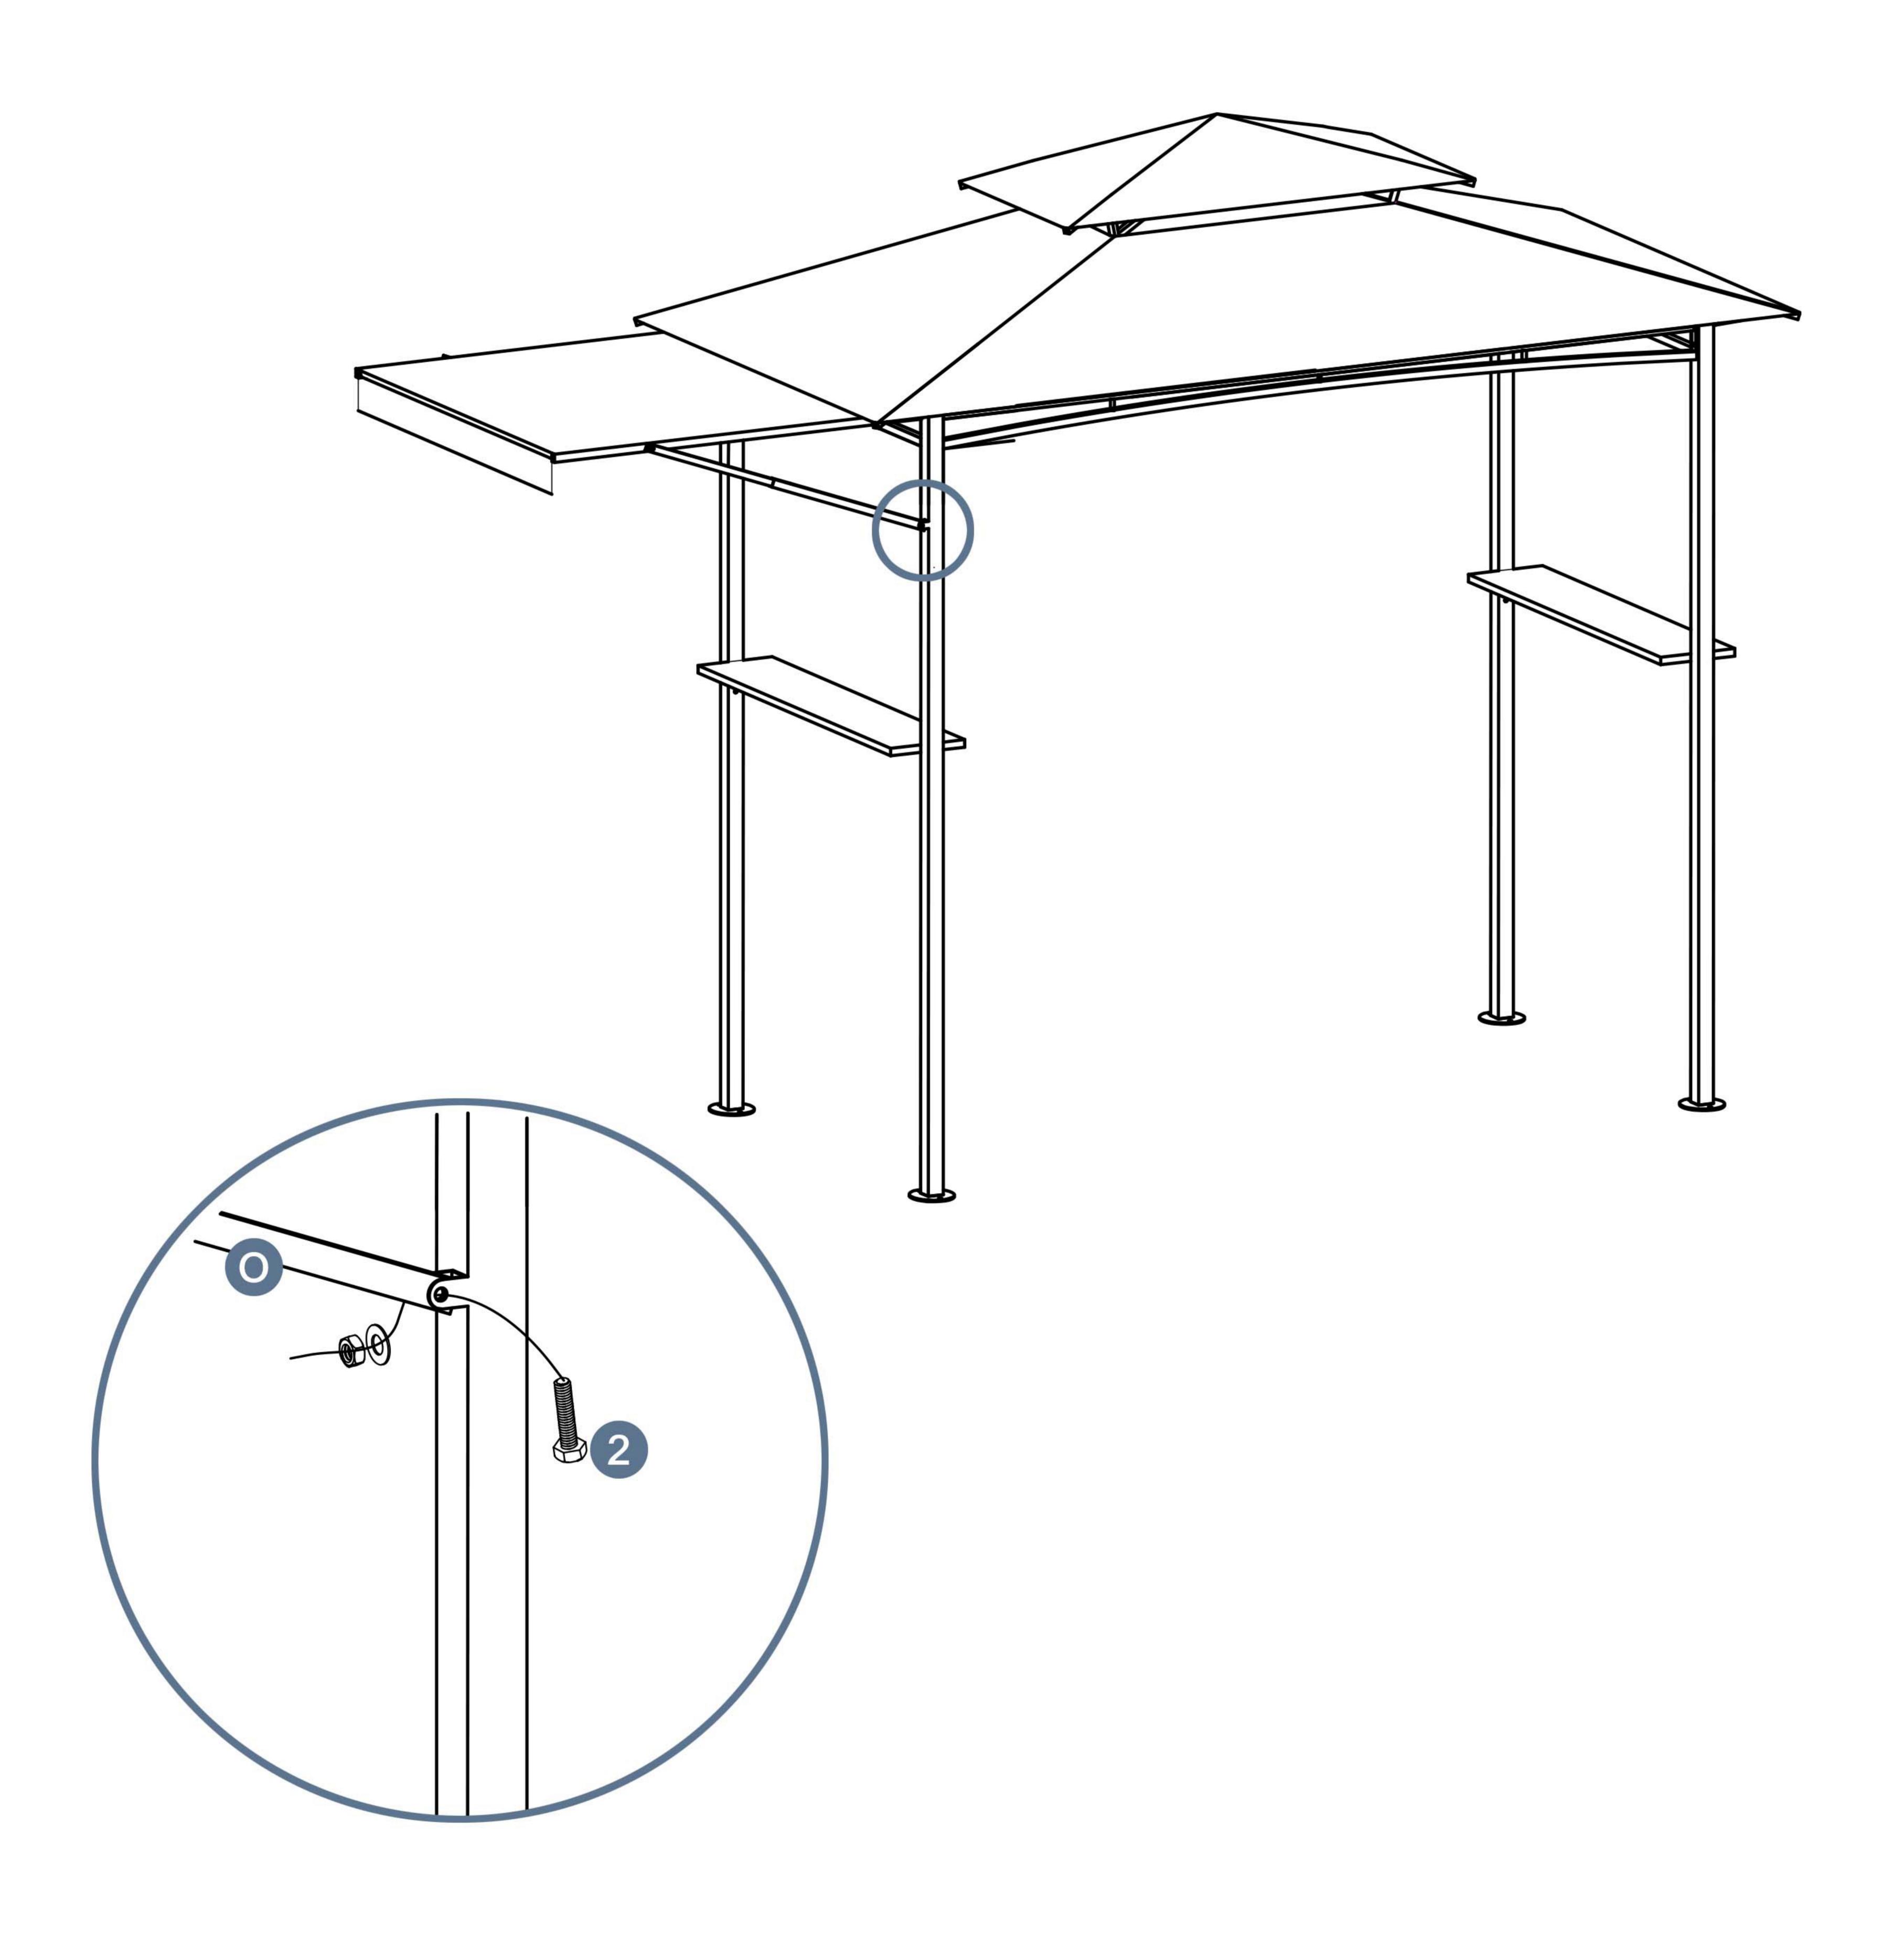




Parts required




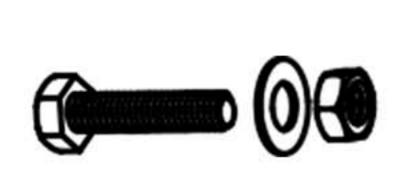






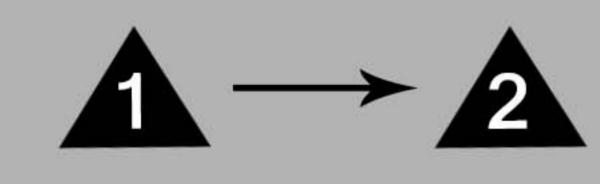

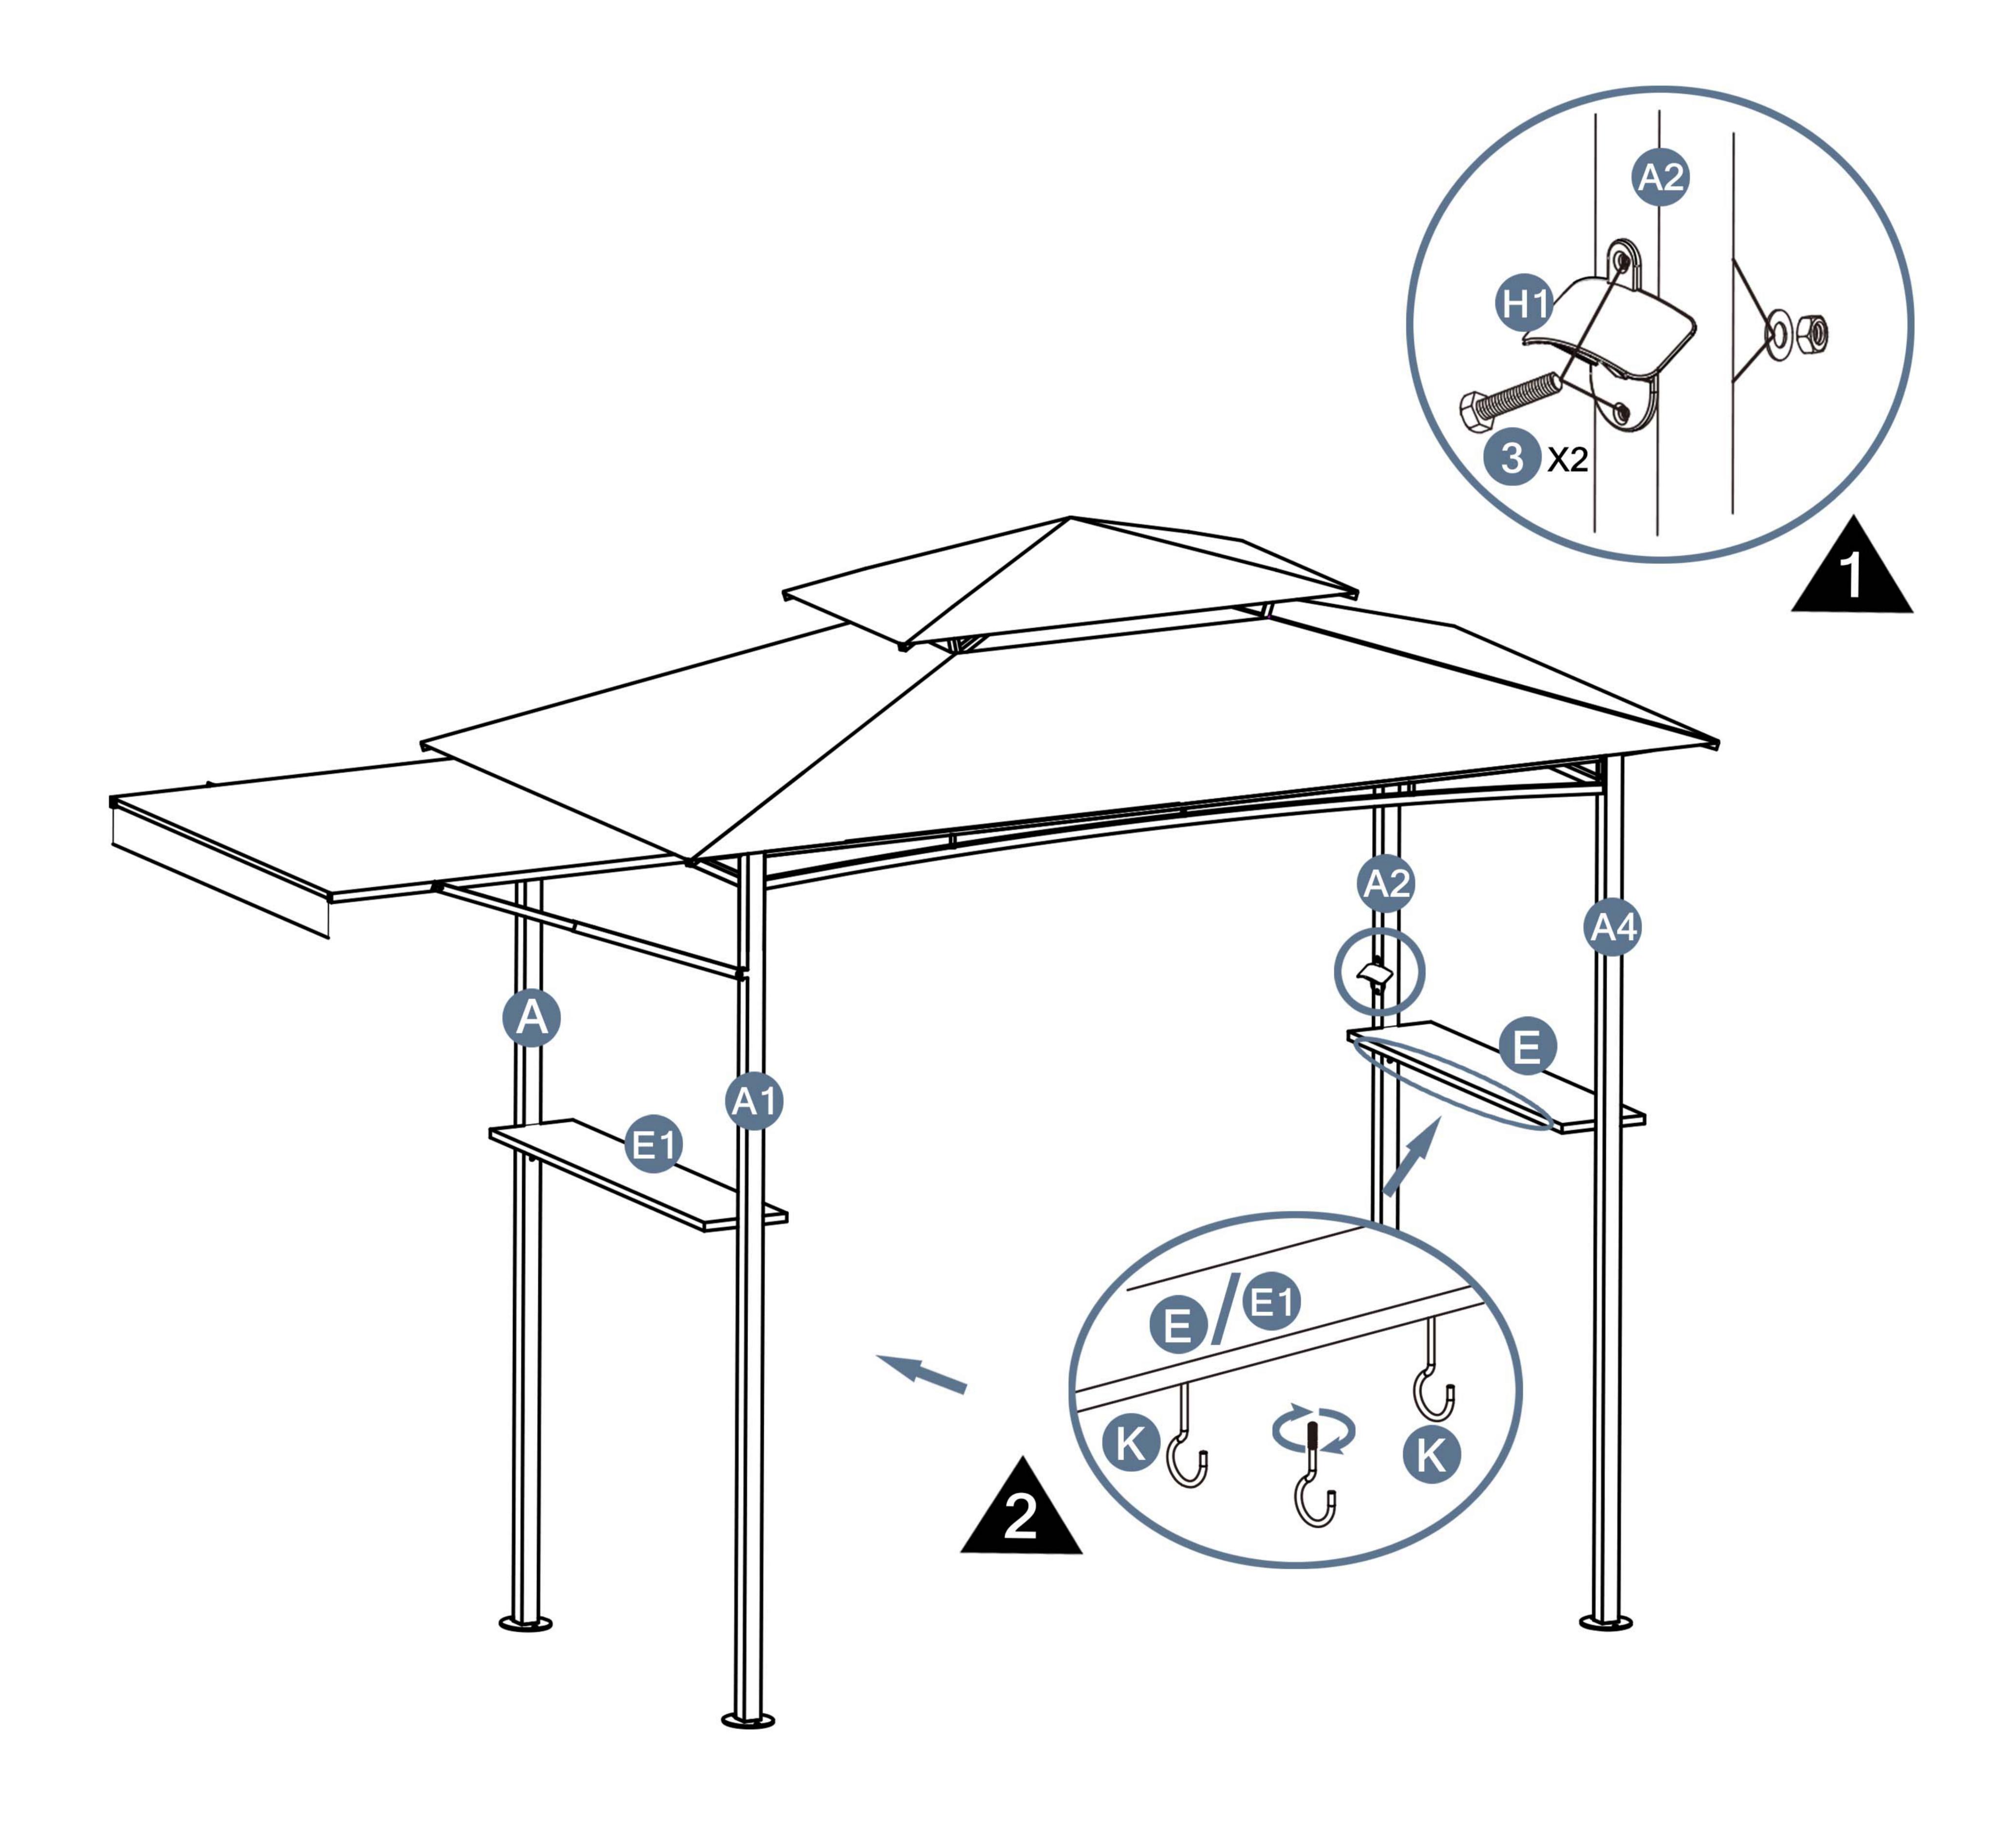

STEP13



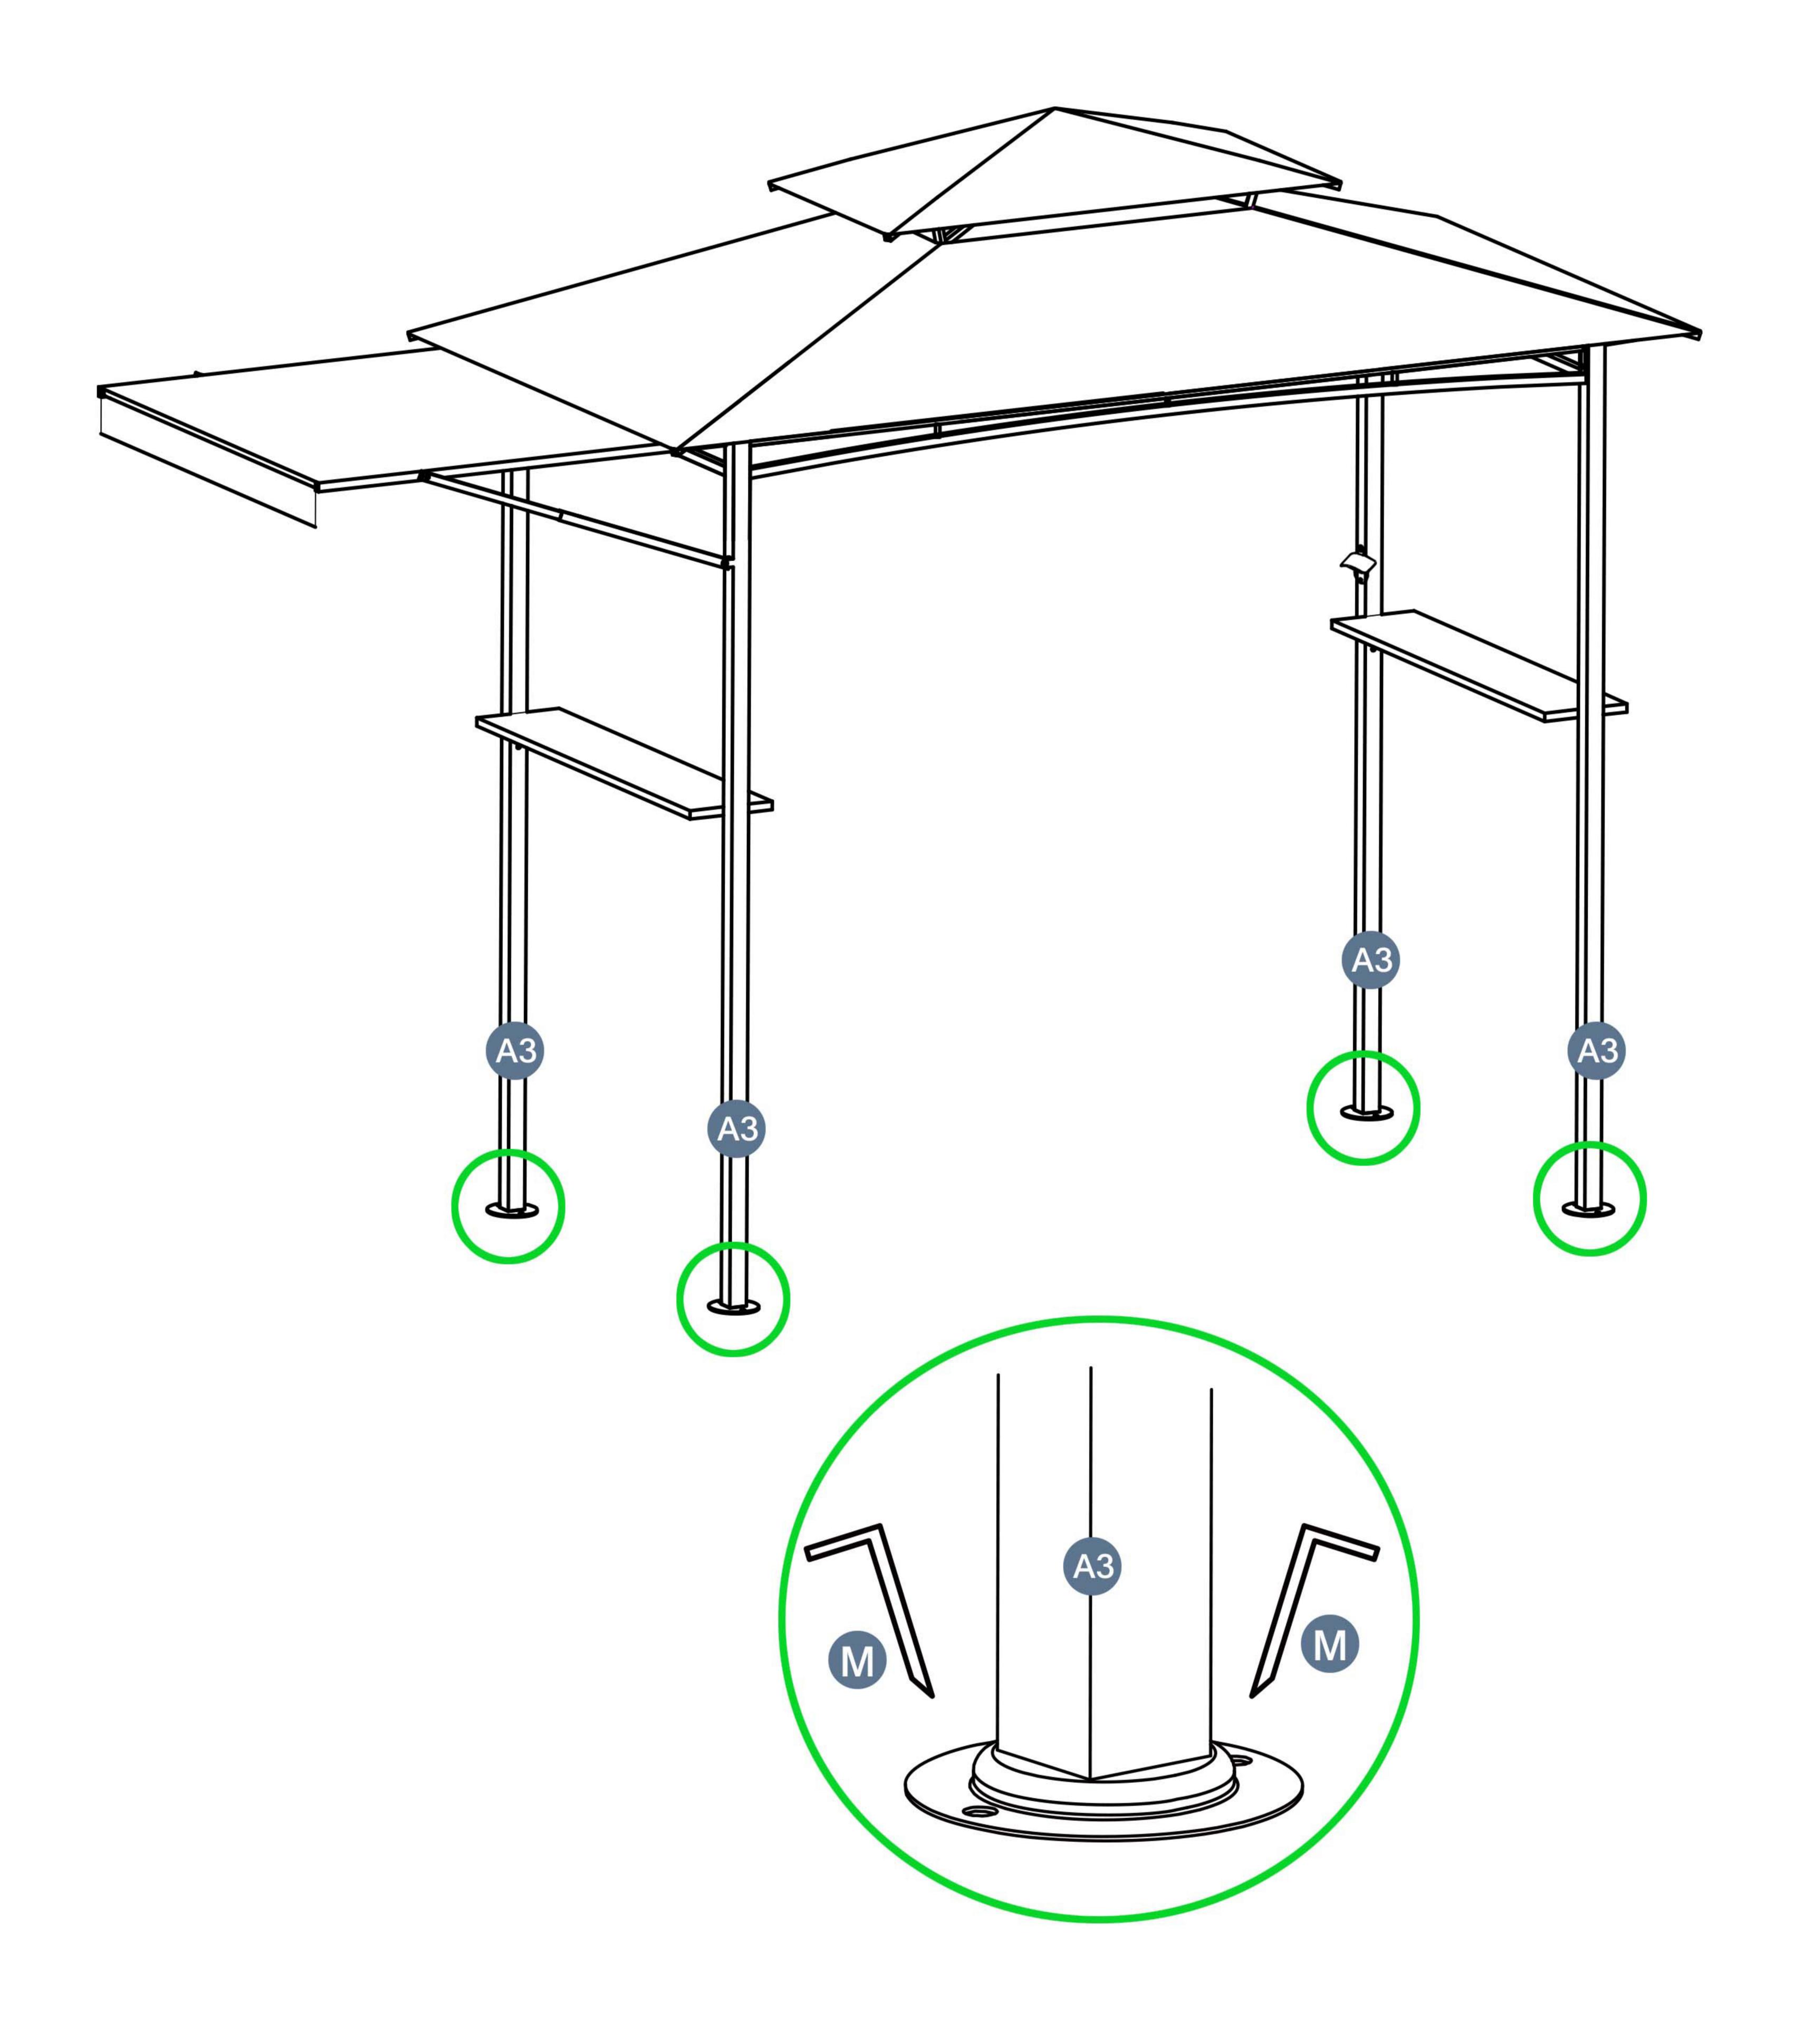

Hope you enjoy this product.

If you have any concerns about gazebo Installation, please feel free to contact us. We will reply within 24 hours.



E-mail: cs.helper01@gmail.com