


Assembly Instructions

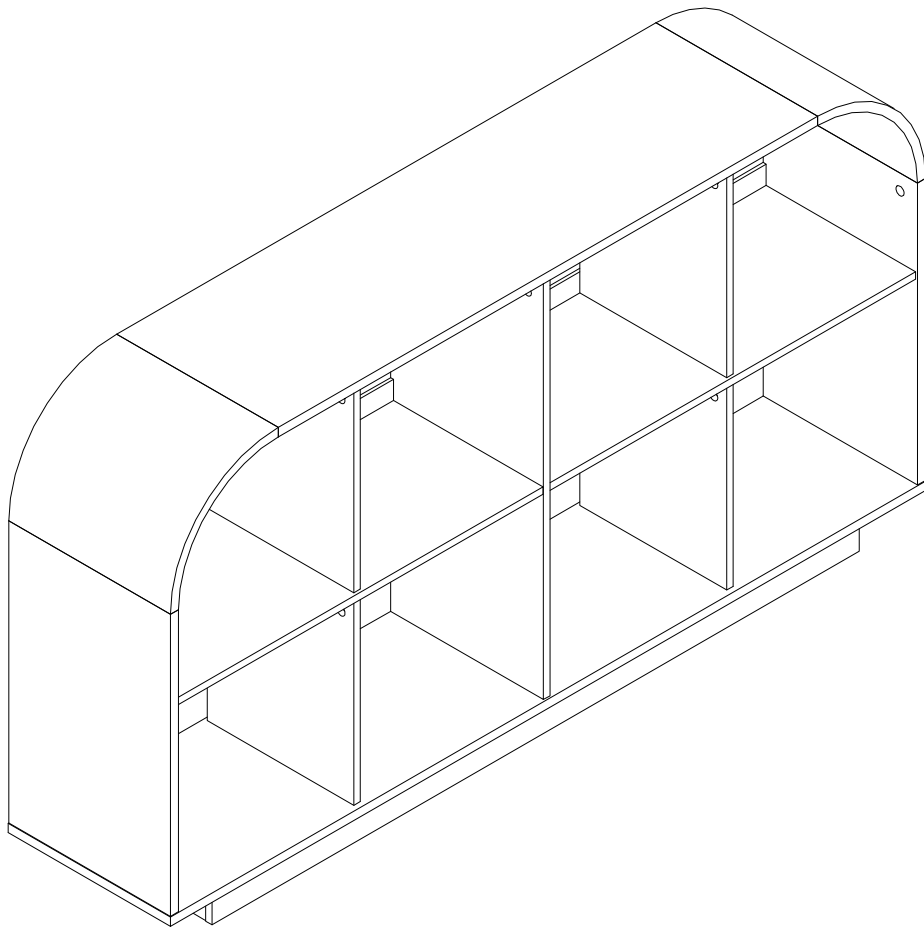

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

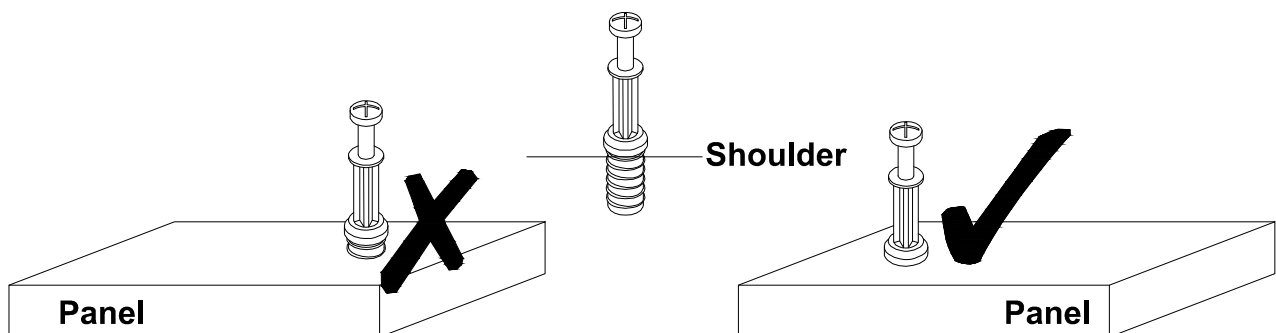


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

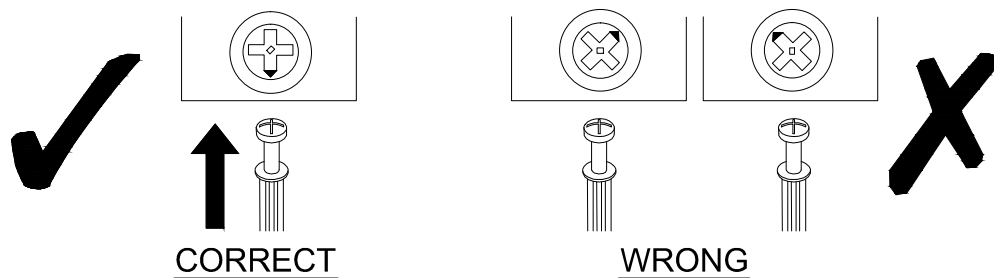


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

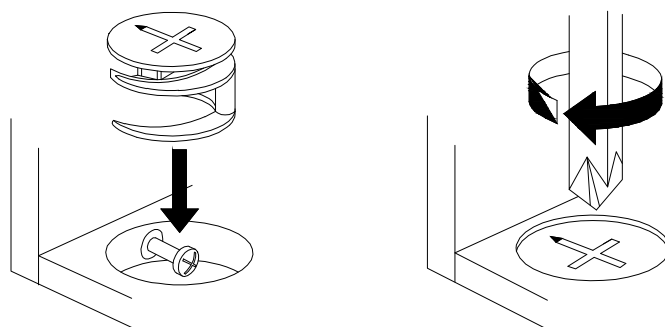

Turn cam lock clockwise to tighten.

Product structure






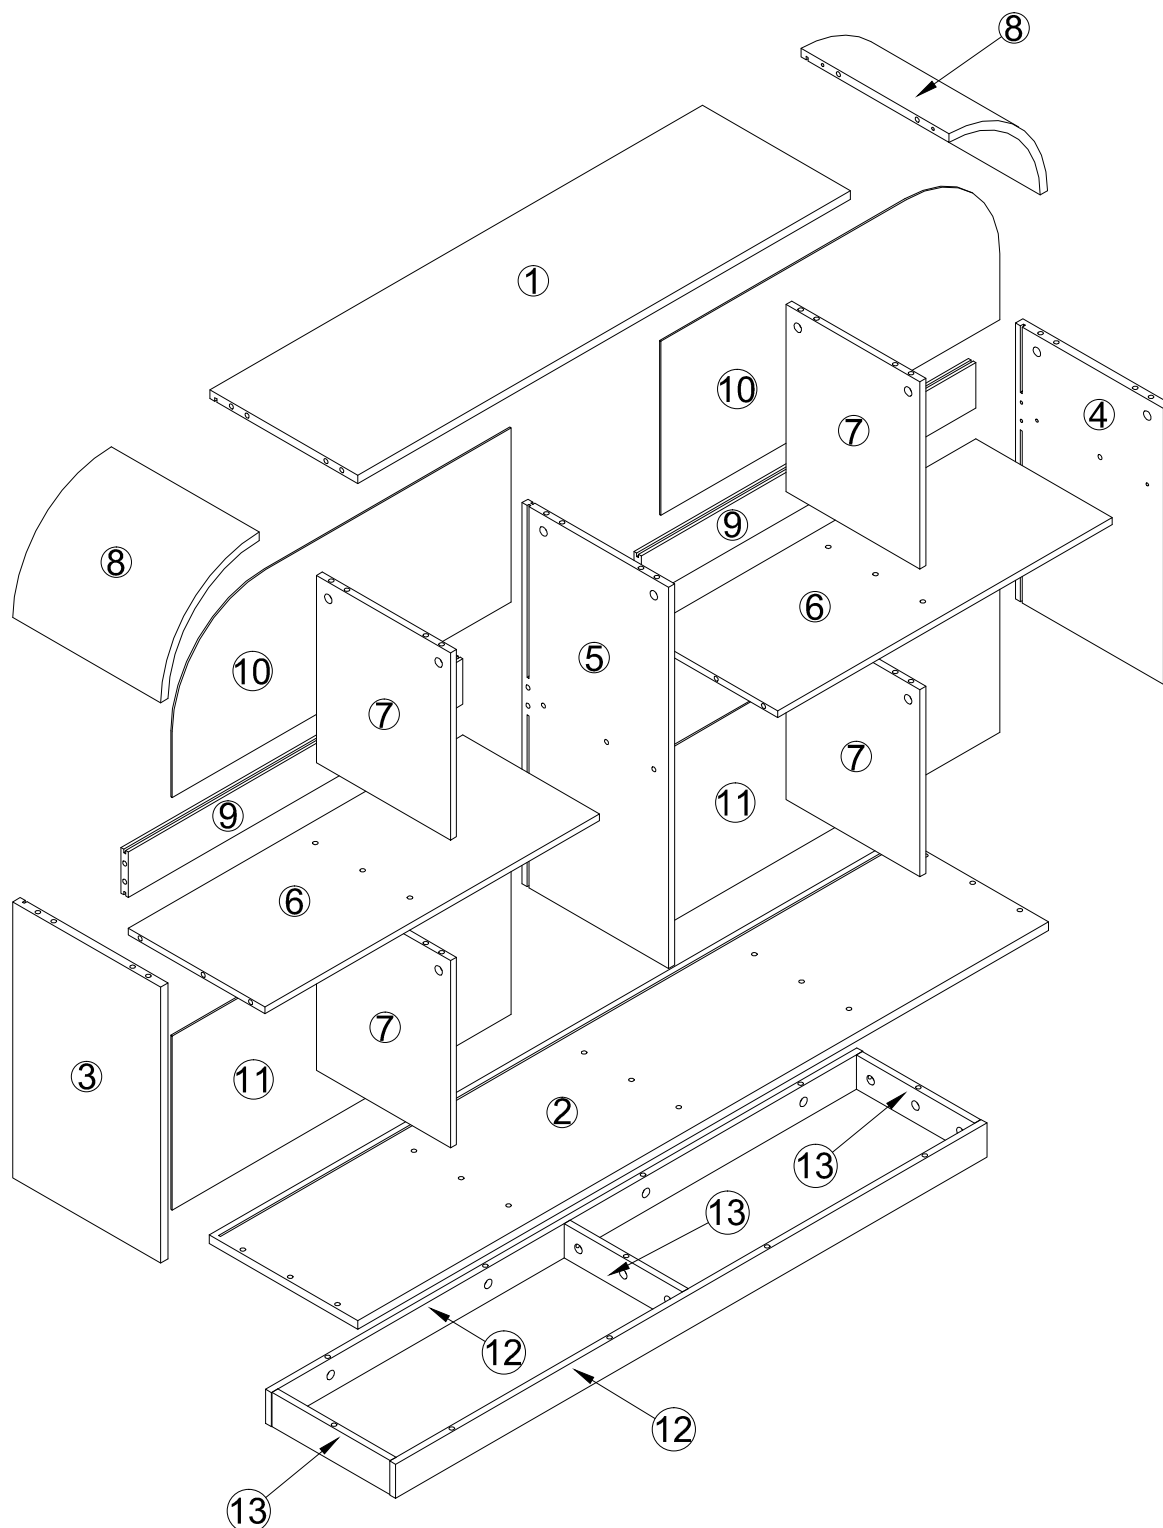


“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List




“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A Quantity:43 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:51 Pcs Cam φ15 	No. C Quantity:51 Pcs Sticker Ø20 	No. D Quantity:29 Pcs Dowel 8*30mm 
No. E Quantity:4 Pcs Double-ended rod 5*68mm 	No. F Quantity:14 Pcs Screw M6*40mm 	No. G Quantity:16 Sets Plastic Wedge 	No. H Quantity:1 Pc Allen Key 4# 
No. I Quantity:6 Pcs Foot Pad Ø12 	No. J Quantity:2 Sets Anti-falling Parts 		

STEP 1

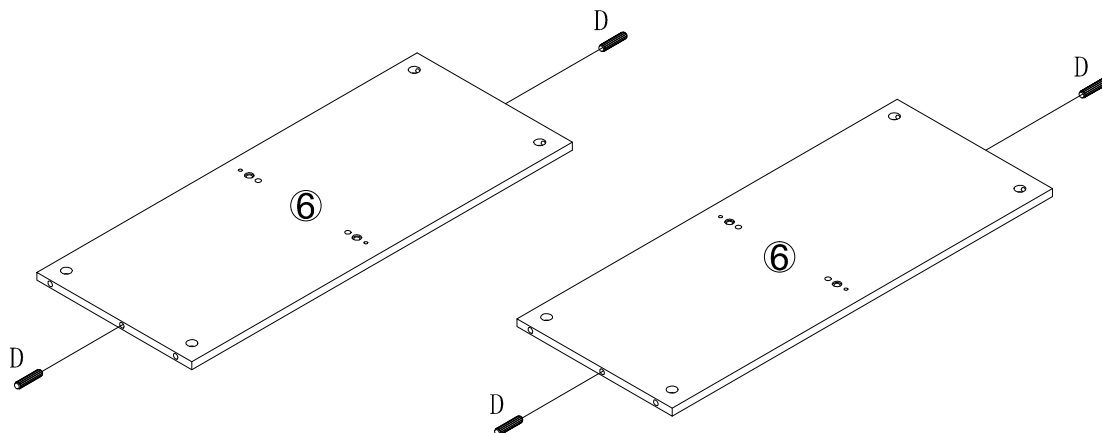


No. D
Quantity: 4 Pcs
8*30mm



Please note that the wooden dowel is inserted into the panel first here.

STEP 2

Please pay attention to the orientation during installation; the lock handle hole should be on the upper back.

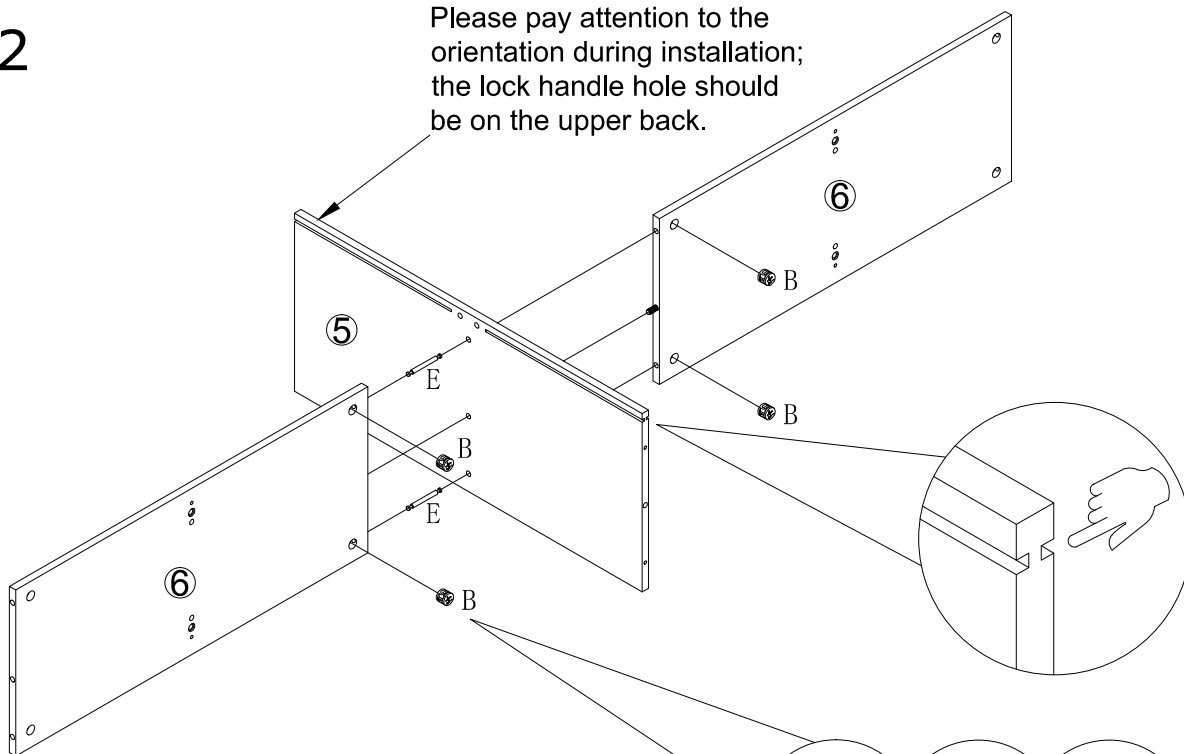



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. E
Quantity: 2 Pcs
5*68mm

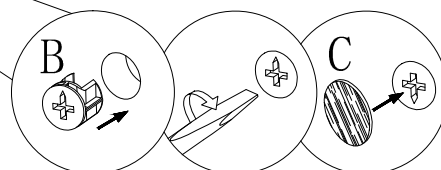

STEP 3

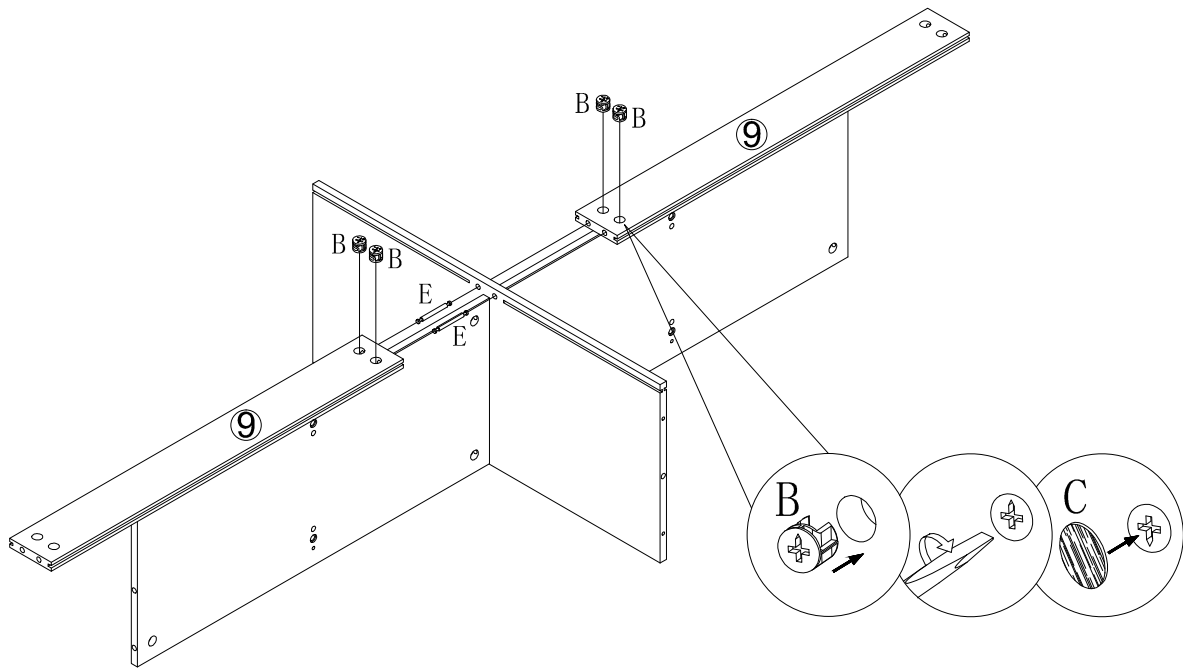


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. E
Quantity: 2 Pcs
5*68mm




STEP 4

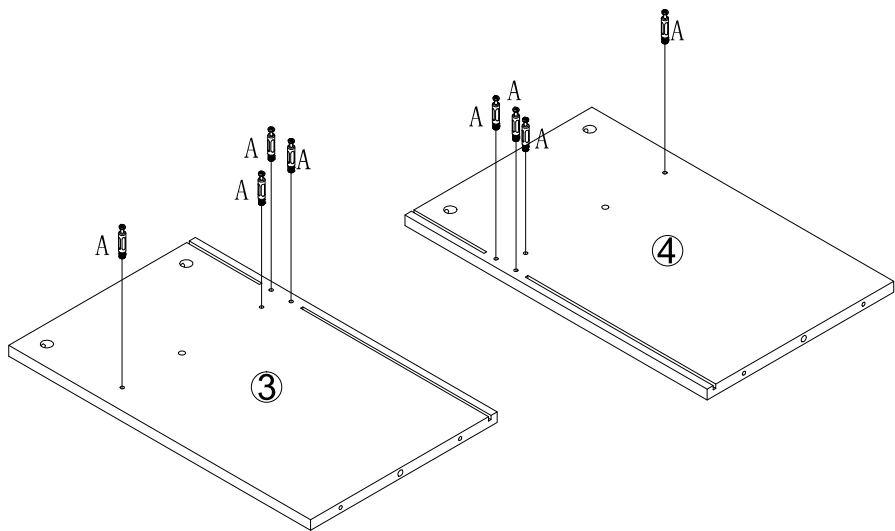

No. A
Quantity: 8 Pcs
8*28 mm



STEP 5

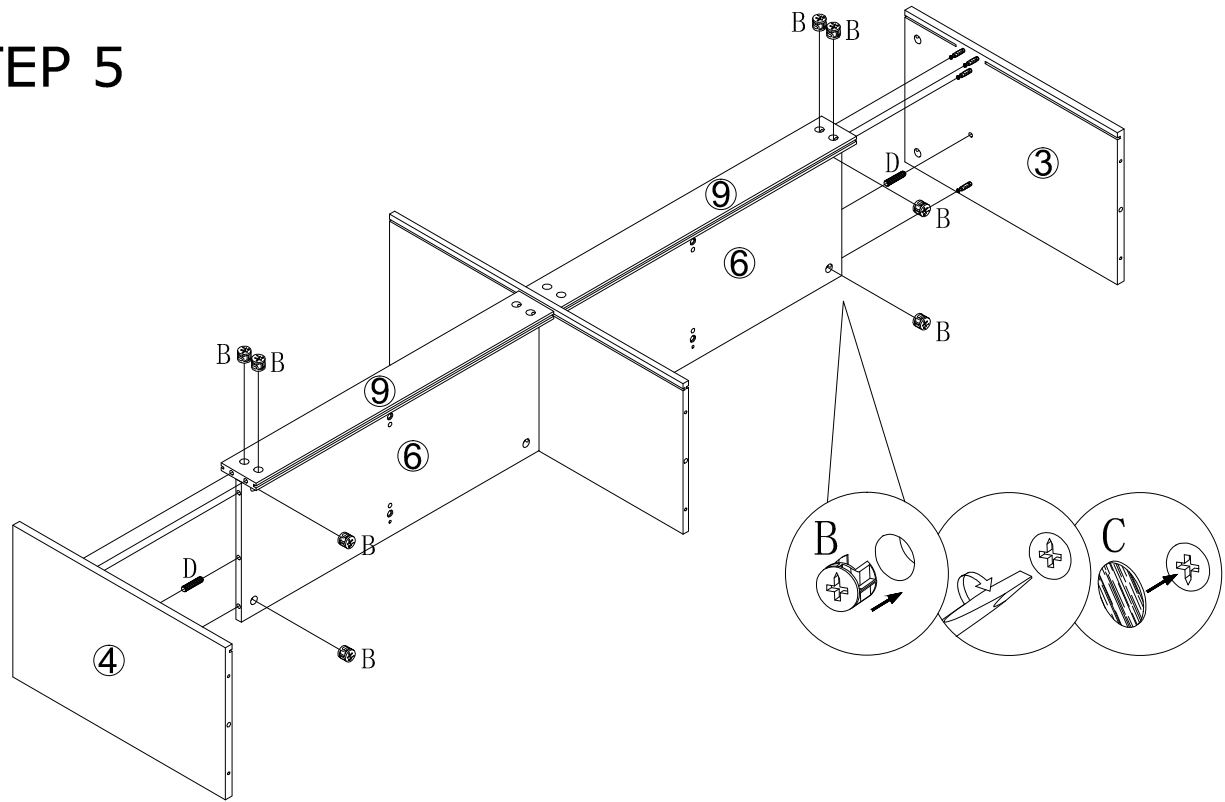


No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20



STEP 6

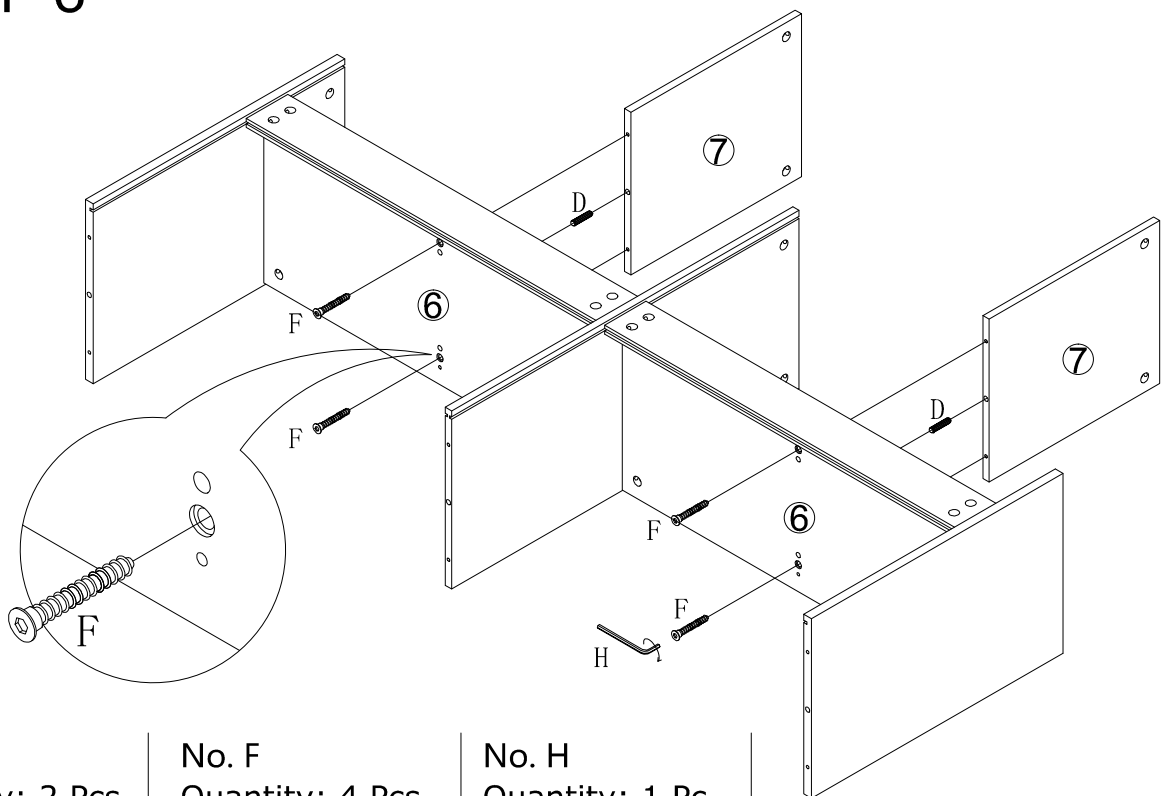


No. D
Quantity: 2 Pcs
8*30mm




No. F
Quantity: 4 Pcs
M6*40mm




No. H
Quantity: 1 Pc
4#




STEP 7

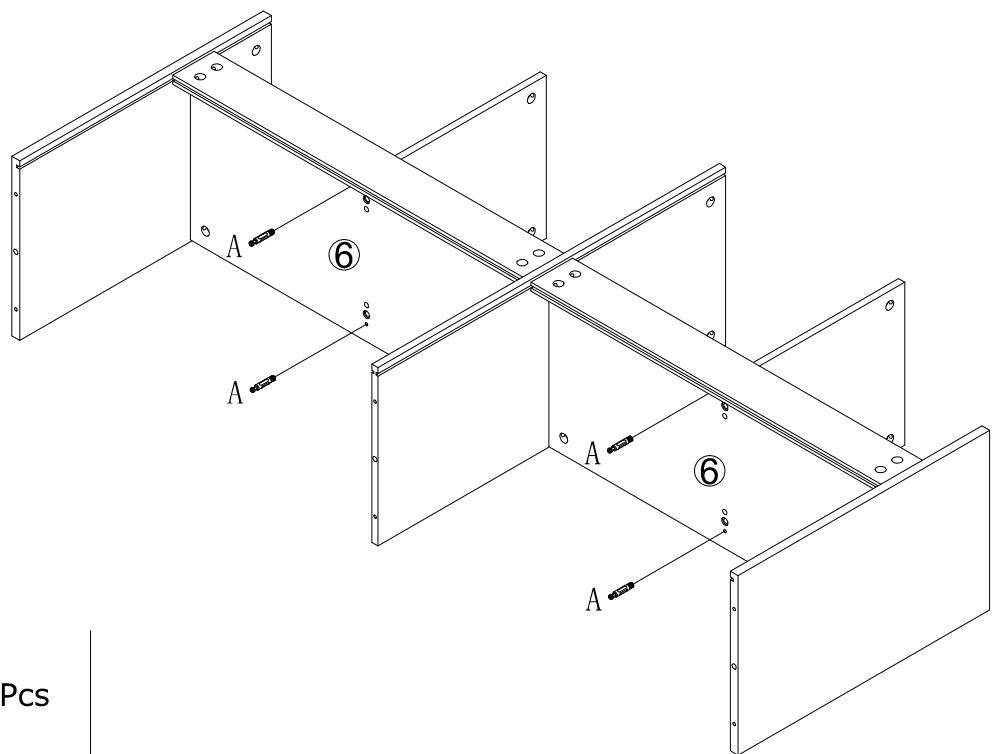

No. A
Quantity: 4 Pcs
8*28 mm



STEP 8

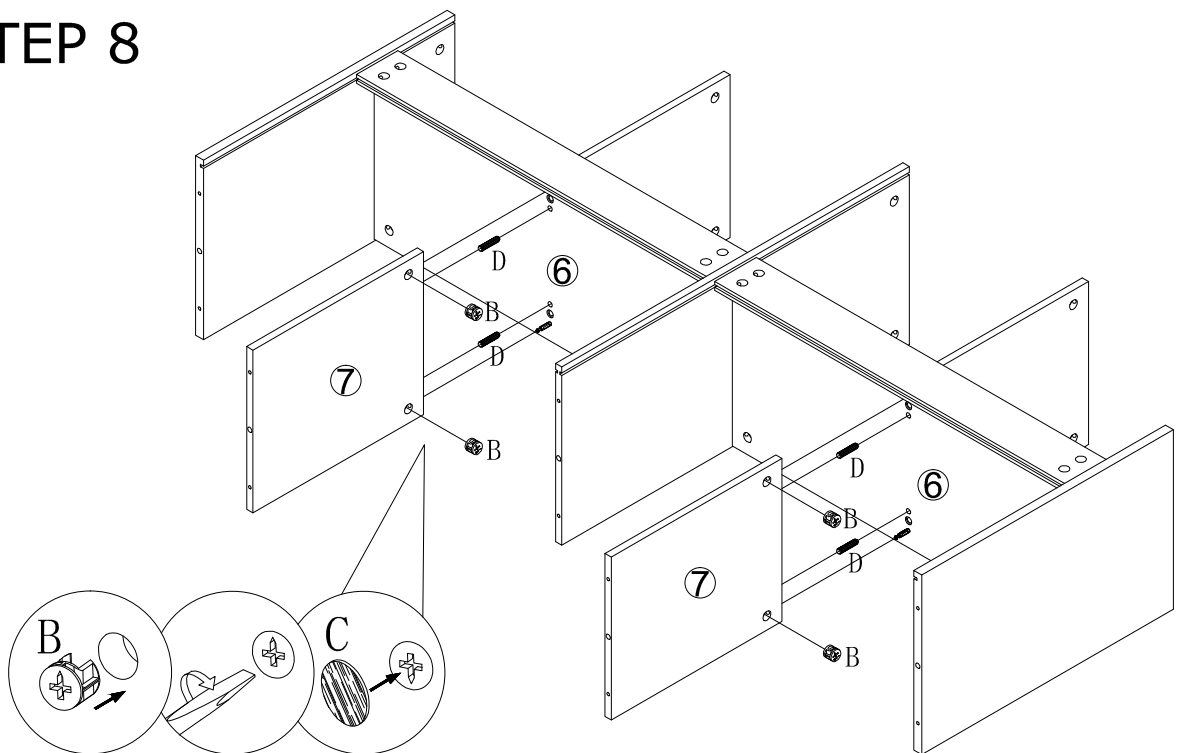


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm




STEP 9

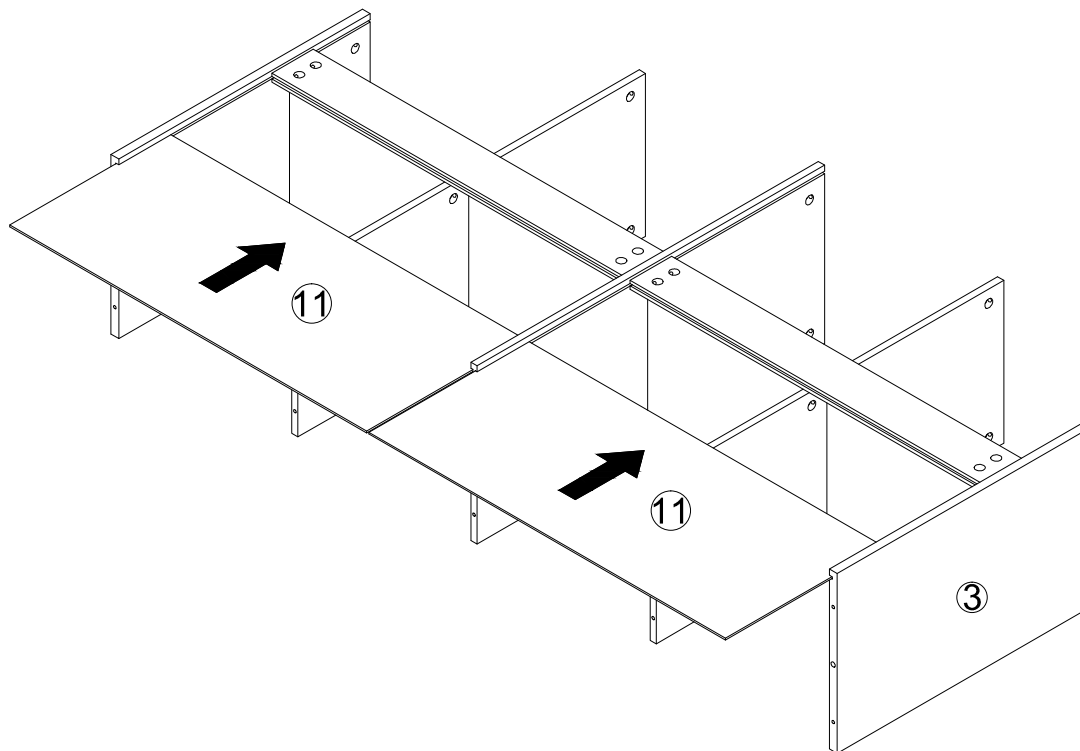

STEP 10


No. D
Quantity: 5 Pcs
8*30mm




No. F
Quantity: 10 Pcs
M6*40mm




No. H
Quantity: 1 Pc
4#

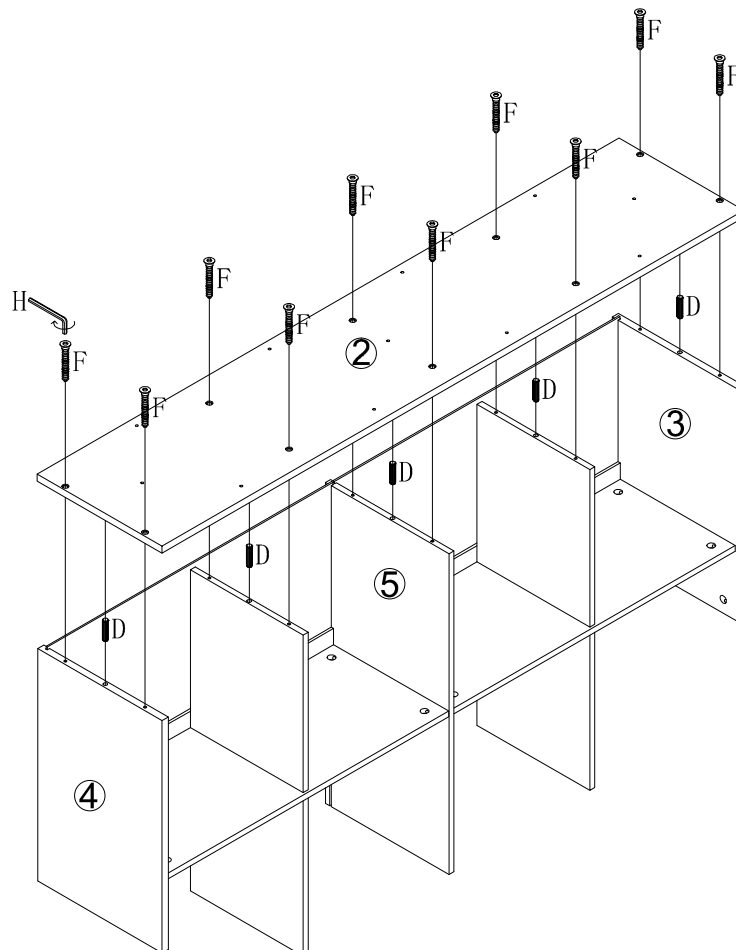


STEP 11

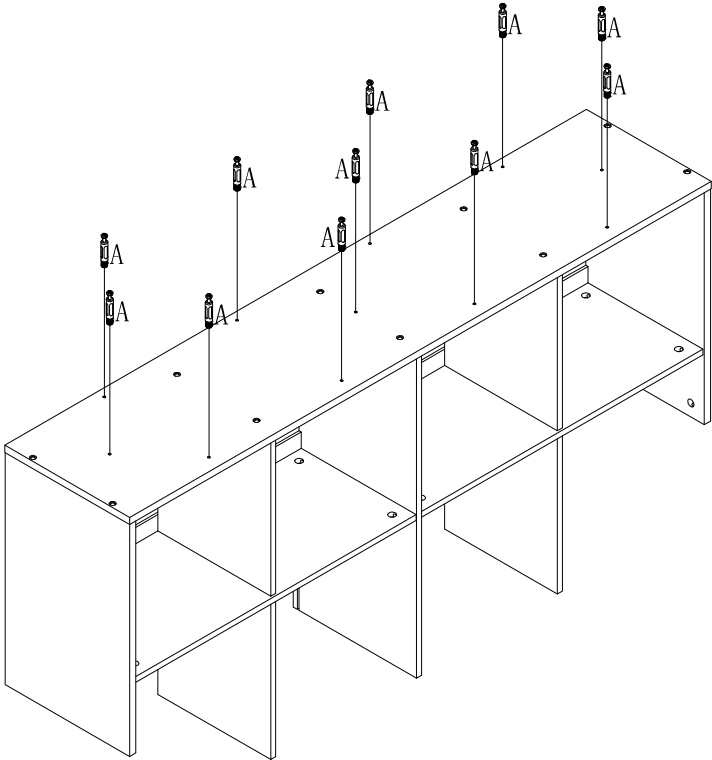


No. A
Quantity: 11 Pcs
8*28 mm




STEP 12

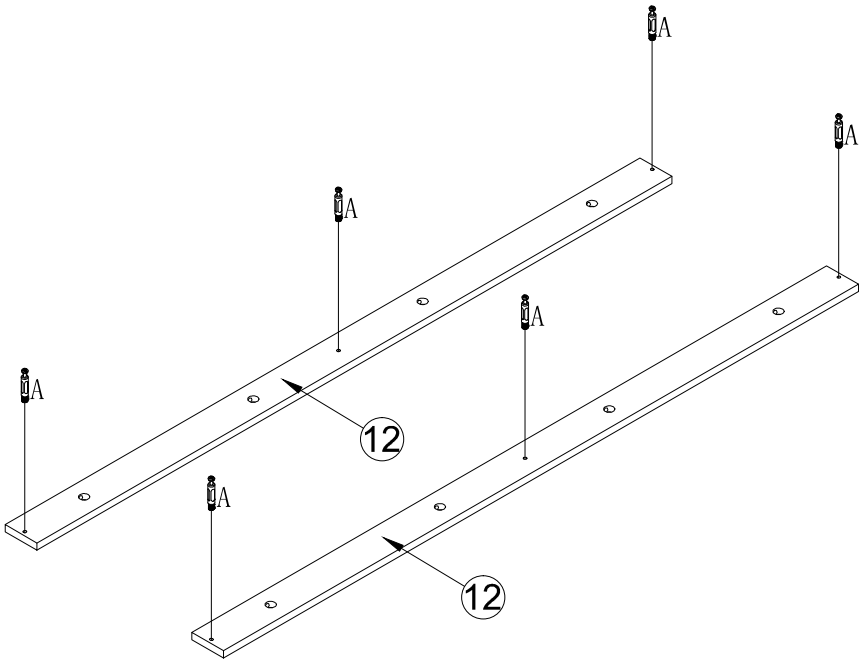

No. A
Quantity: 6 Pcs
8*28 mm



STEP 13

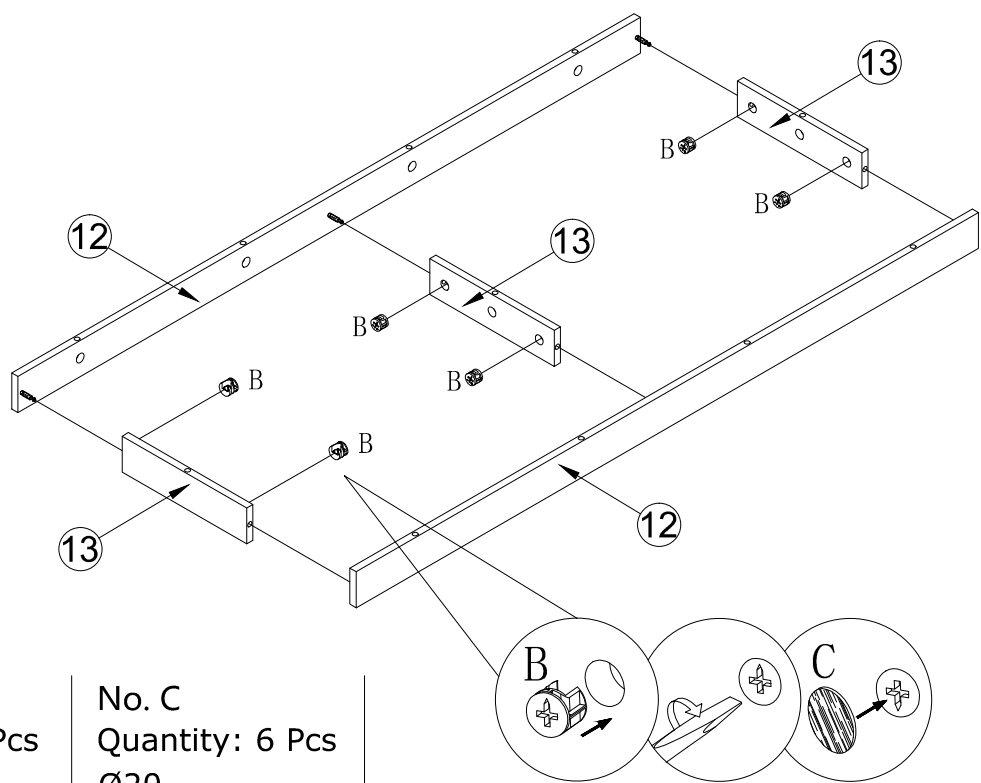


No. B
Quantity: 6 Pcs
Ø15



No. C
Quantity: 6 Pcs
Ø20



STEP 14

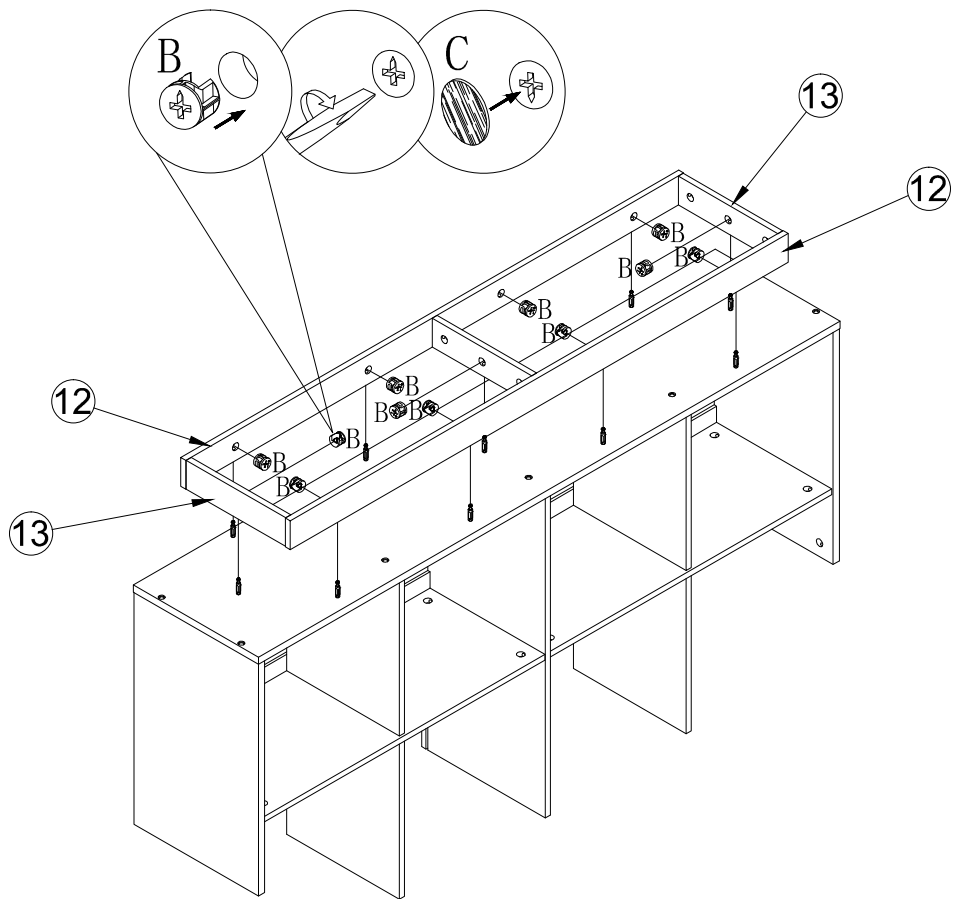


No. B
Quantity: 11 Pcs
Ø15



No. C
Quantity: 11 Pcs
Ø20




STEP 15

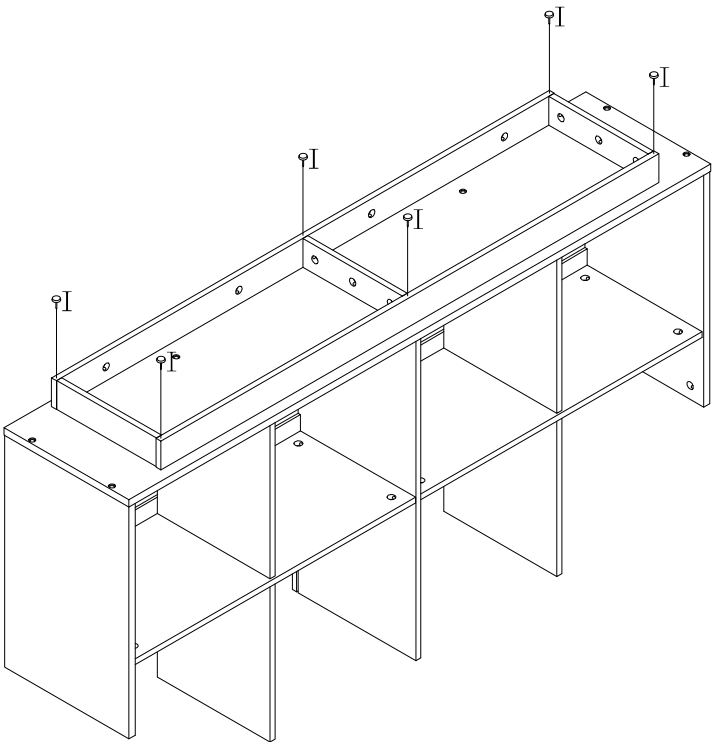


No. I
Quantity: 6 Pcs
Ø12




STEP 16

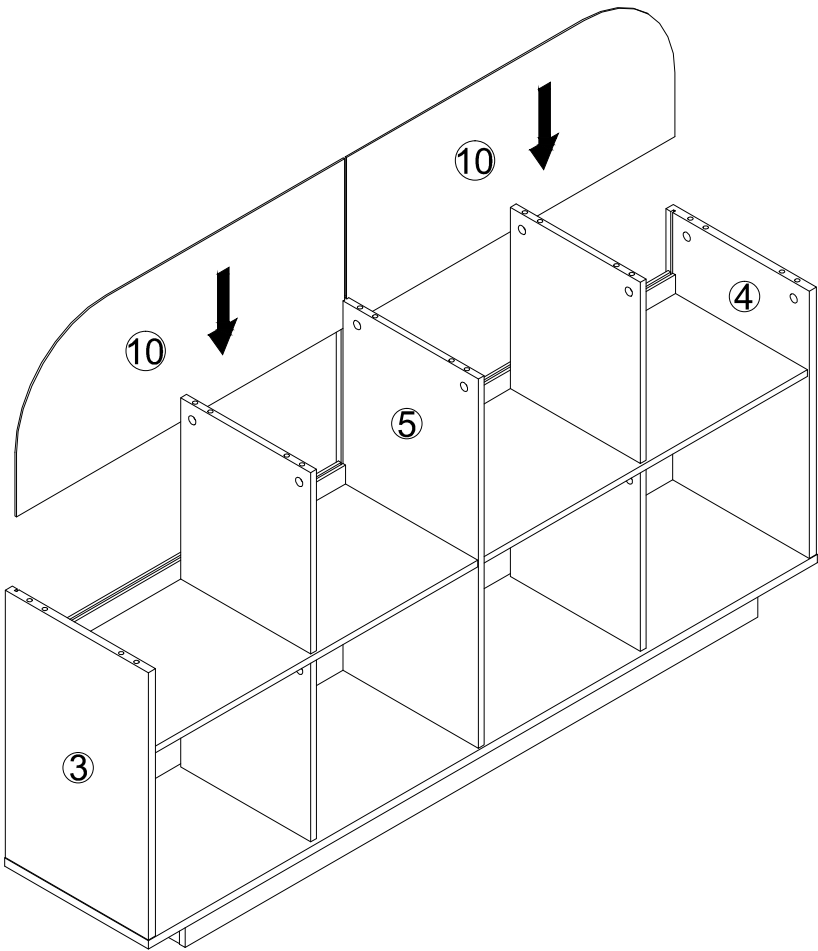


STEP 17

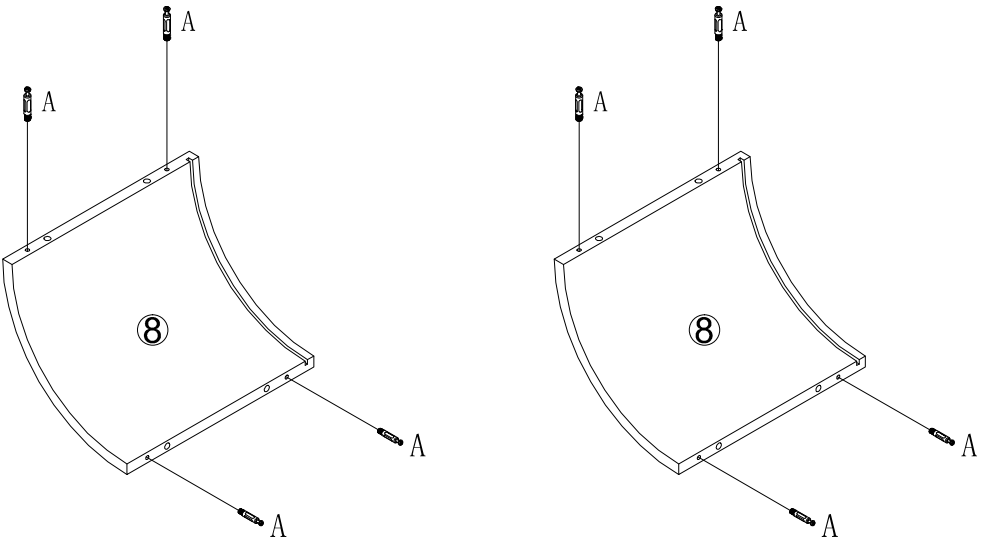

No. A
Quantity: 8 Pcs
8*28 mm



STEP 18

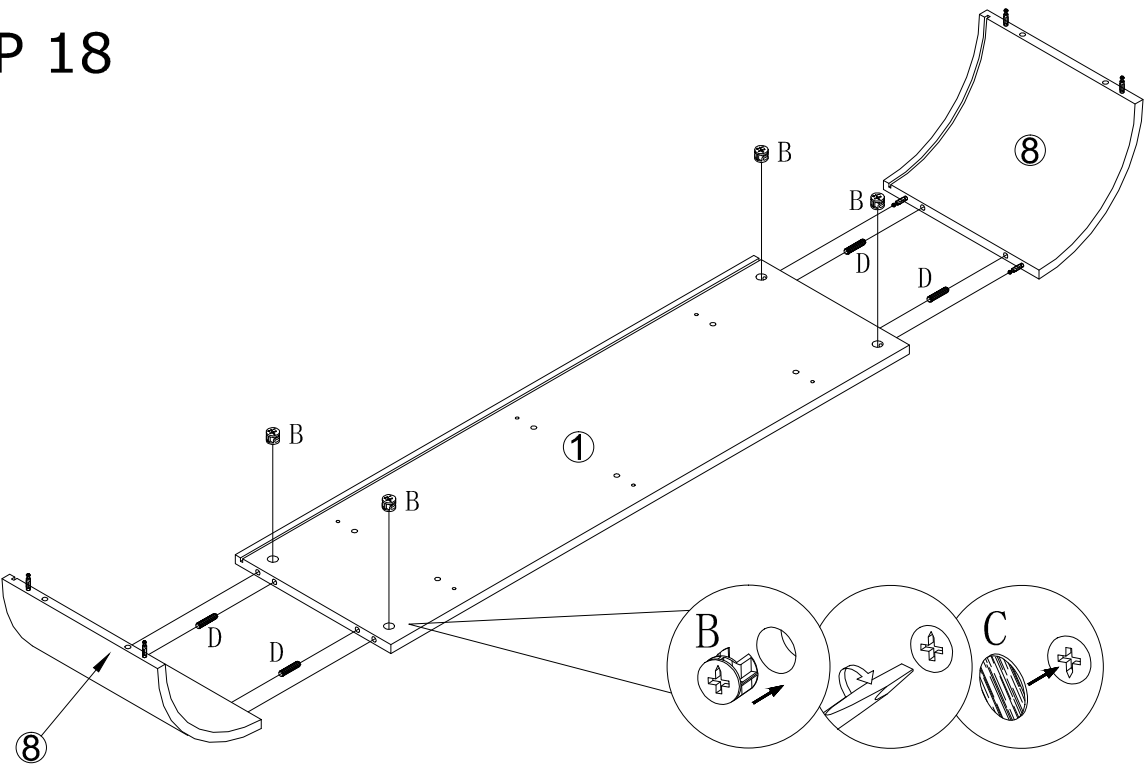


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm




STEP 19

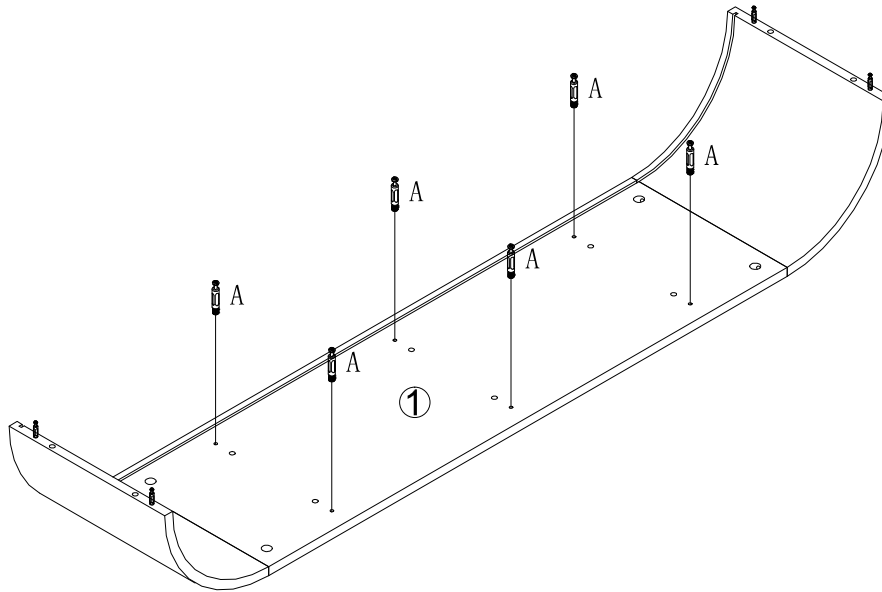

No. A
Quantity: 6 Pcs
8*28 mm



STEP 20

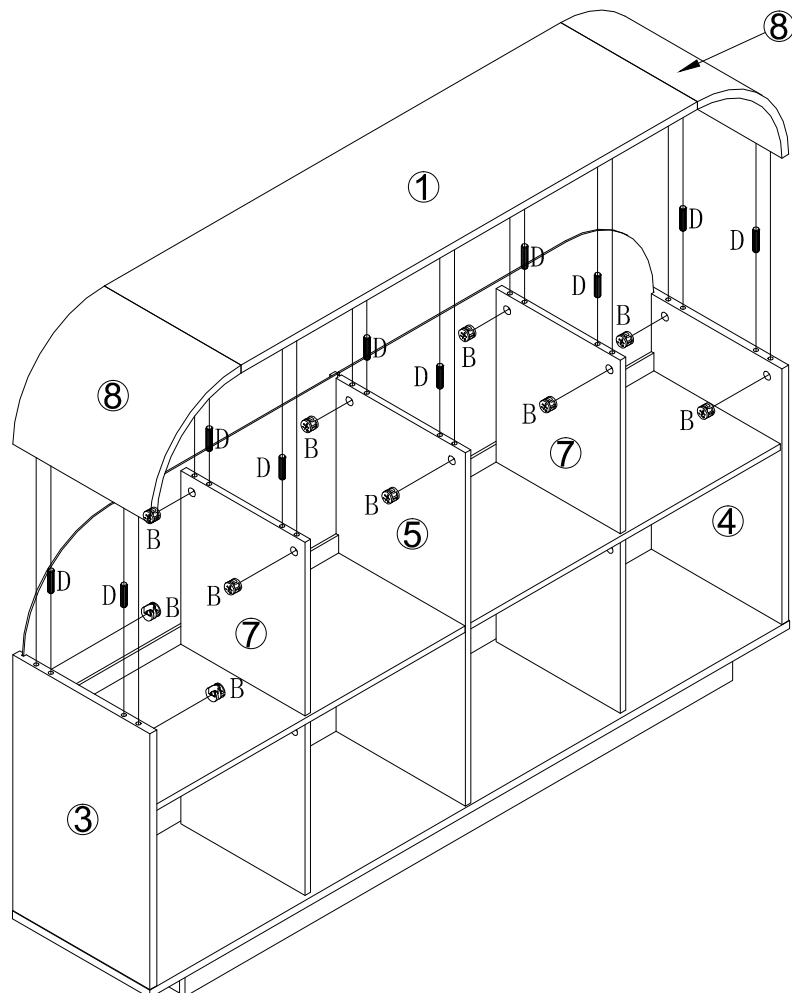


No. B
Quantity: 10 Pcs
Ø15



No. C
Quantity: 10 Pcs
Ø20




No. D
Quantity: 10 Pcs
8*30mm



STEP 21



“DO NOT skip Step 21. The Plastic Wedges (G) are crucial for the stability of the cabinet.”

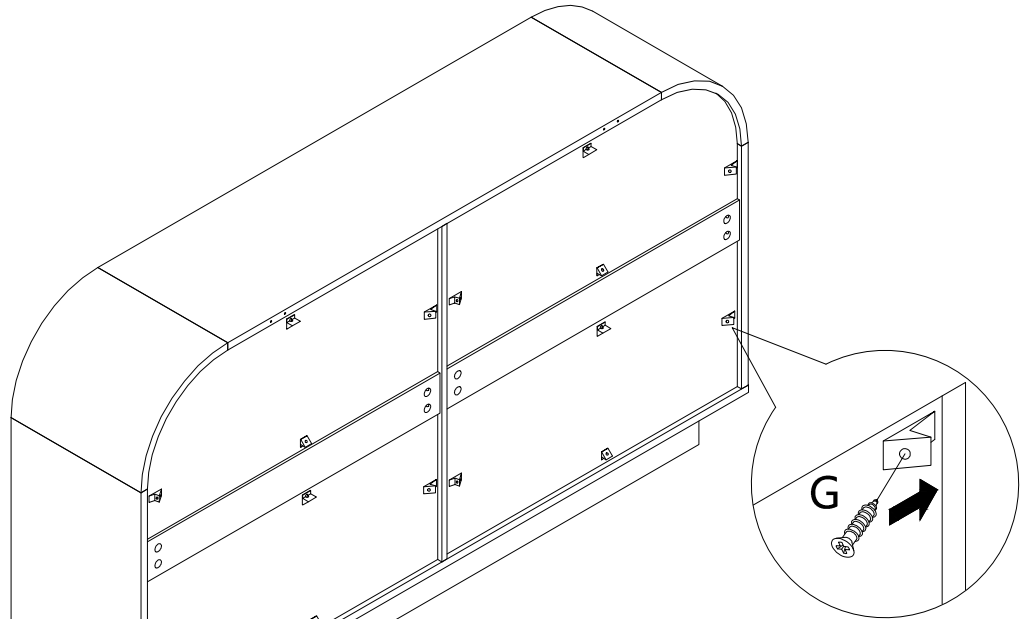


No. G
Quantity: 16 Sets



Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.







STEP 22

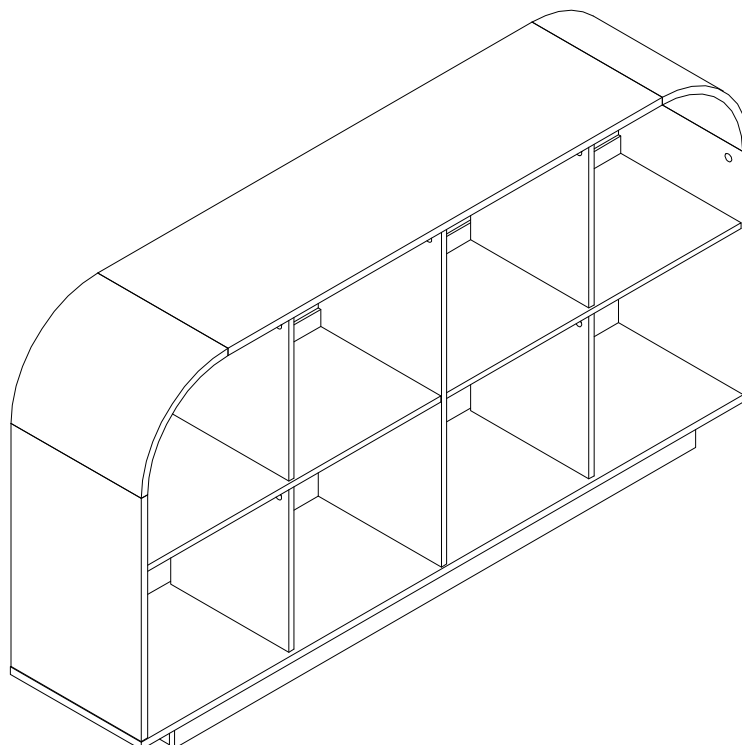


STEP 23



WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

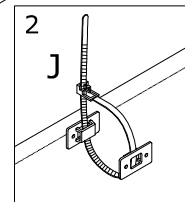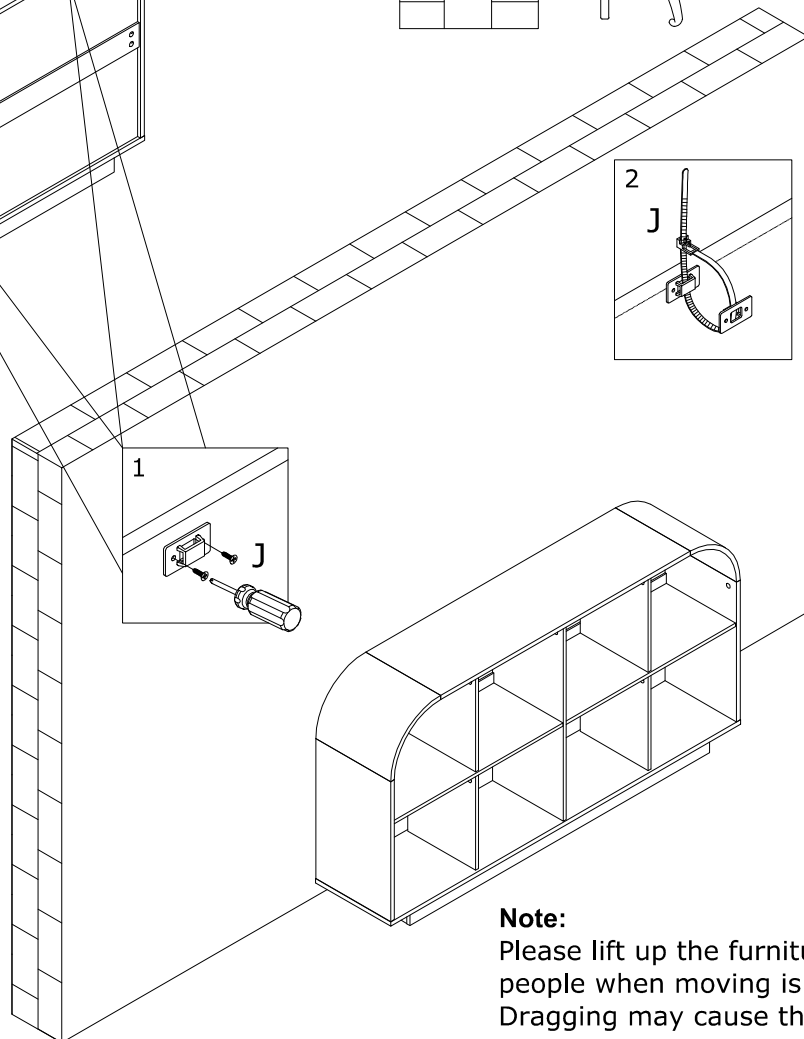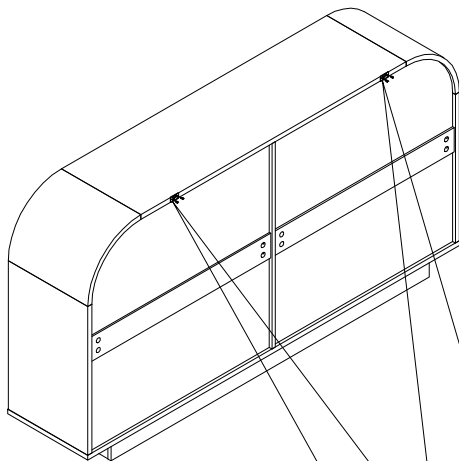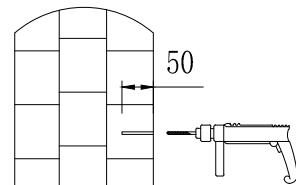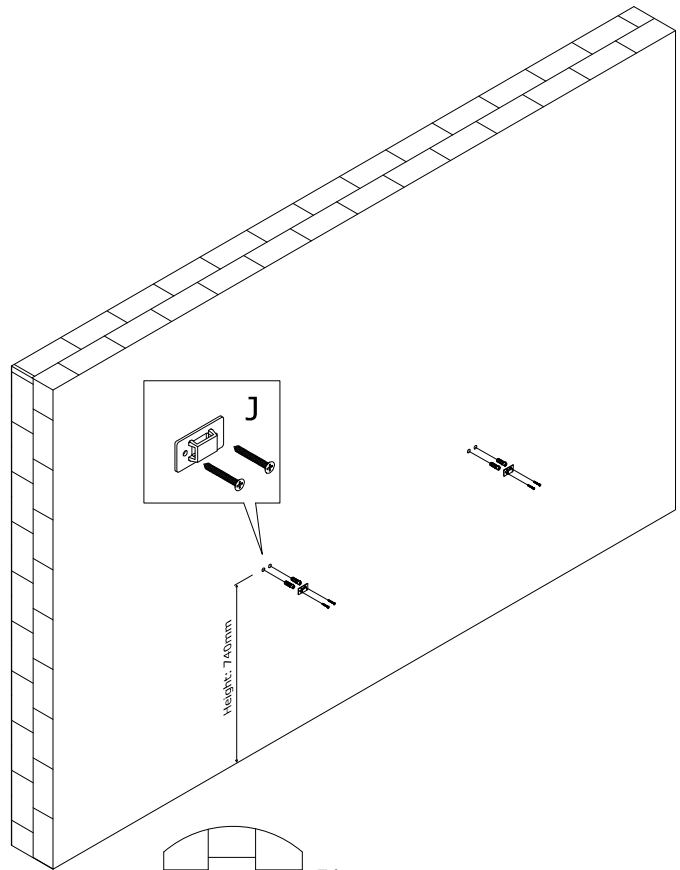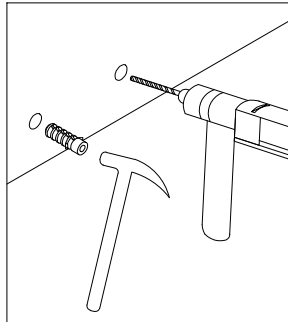

No. J
Quantity: 2 Sets



Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.