



Installation instruction

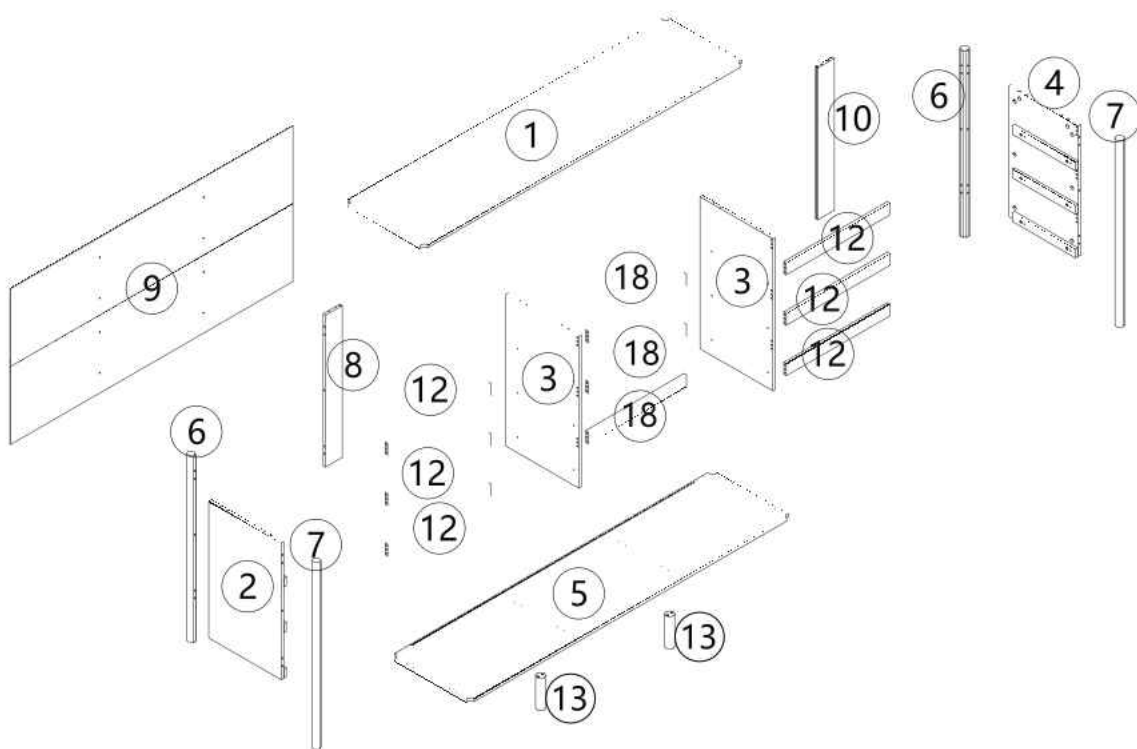


Left

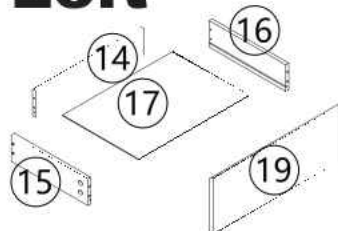


X3

Middle

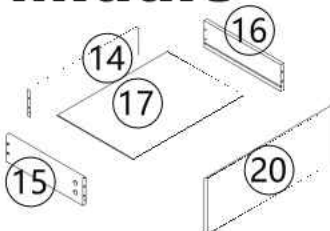













X3

Right

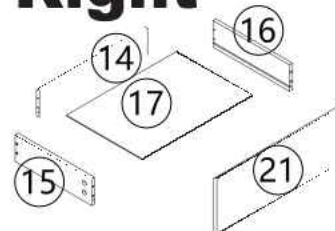


X3

A	X 84	B	X 84	C	X 40	D	X 54	E	X 4	F	X 6	G	X 6
													
M6*35		Φ15*10		Φ8*30		M4*35		Φ25*3		M3*14			
H	X 8	I	X 72	J	X 12	K	X 2	L	X 10	M	X 2	N	X 2
													
M4*20		M3*12		Φ8*50				M4*12					
CL	X 9	CR	X 9	DL	X 9	DR	X 9						
													

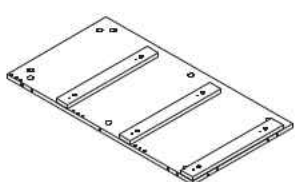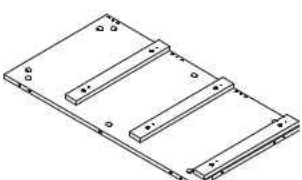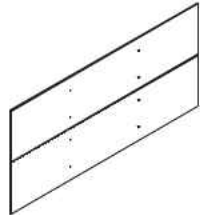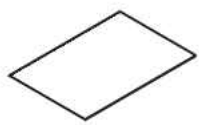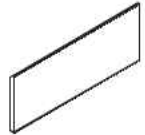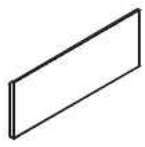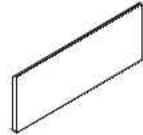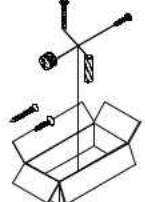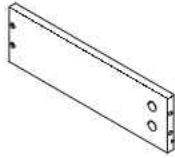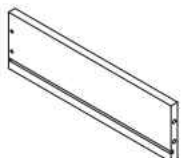1  x1	2  x1	3  x2
4  x1	5  x1	 x2
 x2	8  x1	 x1
1  x1	12  x	13  x2
1  x	18  x3	1  Left x3
2  Middle x3	21  Right x3	Accessory ase  x1
14  x	15  x	1  x

STEP1


A	X 18
	
M6*35	

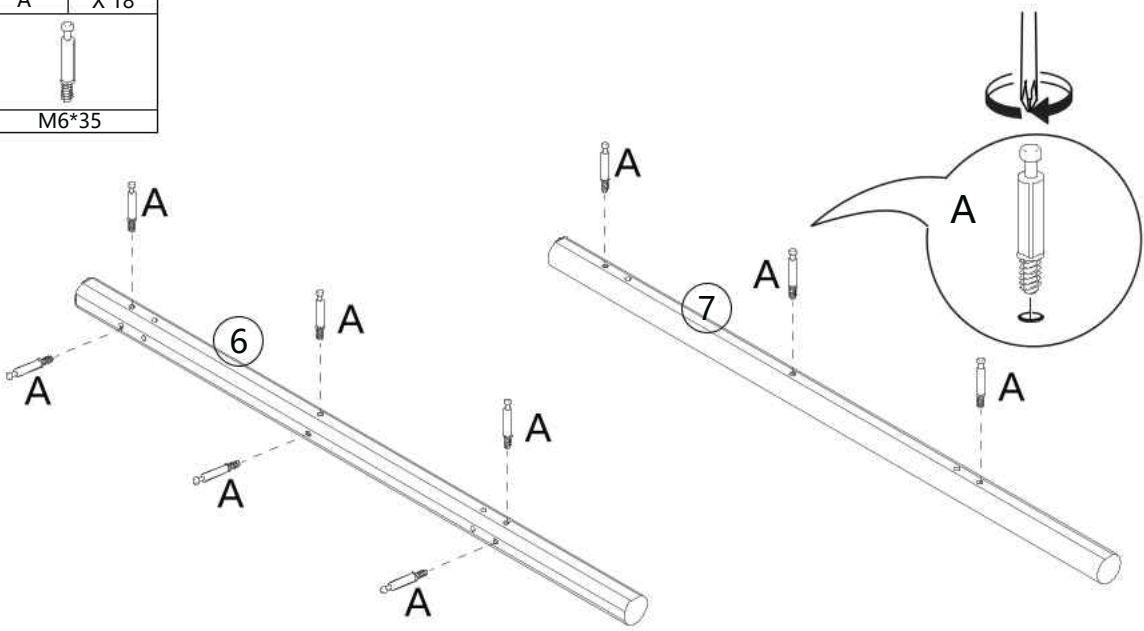

X2


STEP2

B	X 6	C	X 4
			
Φ15*10		Φ8*30	

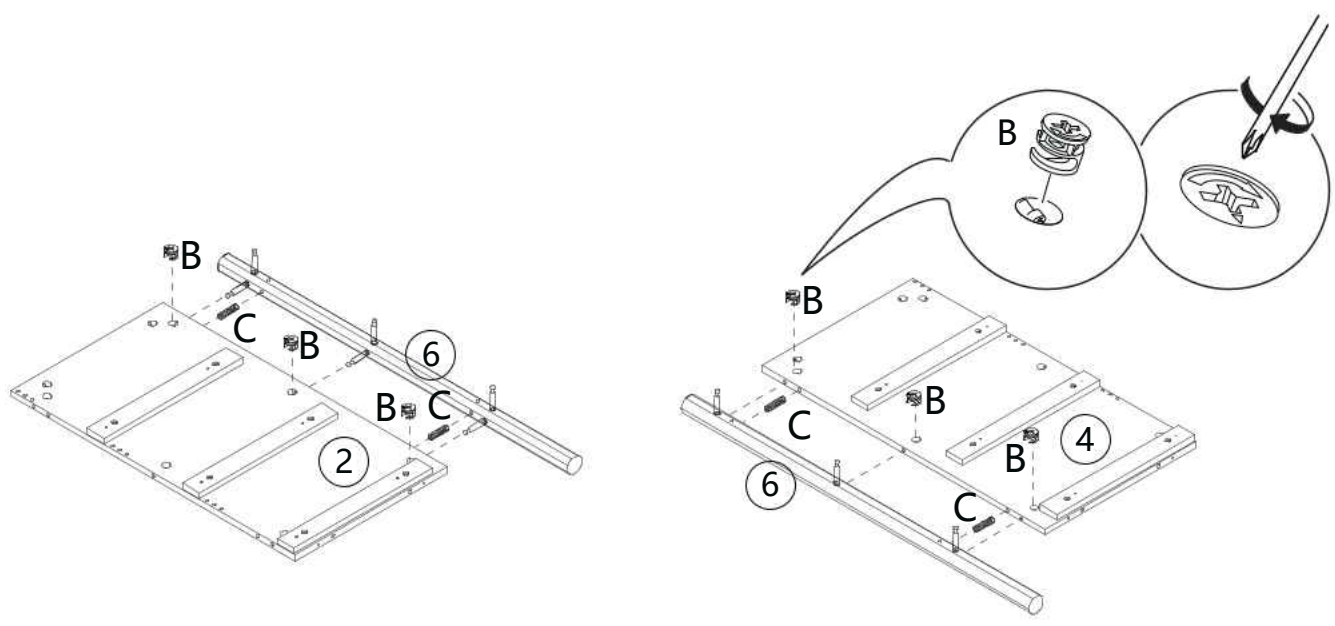

STEP3


A	X 6
	
M6*35	

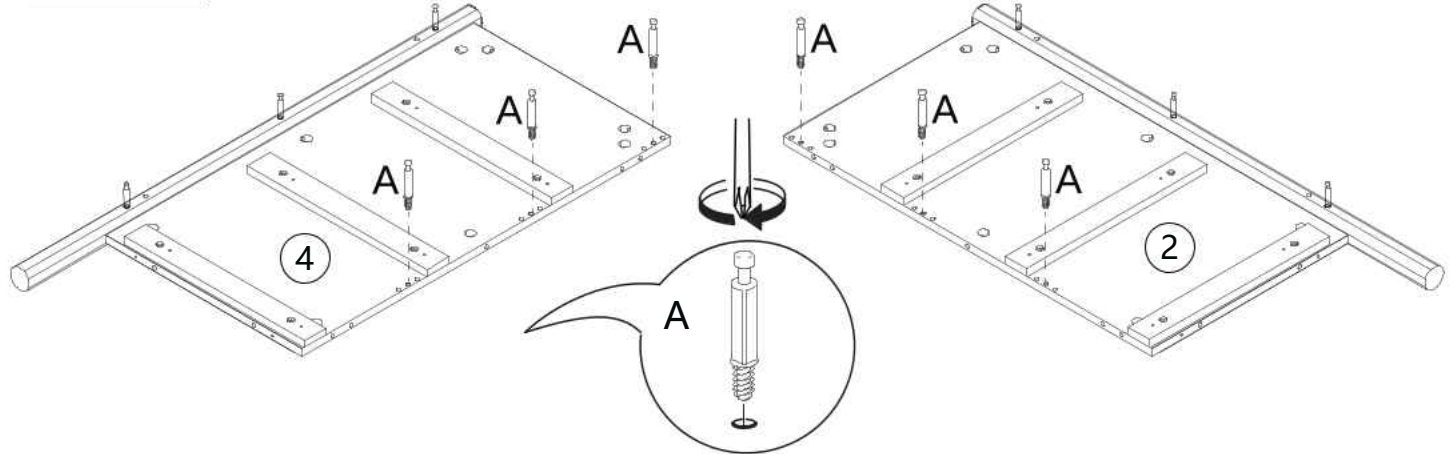

STEP4


A	X 12	I	X 36
			
M6*35		M3*12	
CL	X 9	CR	X 9
			

Please note In Step 4, Panel 3 needs to be rotated 180° as shown. This product includes two 3 panels.

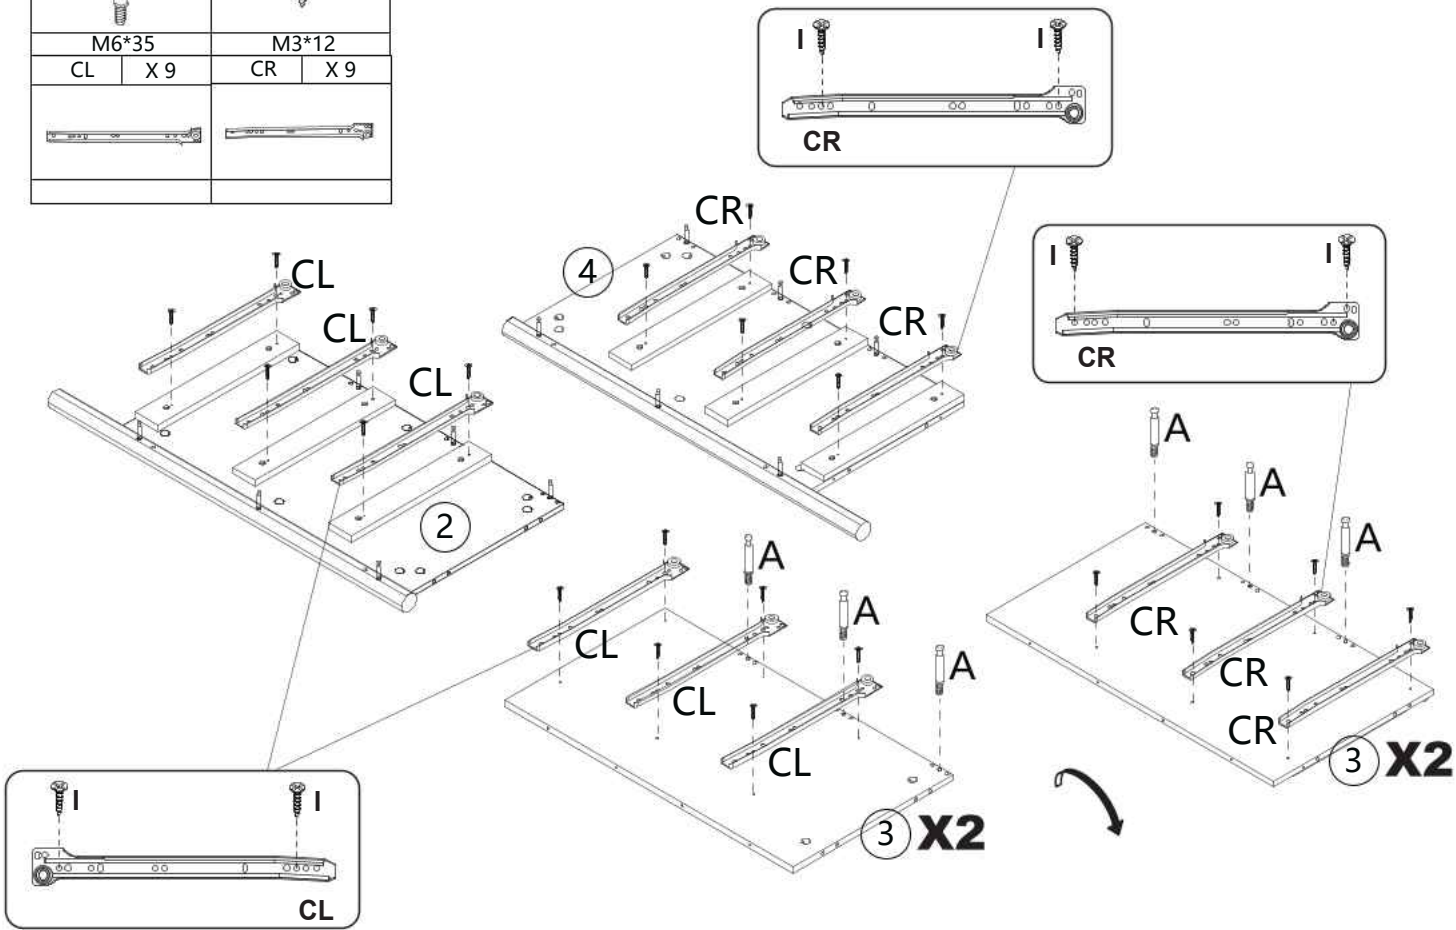

STEP5


B	X 6	C	X 4
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

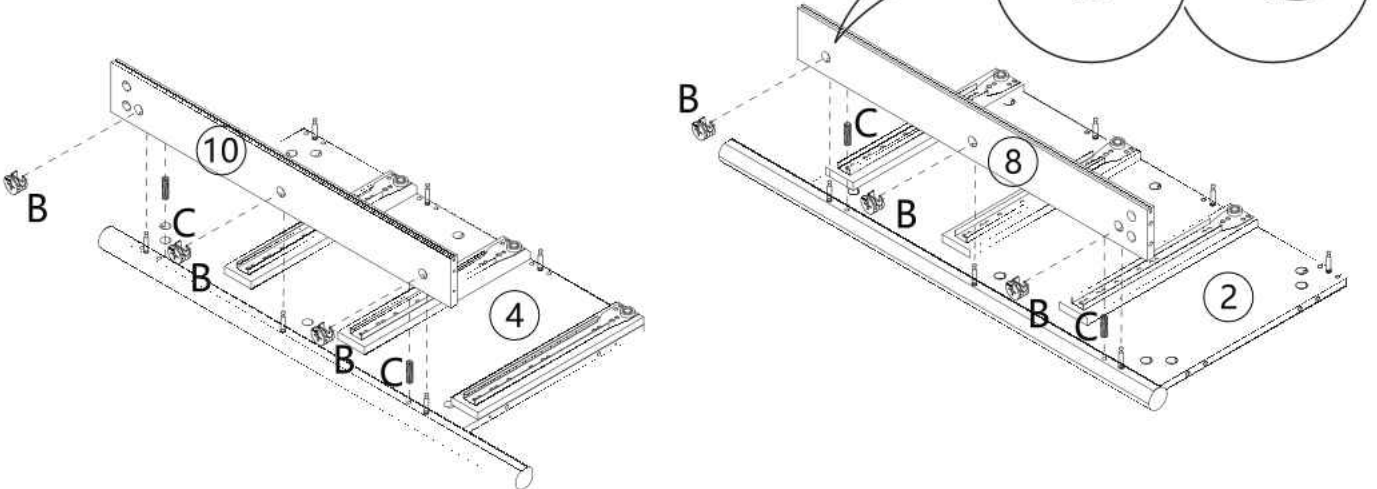

STEP6


B	X 3	J	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 50$	

For part #3, insert the J piece into the middle position of the hole, ensuring it is visible.

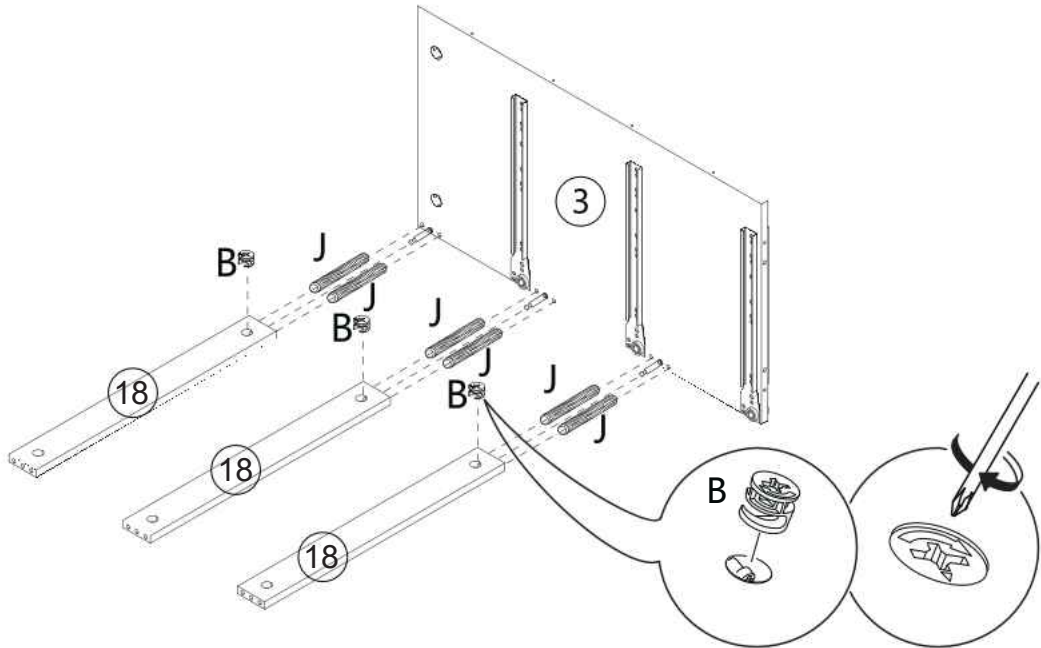

STEP7


B	X 3	J	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 50$	

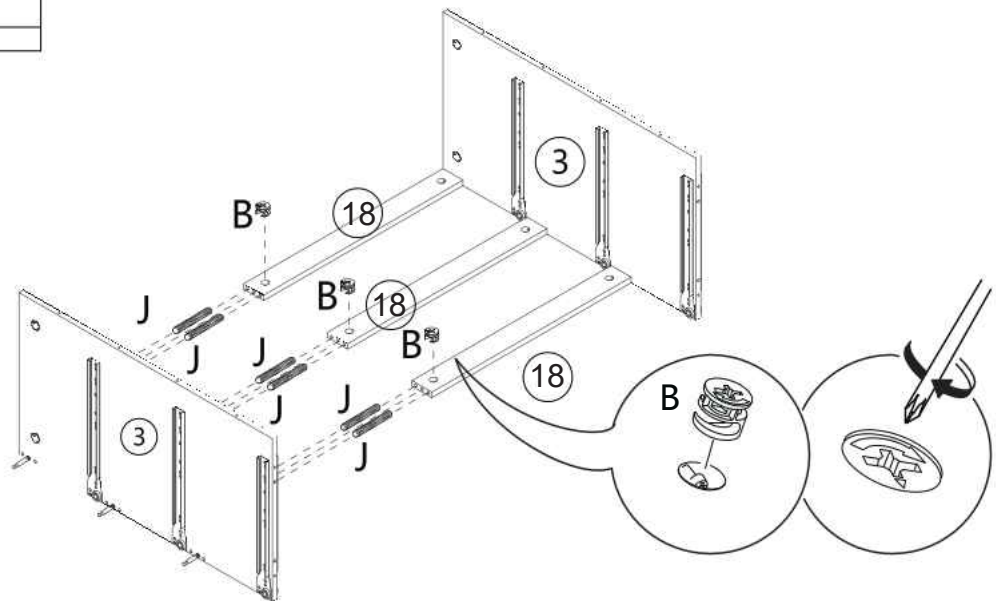

STEP8


B	X 6
	
$\phi 15 \times 10$	

For part #3, insert the J piece into the middle position of the hole, ensuring it is visible.

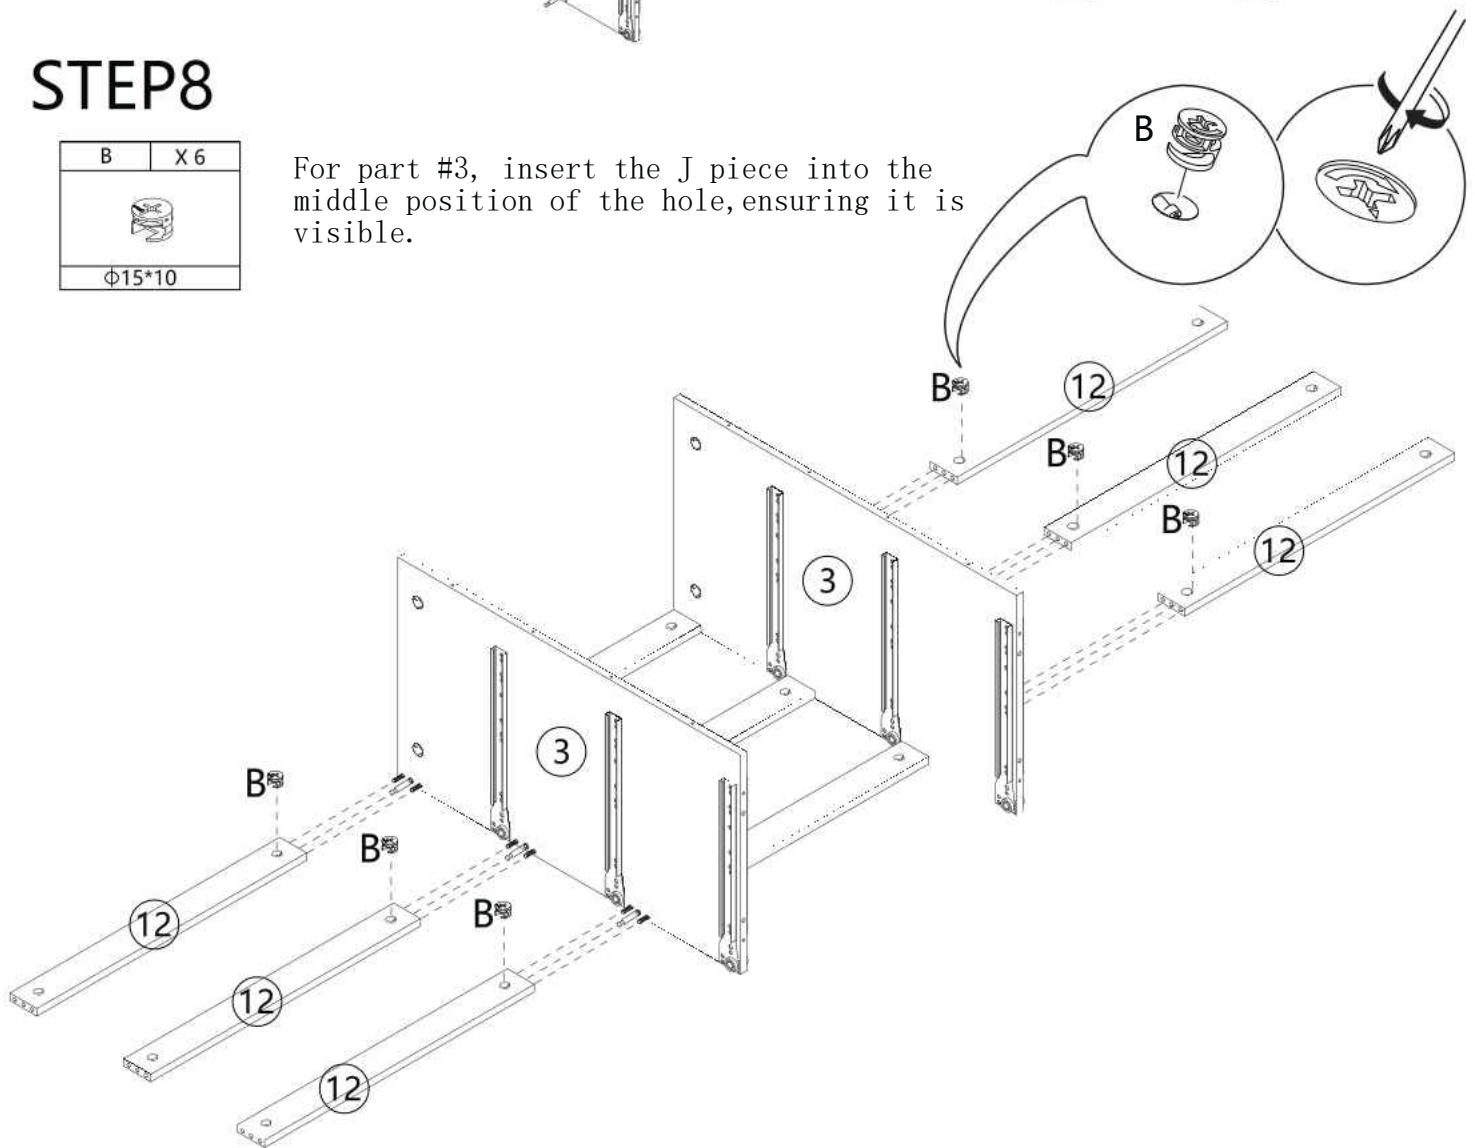


STEP9

B	X 3	C	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

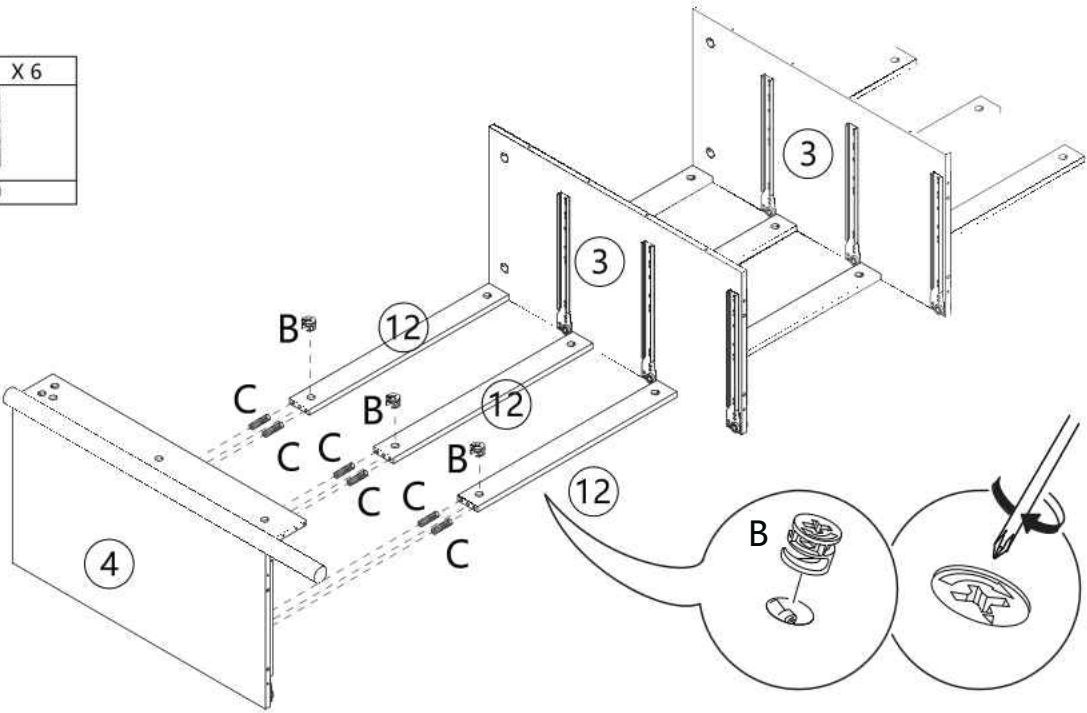

STEP10



B	X 3	C	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

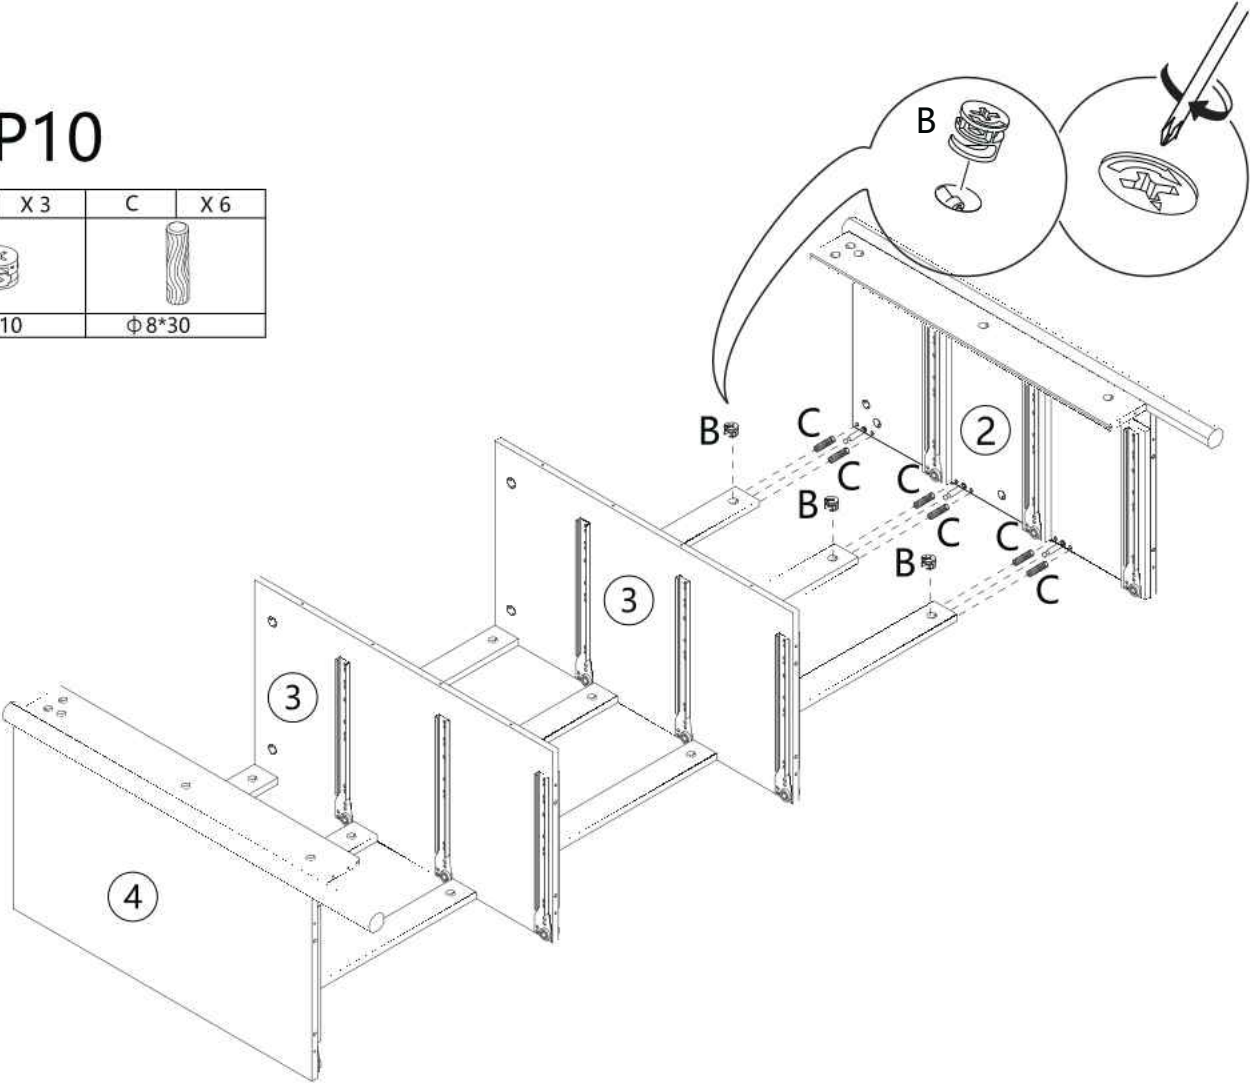

STEP11


First, install leg 13 according to the steps. Then, turn leg 13 upward and secure the bottom plate with screw .

D	X 4	K	X 2
			
M4*35			
L	X 8	M	X 2
			
M4*12			

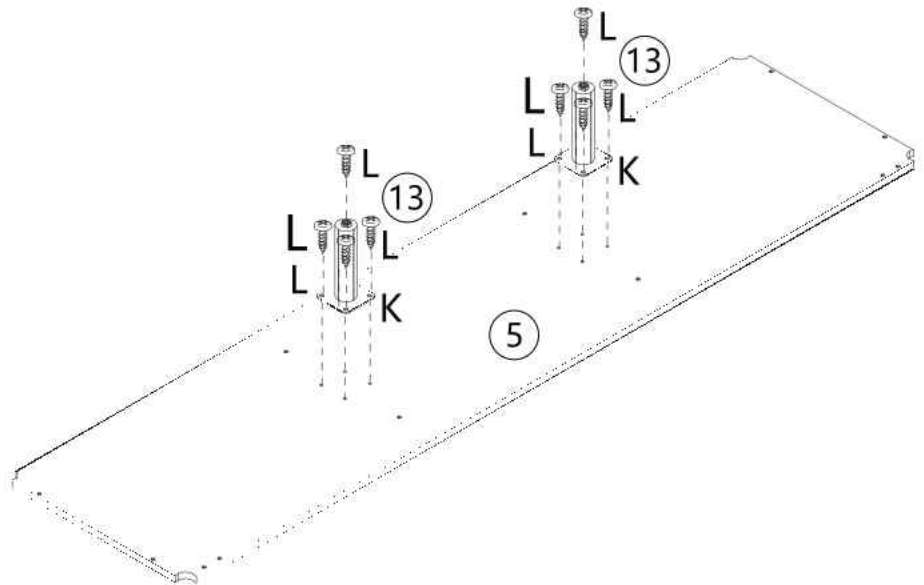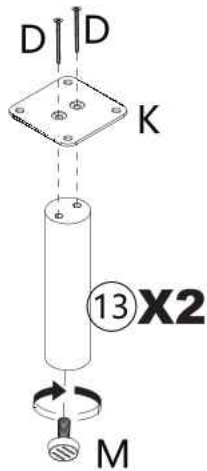


STEP12

C	X 8	D	X 12
			
$\phi 8*30$			
M4*35			

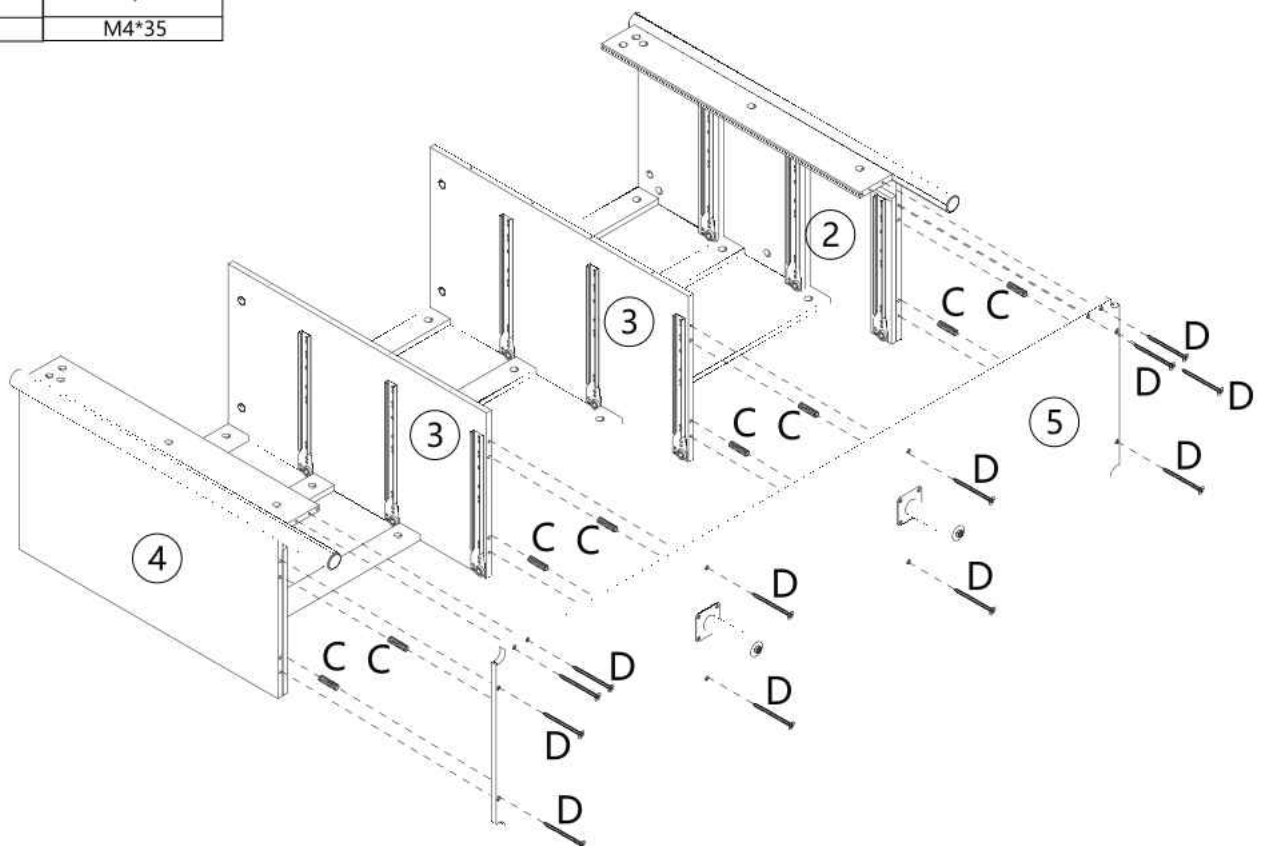


STEP13

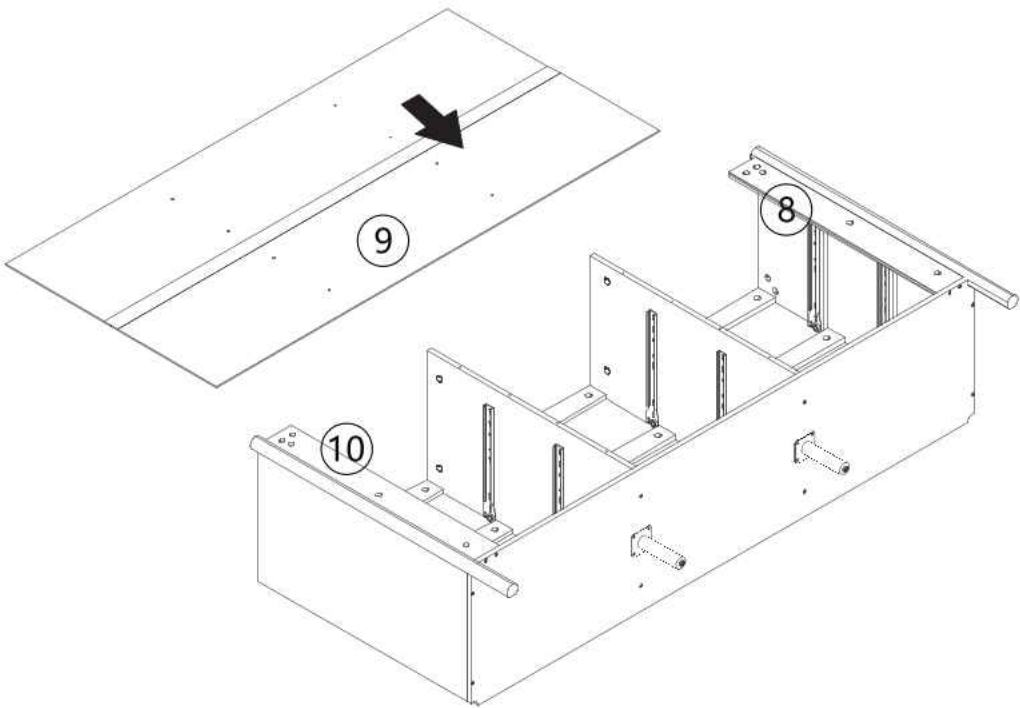


STEP14

A	X 12
	
M6*35	

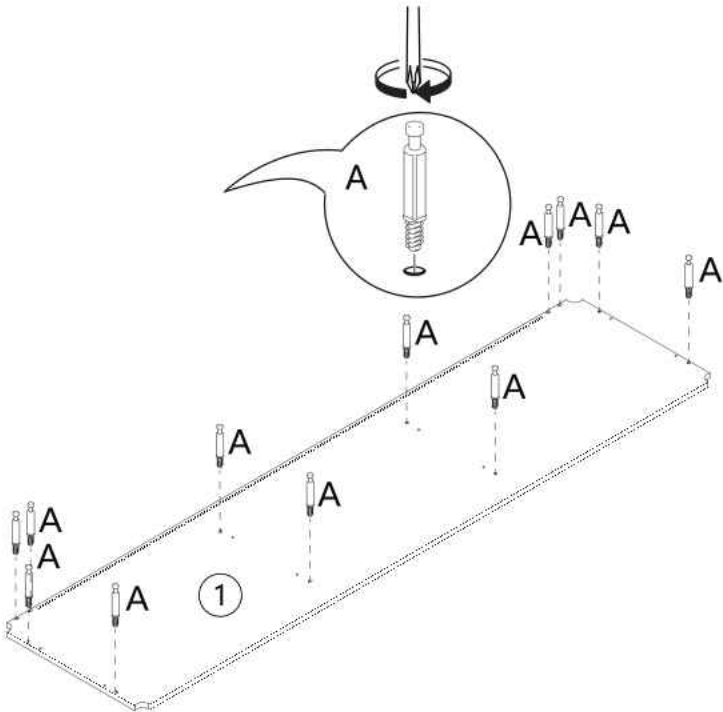


STEP15

B	X 8	C	X 8
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

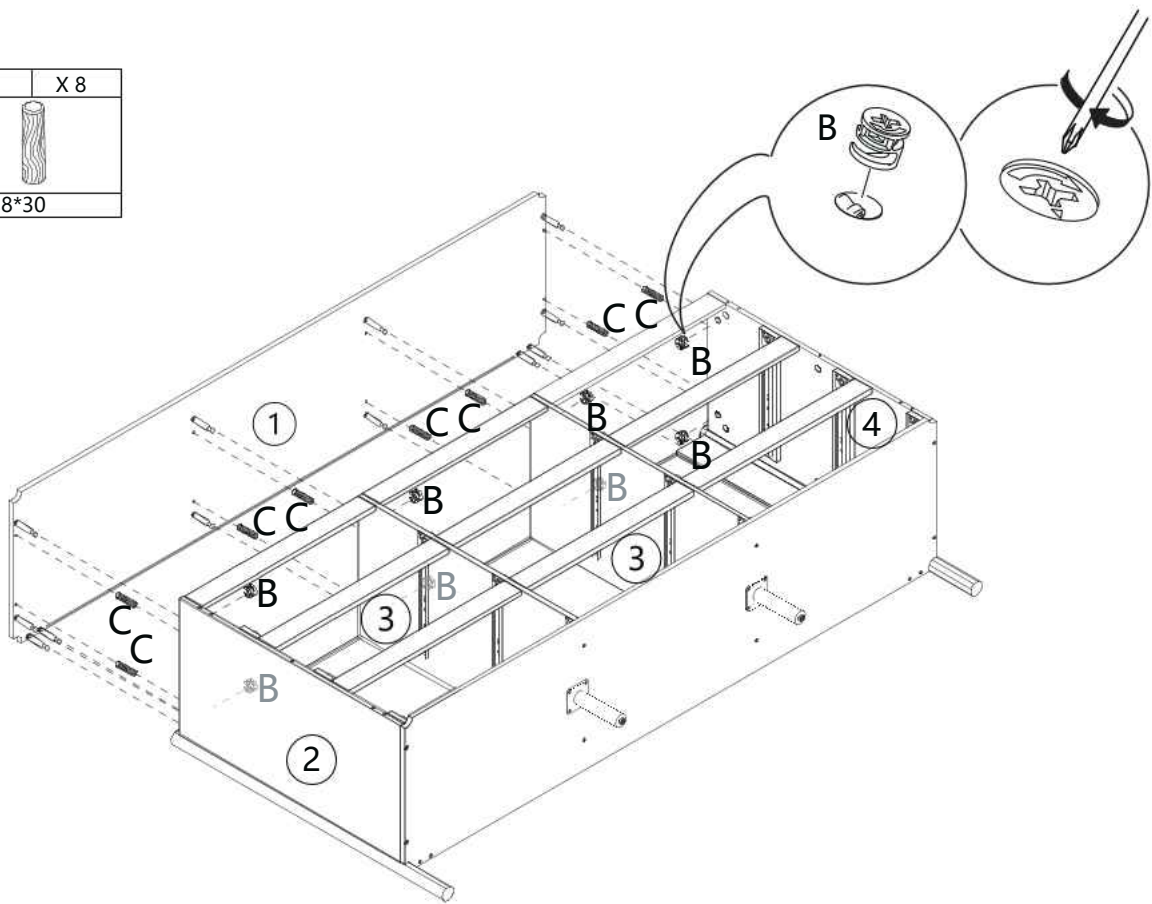


STEP16

B	X 6	C	X 4
			
$\phi 15 \times 10$		$\phi 8 \times 30$	
E	X 4		
			
$\phi 25 \times 3$			

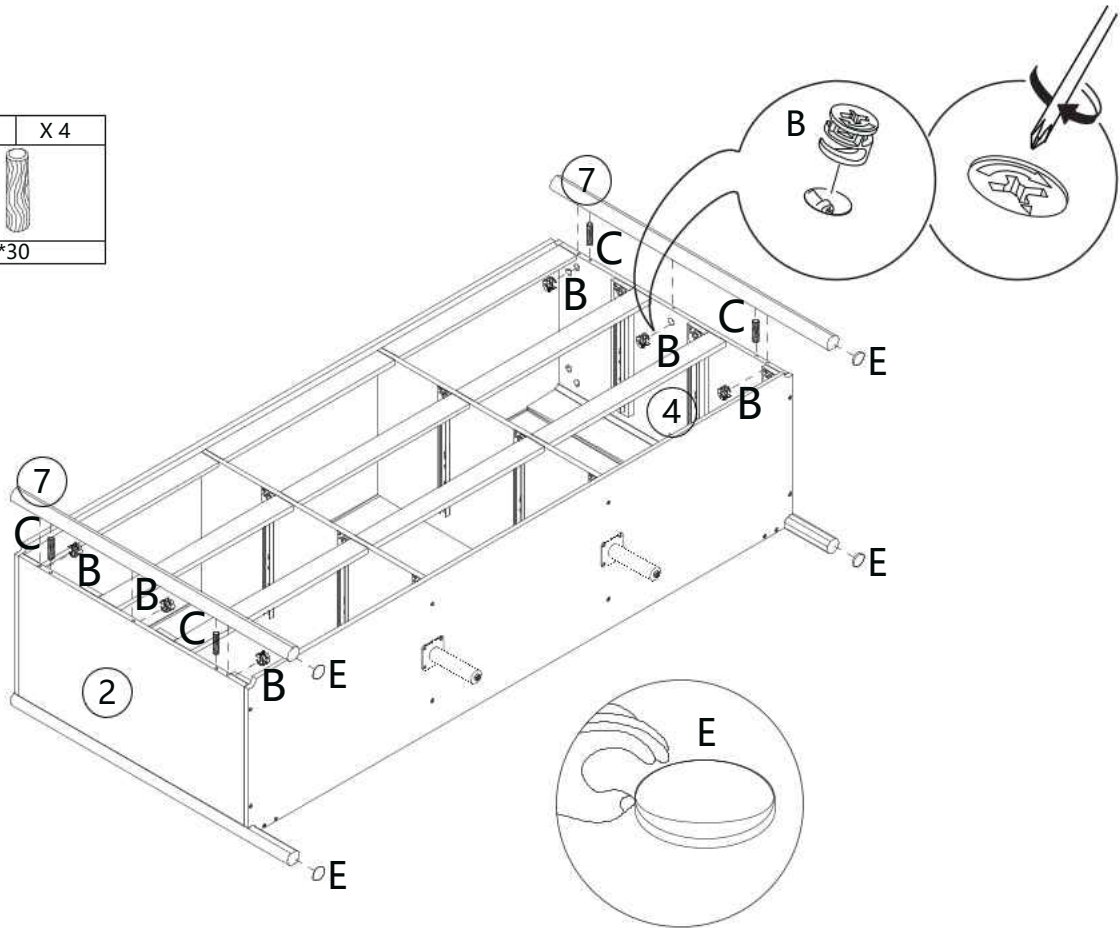


STEP17

D	X 36
	
M4*35	

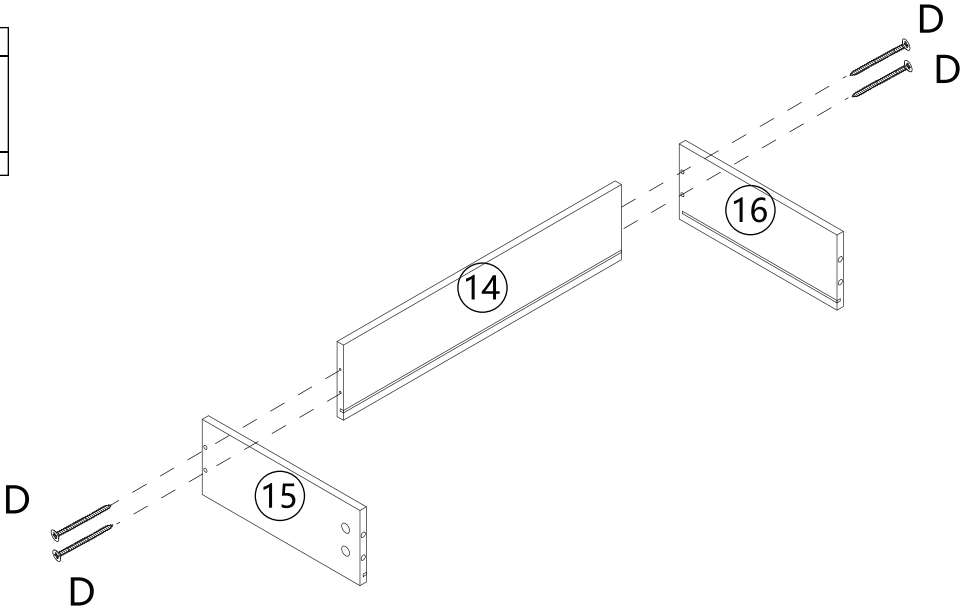

X9

STEP18


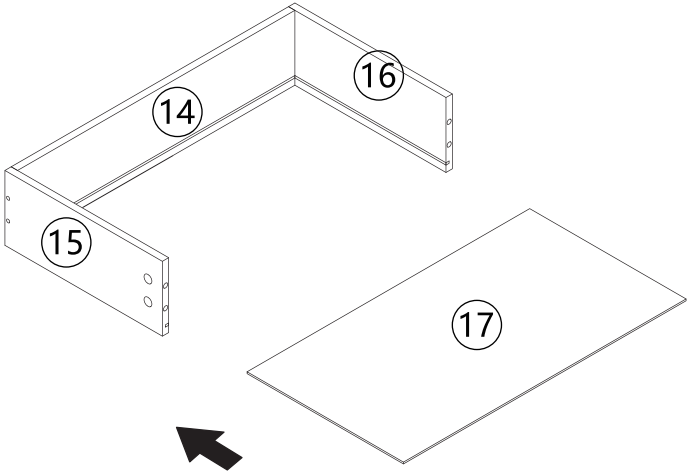


X9

STEP19

A	X 12	B	X 12
			
M6*35		Φ15*10	



First, install screw A into the back holes of part # 19, #20 and# 21. Then, align and part #19,#20 #21 into the corresponding drawer holes.

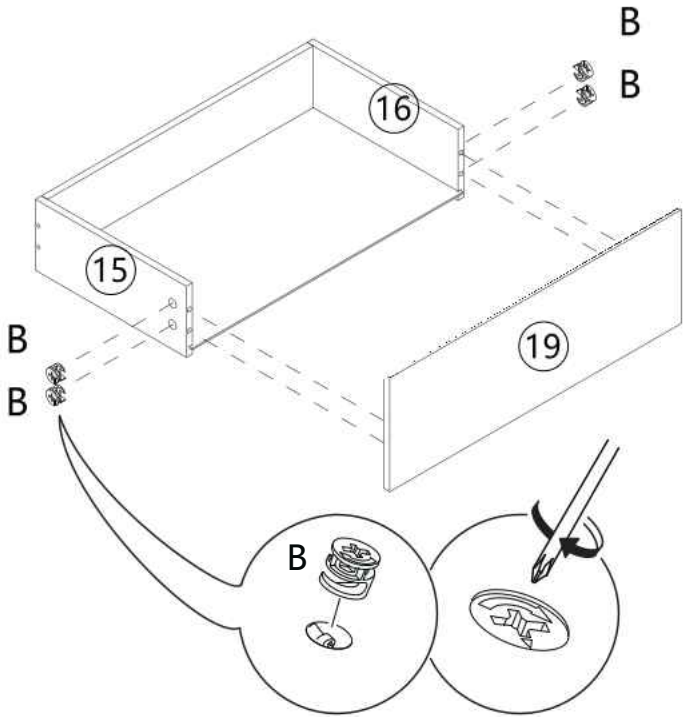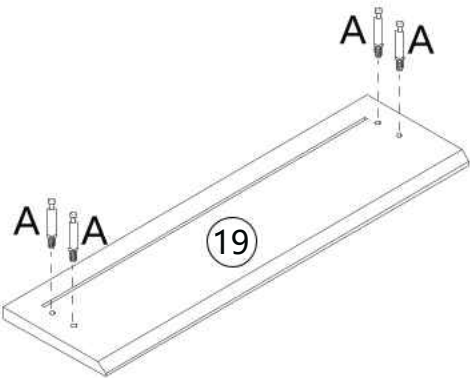

**Left
X3**

STEP20


A	X 12	B	X 12
			
M6*35		Φ15*10	

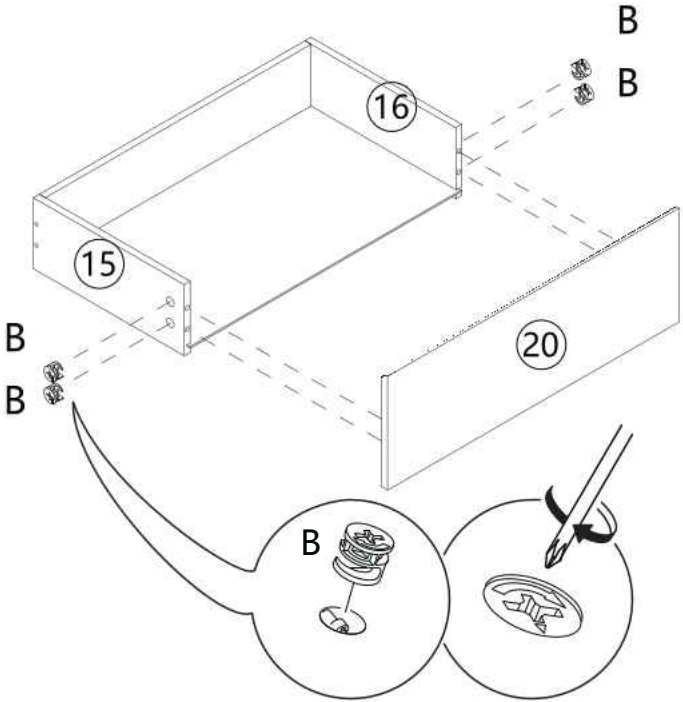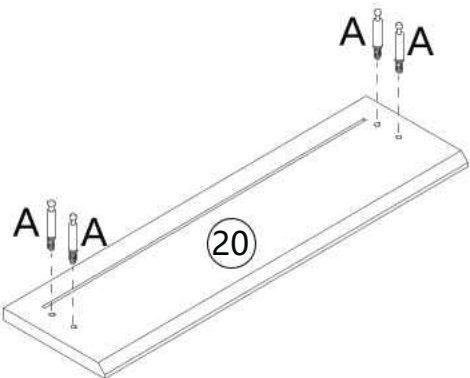

**Middle
X3**


STEP21

A	X 12	B	X 12
			
M6*35		Φ15*10	

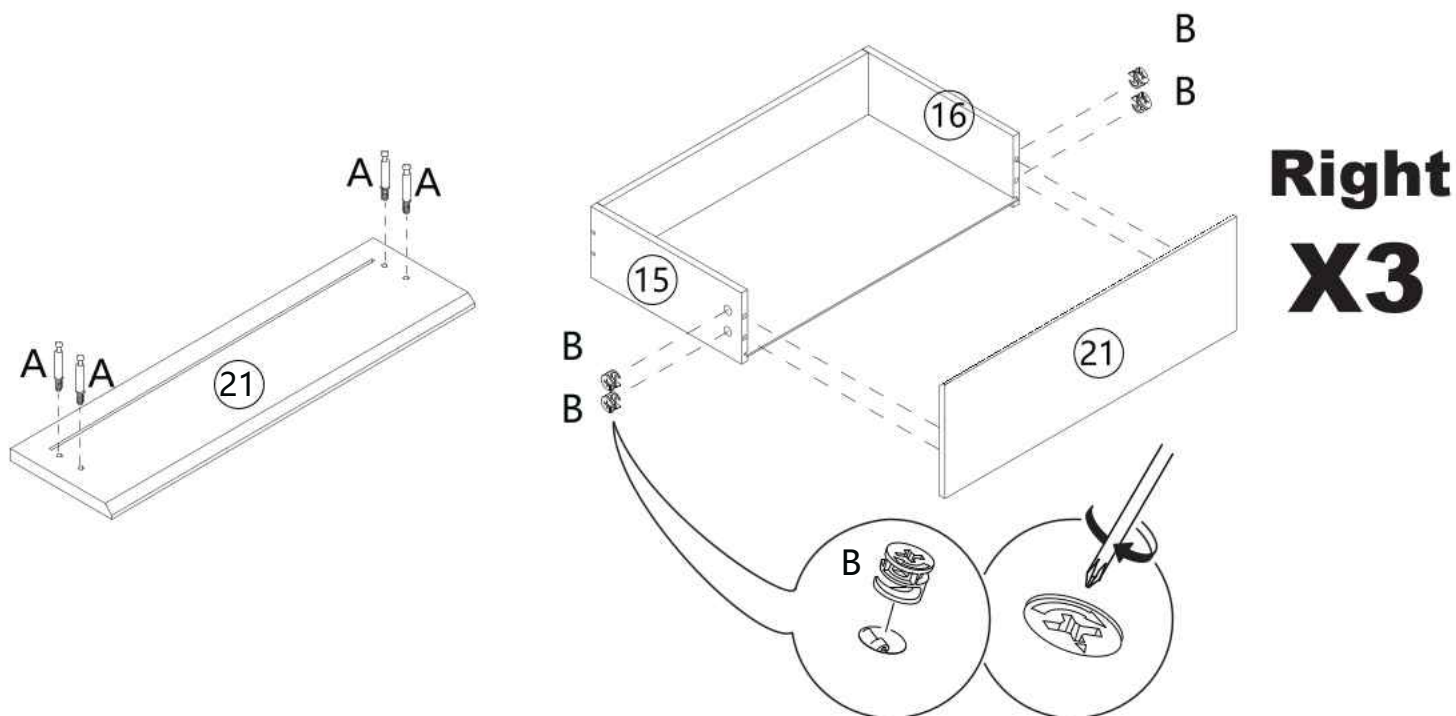


STEP22

I	X 36	DL	X 9
			
			
DR	X 9		

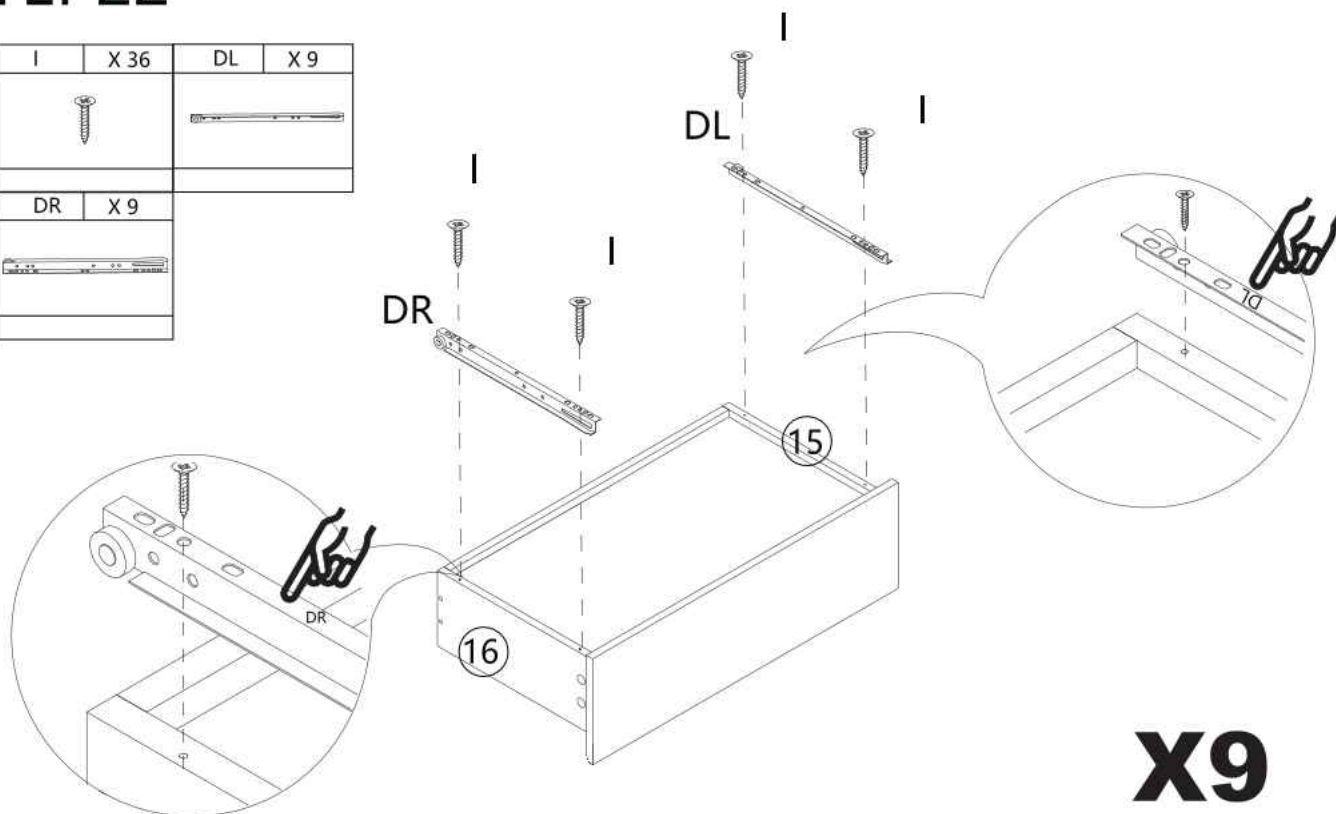


STEP23

Please Note: part #19 on the left and part # 20 on the middle and part #21 on the right. Incorrect placement of the panels will prevent proper use.

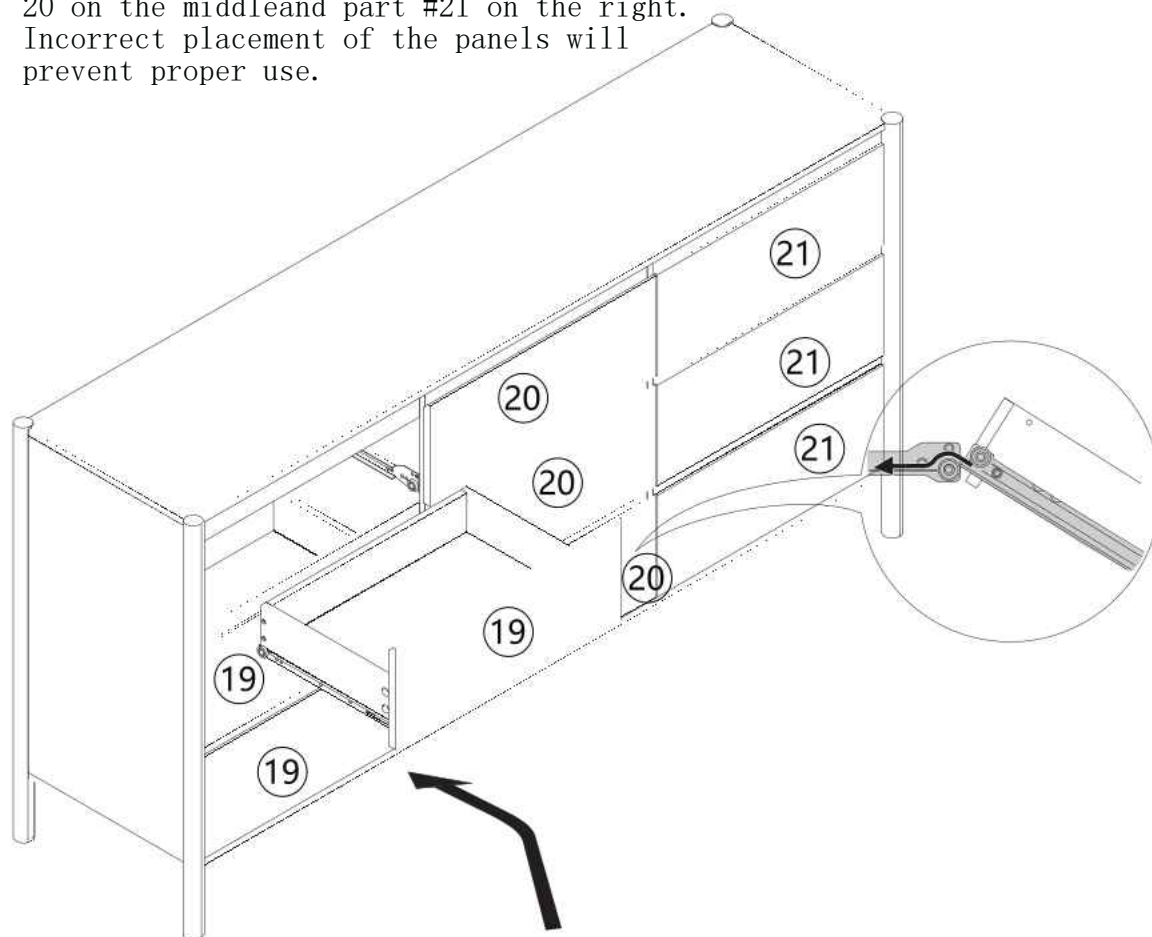


STEP24

B	X 4	F	X 6
			
Φ15*10		M3*14	
G	X 6	H	X 8
			
		M4*20	

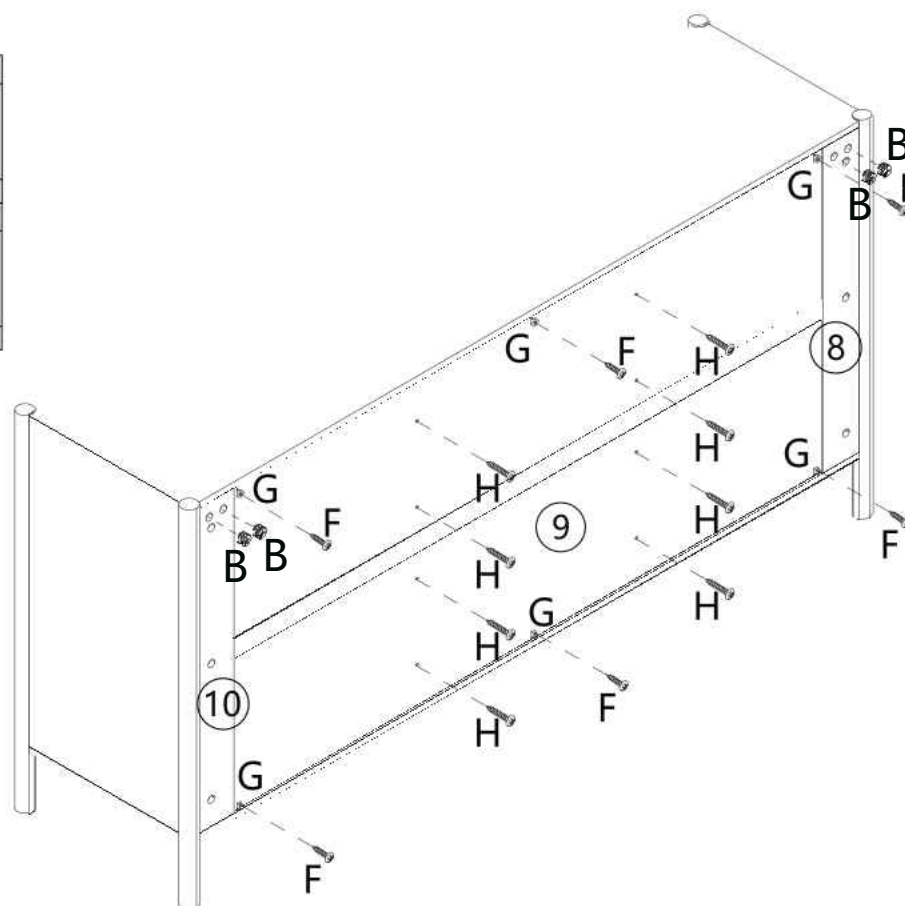


STEP25

D	X 2	L	X 2
			
M4*35		M4*12	
N	X 2		
			

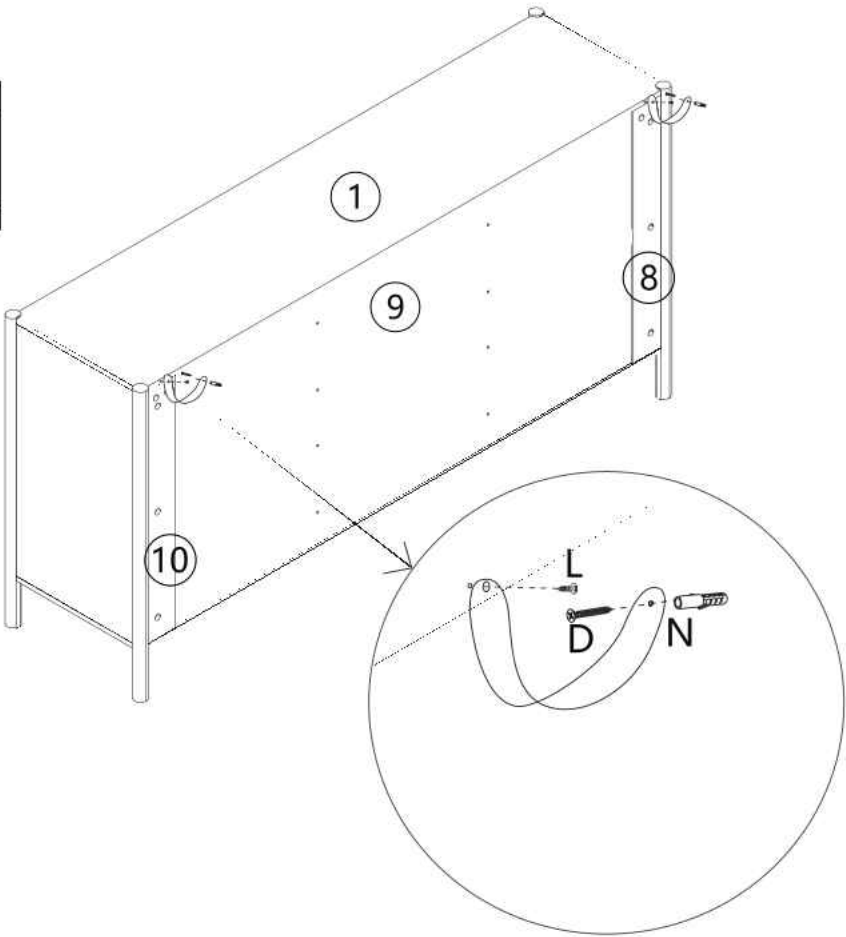

STEP26

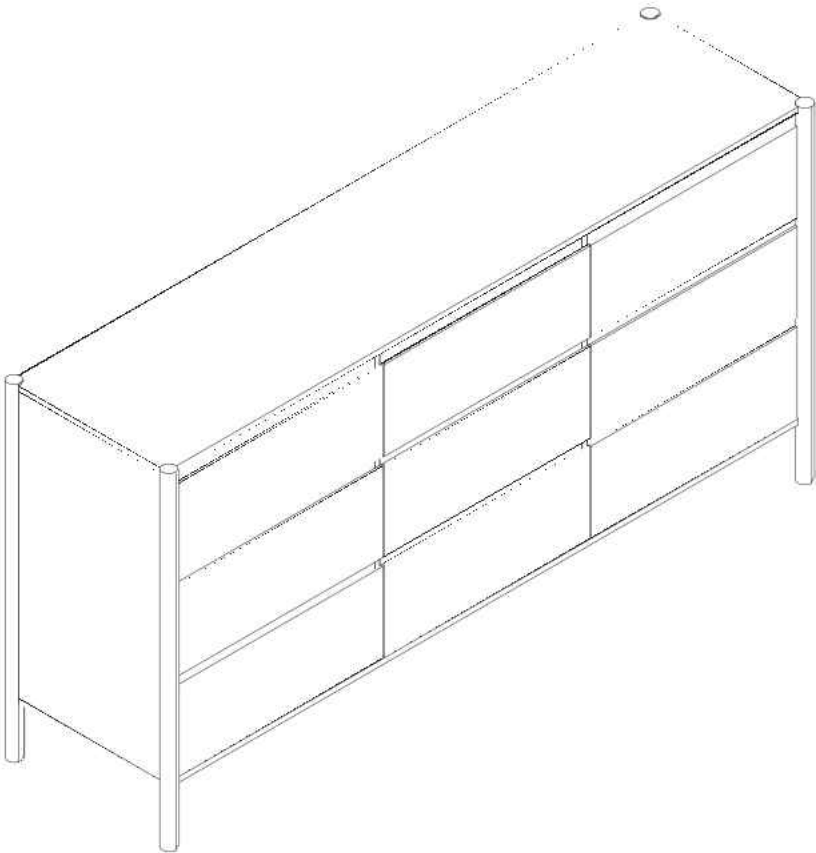

IMPORTANT SAFETY INFORMATION

Please carefully read the instructions and caution warnings below before assembling the product. Following this guide will ensure that you install, use and maintain the product properly.

Please keep this installation and user manual/instructions for future reference in case you need to assemble the product.

Do not assemble if you notice serious damage such as cracks or bends.

During installation, please use work gloves for hand safety.

- Please assemble the unit on carpeted floor or the flat cardboard box to avoid scratching the surface or your floor while assembling on the floor.

Pay more attention to the direction of components at each steps.

It is recommended that two people work together to assemble the product.