


ASSEMBLY INSTRUCTIONS

266-637

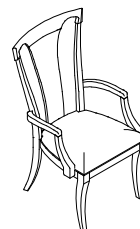

TOOLS REQUIRED:


Allen wrench (supplied, part # I,J)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Turn the seat cushion upside down on to a clean, soft surface. Attach two legs to the seat frame and tighten Hex Nut (A) with Lock Washer (D), Flat Washer (E) by Spanner Wrench (J) as shown in Figure 1.
2. Lay the chair back down, attach the seat frame to the chair back, tighten Bolt (B), Bolt (C) with Lock Washer (D), Flat Washer (E) by Allen Wrench (I) as shown in Figure 2 and Figure 3.
3. Lift the chair up and attach the armrest to the chair back, tighten Bolt (F) by Allen Wrench (I) as shown in Figure 4. Secure the armrest to seat frame, tighten Bolt (F) with Lock Washer (G), Flat Washer (H) by Allen Wrench (I) as shown in Figure 5.

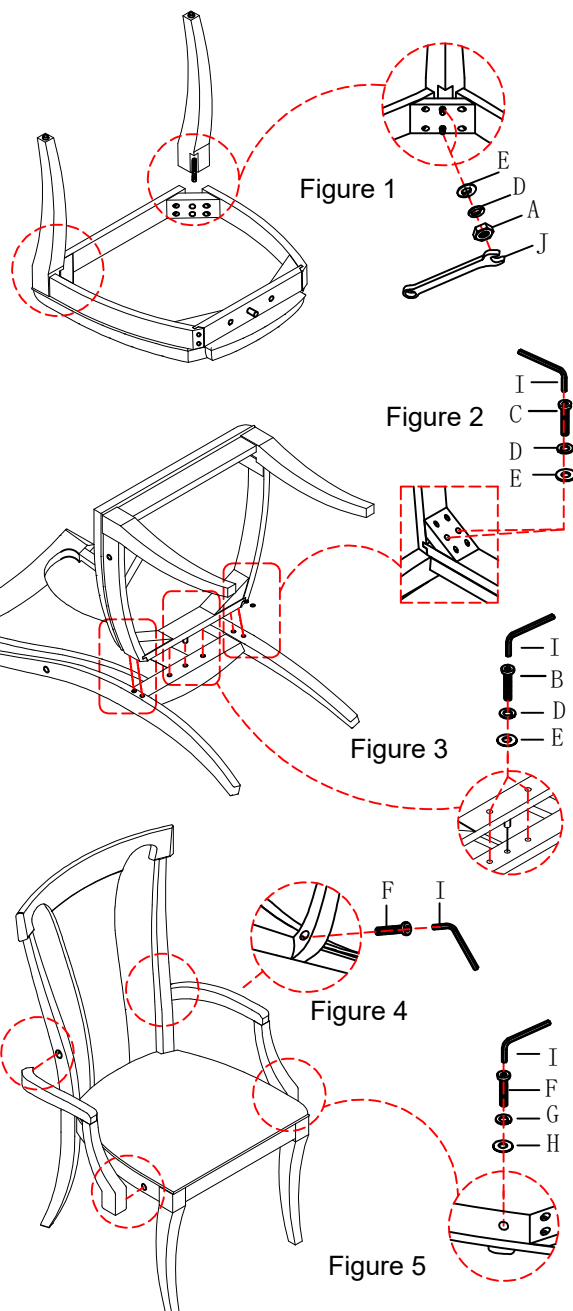

No.		Hardware List	Q' ty
A		Hex nut (Ø5/16"x12mm)	4pcs
B		Bolt (Ø5/16"x1-3/4")	2pcs
C		Bolt (Ø5/16"x3")	4pcs
D		Lock Washer (Ø5/16")	10pcs
E		Flat Washer (Ø5/16"*19*1.5mm)	10pcs
F		Bolt (Ø1/4"x1-9/16")	4pcs
G		Lock Washer (Ø1/4")	2pcs
H		Flat Washer (Ø1/4"*19*1.5mm)	2pcs
I		Allen Wrench (110*60*4mm)	1pc
J		Spanner Wrench (Ø12mm*160mmL)	1pc

Thank you for purchasing furniture
from american drew!