


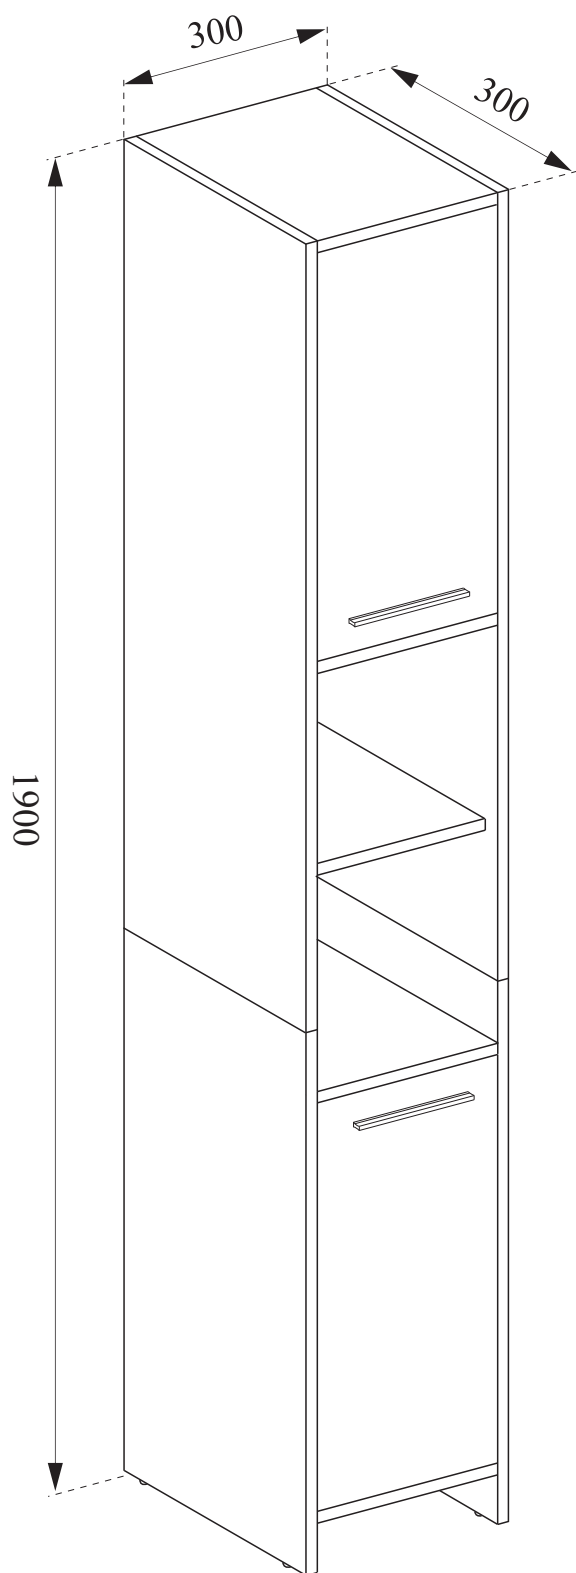
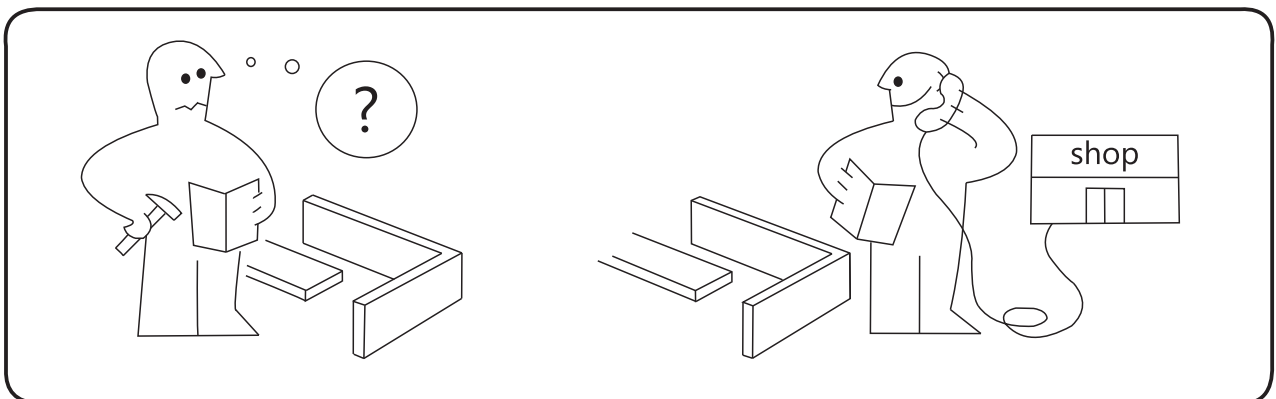
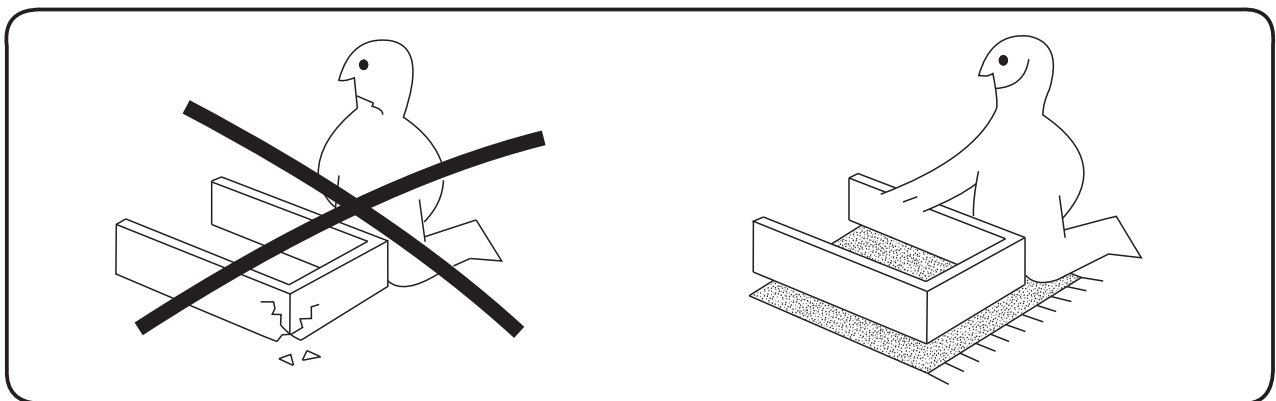
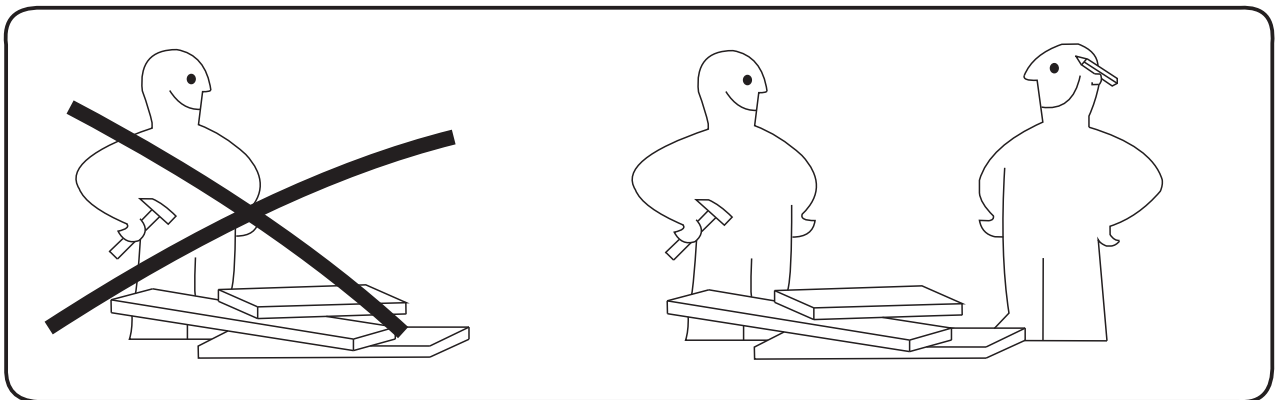
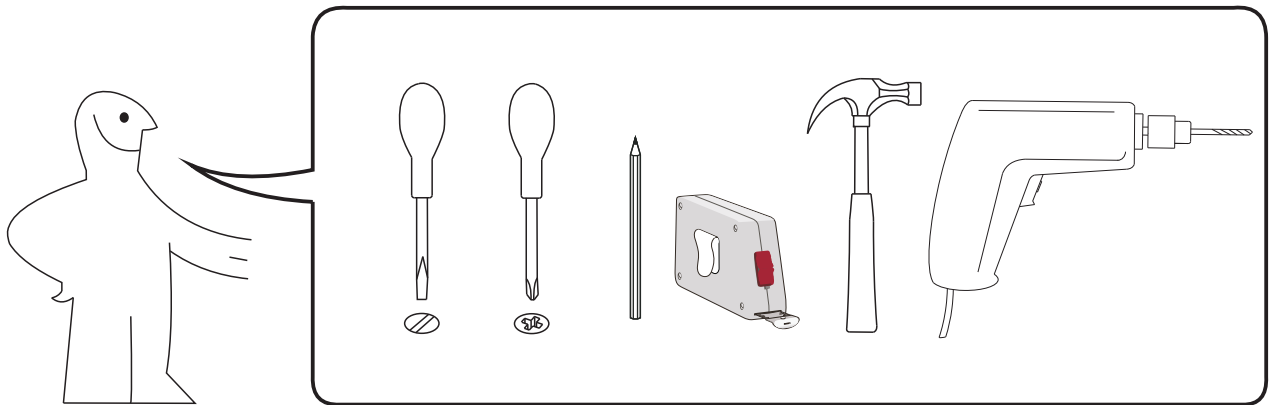











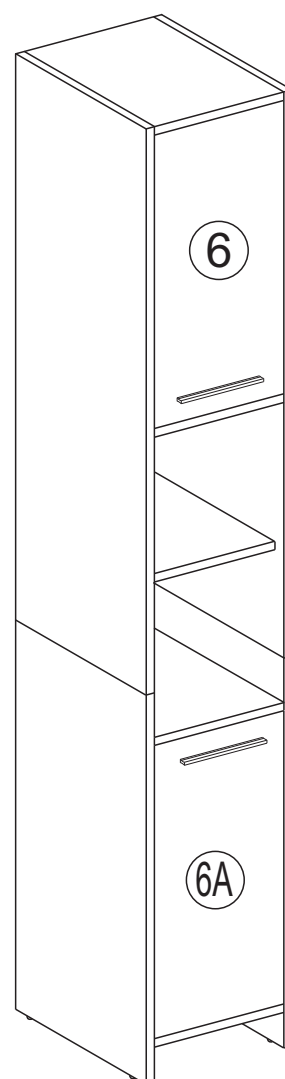




 A1 8*30mm x16	 C1 5*30mm x16	 D x24
 D1 16mm x24	 L3 x4	 J1 x4
 E6 4*14mm x8	 I2 128mm x2	 E4 4*16mm x8
 E5 3,5*16mm x3	 E3 3*20mm x18	 C2 8*56mm x4
 S7 x1	 H2 x14	 R3 x1
 K1 x4	 A2 8*50mm x4	 E18 M4*25mm x4
 Q1 x2	 U3 x8	 J x8


№	a+b	x
1L+1R	1089x300	1+1
2L+2R	806x300	1+1
3	266x300	1
4	266x284	3
5+5A	266x266	2+1
6+6A	586x260	1+1
7	607x280	1
8	600x280	1
9	614x280	1





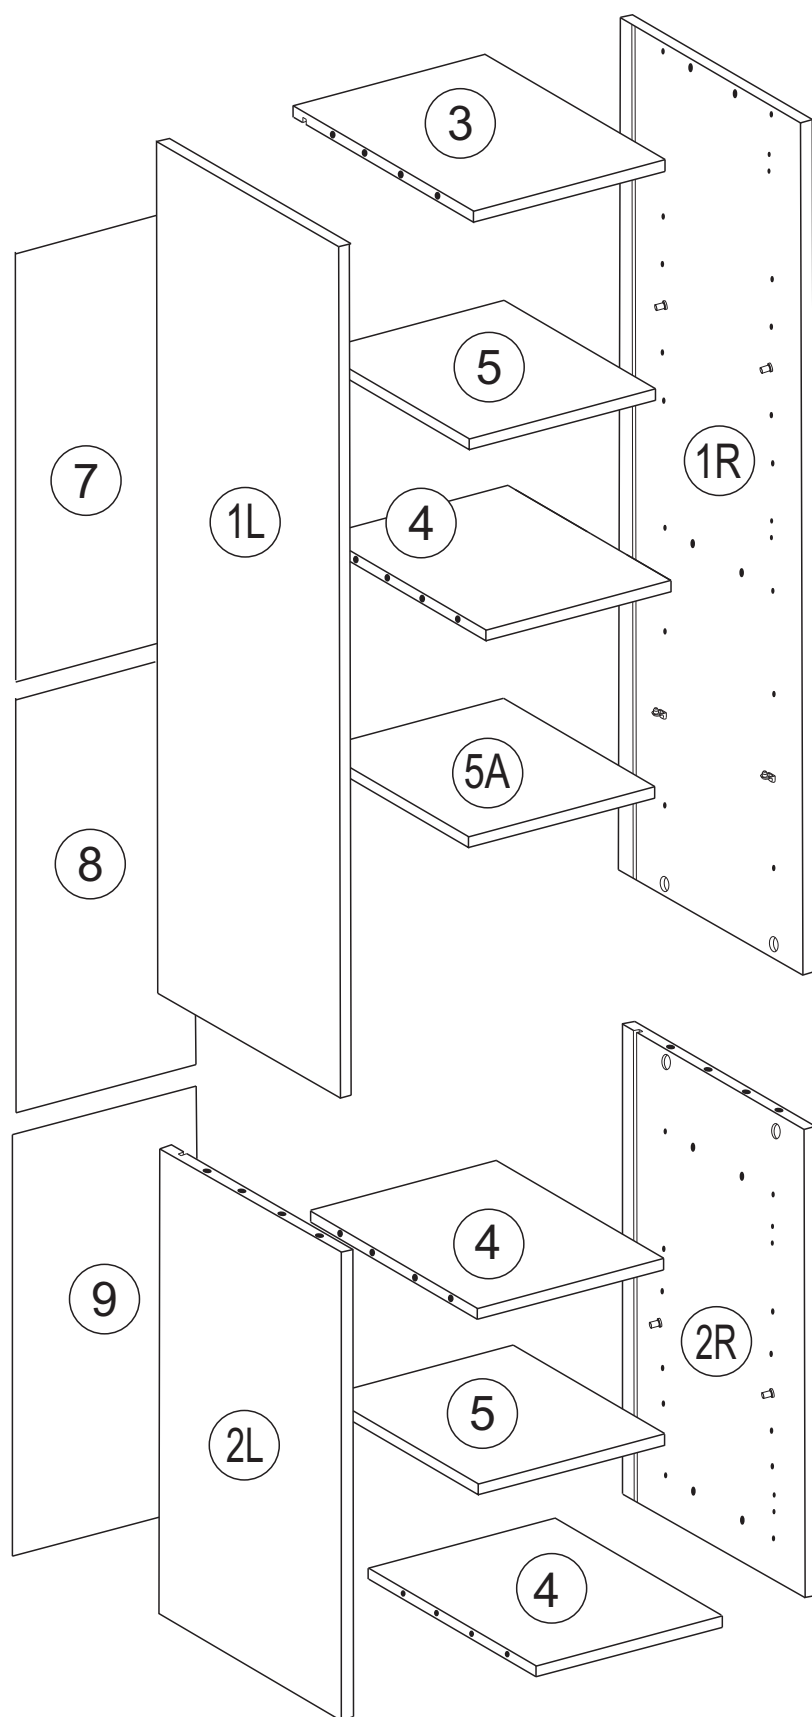


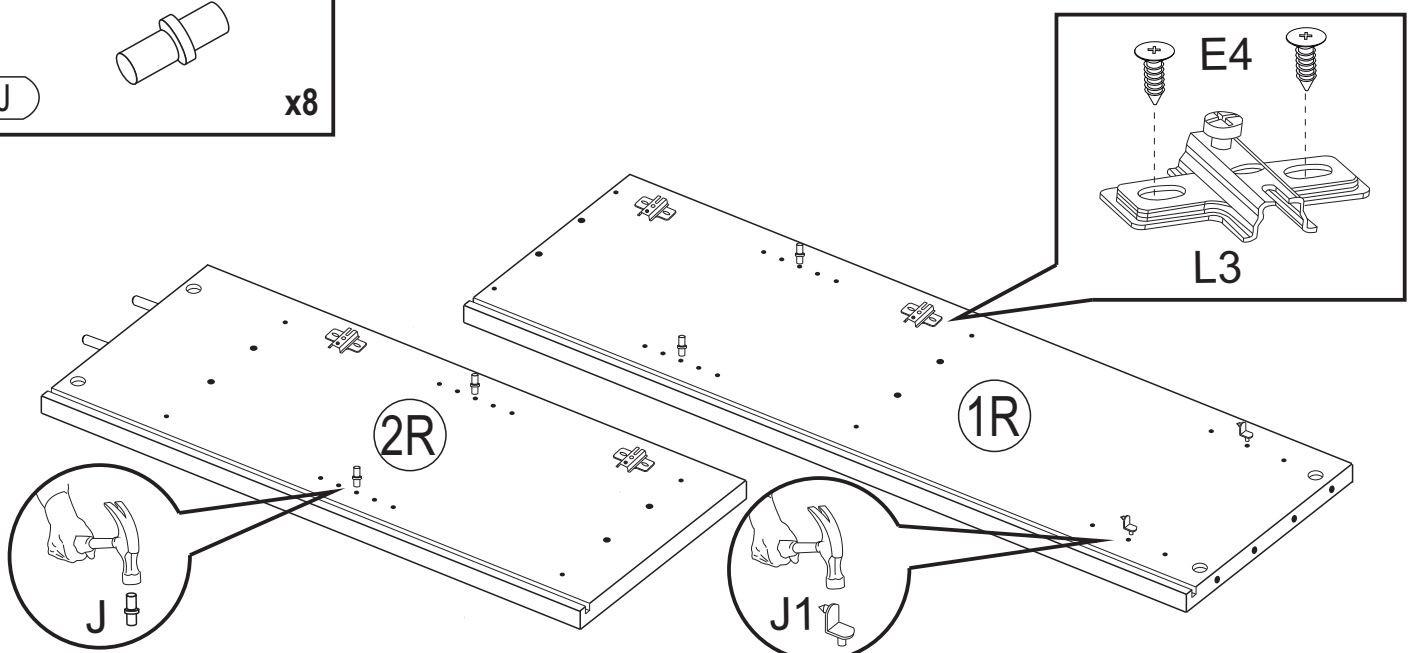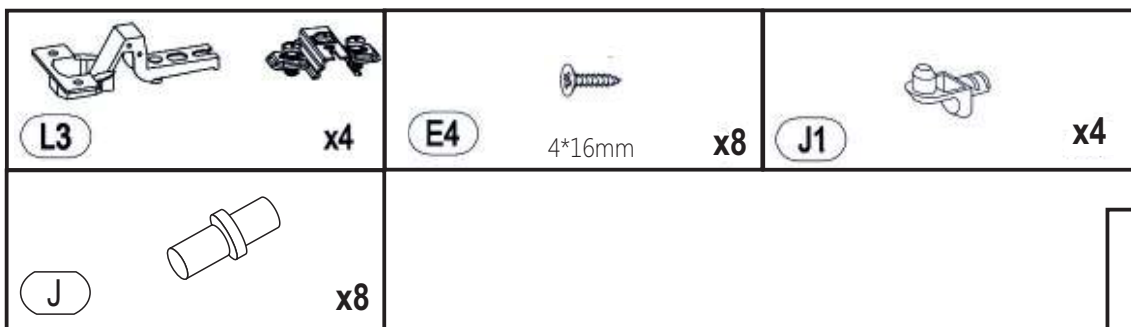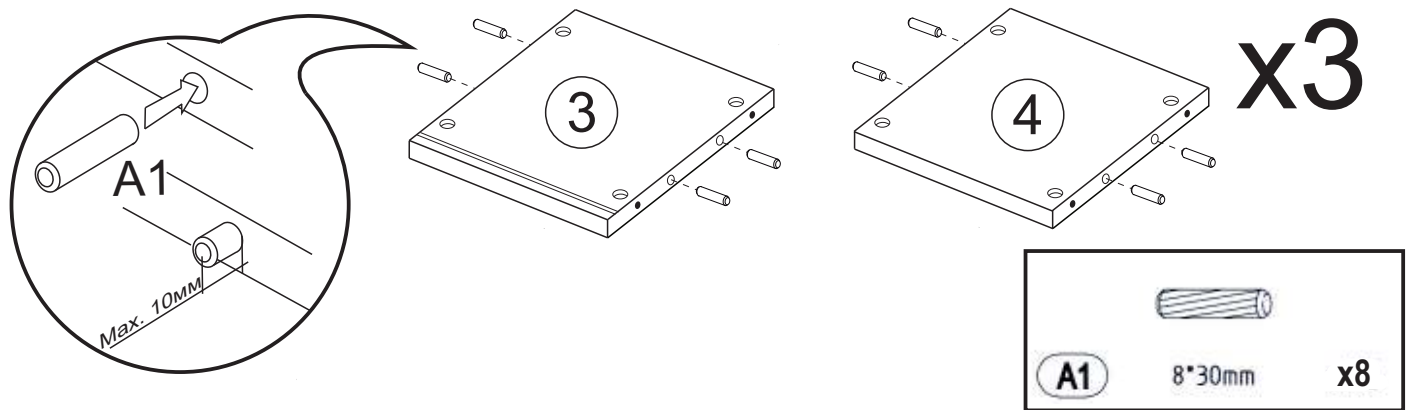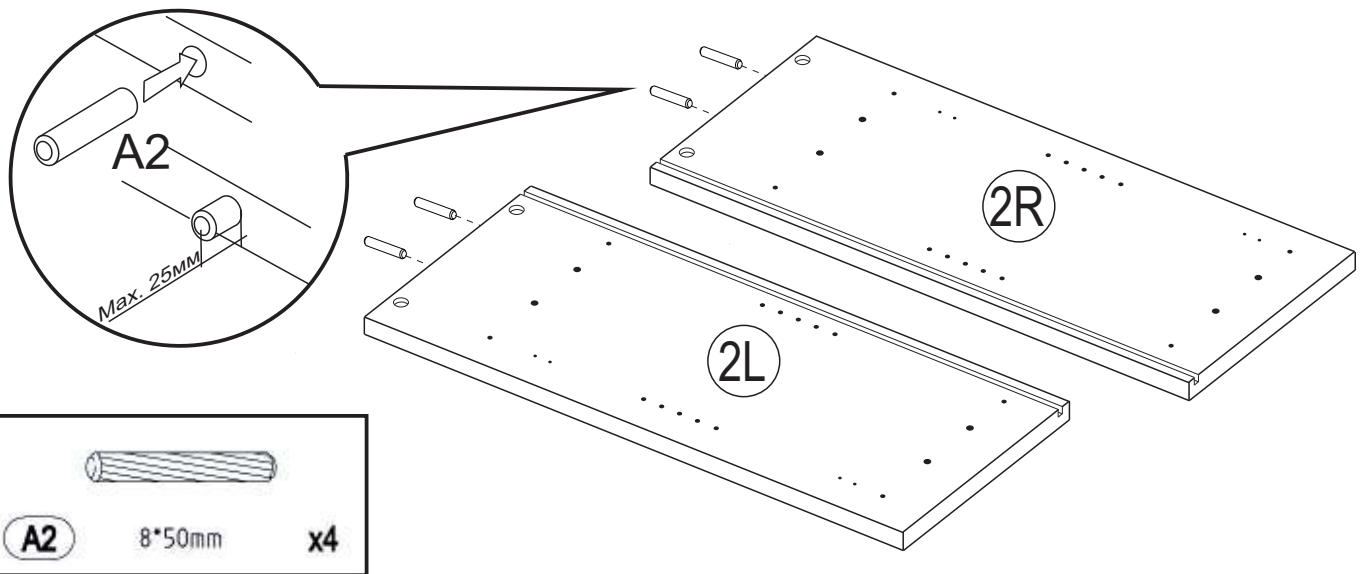




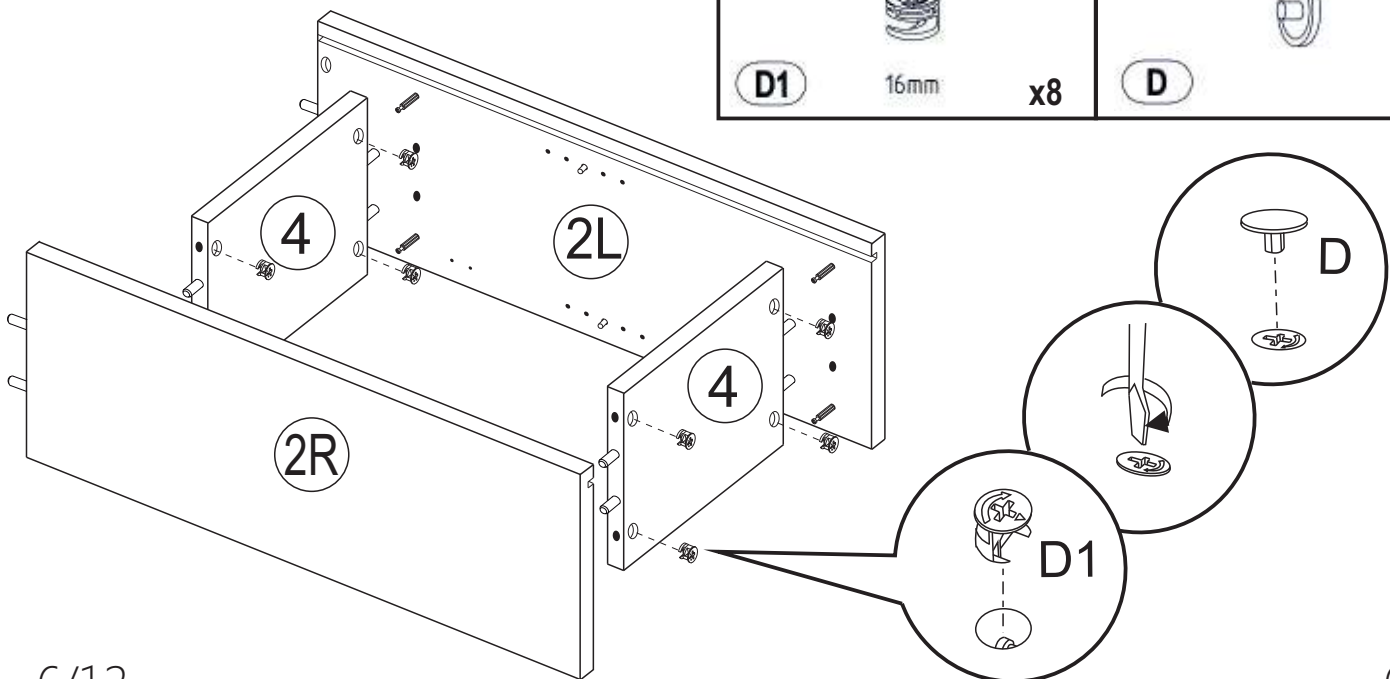
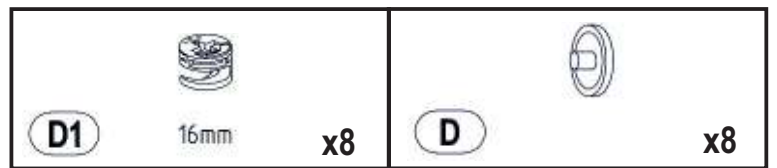
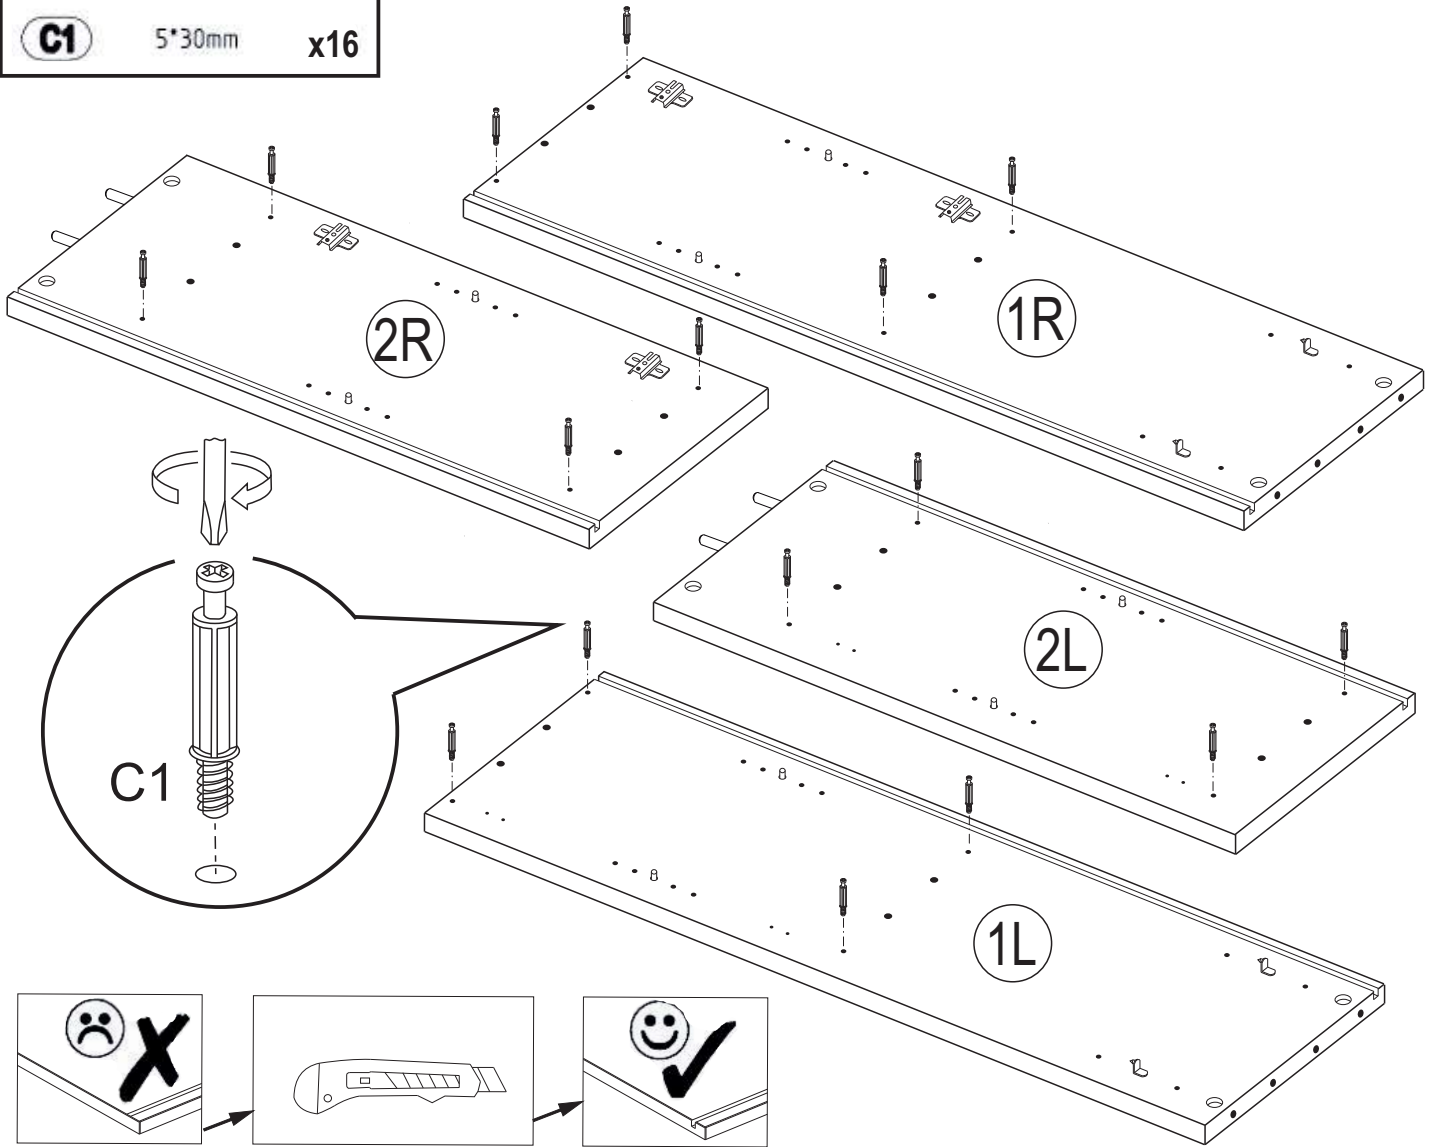


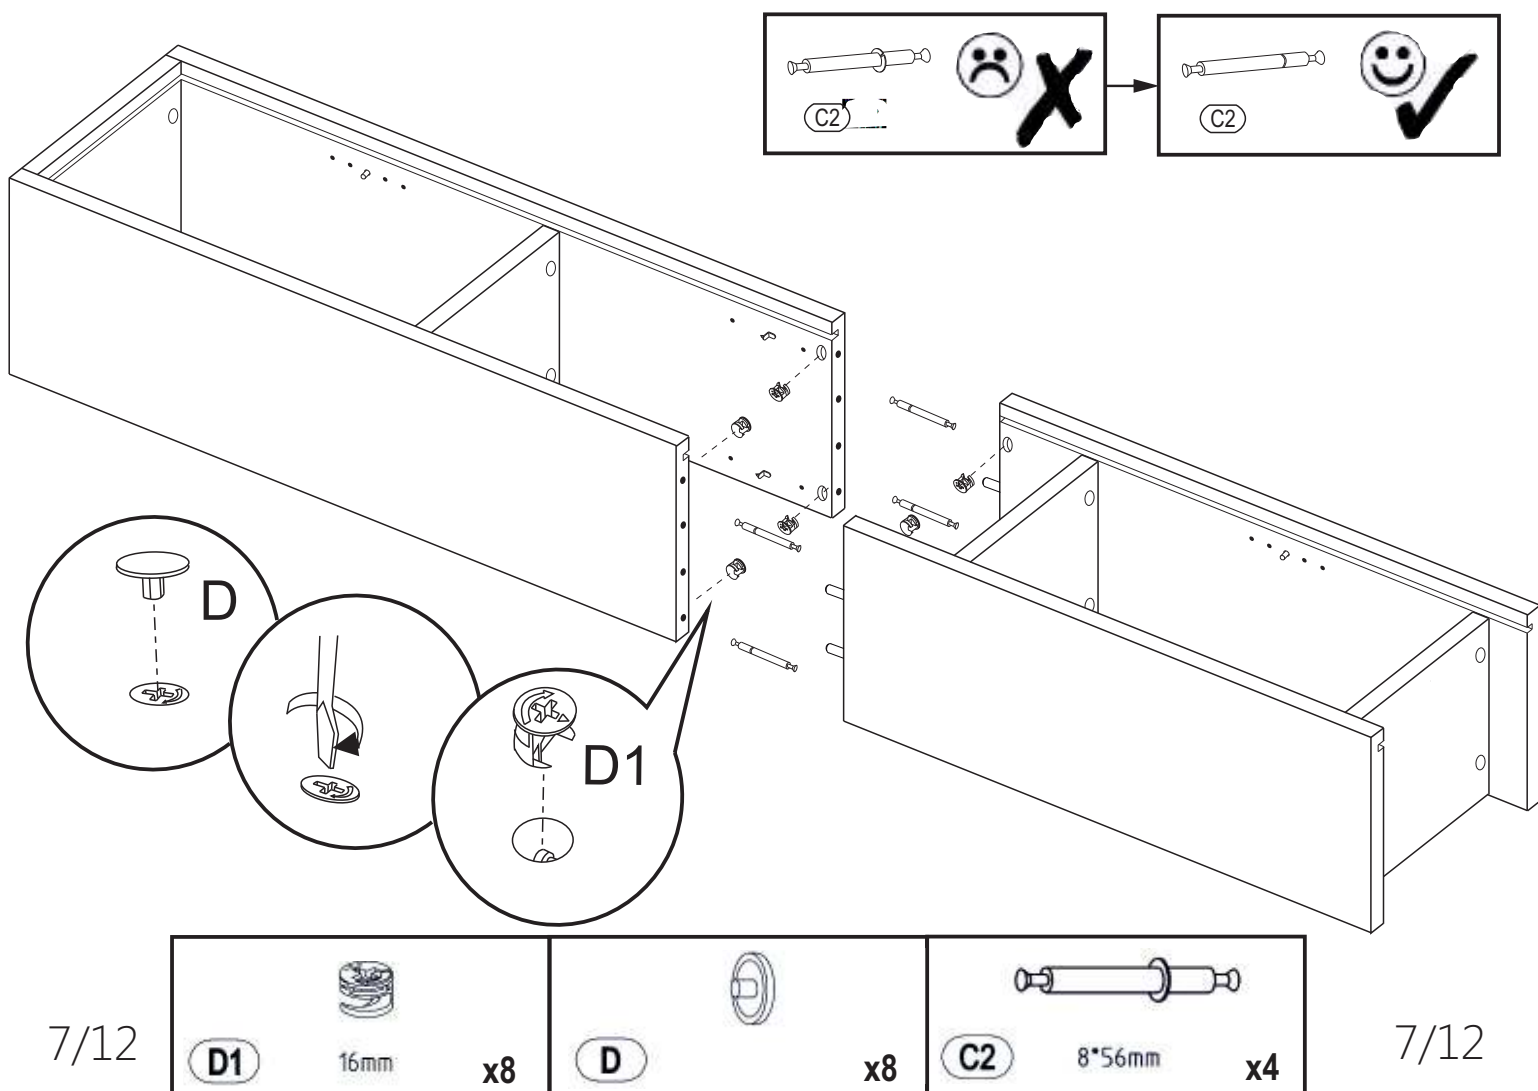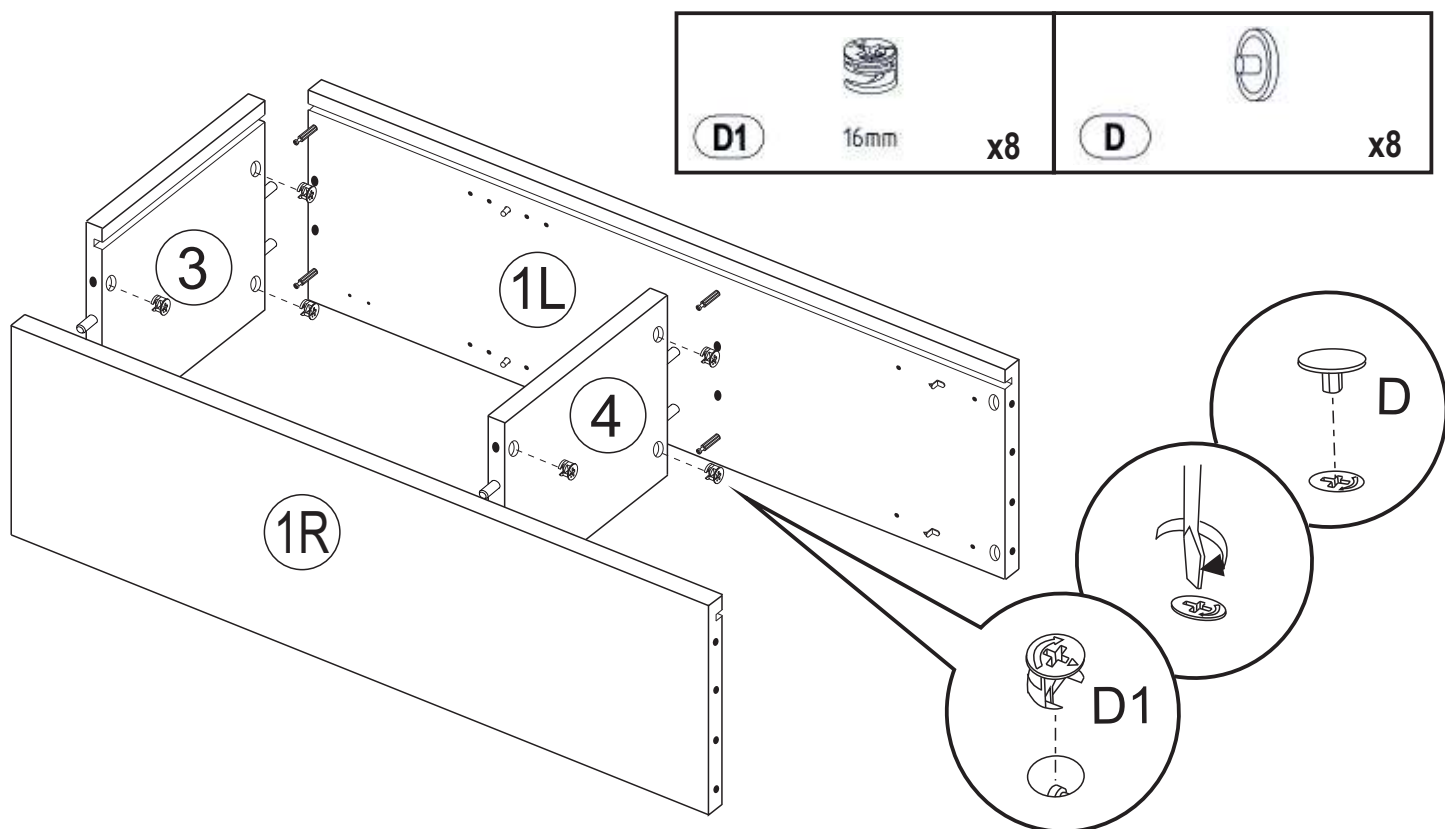

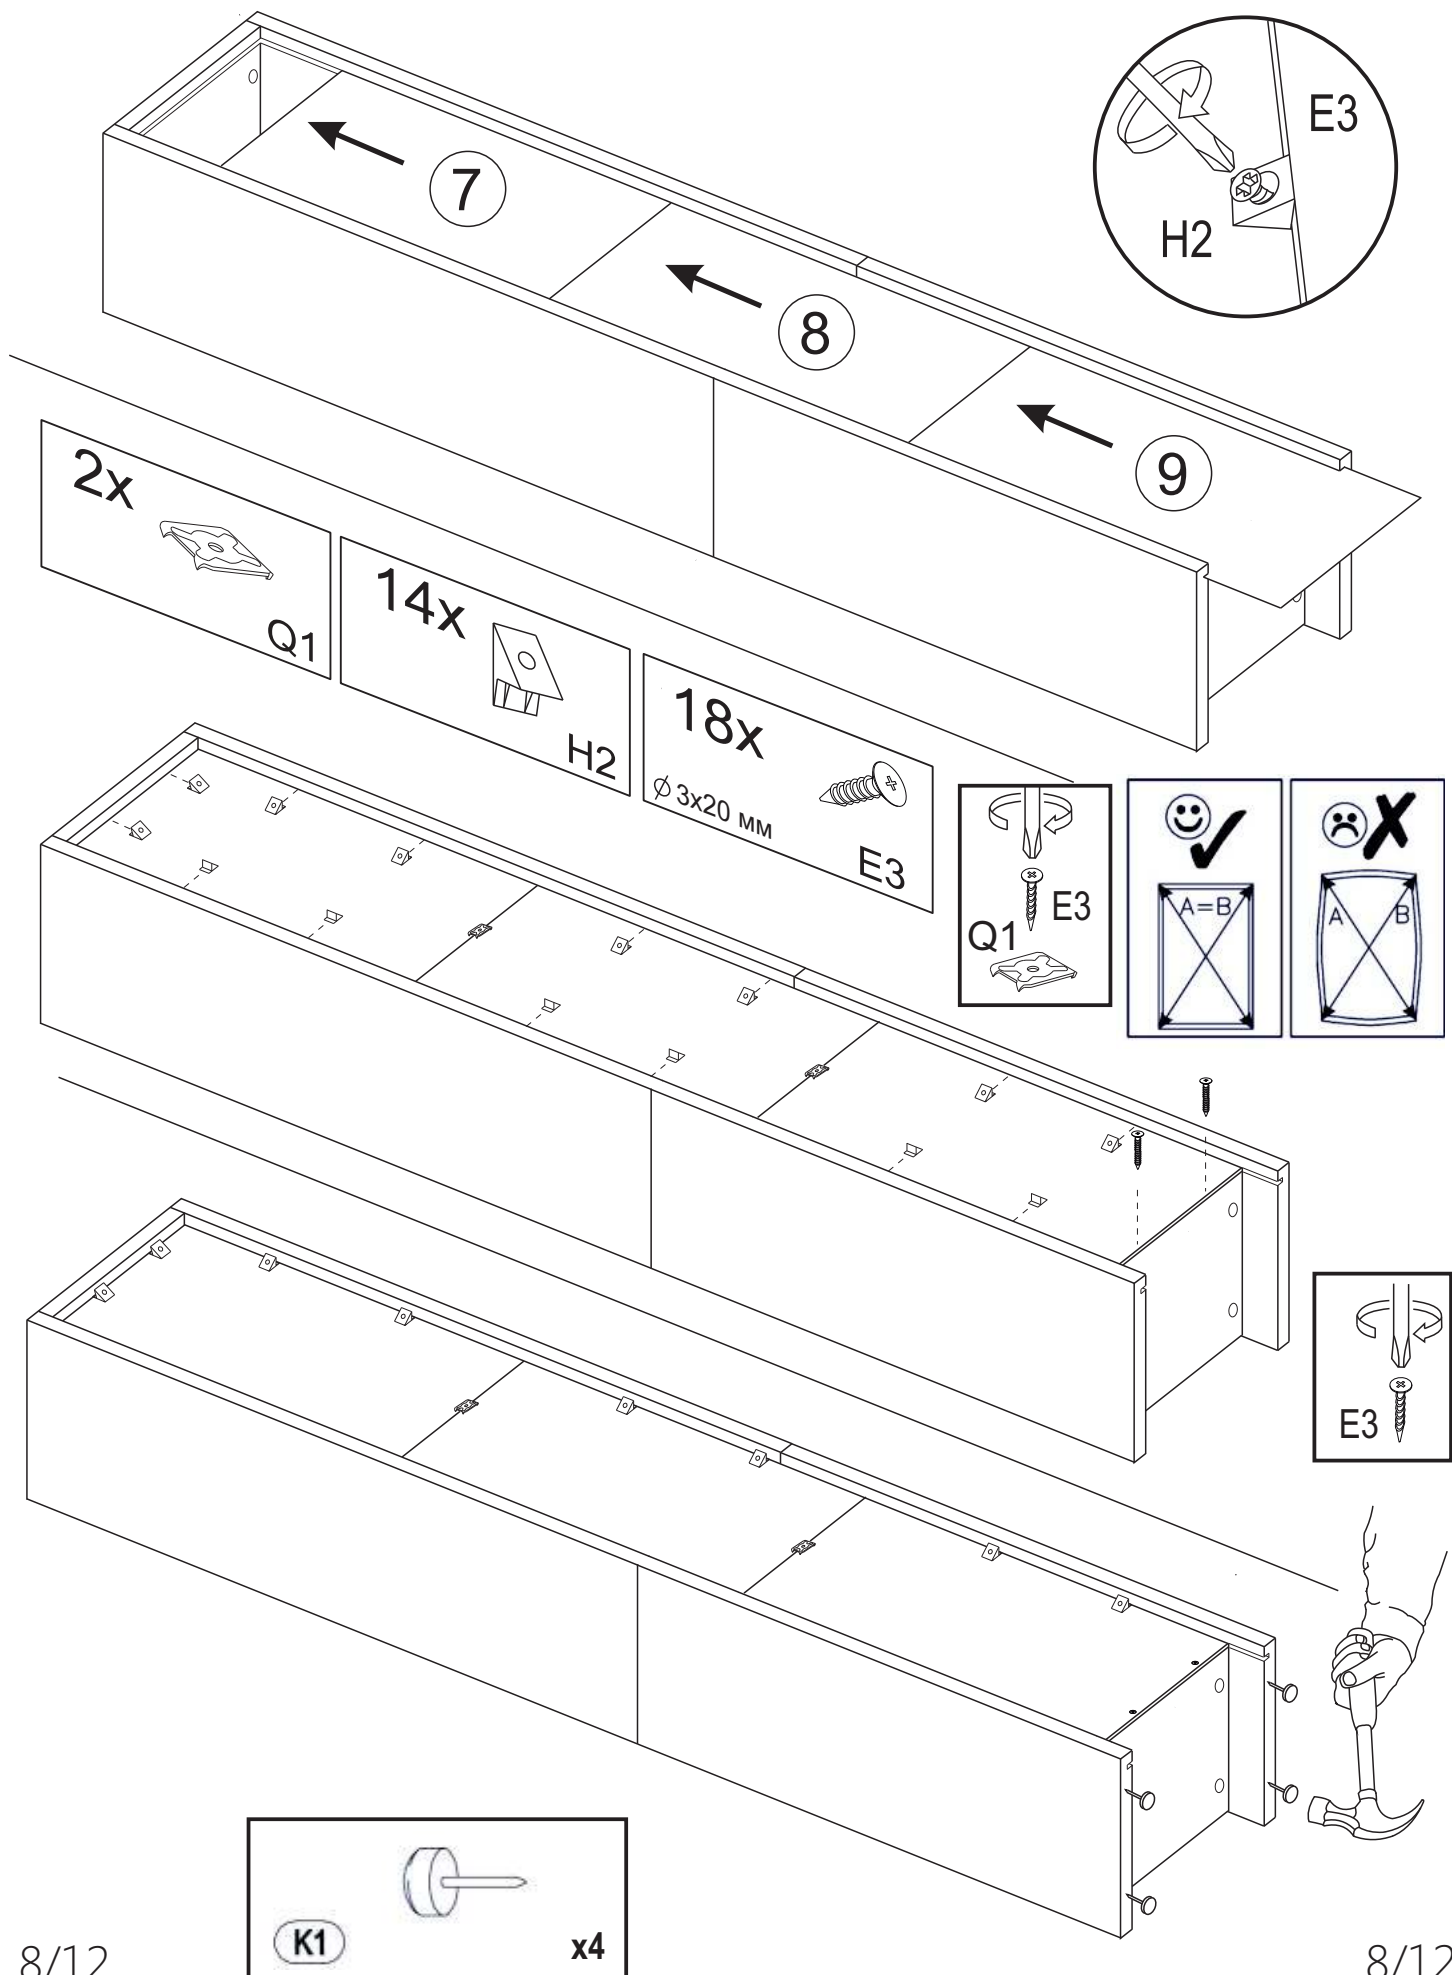

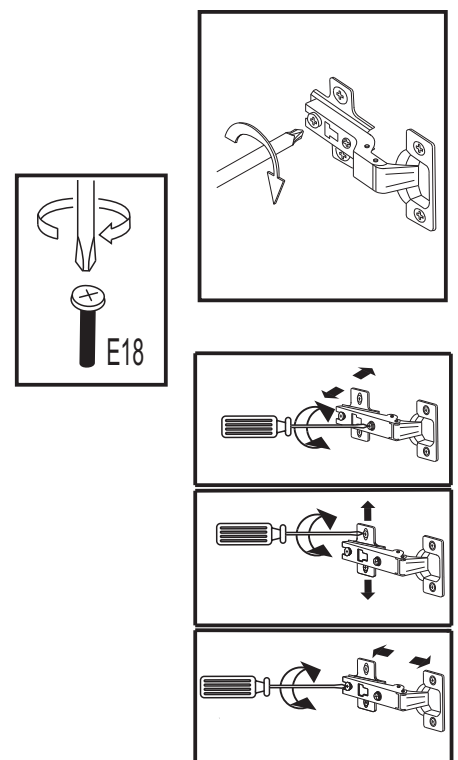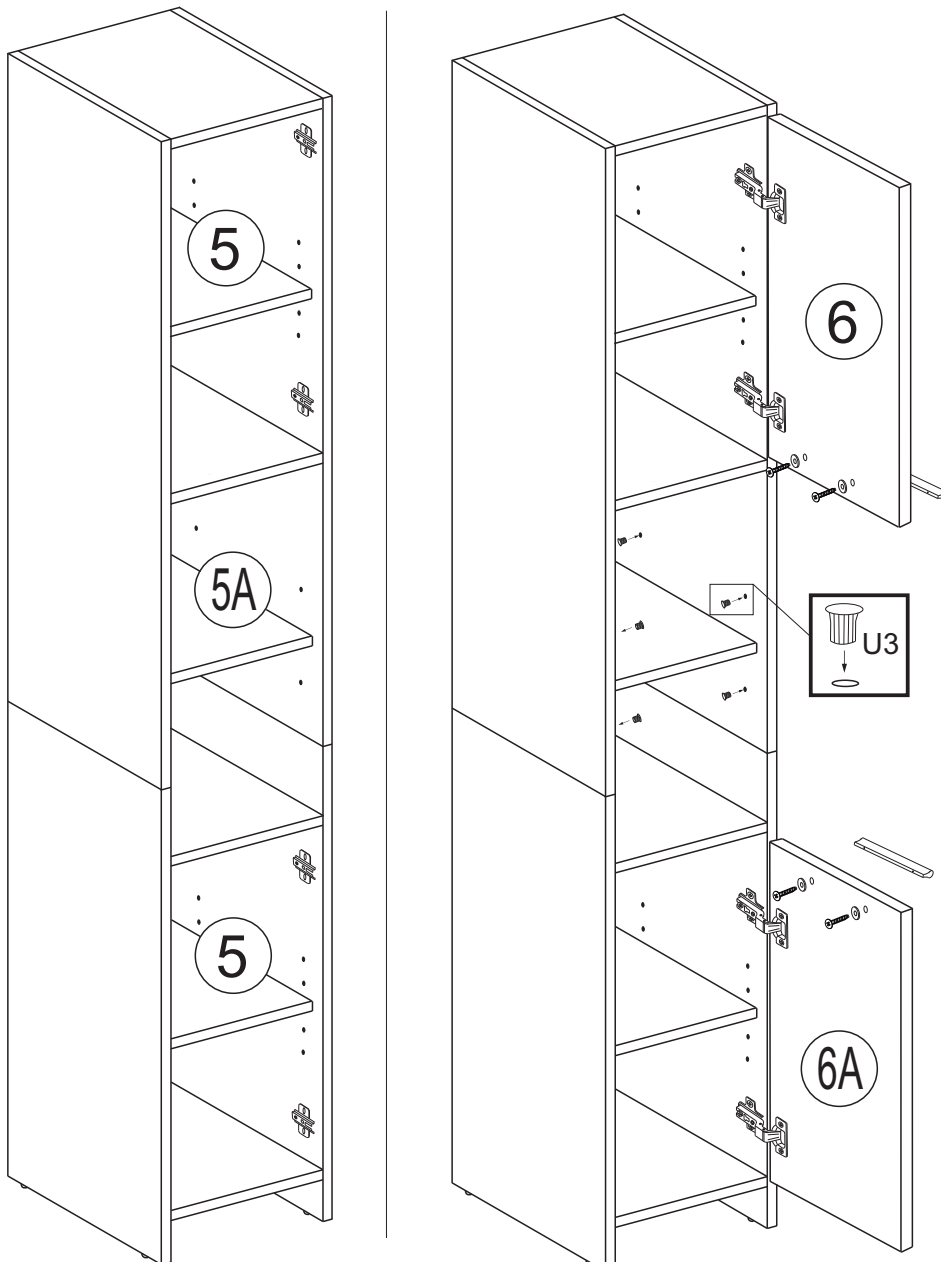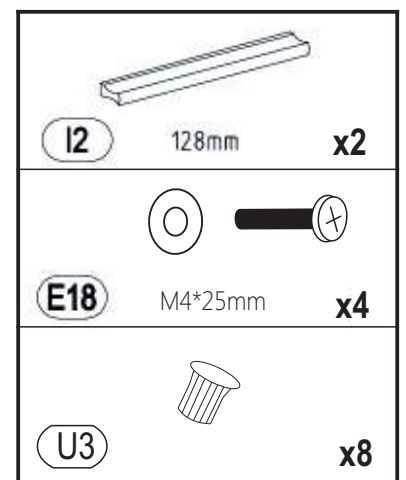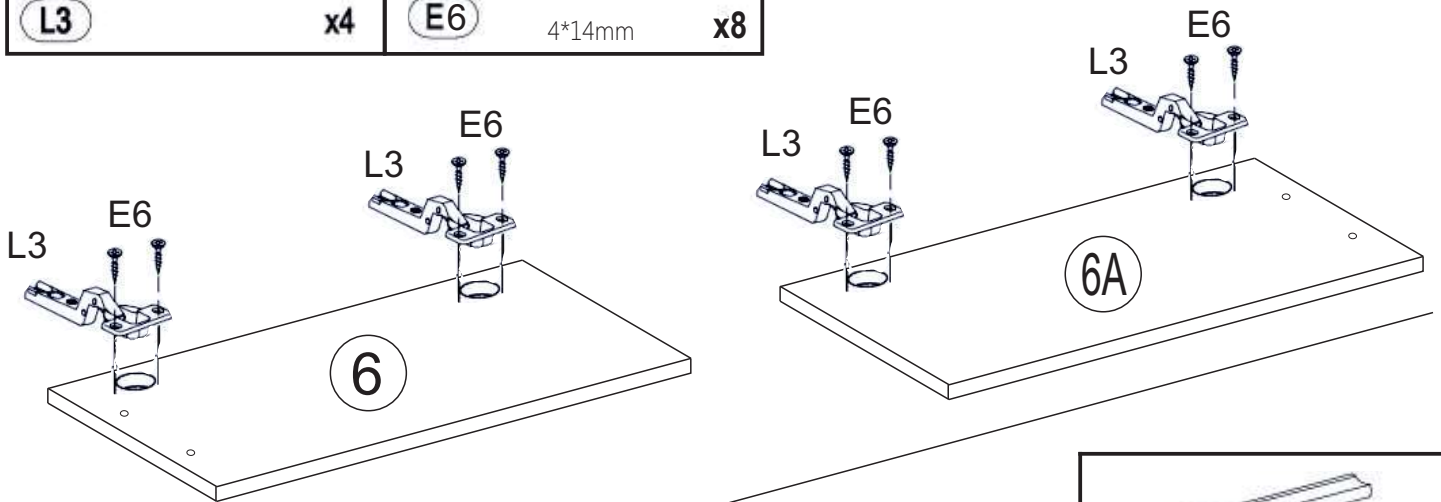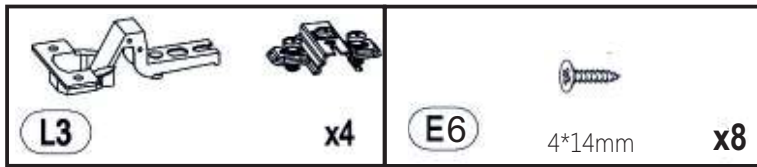

 S7	 E5 3,5*16mm
x1	x3

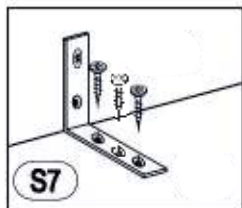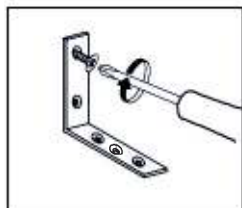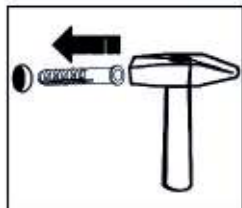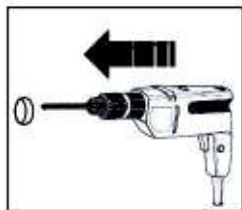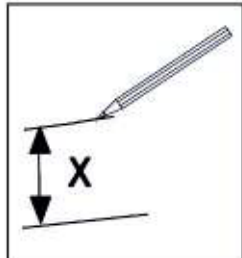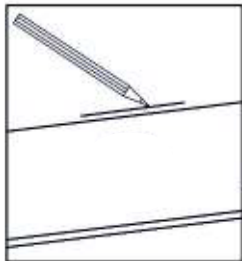

Wichtige Information
Sorgfältig lesen
Diese Information aufbewahren

(DE) ACHTUNG

Wenn Möbelstücke umkippen, können ernste oder lebensgefährliche Verletzungen durch Einklemmen die Folge sein. Um zu verhindern, dass das Möbelstück umkippt, muss es fest an der Wand verankert werden.

Beschläge für die Wandbefestigung sind nicht beige packt, da sie von der jeweiligen Wandbeschaffenheit abhängig sind. Befestigungsbeschläge benutzen, die für die heimischen Wände geeignet sind. Bei diesbezüglichen Fragen den örtlichen Fachhandel zu Rate ziehen.

