


Full-Length Mirror

Solid Wood | Mobile

CYJ023 | Mirror panel: 1706 × 400 × 23MM


Assembly Instructions

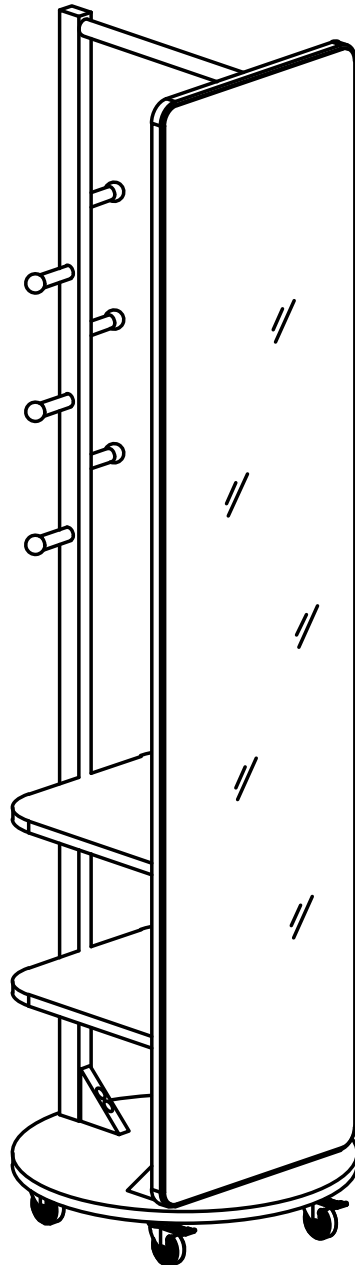

2 workers required

Parts List


1 Mirror Back Panel

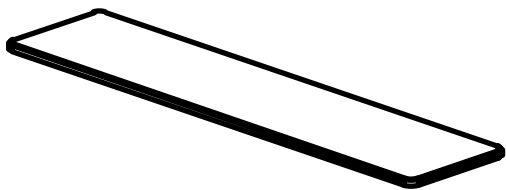

1706 × 400 × 23MM

1 PC


2 Base

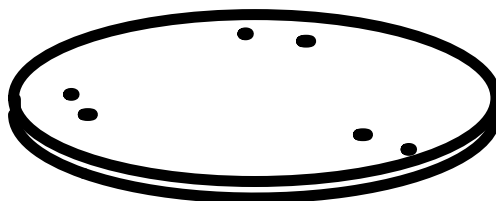

Ø500 × 18MM

1 PC


3 Shelf

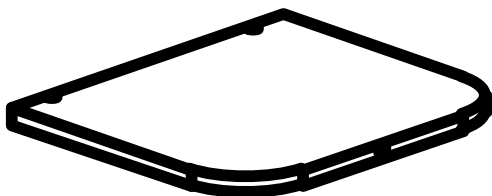

390 × 337 × 18MM

2 PCS

4 Back Post

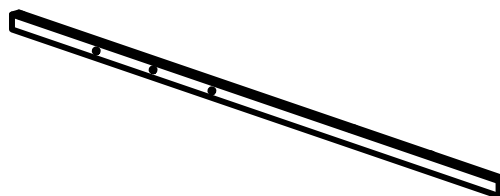


1706 × 40 × 25MM

1 PC

Items marked "Pre-installed" are already installed in the product and are not included in the hardware package.

Parts List (continued)

5 Reinforcement Strip

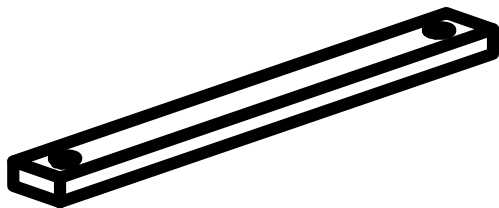


370 × 40 × 18MM

2 PCS

Pre-installed


6 Triangular Block

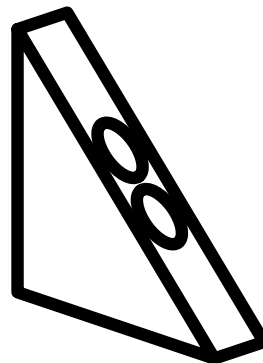

113 × 56.5 × 18MM

3 PCS


7 Hanging Rod

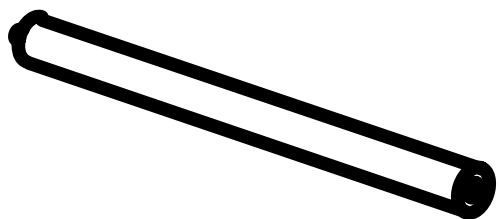

337 × Ø25MM

1 PC

8 Hook

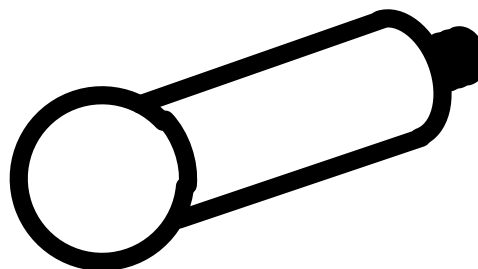


82 × Ø27MM

6 PCS

Items marked "Pre-installed" are already installed in the product and are not included in the hardware package.

Hardware & Tools


A Hex Socket Screw

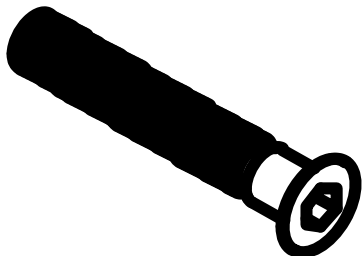

M7 × 35MM

4 PCS


B Hex Socket Head Screw

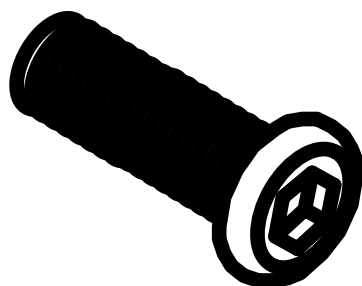

M6 × 35MM

12 PCS

C Hex Socket Head Screw

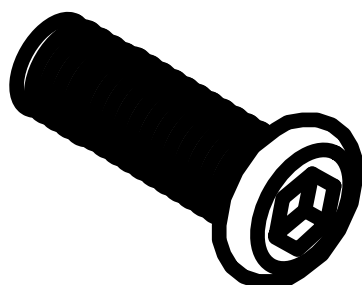

M6 × 25MM


4 PCS

Pre-installed

Pre-installed hardware is not included in the hardware package.

Hardware & Tools (continued)

D Hex Key

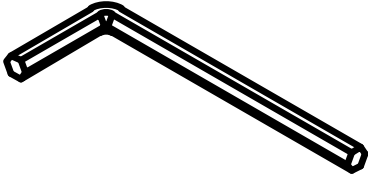


M4 × 57MM

1 PC

Tool - reuse as needed


E Cover Sticker

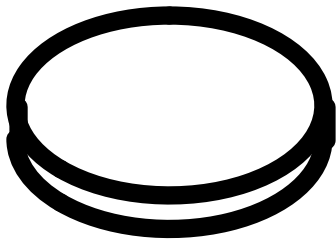

Ø20 × 1MM

3 PCS

F Caster with Brake

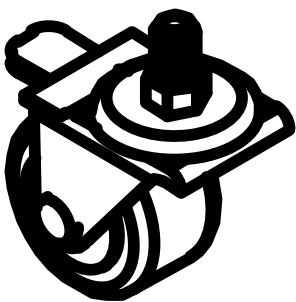


Ø25MM; total height 43MM

2 PCS

Pre-installed hardware is not included in the hardware package.

Hardware & Tools (continued)


G Caster without Brake

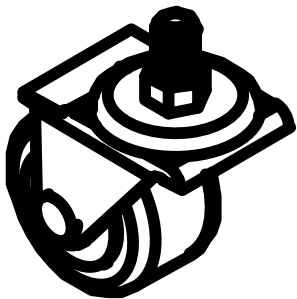

Ø25MM; total height 43MM

3 PCS

H Open-End Wrench

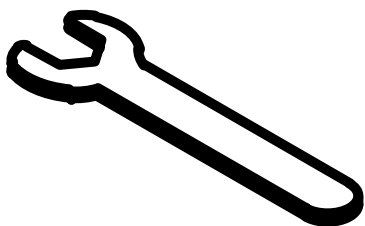


Opening: 14MM

1 PC

Tool - reuse as needed

I Flat Washer

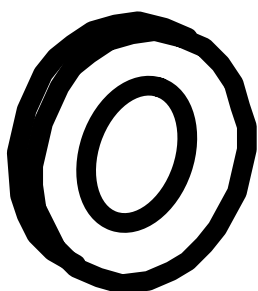


Ø16MM

5 PCS

Pre-installed hardware is not included in the hardware package.

Step 1


After unpacking, check the parts against this manual.
Screw hanging rod 7 clockwise into mirror back panel 1.

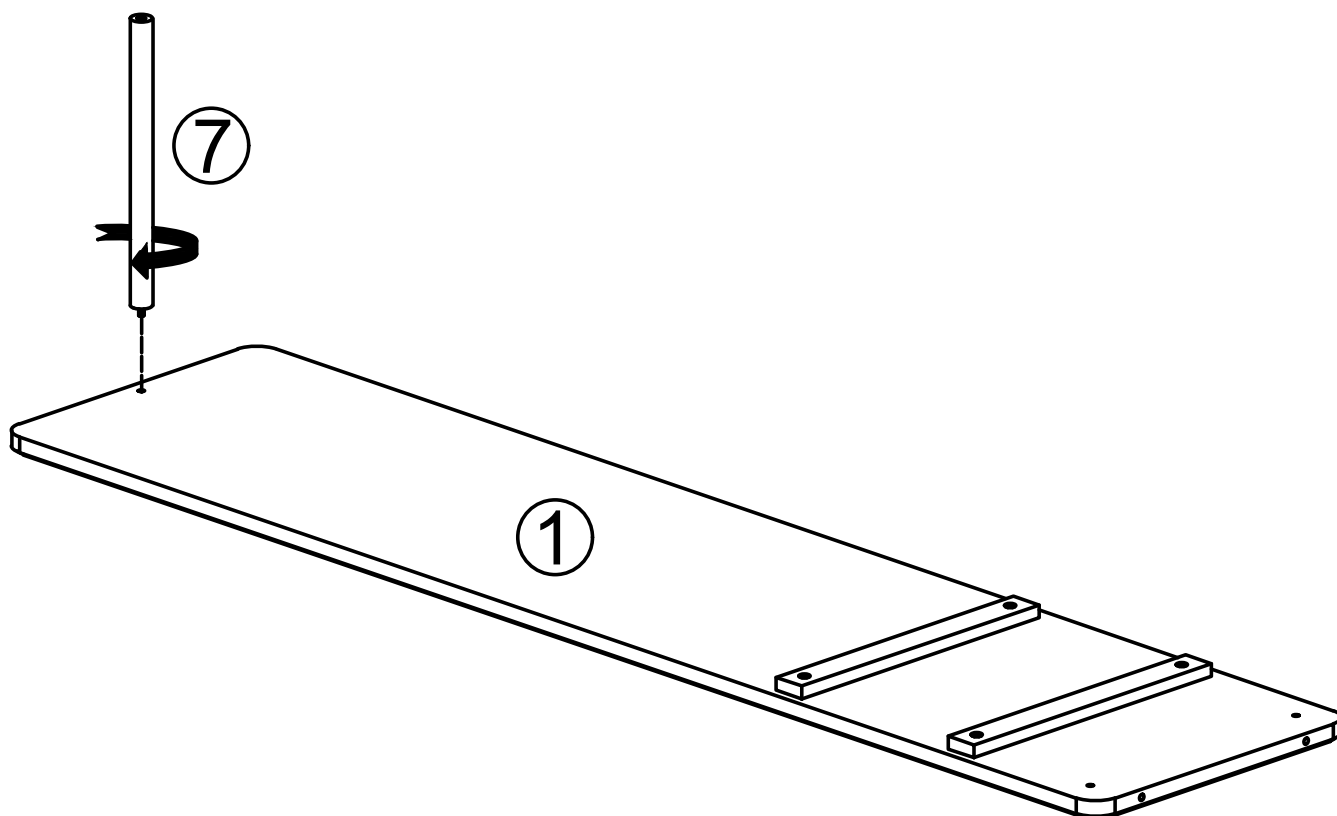

Step 2

Align base 2 with the holes at the bottom of parts 1 and 4.
Fasten with screws B using hex key D. Align the hole and slot
in back post 4 with hanging rod 7, fasten with B using D,
and cover the hole with sticker E.


Screws: B × 4; sticker: E × 1. Tool: D.

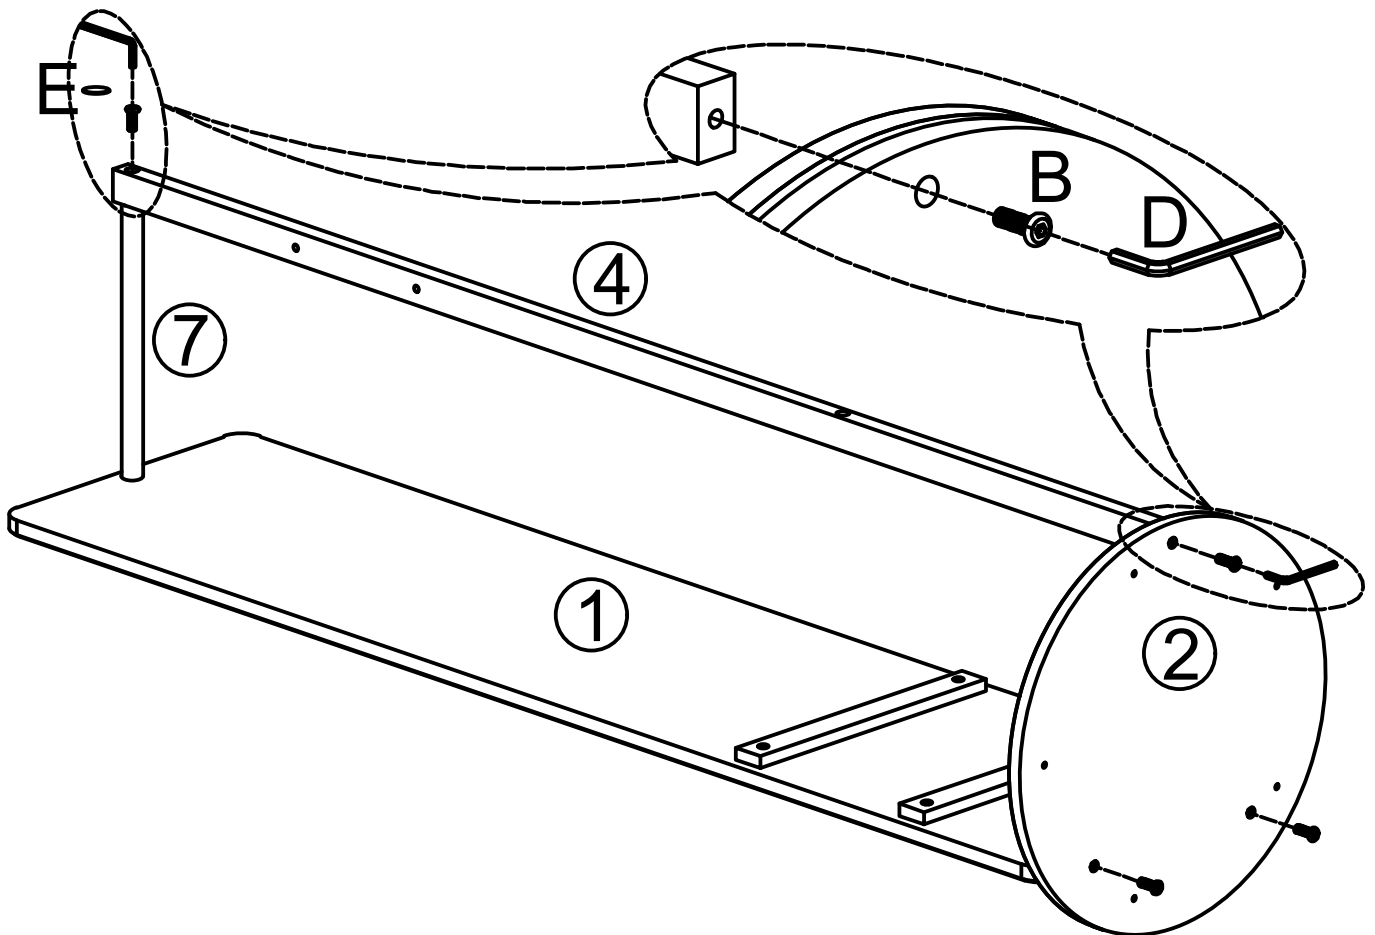

Step 3

Place shelves 3 in the positions shown. Align the end holes and fasten with screws B using hex key D. Cover the holes with stickers E. Screw hooks 8 clockwise into back post 4.

Screws: B × 2; stickers: E × 2. Tool: D.

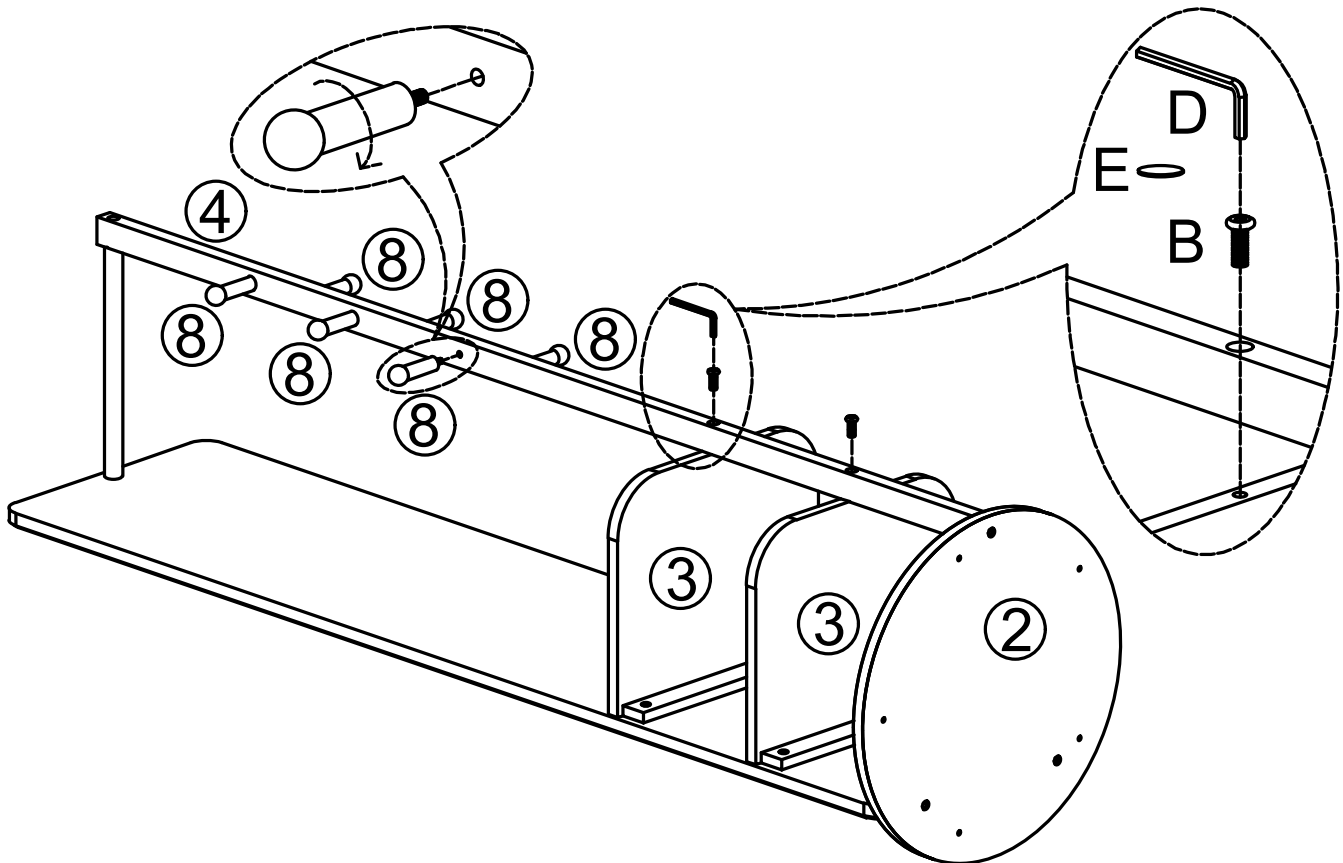


Step 4

Align casters F/G and washers I with the holes in base 2.

Use wrench H to tighten clockwise.

Turn counterclockwise to remove.

Casters: F × 2, G × 3; washers: I × 5. Tool: H.

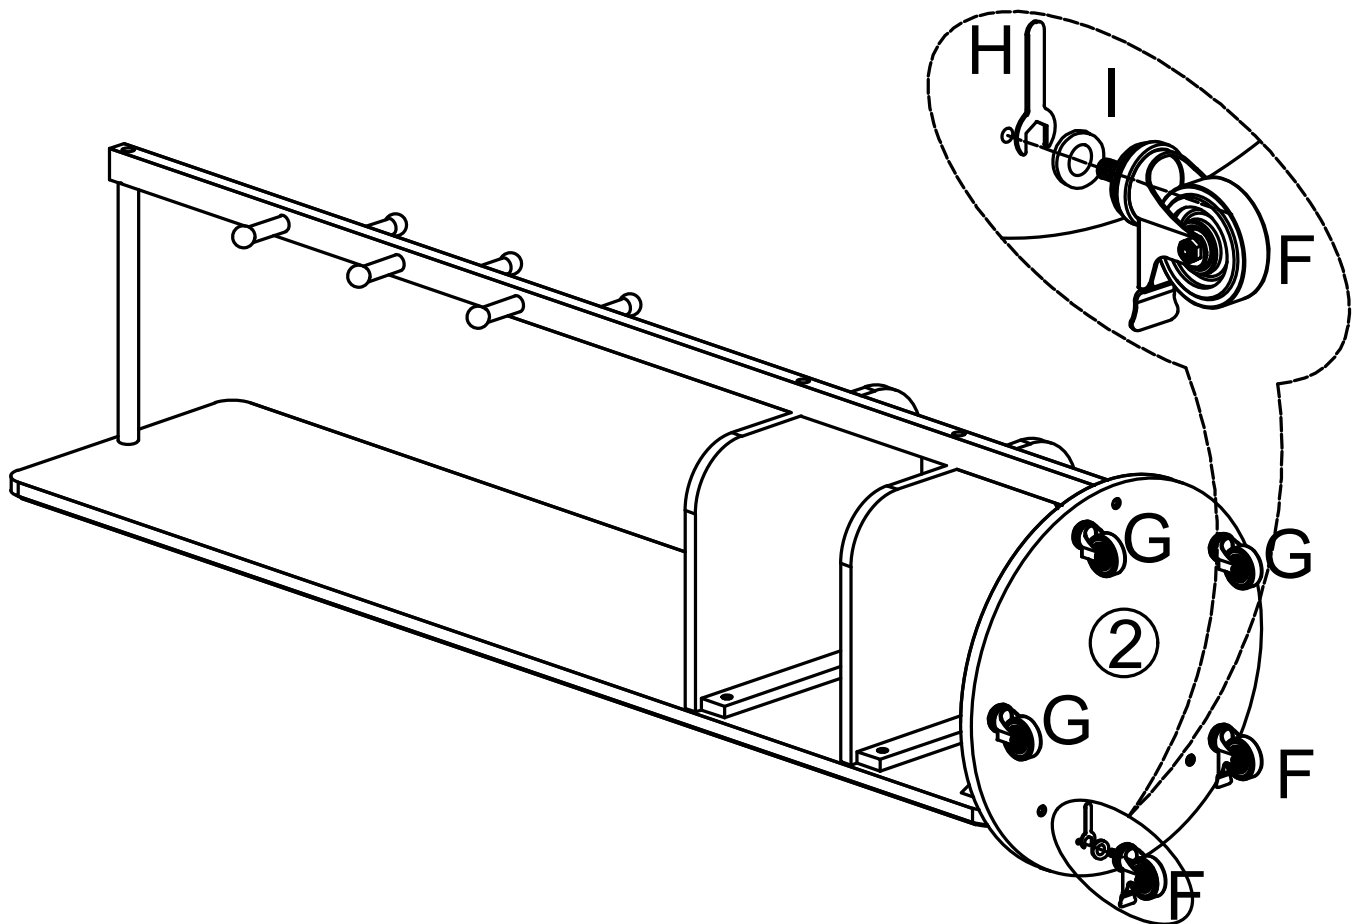


Step 5

Figure 1: Align triangular blocks 6 with the holes in parts 1, 2 and 4. Fasten with screws B using hex key D.

Figure 2: Fasten shelves 3 onto reinforcement strips 5 with screws A using hex key D.

Screws: B × 6, A × 4. Tool: D.

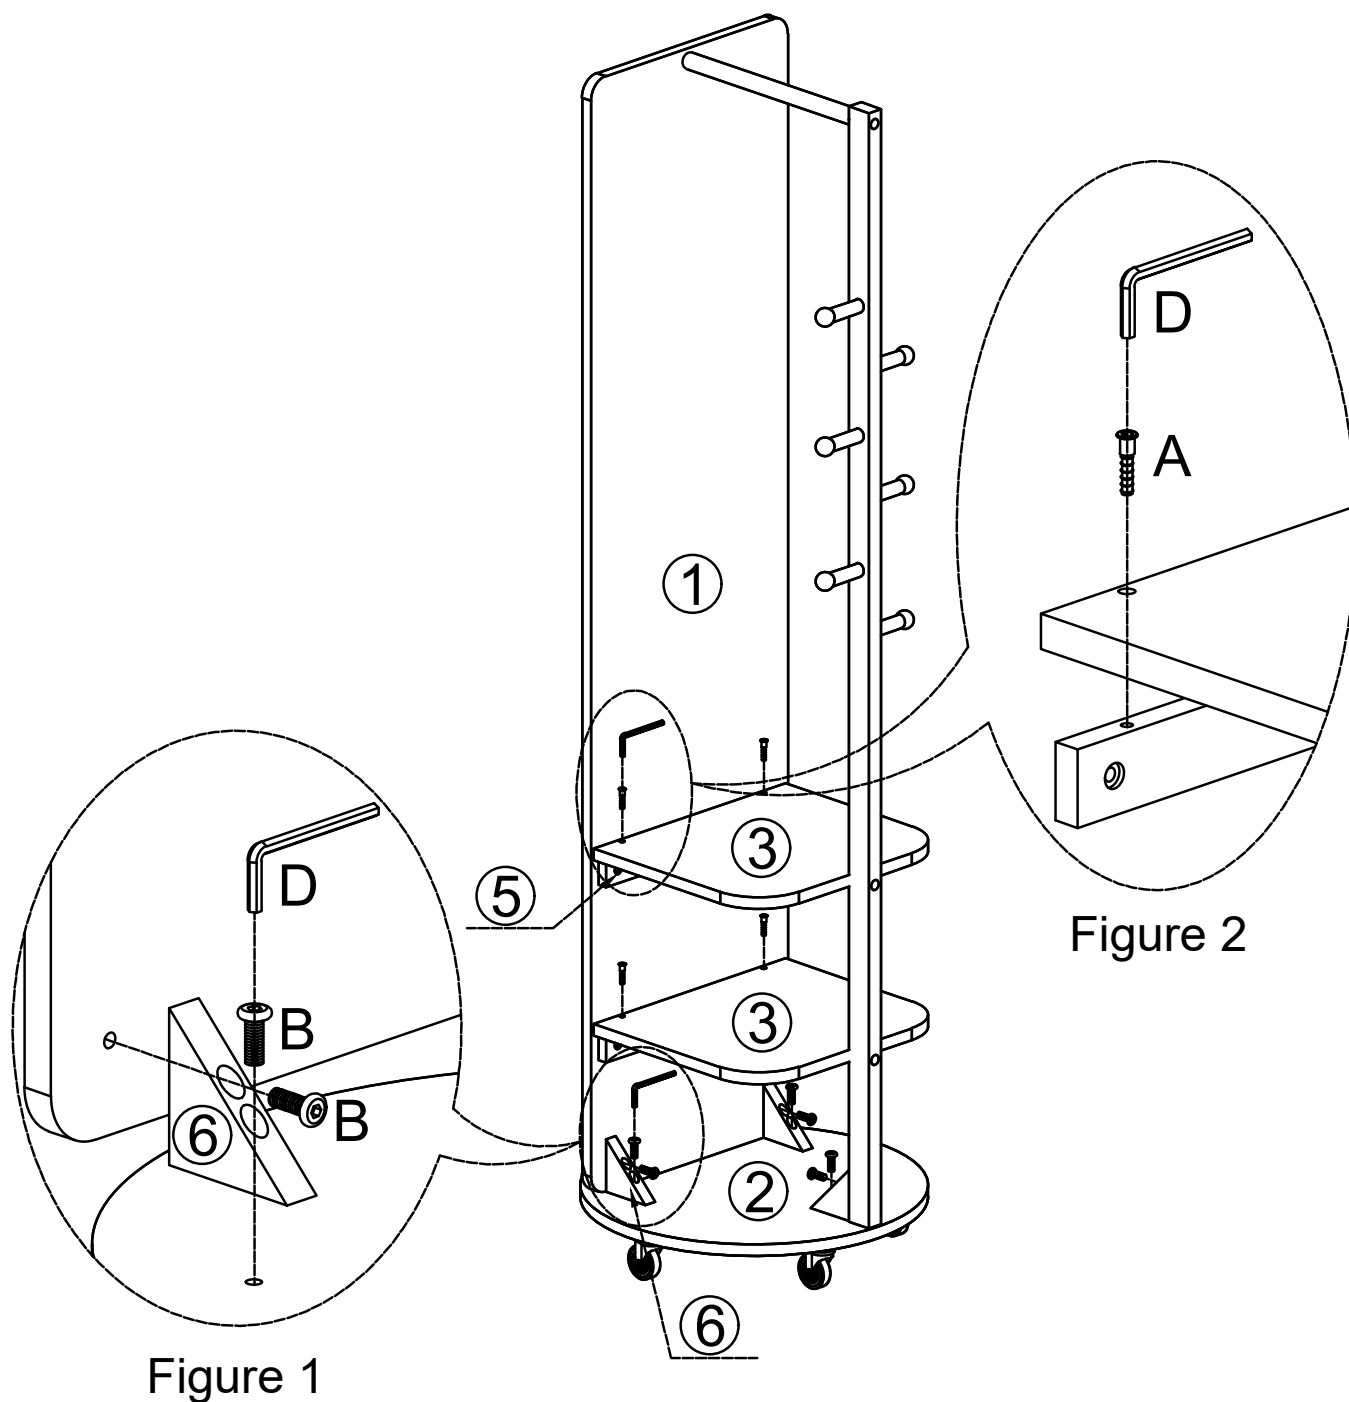

Step 6

Assembly complete.

