



ASSEMBLY DIAGRAM

276 Q

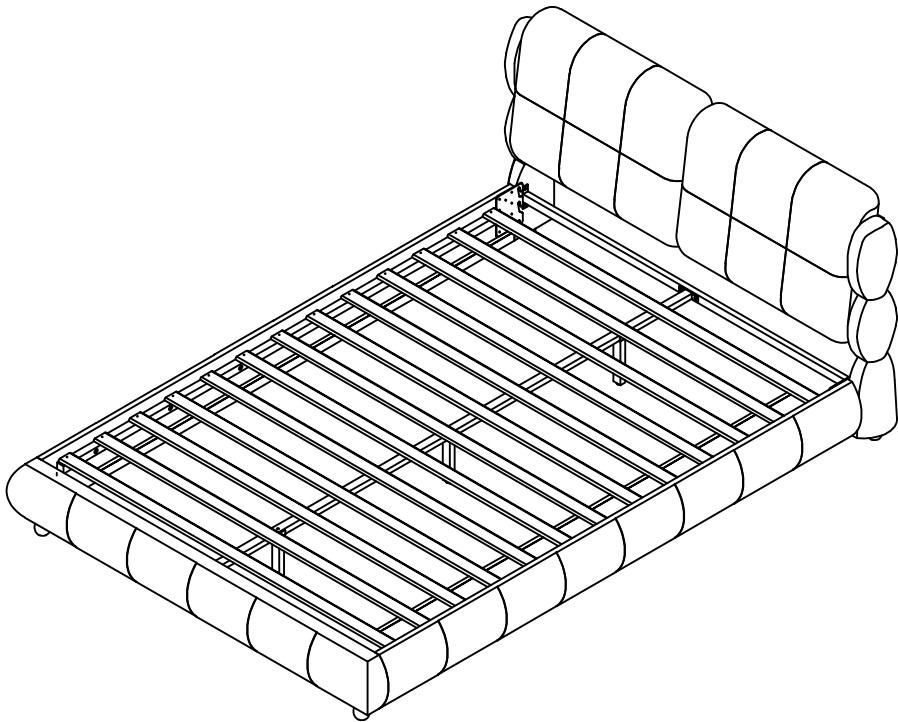


STEP: Packing Details










Box 1

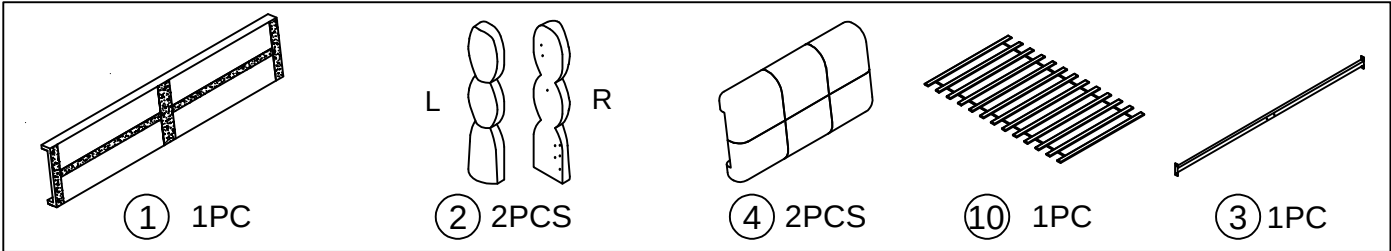


Box 2

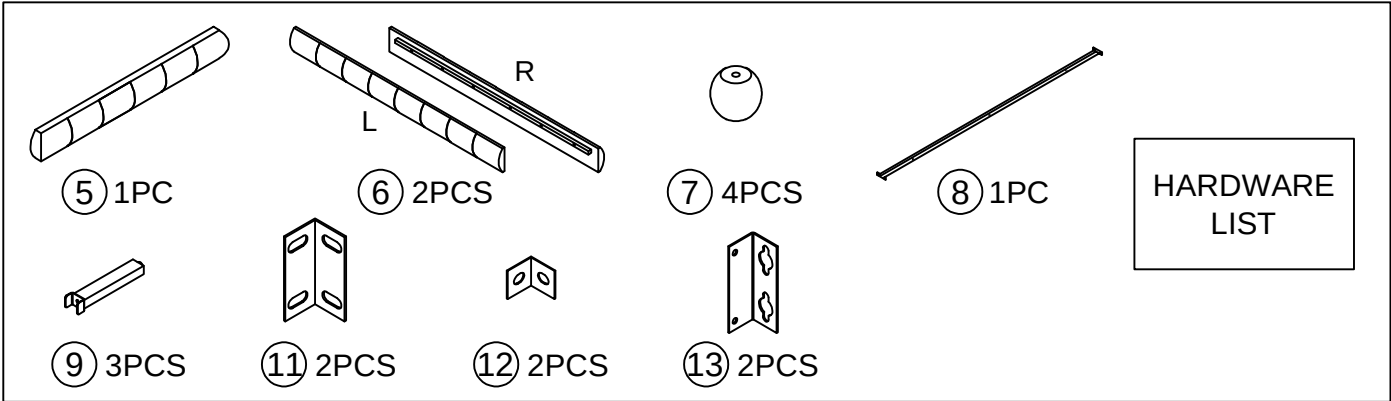


Parts List

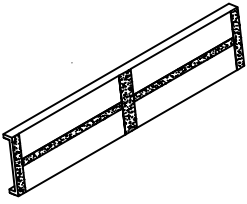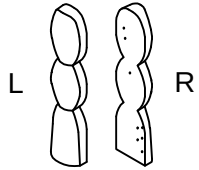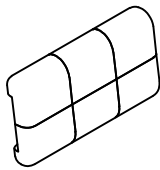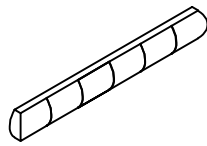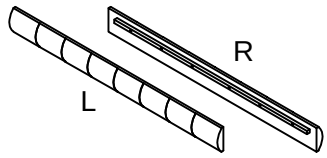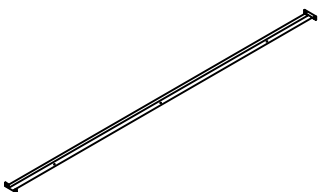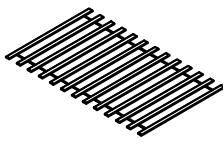
① Headboard 1PC 	② HB Leg 2PCS 	③ HB Support rail 1PC 	④ HB Back cushion 2PCS 
⑤ Footboard 1PC 	⑥ Side rail 2PCS Left and Right 	⑦ Feet 4PCS 	⑧ Cross bar 1PC 
⑨ Support Leg 3PCS 	⑩ Slat 1PC 	⑪ Angle iron 2PCS 	⑫ Angle iron 2PCS 
⑬ Connect plate 2PCS 			

Hardware List

A Bolt 22PCS  M8*25mm	B Bolt 7PCS  M8*50mm	C Bolt 12PCS  M6*20mm	D Flat washer 29PCS  M8	E Spring washer 29PCS  M8
F Flat washer 12PCS  M6	G Spring washer 12PCS  M6	H Screw 26PCS  8*30mm	I Allen key 1PC  M8	J Allen key 1PC  M6
K Screwdriver 1PC 				

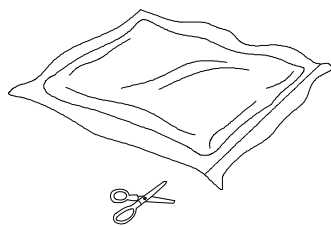

Carefully open the compression bag.

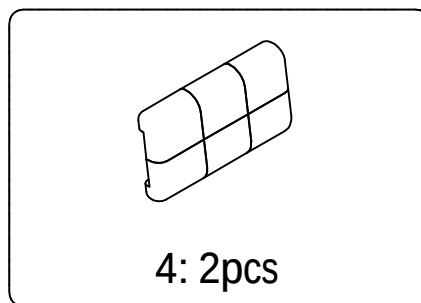


TIPS:

Wait patiently for the rebound; This is the key! It takes 12-24 hours (or more) for the upholstery to fully regain its full shape and comfort.

During or after recovery, gently pat and knead the surface and edges of the backpack to help evenly distribute the inner padding and eliminate transport indentations. If there are folds, try gently stretching the fabric in different directions to flatten it.



STEP 1

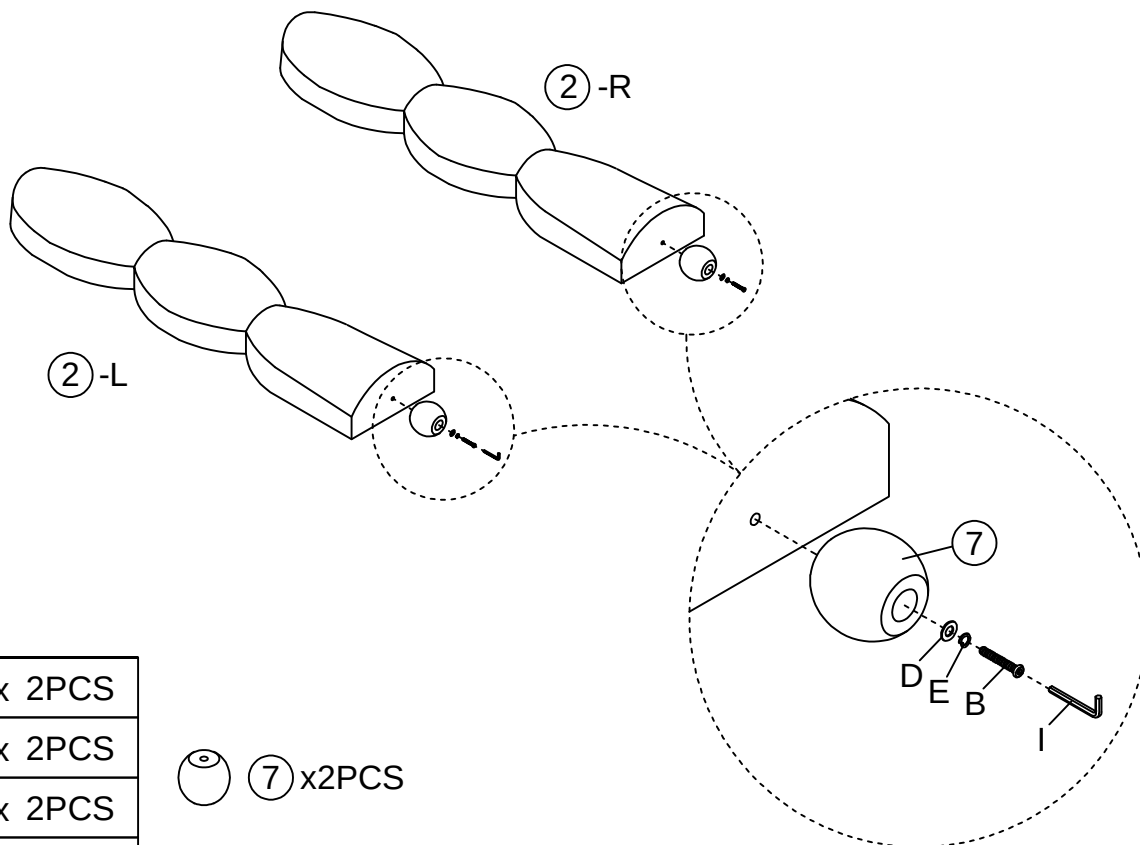

	B x 2PCS
	D x 2PCS
	E x 2PCS
	I x 1PC

7 x 2PCS

STEP 2

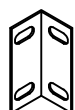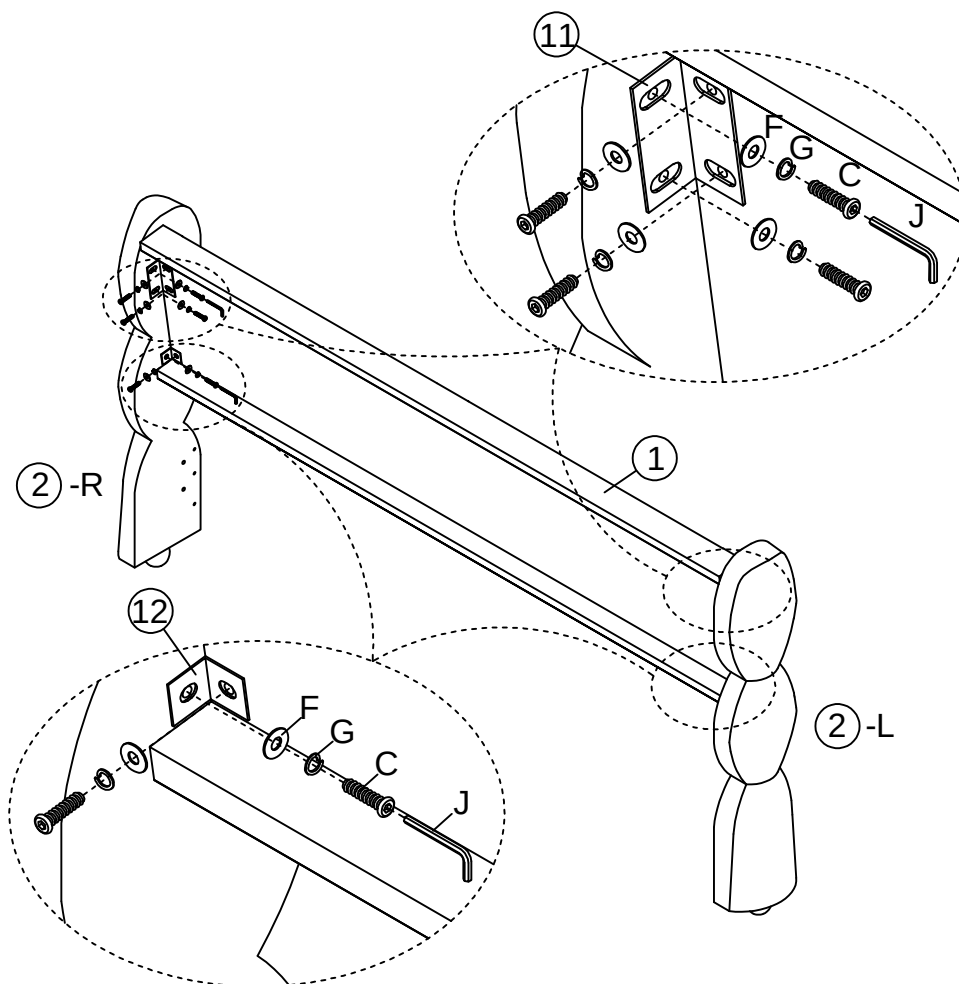

⑪ x2PCS



⑫ x2PCS



C x 12PCS



F x 12PCS




G x 12PCS



J x 1PC

STEP 3

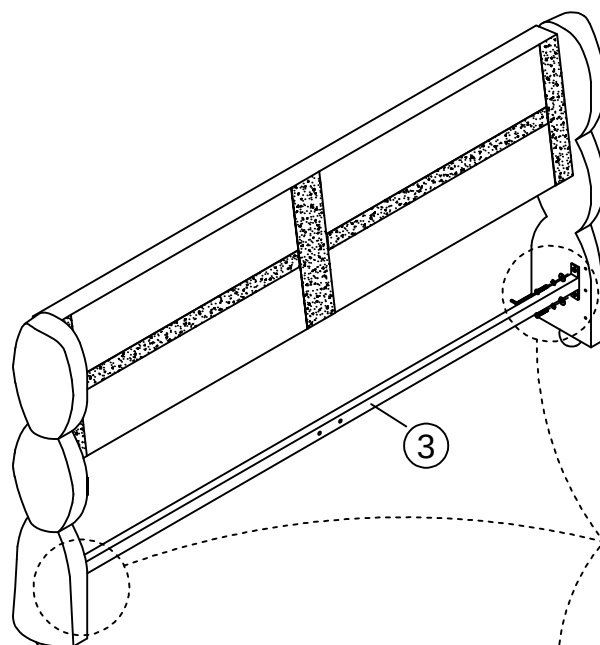

A x 4PCS




D x 4PCS




E x 4PCS



I x 1PC

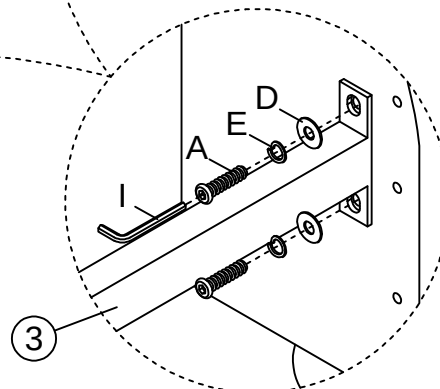


STEP 4

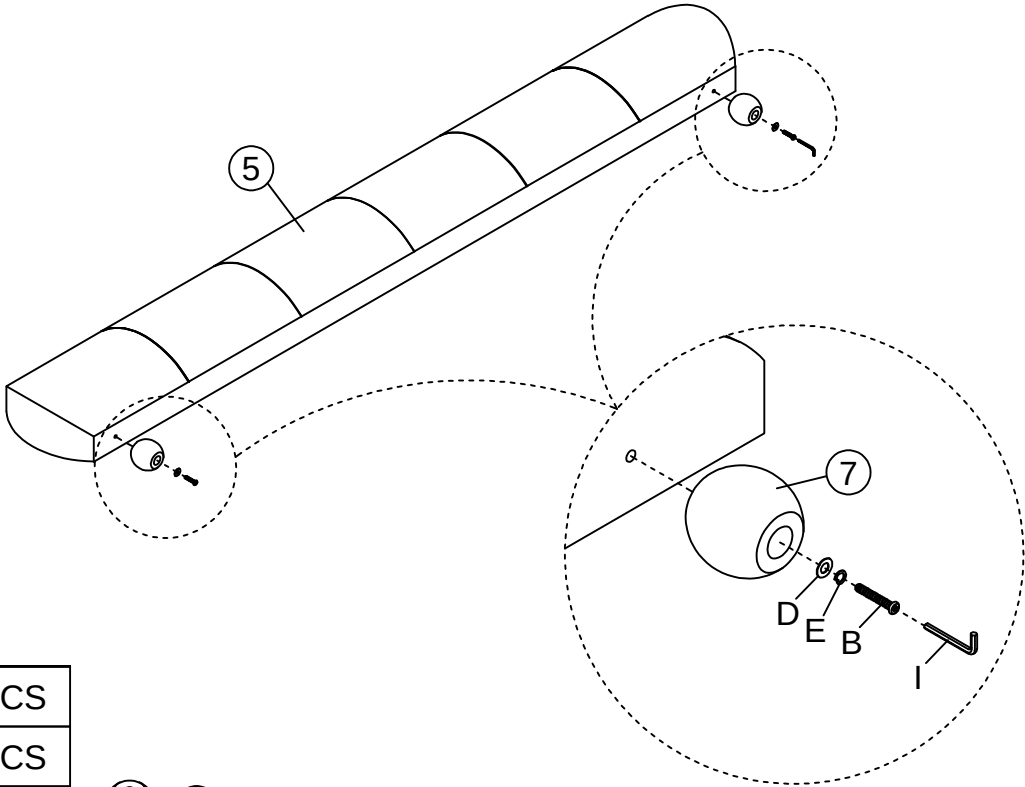

	B x 2PCS
	D x 2PCS
	E x 2PCS
	I x 1PC

 7 x2PCS


STEP 5

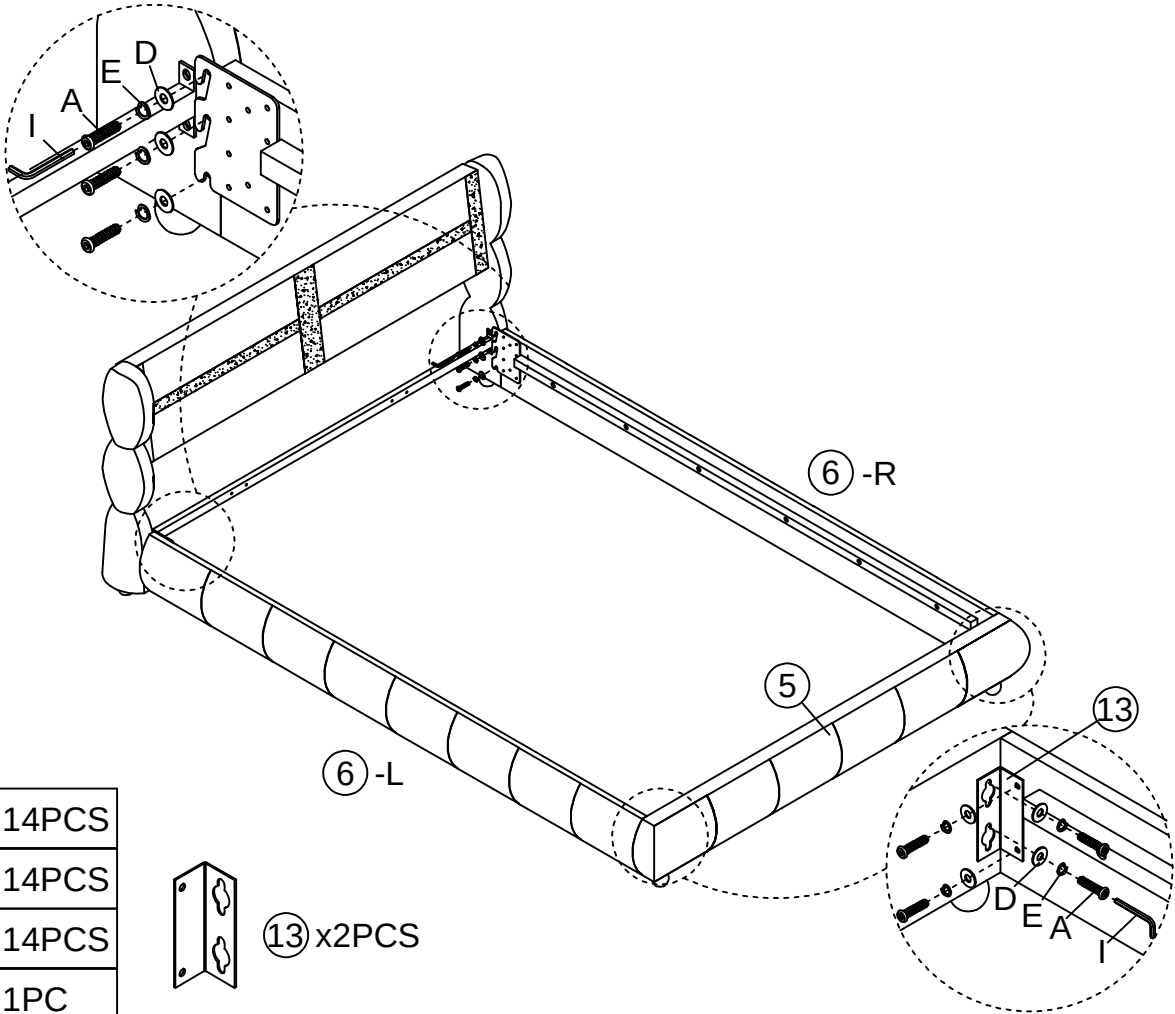


	A x 14PCS
	D x 14PCS
	E x 14PCS
	I x 1PC

 13 x2PCS

STEP 6

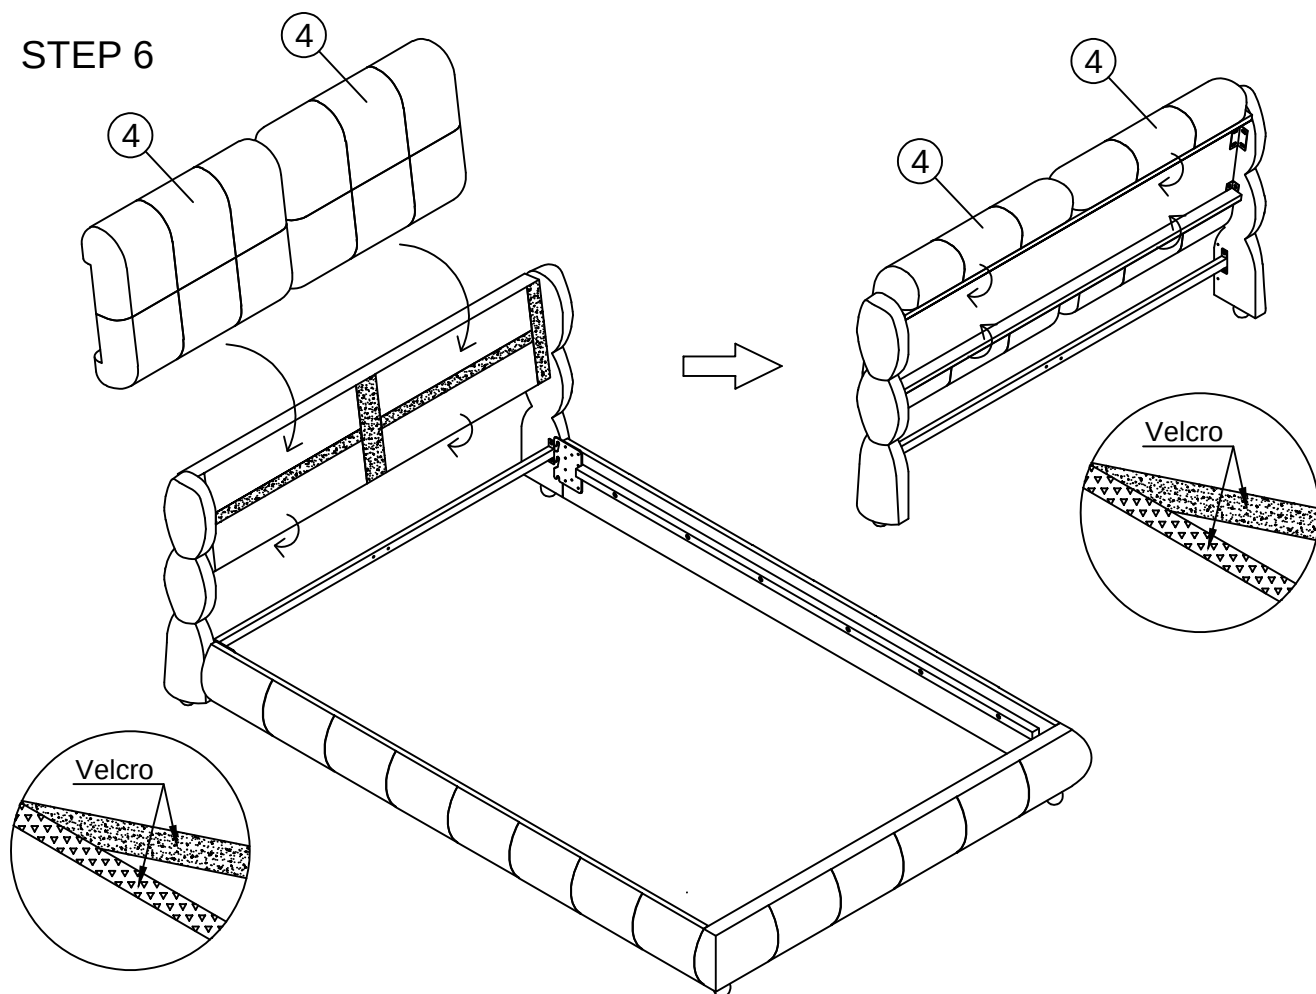


STEP 7

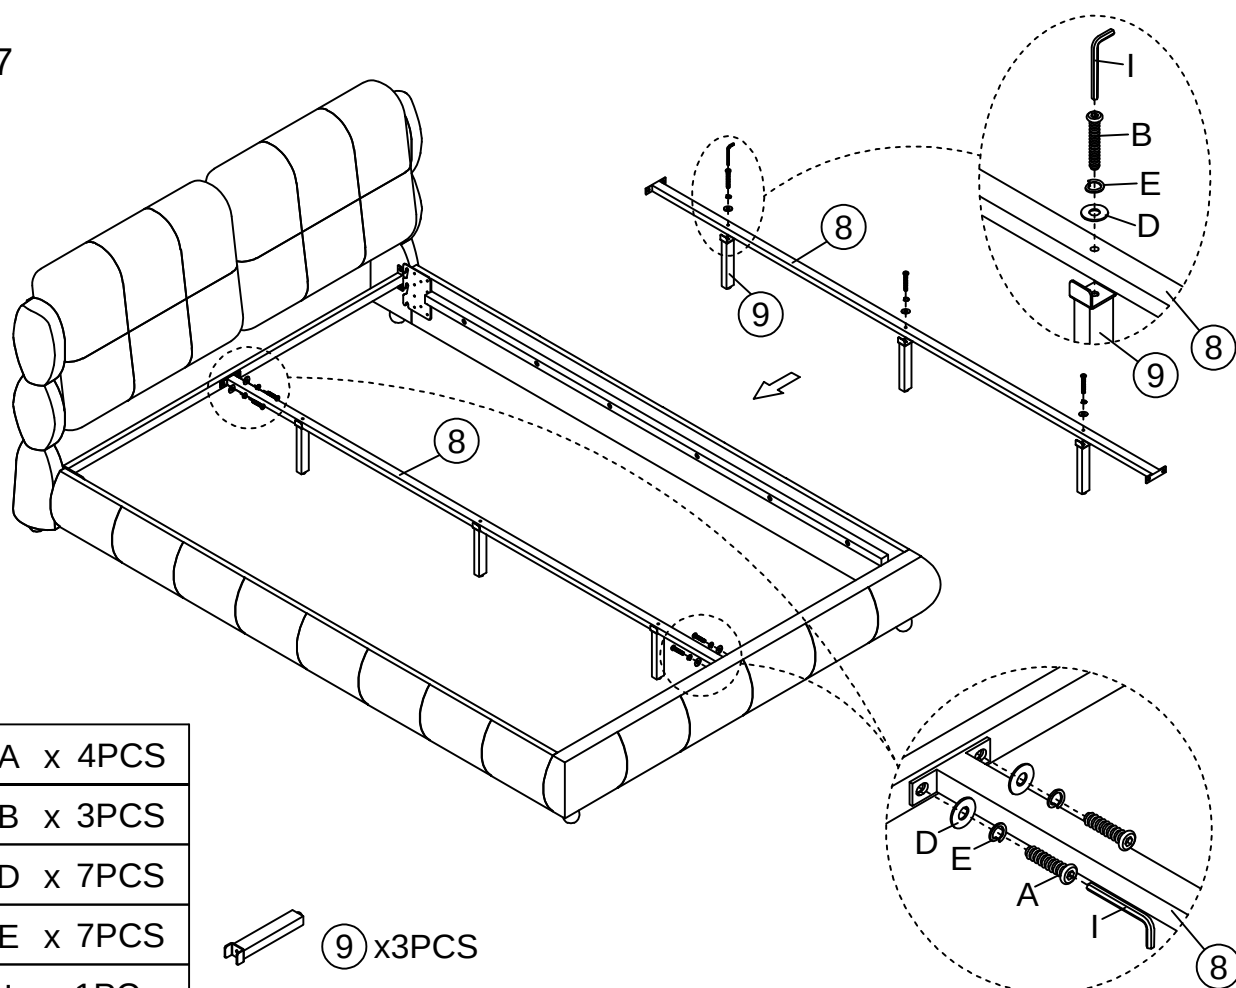


	A x 4PCS
	B x 3PCS
	D x 7PCS
	E x 7PCS
	I x 1PC

 9 x 3PCS

STEP 8

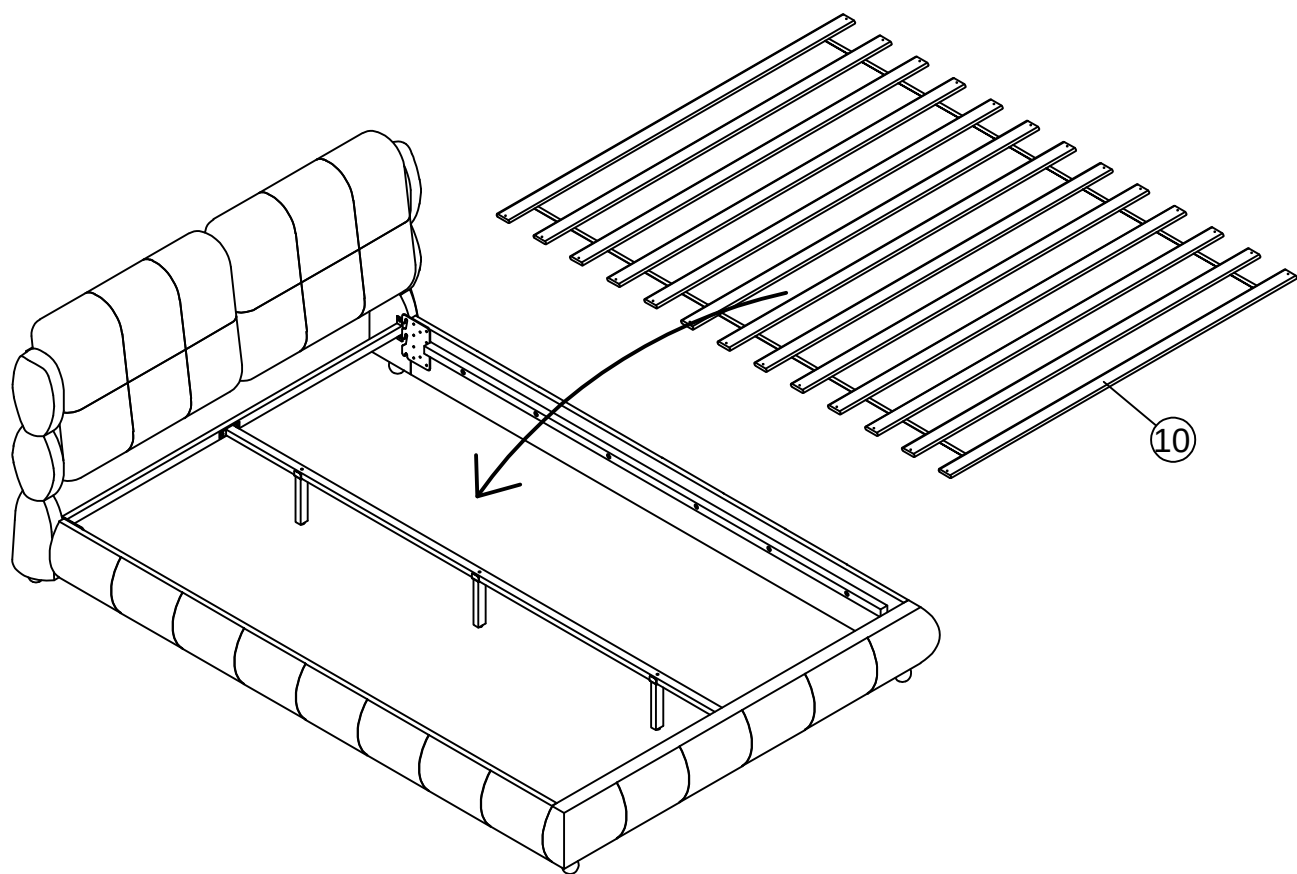

STEP 9

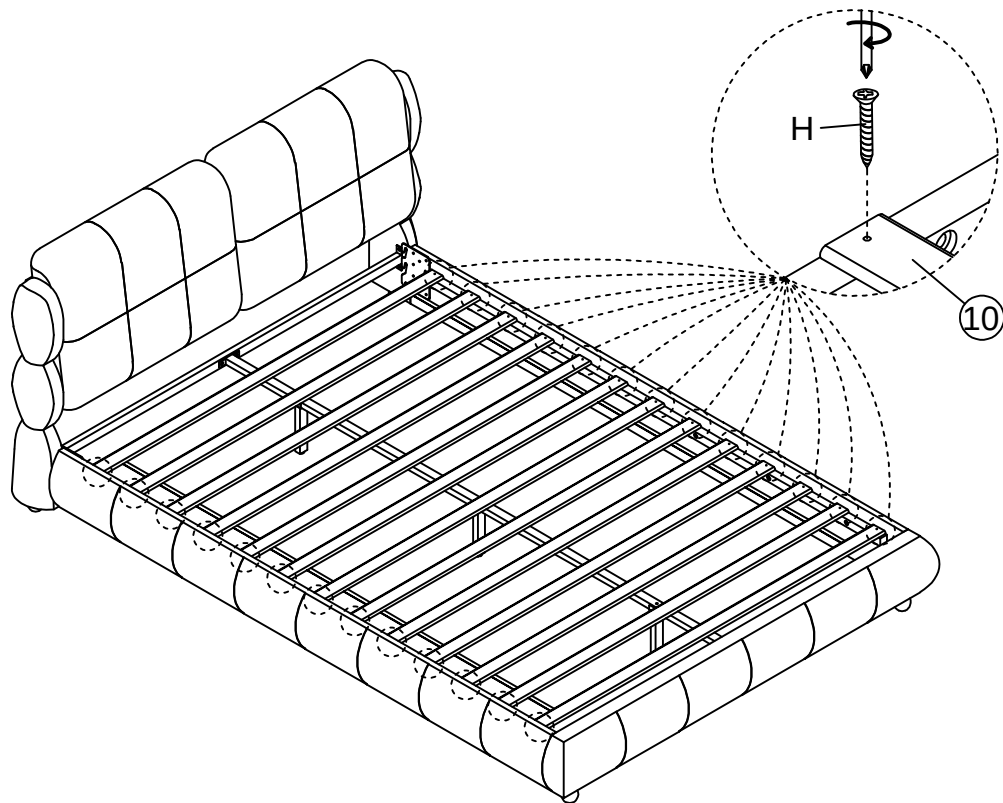

	H x 26PCS
	K x 1PC