


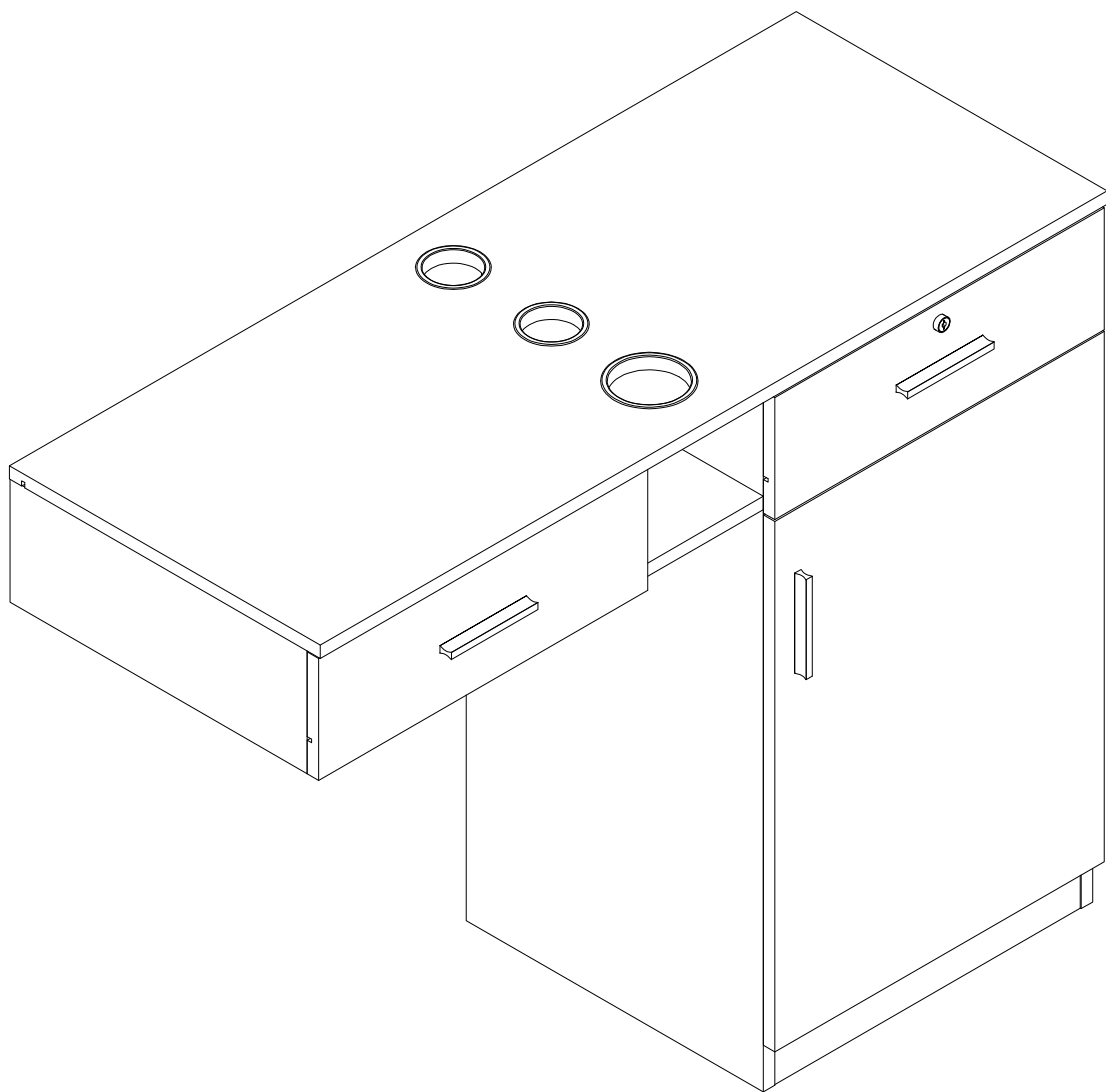
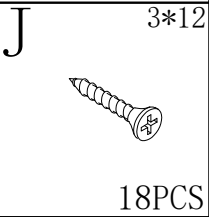
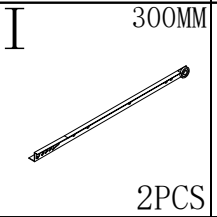
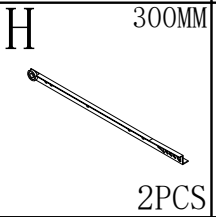
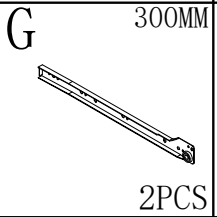
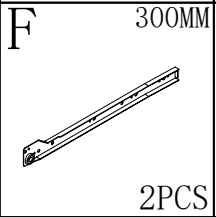
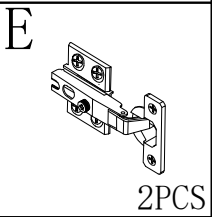
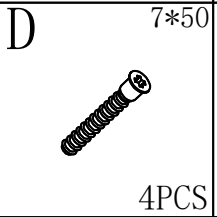
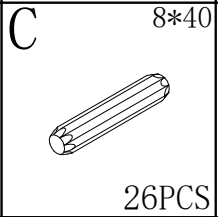
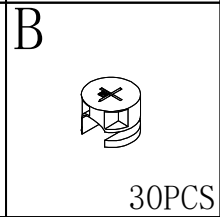
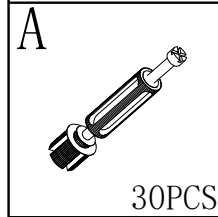
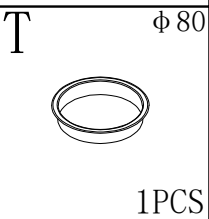
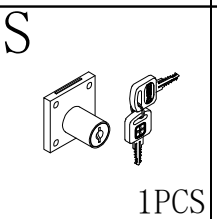
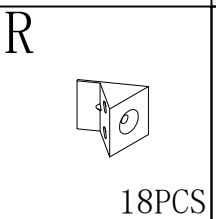
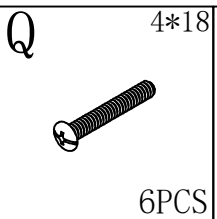
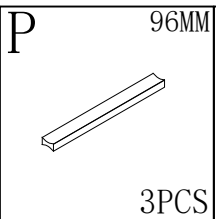
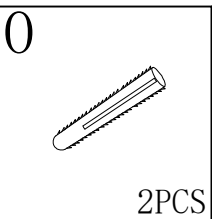
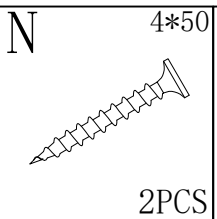
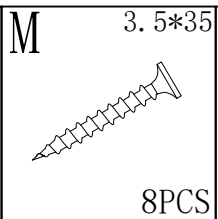
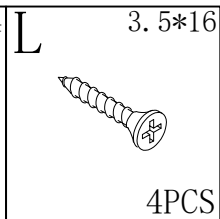
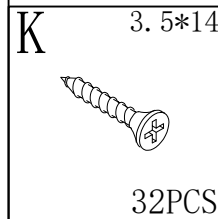
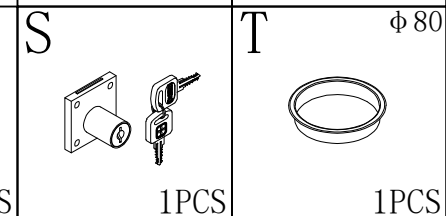
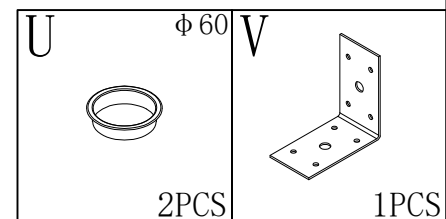
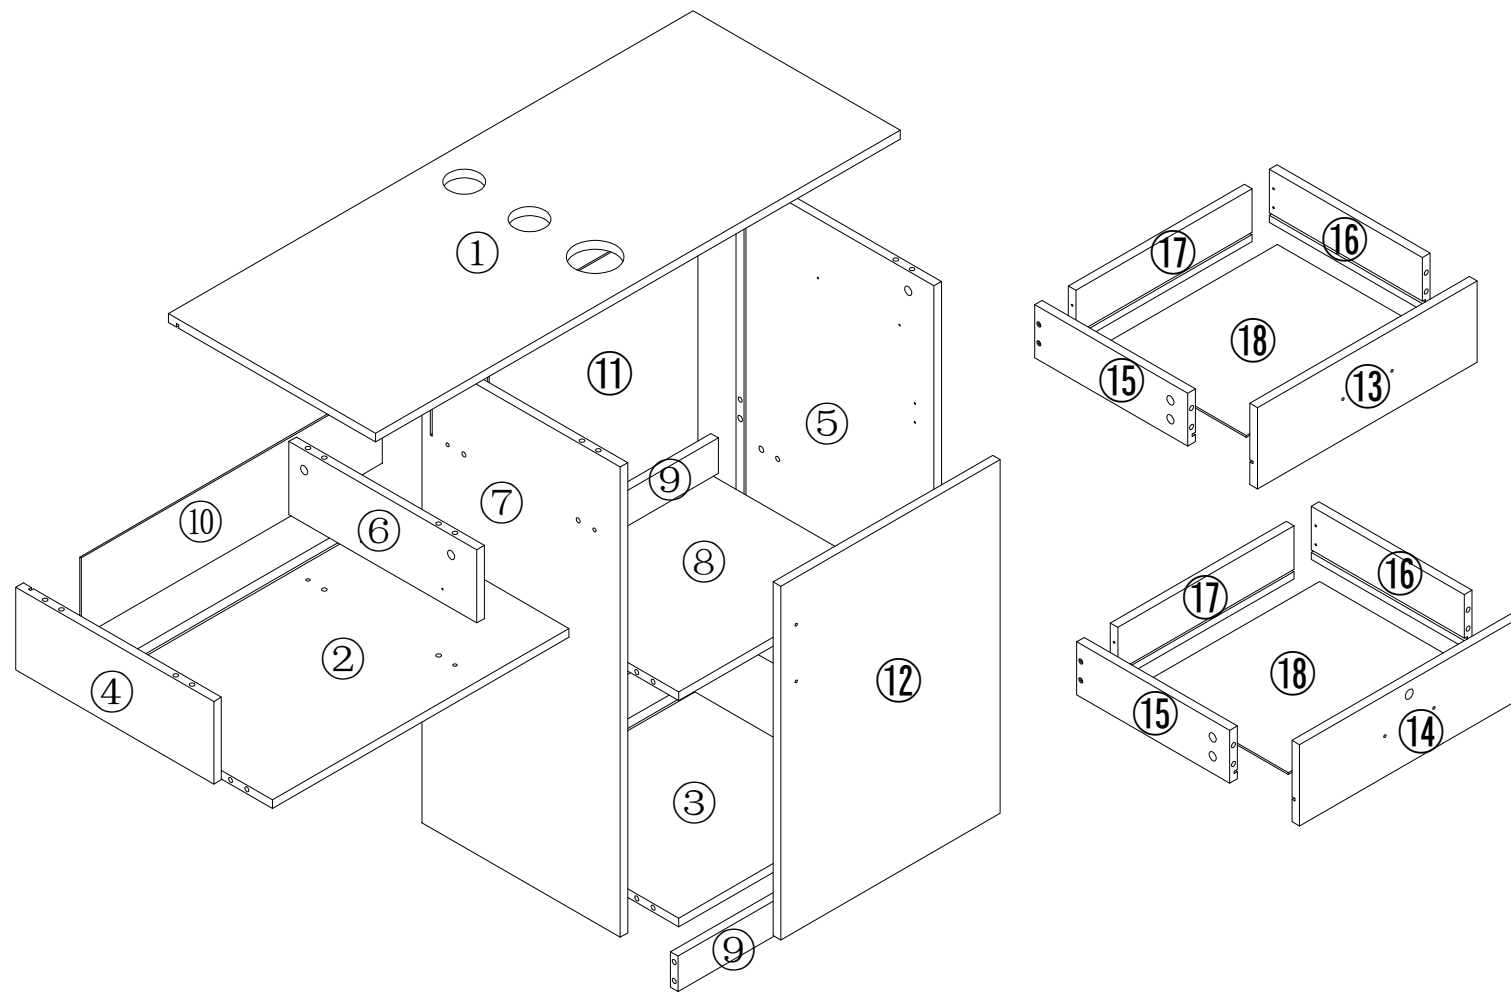
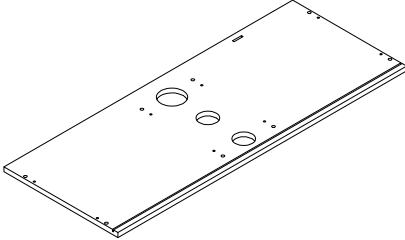
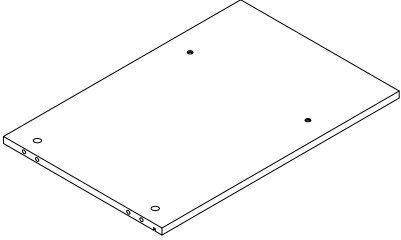
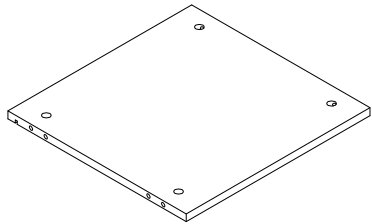
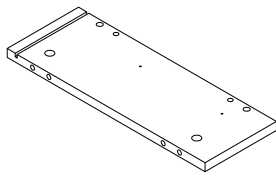
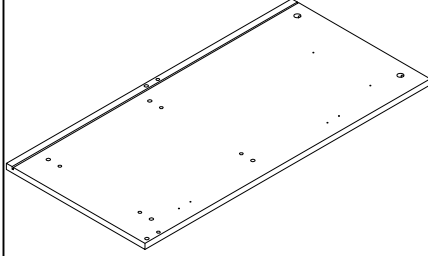
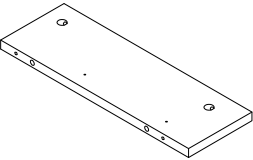
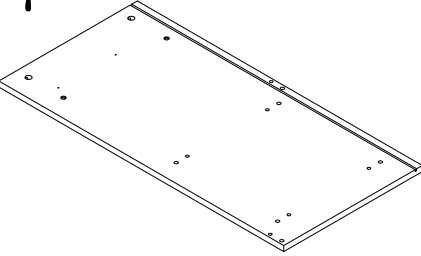
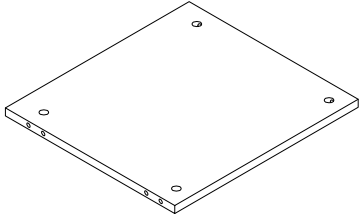
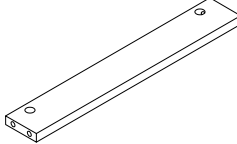
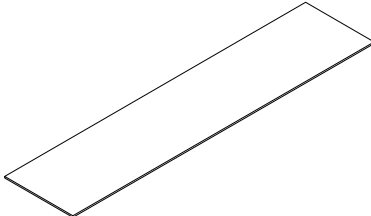
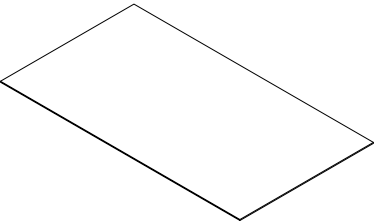
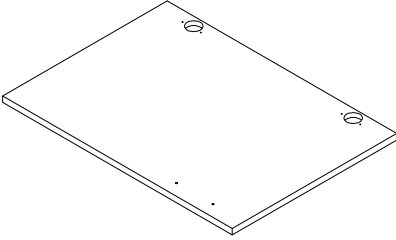
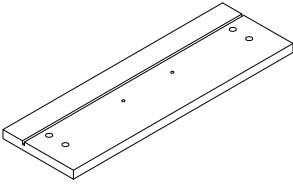
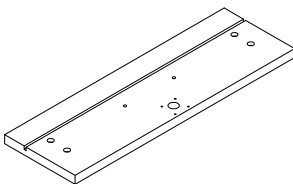
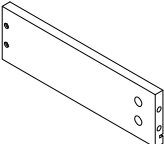


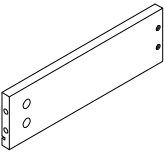

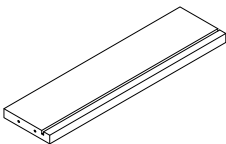


1  1028*406 1 PCS	2  581*388 1 PCS	3  400*388 1 PCS	4  140*388 1 PCS	5  798*388 1 PCS
6  124*368 1 PCS	7  798*388 1 PCS	8  400*368 1 PCS	9  400*60 2 PCS	10  590*134 1 PCS
11  733*409 1 PCS	12  600*430 1 PCS	13  430*138 1 PCS	14  430*138 1 PCS	15  300*90 2 PCS
16  300*90 2 PCS	17  345*90 2 PCS	18  355*294 2 PCS		

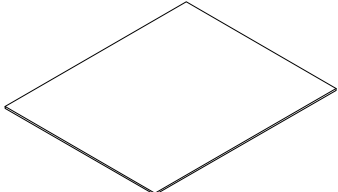


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

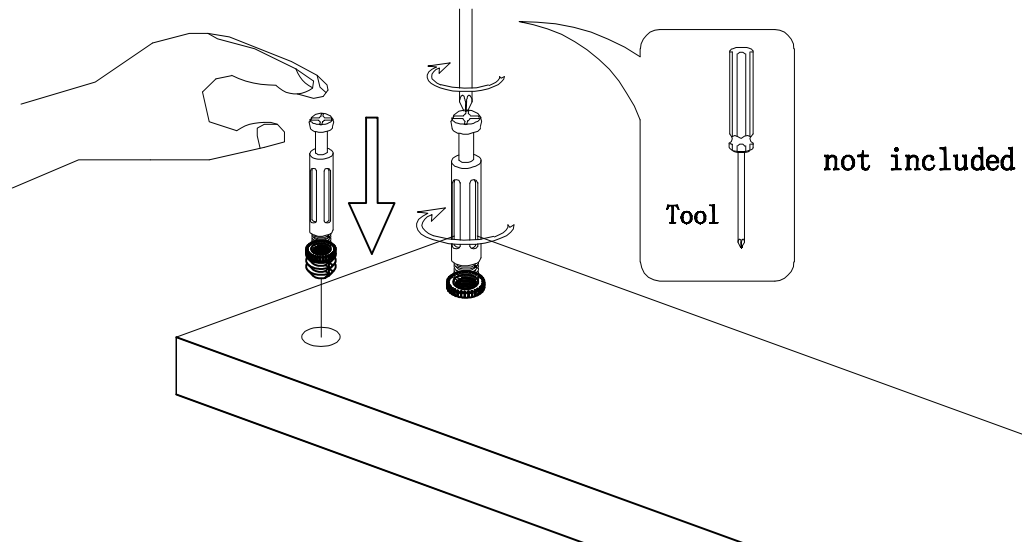


II

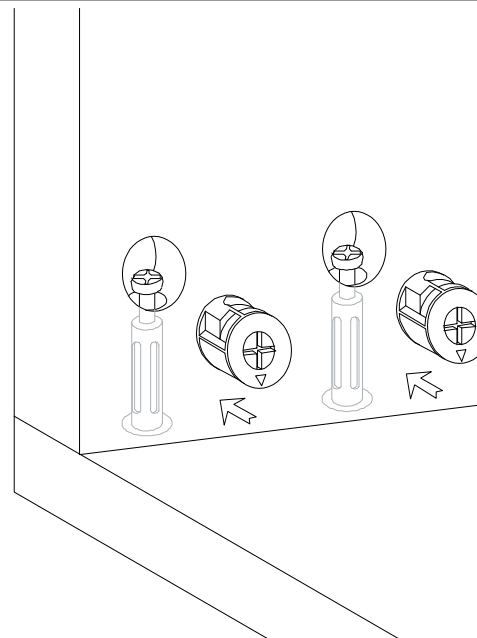


III

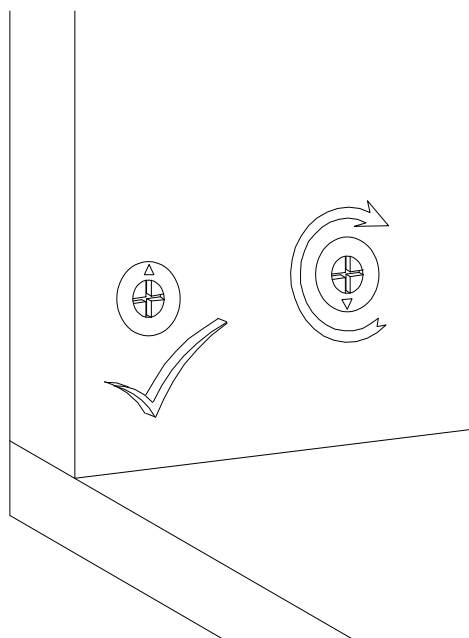

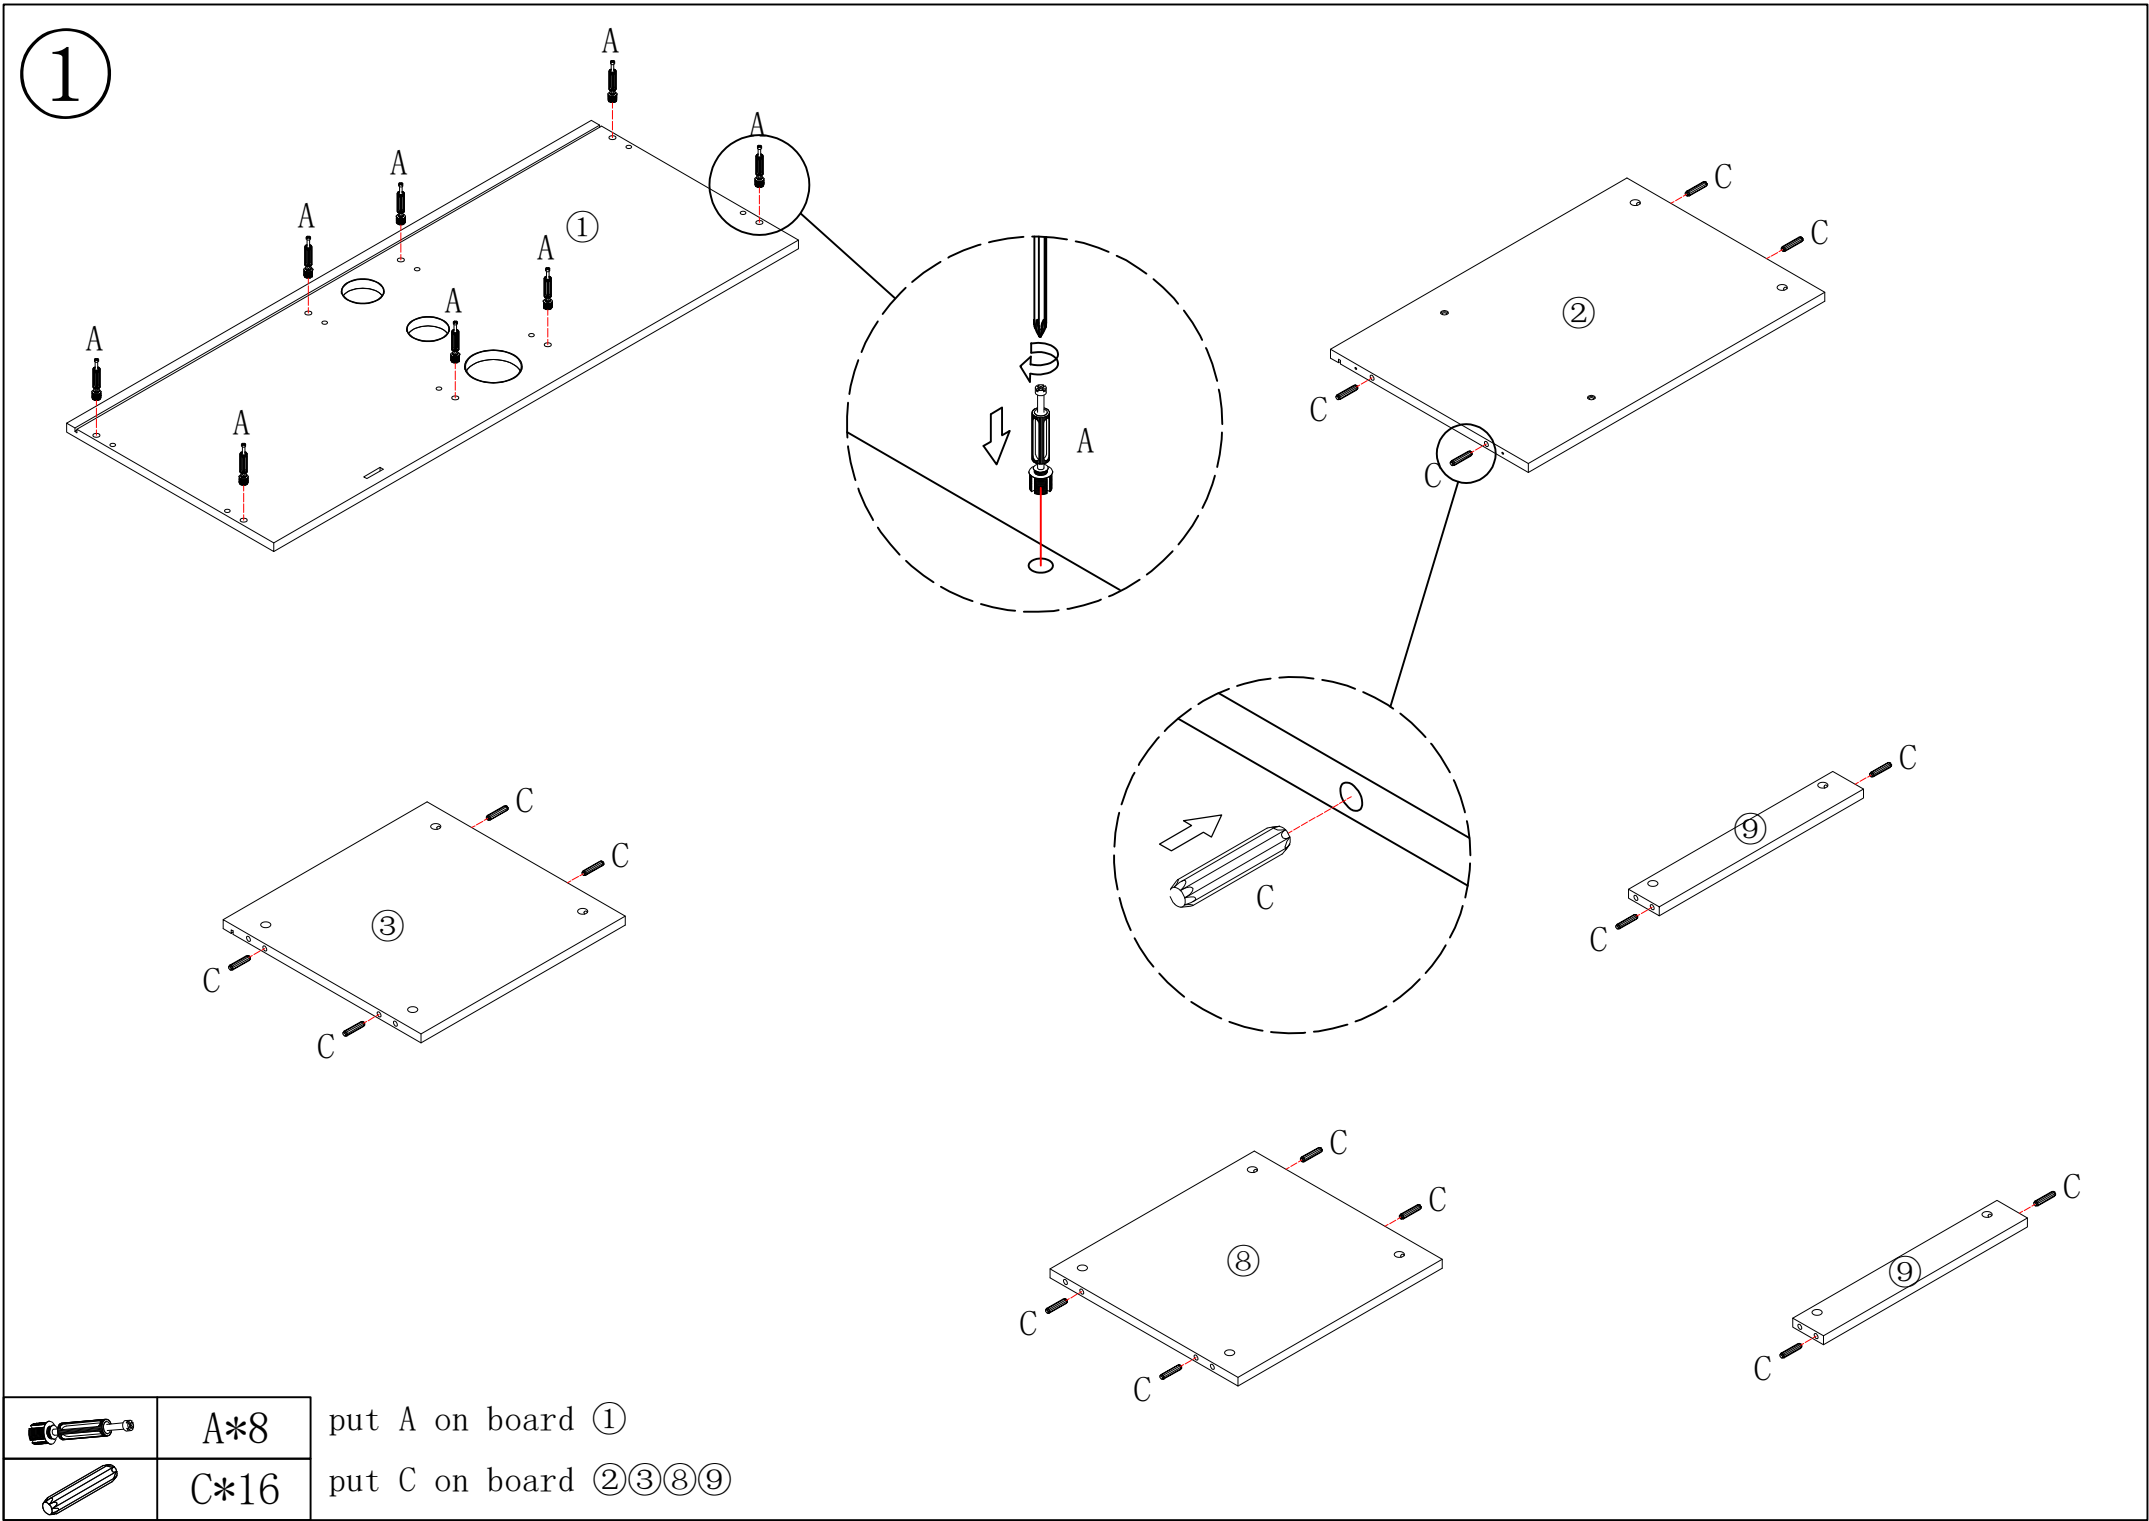

②


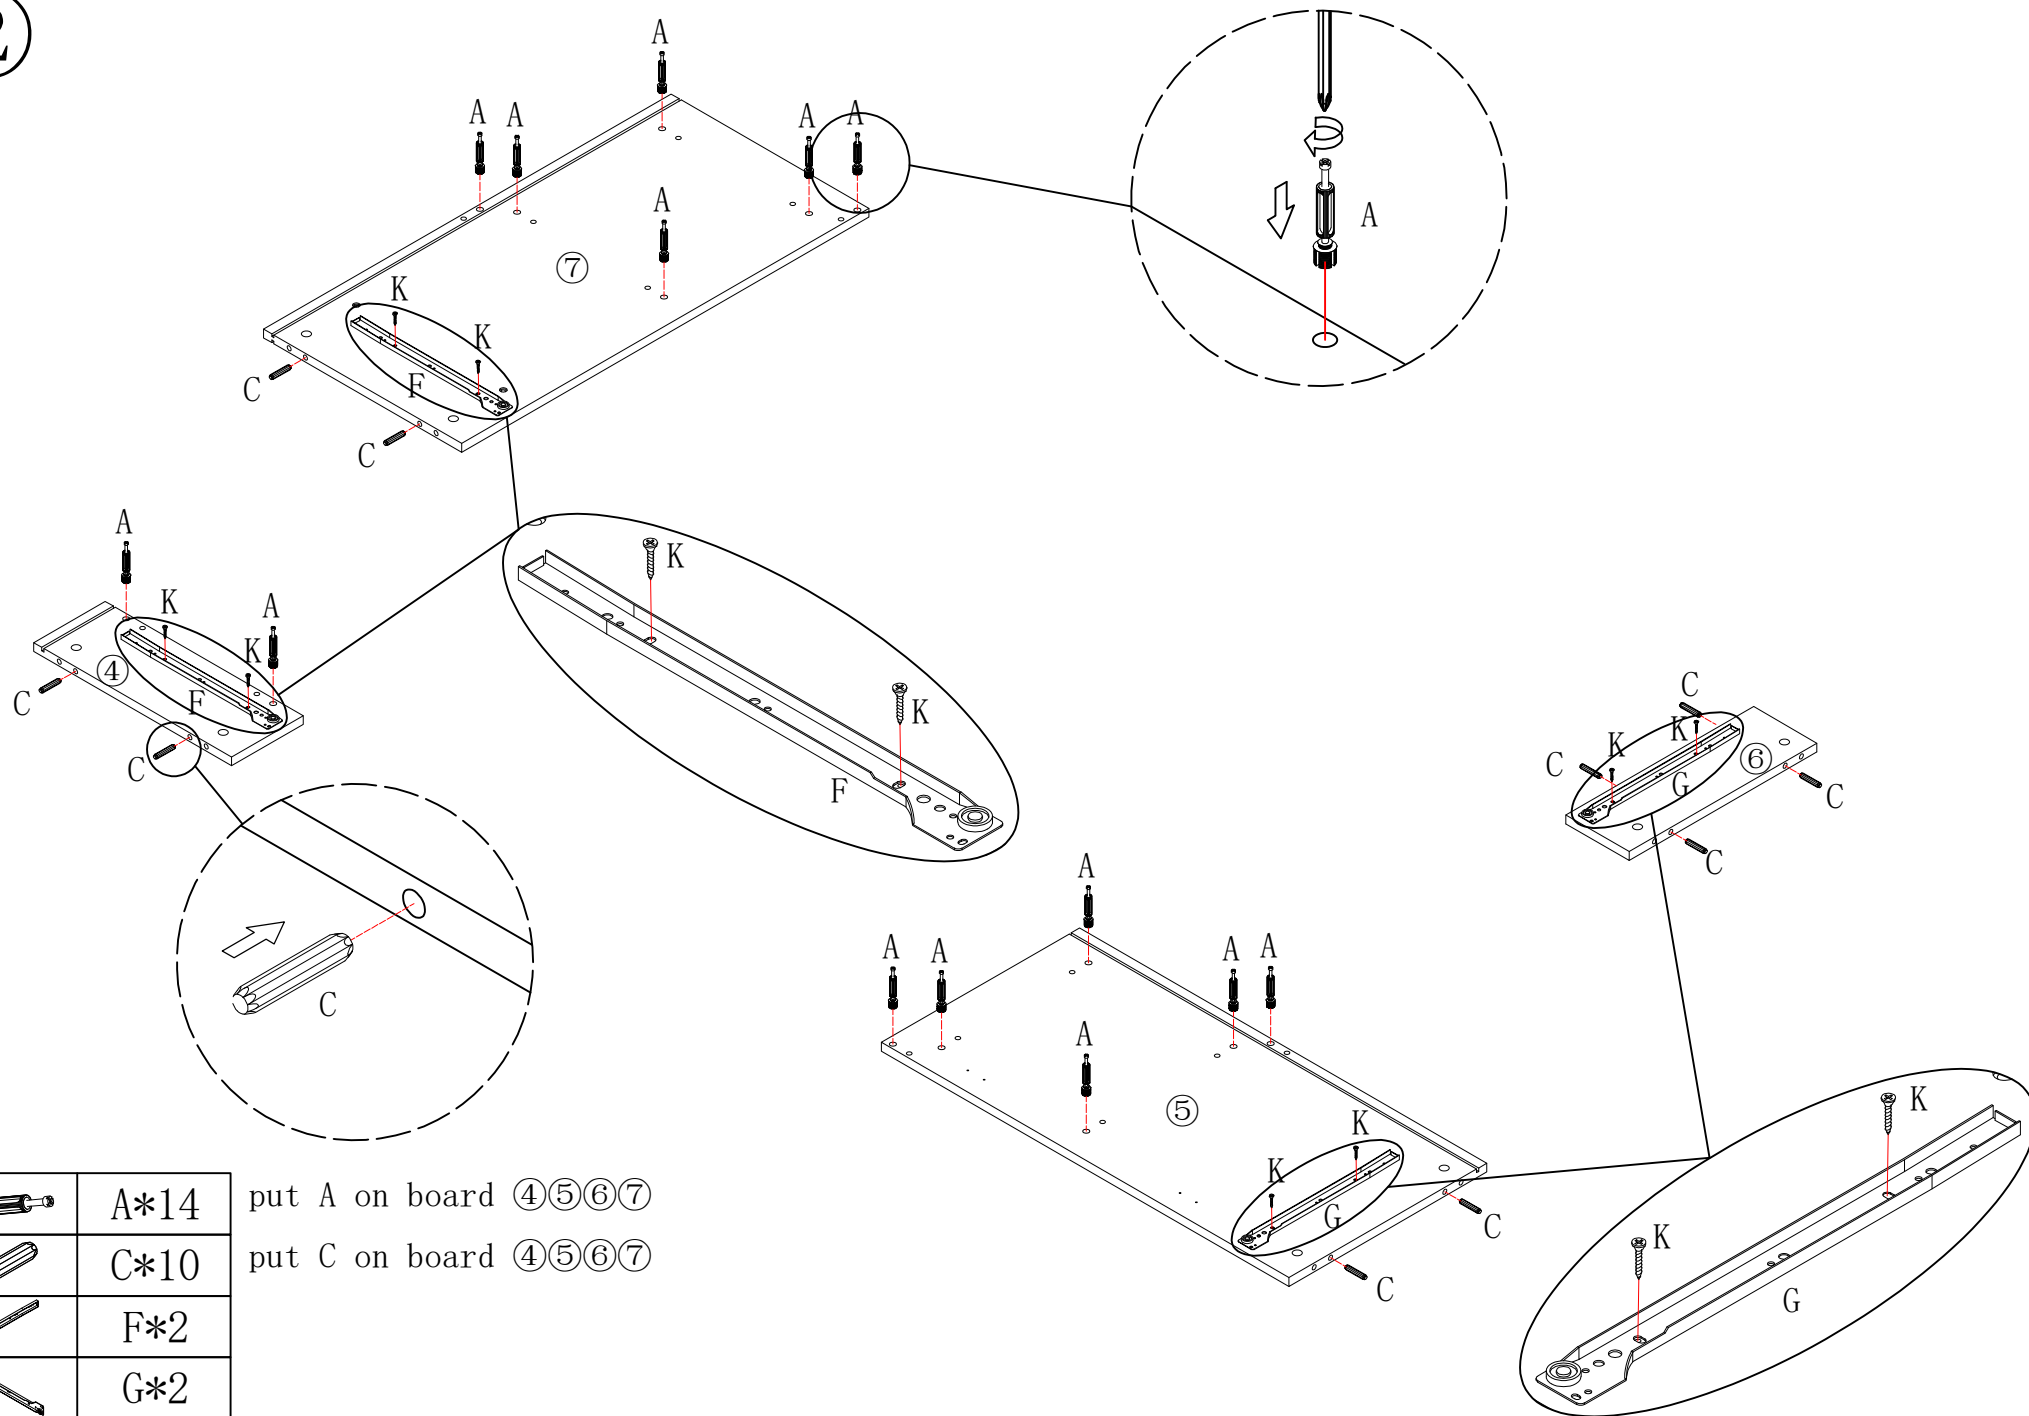


	A*14
	C*10
	F*2
	G*2
	K*8



put A on board ④⑤⑥⑦

put C on board ④⑤⑥⑦

③

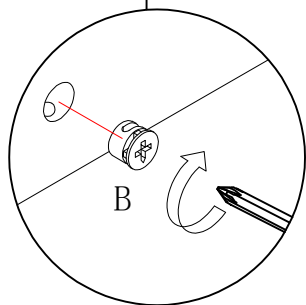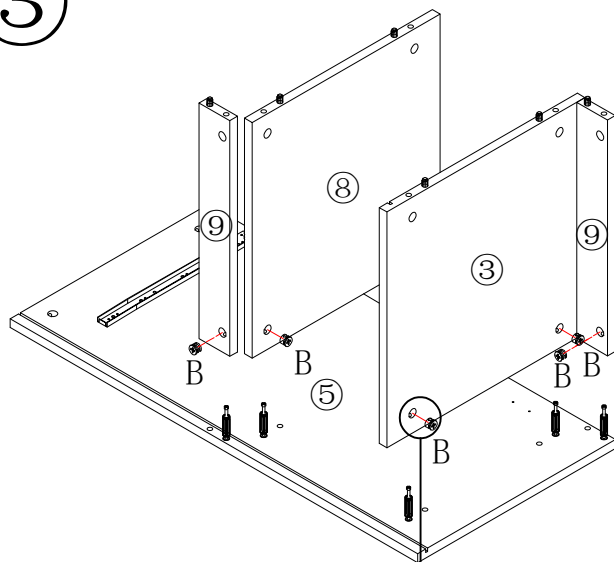


Make sure the arrow on the screw align to the hole on the side.

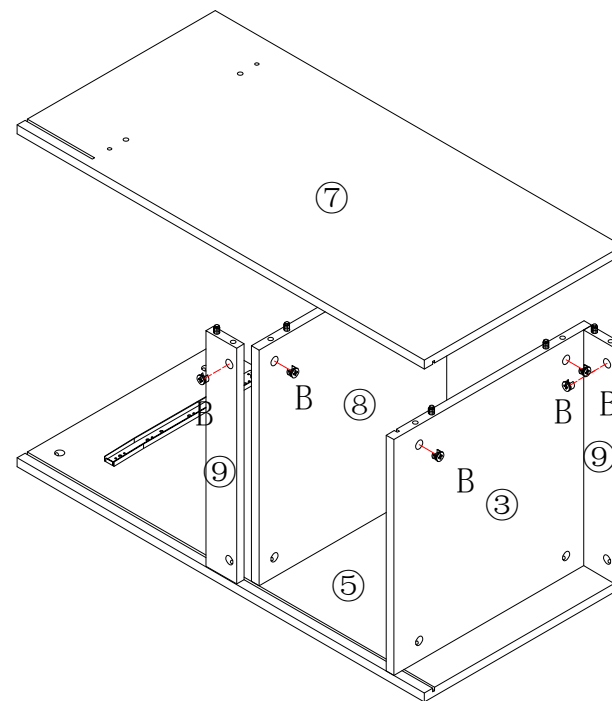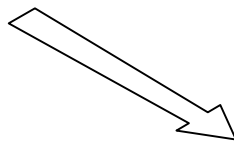

B*12 put B on board ③⑧⑨

4

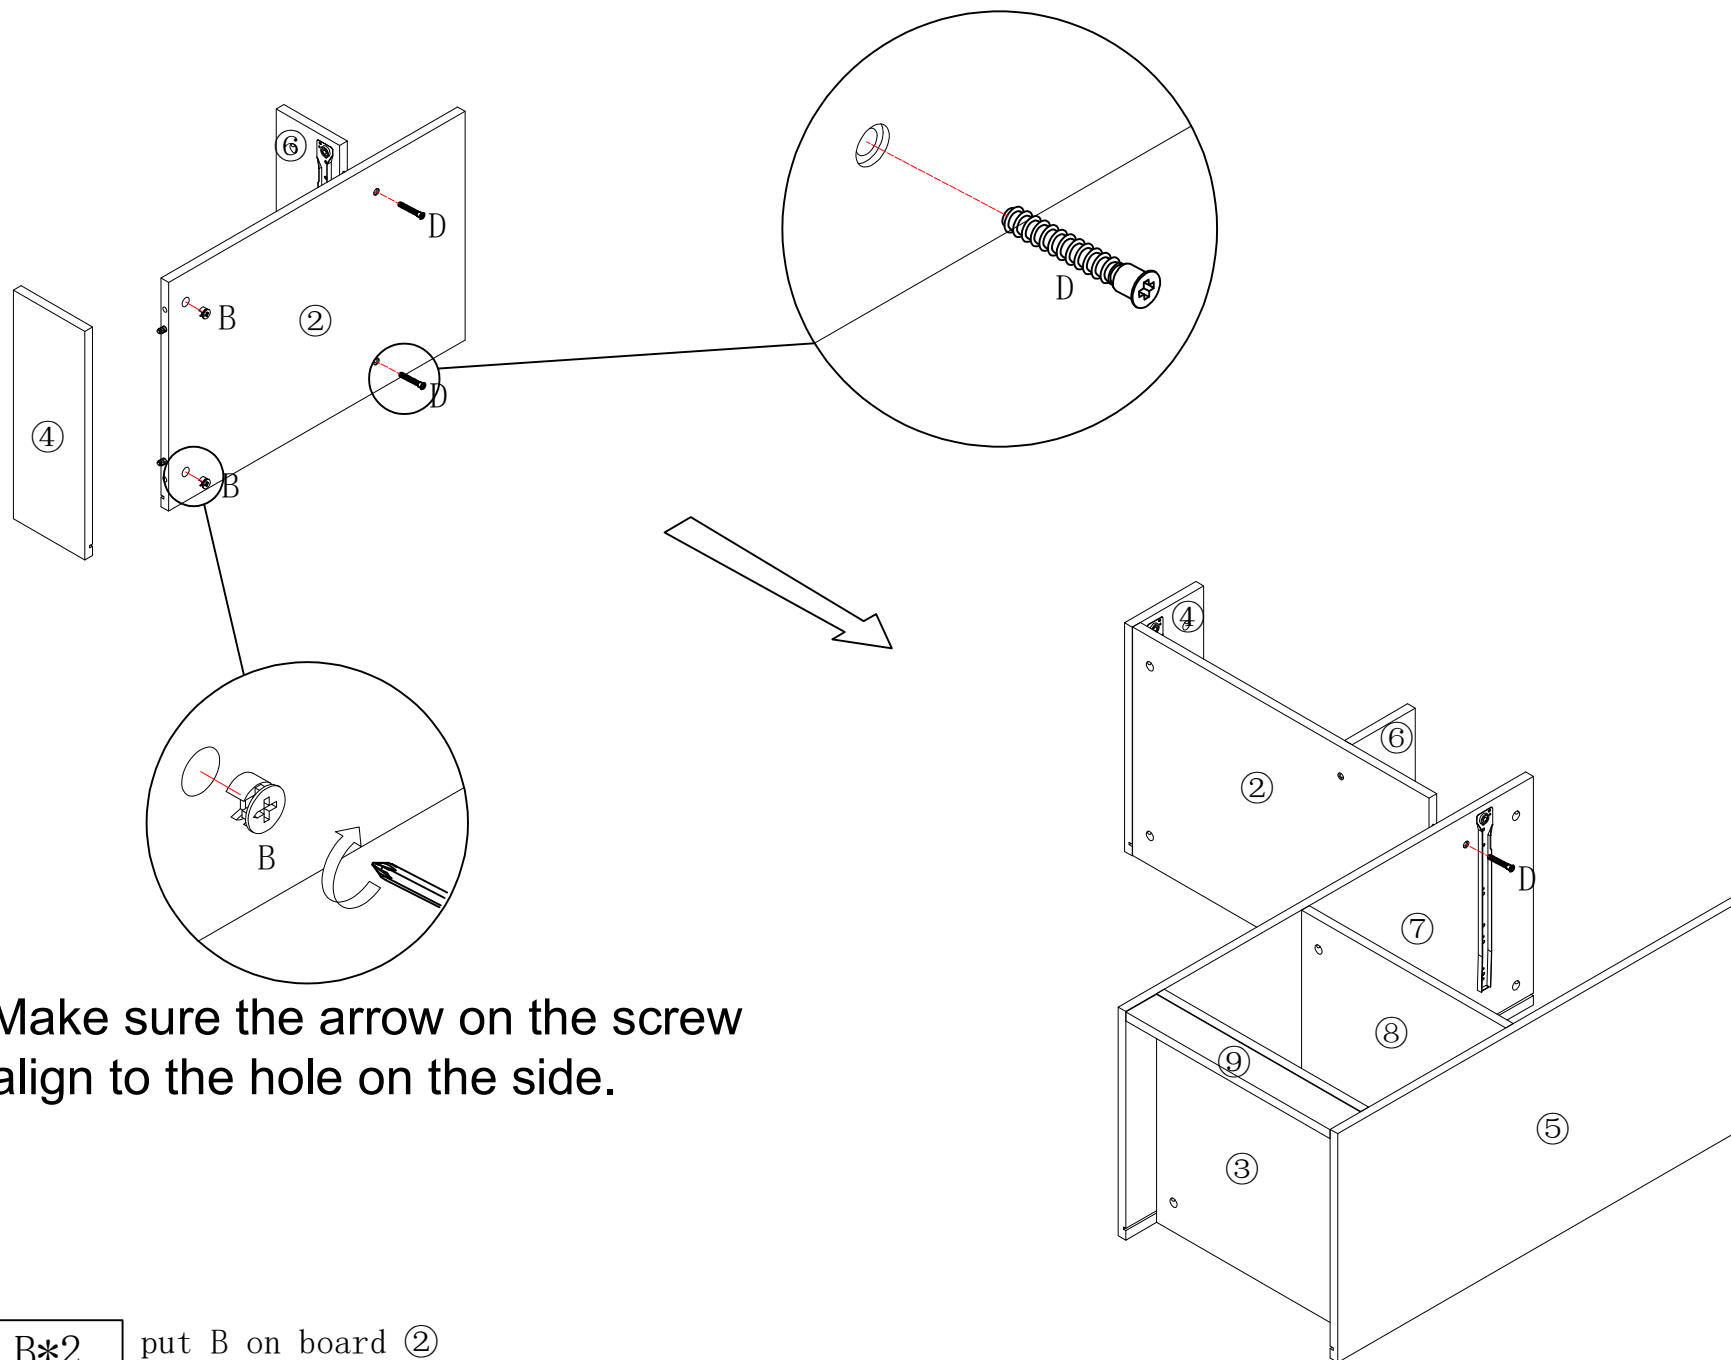



B*2

put B on board ②




D*4

5

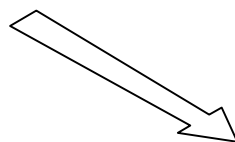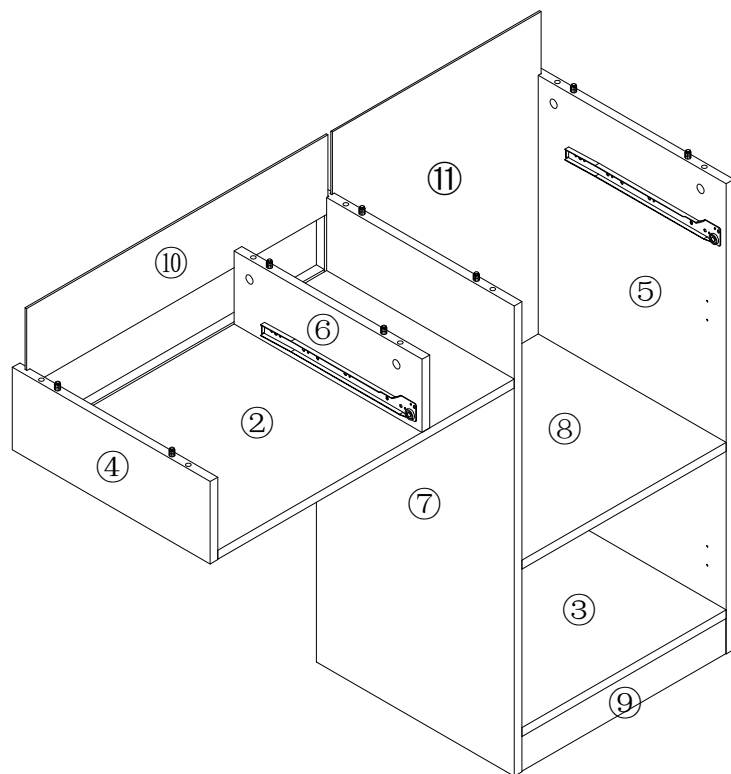






Make sure the arrow on the screw align to the hole on the side.

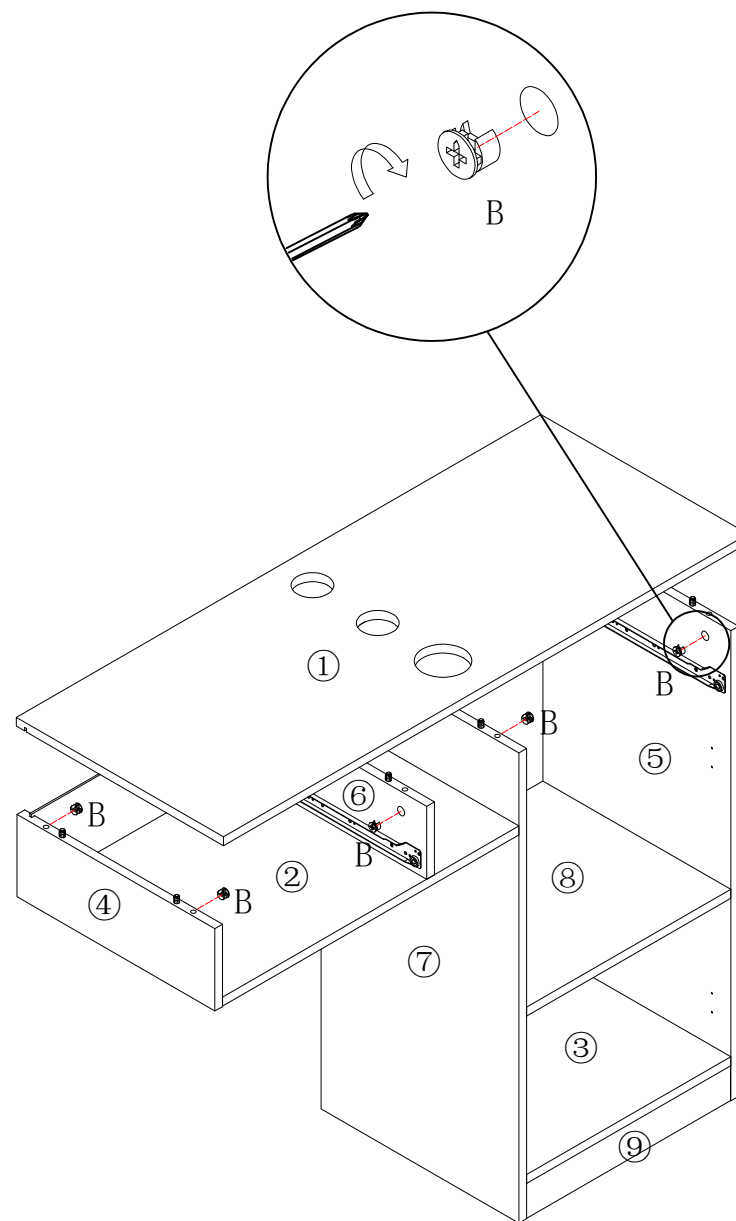

B*8






put B on board ④⑤⑥⑦

⑥

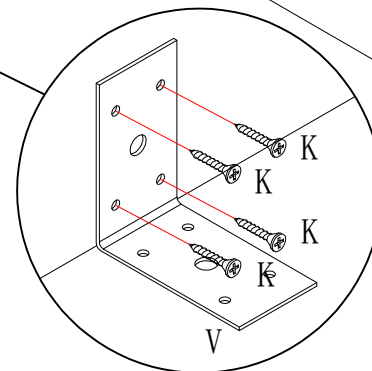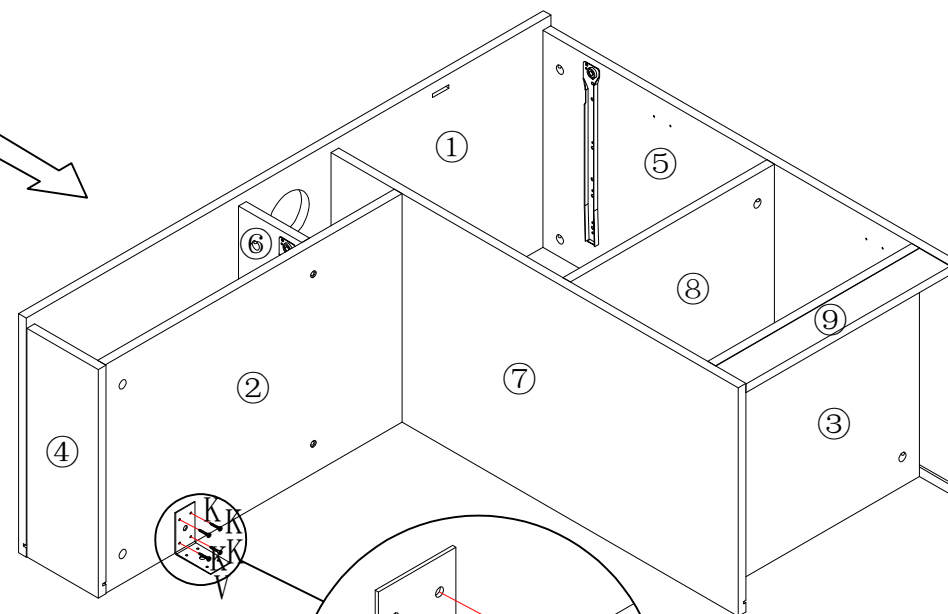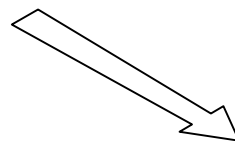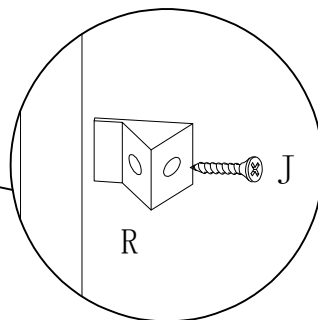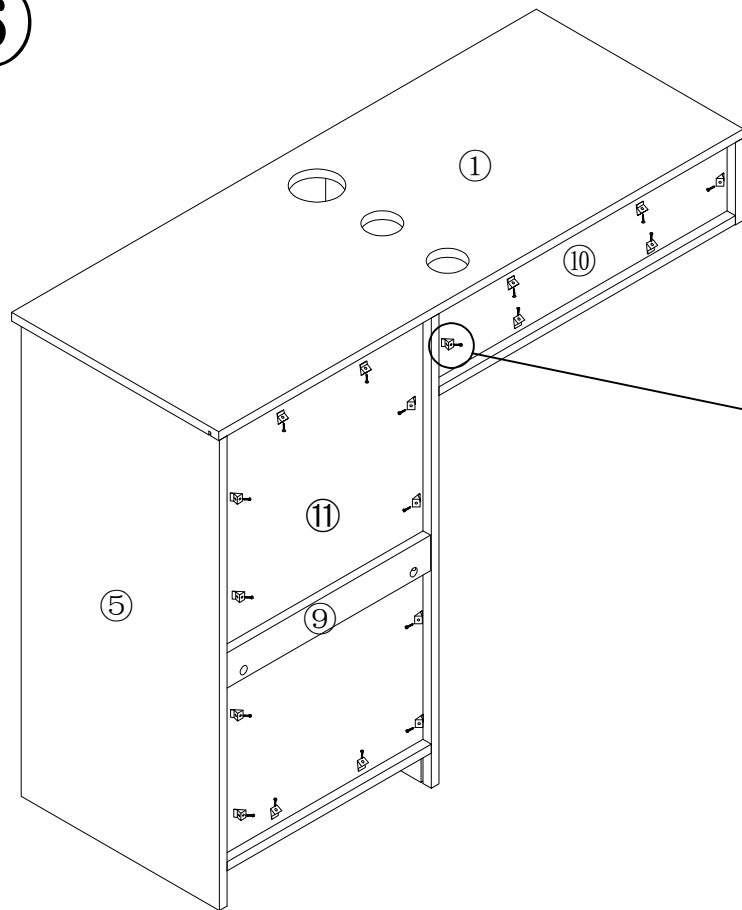


	J*18
	K*4
	R*18
	V*1

7

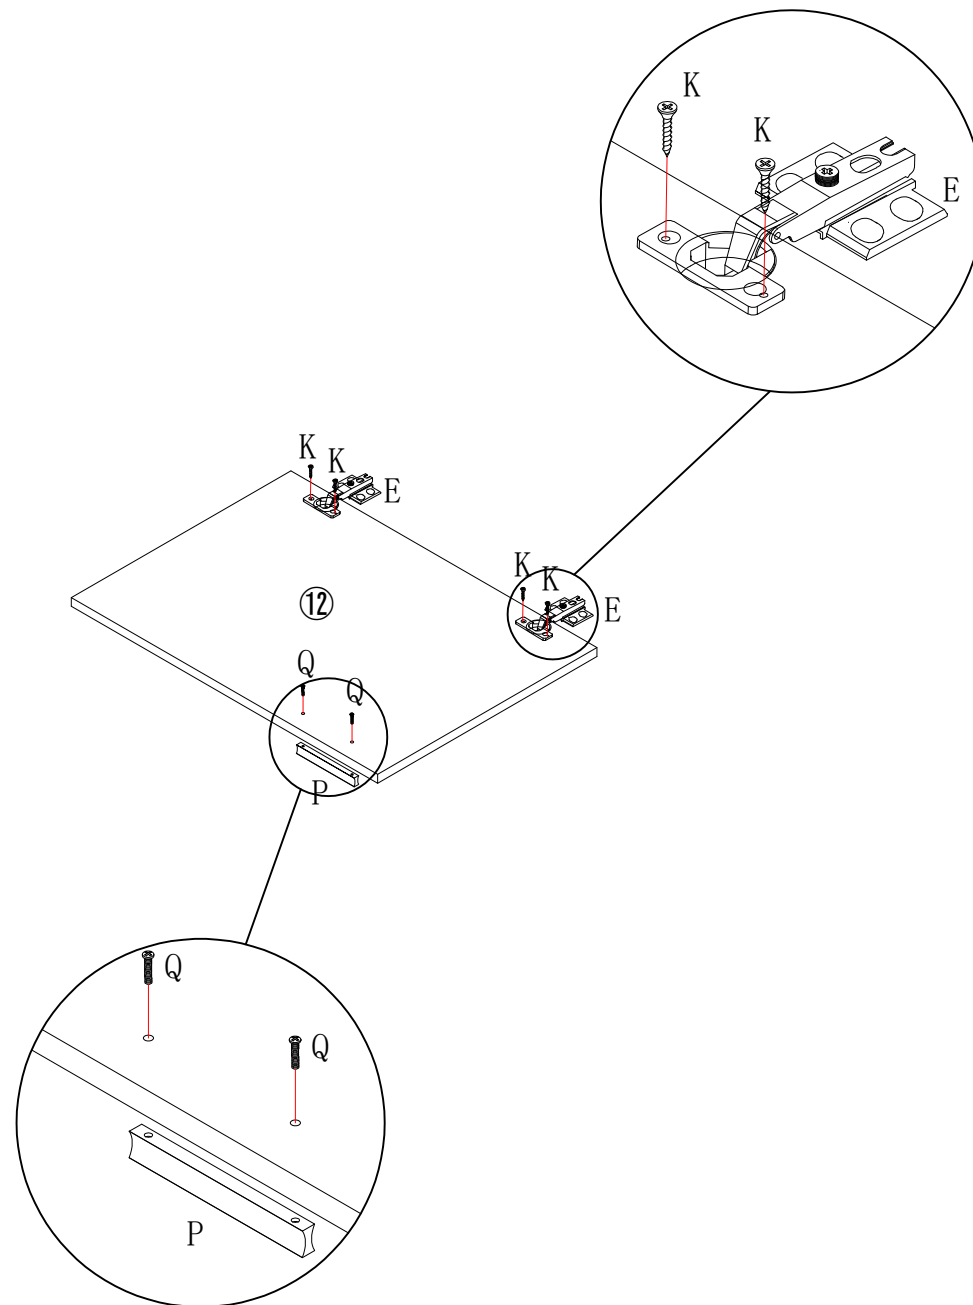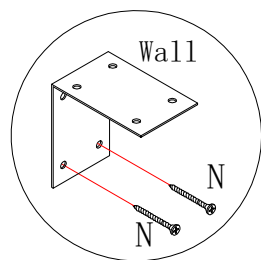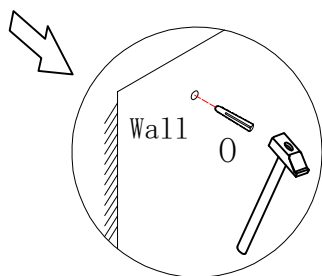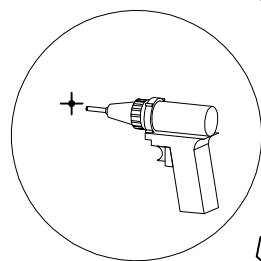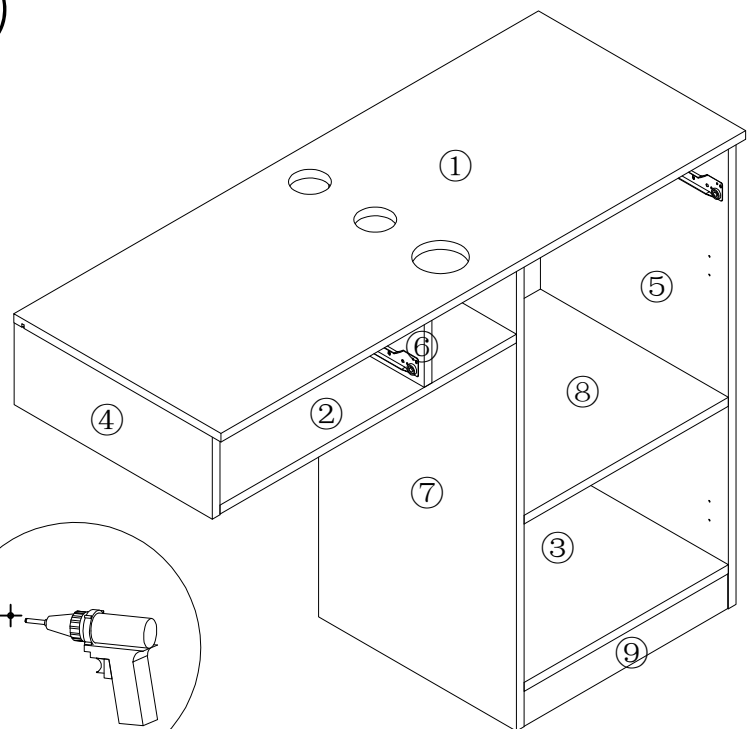

	E*2
	K*4
	N*2
	O*2
	P*1
	Q*2




8

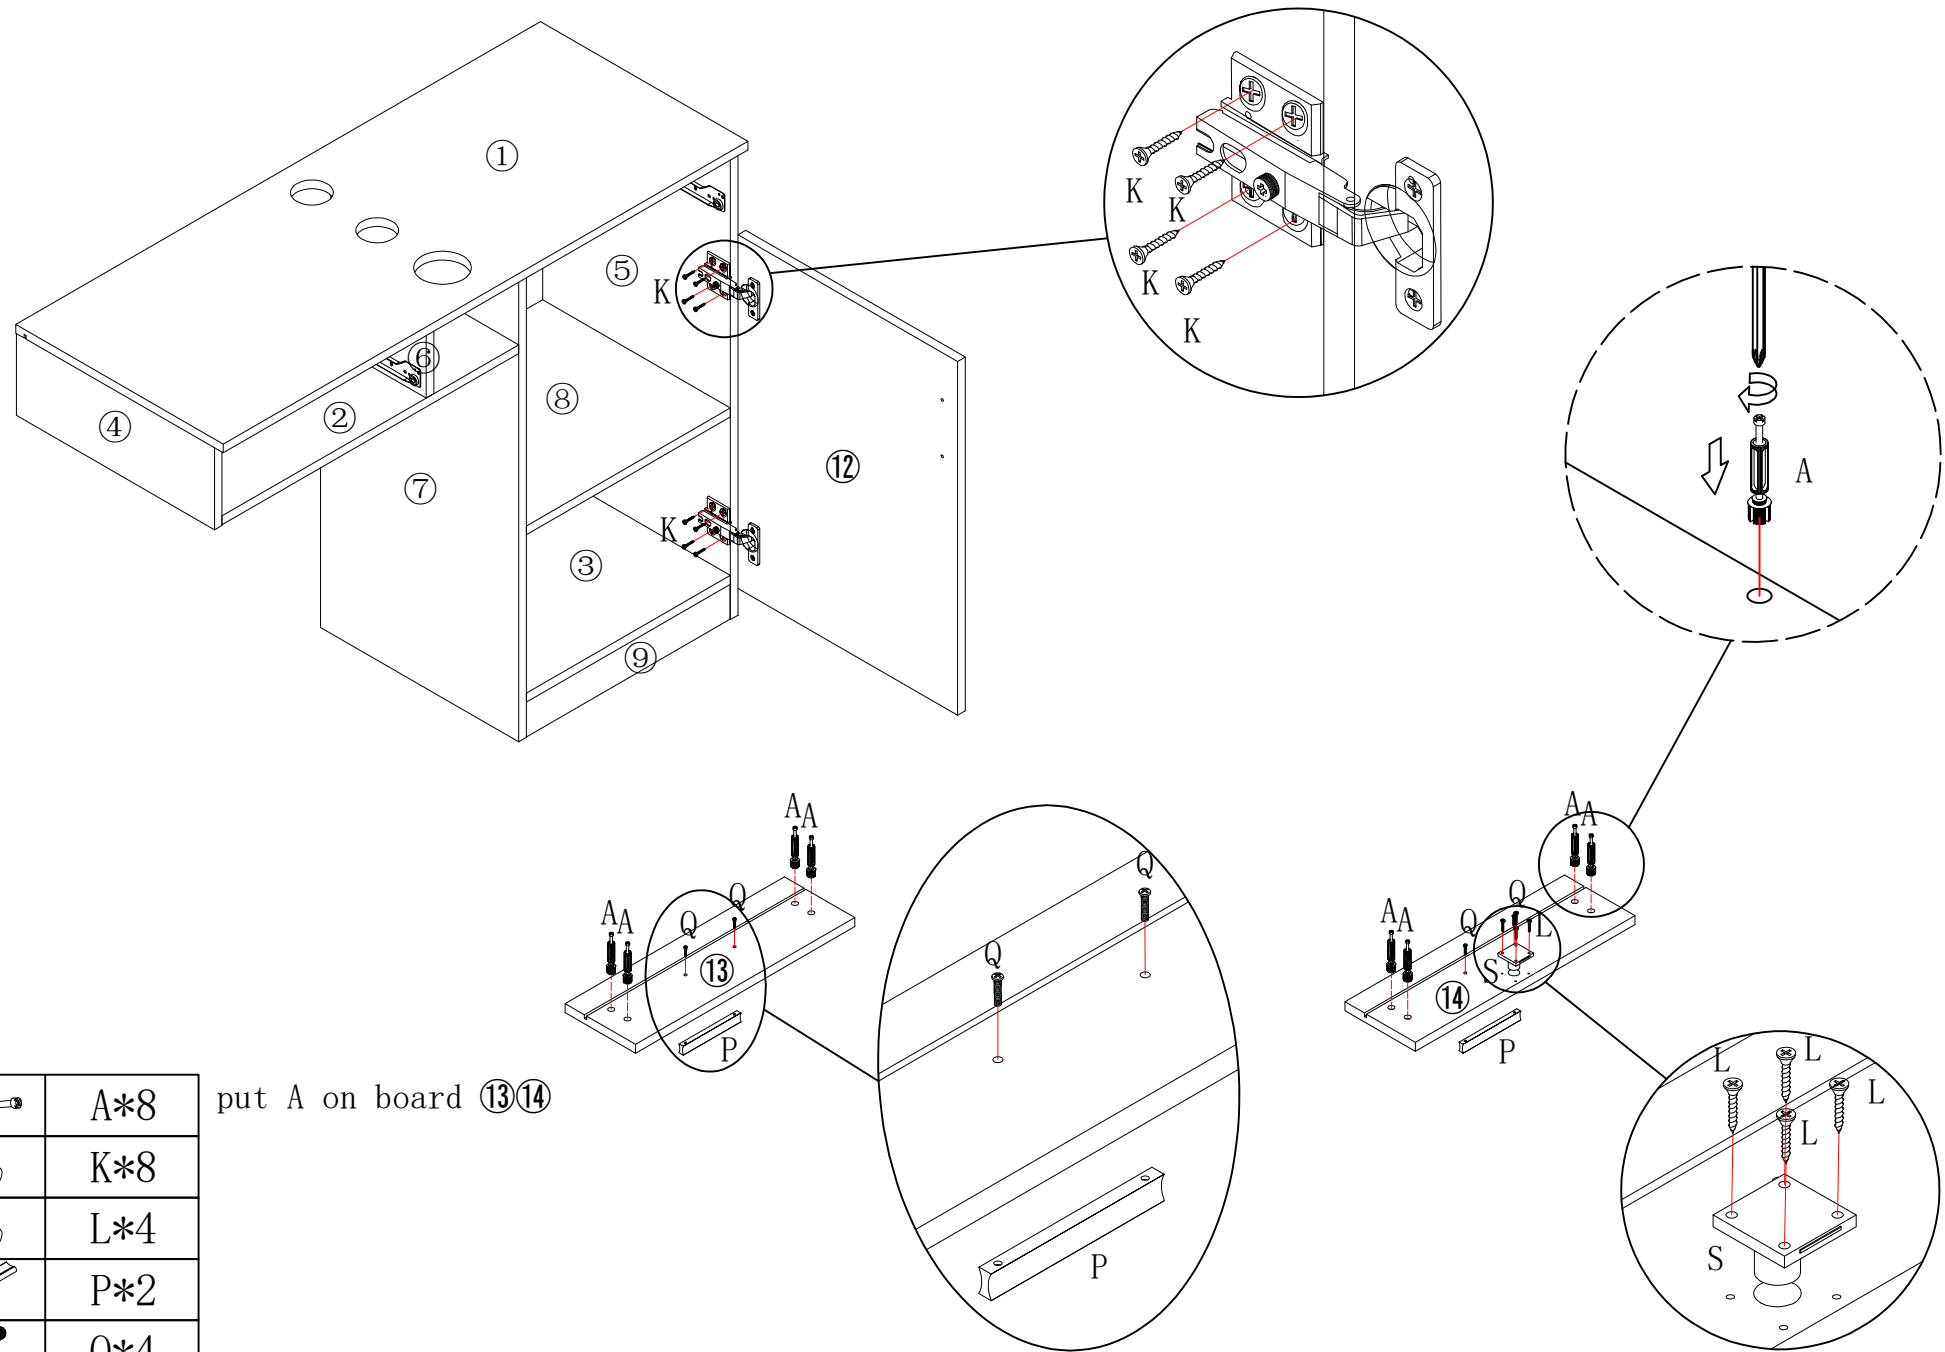



put A on board 13 14

	A*8
	K*8
	L*4
	P*2
	Q*4
	S*1

9

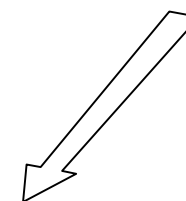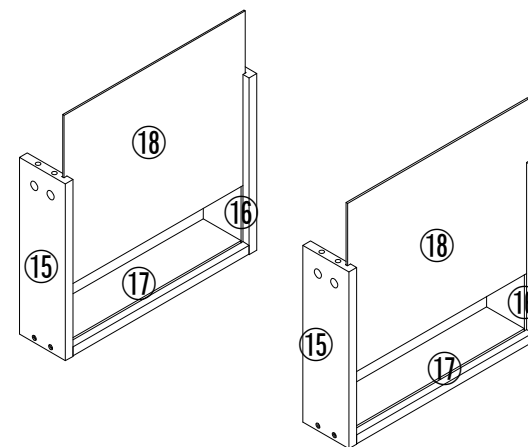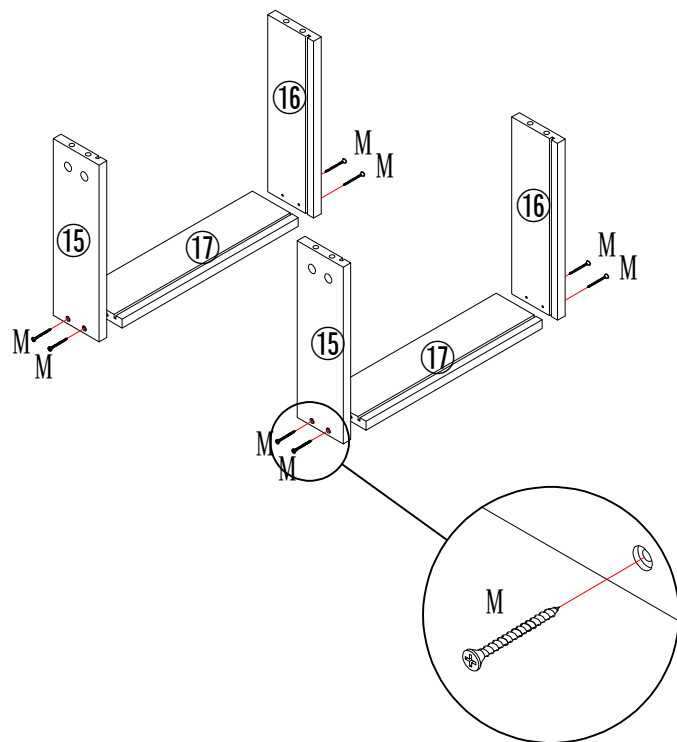

Make sure the arrow on the screw align to the hole on the side.

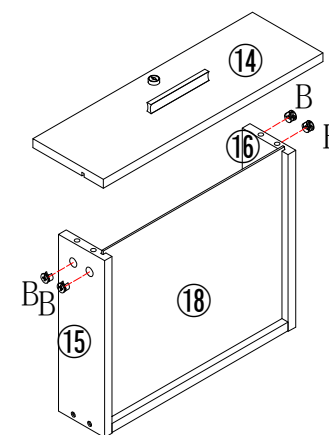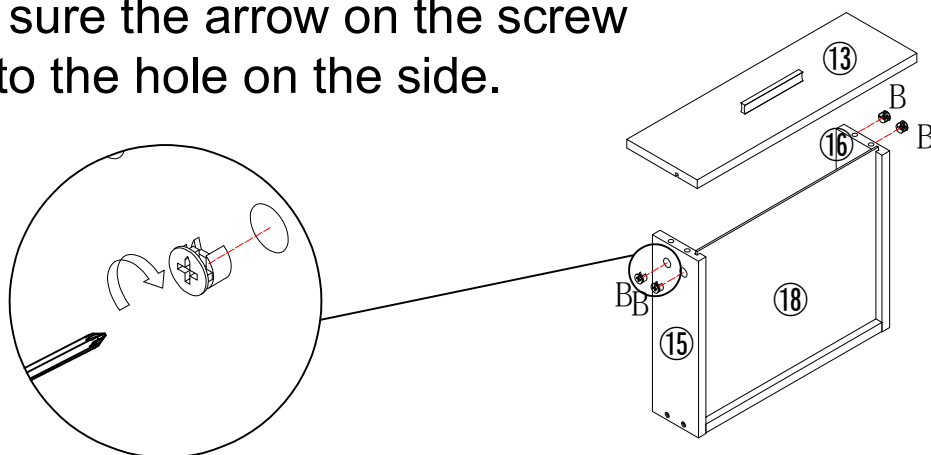




B*8

put B on board 15 16




M*8

10

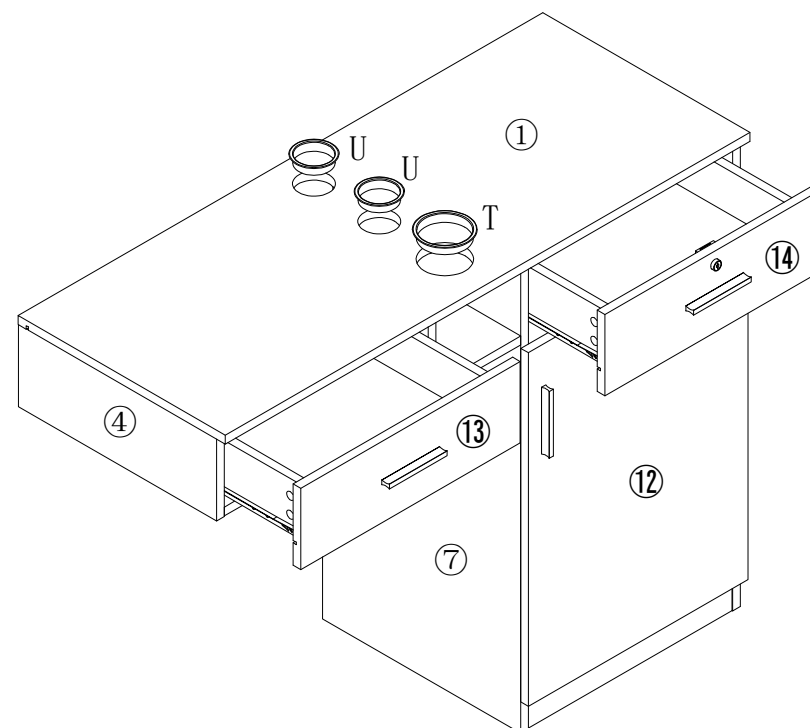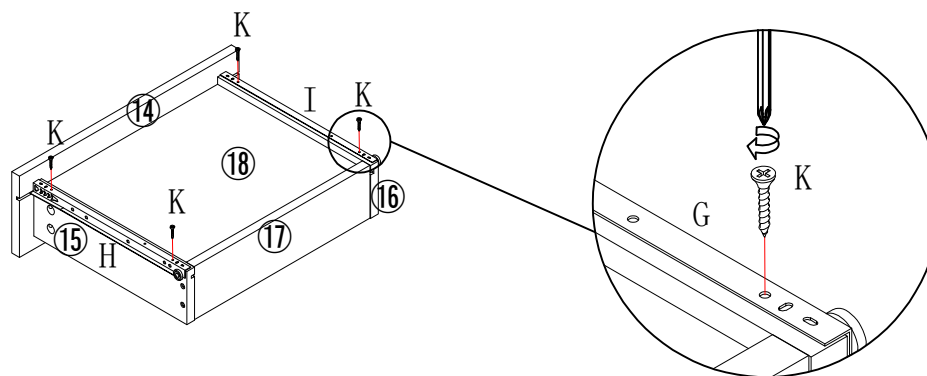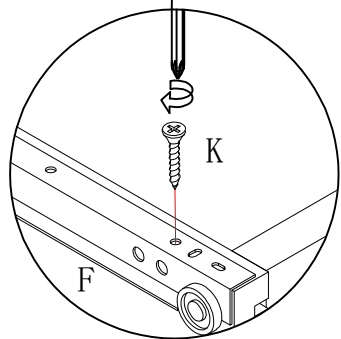

	H*2
	I*2
	K*8
	T*1
	U*2

11

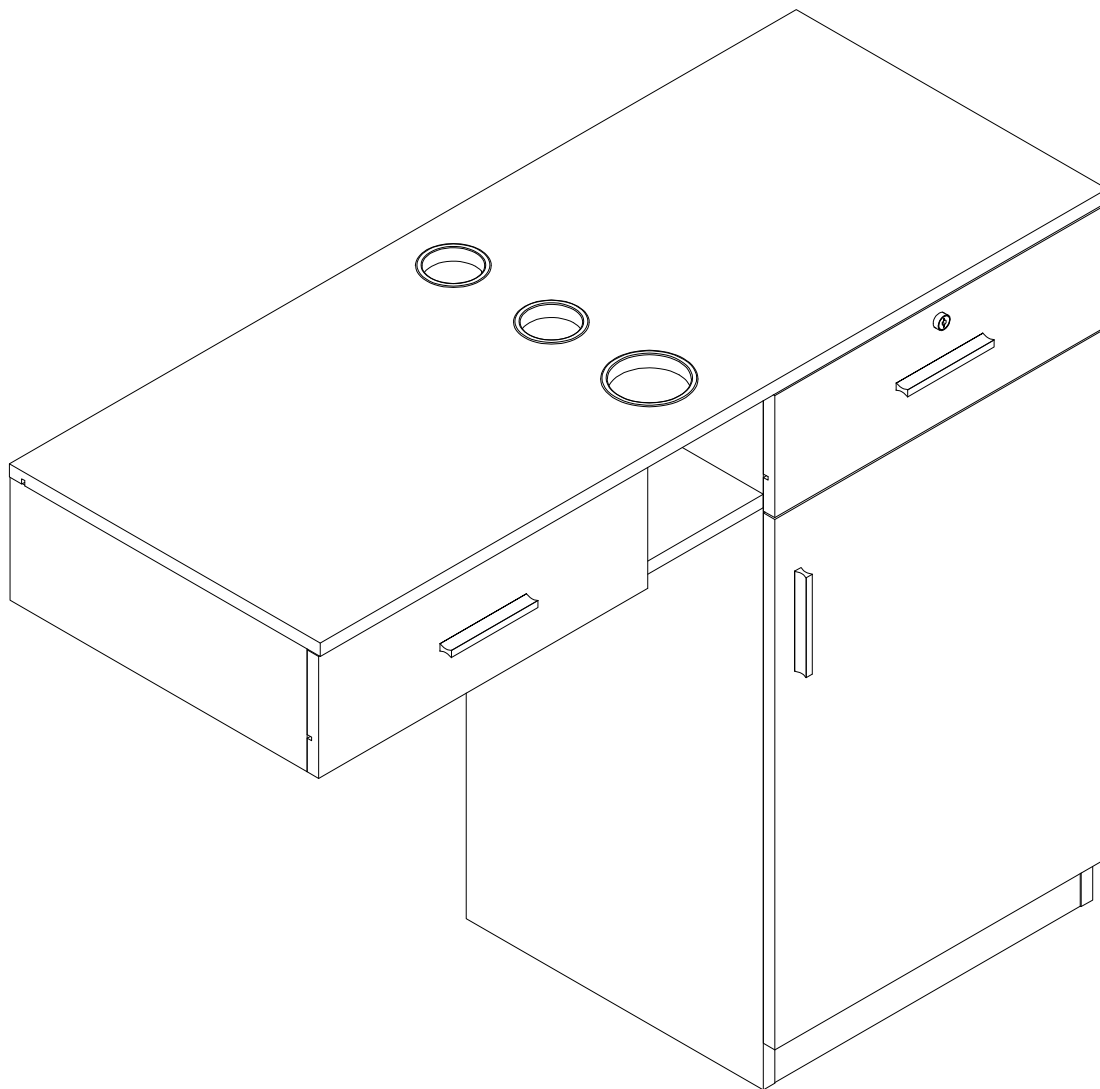

---END---