



GENERAL INSTALLATION INSTRUCTION

Spa Rack

PREPARATION

Tools Required for Assembly: (Not included)

- Pencil
- Electrical drill with 5/16 in. drill bit
- Mallet Hammer



- Philips head screwdriver
- Tape measure





- Level
- Safety glasses



CAUTION: Molly bolts are for dry walls only.
Use tile anchors for tile surfaces. (Not included)

INSTALLATION INSTRUCTIONS

1. Hold assembled spa rack up against desired position on wall, and mark screw holes with a pencil. Use a measuring tape and a level for accuracy (Fig. 1). Remove the spa rack.
2. Drill 5/16 in. pilot holes into the wall where the molly bolts will be inserted using an electrical drill. Tap molly bolts into the pilot holes using a hammer (A). Use an electrical screwdriver to tighten the screws. This will collapse the molly bolts tightly to the wall (B). Unscrew the screws from the molly bolts (C). Molly bolts will remain in the wall (Fig. 2).
3. Place the spa rack over the molly bolts. Insert the screws back through the brackets of the spa rack and the molly bolts, then tighten firmly with Philips head screwdriver (Fig. 3).

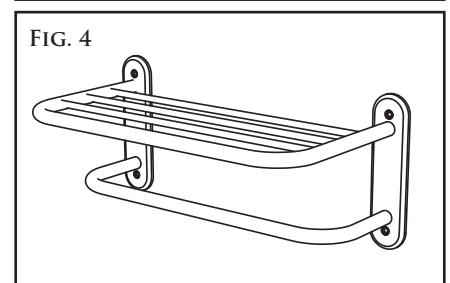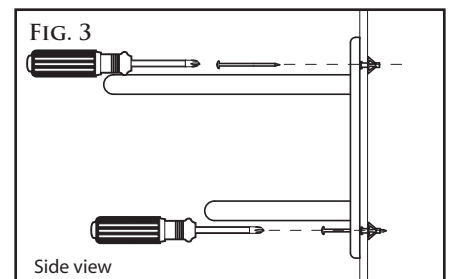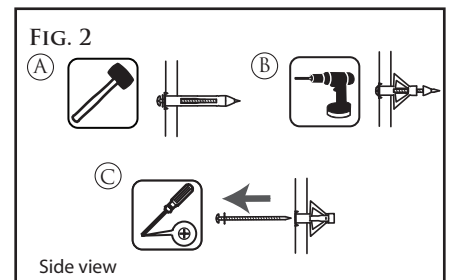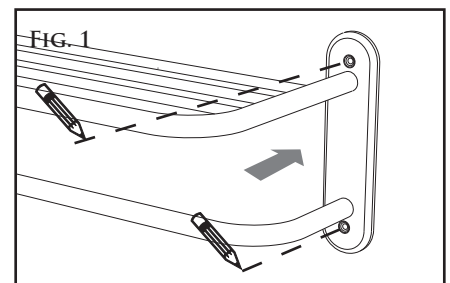

CARE AND MAINTENANCE

To maintain the beautiful luster finish, please use soft damp cloths when cleaning and never use any cleaning solvents.